

# Getting Started with AlliedWare Plus

## Feature Overview and Configuration Guide

### Introduction

This guide introduces a number of commonly-used management features of the AlliedWare Plus™ Operating System (OS).

### Products and software version that apply to this guide

This guide applies to all AlliedWare Plus products, running version 5.4.4 or later.

However, feature support and implementation varies between products. To see whether a product supports a particular feature or command, see the following documents:

- The product's [Installation Guide](#)
- The [product's Datasheet](#)
- The product's [Command Reference](#)

These documents are available from the above links on our website at [alliedtelesis.com](http://alliedtelesis.com).

Most of this guide applies for versions 5.4.4 onwards, but automatic IP address assignment on start-up applies from version 5.4.7-0.4 onwards.

## Contents

Introduction .....	1
Products and software version that apply to this guide .....	1
Start-up Process .....	4
Unconfigured (factory-new) .....	4
Configured .....	4
Management interfaces .....	4
How the start-up process works .....	5
How to Login .....	6
Login from the console port .....	7
Login to a management interface port with SSH .....	8
Login with the web-based firewall GUI.....	9
How to Work with Command Modes .....	10
Entering privileged exec commands when in a configuration mode.....	13
How to Get Command Help.....	14
Viewing a list of valid parameters .....	14
Completing keywords.....	16
Viewing command error messages .....	17
How to Change the Configuration .....	18
How to see the current configuration .....	18
Default settings.....	18
The default configuration.....	19
How to change a management interface IP address on the NET MGMT port.....	20
How to change a management interface IP address on VLAN1 .....	21
How to Save and Boot from the Current Configuration.....	22
How to save to the default configuration file.....	22
How to create and use a new configuration file .....	22
How to Undo Settings.....	24
How to use the <i>no</i> parameter .....	24
How to use the <i>default</i> parameter .....	24
Passwords.....	25
How to Change the Password.....	25
How to set strong passwords.....	25
How to Add and Remove Users .....	27
Pre-encrypted passwords .....	29
How to View System Information .....	30
Viewing overall system information .....	30

Viewing voltage, fan status, power supply, alarm status, and temperature .....	31
Viewing the serial number .....	31
How to Set System Parameters.....	32
How to change the Telnet session timeout .....	32
How to name the switch.....	32
How to display a text banner at login.....	33
How to Set the Time and Date.....	34
How to show current settings.....	34
How to set the time and date .....	35
How to set the timezone.....	35
How to configure summer-time .....	35
How to Enable Secure Mode on x930 Series switches .....	37
How to leave secure mode.....	37
How to Work with Files .....	38
How to list files .....	38
How to display the contents of configuration and text files .....	40
How to navigate through the file system .....	40
How to copy files.....	41
How to use the editor .....	43
How to Return to the Factory Defaults .....	45
How to Upgrade the Firmware.....	47
How to Easily Locate the Device in a Server Room (Find Me).....	48
How to Filter and Save “show” Command Output.....	48
Output modifiers.....	49
How to Set a Timeout on GUI Sessions .....	50

## Start-up Process

From software version 5.4.7-0.4 onwards, unconfigured devices automatically receive a management IP address on start-up. When your device is started without any configuration, IPv4 and IPv6 addresses are automatically applied to the Ethernet-based management interface.

Your device must be factory new or unconfigured for automatic address assignment to occur. This means you can use SSH to manage your device remotely instead of locally.

### Unconfigured (factory-new)

If your device is factory new it is considered unconfigured because none of the following configuration files exist in the root directory of external media:

- .config
- .config\_backup
- .cfg files
- User created folders

### Configured

Otherwise your device is considered configured. Your device may have an existing configuration or it could have been pre-configured (for example, Firewalls are pre-configured). You can use the command **erase factory-default** if you want to manually return it to an unconfigured state, so that automatic address assignment can occur.

For more information about erasing the factory default, see [How to Return to the Factory Defaults](#).

## Management interfaces

The management interface depends on the interface ports available on your device.

Table 1: Management Interfaces

SWITCH	SWITCH OR FIREWALL	FIREWALL WITH NO SWITCHPORTS
eth0 labelled NET MGMT	vlan1 if there is no NET MGMT	the first eth port to go link-up, for example the AR2010V

## How the start-up process works

The following sequence of events occur after the management interface comes up on a factory-new (unconfigured) device:

- Nothing happens until the management interface goes link-up.
- If the management interface is vlan1, then your device waits until vlan1 has gone into a STP forwarding state.
- Telnet is automatically disabled and the SSH server is enabled.
- Loop Protection is enabled on devices that support it. Some devices (e.g. AR-Series Firewalls) do not support Loop Protection, so will not include the loop-protection configuration.
- DHCP and DHCPv6 clients are enabled and their processes started.
- An IPv6 link-local address is automatically assigned.
- If your device obtains an address from DHCP or DHCPv6, then the IP address is assigned.
- If your device does not obtain an IPv4 address via DHCP within 10 seconds, then it applies the class B IPv4 link-local address 169.254.42.42/16. Then the IPv4 DHCP client is disabled.

You can manage your device by using SSH to connect to the IPv4 or IPv6 address that has been assigned to the management interface. You will need to ensure your management computer is configured with an IP/IPv6 address within the same subnet as the management IP address on the device.

### Automatic IP address assignment

An IP address is assigned automatically on start-up by either:

- Automatic assignment by a DHCP server, for example 10.33.22.33 as follows:

```
awplus login: 03:17:10 awplus IP address assignment underway:
03:17:10 awplus Password change is strongly recommended
03:17:22 awplus Interface vlan1 address set to 10.33.22.33/24

awplus login: manager
Password:

AlliedWare Plus (TM) 5.4.7 06/09/17 05:35:30

An IP address has been assigned - password change is strongly
recommended
awplus>
```

or, if no DHCP server is available then the IP address 169.254.42.42 is applied as follows:

```
awplus login: 02:36:51 awplus IP address assignment underway:
02:36:51 awplus Password change is strongly recommended
02:37:04 awplus Interface vlan1 address set to 169.254.42.42/16

awplus login: manager
Password:

AlliedWare Plus (TM) 5.4.7 06/09/17 05:35:30

An IP address has been assigned - password change is strongly
recommended
awplus>
```

**Note:** For security reasons a password change is strongly recommended after the IP address is assigned.

## How to Login

You can choose one of the following options to login to your device:

- **Login from the console port**

Use the console to login to your device if you have cable access via the local Console Port.

- **Login to a management interface port with SSH**

Use SSH to login to your device via a Management Interface Port if you do not have access via the Console Port, or if you want to manage your device remotely.

- **Login with the web-based firewall GUI**


Use the firewall GUI if you want to manage your device using web access.

## Login from the console port


Follow these steps to login locally or out-of-band:

1. Connect the local management cable (with DB-9 connector) provided from your device to the management computer.
2. Power up your device (allow 10 seconds).
3. Open a PuTTY session (or equivalent terminal emulator).

From the PuTTY Configuration dialog enter the following basic options:

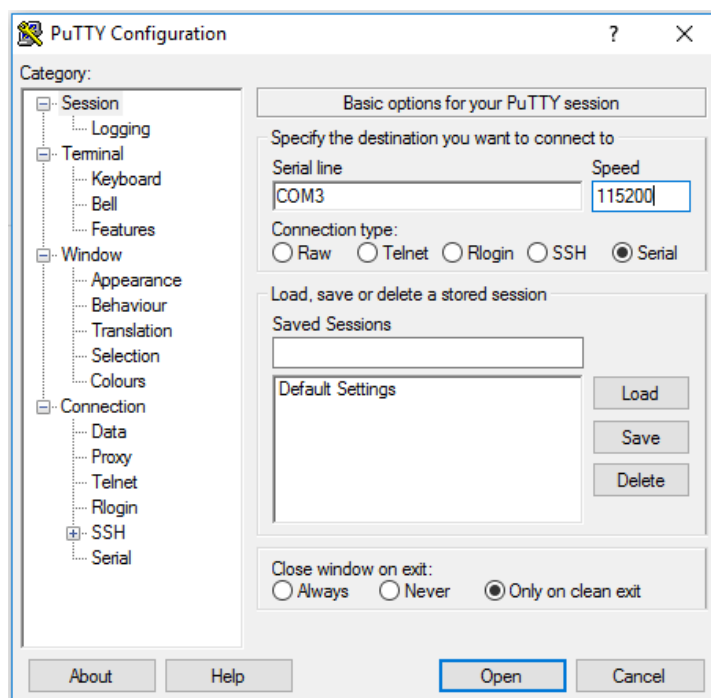

- Select the **Serial** button.
- Enter the **Serial line**, for example COM3. To find the Serial line from Microsoft Windows, go to Device Manager> Ports (COM @ LPT).
- Change the **Speed** (console baud rate) if necessary, for example to 115200. The default baud rate is 9600. See your product's Installation Guide for the correct baud rate.

**Caution**  On IE200 and IE300 Series switches, we do not recommend changing the baud rate. The bootloader on these switches always runs at 9600 Baud. If you change the baud rate, you will lose access to the bootloader.

Click **Open** to establish a local management session with your device.

- Press **Enter** to display the login prompt.

By default the AlliedWare Plus OS supports VT100 compatible terminals on the console port. This means that the terminal size is 80 columns by 24 rows.

4. Log in. The defaults are:

- Username: **manager**
- Password: **friend**


Your device logs you into User Exec mode. From User Exec mode, you can perform high-level diagnostics (some **show** commands, ping, traceroute, for example), start sessions (Telnet, SSH), and change mode.

## Login to a management interface port with SSH

Follow these steps to login remotely to a management interface:

1. The management computer must have an IP address in the target subnet.
2. The management computer must be connected to the same network as the device.
3. Connect your device into the network via the management interface.
4. Power up your device. If your device is factory new (unconfigured) and you want it to receive an IP address automatically, wait approximately 30 seconds after the management port has gone link-up for this to happen. For details see [Automatic IP address assignment](#).
5. Open a remote PuTTY session (or equivalent terminal emulator).


From the PuTTY Configuration dialog enter the following basic options:

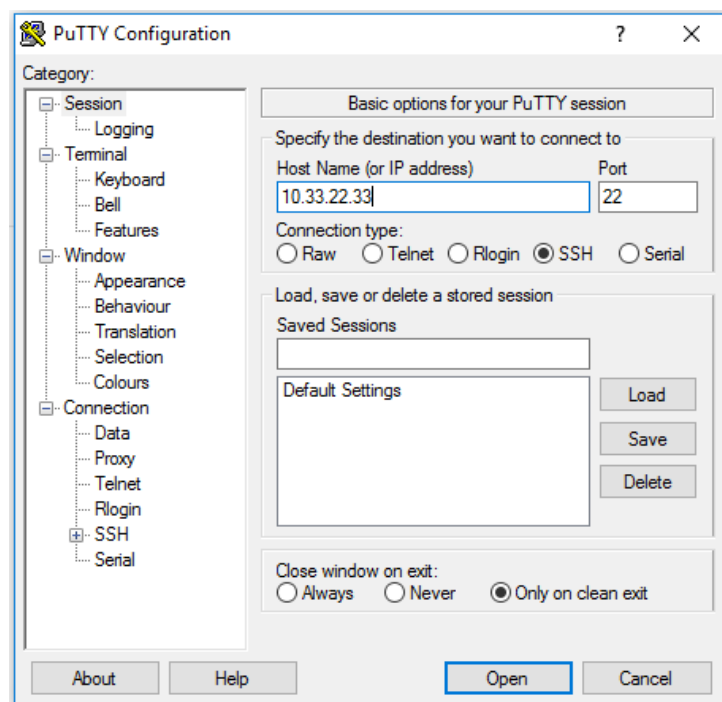

- Select the **SSH** button and enter the **Host Name (or IP address)**, for example 10.33.22.33.
- Click **Open** to establish a remote management session with your device.



- Click **Yes** if you receive the following PuTTY Security Alert Warning message:

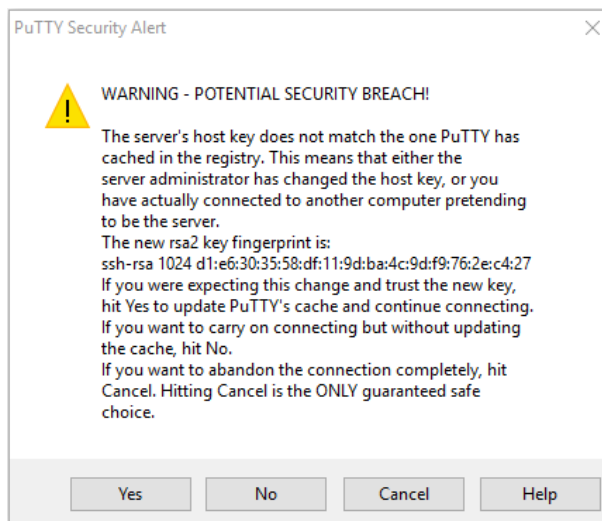

This message can be bypassed because it is referring to the host key not matching the cache.

- Press **Enter** to display the login prompt.

By default the AlliedWare Plus OS terminal size is 80 columns by 24 rows.

## Login with the web-based firewall GUI

The firewall GUI provides setup of the firewall, enabling the configuration of entities (zones, networks and hosts) and then creating firewall, NAT and traffic-control rules for managing traffic between these entities. Features such as the Intrusion Prevention System (IPS) and URL Filtering help protect the network, and manage website access.

The GUI also supports a DHCP server, interface management, VLAN management, file management, system tools, a CLI window and a dashboard for network monitoring. The dashboard shows interface and firewall traffic, system and environmental information, and the security monitoring widget lets you view and manage rules and security features. The complete AlliedWare Plus feature-set can be configured using the firewalls built-in industry standard Command Line Interface (CLI). The firewall and its graphical management and monitoring functionality will increase with subsequent releases.

If your firewall is new and unused, it will already have the GUI installed from the factory, and the IP address 192.168.1.1 on vlan1, and 172.16.0.1/24 on eth1, and 128.0.0.1/24 on eth2 and the HTTP service enabled. Connect to any switch port and browse to 192.168.1.1 to begin.

For further information about using the firewall GUI, see


- [Getting Started with the VPN Firewall GUI](#) or
- [Getting Started with the UTM Firewall GUI](#)

## How to Work with Command Modes

AlliedWare Plus is modal, which means that the command line forms a hierarchy with different commands available at different levels of the hierarchy. [Figure 1](#) below shows the command mode hierarchy and the commands you use to move to lower-level modes.

Multiple users can Telnet/SSH and issue commands using the User Exec mode and the Privileged Exec mode. However, only one user is allowed to use the Configure mode at a time. This prevents multiple users from issuing configuration commands simultaneously.

Figure 1: AlliedWare Plus CLI modes

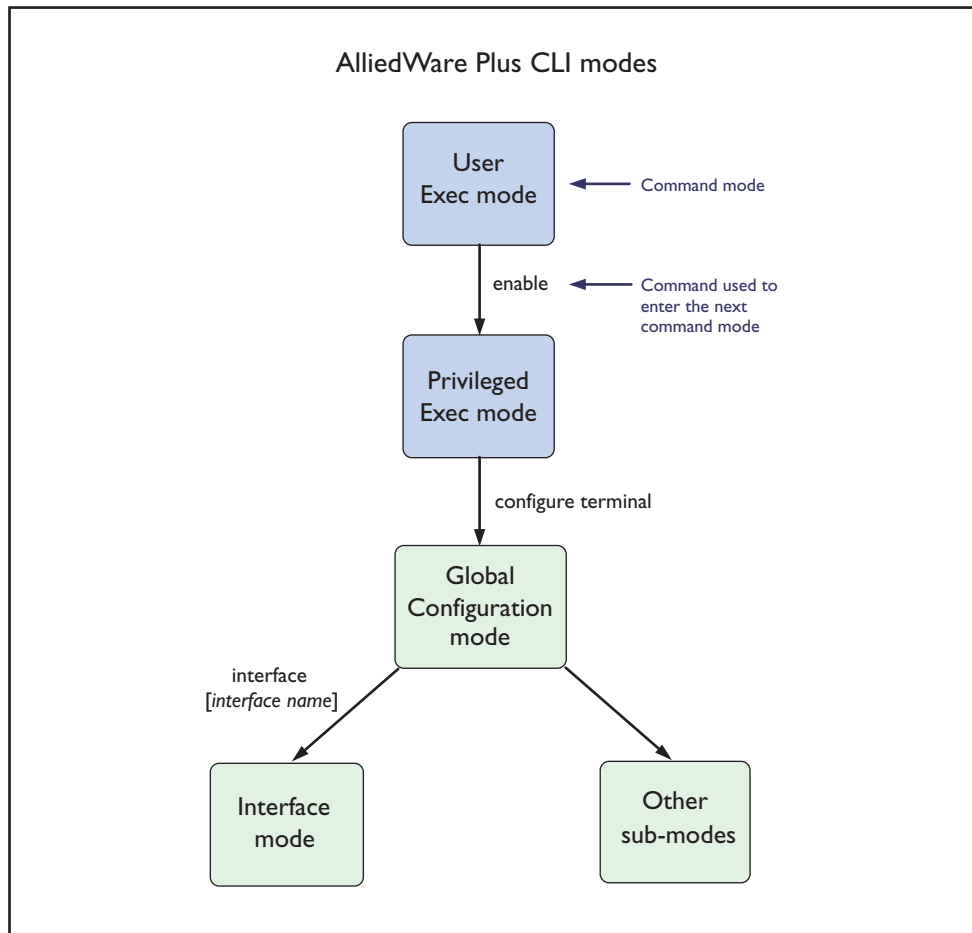

**User Exec mode** User Exec mode is the mode you log into on the switch.

It lets you perform high-level diagnostics (**show** commands, ping, traceroute, for example), start sessions (Telnet, SSH), and change mode.

The default User Exec mode prompt is **awplus>**

**Privileged Exec mode** Privileged Exec mode is the main mode for monitoring—for example, running **show** commands and debugging. From Privileged Exec mode, you can do all the commands from User Exec mode plus many system commands.

To change from User Exec to Privileged Exec mode, enter the command

```
awplus> enable
```

The default Privileged Exec mode prompt is **awplus#**

**Global Configuration mode** From Global Configuration mode, you can configure most aspects of the switch.

To change from Privileged Exec to Global Configuration mode, enter the command:

```
awplus# configure terminal
```

The default Global Configuration mode prompt is **awplus(config)#**

**Interface Configuration mode** From Interface Configuration mode, you can configure the settings of one or more specified interfaces.

To change from Global Configuration mode to Interface Configuration mode, enter the command:

```
awplus(config)# interface <interface-list>
```

*<interface-list>* is the name of one or more interfaces (for example, port1.0.1-1.0.3)

The default Interface Configuration mode prompt is **awplus(config-if)#**

**Router Configuration mode** From Router Configuration mode, you can configure routing using BGP, IP, IPv6, OSPF, RIP, or VRRP.

To change from Global Configuration mode to Router Configuration mode, enter the command:

```
awplus(config)# router <protocol> <other-parameters>
```

The default Router Configuration mode prompt is **awplus(config-router)#**

**VLAN Database mode** From VLAN Database mode, you can create and configure VLANs.

To change from Global Configuration mode to VLAN Database mode, enter the command:

```
awplus(config)# vlan database
```

The default VLAN Database mode prompt is **awplus(config-vlan)#**

### Other lower-level configuration modes

A number of other features are also configured by entering a lower-level mode from Global Configuration mode.

The following tables lists some (but not all) examples of the lower-level modes:

MODE	WHAT IT CONFIGURES	COMMAND	DEFAULT PROMPT
Class map	QoS classes, which isolate and name specific traffic flows (classes) from all other traffic.	(first enable QoS globally with mls qos enable) class-map <i>name</i>	awplus(config-cmap)#
EPSR	Ethernet Protection Switching Ring, a loop protection mechanism with extremely fast convergence times.	epsr configuration	awplus(config-epsr)#
Line	Console port settings or virtual terminal settings for Telnet.	line console 0 line vty <i>number</i>	awplus(config-line)#
Ping poll	Ping polling, which checks whether specified devices are reachable or not.	ping-poll <i>number</i>	awplus(config-ping-poll)#
Policy map	QoS policies, a collection of user-defined QoS classes and the default class.	(first enable QoS globally with mls qos enable) policy-map <i>name</i>	awplus(config-pmap)#
Policy map class	The QoS actions to take on a class-map, and which class-maps to associate with a QoS policy. This mode is a sub-mode of Policy map mode.	(in Policy map mode) class <i>name</i>	awplus(config-pmap-c)#
Route map	Route maps, which select routes to include or exclude from the switch's routing table and/or route advertisements.	route-map <i>name</i> deny permit <i>entry-number</i>	awplus(config-route-map)#
MST	Multiple Spanning Tree Protocol.	spanning-tree mst configuration	awplus(config-mst)#
Trigger	Triggers, which run configuration scripts in response to events.	trigger <i>number</i>	awplus(config-trigger)#


Some protocols have commands in both Global Configuration mode and lower-level configuration modes. For example, to configure MSTP, you use:

- Global Configuration mode to select MSTP as the spanning tree mode
- MST mode to create instances and specify other MSTP settings
- Interface Configuration mode to associate the instances with the appropriate ports.

### Returning to higher-level modes

The following figure shows the commands to use to move from a lower-level mode to a higher-level mode.

Figure 2: Returning to higher-level modes

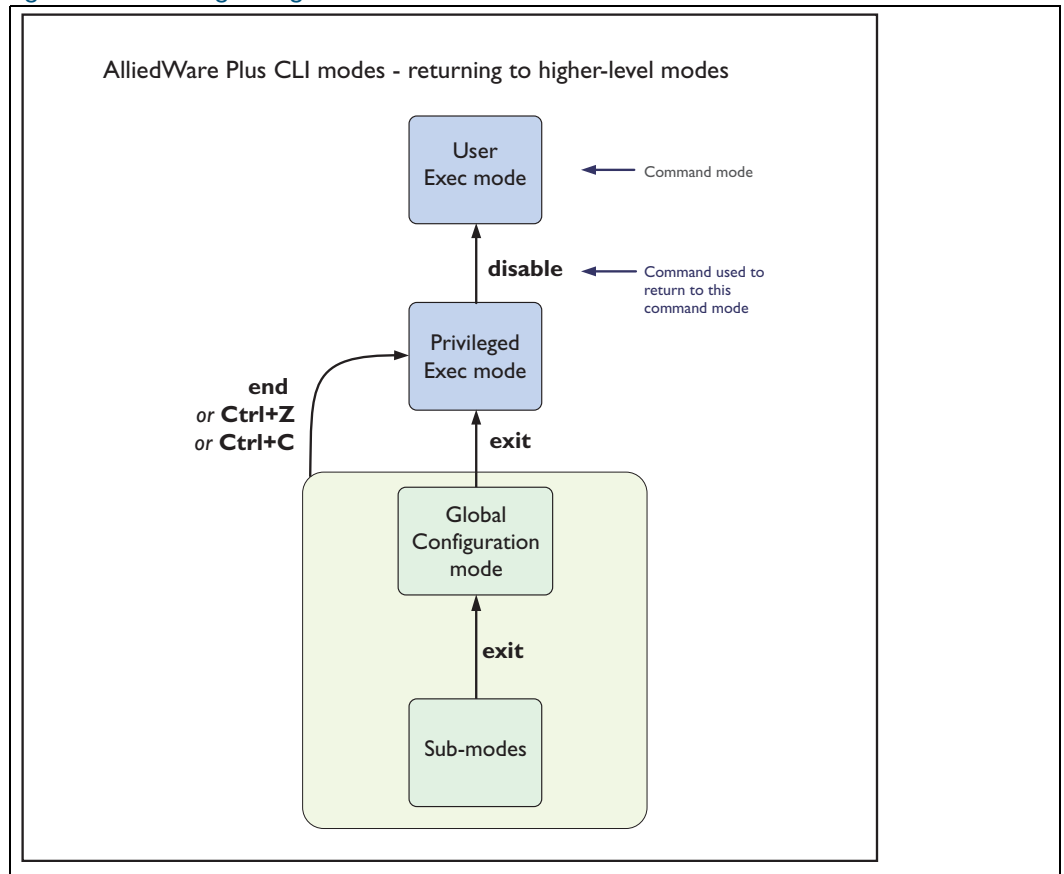

**Examples** To go from Interface Configuration to Global Configuration mode:

```
awplus(config-if)# exit
awplus(config)#
```

To go from Interface Configuration to Privileged Exec mode:

```
awplus(config-if)# end
awplus#
```

To go from Privileged Exec to User Exec:

```
awplus# exit
awplus>
```

## Entering privileged exec commands when in a configuration mode

As you configure the switch you will be constantly entering various **show** commands to confirm your configuration. This requires constantly changing between configuration modes and Privileged Exec mode.

However, you can run Privileged Exec commands without changing mode, by using the command:

```
awplus(config)# do <command you want to run>
```

You cannot use the ? help to find out command syntax when using the **do** command.

**Example** To display information about the IP interfaces when in Global Configuration mode, enter the command:

```
awplus(config)# do show ip int brief
```

This results in the following output:

Output 1: Example output after entering the command **do show ip int brief**

Interface	IP-Address	Status	Protocol
eth0	172.28.8.200	admin up	running
vlan1	unassigned	admin up	running
:			

## How to Get Command Help

The following kinds of command help are available:

- lists of valid parameters with brief descriptions (the ? key)
  - completion of keywords (the Tab key)
- error messages for incomplete or incorrect syntax

### Command Abbreviations

The AlliedWare Plus CLI contains a number of abbreviations for its commands.

For example, the **show interface** command can be entered in the abbreviated form shown below:

```
awplus# sh in vlan100
```

### Viewing a list of valid parameters

To get syntax help, type ? (i.e. “space question mark”) after:

- **the prompt:**

this will list all commands available in the mode you are in.
- **one or more parameters:**

this will list parameters that can come next in the partial command.
- **one or more letters of a parameter:**

this will list matching parameters.

**Note:** The AlliedWare Plus OS only displays one screenful of text at a time, with the prompt “--More--” at the end of each screenful. Press the space bar to display the next screenful or the **Q** key to return to the command prompt.

**Example** To see which commands are available in Privileged Exec mode, enter “?” at the Privileged Exec mode command prompt:

```
awplus# ?
```

This results in the following output:

**Output 2: Example output from the ? command**

```
Exec commands:
activate      Activate a script
cd            Change the current working directory
clear        Reset functions
clock        Manage clock
configure    Enter configuration mode
copy         Copy from one file to another
.
.
.
```

**Example** To see which **show** commands that start with “i” are available in Privileged Exec mode, enter “?” after **show i**:

```
awplus# show i?
```

This results in the following output:

**Output 3: Example output from the show i? command**

```
interface      Select an interface to configure
ip             Internet Protocol (IP)
ipv6          Internet Protocol version 6 (IPv6)
```

**Examples** To use the ? help to work out the syntax for the **clock timezone** command, enter the following sequence of commands:

```
awplus> enable
awplus# configure terminal
awplus(config)# clock ?
```

```
summer-time  Manage summer-time
timezone     Set clock timezone
```

```
awplus(config)# clock timezone ?
```

```
TIMEZONE  Timezone name, up to 5 characters
```

```
awplus(config)# clock timezone NZST ?
```

```
minus  negative offset
plus   positive offset
```

```
awplus(config)# clock timezone NZST plus ?
```

```
<0-12> Time zone offset to UTC
```

```
awplus(config)# clock timezone NZST plus 12
```

The above example demonstrates that the **?** help only indicates what you can type **next**. For commands that have a series of parameters, like **clock timezone**, the **?** help does not make the number of parameters obvious.

## Completing keywords

To complete keywords, type the **Tab** key after part of the command.

If only one keyword matches the partial command, the AlliedWare Plus OS fills in that keyword. If multiple keywords match, it lists them.

**Examples** In this example we use Tab completion in successive steps to build the complete command **show ip dhcp snooping**. We have included “<Tab>” to show where to type the Tab key — this is not displayed on screen.

Output 4: Example output after entering the command show ip <Tab>

```
awplus#show ip <Tab>
access-list  dhcp          dhcp-relay  domain-list domain-name filter
forwarding  igmp            interface  mroute     name-server prefix-list
route       rpf              rrp        sockets    source     traffic
```

Output 5: Example output after entering the command show ip d<Tab>

```
awplus#show ip d<Tab>
dhcp          dhcp-relay  domain-list  domain-name
```

Output 6: Example output after entering the show ip dhcp <Tab> command

```
awplus#show ip dhcp <Tab>
binding  pool      server  snooping
```

Output 7: Example output after entering the show ip dhcp s<Tab> command

```
awplus#show ip dhcp s<Tab>
server  snooping
```



## Viewing command error messages

The switch displays the following generic error messages about command input:

**% Incomplete command**—this message indicates that the command requires more parameters. Use the ? help to find out what other parameters are available.

```
awplus# interface
```

```
% Incomplete command.
```

**% Invalid input detected at '^' marker**—this indicates that the switch could not process the command you entered. The switch also prints the command and marks the first invalid character by putting a '^' under it. Note that you may get this error if you enter a command in the wrong mode, as the following output shows.

```
awplus# interface port1.0.1
```

```
interface port1.0.1
  ^
% Invalid input detected at '^' marker.
```

**% Unrecognized command**—when you try to use ? help and get this message, it indicates that the switch can not provide help on the command because it does not recognize it. This means the command does not exist, or that you have entered it in the wrong mode, as the following output shows.

```
awplus# interface ?
```

```
% Unrecognized command
```

**Note:** The AlliedWare Plus OS does not tell you when commands are successful. If it does not display an error message, you can assume the command was successful.

# How to Change the Configuration

## How to see the current configuration

The current configuration is called the **running-config**. To see it, enter the following command in either Privileged Exec mode or any configuration mode

```
awplus# show running-config
```

To see only part of the current configuration, enter the command:

```
awplus# show running-config|include <word>
```

This displays only the lines that contain *word*.

To start the display at a particular place, enter the command:

```
awplus# show running-config|begin <word>
```

This searches the running-config for the first instance of *word* and begins the display from that line.

**Note:** The **show running-config** command works in all modes except User Exec mode.

## Default settings

When the switch initially started up with the AlliedWare Plus OS, it applied default settings and copied these defaults dynamically into its running-config.

These default settings mean that the AlliedWare Plus OS:

- encrypts passwords, such as user passwords.
- records log message priority in log messages.
- turns on jumbo frame support for all ports on switches with the **jumboframe** command.
- SSH is enabled.
- The Telnet server is disabled by default.
- enables the switch to look up domain names (but for domain name lookups to work, you have to configure a DNS server).
- turns off Layer 3 multicast packet switching in the switch's hardware (on Layer 3 switches). This prevents Layer 3 multicast from flooding the switch's CPU in its default state as an Layer 2 switch.
- sets the maximum number of ECMP routes, on switches that support ECMP.
- turns on RSTP on all ports. Note that the ports are not set to be edge ports.

- sets all the switch ports to access mode. This means they are untagged ports, suitable for connecting to hosts.
- creates VLAN 1 and adds all the switch ports to it.
- allows logins on the serial console port.
- allows logins on VTY sessions (for SSH, for example).
- forwards Layer 2 traffic appropriately without further configuration.
- allocates all the routing table memory space to IPv4 and IPv6 routes on switches that support IPv6 routing.
- allows configured ports to autonegotiate their speed and duplex mode.
- allows copper ports to be set to auto MDI/MDI-X mode.

## The default configuration

Most of the above default settings are in the form of commands, which the switch copied to its running-config when it first booted up.

For more information about start-up files, see ["How to Save and Boot from the Current Configuration"](#) on page 23. An example default config, with explanations of the meanings of the commands, is shown below:

CONTENTS OF DEFAULT SETTINGS	DESCRIPTION
!	An empty comment line (comments begin with an !).
service password-encryption !	Forces passwords in the script to be encrypted.
no banner motd !	No message of the day is set by default.
log record-priority !	Records log message priority.
username manager privilege 15 password 8 \$1\$bJoVec4D\$JwOJGPr7YqoExA0GVasdE0	Specifies the password for the manager user.
ssh server allow-users manager	The SSH server is set to allow the user manager.
service ssh !	SSH is enabled by default.
no service telnet !	Telnet is disabled by default.
no service http !	HTTP is disabled by default.
no clock timezone !	The clock is disabled by default.
snmp-server ! !	SNMP is enabled by default.
aaa authentication enable default local	AAA authentication is enabled by default.

CONTENTS OF DEFAULT SETTINGS	DESCRIPTION
aaa authentication login default local	
ip domain-lookup !	Allows domain name lookups.
no service dhcp-server !	DHCP is disabled by default.
no ip multicast-routing !	Turns off L3 multicast packet switching in the switch hardware.
spanning-tree mode rstp !	Turns on RSTP.
lACP global-passive-mode enable !	LACP is enabled by default.
interface eth0 !	A heading for any configuration settings for the management eth0 port. There are no eth0 settings.
ip address dhcp ipv6 address dhcp	The DHCP client is activated for IPv4 and IPv6.
interface port1.0.1-1.0.24 switchport switchport mode access !	Sets each switch port to access mode.
interface vlan1 !	Creates VLAN 1.
line con 0	A heading for any configuration settings for the console port. There are no console port settings.
line vty 0 32  ! end	A heading for any configuration settings for VTY sessions. There are no VTY session settings.

## How to change a management interface IP address on the NET MGMT port

Some switches include an eth0 (NET MGMT) management interface port. This section describes how to set an IP address on that port.

If your device does not have a NET MGMT management interface port, you can manage it via VLAN1 (see ["How to change a management interface IP address on VLAN1" on page 21](#)).

### Step 1: If desired, check the current configuration.

After logging in, enter Privileged Exec mode by using the command:

```
awplus> enable
```

Then check the current configuration by using the commands:

```
awplus# show ip interface eth0 brief
```

If an address is already set, this results in the following output:

Interface	IP-Address	Status	Protocol
eth0	172.28.8.200	admin up	running

### Step 2: Enter Interface Configuration mode for the eth0 interface.

Enter Global Configuration mode and enter the command:

```
awplus(config)# interface eth0
```

### Step 3: Enter the IP address and mask.

Enter the command:

```
awplus(config-if)# ip address <address/mask>
```

For example, to set the address to 172.28.8.210/12, enter the command:

```
awplus(config-if)# ip address 172.28.8.210/12
```

## How to change a management interface IP address on VLAN1

This section describes how to change an IP address on the default VLAN (vlan1) management interface.

### Step 1: If desired, check the current configuration.

After logging in, enter Privileged Exec mode by using the command:

```
awplus> enable
```

Then check the current configuration by using the command:

```
awplus# show ip interface vlan1 brief
```

The output looks similar to this (note that this example already has an address assigned):

Interface	IP-Address	Status	Protocol
vlan1	172.28.8.200	admin up	running

### Step 2: Enter Interface Configuration mode for the vlan1 interface.

Enter Global Configuration mode and enter the command:

```
awplus(config)# interface vlan1
```

### Step 3: Enter the IP address and mask.

Enter the command:

```
awplus(config-if)# ip address <address/mask>
```

For example, to change the address to 172.28.8.210/12, enter the command:

```
awplus(config-if)# ip address 172.28.8.210/12
```

## How to Save and Boot from the Current Configuration

This section tells you how to save your configuration and run the saved configuration when the switch starts up.

You can either:

- save the configuration to the switch's default configuration file (called "default.cfg"). By default, the switch uses that file at start-up.
- create a new configuration file and set the switch to use the new configuration file at start-up.

### How to save to the default configuration file

Enter Privileged Exec mode and enter the command:

```
awplus# copy running-config startup-config
```

The parameter **startup-config** is a short-cut for the current boot configuration file, which will be the default configuration file unless you have changed it, as described in the next section.

### How to create and use a new configuration file

#### Step 1: Copy the current configuration to a new file

Enter Privileged Exec mode and enter the command:

```
awplus# copy running-config <destination-url>
```

**Note:** that you can save the file onto Flash memory, or an SD card or USB device. The default is Flash. For details about file names and paths, see the [Configuration and File Management Feature Overview and Configuration Guide](#).

**Example** To save the current configuration in a file called "example.cfg", enter the command:

```
awplus# copy running-config example.cfg
```

#### Step 2: Set the switch to use the new file at startup

To run the new file's configuration when the switch starts up, enter Global Configuration mode and enter the command:

```
awplus(config)# boot config-file <filepath-filename>
```

Note that you can set the switch to use a configuration file on an SD card or USB device if you have saved the configuration file to that card or device. You can only specify that the configuration file is on an SD card or USB device if there is a backup configuration file already specified in Flash.

To set a backup configuration file to load if the main configuration file cannot be loaded, enter the command:

```
awplus(config)# boot config-file backup <filepath-filename>
```

**Example** To run the commands in “example.cfg” on startup, enter the command:

```
awplus(config)# boot config-file flash:/example.cfg
```

To set “backup.cfg” as the backup to the main configuration file, enter the command:

```
awplus(config)# boot config-file backup flash:/backup.cfg
```

### Step 3: Display the new settings.

To see the files that the switch uses at startup, enter Privileged Exec mode and enter the command:

```
awplus# show boot
```

This results in the following output:

```

Boot configuration
-----
Current software   : x510-5.4.4-3.5.rel
Current boot image : flash:/x510-5.4.4-3.5.rel
Backup boot image  : flash:/x510-5.4.4-3.4.rel
Default boot config: flash:/default.cfg
Current boot config: usb:/example.cfg (file exists)
Backup boot config: flash:/backup.cfg (file exists)

```

### Step 4: Continue updating the file when you change the configuration

When you next want to save the current configuration, enter Privileged Exec mode and enter the command:

```
awplus# copy running-config startup-config
```

The parameter **startup-config** is a short-cut for the current boot configuration file.

## How to Undo Settings

There are two possibilities for undoing settings: the **no** parameter and the **default** parameter.

### How to use the *no* parameter

To undo most settings, simply re-enter the first parameters of the configuration command with the parameter **no** before them.

**Example** You can set the timezone to Eastern Standard Time by entering the command:

```
awplus(config)# clock timezone EST minus 5
```

To remove the timezone setting, enter the command:

```
awplus(config)# no clock timezone
```

### How to use the *default* parameter

Some commands have a **default** parameter that returns the feature to its default setting.

**Example** You can change the login banner to “this is a new banner” by entering the command:

```
awplus(config)# banner motd this is a new banner
```

To return to the default banner, enter the command:

```
awplus(config)# banner motd default
```

Note that this command also has a **no** parameter that lets you remove the banner altogether.



# Passwords

## How to Change the Password

To change the password for the manager account, enter Global Configuration mode and enter the following command:

```
awplus(config)# username manager password <new-password>
```

The password can be up to 23 characters in length and include characters from up to four categories. The password categories are:

- uppercase letters: A to Z
- lowercase letters: a to z
- digits: 0 to 9
- special symbols: all printable ASCII characters not included in the previous three categories. The question mark ? cannot be used as it is reserved for help functionality.

## How to set strong passwords

The password security rules are disabled by default. To set password security rules for users with administrative rights, or privilege level 15, enter Global Configuration mode.

You can then either specify whether the user is forced to change an expired password at the next login, or specify whether the user is not allowed to login with an expired password. You will need to specify a password lifetime greater than 0 before selecting either of these features. Note that the **security-password forced-change** and the **security-password reject-expired-pwd** commands cannot be enabled concurrently.

### Password lifetime

Enter the following command to specify the password lifetime in days:

```
awplus(config)# security-password lifetime <0-1000>
```

Note that the value 0 will disable lifetime functionality and passwords will never expire. If lifetime functionality is disabled, the **security-password forced-change** command and the **security-password warning** command are also disabled.

### Password forced change

To specify that a user is forced to change an expired password at the next login, enter the following command:


```
awplus(config)# security-password forced-change
```

If the **security-password forced-change** command is enabled, users with expired passwords are forced to change to a password that must comply with the current password security rules at the next login.

**Reject expired password** To specify that a user is not allowed to login with an expired password, enter the following command:

```
awplus(config)# security-password reject-expired-pwd
```

If the **security-password reject-expired-pwd** command is enabled, users with expired passwords are rejected at login. Users then have to contact the Network Administrator to change their password.

**Caution**  Once all users' passwords are expired you are unable to login to the device again if the security-password reject-expired-pwd command has been executed. You will have to reboot the device with a default configuration file, or load an earlier software version that does not have the security password feature.

We recommend you never have the command line "security-password reject-expired-pwd" in a default config file.

Use other password security rules to further configure password security settings.

**Password warning** AlliedWare Plus can warn users that passwords will expire in a specified number of days. To specify the number of days, enter the command:

```
awplus(config)# security-password warning <0-1000>
```

The value 0 will disable warning functionality. The warning period must be less than, or equal to, the password lifetime.

**Password history** To specify the number of previous passwords that are unable to be reused, enter the command:

```
awplus(config)# security-password history <0-15>
```

A new password is invalid if it matches a password retained in the password history. The value 0 will disable history functionality. If history functionality is disabled, all users' password history is reset and all password history is lost.

**Password minimum length** To specify the minimum allowable password length, enter the command:

```
awplus(config)# security-password minimum-length <1-23>
```

### Password minimum categories

To specify the minimum number of categories that the password must contain in order to be considered valid, enter the command:

```
awplus(config)# security-password minimum-categories <1-4>
```

The password categories are:

- uppercase letters: A to Z
- lowercase letters: a to z
- digits: 0 to 9
- special symbols: all printable ASCII characters not included in the previous three categories. The question mark ? cannot be used as it is reserved for help functionality.

To ensure password security, the minimum number of categories should align with the lifetime selected, i.e. the fewer categories specified the shorter the lifetime specified.

How to add a user is described in ["How to Add and Remove Users" on page 27](#).

### Display security password settings

To list the configuration settings for the various security password rules, enter the command:

```
awplus# show security-password configuration
```

To list users' remaining lifetime or last password change, enter the command:

```
awplus# show security-password user
```

## How to Add and Remove Users

### Adding users

To add a new user with administrative rights, enter Global Configuration mode and enter the command:

```
awplus(config)# username <name> privilege 15 password <password>
```

Both *<name>* and *<password>* can contain any printable character and are case sensitive.

When you add a user with administrative rights, *<password>* will have to conform to the following rules:

- **security-password minimum-categories** command
- **security-password minimum-length** command
- **security-password history** command. If this command is enabled, *<password>* is invalid if it matches a password retained in the password history.

The AlliedWare Plus OS gives you a choice of privilege levels of 1-15. Level 1-6 users are limited to User Exec mode and can only access some show commands. Level 7-14 users

can access a majority of show commands. Level 15 users have access to all show and configuration commands.

Note that some show commands, such as show running-configuration and show startup-configuration, are only available at privilege level 15.

For example, to add user Bob with password 123\$%^, enter the command:

```
awplus(config)# username Bob privilege 15 password 123$%^
```

### Removing users

To remove a user, enter Global Configuration mode and enter the command:

```
awplus(config)# no username <name>
```

For example, to remove user Bob, enter the command:

```
awplus(config)# no username Bob
```

Note that you can delete all users, including the user called “manager” and the user you are logged in as. If all privilege 15 user accounts are deleted, a warning message is generated:

```
% Warning: No privileged users exist.
```

If all privilege level 15 user accounts are deleted, and there are no other users configured for the device, you may have to reboot with the default configuration file.

You can also set a password for the step of moving from User Exec mode to Privileged Exec mode. This enables users with privilege level 1-6 to access Privileged Exec mode by entering the password.

To set the password, use the commands:

```
awplus# configure terminal
```

```
awplus(config)# enable password <password>
```

When low-privilege-level users log in, they can access the Privileged Exec mode by entering the **enable** command with the password. For example, if the password is ‘mypassword’, they would enter:

```
awplus> enable mypassword
```

```
awplus#
```

### Displaying users

To list the currently logged-in users, enter User Exec or Privileged Exec mode and enter the command:

```
awplus# show users
```

The output looks like this:

Line	User	Host(s)	Idle	Location	Priv	Idletime	Timeout
con 0	manager	idle	00:00:00	ttyS0	15	10	N/A
vtty 0	bob	idle	00:00:03	172.16.11.3	1	0	5

To list all configured users, enter User Exec or Privileged Exec mode and enter the command:

```
awplus# show running-config |include username
```


The output looks like this:

```
username manager privilege 15 password 8 $1$bJoVec4D$JwOJGPr7YqoExA0GVasdE0
username Bob privilege 15 password 8 $1$gXJLY8dw$iqkMXLgQxbzSOutNUa5E2.
```

## Pre-encrypted passwords

The running-config output above includes the number 8 after the **password** parameter. This indicates that the password is displayed in its encrypted form.

You can enter the number 8 and a pre-encrypted password on the command line. You may want to pre-encrypt passwords if you need to load them onto switches via an insecure method (such as HTTP, or by emailing them to remote users).

**Caution**  Only enter the number 8 if you are entering a pre-encrypted password—otherwise, you will be unable to log in using the password and will be unable to access the switch through that username. The next section describes why.

### Testing this feature

If you want to test the effect of this, **create a new user** for the test instead of using the manager user (or another existing user). The test stops you from logging in as the test user, so you need to have the manager user available to log in as. The following output shows how specifying the number 8 puts the password into the running-config exactly as you typed it:

```
awplus(config)#username Bob privilege 15 password 8 friend
awplus(config)#show running-config |include username Bob
username Bob privilege 15 password 8 friend
```

After entering the command above, logging in as “Bob” with a password of “friend” does not work. This is because the switch takes the password you enter (“friend”), hashes it, and compares the hash with the string in the running-config (“friend”). The hashed value and “friend” are not the same, so the switch rejects the login.

## How to View System Information

This section describes how to view the following system information:

- overview information
- details of temperature and voltage
- serial number

### Viewing overall system information

To display an overview of the switch hardware, software, and system settings, enter User Exec or Privileged Exec mode and enter the command:

```
awplus# show system
```

The output depends on the product, but is similar to this:

```
System Status                               Wed Sep 28 12:44:10 2016

Board      ID  Bay  Board Name                               Rev  Serial number
-----
Chassis    315          AT-SBx8112                               E-0  A042764112500070
Blade      317  Bay1  AT-SBx81GP24                             D-0  A042774112800031
Blade      353  Bay2  AT-SBx81XS6                              X8-0 A045624113500003
Blade      317  Bay3  AT-SBx81GP24                             D-0  A042774112700005
Controller 316  Bay5  AT-SBx81CFC400                           F-0  A042854111300027
Controller 316  Bay6  AT-SBx81CFC400                           F-0  A042854111300029
Blade      352  Bay7  AT-SBx81GS24a                            C-1  A042824112400004
Blade      351  Bay11 AT-SBx81GT24                             B-1  A044024110900001
Blade      352  Bay12 AT-SBx81GS24a                            C-1  A042824104600004
PSU        319  PSU4  AT-SBxPWR-SYS/AC                         A-0  -
Fan module 321  PSU5  AT-SBxFAN12                              E-0  A042844112400016
-----
RAM: Total: 513436 kB Free: 365932 kB
Flash: 126.0MB Used: 121.2MB Available: 4.8MB
-----
Environment Status : Normal
Uptime              : 0 days 00:03:26
Bootloader version  : 2.0.23

Current software   : SBx81CFC400-5.4.6-1.3.rel
Software version  : 5.4.6
Build date        : Mon Aug 29 13:49:19 NZST 2016

Current boot config: flash:/default.cfg (file exists)

System Name
awplus
System Contact

System Location
```

## Viewing voltage, fan status, power supply, alarm status, and temperature

The switch monitors the environmental status of the switch and its power supplies and fan. To display this information, enter User Exec or Privileged Exec mode and enter the command:

```
awplus# show system environment
```

The output depends on the product, but is similar to this:

```
awplus#show system environment
Stack Environment Monitoring Status

Stack member 1:

Overall Status: Normal

Resource ID: 1 Name: x510-28GTX
ID Sensor (Units) Reading Low Limit High Limit Status
1 Fan: Fan 1 (Rpm) 4344 3000 - Ok
2 Voltage: 1.8V (Volts) 1.804 1.617 1.978 Ok
3 Voltage: 1.0V (Volts) 0.995 0.896 1.099 Ok
4 Voltage: 3.3V (Volts) 3.291 2.960 3.613 Ok
5 Voltage: 5.0V (Volts) 5.066 4.477 5.498 Ok
6 Voltage: 1.2V (Volts) 1.187 1.072 1.318 Ok
7 Temp: CPU (Degrees C) 50 -10 90 Ok
```

## Viewing the serial number

The switch's serial number is displayed in the output of the **show system** command, but for convenience, you can also display it by itself. To do this, enter User Exec or Privileged Exec mode and enter the command:

```
awplus# show system serialnumber
```

The output looks like this:

```
P1FY7502C
```

## How to Set System Parameters

You can set system parameters to personalize the switch and make it easy to identify it when troubleshooting. This section describes how to configure the following system parameters:

- Telnet session timeout
- Switch name
- Login banner

### How to change the Telnet session timeout

By default, Telnet sessions time out after 10 minutes of idle time. If desired, you can change this.

To change the timeout for all Telnet sessions, enter Global Configuration mode and enter the commands:

```
awplus(config)# line vty 0 32
awplus(config-line)# exec-timeout <new-timeout>
```

The new timeout value only applies to new sessions, not current sessions.

**Examples** To set the timeout to 30 minutes, enter the command:

```
awplus(config-line)# exec-timeout 30
```

To set the timeout to 30 seconds, enter the command:

```
awplus(config-line)# exec-timeout 0 30
```

To set the timeout to infinity, so that sessions never time out, enter either of the commands:

```
awplus(config-line)# no exec-timeout
awplus(config-line)# exec-timeout 0 0
```

### How to name the switch

To give the switch a name, enter Global Configuration mode and enter the command:

```
awplus(config)# hostname <name>
```

For example, to name the switch “mycompany”

```
awplus(config)# hostname mycompany
```

The prompt displays the new name:

```
my company(config)#
```



The name can contain hyphens and underscore characters, for example:

```
mycompany(config)#hostname mycompany_more_words
mycompany_more_words(config)#hostname mycompany-hyphenated
mycompany-hyphenated(config)
```

However, the name must be a single word, as the following example shows.

```
mycompany(config)#hostname mycompany more words
^
% Invalid input detected at '^' marker.
```

It also cannot be surrounded by quote marks, as the following example shows.

```
awplus(config)#hostname "mycompany more words"
% hostname contains invalid characters
```

### Removing the name

To remove the hostname, enter the command:

```
my company(config)# no hostname
```

The prompt changes back to the default prompt:

```
awplus(config)#
```

### How to display a text banner at login

By default, the switch displays the AlliedWare Plus OS version and build date before login. You can customize this by changing the Message of the Day (MOTD) banner.

To enter a new MOTD banner, enter Global Configuration mode and enter the command:

```
awplus(config)# banner motd <banner-text>
```

The text can contain spaces and other printable characters. You do not have to surround words with quote marks.

**Example** To display “this is a new banner” when someone logs in, enter the command:

```
awplus(config)# banner motd this is a new banner
```

This results in the following output at login:

```
awplus login: manager
Password:
this is a new banner
awplus>
```

## Removing the banner

To return to the default banner (AlliedWare Plus OS version and build date), enter the command:

```
awplus(config)# banner motd default
```

To remove the banner instead of replacing it, enter the command:

```
awplus(config)# no banner motd
```

## How to Set the Time and Date

There are three aspects to setting the time and date:

- setting the current time and date
- setting the timezone
- configuring the switch to automatically change the time when summer-time begins and ends

Instead of manually setting the time, you can use NTP to automatically get the time from another device.

## How to show current settings

To display the current time, timezone and date, enter Privileged Exec mode and enter the command:

```
awplus# show clock
```

The output looks like this:

```
UTC Time:   Wed, 16 May 2015 16:08:14 +0000
Timezone:  UTC
Timezone Offset: +00:00
Summer time zone: None
```

## How to set the time and date

To set the time and date, enter Privileged Exec mode and enter the **clock set** command:

```
clock set <hh:mm:ss> <day> <month> <year>
```

where:

- *hh* is two digits giving the hours in 24-hour format (e.g. **14**)
- *mm* is two digits giving the minutes
- *ss* is two digits giving the seconds
- *day* is two digits giving the day of the month
- *month* is the first three letters of the month name (e.g. **sep**)
- *year* is four digits giving the year

**Example** To set the time to 14:00:00 on 25 January 2015, use the command:

```
awplus# clock set 14:00:00 25 jan 2015
```

## How to set the timezone

To set the timezone, enter Global Configuration mode and enter the **clock timezone** command:

```
clock timezone <timezone-name> {plus|minus} <0-12>
```

The *<timezone-name>* can be any string up to 6 characters long.

To return the timezone to UTC+0, enter the command:

```
awplus(config)# no clock timezone
```

**Example** To set the timezone to Eastern Standard Time, use the command:

```
awplus(config)# clock timezone EST minus 5
```

## How to configure summer-time

There are two approaches for setting summer-time:

- **recurring**, when you specify the week when summer-time starts and ends and each year the switch changes the time at those weeks. For example, Eastern Daylight Time (EDT) starts at 2 am on the second Sunday in March and ends at 2 am on the first Sunday in November.
- **date-based**, when you specify the start and end dates for summer-time for a particular year. For example, Eastern Daylight Time (EDT) starts at 2 am on Sunday, 8 March 2008 and ends at 2 am on Sunday, 2 November 2008.

## Recurring

To set summer-time with recurring dates, enter Global Configuration mode and enter the **clock summer-time recurring** command:

```
clock summer-time <zone-name> recurring <start-week> <start-day>
<start-month> <start-time> <end-week> <end-day> <end-month> <end-
time> <1-180>
```

The *<zone-name>* can be any string up to 6 characters long.

The *<start-time>* and *<end-time>* are in the form hh:mm, in 24-hour time.

Note that if you specify 5 for the week, this changes the time on the last day of the month, not the 5th week.

**Example** To configure EDT, enter the command:

```
awplus(config)# clock summer-time EDT recurring 2 Sun Mar 02:00 1
Sun Nov 02:00 60
```

## Date-based

To set summer-time for a single year, enter Global Configuration mode and enter the **clock summer-time date** command:

```
clock summer-time <zone-name> date <start-day> <start-month>
<start-year> <start-time> <end-day> <end-month> <end-year> <end-
time> <1-180>
```

The *<zone-name>* can be any string up to 6 characters long.

The *<start-time>* and *<end-time>* are in the form hh:mm, in 24-hour time.

**Example** For example, to configure EDT for 2015 enter the command:

```
awplus(config)# clock summer-time EDT date 8 Mar 2008 02:00 2 Nov
2015 02:00 60
```

## How to Enable Secure Mode on x930 Series switches

From software version 5.4.6-1.x onwards, you can put x930 Series switches into Secure Mode. When in Secure Mode, the following are disabled:

- Telnet
- SSHv1
- SNMPv1/v2
- All privilege levels except 1 and 15
- Weak cryptographic algorithms e.g. MD5, RSA1, DSA, etc.

Before entering secure mode, the flash should first be erased completely using the bootloader. To do this, on boot-up, use Ctrl-D to enter the diagnostic menu, select option 7 'Bootup stage 2 diagnostics menu', and then select option 4 'Erase FLASH (Filesystem only).

The switch should be rebooted after completion of the erase process.

Use the following commands to enter secure mode:

```
awplus# configure terminal
awplus(config)# crypto secure-mode
awplus(config)# exit
awplus# write
awplus# reboot
```

Use the following command to confirm that the switch is in secure mode:

```
awplus# show secure-mode
```

The following message should be displayed:

```
Secure mode is enabled
```

### How to leave secure mode

If you wish to leave secure mode, you should delete all sensitive information first. This means deleting all trustpoints (one by one), by using the commands:

```
awplus# configure terminal
awplus(config)# no crypto pki trustpoint <name>
```

Also, delete all public/private key pairs, by using the commands:

```
awplus# configure terminal
awplus(config)# crypto key zeroize all
```

Turn off secure mode, by using the commands:

```
awplus# configure terminal
awplus(config)# no crypto secure-mode
awplus(config)# exit
awplus# write
awplus# reboot
```

The switch **must** be rebooted after secure mode is turned off, and ideally Flash memory should be erased via the bootloader.

## How to Work with Files

The AlliedWare Plus OS lets you create directory trees for file storage. This section summarizes file operations; for detailed information, see the [Configuration and File Management Feature Overview and Configuration Guide](#).

This section shows:

- "How to list files" on page 38
- "How to display the contents of configuration and text files" on page 40
- "How to navigate through the file system" on page 40
- "How to copy files" on page 41
- "How to use the editor" on page 43

### How to list files

#### Listing files

To list files, enter Privileged Exec mode and enter the command:

```
awplus# dir
```

The output lists files and directories in order of modification date, descending. It looks like this:

```
-rw- 534 Jul 12 2007 17:52:50 stp.cfg
-rw- 534 Jul 12 2007 17:12:50 example.cfg
-rw- 12429011 Jul 12 2007 16:26:06 r1-5.2.1-rc3.rel
```

#### Listing files including hidden system files

The `dir` command does not list all files—it hides system files and directories because users generally do not need to create or edit them. To list all files including system files, enter Privileged Exec mode and enter the command:

```
awplus# dir all
```

The output looks like this:

```
drwx 0 Jul 12 2007 17:16:32 ./
-rw- 401 Jul 12 2007 17:16:32 example.cfg
-rw- 534 Jul 12 2007 17:52:50 stp.cfg
-rw- 12429011 Jul 12 2007 16:26:06 r1-5.2.1-rc3.rel
drwx 216 Jul 9 2007 11:31:18 ../
drwx 0 Jun 13 2007 04:31:51 .configs/
-rw- 17 Jun 13 2007 04:27:27 .release
-rw- 9 Jun 12 2007 23:09:19 .ash_history
drwx 0 Jul 10 1977 23:40:00 .ssh/
```

The hidden files and directories begin with a dot.

### Seeing information about the file system

To display information about the different memory types on the switch, enter Privileged Exec mode and enter the command:

```
awplus# show file systems
```

The output includes the amount of free memory and the prefix you type to access that memory type, and looks like this:

```
awplus#show file systems
Size(b)  Free(b)  Type    Flags  Prefixes  S/D/V  Lcl/Ntwk  Avail
-----
 63.0M   28.5M   flash   rw     flash:    static local      Y
-        -       system  rw     system:   virtual local     -
 10.0M   9.8M   debug   rw     debug:    static local      Y
499.0K  431.0K  nvs     rw     nvs:      static local      Y
-        -       tftp    rw     tftp:     -       network  -
-        -       scp     rw     scp:      -       network  -
-        -       sftp    ro     sftp:     -       network  -
-        -       http    ro     http:     -       network  -
-        -       rsync   rw     rsync:    -       network  -
```

### Listing files in a subdirectory

To list the contents of a directory, enter Privileged Exec mode and enter the command:

```
awplus# dir <directory-name>
```

**Note:** You can specify the directory with or without a / after the directory name.

**Example** To display the contents of a directory called 'example', enter the command:

```
awplus# dir example
```

### Listing files in NVS memory or on an SD card

To list the contents of a directory in NVS (non-volatile storage), enter Privileged Exec mode and enter the command:

```
awplus# dir nvs:<directory-name>
```

To list the contents of a directory on an SD card, enter the command:

```
awplus# dir card:<directory-name>
```

**Example** To display the contents of a directory in NVS called “example”, enter the command:

```
awplus# dir nvs:example
```

## How to display the contents of configuration and text files

To display the contents of a file, enter Privileged Exec mode and enter the command:

```
awplus# show file <filename>
```

**Example** To display the contents of the file called “example.cfg”, enter the command:

```
awplus# show file example.cfg
```

## How to navigate through the file system

### Showing the current directory

To see which directory you are currently in, enter Privileged Exec mode and enter the command:

```
awplus# pwd
```

For the top-level directory, the output looks like this:

```
flash:
```

### Changing directories

To change to another directory, enter Privileged Exec mode and enter the command:

```
awplus# cd <directory-name>
```

To go to a directory one level higher in the directory tree, enter the command:

```
awplus# cd ..
```

**Example** To change to a directory called “example”, enter the command:

```
awplus# cd example
```

To go up one level, which returns you to the top level directory, enter the command:

```
awplus# cd ..
```

### Changing to a directory in NVS memory or on an SD card

To change to the top-level directory in the NVS memory file system, enter Privileged Exec mode and enter the command:

```
awplus# cd nvs:
```

To change to the top-level directory on an SD card, enter the command:

```
awplus# cd card:
```

Note that the prefix for the SD card is “card” not “sdcard”. Next, you can change to other directories in NVS memory or on the SD card, by entering the command:



```
awplus# cd <directory-name>
```

Alternatively, you can go straight from Flash to a subdirectory in the alternative file system, by entering one of the commands:

```
awplus# cd nvs:<directory-name>
awplus# cd card:<directory-name>
```

To return to the Flash file system, enter the command:

```
awplus# cd flash:
```

**Example** To change to the directory within NVS called “example”, enter the command:

```
awplus# cd nvs:example
```

To go up one level, which returns you to the top-level directory of NVS memory, enter the command:

```
awplus# cd ..
```

### Creating new directories

To create a directory, enter Privileged Exec mode and enter the command:

```
awplus# mkdir <directory-name>
```

**Example** To make a directory called “example” within the Flash file system, enter the command:

```
awplus# mkdir example
```

### Deleting directories

To delete an empty directory, enter Privileged Exec mode and enter the command:

```
awplus# rmdir <directory-name>
```

To delete a directory and all its contents, enter Privileged Exec mode and enter the command:

```
awplus# delete recursive <directory-name>
```

The switch prompts you for confirmation.

**Example** To delete an empty directory called “example” from within the Flash file system, enter the command:

```
awplus# rmdir example
```

## How to copy files

**Within a directory** To copy a file within the same directory, enter Privileged Exec mode and enter the command:

```
awplus# copy <source-filename> <destination-filename>
```

If the file already exists, the switch asks whether to overwrite it, with a message like this:

```
Overwrite flash:/example.cfg? (y/n)[n]:
```

To overwrite, press the “y” key then the Enter key.

**Between directories** To copy a file to another directory within the same file system, enter the command:

```
awplus# copy <source-filename> <directory-name>/
```

The / after the directory name is required. Otherwise the switch displays an error: (“37: Destination file is a directory”).

The switch then prompts you for the destination filename. To give the copy a new name, type the name at the prompt. You can include directory names in the path.

To use the same filename as the original, press the Enter key (do not press the “y” key—that names the copy “y”).

**Example** To put a copy of example.cfg into the example directory, enter the command:

```
awplus# copy example.cfg example/
```

The prompt and messages look like this:

```
Enter destination file name [example.cfg]:
Copying from source file, please wait...
Copying to destination file, please wait...
0: Successful operation
```

### Copying to and from NVS or SD card

To copy between file systems, you need to specify the file system prefix (nvs: or card:).

For example, to copy from Flash to NVS when your current directory is the top-level Flash directory, enter Privileged Exec mode and enter the command:

```
awplus# copy <source-filename> nvs:
```

The switch prompts you for the filename, as described in the previous section.

To copy from NVS to Flash when your current directory is the top-level Flash directory, enter the command:

```
awplus# copy nvs:<source-filename> <destination-filename>
```

**Example** To copy the file “example.txt” from the directory in NVS called “example” to the top level of Flash, enter the command:

```
awplus# copy nvs:example/example.txt example.txt
```

### Copying to and from a TFTP server

To copy a file from a TFTP server to Flash memory, enter Privileged Exec mode and enter the command:

```
awplus# copy tftp flash
```

The switch prompts you for the:

- TFTP server hostname (you can enter its IP address instead)
- source filename on the TFTP server
- destination filename in Flash on the switch

To copy a file from Flash to a TFTP server, enter the command:

```
awplus# copy flash tftp
```

Follow the prompts for source filename, server, and destination filename.

**Note:** You can specify the server and filename in the command instead of waiting for prompts. Use a format like the following:

```
copy tftp://172.1.1.1/example.cfg flash
```

**Example** To copy example.cfg to the TFTP server at 172.1.1.1, enter the command:

```
awplus# copy flash tftp
```

The prompts, responses, and messages look like this:

```
Enter source file name []:example.cfg
Enter destination host name []:172.1.1.1
Enter destination file name [example.cfg]:
Copying from source file, please wait...
Copying to destination file, please wait...
0: Successful operation
```

## How to use the editor

The inbuilt editor is JOE (Joe's Own Editor).

To edit an existing file, enter Privileged Exec mode and enter the command:

```
edit <filename>
```

To open the editor with a empty file, enter the command:

```
edit
```

When you save the new file, you may need to specify the file system to store it on. For Flash, use **flash:<filename>**.

**Using JOE** To format and manipulate text in JOE, you use control-character sequences. The following table summarizes a few useful sequences—for details, see:

<http://joe-editor.sourceforge.net/manpage.html>

FUNCTION	CONTROL-CHARACTER SEQUENCE
Access the Help	Ctrl-K-H
Saving the file without exiting (for new files, this prompts for a filename).	Ctrl-K-D
Save the file and exit (this prompts for a filename)	Ctrl-K-X
Exit without saving the file	Ctrl-C
Go to the beginning of the file	Ctrl-K-U
Go to the end of the file	Ctrl-K-V
Go up one screenful of text in the file	Ctrl-U
Go down one screenful of text in the file	Ctrl-V
Select a block of text:	
Mark the beginning of the block	Ctrl-K-B
- Mark the end of the block	Ctrl-K-K
- Copy and paste a selected block of text	Place cursor at destination then enter: Ctrl-K-C
Move a selected block of text	Place cursor at destination then enter: Ctrl-K-M
Delete a selected block of text	Ctrl-K-Y

## How to Return to the Factory Defaults

**Note:** After reboot the **show running-config** output will show the default factory settings for your switch once you have removed the default.cfg file. To recreate the default.cfg file enter **copy running-config startup-config**. When you enter copy running-config startup-config commands the default.cfg file is updated with the startup-config.

### Completely restore defaults

To return to factory settings, enter Privileged Executive mode and use the command:

```
awplus# erase factory-default
```

This command erases all data from NVS and all data from flash excluding the following:

- The current release file and its /flash/.release file
- The backup release file and /flash/.backup file
- v1 license files /flash/.configs/.swfeature.lic
- v2 license files /flash/.configs/.sw\_v2.lic

The device is then rebooted and returned to its factory default condition as follows:

```
awplus login: manager
Password:
Last login: Thu Jul  6 00:54:10 UTC 2017 on ttyS0

AlliedWare Plus (TM) 5.4.7 06/09/17 05:35:30

awplus>en
awplus#erase factory-default
This command will erase all NVS, all flash contents except for
the boot release, and any license files, and then reboot the switch.
Proceed ? (y/n):y
.
.
.
Loading default configuration
Warning: flash:/default.cfg does not exist, loading factory defaults.
..

done!
Received event network.configured
```

### Restore default configuration

The switch dynamically adds the default settings to the running-config at start-up if the default file is not present. You can use this feature to completely remove your configuration and return to the factory default configuration, without removing any other files. To do this, delete or rename the default file and make sure no other file is set as the start-up configuration file.

- Find the location of the default boot configuration file, by entering Privileged Exec mode and entering the command:

```
awplus# show boot
```

- Delete the default file when it is the current boot configuration file, by entering Privileged Exec mode and entering either of the commands:

```
awplus# delete force <filename>
```

or

```
awplus# erase startup-config
```

---

**Caution** Erasing startup-config **deletes** the current boot configuration file—it does not simply stop the file from being the boot file.



To make sure that no other file is loaded at start-up, enter Global Configuration mode and enter the command:

```
awplus(config)# no boot config-file
```

**Partially restore defaults** To partially restore the default settings, make a configuration file that contains the settings you want to keep and set this as the start-up configuration file. On start-up, the switch will add the missing settings to the running-config.

For example, to use default settings but still keep an IP address on the eth0 (NET MGMT) management port, create a file like the following one and set it as the boot configuration file:

```
!
interface eth0
 ip address 172.28.8.210/16
!
ip route 0.0.0.0/0 172.28.0.1
!
end
```

## How to Upgrade the Firmware

New releases of the AlliedWare Plus OS become available regularly. Contact your customer support representative for more information.

**Step 1: Put the new release onto your TFTP server or your USB drive.**

**Step 2: If necessary, create space in the switch's Flash memory for the new release.**

Note that you cannot delete the current release file. To see how much space is free, use the command:

```
awplus# show file systems
```

**Step 3: Copy the new release from your TFTP server or your USB drive onto the switch.**

To copy the release file from a TFTP server to Flash memory, enter Privileged Exec mode and enter the command:

```
awplus# copy tftp flash
```

To copy the release file from a USB device, when your current directory is the top-level Flash directory, enter the command:

```
awplus# copy usb:<source-filename>
```

The switch prompts you for the filename and any other information it needs.

On SBx8100 Series switches, you only need to copy the new release to the Active SBx81CFC400 Control Fabric Card (CFC). If your SBx8100 system has a standby CFC installed, the new release file, the configuration file, and all licenses are automatically synchronized from the Active CFC.

**Step 4: Set the switch to boot from the new release.**

Enter Global Configuration mode and enter the command:

```
awplus(config)# boot system <filepath-filename>
```

You can set a backup release file to load if the main release file cannot be loaded. Enter the command:

```
awplus(config)# boot system backup <filepath-filename>
```

**Step 5: Check the boot settings.**

Enter Privileged Exec mode and enter the command:

```
awplus# show boot
```

**Step 6: Reboot.**

Enter Privileged Exec mode and enter the command:

```
awplus# reboot
```

## How to Easily Locate the Device in a Server Room (Find Me)

The Find Me feature enables you to physically locate a specific device from a group of similar devices.

Running the **findme** command causes the device's LEDs to alternately flash green and amber at a rate of 1 Hz. If the switch has no amber LED, then the green LED will flash on/off at a rate of 1 Hz.

An optional **interface** parameter specifies one or more interfaces to flash, while an optional **member** parameter specifies a particular stack member. Both these parameters are mutually exclusive. If no **interface** or **member** parameter is specified, then all ports on the device or stack are flashed.

An optional **timeout** parameter specifies the flash behavior **duration**. The default time is one minute (60 seconds). Normal LED behavior is restored automatically after either the default time, or a specified time, has elapsed or a **no findme** command is used.

## How to Filter and Save “show” Command Output

You can control the output of **show** commands by using the **|** and **>** or **>>** tokens in the following ways:

- To display only part of the output, follow the command with **|** and then other keywords (see “Output modifiers” below)
- To save the output to a file, follow the command with **> filename**
- To append the output to an existing file, follow the command with **>> filename**

Using the **?** after typing the **show** command displays the following information about these tokens.

```
awplus# show users
```

```
| Output modifiers
> Output redirection
>> Output redirection (append)
```



## Output modifiers

Type the | (vertical bar) to use output modifiers.

```
append    Append output
begin     Begin with the first line that contains
          matching output
exclude   Exclude lines that contain matching output
include   Include lines that contain matching output
redirect  Redirect output
```

**Begin** The **begin** parameter causes the display to begin at the first line that contains the input string.

```
awplus# show run | begin vlan1
```

```
...skipping
interface vlan1
 ip address 192.168.14.1
 !!
line con 0
 login
line vty 0 4
 login
!
end
```

**Exclude** The **exclude** parameter excludes all lines of output that contain the input string. In the following output all lines containing the word “input” are excluded:

```
awplus# show interface vlan1 | exclude input
```

```
Interface vlan1
 Scope: both
 Hardware is Ethernet, address is 192.168.14.1
 index 3 metric 1 mtu 1500 <UP,BROADCAST,RUNNING,MULTICAST>
 Label switching is disabled
 No Virtual Circuit configured
 Administrative Group(s): None
 DSTE Bandwidth Constraint Mode is MAM
   output packets 4438, bytes 394940, dropped 0
   output errors 0, aborted 0, carrier 0, fifo 0, heartbeat 0, window 0
   collisions 0
```

**Include** The **include** parameter includes only those lines of output that contain the input string. In the output below, all lines containing the word “input” are included:

```
awplus# show interface vlan1 | include input
```

```
input packets 80434552, bytes 2147483647, dropped 0, multicast packets 0
input errors 0, length 0, overrun 0, CRC 0, frame 0, fifo 1, missed 0
```

**Redirect** The **redirect** parameter puts the lines of output into the specified file. If the file already exists, the new output overwrites the file's contents; the new output is not appended to the existing file contents.

I **redirect** and **>** are synonyms

```
awplus# show history | redirect history.txt
```

**Output redirection** The output redirection token **>** puts the lines of output into the specified file. If the file already exists, the new output overwrites the file's contents; the new output is not appended to the existing file contents.

I **redirect** and **>** are synonyms

```
awplus# show history > history.txt
```

**Append output** The append output token **>>** adds the lines of output into the specified file. The file must already exist, for the new output to be added to the end of the file's contents; the new output is appended to the existing file contents.

I **append** and **>>** are synonyms.

```
awplus# show history >> history.txt
```

## How to Set a Timeout on GUI Sessions

The GUI Timeout feature is a security option that enables you to control the length of time a GUI session can remain open but inactive. It allows you to set a time in minutes and/or seconds to activate the timeout feature. After the GUI has been idle for the time set, you will see a dialogue box informing you that your session has been ended due to inactivity and you will have to login again. The GUI timeout feature is initially disabled.

**Example of the GUI timeout command** Running the **gui-timeout** command configures an idle timeout period for a GUI session. The following example sets the GUI timeout on the device to 5 minutes and 0 seconds.

```
awplus# gui-timeout 5 0
```

The screen output looks like this:

```
% The new gui-timeout settings [5 min 0 sec] will apply to new sessions only
```

Optionally, you can specify the idle time in minutes from 0 to 35791 and in seconds from 0 to 2147483. To enter seconds only, enter 0 for minutes, followed by a space, and then enter the seconds.

To check the status of the GUI timeout feature run the **show running-config** command.

**Example output** To check the status of the GUI timeout feature, use the command:

```
awplus# show running-config
```

The screen output looks like this:

```
...  
!  
gui-timeout 5 0  
!  
...
```