

# Release Note for AT-VST-APL Vista Manager Network Appliance Software Version 3.11.x



» VST-APL v3.11.1 (Vista Manager 3.13.1)

---

## Acknowledgments

©2025 Allied Telesis Inc. All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

Allied Telesis, AlliedWare Plus, Allied Telesis Management Framework, EPSRing, SwitchBlade, VCStack and VCStack Plus are trademarks or registered trademarks in the United States and elsewhere of Allied Telesis, Inc. Adobe, Acrobat, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. Additional brands, names and products mentioned herein may be trademarks of their respective companies.

## Getting the most from this Release Note

To get the best from this release note, we recommend using Adobe Acrobat Reader version 8 or later. You can download Acrobat free from [www.adobe.com/](http://www.adobe.com/)

---

# Contents

<b>Accessing the Web-based VST-APL GUI .....</b>	<b>4</b>
<b>VST-APL Software Version 3.11.1 .....</b>	<b>4</b>
Introduction .....	4
Application support in VST-APL 3.11.1 .....	4
What's New in VST-APL 3.11.1 .....	5
<b>Upgrade procedure .....</b>	<b>8</b>
Backup the system.....	8
Backup application data before upgrading .....	11
Upload component software.....	12
Upgrade the operating system and GUI.....	13
Upgrade Vista Manager, AMF Cloud, and AMF Security applications .....	14
Upgrade Wireless Controller (AWC) and SNMP (full) plug-in applications .....	17
Remove obsolete files from memory.....	22

## Accessing the Web-based VST-APL GUI

This section describes how to access the GUI to manage and monitor your Vista Manager Network Appliance.

These browsers are supported:

- Google Chrome™
- Mozilla Firefox™
- Microsoft Edge or Internet Explorer™ 11 or later
- Apple Safari™.

The VST-APL Web GUI is pre-installed. Connect to the GUI by following these steps.

### Step 1: Connect to the appliance.

Connect the appliance to the network by one of the front panel Ethernet ports. (The console port is for diagnostic use, not for device management.)

### Step 2: Open a web browser and browse to the IP address for the appliance.

The appliance is set to accept an IP address from DHCP.

If DHCP does not assign one, it uses the default IP address 192.168.1.1/24.

For more information on starting the initial management session, see the Installation Guide.

### Step 3: Log in to the GUI.

The default username is *manager* and the default password is *friend*.

The web browser displays the VST-APL dashboard.

For more detailed information on starting the initial management session, see the Installation Guide for your appliance.

Once you have logged into the GUI, you can manage the appliance itself. You will need to activate each application you require. Use the application menu item in the dashboard menu in the web-based VST-APL Web GUI to activate, monitor, manage and access each application as needed for your network.

For more information about using the appliance, see [Vista Manager Network Appliance \(VST-APL\) Technical Documents](#)

# VST-APL Software Version 3.11.1

Product family supported by this version:

AT-VST-APL Vista Manager Network Appliance Series

## Introduction

This release note describes the new features in software version 3.11.1 for the VST-APL Vista Manager Network Appliance and the new software features in this version.

You can obtain the VST-APL upgrade from the [Allied Telesis Support Portal](#).

For more information about the product, see [Vista Manager Network Appliance \(VST-APL\) Technical Documents](#)

These models support this version:

Table 1: VST-APL models

Models	Family
AT-VST-APL-06 AT-VST-APL-10	VST-APL

For more information on VST-APL models see the [Vista Manager Network Appliance datasheet](#).

## Application support in VST-APL 3.11.1

This VST-APL version provides the following software, applications, and files:

SOFTWARE	VERSION	FILENAME
VST-APL operating system	1.9.4	ATVSTAPL-1.9.4.iso
VST-APL application bundle	3.11.1	VST-APL-3.11.1.bundle
Vista Manager	3.13.1	vista-x86_64-3.13.1.app
Wireless Controller (AWC)	3.13.1	awc-x86_64-3.13.1.app
SNMP-Full	2.12.0	fullsnmp-x86_64-2.12.0.app
AMF Cloud	5.5.4-2.3	amf-x86_64-5.5.4-2.3.app
AMF Security	2.6.0	sesc-x86_64-2.6.0.app
AT-RADgate <sup>1</sup>	1.0.0	radgate-x86_64-1.0.0.app

1.The AT-RADgate RADIUS server is not yet available in all regions. See your Allied Telesis representative for more information.

## What's New in VST-APL 3.11.1

This VST-APL version includes the following support for new application versions, new features and enhancements.

For release notes for Vista Manager EX and its AWC and SNMP plugins, see the [Vista Manager EX Release Notes](#) page on our website.

For release notes and other technical documents for VST-APL and its applications, see the [Vista Manager Network Appliance Technical Document](#) page on our website.

### Vista Manager

The Vista Manager application was upgraded to version 3.13.1.

For release notes for Vista Manager EX and its AWC and SNMP plugins, see the [Vista Manager EX Release Notes](#) page on our website.

### Wireless Controller (AWC)

The Wireless Controller (AWC) application was upgraded to version 3.13.1. For release notes and other technical documents for Wireless Controller (AWC), see the [Vista Manager EX Release Notes](#) page on our website.

### SNMP

The SNMP (SNMP full) plug-in application was upgraded to 2.12.0. For release notes and other technical documents for SNMP, see the [Vista Manager EX Release Notes](#) page on our website.

### AMF Cloud

The AMF Cloud application was upgraded to version 5.5.4-2.3. For release notes and other technical documents for AMF Cloud, see the [Vista Manager Network Appliance Technical Document](#) page on our website.

### New AT-RADgate (external RADIUS Server) application support

The AT-RADgate RADIUS server is not yet available in all regions. See your Allied Telesis representative for more information.

This VST-APL version includes support for the new application AT-RADgate, version 1.0.0. This application can now be run on the VST-APL. The image for the RADgate app is included in the VST-APL bundle file for this version.

The RADgate application allows you to authenticate users via a remote RADIUS server, and provides a RADIUS Authentication Service for controlling security policies of edge devices connecting to your networks.

AT-RADgate complies with RFC 2865, Remote Authentication Dial In User Service (RADIUS) providing these features:

- It authenticates and authorizes clients by referring to registered authentication policies, stored either in Active Directory or in the RADgate app.
- It monitors the connection status of the clients associated with endpoints.
- When you change the authentication policy, it applies the changes to authorized clients immediately.
- You can use it to delegate user authentication to Active Directory Domain Controllers.
- It sends client state changes as machine-readable syslog messages.


AT-RADgate requires a feature license. For licensing information, see the datasheet for your product, or contact your local Allied Telesis sales representative.

## Activate and configure the RADgate application

1. To activate and configure the RADgate application on VST-APL, follow the instructions for activating apps in the Vista Manager Network Appliance (VST-APL) User Guide, available from the [Vista Manager Network Appliance \(VST-APL\) Technical Documents](#) page. To access the app, click **AT-RADgate** in the VST-APL GUI menu.


We recommend setting the storage limit for the RADgate app to 65536 MB.

**Figure 1: AT-RADgate application page in the VST-APL GUI**

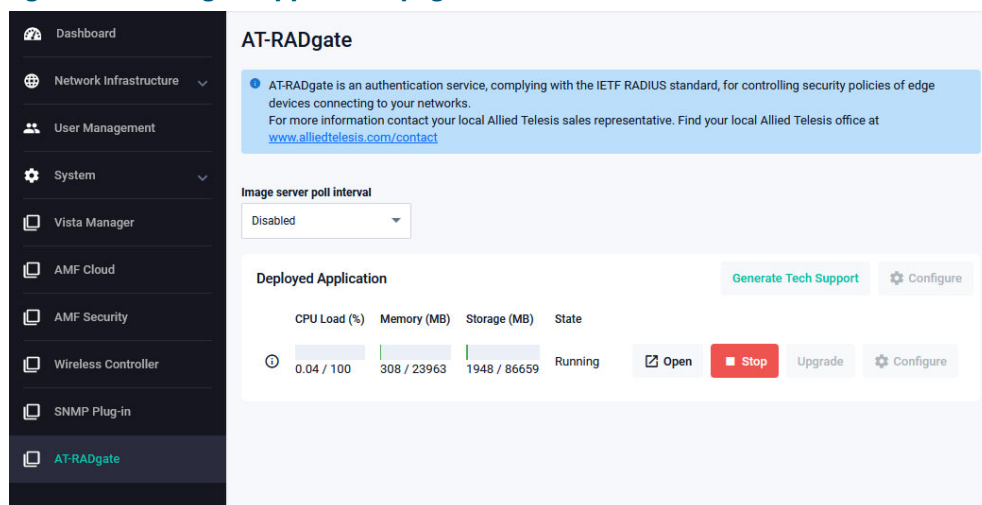

2. To register AT-RADgate as a plugin to Vista Manager, see the Vista Manager EX Release Note, available from the [Vista Manager Network Appliance \(VST-APL\) Technical Documents](#) page on our website.
3. To configure the RADIUS authentication service, open the AT-RADgate application by clicking the **Open** button on the AT-RADgate page in the VST-APL GUI.

## AT-RADgate Status Monitor page

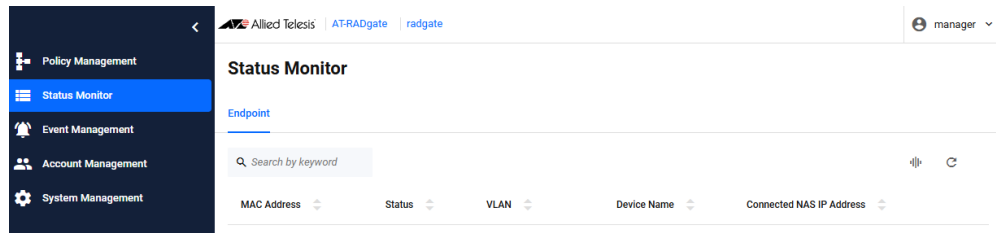

For more information:

- For more information about RADgate, the [Vista Manager Network Appliance \(VST-APL\) Technical Documents](#) page on our website.



## Upgrade procedure

This section describes how to upgrade the VST-APL GUI and applications. It describes how to:

- “Backup the system” on page 8
- “Backup application data before upgrading” on page 11
- “Upload component software” on page 12
- “Upgrade the operating system and GUI” on page 13
- “Upgrade Vista Manager, AMF Cloud, and AMF Security applications” on page 14
- “Upgrade Wireless Controller (AWC) and SNMP (full) plug-in applications” on page 17
- “Remove obsolete files from memory” on page 22

## Backup the system

In VST-APL 3.4.x and later, you can use the Backup and Restore feature to create a back-up file for a VST-APL Network Appliance.

The back-up file records, and can restore:

- the appliance configuration
- the APP files stored in the appliance persistent memory.  
These contain the images of the application software. You can choose which of these application files to back up.
- snapshots of selected application instances or all instances.  
Each of these is a snapshot of the configuration and application data of an application instance on the device.

This feature does not back up application bundle files. We recommend backing these up manually.

Due to a recent design upgrade, your device's GUI may look different to the following images.


### Backup and restore: back up the appliance

To back up all the appliance configuration, any application image files (.app) and the application data for all application instances, follow these steps. This provides a backup that can later be used to restore either an individual application instance or all the application configuration and application instances.

1. If there is unsaved appliance configuration that you want to include in the back-up, click the **Save** button at the top of the VST-APL GUI page.
2. Connect external media for storing the back-up to the appliance's USB port. The external media must have one of the following supported formats: FAT32, exFAT, ext2, ext3 or ext4.


Note that if the external media file system format does not support a sufficiently large file size, the backup will fail. Choose a different external media with a file system format that supports a larger maximum file size, such as ext4.

- In the VST-APL menu, navigate to **System > Backup and Restore**.

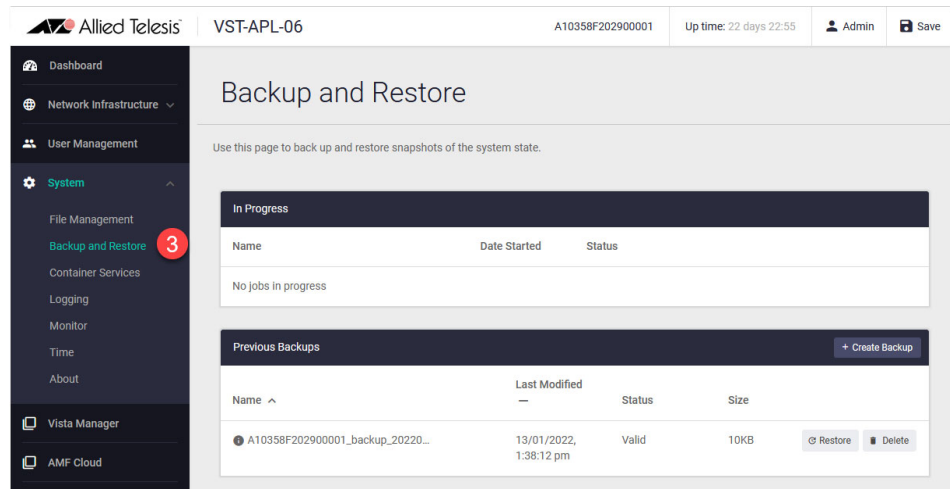

- On the **Backup and Restore** page, click **+ Create Backup** at the top right of the **Previous Backups** panel.

The **Backup** dialog box opens, showing the default settings for the back-up you are about to create, and the storage space it estimates that you need to have free on the external media.

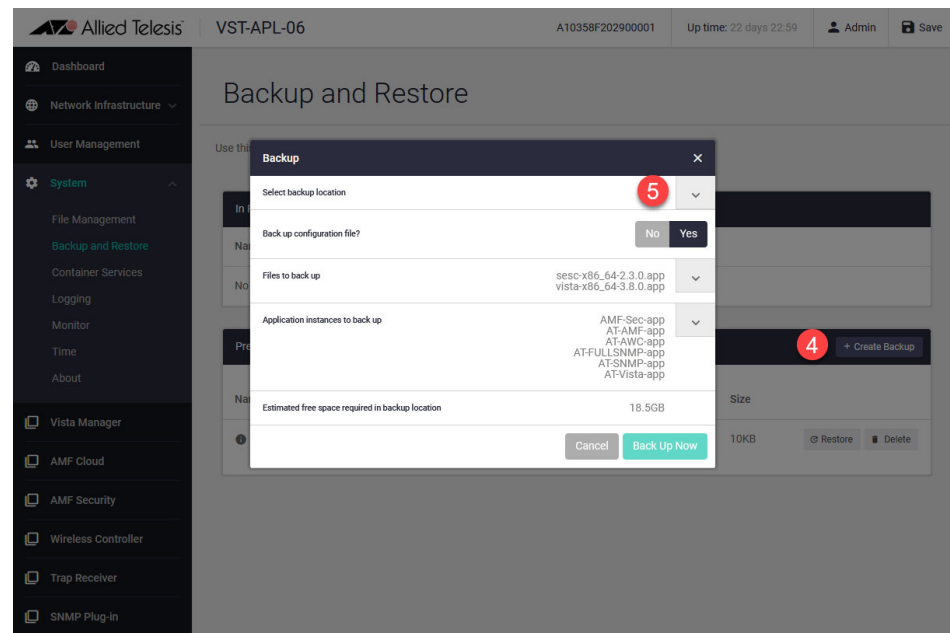

- In the **Backup** dialog box, click the down-arrow at the right of **Select backup location** and from the locations available, choose the external media connected previously.

Check that the backup location has sufficient free space for the new back-up file. You can see the free space available on the backup media in this panel. You can also see the file system of the external media by navigating to the **System > File Management** page and then clicking in the file path at the top of the **File System (fs)** panel.



If the appliance estimates that the space required for the back-up is close to the free space available on the external media, a pop-up window with a warning message appears after clicking Back Up Now. Consider providing more free space on the external media.

When the backup is complete, it disappears from the In Progress panel, and shows in the **Previous Backups** panel. Here you can see the time (Last Modified) and file size of the back-up. Status **Valid** confirms that the backup file has been stored successfully with a valid checksum file.

For more information about the Backup and Restore feature and how to restore a VST-APL system or application, see the [Vista Manager Network Appliance Technical Document](#) page on our website.

## Backup application data before upgrading

We recommend backing up application data for all applications regularly. You should also backup all the application data before following this upgrade procedure. See the relevant application's user manual for information on how to backup an application.

If you are using the **Wireless Controller (AWC)** or the **SNMP (full)** plug-in applications, you must back up these applications before proceeding. This is because the application instance needs to be destroyed and recreated during the process. (Use the backup feature in the applications; do not use the VST-APL backup and restore feature).

### Back up application data

Before upgrading the Wireless Controller and SNMP Full applications, you must back up their system data. The procedures for this are described in this section. We recommend also backing up other applications. The procedures are similar.

Make sure that directories and filenames used for backup and restoration do not contain any multibyte characters.

### Back up system data for the Wireless Controller (AWC) plug-in application

1. Log into Vista Manager EX using an Admin account.
2. From the AWC Plug-in menu, select **System Setting**.
3. To create a backup file for the log data in addition to the other data backup, check the **Include Log Data** checkbox to the right of the Backup button under System Maintenance (optional).
4. To start the back-up downloading, click the **Backup** button in the System Maintenance section.
5. From your web browser's dialog box, save the backup file to your local computer.

The backup filename will be in the format:  
"config\_atawc-X.X.X\_YYYYMMDDhhmmss.zip".

## Back up system data for the SNMP plug-in application

1. Log in to Vista Manager EX using an Admin account.
2. Click the **SNMP Plug-in** icon in the left menu of the Vista Manager application, then click the **System** menu.
3. In the **System Maintenance** panel of the **System Setting** page, click the **Backup** button. This creates a backup of application data.

## Upload component software


You need the new image files in the appliance persistent storage to change the running software. Make sure to upgrade the operating system and all the applications you are using, so that they match.

To see which version of the VST-APL operating system the appliance is currently running, use the VST-APL GUI to navigate to the **System > About** page. To see the application files loaded in the appliances memory, navigate to the **System > File Management** page. To see the current version of an application running on the appliance, go to the GUI page for the application by clicking on its menu item, and hover over the instance information icon in the Deployed Application panel.

**Caution:** Ensure you obtain the software image files from Allied Telesis. If you try to install software that is not provided by Allied Telesis, there is risk of corrupting the installation.

1. Download the following files from the [Allied Telesis Support Portal](#). Save them to a directory that the appliance can access, such as the device your GUI browser is running on.
  - « the appliance software operating system and web GUI. This has a filename like ATVSTAPL-x.x.x.iso.
  - « all the applications as a bundle. This has a filename like VST-APL-x.x.x.bundle.

- In the VST-APL GUI, navigate to the **System > File Management** page. Click the **Upload** button and select the software image files to upload.

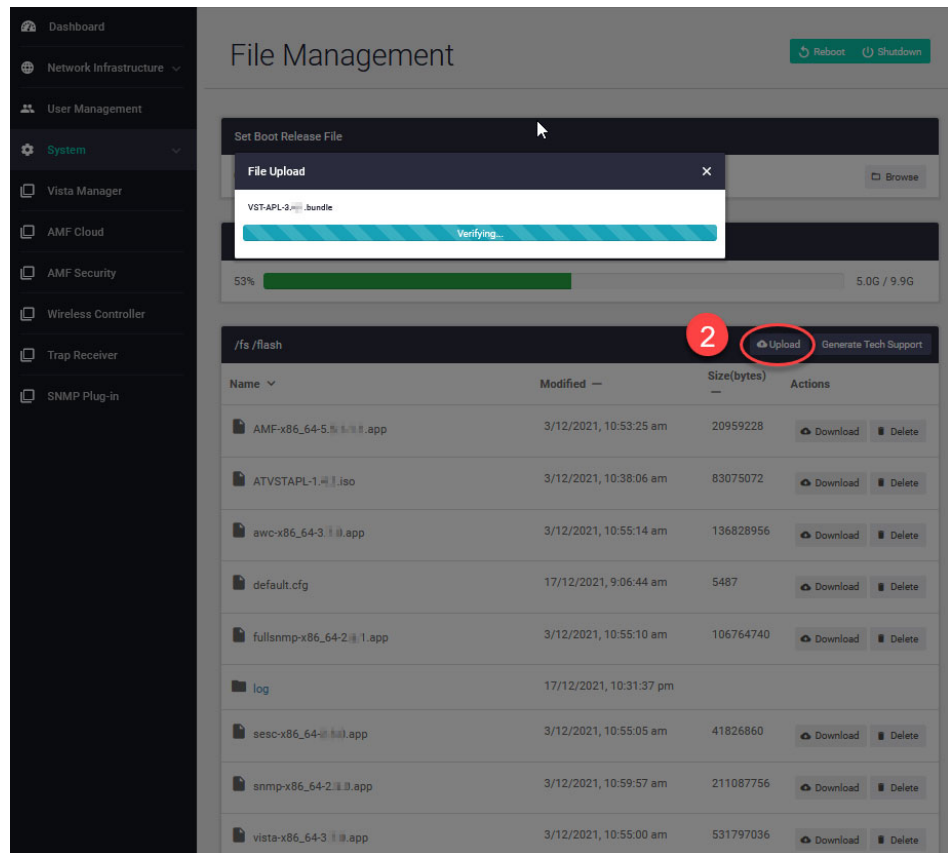


## Upgrade the operating system and GUI

Before upgrading the operating system, make sure to:

- “Backup the system” on page 8
- “Upload component software” on page 12

To upgrade the VST-APL operating system, in the VST-APL GUI, follow these steps.


- In the **File Management** page **Set Boot Release File** panel, click **Browse**.

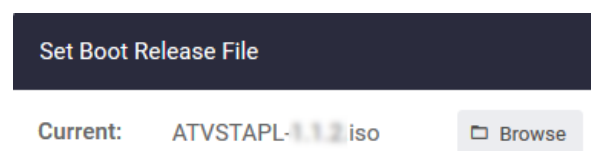

- Select the new software version and click **Apply**.
- Reboot the appliance by clicking the green **Reboot** button at the top right of the **File Management** page.



4. Click **Reboot** again to confirm.

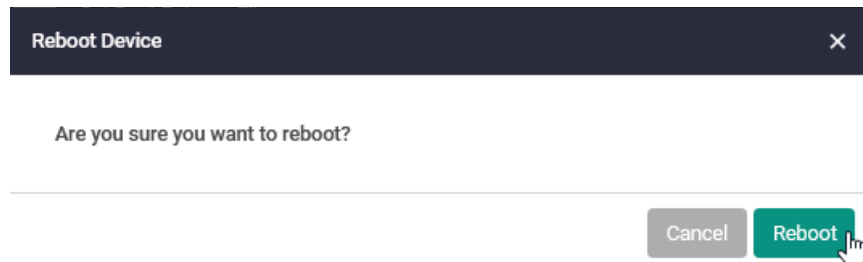

The appliance will shut down any applications that are running, install the new version of the VST-APL operating system, and restart any applications that were running when the appliance configuration was last saved. This may take several minutes. The appliance configuration, including IP addressing, is retained from the last time it was saved.

5. When the upgrade has completed, you will need to re-authenticate to access the appliance.
6. To verify the currently running software version, log in to your VST-APL Web GUI, and navigate to the **System > About** page. The **Software Version** should agree with the VST-APL Web GUI version.

## Upgrade Vista Manager, AMF Cloud, and AMF Security applications

VST-APL version 3.4.1 and later (VST-APL Web GUI version 1.5.1 and later) support simpler upgrade of applications from a bundle. This ensures they are compatible with each other and the operating system version.


Before upgrading these applications:

- [“Backup application data before upgrading” on page 11](#)
- [“Upload component software” on page 12](#)
- [“Upgrade the operating system and GUI” on page 13](#)

Use this procedure to dynamically upgrade these applications:


- Vista Manager
- AMF Cloud
- AMF Security

1. In the **Dashboard** page, click the **Upgrade Instances** button.

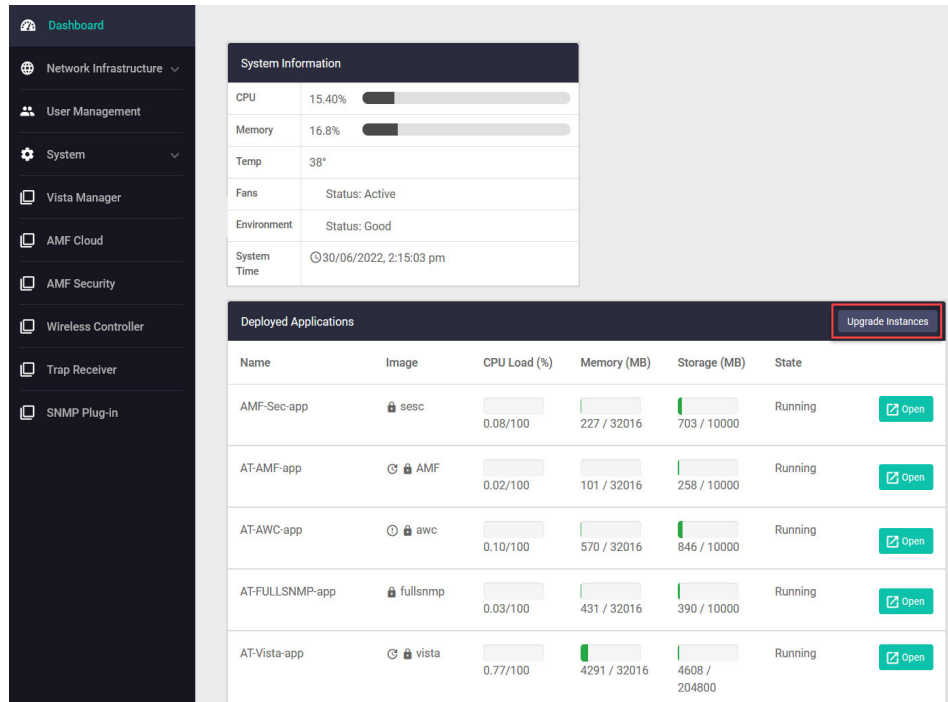

2. Make sure the correct version of the bundle file is displayed in the **Upgrade to** field at the top left of the upgrade instances panel. If not, use the drop down list to select the correct version.


Applications that can be upgraded are shown as selected. We recommend upgrading them all.

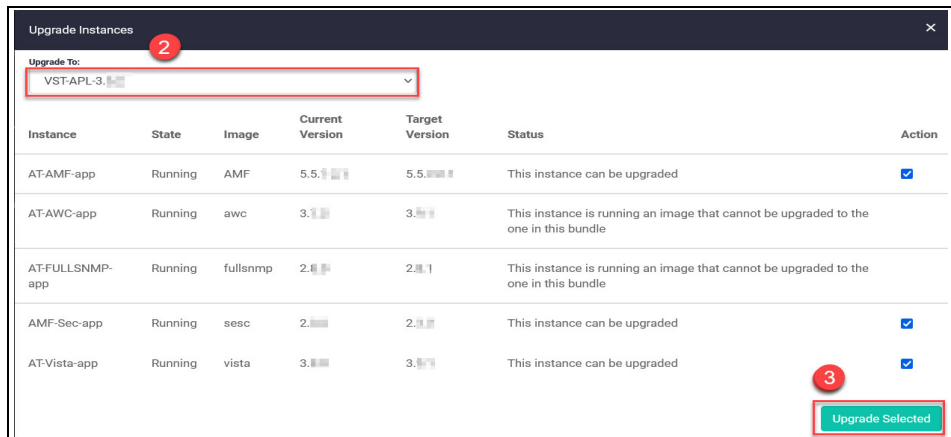

3. Click the **Upgrade Selected** button and wait till upgrade is complete. The **Status** column shows progress. They first stop, then change to the new version, then start.



- It is important to save the state of the VST-APL operating system after the upgrade. The **Save** button in the top right corner of the screen is orange when there are unsaved changes. Click on the button to save the changes.

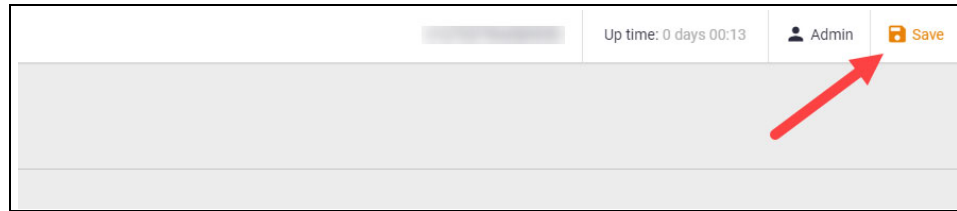


Note that if you do not save and VST-APL is rebooted, the upgraded applications will revert to the old APP images and fail to start. You will see 'configured image "<image-name>" doesn't exist' messages if this happens.



Note that the earlier versions of the applications show as unsigned even though they are signed.



- Vista Manager EX may prompt you to migrate the database. Select **Download Database Backup** to make a backup. Select **Download Database Backup** to make a backup.

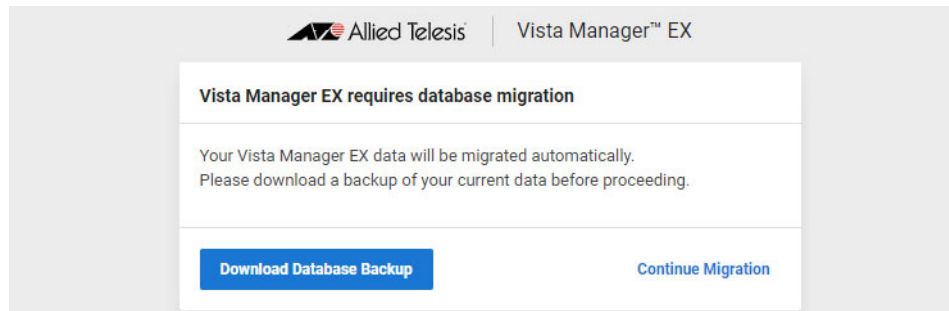

- Confirm you have successfully downloaded a backup file, then select **Continue Migration**. If you get a browser error about the page becoming unreachable, then refresh your browser.

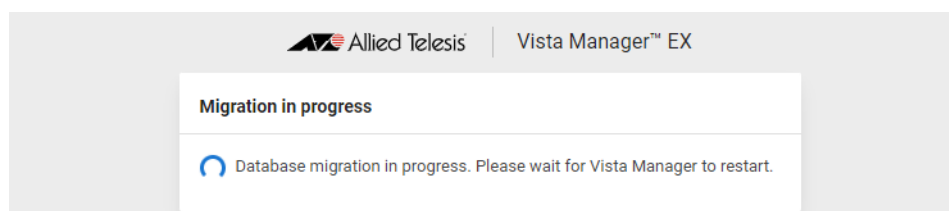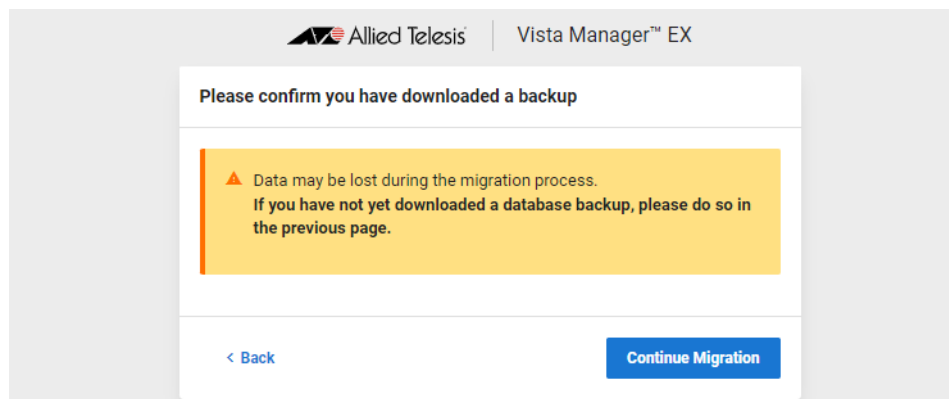

7. Once the migration has completed, your connection may be lost. If this happens, close your browser and reopen the application from the VST-APL dashboard.

## Upgrade Wireless Controller (AWC) and SNMP (full) plug-in applications

Before upgrading these applications, make sure to:

- [“Backup the system” on page 8](#)
- [“Backup application data before upgrading” on page 11](#)
- [“Upload component software” on page 12](#)
- [“Upgrade the operating system and GUI” on page 13](#)

The following applications are not supported by upgrading as a set from the bundle.

- Wireless Controller (AWC) plug-in
- SNMP (Full) plug-in


Instead, use these procedures:

- [“Destroy and recreate application instances” on page 18](#)
- [“Re-register plug-ins in Vista Manager” on page 20](#)
- [“Restore application data from back-up” on page 21](#)

## Destroy and recreate application instances

In the VST-APL GUI, follow these steps.

1. Navigate to the application page for the application.
2. Hover over the Instance Information icon (i) and record information about the application from the **Instance Information** panel. Record all the Network settings (Network Type, etc).

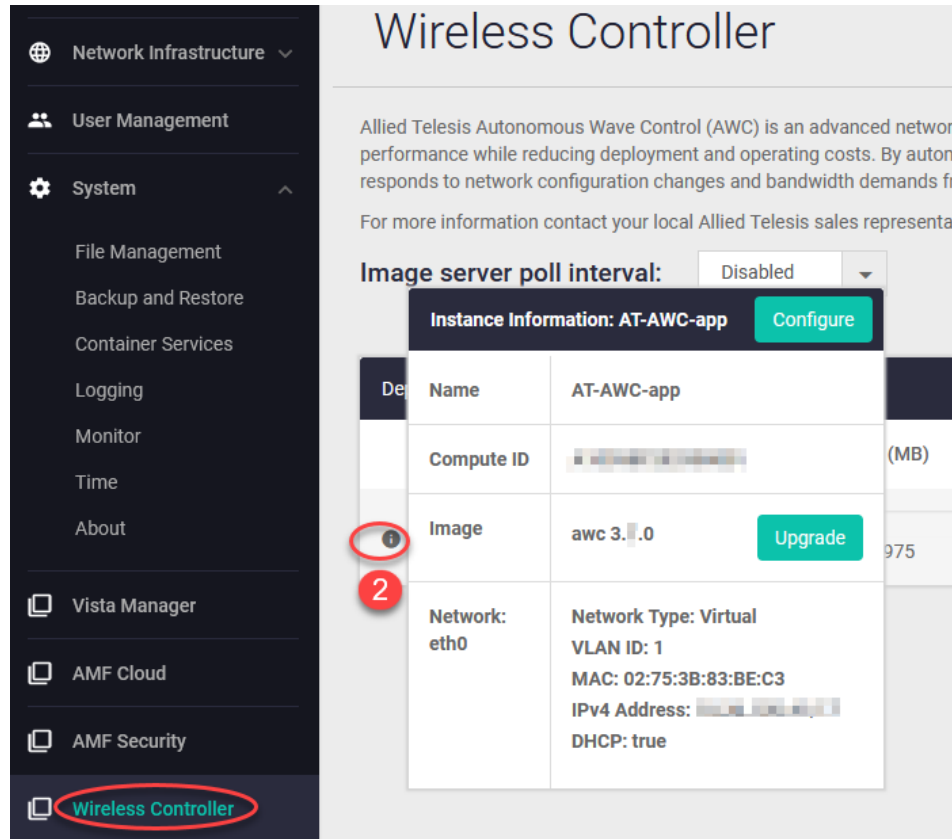


The screenshot shows the VST-APL GUI interface. On the left, a sidebar menu lists various system components, with 'Wireless Controller' highlighted in red. The main content area displays the 'Wireless Controller' application page. A modal window titled 'Instance Information: AT-AWC-app' is open, showing details for the 'AT-AWC-app' instance. The modal includes a 'Compute ID' field, an 'Image' field with the value 'awc 3.1.0' and an 'Upgrade' button, and a 'Network' section with the following details: Network Type: Virtual, VLAN ID: 1, MAC: 02:75:3B:83:BE:C3, IPv4 Address, and DHCP: true. Red circles and numbers 1 and 2 highlight the Instance Information icon and the modal window respectively.

3. In the application page, stop the application by clicking the **Stop** button. Destroy the application by clicking the **Destroy** button.
4. Click the **Activate** button.
5. Add an interface to connect the application to your network.


- In the **Application Configuration** dialog box, select the new **Image Version**. Fill in the storage and the network data you recorded. The recommended storage values are:

AWC: 204 800 MB

SNMP Full: 102 400 MB

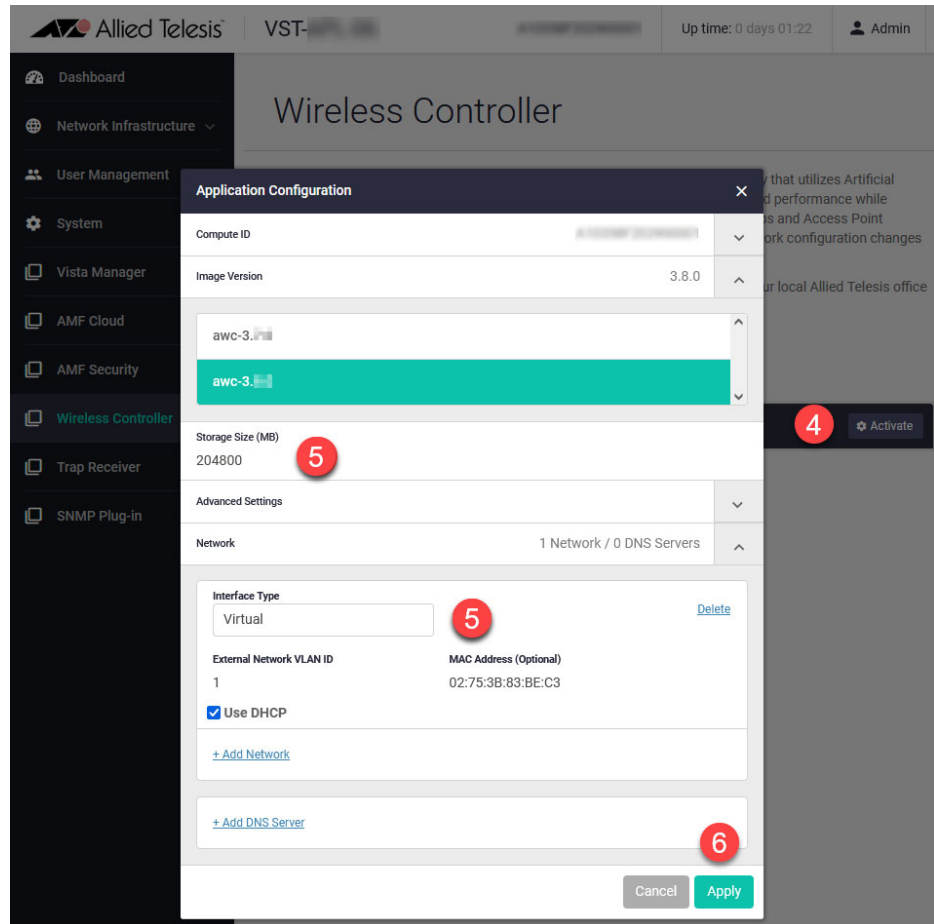

- Click the **Apply** button. This creates a new version of the application instance. Wait a few minutes for this to start and for the **Open** button to appear.
- It is important to save the state of the operating system after the upgrade. The **Save** button in the top right corner of the screen is orange when there are unsaved changes. Click on the button to save the changes.

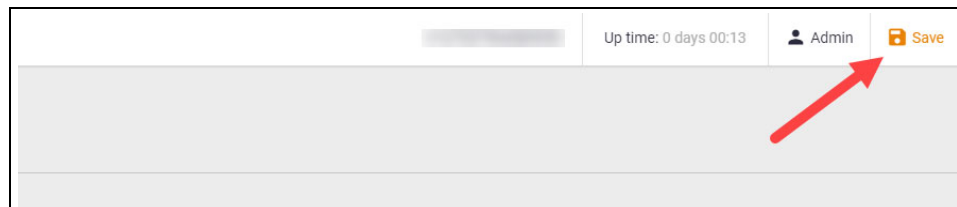

- From the device menu, navigate to the **Vista Manager** page and click the **Open** button. If necessary, wait for Vista Manager EX to perform its initial set up.
- Log in to the Vista Manager EX application by .


## Re-register plug-ins in Vista Manager

If you are using these plug-ins in Vista Manager EX, you will need to reregister them:


- Wireless Controller (AWC)
- SNMP (Full)

Follow these steps for each of the plug-ins.

11. On the Vista Manager EX page, navigate to **System Management > Plugins**.
12. Click **AWC Plug-in** at the bottom left.

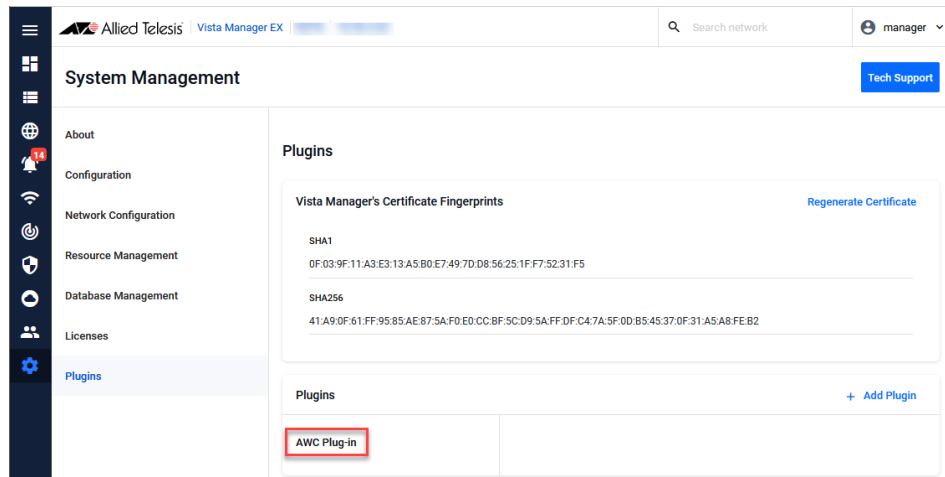

If the plug-in is not registered, Vista Manager displays an error message like this:

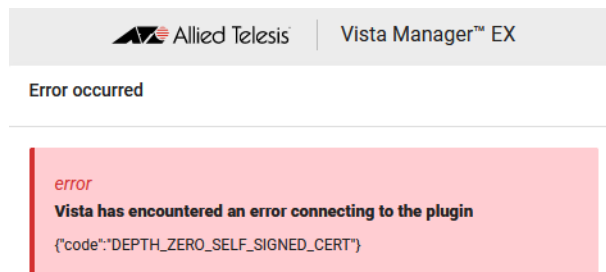

13. Click **Edit**.



14. Click **Verify Connection**.

- Check the certificate and click **Save**. A 'Plug-in updated' pop-up message confirms this step.

**Register Plugin** ✕

Server URL

https://[REDACTED]:5443/wireless\_plugin

Please verify these certificate fingerprints match the ones the plugin is reporting. See [Vista Manager EX Installation Guide](#) for more information.

**Plugin Certificate Fingerprints:**

**SHA1**

28:69:65:21:F5:16:1E:62:FF:CD:EE:D7:89:6F:3B:A1:DC:81:35:CF

---

**SHA256**

D9:22:35:F5:7B:47:14:70:69:A6:E8:19:55:0B:7E:14:D5:27:52:0B:E8:1E:A1:C5:4A:71:21:9D:90:32:ED:95

Save

- Repeats steps [Step 12](#) to [Step 15](#) for the SNMP (full) plug-in.
- Restore system data for the plug-in application from the back-up file (“[Restore application data from back-up](#)” below).

## Restore application data from back-up

- For the applications upgraded as a set in this procedure “[Upgrade Vista Manager, AMF Cloud, and AMF Security applications](#)” on [page 14](#), the data is restored automatically.

For the Wireless Controller and SNMP (Full) applications, you must use the following procedures to restore the system data:

- “[Restore system data for the Wireless Controller plug-in](#)” on [page 21](#)
- “[Restore system data for the SNMP plug-in](#)” on [page 22](#)

## Restore system data for the Wireless Controller plug-in

Note that restoring a backup file made on another platform is not supported.

To restore data from the back-up file for the Wireless Controller (AWC) plug-in application, follow these steps:

- Log in to Vista Manager EX using an Admin account.
- In the Vista Manager EX menu, navigate to **AWC Plug-in > System Setting** page.
- Click the **Restore** button in the System Maintenance section to open the **Restore** dialog box.

4. Click the **Select File** button and select a backup file.
5. Click **Run**.
6. Click **OK** on the confirmation dialog box.
7. After the restoration process has finished, a dialog box shows that restoration is complete. Click **OK**.

Note that the back-up cannot restore the following system information. Re-configure these values as necessary:

- « Database Setting > **Maximum Memory Usage**
- « Network Map Setting > **Wireless Client Update-Interval**

Note that an email server and “from” address must be configured on the device in order for email logs to work. Use the command **mail from <email-address> server <ip-address>**, where the <email-address> is the ‘From:’ field on the sent email, and the <ip-address> is the email’s destination SMTP server.

8. Set the external IP address for the plug-in application. To do this, in the Vista Manager EX page, navigate to **AWC Plug-in > System Setting**.

In the **IP Address Settings** page, click the drop down list and select the AWC IP address (don’t select ‘other’).

Click the **Save** button for that section.

## Restore system data for the SNMP plug-in

To restore data from the backup of application data for the SNMP plug-in application, follow these steps.

Log in to Vista Manager EX using an Admin account.

1. In the left menu of Vista Manager EX, click the **SNMP plug-in** icon, then click the **System** menu.
2. In the **System Setting** page **System Maintenance** panel, click the **Restore** button. This restores the data from the back-up into the SNMP plug-in application.

## Remove obsolete files from memory

You can make more space available in the device’s persistent memory by removing obsolete files. We recommend removing the .iso file for the previous version of the operating system and the bundle file for the previous bundle of applications. Keep the current versions.

1. From the VST-APL dashboard, navigate to the **System > File Management** page.
2. Click the **Delete** button to the right of the obsolete files you want to remove.