


# AT-IX5-28GPX

**HIGH AVAILABILITY, HIGH POWER VIDEO SURVEILLANCE  
PoE SWITCH**

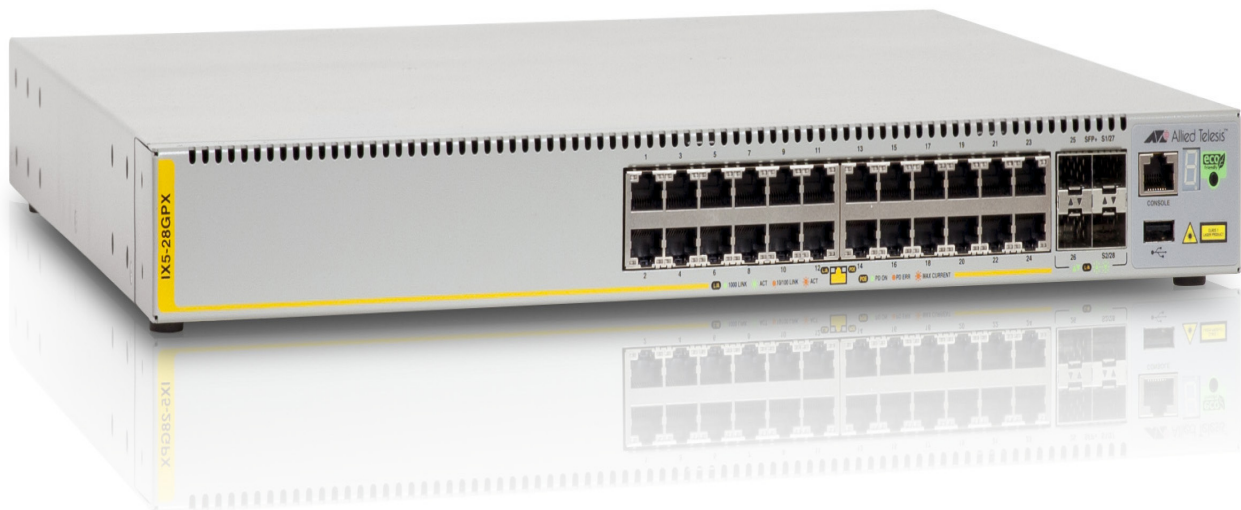

## Command Reference for AlliedWare Plus™ Version 5.4.6-0.x

# Acknowledgments

This product includes software developed by the University of California, Berkeley and its contributors.

Copyright ©1982, 1986, 1990, 1991, 1993 The Regents of the University of California.

All rights reserved.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. For information about this see [www.openssl.org/](http://www.openssl.org/)

Copyright ©1998-2008 The OpenSSL Project. All rights reserved.

This product includes software licensed under v2 and v3 of the GNU General Public License, available from: [www.gnu.org/licenses/gpl2.html](http://www.gnu.org/licenses/gpl2.html) and [www.gnu.org/licenses/gpl.html](http://www.gnu.org/licenses/gpl.html) respectively.

Source code for all GPL licensed software in this product can be obtained from the Allied Telesis GPL Code Download Center at: [www.alliedtelesis.com/support/default.aspx](http://www.alliedtelesis.com/support/default.aspx)

Allied Telesis is committed to meeting the requirements of the open source licenses including the GNU General Public License (GPL) and will make all required source code available.

If you would like a copy of the GPL source code contained in Allied Telesis products, please send us a request by registered mail including a check for US\$15 to cover production and shipping costs and a CD with the GPL code will be mailed to you.

**GPL Code Request**  
**Allied Telesis Labs (Ltd)**  
**PO Box 8011**  
**Christchurch**  
**New Zealand**

Allied Telesis, AlliedWare Plus, Allied Telesis Management Framework, EPSRing, SwitchBlade, VCStack, and VCStack Plus are trademarks or registered trademarks in the United States and elsewhere of Allied Telesis, Inc.

Microsoft and Internet Explorer are registered trademarks of Microsoft Corporation. All other product names, company names, logos or other designations mentioned herein may be trademarks or registered trademarks of their respective owners.

© 2015 Allied Telesis, Inc.

All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

---

# Contents

|                   |                                  |           |
|-------------------|----------------------------------|-----------|
| <b>PART 1:</b>    | <b>Setup and Troubleshooting</b> | <b>70</b> |
| <b>Chapter 1:</b> | <b>CLI Navigation Commands</b>   | <b>71</b> |
|                   | Introduction                     | 71        |
|                   | configure terminal               | 72        |
|                   | disable (Privileged Exec mode)   | 73        |
|                   | do                               | 74        |
|                   | enable (Privileged Exec mode)    | 75        |
|                   | end                              | 77        |
|                   | exit                             | 78        |
|                   | help                             | 79        |
|                   | logout                           | 80        |
|                   | show history                     | 81        |
| <b>Chapter 2:</b> | <b>File Management Commands</b>  | <b>82</b> |
|                   | Introduction                     | 82        |
|                   | autoboot enable                  | 86        |
|                   | boot config-file                 | 87        |
|                   | boot config-file backup          | 89        |
|                   | boot system                      | 90        |
|                   | boot system backup               | 92        |
|                   | cd                               | 93        |
|                   | copy (filename)                  | 94        |
|                   | copy current-software            | 96        |
|                   | copy debug                       | 97        |
|                   | copy running-config              | 98        |
|                   | copy startup-config              | 99        |
|                   | copy zmodem                      | 100       |
|                   | create autoboot                  | 101       |
|                   | delete                           | 102       |
|                   | delete debug                     | 103       |
|                   | dir                              | 104       |
|                   | edit                             | 106       |
|                   | edit (filename)                  | 107       |

|   |     |
|---|-----|
| erase startup-config . . . . .                    | 108 |
| ip tftp source-interface . . . . .                | 109 |
| ipv6 tftp source-interface . . . . .              | 110 |
| mkdir . . . . .                                   | 111 |
| move . . . . .                                    | 112 |
| move debug . . . . .                              | 113 |
| pwd . . . . .                                     | 114 |
| rmdir . . . . .                                   | 115 |
| show autoboot . . . . .                           | 116 |
| show boot . . . . .                               | 117 |
| show file . . . . .                               | 119 |
| show file systems . . . . .                       | 120 |
| show running-config . . . . .                     | 122 |
| show running-config access-list . . . . .         | 124 |
| show running-config as-path access-list . . . . . | 125 |
| show running-config dhcp . . . . .                | 126 |
| show running-config full . . . . .                | 127 |
| show running-config interface . . . . .           | 129 |
| show running-config ip route . . . . .            | 131 |
| show running-config ipv6 access-list . . . . .    | 132 |
| show running-config ipv6 route . . . . .          | 133 |
| show running-config key chain . . . . .           | 134 |
| show running-config lldp . . . . .                | 135 |
| show running-config power-inline . . . . .        | 136 |
| show running-config route-map . . . . .           | 137 |
| show running-config router . . . . .              | 138 |
| show running-config router-id . . . . .           | 139 |
| show running-config security-password . . . . .   | 140 |
| show startup-config . . . . .                     | 141 |
| show version . . . . .                            | 142 |
| write file . . . . .                              | 143 |
| write memory . . . . .                            | 144 |
| write terminal . . . . .                          | 145 |

|                   |  |            |
|-------------------|--|------------|
| <b>Chapter 3:</b> | <b>User Access Commands . . . . .</b>          | <b>146</b> |
|                   | Introduction . . . . .                         | 146        |
|                   | clear line console . . . . .                   | 148        |
|                   | clear line vty . . . . .                       | 149        |
|                   | enable password . . . . .                      | 150        |
|                   | enable secret . . . . .                        | 153        |
|                   | exec-timeout . . . . .                         | 156        |
|                   | flowcontrol hardware (asyn/console) . . . . .  | 158        |
|                   | length (asyn) . . . . .                        | 160        |
|                   | line . . . . .                                 | 161        |
|                   | privilege level . . . . .                      | 163        |
|                   | security-password history . . . . .            | 164        |
|                   | security-password forced-change . . . . .      | 165        |
|                   | security-password lifetime . . . . .           | 166        |
|                   | security-password minimum-categories . . . . . | 167        |
|                   | security-password minimum-length . . . . .     | 168        |
|                   | security-password reject-expired-pwd . . . . . | 169        |
|                   | security-password warning . . . . .            | 170        |
|                   | service advanced-vty . . . . .                 | 171        |



|                   |   |            |
|-------------------|---|------------|
|                   | service password-encryption . . . . .                         | 172        |
|                   | service telnet . . . . .                                      | 173        |
|                   | service terminal-length (deleted) . . . . .                   | 174        |
|                   | show privilege . . . . .                                      | 175        |
|                   | show security-password configuration . . . . .                | 176        |
|                   | show security-password user . . . . .                         | 177        |
|                   | show telnet . . . . .   | 178        |
|                   | show users . . . . .  | 179        |
|                   | telnet . . . . .  | 180        |
|                   | telnet server . . . . .                                       | 181        |
|                   | terminal length . . . . .                                     | 182        |
|                   | terminal resize . . . . .                                     | 183        |
|                   | username . . . . .  | 184        |
| <b>Chapter 4:</b> | <b>Licensing Commands . . . . .</b>                           | <b>186</b> |
|                   | Introduction . . . . .  | 186        |
|                   | license . . . . .   | 187        |
|                   | license member (deleted) . . . . .                            | 189        |
|                   | show license . . . . .  | 190        |
|                   | show license brief . . . . .                                  | 192        |
|                   | show license brief member . . . . .                           | 194        |
|                   | show license member . . . . .                                 | 196        |
| <b>Chapter 5:</b> | <b>GUI Commands . . . . .</b>                                 | <b>198</b> |
|                   | Introduction . . . . .  | 198        |
|                   | gui-timeout . . . . .   | 199        |
|                   | service http . . . . .  | 200        |
|                   | show http . . . . .   | 201        |
| <b>Chapter 6:</b> | <b>System Configuration and Monitoring Commands . . . . .</b> | <b>202</b> |
|                   | Introduction . . . . .  | 202        |
|                   | banner exec . . . . .   | 204        |
|                   | banner login (system) . . . . .                               | 206        |
|                   | banner motd . . . . .   | 208        |
|                   | clock set . . . . .   | 210        |
|                   | clock summer-time date . . . . .                              | 211        |
|                   | clock summer-time recurring . . . . .                         | 213        |
|                   | clock timezone . . . . .                                      | 215        |
|                   | continuous-reboot-prevention . . . . .                        | 216        |
|                   | ecofriendly led . . . . .                                     | 218        |
|                   | ecofriendly lpi . . . . .                                     | 219        |
|                   | findme . . . . .  | 221        |
|                   | findme trigger . . . . .                                      | 223        |
|                   | hostname . . . . .  | 224        |
|                   | max-fib-routes . . . . .                                      | 226        |
|                   | max-static-routes . . . . .                                   | 227        |
|                   | no debug all . . . . .  | 228        |
|                   | reboot . . . . .  | 229        |
|                   | reload . . . . .  | 230        |
|                   | show clock . . . . .  | 231        |
|                   | show continuous-reboot-prevention . . . . .                   | 233        |
|                   | show cpu . . . . .  | 234        |

|   |     |
|---|-----|
| show cpu history . . . . .              | 237 |
| show debugging . . . . .                | 240 |
| show ecofriendly . . . . .              | 241 |
| show interface memory . . . . .         | 243 |
| show memory . . . . .                   | 245 |
| show memory allocations . . . . .       | 247 |
| show memory history . . . . .           | 249 |
| show memory pools . . . . .             | 251 |
| show memory shared . . . . .            | 252 |
| show process . . . . .                  | 253 |
| show reboot history . . . . .           | 256 |
| show router-id . . . . .                | 258 |
| show system . . . . .                   | 259 |
| show system environment . . . . .       | 261 |
| show system interrupts . . . . .        | 262 |
| show system mac . . . . .               | 263 |
| show system pci device . . . . .        | 265 |
| show system pci tree . . . . .          | 266 |
| show system serialnumber . . . . .      | 267 |
| show tech-support . . . . .             | 268 |
| speed (asyn) . . . . .                  | 270 |
| system territory (deprecated) . . . . . | 272 |
| terminal monitor . . . . .              | 273 |
| undebg all . . . . .                    | 274 |

## **Chapter 7: Pluggables and Cabling Commands . . . . . 275**

|  |     |
|--|-----|
| Introduction . . . . .                         | 275 |
| clear test cable-diagnostics tdr . . . . .     | 276 |
| debug fiber-monitoring . . . . .               | 277 |
| fiber-monitoring action . . . . .              | 279 |
| fiber-monitoring baseline . . . . .            | 280 |
| fiber-monitoring enable . . . . .              | 282 |
| fiber-monitoring interval . . . . .            | 283 |
| fiber-monitoring sensitivity . . . . .         | 284 |
| show system fiber-monitoring . . . . .         | 286 |
| show system pluggable . . . . .                | 289 |
| show system pluggable detail . . . . .         | 291 |
| show system pluggable diagnostics . . . . .    | 295 |
| show test cable-diagnostics tdr . . . . .      | 297 |
| test cable-diagnostics tdr interface . . . . . | 298 |

## **Chapter 8: Logging Commands . . . . . 299**

|                                |     |
|--------------------------------|-----|
| Introduction . . . . .         | 299 |
| clear exception log . . . . .  | 301 |
| clear log . . . . .            | 302 |
| clear log buffered . . . . .   | 303 |
| clear log permanent . . . . .  | 304 |
| default log buffered . . . . . | 305 |
| default log console . . . . .  | 306 |
| default log email . . . . .    | 307 |
| default log host . . . . .     | 308 |
| default log monitor . . . . .  | 309 |

---

|                    |   |            |
|--------------------|---|------------|
|                    | default log permanent . . . . .             | 310        |
|                    | log buffered . . . . .                      | 311        |
|                    | log buffered (filter) . . . . .             | 312        |
|                    | log buffered exclude . . . . .              | 315        |
|                    | log buffered size . . . . .                 | 318        |
|                    | log console . . . . .                       | 319        |
|                    | log console (filter) . . . . .              | 320        |
|                    | log console exclude . . . . .               | 323        |
|                    | log email . . . . .                         | 326        |
|                    | log email (filter) . . . . .                | 327        |
|                    | log email exclude . . . . .                 | 330        |
|                    | log email time . . . . .                    | 333        |
|                    | log facility . . . . .                      | 335        |
|                    | log host . . . . .                          | 337        |
|                    | log host (filter) . . . . .                 | 338        |
|                    | log host exclude . . . . .                  | 341        |
|                    | log host source . . . . .                   | 344        |
|                    | log host time . . . . .                     | 345        |
|                    | log monitor (filter) . . . . .              | 347        |
|                    | log monitor exclude . . . . .               | 350        |
|                    | log permanent . . . . .                     | 353        |
|                    | log permanent (filter) . . . . .            | 354        |
|                    | log permanent exclude . . . . .             | 357        |
|                    | log permanent size . . . . .                | 360        |
|                    | log-rate-limit nsm . . . . .                | 361        |
|                    | show counter log . . . . .                  | 363        |
|                    | show exception log . . . . .                | 364        |
|                    | show log . . . . .                          | 365        |
|                    | show log config . . . . .                   | 368        |
|                    | show log permanent . . . . .                | 370        |
|                    | show running-config log . . . . .           | 372        |
| <b>Chapter 9:</b>  | <b>Scripting Commands . . . . .</b>         | <b>373</b> |
|                    | Introduction . . . . .                      | 373        |
|                    | activate . . . . .                          | 374        |
|                    | echo . . . . .                              | 375        |
|                    | wait . . . . .                              | 376        |
| <b>Chapter 10:</b> | <b>Interface Commands . . . . .</b>         | <b>377</b> |
|                    | Introduction . . . . .                      | 377        |
|                    | description (interface) . . . . .           | 378        |
|                    | interface (to configure) . . . . .          | 379        |
|                    | mru . . . . .                               | 381        |
|                    | mtu . . . . .                               | 383        |
|                    | show interface . . . . .                    | 385        |
|                    | show interface brief . . . . .              | 389        |
|                    | show interface status . . . . .             | 390        |
|                    | shutdown . . . . .                          | 393        |
| <b>Chapter 11:</b> | <b>Interface Testing Commands . . . . .</b> | <b>394</b> |
|                    | Introduction . . . . .                      | 394        |
|                    | clear test interface . . . . .              | 395        |

---

|                    |   |            |
|--------------------|---|------------|
|                    | service test . . . . .  | 396        |
|                    | test interface . . . . .  | 397        |
| <b>PART 2:</b>     | <b>Layer Two Switching . . . . .</b>                            | <b>399</b> |
| <b>Chapter 12:</b> | <b>Switching Commands . . . . .</b>                             | <b>400</b> |
|                    | Introduction . . . . .  | 400        |
|                    | backpressure . . . . .  | 402        |
|                    | clear loop-protection counters . . . . .                        | 404        |
|                    | clear mac address-table dynamic . . . . .                       | 405        |
|                    | clear mac address-table static . . . . .                        | 407        |
|                    | clear port counter . . . . .                                    | 408        |
|                    | clear port-security intrusion . . . . .                         | 409        |
|                    | debug loopprot . . . . .  | 412        |
|                    | debug platform packet . . . . .                                 | 413        |
|                    | duplex . . . . .  | 415        |
|                    | flowcontrol (switch port) . . . . .                             | 417        |
|                    | linkflap action . . . . .                                       | 419        |
|                    | loop-protection loop-detect . . . . .                           | 420        |
|                    | loop-protection action . . . . .                                | 421        |
|                    | loop-protection action-delay-time . . . . .                     | 422        |
|                    | loop-protection timeout . . . . .                               | 423        |
|                    | mac address-table acquire . . . . .                             | 424        |
|                    | mac address-table ageing-time . . . . .                         | 425        |
|                    | mac address-table logging . . . . .                             | 426        |
|                    | mac address-table static . . . . .                              | 427        |
|                    | mac address-table thrash-limit . . . . .                        | 428        |
|                    | mirror interface . . . . .                                      | 429        |
|                    | platform hwfilter-size . . . . .                                | 431        |
|                    | platform load-balancing . . . . .                               | 432        |
|                    | platform stop-unreg-mc-flooding . . . . .                       | 434        |
|                    | platform vlan-stacking-tpid . . . . .                           | 436        |
|                    | polarity . . . . .  | 437        |
|                    | show debugging loopprot . . . . .                               | 438        |
|                    | show debugging platform packet . . . . .                        | 439        |
|                    | show flowcontrol interface . . . . .                            | 440        |
|                    | show interface err-disabled . . . . .                           | 441        |
|                    | show interface switchport . . . . .                             | 442        |
|                    | show loop-protection . . . . .                                  | 443        |
|                    | show mac address-table . . . . .                                | 445        |
|                    | show mac address-table thrash-limit . . . . .                   | 447        |
|                    | show mirror . . . . .   | 448        |
|                    | show mirror interface . . . . .                                 | 449        |
|                    | show platform . . . . .   | 450        |
|                    | show platform classifier statistics utilization brief . . . . . | 451        |
|                    | show platform port . . . . .                                    | 452        |
|                    | show port-security interface . . . . .                          | 456        |
|                    | show port-security intrusion . . . . .                          | 457        |
|                    | show storm-control . . . . .                                    | 458        |
|                    | speed . . . . .   | 459        |
|                    | storm-control level . . . . .                                   | 461        |
|                    | switchport port-security . . . . .                              | 462        |

|  |     |
|--|-----|
| switchport port-security aging . . . . .     | 463 |
| switchport port-security maximum . . . . .   | 464 |
| switchport port-security violation . . . . . | 465 |
| thrash-limiting . . . . .                    | 466 |
| undebg loopprot . . . . .                    | 468 |
| undebg platform packet . . . . .             | 469 |

## Chapter 13:

|  |            |
|--|------------|
| <b>VLAN Commands . . . . .</b>                           | <b>470</b> |
| Introduction . . . . .                                   | 470        |
| clear vlan statistics . . . . .                          | 472        |
| port-vlan-forwarding-priority . . . . .                  | 473        |
| private-vlan . . . . .                                   | 476        |
| private-vlan association . . . . .                       | 477        |
| show port-vlan-forwarding-priority . . . . .             | 478        |
| show interface switchport vlan translation . . . . .     | 479        |
| show vlan . . . . .                                      | 480        |
| show vlan classifier group . . . . .                     | 481        |
| show vlan classifier group interface . . . . .           | 482        |
| show vlan classifier interface group . . . . .           | 483        |
| show vlan classifier rule . . . . .                      | 484        |
| show vlan private-vlan . . . . .                         | 485        |
| show vlan statistics . . . . .                           | 486        |
| switchport access vlan . . . . .                         | 487        |
| switchport enable vlan . . . . .                         | 488        |
| switchport mode access . . . . .                         | 489        |
| switchport mode private-vlan . . . . .                   | 490        |
| switchport mode private-vlan trunk promiscuous . . . . . | 491        |
| switchport mode private-vlan trunk secondary . . . . .   | 493        |
| switchport mode trunk . . . . .                          | 495        |
| switchport private-vlan host-association . . . . .       | 496        |
| switchport private-vlan mapping . . . . .                | 497        |
| switchport trunk allowed vlan . . . . .                  | 498        |
| switchport trunk native vlan . . . . .                   | 501        |
| switchport vlan translation . . . . .                    | 503        |
| switchport vlan translation default drop . . . . .       | 504        |
| switchport vlan-stacking (double tagging) . . . . .      | 505        |
| switchport voice dscp . . . . .                          | 506        |
| switchport voice vlan . . . . .                          | 507        |
| switchport voice vlan priority . . . . .                 | 510        |
| vlan . . . . .   | 511        |
| vlan classifier activate . . . . .                       | 512        |
| vlan classifier group . . . . .                          | 513        |
| vlan classifier rule ipv4 . . . . .                      | 514        |
| vlan classifier rule proto . . . . .                     | 515        |
| vlan database . . . . .                                  | 518        |
| vlan mode stack-local-vlan . . . . .                     | 519        |
| vlan statistics . . . . .                                | 521        |

## Chapter 14:

|  |            |
|--|------------|
| <b>Spanning Tree Commands . . . . .</b>                          | <b>523</b> |
| Introduction . . . . .   | 523        |
| clear spanning-tree statistics . . . . .                         | 525        |
| clear spanning-tree detected protocols (RSTP and MSTP) . . . . . | 526        |

|  |     |
|--|-----|
| debug mstp (RSTP and STP) . . . . .                        | 527 |
| instance priority (MSTP) . . . . .                         | 531 |
| instance vlan (MSTP) . . . . .                             | 533 |
| region (MSTP) . . . . .                                    | 535 |
| revision (MSTP) . . . . .                                  | 536 |
| show debugging mstp . . . . .                              | 537 |
| show spanning-tree . . . . .                               | 538 |
| show spanning-tree brief . . . . .                         | 541 |
| show spanning-tree mst . . . . .                           | 542 |
| show spanning-tree mst config . . . . .                    | 543 |
| show spanning-tree mst detail . . . . .                    | 544 |
| show spanning-tree mst detail interface . . . . .          | 546 |
| show spanning-tree mst instance . . . . .                  | 548 |
| show spanning-tree mst instance interface . . . . .        | 549 |
| show spanning-tree mst interface . . . . .                 | 550 |
| show spanning-tree mst detail interface . . . . .          | 551 |
| show spanning-tree statistics . . . . .                    | 553 |
| show spanning-tree statistics instance . . . . .           | 555 |
| show spanning-tree statistics instance interface . . . . . | 556 |
| show spanning-tree statistics interface . . . . .          | 558 |
| show spanning-tree vlan range-index . . . . .              | 560 |
| spanning-tree autoedge (RSTP and MSTP) . . . . .           | 561 |
| spanning-tree bpdu . . . . .                               | 562 |
| spanning-tree cisco-interoperability (MSTP) . . . . .      | 564 |
| spanning-tree edgeport (RSTP and MSTP) . . . . .           | 565 |
| spanning-tree enable . . . . .                             | 566 |
| spanning-tree errdisable-timeout enable . . . . .          | 568 |
| spanning-tree errdisable-timeout interval . . . . .        | 569 |
| spanning-tree force-version . . . . .                      | 570 |
| spanning-tree forward-time . . . . .                       | 571 |
| spanning-tree guard root . . . . .                         | 572 |
| spanning-tree hello-time . . . . .                         | 573 |
| spanning-tree link-type . . . . .                          | 574 |
| spanning-tree max-age . . . . .                            | 575 |
| spanning-tree max-hops (MSTP) . . . . .                    | 576 |
| spanning-tree mode . . . . .                               | 577 |
| spanning-tree mst configuration . . . . .                  | 578 |
| spanning-tree mst instance . . . . .                       | 579 |
| spanning-tree mst instance path-cost . . . . .             | 580 |
| spanning-tree mst instance priority . . . . .              | 582 |
| spanning-tree mst instance restricted-role . . . . .       | 583 |
| spanning-tree mst instance restricted-tcn . . . . .        | 585 |
| spanning-tree path-cost . . . . .                          | 586 |
| spanning-tree portfast (STP) . . . . .                     | 587 |
| spanning-tree portfast bpdu-filter . . . . .               | 589 |
| spanning-tree portfast bpdu-guard . . . . .                | 591 |
| spanning-tree priority (bridge priority) . . . . .         | 593 |
| spanning-tree priority (port priority) . . . . .           | 594 |
| spanning-tree restricted-role . . . . .                    | 595 |
| spanning-tree restricted-tcn . . . . .                     | 596 |
| spanning-tree transmit-holdcount . . . . .                 | 597 |
| undebg mstp . . . . .                                      | 598 |

|                        |   |                |
|------------------------|---|----------------|
| <b>Chapter 15:</b>     | <b>Link Aggregation Commands . . . . .</b>        | <b>599</b>     |
|                        | Introduction . . . . .                            | 599            |
|                        | channel-group . . . . .                           | 601            |
|                        | clear lacp counters . . . . .                     | 603            |
|                        | debug lacp . . . . .                              | 604            |
|                        | lacp global-passive-mode enable . . . . .         | 605            |
|                        | lacp port-priority . . . . .                      | 606            |
|                        | lacp system-priority . . . . .                    | 607            |
|                        | lacp timeout . . . . .                            | 608            |
|                        | show debugging lacp . . . . .                     | 610            |
|                        | show diagnostic channel-group . . . . .           | 611            |
|                        | show etherchannel . . . . .                       | 613            |
|                        | show etherchannel detail . . . . .                | 614            |
|                        | show etherchannel summary . . . . .               | 615            |
|                        | show lacp sys-id . . . . .                        | 616            |
|                        | show lacp-counter . . . . .                       | 617            |
|                        | show port etherchannel . . . . .                  | 618            |
|                        | show static-channel-group . . . . .               | 619            |
|                        | static-channel-group . . . . .                    | 620            |
|                        | undebg lacp . . . . .                             | 622            |
| <br><b>Chapter 16:</b> | <br><b>Power over Ethernet Commands . . . . .</b> | <br><b>623</b> |
|                        | Introduction . . . . .                            | 623            |
|                        | clear power-inline counters interface . . . . .   | 625            |
|                        | debug power-inline . . . . .                      | 626            |
|                        | power-inline allow-legacy . . . . .               | 628            |
|                        | power-inline description . . . . .                | 629            |
|                        | power-inline enable . . . . .                     | 630            |
|                        | power-inline max . . . . .                        | 631            |
|                        | power-inline priority . . . . .                   | 633            |
|                        | power-inline usage-threshold . . . . .            | 635            |
|                        | service power-inline . . . . .                    | 636            |
|                        | show debugging power-inline . . . . .             | 637            |
|                        | show power-inline . . . . .                       | 638            |
|                        | show power-inline counters . . . . .              | 641            |
|                        | show power-inline interface . . . . .             | 643            |
|                        | show power-inline interface detail . . . . .      | 645            |
| <br><b>Chapter 17:</b> | <br><b>GVRP Commands . . . . .</b>                | <br><b>648</b> |
|                        | Introduction . . . . .                            | 648            |
|                        | clear gvrp statistics . . . . .                   | 650            |
|                        | debug gvrp . . . . .                              | 651            |
|                        | gvrp (interface) . . . . .                        | 653            |
|                        | gvrp dynamic-vlan-creation . . . . .              | 654            |
|                        | gvrp enable (global) . . . . .                    | 655            |
|                        | gvrp registration . . . . .                       | 656            |
|                        | gvrp timer . . . . .                              | 657            |
|                        | show debugging gvrp . . . . .                     | 659            |
|                        | show gvrp configuration . . . . .                 | 660            |
|                        | show gvrp machine . . . . .                       | 661            |
|                        | show gvrp statistics . . . . .                    | 662            |
|                        | show gvrp timer . . . . .                         | 663            |

|                    |  |            |
|--------------------|--|------------|
| <b>PART 3:</b>     | <b>Layer Three, Switching and Routing . . . . .</b>  | <b>664</b> |
| <b>Chapter 18:</b> | <b>IP Addressing and Protocol Commands . . . . .</b> | <b>665</b> |
|                    | Introduction . . . . .                               | 665        |
|                    | arp-aging-timeout . . . . .                          | 667        |
|                    | arp-mac-disparity . . . . .                          | 668        |
|                    | arp (IP address MAC) . . . . .                       | 670        |
|                    | arp log . . . . .                                    | 671        |
|                    | arp opportunistic-nd . . . . .                       | 674        |
|                    | arp-reply-bc-dmac . . . . .                          | 675        |
|                    | clear arp-cache . . . . .                            | 676        |
|                    | clear ip dns forwarding cache . . . . .              | 677        |
|                    | debug ip dns forwarding . . . . .                    | 678        |
|                    | debug ip packet interface . . . . .                  | 679        |
|                    | ip address (IP Addressing and Protocol) . . . . .    | 681        |
|                    | ip directed-broadcast . . . . .                      | 683        |
|                    | ip dns forwarding . . . . .                          | 685        |
|                    | ip dns forwarding cache . . . . .                    | 686        |
|                    | ip dns forwarding dead-time . . . . .                | 687        |
|                    | ip dns forwarding retry . . . . .                    | 688        |
|                    | ip dns forwarding source-interface . . . . .         | 689        |
|                    | ip dns forwarding timeout . . . . .                  | 690        |
|                    | ip domain-list . . . . .                             | 691        |
|                    | ip domain-lookup . . . . .                           | 692        |
|                    | ip domain-name . . . . .                             | 693        |
|                    | ip forward-protocol udp . . . . .                    | 694        |
|                    | ip gratuitous-arp-link . . . . .                     | 696        |
|                    | ip helper-address . . . . .                          | 698        |
|                    | ip limited-local-proxy-arp . . . . .                 | 700        |
|                    | ip local-proxy-arp . . . . .                         | 701        |
|                    | ip name-server . . . . .                             | 702        |
|                    | ip proxy-arp . . . . .                               | 704        |
|                    | ip redirects . . . . .                               | 705        |
|                    | local-proxy-arp . . . . .                            | 706        |
|                    | ip unreachable . . . . .                             | 707        |
|                    | optimistic-nd . . . . .                              | 709        |
|                    | ping . . . . .                                       | 710        |
|                    | show arp . . . . .                                   | 711        |
|                    | show debugging ip dns forwarding . . . . .           | 713        |
|                    | show debugging ip packet . . . . .                   | 714        |
|                    | show hosts . . . . .                                 | 716        |
|                    | show ip dns forwarding . . . . .                     | 717        |
|                    | show ip dns forwarding cache . . . . .               | 718        |
|                    | show ip dns forwarding server . . . . .              | 719        |
|                    | show ip domain-list . . . . .                        | 720        |
|                    | show ip domain-name . . . . .                        | 721        |
|                    | show ip interface . . . . .                          | 722        |
|                    | show ip name-server . . . . .                        | 723        |
|                    | show ip sockets . . . . .                            | 724        |
|                    | show ip traffic . . . . .                            | 727        |
|                    | tcpdump . . . . .                                    | 733        |
|                    | traceroute . . . . .                                 | 734        |
|                    | undebg ip packet interface . . . . .                 | 735        |



|                    |   |            |
|--------------------|---|------------|
| <b>Chapter 19:</b> | <b>IPv6 Commands . . . . .</b>                    | <b>736</b> |
|                    | Introduction . . . . .                            | 736        |
|                    | clear ipv6 neighbors . . . . .                    | 738        |
|                    | ipv6 address . . . . .                            | 739        |
|                    | ipv6 address autoconfig . . . . .                 | 741        |
|                    | ipv6 enable . . . . .                             | 743        |
|                    | ipv6 forwarding . . . . .                         | 745        |
|                    | ipv6 multicast forward-slow-path-packet . . . . . | 746        |
|                    | ipv6 nd managed-config-flag . . . . .             | 747        |
|                    | ipv6 nd minimum-ra-interval . . . . .             | 748        |
|                    | ipv6 nd other-config-flag . . . . .               | 749        |
|                    | ipv6 nd prefix . . . . .                          | 750        |
|                    | ipv6 nd ra-interval . . . . .                     | 752        |
|                    | ipv6 nd ra-lifetime . . . . .                     | 753        |
|                    | ipv6 nd rguard . . . . .                          | 754        |
|                    | ipv6 nd reachable-time . . . . .                  | 756        |
|                    | ipv6 nd retransmission-time . . . . .             | 757        |
|                    | ipv6 nd suppress-ra . . . . .                     | 758        |
|                    | ipv6 neighbor . . . . .                           | 759        |
|                    | ipv6 opportunistic-nd . . . . .                   | 760        |
|                    | ipv6 route . . . . .                              | 761        |
|                    | ipv6 unreachable . . . . .                        | 762        |
|                    | ping ipv6 . . . . .                               | 763        |
|                    | show ipv6 forwarding . . . . .                    | 764        |
|                    | show ipv6 interface brief . . . . .               | 765        |
|                    | show ipv6 neighbors . . . . .                     | 766        |
|                    | show ipv6 route . . . . .                         | 767        |
|                    | show ipv6 route summary . . . . .                 | 769        |
|                    | traceroute ipv6 . . . . .                         | 770        |
| <b>Chapter 20:</b> | <b>Routing Commands . . . . .</b>                 | <b>771</b> |
|                    | Introduction . . . . .                            | 771        |
|                    | ip route . . . . .                                | 772        |
|                    | max-fib-routes . . . . .                          | 774        |
|                    | max-static-routes . . . . .                       | 775        |
|                    | maximum-paths . . . . .                           | 776        |
|                    | show ip route . . . . .                           | 777        |
|                    | show ip route database . . . . .                  | 779        |
|                    | show ip route summary . . . . .                   | 780        |
| <b>PART 4:</b>     | <b>Multicast Applications . . . . .</b>           | <b>781</b> |
| <b>Chapter 21:</b> | <b>Multicast Commands . . . . .</b>               | <b>782</b> |
|                    | Introduction . . . . .                            | 782        |
|                    | clear ip mroute . . . . .                         | 784        |
|                    | clear ip mroute statistics . . . . .              | 785        |
|                    | clear ipv6 mroute . . . . .                       | 786        |
|                    | clear ipv6 mroute statistics . . . . .            | 787        |
|                    | ipv6 multicast forward-slow-path-packet . . . . . | 788        |
|                    | debug nsm mcast . . . . .                         | 789        |
|                    | debug nsm mcast6 . . . . .                        | 790        |
|                    | ip mroute . . . . .                               | 791        |

|  |     |
|--|-----|
| ip multicast forward-first-packet . . . . .  | 793 |
| ip multicast route . . . . .                 | 794 |
| ip multicast route-limit . . . . .           | 796 |
| ip multicast wrong-vif-suppression . . . . . | 797 |
| ip multicast-routing . . . . .               | 798 |
| ipv6 multicast route . . . . .               | 799 |
| ipv6 multicast route-limit . . . . .         | 802 |
| ipv6 multicast-routing . . . . .             | 803 |
| multicast . . . . .                          | 804 |
| show ip mroute . . . . .                     | 805 |
| show ip mvif . . . . .                       | 807 |
| show ip rpf . . . . .                        | 808 |
| show ipv6 mroute . . . . .                   | 809 |
| show ipv6 multicast forwarding . . . . .     | 811 |
| show ipv6 mif . . . . .                      | 812 |

## **Chapter 22: IGMP and IGMP Snooping Commands . . . . . 813**

|   |     |
|---|-----|
| Introduction . . . . .                        | 813 |
| clear ip igmp . . . . .                       | 815 |
| clear ip igmp group . . . . .                 | 816 |
| clear ip igmp interface . . . . .             | 817 |
| debug igmp . . . . .                          | 818 |
| ip igmp . . . . .                             | 819 |
| ip igmp access-group . . . . .                | 820 |
| ip igmp flood specific-query . . . . .        | 821 |
| ip igmp immediate-leave . . . . .             | 822 |
| ip igmp last-member-query-count . . . . .     | 823 |
| ip igmp last-member-query-interval . . . . .  | 824 |
| ip igmp limit . . . . .                       | 825 |
| ip igmp mroute-proxy . . . . .                | 826 |
| ip igmp proxy-service . . . . .               | 827 |
| ip igmp querier-timeout . . . . .             | 828 |
| ip igmp query-holdtime . . . . .              | 829 |
| ip igmp query-interval . . . . .              | 831 |
| ip igmp query-max-response-time . . . . .     | 833 |
| ip igmp ra-option (Router Alert) . . . . .    | 835 |
| ip igmp robustness-variable . . . . .         | 836 |
| ip igmp snooping . . . . .                    | 837 |
| ip igmp snooping fast-leave . . . . .         | 838 |
| ip igmp snooping mrouter . . . . .            | 839 |
| ip igmp snooping querier . . . . .            | 840 |
| ip igmp snooping report-suppression . . . . . | 841 |
| ip igmp snooping routermode . . . . .         | 842 |
| ip igmp snooping tcn query solicit . . . . .  | 844 |
| ip igmp source-address-check . . . . .        | 846 |
| ip igmp ssm . . . . .                         | 847 |
| ip igmp ssm-map enable . . . . .              | 848 |
| ip igmp ssm-map static . . . . .              | 849 |
| ip igmp static-group . . . . .                | 851 |
| ip igmp startup-query-count . . . . .         | 853 |
| ip igmp startup-query-interval . . . . .      | 854 |
| ip igmp trusted . . . . .                     | 855 |
| ip igmp version . . . . .                     | 856 |

|                    |   |            |
|--------------------|---|------------|
|                    | show debugging igmp . . . . .                                     | 857        |
|                    | show ip igmp groups . . . . .                                     | 858        |
|                    | show ip igmp interface . . . . .                                  | 860        |
|                    | show ip igmp proxy . . . . .                                      | 864        |
|                    | show ip igmp snooping mrouter . . . . .                           | 865        |
|                    | show ip igmp snooping routermode . . . . .                        | 866        |
|                    | show ip igmp snooping statistics . . . . .                        | 867        |
|                    | undebg igmp . . . . .   | 868        |
| <b>Chapter 23:</b> | <b>MLD and MLD Snooping Commands . . . . .</b>                    | <b>869</b> |
|                    | Introduction . . . . .  | 869        |
|                    | clear ipv6 mld . . . . .  | 871        |
|                    | clear ipv6 mld group . . . . .                                    | 872        |
|                    | clear ipv6 mld interface . . . . .                                | 873        |
|                    | debug mld . . . . .   | 874        |
|                    | ipv6 mld . . . . .  | 877        |
|                    | ipv6 mld access-group . . . . .                                   | 878        |
|                    | ipv6 mld immediate-leave . . . . .                                | 879        |
|                    | ipv6 mld last-member-query-count . . . . .                        | 880        |
|                    | ipv6 mld last-member-query-interval . . . . .                     | 881        |
|                    | ipv6 mld limit . . . . .  | 882        |
|                    | ipv6 mld querier-timeout . . . . .                                | 884        |
|                    | ipv6 mld query-interval . . . . .                                 | 885        |
|                    | ipv6 mld query-max-response-time . . . . .                        | 886        |
|                    | ipv6 mld robustness-variable . . . . .                            | 887        |
|                    | ipv6 mld snooping . . . . .                                       | 888        |
|                    | ipv6 mld snooping fast-leave . . . . .                            | 890        |
|                    | ipv6 mld snooping mrouter . . . . .                               | 891        |
|                    | ipv6 mld snooping querier . . . . .                               | 893        |
|                    | ipv6 mld snooping report-suppression . . . . .                    | 894        |
|                    | ipv6 mld static-group . . . . .                                   | 896        |
|                    | ipv6 mld version . . . . .  | 898        |
|                    | show debugging mld . . . . .                                      | 899        |
|                    | show ipv6 mld groups . . . . .                                    | 900        |
|                    | show ipv6 mld interface . . . . .                                 | 901        |
|                    | show ipv6 mld snooping mrouter . . . . .                          | 902        |
|                    | show ipv6 mld snooping statistics . . . . .                       | 903        |
| <b>PART 5:</b>     | <b>Access and Security . . . . .</b>                              | <b>904</b> |
| <b>Chapter 24:</b> | <b>IPv4 Hardware Access Control List (ACL) Commands . . . . .</b> | <b>905</b> |
|                    | Introduction . . . . .  | 905        |
|                    | access-group . . . . .  | 907        |
|                    | access-list (hardware IP numbered) . . . . .                      | 909        |
|                    | access-list (hardware MAC numbered) . . . . .                     | 918        |
|                    | access-list hardware (named) . . . . .                            | 921        |
|                    | (access-list hardware ICMP filter) . . . . .                      | 923        |
|                    | (access-list hardware IP protocol filter) . . . . .               | 926        |
|                    | (access-list hardware MAC filter) . . . . .                       | 931        |
|                    | (access-list hardware TCP UDP filter) . . . . .                   | 934        |
|                    | commit (IPv4) . . . . .   | 937        |
|                    | show access-list (IPv4 Hardware ACLs) . . . . .                   | 938        |

|                    |   |             |
|--------------------|---|-------------|
|                    | show interface access-group . . . . .                             | 940         |
| <b>Chapter 25:</b> | <b>IPv4 Software Access Control List (ACL) Commands . . . . .</b> | <b>941</b>  |
|                    | Introduction . . . . .  | 941         |
|                    | access-list extended (named) . . . . .                            | 944         |
|                    | access-list (extended numbered) . . . . .                         | 952         |
|                    | (access-list extended ICMP filter) . . . . .                      | 954         |
|                    | (access-list extended IP filter) . . . . .                        | 956         |
|                    | (access-list extended IP protocol filter) . . . . .               | 959         |
|                    | (access-list extended TCP UDP filter) . . . . .                   | 963         |
|                    | access-list standard (named) . . . . .                            | 966         |
|                    | access-list (standard numbered) . . . . .                         | 968         |
|                    | (access-list standard named filter) . . . . .                     | 970         |
|                    | (access-list standard numbered filter) . . . . .                  | 972         |
|                    | clear ip prefix-list . . . . .                                    | 974         |
|                    | dos . . . . .   | 975         |
|                    | maximum-access-list . . . . .                                     | 978         |
|                    | show access-list (IPv4 Software ACLs) . . . . .                   | 979         |
|                    | show dos interface . . . . .                                      | 981         |
|                    | show ip access-list . . . . .                                     | 984         |
|                    | vtv access-class (numbered) . . . . .                             | 985         |
| <b>Chapter 26:</b> | <b>IPv6 Hardware Access Control List (ACL) Commands . . . . .</b> | <b>986</b>  |
|                    | Introduction . . . . .  | 986         |
|                    | commit (IPv6) . . . . .   | 988         |
|                    | ipv6 access-list (named) . . . . .                                | 989         |
|                    | (ipv6 access-list named ICMP filter) . . . . .                    | 991         |
|                    | (ipv6 access-list named protocol filter) . . . . .                | 994         |
|                    | (ipv6 access-list named TCP UDP filter) . . . . .                 | 998         |
|                    | ipv6 traffic-filter . . . . .                                     | 1001        |
|                    | show ipv6 access-list (IPv6 Hardware ACLs) . . . . .              | 1002        |
| <b>Chapter 27:</b> | <b>IPv6 Software Access Control List (ACL) Commands . . . . .</b> | <b>1003</b> |
|                    | Introduction . . . . .  | 1003        |
|                    | ipv6 access-list extended (named) . . . . .                       | 1005        |
|                    | ipv6 access-list extended proto . . . . .                         | 1009        |
|                    | (ipv6 access-list extended IP protocol filter) . . . . .          | 1012        |
|                    | (ipv6 access-list extended TCP UDP filter) . . . . .              | 1015        |
|                    | ipv6 access-list standard (named) . . . . .                       | 1017        |
|                    | (ipv6 access-list standard filter) . . . . .                      | 1019        |
|                    | show ipv6 access-list (IPv6 Software ACLs) . . . . .              | 1021        |
|                    | vtv ipv6 access-class (named) . . . . .                           | 1023        |
| <b>Chapter 28:</b> | <b>QoS Commands . . . . .</b>                                     | <b>1024</b> |
|                    | Introduction . . . . .  | 1024        |
|                    | class . . . . .   | 1026        |
|                    | class-map . . . . .   | 1027        |
|                    | clear mls qos interface policer-counters . . . . .                | 1028        |
|                    | default-action . . . . .  | 1029        |
|                    | description (QoS policy-map) . . . . .                            | 1030        |
|                    | egress-rate-limit . . . . .                                       | 1031        |
|                    | match access-group . . . . .                                      | 1032        |

|   |      |
|---|------|
| match cos . . . . .   | 1034 |
| match dscp . . . . .  | 1035 |
| match eth-format protocol . . . . .                             | 1036 |
| match inner-cos . . . . .                                       | 1039 |
| match inner-vlan . . . . .                                      | 1040 |
| match ip-precedence . . . . .                                   | 1041 |
| match mac-type . . . . .  | 1042 |
| match tcp-flags . . . . .                                       | 1043 |
| match vlan . . . . .  | 1044 |
| mls qos cos . . . . .   | 1045 |
| mls qos enable . . . . .  | 1046 |
| mls qos map cos-queue to . . . . .                              | 1047 |
| mls qos map premark-dscp to . . . . .                           | 1048 |
| no police . . . . .   | 1050 |
| police single-rate action . . . . .                             | 1051 |
| police twin-rate action . . . . .                               | 1053 |
| policy-map . . . . .  | 1055 |
| priority-queue . . . . .  | 1056 |
| remark-map . . . . .  | 1057 |
| remark new-cos . . . . .  | 1059 |
| service-policy input . . . . .                                  | 1061 |
| set ip next-hop (PBR) . . . . .                                 | 1062 |
| show class-map . . . . .  | 1064 |
| show mls qos . . . . .  | 1065 |
| show mls qos interface . . . . .                                | 1066 |
| show mls qos interface policer-counters . . . . .               | 1069 |
| show mls qos interface queue-counters . . . . .                 | 1071 |
| show mls qos interface storm-status . . . . .                   | 1073 |
| show mls qos maps cos-queue . . . . .                           | 1074 |
| show mls qos maps premark-dscp . . . . .                        | 1075 |
| show platform classifier statistics utilization brief . . . . . | 1076 |
| show policy-map . . . . .                                       | 1077 |
| storm-action . . . . .  | 1078 |
| storm-downtime . . . . .  | 1079 |
| storm-protection . . . . .                                      | 1080 |
| storm-rate . . . . .  | 1081 |
| storm-window . . . . .  | 1082 |
| trust dscp . . . . .  | 1083 |
| wrr-queue disable queues . . . . .                              | 1084 |
| wrr-queue egress-rate-limit queues . . . . .                    | 1085 |
| wrr-queue weight queues . . . . .                               | 1086 |

|                    |                                       |             |
|--------------------|---------------------------------------|-------------|
| <b>Chapter 29:</b> | <b>802.1X Commands . . . . .</b>      | <b>1087</b> |
|                    | Introduction . . . . .                | 1087        |
|                    | dot1x accounting . . . . .            | 1089        |
|                    | dot1x authentication . . . . .        | 1090        |
|                    | debug dot1x . . . . .                 | 1091        |
|                    | dot1x control-direction . . . . .     | 1092        |
|                    | dot1x eap . . . . .                   | 1094        |
|                    | dot1x eapol-version . . . . .         | 1095        |
|                    | dot1x initialize interface . . . . .  | 1097        |
|                    | dot1x initialize supplicant . . . . . | 1098        |
|                    | dot1x keytransmit . . . . .           | 1099        |

|   |      |
|---|------|
| dot1x max-auth-fail . . . . .             | 1100 |
| dot1x max-reauth-req . . . . .            | 1102 |
| dot1x port-control . . . . .              | 1104 |
| dot1x timeout tx-period . . . . .         | 1106 |
| show debugging dot1x . . . . .            | 1108 |
| show dot1x . . . . .                      | 1109 |
| show dot1x diagnostics . . . . .          | 1112 |
| show dot1x interface . . . . .            | 1114 |
| show dot1x sessionstatistics . . . . .    | 1119 |
| show dot1x statistics interface . . . . . | 1120 |
| show dot1x supplicant . . . . .           | 1121 |
| show dot1x supplicant interface . . . . . | 1123 |
| undebg dot1x . . . . .                    | 1126 |

## Chapter 30:

## **Authentication Commands . . . . . 1127**

|  |      |
|--|------|
| Introduction . . . . .                           | 1127 |
| auth auth-fail vlan . . . . .                    | 1130 |
| auth critical . . . . .                          | 1132 |
| auth dynamic-vlan-creation . . . . .             | 1133 |
| auth guest-vlan . . . . .                        | 1136 |
| auth guest-vlan forward . . . . .                | 1139 |
| auth host-mode . . . . .                         | 1141 |
| auth log . . . . .                               | 1143 |
| auth max-supplicant . . . . .                    | 1145 |
| auth profile (Global Configuration) . . . . .    | 1147 |
| auth profile (Interface Configuration) . . . . . | 1148 |
| auth reauthentication . . . . .                  | 1149 |
| auth roaming disconnected . . . . .              | 1150 |
| auth roaming enable . . . . .                    | 1152 |
| auth supplicant-ip . . . . .                     | 1154 |
| auth supplicant-mac . . . . .                    | 1157 |
| auth timeout connect-timeout . . . . .           | 1160 |
| auth timeout quiet-period . . . . .              | 1162 |
| auth timeout reauth-period . . . . .             | 1163 |
| auth timeout server-timeout . . . . .            | 1165 |
| auth timeout supp-timeout . . . . .              | 1167 |
| auth two-step enable . . . . .                   | 1169 |
| auth-mac accounting . . . . .                    | 1172 |
| auth-mac authentication . . . . .                | 1173 |
| auth-mac enable . . . . .                        | 1174 |
| auth-mac method . . . . .                        | 1176 |
| auth-mac password . . . . .                      | 1178 |
| auth-mac reauth-relearning . . . . .             | 1179 |
| auth-mac username . . . . .                      | 1180 |
| auth-web accounting . . . . .                    | 1181 |
| auth-web authentication . . . . .                | 1182 |
| auth-web enable . . . . .                        | 1183 |
| auth-web forward . . . . .                       | 1185 |
| auth-web max-auth-fail . . . . .                 | 1188 |
| auth-web method . . . . .                        | 1190 |
| auth-web-server blocking-mode . . . . .          | 1191 |
| auth-web-server dhcp ipaddress . . . . .         | 1192 |
| auth-web-server dhcp lease . . . . .             | 1193 |

|  |      |
|--|------|
| auth-web-server dhcp-wpad-option . . . . .               | 1194 |
| auth-web-server gateway (deleted) . . . . .              | 1195 |
| auth-web-server host-name . . . . .                      | 1196 |
| auth-web-server http-redirect (deleted) . . . . .        | 1197 |
| auth-web-server intercept-port . . . . .                 | 1198 |
| auth-web-server ipaddress . . . . .                      | 1199 |
| auth-web-server page language . . . . .                  | 1200 |
| auth-web-server login-url . . . . .                      | 1201 |
| auth-web-server mode (deleted) . . . . .                 | 1202 |
| auth-web-server page logo . . . . .                      | 1203 |
| auth-web-server page sub-title . . . . .                 | 1204 |
| auth-web-server page success-message . . . . .           | 1205 |
| auth-web-server page title . . . . .                     | 1206 |
| auth-web-server page welcome-message . . . . .           | 1207 |
| auth-web-server ping-poll enable . . . . .               | 1208 |
| auth-web-server ping-poll failcount . . . . .            | 1209 |
| auth-web-server ping-poll interval . . . . .             | 1210 |
| auth-web-server ping-poll reauth-timer-refresh . . . . . | 1211 |
| auth-web-server ping-poll timeout . . . . .              | 1212 |
| auth-web-server port . . . . .                           | 1213 |
| auth-web-server redirect-delay-time . . . . .            | 1214 |
| auth-web-server redirect-url . . . . .                   | 1215 |
| auth-web-server session-keep . . . . .                   | 1216 |
| auth-web-server ssl . . . . .                            | 1217 |
| auth-web-server sslport (deleted) . . . . .              | 1218 |
| auth-web-server ssl intercept-port . . . . .             | 1219 |
| copy proxy-autoconfig-file . . . . .                     | 1220 |
| copy web-auth-https-file . . . . .                       | 1221 |
| description (Authentication Profile) . . . . .           | 1222 |
| erase proxy-autoconfig-file . . . . .                    | 1223 |
| erase web-auth-https-file . . . . .                      | 1224 |
| platform l3-vlan-hashing-algorithm . . . . .             | 1225 |
| platform mac-vlan-hashing-algorithm . . . . .            | 1226 |
| show auth . . . . .                                      | 1227 |
| show auth diagnostics . . . . .                          | 1229 |
| show auth interface . . . . .                            | 1231 |
| show auth sessionstatistics . . . . .                    | 1234 |
| show auth statistics interface . . . . .                 | 1235 |
| show auth supplicant . . . . .                           | 1236 |
| show auth supplicant interface . . . . .                 | 1239 |
| show auth two-step supplicant brief . . . . .            | 1240 |
| show auth-web-server . . . . .                           | 1241 |
| show auth-web-server page . . . . .                      | 1242 |
| show proxy-autoconfig-file . . . . .                     | 1243 |

|                    |                                   |             |
|--------------------|-----------------------------------|-------------|
| <b>Chapter 31:</b> | <b>AAA Commands . . . . .</b>     | <b>1244</b> |
|                    | Introduction . . . . .            | 1244        |
|                    | aaa accounting auth-mac . . . . . | 1246        |
|                    | aaa accounting auth-web . . . . . | 1248        |
|                    | aaa accounting commands . . . . . | 1250        |
|                    | aaa accounting dot1x . . . . .    | 1252        |
|                    | aaa accounting login . . . . .    | 1254        |
|                    | aaa accounting update . . . . .   | 1257        |

|   |      |
|---|------|
| aaa authentication auth-mac . . . . .                     | 1259 |
| aaa authentication auth-web . . . . .                     | 1261 |
| aaa authentication dot1x . . . . .                        | 1263 |
| aaa authentication enable default group tacacs+ . . . . . | 1265 |
| aaa authentication enable default local . . . . .         | 1267 |
| aaa authentication login . . . . .                        | 1268 |
| aaa group server . . . . .                                | 1270 |
| aaa local authentication attempts logout-time . . . . .   | 1272 |
| aaa local authentication attempts max-fail . . . . .      | 1273 |
| aaa login fail-delay . . . . .                            | 1274 |
| accounting login . . . . .                                | 1275 |
| clear aaa local user logout . . . . .                     | 1276 |
| debug aaa . . . . .                                       | 1277 |
| login authentication . . . . .                            | 1278 |
| show aaa local user locked . . . . .                      | 1279 |
| show aaa server group . . . . .                           | 1280 |
| show debugging aaa . . . . .                              | 1281 |
| show radius server group . . . . .                        | 1282 |
| undebug aaa . . . . .                                     | 1284 |

**Chapter 32: RADIUS Commands . . . . . 1285**

|   |      |
|---|------|
| Introduction . . . . .                    | 1285 |
| auth radius send nas-identifier . . . . . | 1286 |
| auth radius send service-type . . . . .   | 1287 |
| deadtime (RADIUS server group) . . . . .  | 1288 |
| debug radius . . . . .                    | 1289 |
| ip radius source-interface . . . . .      | 1290 |
| radius-server deadtime . . . . .          | 1291 |
| radius-server host . . . . .              | 1292 |
| radius-server key . . . . .               | 1295 |
| radius-server retransmit . . . . .        | 1296 |
| radius-server timeout . . . . .           | 1298 |
| server (Server Group) . . . . .           | 1300 |
| show debugging radius . . . . .           | 1302 |
| show radius . . . . .                     | 1303 |
| show radius statistics . . . . .          | 1306 |
| undebug radius . . . . .                  | 1307 |

**Chapter 33: Local RADIUS Server Commands . . . . . 1308**

|  |      |
|--|------|
| Introduction . . . . .                                   | 1308 |
| attribute . . . . .                                      | 1310 |
| authentication . . . . .                                 | 1313 |
| clear radius local-server statistics . . . . .           | 1314 |
| copy fdb-radius-users (to file) . . . . .                | 1315 |
| copy local-radius-user-db (from file) . . . . .          | 1317 |
| copy local-radius-user-db (to file) . . . . .            | 1318 |
| crypto pki enroll local . . . . .                        | 1319 |
| crypto pki enroll local local-radius-all-users . . . . . | 1320 |
| crypto pki enroll local user . . . . .                   | 1321 |
| crypto pki export local pem . . . . .                    | 1322 |
| crypto pki export local pkcs12 . . . . .                 | 1323 |
| crypto pki trustpoint local . . . . .                    | 1324 |



|                    |   |             |
|--------------------|---|-------------|
|                    | debug crypto pki . . . . .                                    | 1325        |
|                    | domain-style . . . . .  | 1326        |
|                    | egress-vlan-id . . . . .                                      | 1327        |
|                    | egress-vlan-name . . . . .                                    | 1329        |
|                    | group . . . . .   | 1331        |
|                    | nas . . . . .   | 1332        |
|                    | radius-server local . . . . .                                 | 1333        |
|                    | server auth-port . . . . .                                    | 1334        |
|                    | server enable . . . . .                                       | 1335        |
|                    | show crypto pki certificates . . . . .                        | 1336        |
|                    | show crypto pki certificates local-radius-all-users . . . . . | 1338        |
|                    | show crypto pki certificates user . . . . .                   | 1340        |
|                    | show crypto pki trustpoints . . . . .                         | 1342        |
|                    | show radius local-server group . . . . .                      | 1343        |
|                    | show radius local-server nas . . . . .                        | 1344        |
|                    | show radius local-server statistics . . . . .                 | 1345        |
|                    | show radius local-server user . . . . .                       | 1346        |
|                    | user (RADIUS server) . . . . .                                | 1348        |
|                    | vlan (RADIUS server) . . . . .                                | 1350        |
| <b>Chapter 34:</b> | <b>TACACS+ Commands . . . . .</b>                             | <b>1351</b> |
|                    | Introduction . . . . .  | 1351        |
|                    | show tacacs+ . . . . .  | 1352        |
|                    | tacacs-server host . . . . .                                  | 1353        |
|                    | tacacs-server key . . . . .                                   | 1355        |
|                    | tacacs-server timeout . . . . .                               | 1356        |
| <b>Chapter 35:</b> | <b>DHCP Snooping Commands . . . . .</b>                       | <b>1357</b> |
|                    | Introduction . . . . .  | 1357        |
|                    | arp security . . . . .  | 1359        |
|                    | arp security violation . . . . .                              | 1360        |
|                    | clear arp security statistics . . . . .                       | 1362        |
|                    | clear ip dhcp snooping binding . . . . .                      | 1363        |
|                    | clear ip dhcp snooping statistics . . . . .                   | 1364        |
|                    | debug arp security . . . . .                                  | 1365        |
|                    | debug ip dhcp snooping . . . . .                              | 1366        |
|                    | ip dhcp snooping . . . . .                                    | 1367        |
|                    | ip dhcp snooping agent-option . . . . .                       | 1368        |
|                    | ip dhcp snooping agent-option allow-untrusted . . . . .       | 1369        |
|                    | ip dhcp snooping agent-option circuit-id vlantriple . . . . . | 1370        |
|                    | ip dhcp snooping agent-option remote-id . . . . .             | 1371        |
|                    | ip dhcp snooping binding . . . . .                            | 1372        |
|                    | ip dhcp snooping database . . . . .                           | 1373        |
|                    | ip dhcp snooping delete-by-client . . . . .                   | 1374        |
|                    | ip dhcp snooping delete-by-linkdown . . . . .                 | 1375        |
|                    | ip dhcp snooping max-bindings . . . . .                       | 1376        |
|                    | ip dhcp snooping subscriber-id . . . . .                      | 1377        |
|                    | ip dhcp snooping trust . . . . .                              | 1378        |
|                    | ip dhcp snooping verify mac-address . . . . .                 | 1379        |
|                    | ip dhcp snooping violation . . . . .                          | 1380        |
|                    | ip source binding . . . . .                                   | 1381        |
|                    | service dhcp-snooping . . . . .                               | 1383        |

|                    |  |             |
|--------------------|--|-------------|
|                    | show arp security . . . . .                                  | 1385        |
|                    | show arp security interface . . . . .                        | 1386        |
|                    | show arp security statistics . . . . .                       | 1388        |
|                    | show debugging arp security . . . . .                        | 1390        |
|                    | show debugging ip dhcp snooping . . . . .                    | 1391        |
|                    | show ip dhcp snooping . . . . .                              | 1392        |
|                    | show ip dhcp snooping acl . . . . .                          | 1393        |
|                    | show ip dhcp snooping agent-option . . . . .                 | 1396        |
|                    | show ip dhcp snooping binding . . . . .                      | 1398        |
|                    | show ip dhcp snooping interface . . . . .                    | 1400        |
|                    | show ip dhcp snooping statistics . . . . .                   | 1402        |
|                    | show ip source binding . . . . .                             | 1405        |
| <b>Chapter 36:</b> | <b>OpenFlow Commands . . . . .</b>                           | <b>1406</b> |
|                    | Introduction . . . . .                                       | 1406        |
|                    | openflow . . . . .   | 1408        |
|                    | openflow controller . . . . .                                | 1409        |
|                    | openflow native vlan . . . . .                               | 1410        |
|                    | openflow version . . . . .                                   | 1411        |
|                    | show openflow config . . . . .                               | 1412        |
|                    | show openflow coverage . . . . .                             | 1414        |
|                    | show openflow flows . . . . .                                | 1416        |
|                    | show openflow rules . . . . .                                | 1417        |
|                    | show openflow status . . . . .                               | 1419        |
| <b>PART 6:</b>     | <b>Network Availability . . . . .</b>                        | <b>1422</b> |
| <b>Chapter 37:</b> | <b>Virtual Chassis Stacking (VStack™) Commands . . . . .</b> | <b>1423</b> |
|                    | Introduction . . . . .                                       | 1423        |
|                    | clear counter stack . . . . .                                | 1425        |
|                    | debug stack . . . . .  | 1426        |
|                    | reboot rolling . . . . .                                     | 1427        |
|                    | reload rolling . . . . .                                     | 1428        |
|                    | remote-command (deleted) . . . . .                           | 1429        |
|                    | remote-login . . . . .                                       | 1430        |
|                    | show counter stack . . . . .                                 | 1431        |
|                    | show debugging stack . . . . .                               | 1435        |
|                    | show running-config stack . . . . .                          | 1436        |
|                    | show provisioning (stack) . . . . .                          | 1437        |
|                    | show stack . . . . .   | 1438        |
|                    | show stack detail . . . . .                                  | 1440        |
|                    | show stack resiliencylink . . . . .                          | 1444        |
|                    | stack disabled-master-monitoring . . . . .                   | 1446        |
|                    | stack enable . . . . .                                       | 1447        |
|                    | stack management subnet . . . . .                            | 1449        |
|                    | stack management vlan . . . . .                              | 1450        |
|                    | stack priority . . . . .                                     | 1451        |
|                    | stack renumber . . . . .                                     | 1452        |
|                    | stack renumber cascade . . . . .                             | 1453        |
|                    | stack resiliencylink . . . . .                               | 1455        |
|                    | stack software-auto-synchronize . . . . .                    | 1457        |
|                    | stack virtual-chassis-id . . . . .                           | 1458        |

|                                      |      |
|--------------------------------------|------|
| stack virtual-mac . . . . .          | 1459 |
| switch provision (stack) . . . . .   | 1460 |
| switchport resiliencylink . . . . .  | 1461 |
| vlan mode stack-local-vlan . . . . . | 1462 |
| undebg stack . . . . .               | 1464 |

**Chapter 38: VRRP Commands . . . . . 1465**

|  |      |
|--|------|
| Introduction . . . . .                         | 1465 |
| advertisement-interval . . . . .               | 1467 |
| circuit-failover . . . . .                     | 1469 |
| debug vrrp . . . . .                           | 1471 |
| debug vrrp events . . . . .                    | 1472 |
| debug vrrp packet . . . . .                    | 1473 |
| disable (VRRP) . . . . .                       | 1474 |
| enable (VRRP) . . . . .                        | 1475 |
| preempt-mode . . . . .                         | 1476 |
| priority . . . . .                             | 1478 |
| router ipv6 vrrp (interface) . . . . .         | 1480 |
| router vrrp (interface) . . . . .              | 1482 |
| show debugging vrrp . . . . .                  | 1484 |
| show running-config router ipv6 vrrp . . . . . | 1485 |
| show running-config router vrrp . . . . .      | 1486 |
| show vrrp . . . . .                            | 1487 |
| show vrrp counters . . . . .                   | 1489 |
| show vrrp ipv6 . . . . .                       | 1492 |
| show vrrp (session) . . . . .                  | 1493 |
| transition-mode . . . . .                      | 1495 |
| undebg vrrp . . . . .                          | 1497 |
| undebg vrrp events . . . . .                   | 1498 |
| undebg vrrp packet . . . . .                   | 1499 |
| virtual-ip . . . . .                           | 1500 |
| virtual-ipv6 . . . . .                         | 1502 |
| vrrp vmac . . . . .                            | 1504 |

**Chapter 39: Ethernet Protection Switched Ring (EPSRing™) Commands . . . . . 1505**

|   |      |
|---|------|
| Introduction . . . . .                              | 1505 |
| debug epsr . . . . .                                | 1507 |
| epsr . . . . .                                      | 1508 |
| epsr configuration . . . . .                        | 1510 |
| epsr datavlan . . . . .                             | 1511 |
| epsr enhancedrecovery enable . . . . .              | 1512 |
| epsr mode master controlvlan primary port . . . . . | 1513 |
| epsr mode transit controlvlan . . . . .             | 1514 |
| epsr priority . . . . .                             | 1515 |
| epsr state . . . . .                                | 1516 |
| epsr trap . . . . .                                 | 1517 |
| show debugging epsr . . . . .                       | 1518 |
| show epsr . . . . .                                 | 1519 |
| show epsr common segments . . . . .                 | 1524 |
| show epsr config-check . . . . .                    | 1525 |
| show epsr <epsr-instance> . . . . .                 | 1526 |
| show epsr <epsr-instance> counters . . . . .        | 1527 |

|                    |  |             |
|--------------------|--|-------------|
|                    | show epsr counters . . . . .   | 1528        |
|                    | show epsr summary . . . . .  | 1529        |
|                    | undebg epsr . . . . .  | 1530        |
| <b>PART 7:</b>     | <b>Network Management . . . . .</b>                                  | <b>1531</b> |
| <b>Chapter 40:</b> | <b>Allied Telesis Management Framework™ (AMF) Commands . . . . .</b> | <b>1532</b> |
|                    | Introduction . . . . .   | 1532        |
|                    | atmf area . . . . .  | 1536        |
|                    | atmf area password . . . . .   | 1538        |
|                    | atmf backup . . . . .  | 1540        |
|                    | atmf backup area-masters delete . . . . .                            | 1541        |
|                    | atmf backup area-masters enable . . . . .                            | 1542        |
|                    | atmf backup area-masters now . . . . .                               | 1543        |
|                    | atmf backup area-masters synchronize . . . . .                       | 1544        |
|                    | atmf backup bandwidth . . . . .                                      | 1545        |
|                    | atmf backup delete . . . . .   | 1546        |
|                    | atmf backup enable . . . . .   | 1547        |
|                    | atmf backup guests delete . . . . .                                  | 1548        |
|                    | atmf backup guests enable . . . . .                                  | 1549        |
|                    | atmf backup guests now . . . . .                                     | 1550        |
|                    | atmf backup guests synchronize . . . . .                             | 1551        |
|                    | atmf backup now . . . . .  | 1552        |
|                    | atmf backup redundancy enable . . . . .                              | 1554        |
|                    | atmf backup server . . . . .   | 1555        |
|                    | atmf backup stop . . . . .   | 1557        |
|                    | atmf backup synchronize . . . . .                                    | 1558        |
|                    | atmf cleanup . . . . .   | 1559        |
|                    | atmf controller . . . . .  | 1560        |
|                    | atmf distribute firmware . . . . .                                   | 1561        |
|                    | atmf domain vlan . . . . .   | 1563        |
|                    | atmf enable . . . . .  | 1565        |
|                    | atmf group (membership) . . . . .                                    | 1566        |
|                    | atmf guest-class . . . . .   | 1568        |
|                    | atmf log-verbose . . . . .   | 1570        |
|                    | atmf management subnet . . . . .                                     | 1571        |
|                    | atmf management vlan . . . . .                                       | 1573        |
|                    | atmf master . . . . .  | 1574        |
|                    | atmf mtu . . . . .   | 1575        |
|                    | atmf network-name . . . . .  | 1576        |
|                    | atmf node-recovery disable-forwarding . . . . .                      | 1577        |
|                    | atmf provision . . . . .   | 1578        |
|                    | atmf provision node clone . . . . .                                  | 1579        |
|                    | atmf provision node configure boot config . . . . .                  | 1581        |
|                    | atmf provision node configure boot system . . . . .                  | 1582        |
|                    | atmf provision node create . . . . .                                 | 1583        |
|                    | atmf provision node delete . . . . .                                 | 1585        |
|                    | atmf provision node license-cert . . . . .                           | 1587        |
|                    | atmf provision node locate . . . . .                                 | 1589        |
|                    | atmf reboot-rolling . . . . .  | 1590        |
|                    | atmf recover . . . . .   | 1594        |
|                    | atmf recover guest . . . . .   | 1596        |

|  |      |
|--|------|
| atmf recover led-off . . . . .                 | 1597 |
| atmf remote-login . . . . .                    | 1598 |
| atmf restricted-login . . . . .                | 1599 |
| atmf select-area . . . . .                     | 1600 |
| atmf virtual-link . . . . .                    | 1601 |
| atmf working-set . . . . .                     | 1603 |
| clear atmf links statistics . . . . .          | 1605 |
| debug atmf . . . . .                           | 1606 |
| debug atmf packet . . . . .                    | 1608 |
| discovery . . . . .                            | 1611 |
| erase factory-default . . . . .                | 1613 |
| http-enable . . . . .                          | 1614 |
| modeltype . . . . .                            | 1616 |
| show atmf . . . . .                            | 1617 |
| show atmf area . . . . .                       | 1621 |
| show atmf area guests . . . . .                | 1624 |
| show atmf area guests-detail . . . . .         | 1626 |
| show atmf area nodes . . . . .                 | 1628 |
| show atmf area nodes-detail . . . . .          | 1630 |
| show atmf area summary . . . . .               | 1632 |
| show atmf backup . . . . .                     | 1633 |
| show atmf backup area . . . . .                | 1637 |
| show atmf backup guest . . . . .               | 1639 |
| show atmf detail . . . . .                     | 1641 |
| show atmf group . . . . .                      | 1643 |
| show atmf group members . . . . .              | 1645 |
| show atmf guest . . . . .                      | 1647 |
| show atmf links . . . . .                      | 1649 |
| show atmf links detail . . . . .               | 1651 |
| show atmf links guest . . . . .                | 1660 |
| show atmf links statistics . . . . .           | 1663 |
| show atmf memory (deprecated) . . . . .        | 1666 |
| show atmf nodes . . . . .                      | 1667 |
| show atmf provision nodes . . . . .            | 1669 |
| show atmf tech . . . . .                       | 1670 |
| show atmf virtual-links . . . . .              | 1673 |
| show atmf working-set . . . . .                | 1675 |
| show debugging atmf . . . . .                  | 1676 |
| show debugging atmf packet . . . . .           | 1677 |
| show running-config atmf . . . . .             | 1678 |
| switchport atmf-arealink remote-area . . . . . | 1679 |
| switchport atmf-crosslink . . . . .            | 1681 |
| switchport atmf-guestlink . . . . .            | 1683 |
| switchport atmf-link . . . . .                 | 1685 |
| type atmf node . . . . .                       | 1686 |
| undebg atmf . . . . .                          | 1689 |
| username . . . . .                             | 1690 |

## **Chapter 41:           Dynamic Host Configuration Protocol (DHCP) Commands . . . . . 1692**

|                                 |      |
|---------------------------------|------|
| Introduction . . . . .          | 1692 |
| bootfile . . . . .              | 1694 |
| clear ip dhcp binding . . . . . | 1695 |
| default-router . . . . .        | 1696 |

|  |      |
|--|------|
| dns-server . . . . .                           | 1697 |
| domain-name . . . . .                          | 1698 |
| host (DHCP) . . . . .                          | 1699 |
| ip address dhcp . . . . .                      | 1700 |
| ip dhcp bootp ignore . . . . .                 | 1702 |
| ip dhcp leasequery enable . . . . .            | 1703 |
| ip dhcp option . . . . .                       | 1704 |
| ip dhcp pool . . . . .                         | 1706 |
| ip dhcp-relay agent-option . . . . .           | 1707 |
| ip dhcp-relay agent-option checking . . . . .  | 1709 |
| ip dhcp-relay agent-option remote-id . . . . . | 1710 |
| ip dhcp-relay information policy . . . . .     | 1711 |
| ip dhcp-relay maxhops . . . . .                | 1713 |
| ip dhcp-relay max-message-length . . . . .     | 1714 |
| ip dhcp-relay server-address . . . . .         | 1716 |
| lease . . . . .                                | 1718 |
| network (DHCP) . . . . .                       | 1720 |
| next-server . . . . .                          | 1721 |
| option . . . . .                               | 1722 |
| probe enable . . . . .                         | 1724 |
| probe packets . . . . .                        | 1725 |
| probe timeout . . . . .                        | 1726 |
| probe type . . . . .                           | 1727 |
| range . . . . .                                | 1728 |
| route . . . . .                                | 1729 |
| service dhcp-relay . . . . .                   | 1730 |
| service dhcp-server . . . . .                  | 1731 |
| show counter dhcp-client . . . . .             | 1732 |
| show counter dhcp-relay . . . . .              | 1733 |
| show counter dhcp-server . . . . .             | 1736 |
| show dhcp lease . . . . .                      | 1738 |
| show ip dhcp binding . . . . .                 | 1740 |
| show ip dhcp pool . . . . .                    | 1742 |
| show ip dhcp-relay . . . . .                   | 1746 |
| show ip dhcp server statistics . . . . .       | 1747 |
| show ip dhcp server summary . . . . .          | 1749 |
| subnet-mask . . . . .                          | 1750 |

|                    |   |             |
|--------------------|---|-------------|
| <b>Chapter 42:</b> | <b>DHCP for IPv6 (DHCPv6) Commands . . . . .</b>            | <b>1751</b> |
|                    | Introduction . . . . .                                      | 1751        |
|                    | address prefix . . . . .                                    | 1753        |
|                    | address range . . . . .                                     | 1755        |
|                    | clear counter ipv6 dhcp-client . . . . .                    | 1757        |
|                    | clear counter ipv6 dhcp-server . . . . .                    | 1758        |
|                    | clear ipv6 dhcp binding . . . . .                           | 1759        |
|                    | clear ipv6 dhcp client . . . . .                            | 1761        |
|                    | dns-server (DHCPv6) . . . . .                               | 1762        |
|                    | domain-name (DHCPv6) . . . . .                              | 1764        |
|                    | ip dhcp-relay agent-option subscriber-id-auto-mac . . . . . | 1765        |
|                    | ipv6 address (DHCPv6 PD) . . . . .                          | 1766        |
|                    | ipv6 address dhcp . . . . .                                 | 1769        |
|                    | ipv6 dhcp client pd . . . . .                               | 1771        |
|                    | ipv6 dhcp option . . . . .                                  | 1773        |

|   |      |
|---|------|
| ipv6 dhcp pool . . . . .                | 1775 |
| ipv6 dhcp server . . . . .              | 1777 |
| ipv6 local pool . . . . .               | 1778 |
| ipv6 nd prefix (DHCPv6) . . . . .       | 1780 |
| link-address . . . . .                  | 1782 |
| option (DHCPv6) . . . . .               | 1784 |
| prefix-delegation pool . . . . .        | 1786 |
| show counter ipv6 dhcp-client . . . . . | 1788 |
| show counter ipv6 dhcp-server . . . . . | 1790 |
| show ipv6 dhcp . . . . .                | 1792 |
| show ipv6 dhcp binding . . . . .        | 1793 |
| show ipv6 dhcp interface . . . . .      | 1796 |
| show ipv6 dhcp pool . . . . .           | 1798 |
| sntp-address . . . . .                  | 1800 |

## **Chapter 43: NTP Commands . . . . . 1801**

|                                  |      |
|----------------------------------|------|
| Introduction . . . . .           | 1801 |
| ntp access-group . . . . .       | 1802 |
| ntp authenticate . . . . .       | 1803 |
| ntp authentication-key . . . . . | 1804 |
| ntp broadcastdelay . . . . .     | 1805 |
| ntp master . . . . .             | 1806 |
| ntp peer . . . . .               | 1807 |
| ntp server . . . . .             | 1809 |
| ntp source . . . . .             | 1811 |
| ntp trusted-key . . . . .        | 1813 |
| show counter ntp . . . . .       | 1814 |
| show ntp associations . . . . .  | 1816 |
| show ntp status . . . . .        | 1818 |

## **Chapter 44: SNMP Commands . . . . . 1819**

|  |      |
|--|------|
| Introduction . . . . .                     | 1819 |
| debug snmp . . . . .                       | 1821 |
| show counter snmp-server . . . . .         | 1822 |
| show debugging snmp . . . . .              | 1826 |
| show running-config snmp . . . . .         | 1827 |
| show snmp-server . . . . .                 | 1828 |
| show snmp-server community . . . . .       | 1829 |
| show snmp-server group . . . . .           | 1830 |
| show snmp-server user . . . . .            | 1831 |
| show snmp-server view . . . . .            | 1832 |
| snmp trap link-status . . . . .            | 1833 |
| snmp trap link-status suppress . . . . .   | 1835 |
| snmp-server . . . . .                      | 1837 |
| snmp-server community . . . . .            | 1839 |
| snmp-server contact . . . . .              | 1840 |
| snmp-server enable trap . . . . .          | 1841 |
| snmp-server engineID local . . . . .       | 1844 |
| snmp-server engineID local reset . . . . . | 1846 |
| snmp-server group . . . . .                | 1847 |
| snmp-server host . . . . .                 | 1849 |
| snmp-server legacy-ifadminstatus . . . . . | 1851 |

|  |      |
|--|------|
| snmp-server location . . . . .           | 1852 |
| snmp-server source-interface . . . . .   | 1853 |
| snmp-server startup-trap-delay . . . . . | 1854 |
| snmp-server user . . . . .               | 1855 |
| snmp-server view . . . . .               | 1858 |
| undebbug snmp . . . . .                  | 1859 |

## Chapter 45:

|   |             |
|---|-------------|
| <b>LLDP Commands . . . . .</b>                  | <b>1860</b> |
| Introduction . . . . .                          | 1860        |
| clear lldp statistics . . . . .                 | 1862        |
| clear lldp table . . . . .                      | 1863        |
| debug lldp . . . . .                            | 1864        |
| lldp faststart-count . . . . .                  | 1866        |
| lldp holdtime-multiplier . . . . .              | 1867        |
| lldp management-address . . . . .               | 1868        |
| lldp med-notifications . . . . .                | 1869        |
| lldp med-tlv-select . . . . .                   | 1870        |
| lldp non-strict-med-tlv-order-check . . . . .   | 1872        |
| lldp notification-interval . . . . .            | 1873        |
| lldp notifications . . . . .                    | 1874        |
| lldp port-number-type . . . . .                 | 1875        |
| lldp reinit . . . . .                           | 1876        |
| lldp run . . . . .                              | 1877        |
| lldp timer . . . . .                            | 1878        |
| lldp tlv-select . . . . .                       | 1879        |
| lldp transmit receive . . . . .                 | 1881        |
| lldp tx-delay . . . . .                         | 1882        |
| location civic-location configuration . . . . . | 1883        |
| location civic-location identifier . . . . .    | 1887        |
| location civic-location-id . . . . .            | 1888        |
| location coord-location configuration . . . . . | 1889        |
| location coord-location identifier . . . . .    | 1891        |
| location coord-location-id . . . . .            | 1892        |
| location elin-location . . . . .                | 1893        |
| location elin-location-id . . . . .             | 1894        |
| show debugging lldp . . . . .                   | 1895        |
| show lldp . . . . .                             | 1897        |
| show lldp interface . . . . .                   | 1899        |
| show lldp local-info . . . . .                  | 1901        |
| show lldp neighbors . . . . .                   | 1906        |
| show lldp neighbors detail . . . . .            | 1908        |
| show lldp statistics . . . . .                  | 1912        |
| show lldp statistics interface . . . . .        | 1914        |
| show location . . . . .                         | 1916        |

## Chapter 46:

|                                |             |
|--------------------------------|-------------|
| <b>SMTP Commands . . . . .</b> | <b>1918</b> |
| Introduction . . . . .         | 1918        |
| debug mail . . . . .           | 1919        |
| delete mail . . . . .          | 1920        |
| mail . . . . .                 | 1921        |
| mail from . . . . .            | 1922        |
| mail smtpserver . . . . .      | 1923        |



---

|                    |   |             |
|--------------------|---|-------------|
|                    | show counter mail . . . . .                       | 1924        |
|                    | show mail . . . . .                               | 1925        |
|                    | undebbug mail . . . . .                           | 1926        |
| <b>Chapter 47:</b> | <b>RMON Commands . . . . .</b>                    | <b>1927</b> |
|                    | Introduction . . . . .                            | 1927        |
|                    | rmon alarm . . . . .                              | 1928        |
|                    | rmon collection history . . . . .                 | 1930        |
|                    | rmon collection stats . . . . .                   | 1931        |
|                    | rmon event . . . . .                              | 1932        |
|                    | show rmon alarm . . . . .                         | 1933        |
|                    | show rmon event . . . . .                         | 1934        |
|                    | show rmon history . . . . .                       | 1936        |
|                    | show rmon statistics . . . . .                    | 1938        |
| <b>Chapter 48:</b> | <b>Secure Shell (SSH) Commands . . . . .</b>      | <b>1940</b> |
|                    | Introduction . . . . .                            | 1940        |
|                    | banner login (SSH) . . . . .                      | 1942        |
|                    | clear ssh . . . . .                               | 1943        |
|                    | crypto key destroy hostkey . . . . .              | 1944        |
|                    | crypto key destroy userkey . . . . .              | 1945        |
|                    | crypto key generate hostkey . . . . .             | 1946        |
|                    | crypto key generate userkey . . . . .             | 1947        |
|                    | crypto key pubkey-chain knownhosts . . . . .      | 1948        |
|                    | crypto key pubkey-chain userkey . . . . .         | 1950        |
|                    | debug ssh client . . . . .                        | 1952        |
|                    | debug ssh server . . . . .                        | 1953        |
|                    | service ssh . . . . .                             | 1954        |
|                    | show banner login . . . . .                       | 1956        |
|                    | show crypto key hostkey . . . . .                 | 1957        |
|                    | show crypto key pubkey-chain knownhosts . . . . . | 1958        |
|                    | show crypto key pubkey-chain userkey . . . . .    | 1959        |
|                    | show crypto key userkey . . . . .                 | 1960        |
|                    | show running-config ssh . . . . .                 | 1961        |
|                    | show ssh . . . . .                                | 1963        |
|                    | show ssh client . . . . .                         | 1965        |
|                    | show ssh server . . . . .                         | 1966        |
|                    | show ssh server allow-users . . . . .             | 1968        |
|                    | show ssh server deny-users . . . . .              | 1969        |
|                    | ssh . . . . .                                     | 1970        |
|                    | ssh client . . . . .                              | 1972        |
|                    | ssh server . . . . .                              | 1974        |
|                    | ssh server allow-users . . . . .                  | 1976        |
|                    | ssh server authentication . . . . .               | 1978        |
|                    | ssh server deny-users . . . . .                   | 1980        |
|                    | ssh server max-auth-tries . . . . .               | 1982        |
|                    | ssh server resolve-host . . . . .                 | 1983        |
|                    | ssh server scp . . . . .                          | 1984        |
|                    | ssh server sftp . . . . .                         | 1985        |
|                    | undebbug ssh client . . . . .                     | 1986        |
|                    | undebbug ssh server . . . . .                     | 1987        |

|                        |  |                 |
|------------------------|--|-----------------|
| <b>Chapter 49:</b>     | <b>Trigger Commands . . . . .</b>          | <b>1988</b>     |
|                        | Introduction . . . . .                     | 1988            |
|                        | active (trigger) . . . . .                 | 1990            |
|                        | day . . . . .                              | 1991            |
|                        | debug trigger . . . . .                    | 1993            |
|                        | description (trigger) . . . . .            | 1994            |
|                        | repeat . . . . .                           | 1995            |
|                        | script . . . . .                           | 1996            |
|                        | show debugging trigger . . . . .           | 1998            |
|                        | show running-config trigger . . . . .      | 1999            |
|                        | show trigger . . . . .                     | 2000            |
|                        | test . . . . .                             | 2005            |
|                        | time (trigger) . . . . .                   | 2006            |
|                        | trap . . . . .                             | 2008            |
|                        | trigger . . . . .                          | 2009            |
|                        | trigger activate . . . . .                 | 2010            |
|                        | type atmf node . . . . .                   | 2011            |
|                        | type cpu . . . . .                         | 2014            |
|                        | type interface . . . . .                   | 2015            |
|                        | type memory . . . . .                      | 2016            |
|                        | type periodic . . . . .                    | 2017            |
|                        | type ping-poll . . . . .                   | 2018            |
|                        | type reboot . . . . .                      | 2019            |
|                        | type stack disabled-master . . . . .       | 2020            |
|                        | type stack link . . . . .                  | 2021            |
|                        | type stack master-fail . . . . .           | 2022            |
|                        | type stack member . . . . .                | 2023            |
|                        | type time . . . . .                        | 2024            |
|                        | type usb . . . . .                         | 2025            |
|                        | undebg trigger . . . . .                   | 2026            |
| <br><b>Chapter 50:</b> | <br><b>Ping-Polling Commands . . . . .</b> | <br><b>2027</b> |
|                        | Introduction . . . . .                     | 2027            |
|                        | active (ping-polling) . . . . .            | 2029            |
|                        | clear ping-poll . . . . .                  | 2030            |
|                        | critical-interval . . . . .                | 2031            |
|                        | debug ping-poll . . . . .                  | 2032            |
|                        | description (ping-polling) . . . . .       | 2033            |
|                        | fail-count . . . . .                       | 2034            |
|                        | ip (ping-polling) . . . . .                | 2035            |
|                        | length (ping-poll data) . . . . .          | 2036            |
|                        | normal-interval . . . . .                  | 2037            |
|                        | ping-poll . . . . .                        | 2038            |
|                        | sample-size . . . . .                      | 2039            |
|                        | show counter ping-poll . . . . .           | 2041            |
|                        | show ping-poll . . . . .                   | 2043            |
|                        | source-ip . . . . .                        | 2047            |
|                        | timeout (ping polling) . . . . .           | 2049            |
|                        | up-count . . . . .                         | 2050            |
|                        | undebg ping-poll . . . . .                 | 2051            |
| <br><b>Chapter 51:</b> | <br><b>sFlow Commands . . . . .</b>        | <br><b>2052</b> |

---

|   |      |
|---|------|
| Introduction . . . . .                      | 2052 |
| debug sflow . . . . .                       | 2053 |
| debug sflow agent . . . . .                 | 2054 |
| sflow agent (address) . . . . .             | 2055 |
| sflow collector (address) . . . . .         | 2057 |
| sflow collector max-datagram-size . . . . . | 2059 |
| sflow enable . . . . .                      | 2060 |
| sflow max-header-size . . . . .             | 2061 |
| sflow polling-interval . . . . .            | 2063 |
| sflow sampling-rate . . . . .               | 2064 |
| show debugging sflow . . . . .              | 2065 |
| show running-config sflow . . . . .         | 2067 |
| show sflow . . . . .                        | 2068 |
| show sflow interface . . . . .              | 2070 |
| undebg sflow . . . . .                      | 2071 |

# List of Commands

|  |      |
|--|------|
| (access-list extended ICMP filter) .....             | 954  |
| (access-list extended IP filter).....                | 956  |
| (access-list extended IP protocol filter).....       | 959  |
| (access-list extended TCP UDP filter).....           | 963  |
| (access-list hardware ICMP filter) .....             | 923  |
| (access-list hardware IP protocol filter).....       | 926  |
| (access-list hardware MAC filter).....               | 931  |
| (access-list hardware TCP UDP filter).....           | 934  |
| (access-list standard named filter) .....            | 970  |
| (access-list standard numbered filter).....          | 972  |
| (ipv6 access-list extended IP protocol filter) ..... | 1012 |
| (ipv6 access-list extended TCP UDP filter) .....     | 1015 |
| (ipv6 access-list named ICMP filter) .....           | 991  |
| (ipv6 access-list named protocol filter).....        | 994  |
| (ipv6 access-list named TCP UDP filter) .....        | 998  |
| (ipv6 access-list standard filter).....              | 1019 |
| aaa accounting auth-mac .....                        | 1246 |
| aaa accounting auth-web .....                        | 1248 |
| aaa accounting commands.....                         | 1250 |
| aaa accounting dot1x.....                            | 1252 |
| aaa accounting login.....                            | 1254 |
| aaa accounting update.....                           | 1257 |
| aaa authentication auth-mac.....                     | 1259 |
| aaa authentication auth-web.....                     | 1261 |
| aaa authentication dot1x .....                       | 1263 |

---

|   |      |
|---|------|
| aaa authentication enable default group tacacs+ ..... | 1265 |
| aaa authentication enable default local .....         | 1267 |
| aaa authentication login .....                        | 1268 |
| aaa group server .....                                | 1270 |
| aaa local authentication attempts logout-time .....   | 1272 |
| aaa local authentication attempts max-fail .....      | 1273 |
| aaa login fail-delay .....                            | 1274 |
| access-group .....                                    | 907  |
| access-list (extended numbered) .....                 | 952  |
| access-list (hardware IP numbered) .....              | 909  |
| access-list (hardware MAC numbered) .....             | 918  |
| access-list (standard numbered) .....                 | 968  |
| access-list extended (named) .....                    | 944  |
| access-list hardware (named) .....                    | 921  |
| access-list standard (named) .....                    | 966  |
| accounting login .....                                | 1275 |
| activate .....  | 374  |
| active (ping-polling) .....                           | 2029 |
| active (trigger) .....                                | 1990 |
| address prefix .....                                  | 1753 |
| address range .....                                   | 1755 |
| advertisement-interval .....                          | 1467 |
| arp (IP address MAC) .....                            | 670  |
| arp log .....   | 671  |
| arp opportunistic-nd .....                            | 674  |
| arp security violation .....                          | 1360 |
| arp security .....                                    | 1359 |
| arp-aging-timeout .....                               | 667  |
| arp-mac-disparity .....                               | 668  |
| arp-reply-bc-dmac .....                               | 675  |
| atmf area password .....                              | 1538 |
| atmf area .....                                       | 1536 |
| atmf backup area-masters delete .....                 | 1541 |
| atmf backup area-masters enable .....                 | 1542 |
| atmf backup area-masters now .....                    | 1543 |

---

|   |      |
|---|------|
| atmf backup area-masters synchronize .....      | 1544 |
| atmf backup bandwidth .....                     | 1545 |
| atmf backup delete .....                        | 1546 |
| atmf backup enable .....                        | 1547 |
| atmf backup guests delete .....                 | 1548 |
| atmf backup guests enable .....                 | 1549 |
| atmf backup guests now .....                    | 1550 |
| atmf backup guests synchronize .....            | 1551 |
| atmf backup now .....                           | 1552 |
| atmf backup redundancy enable .....             | 1554 |
| atmf backup server .....                        | 1555 |
| atmf backup stop .....                          | 1557 |
| atmf backup synchronize .....                   | 1558 |
| atmf backup .....                               | 1540 |
| atmf cleanup .....                              | 1559 |
| atmf controller .....                           | 1560 |
| atmf distribute firmware .....                  | 1561 |
| atmf domain vlan .....                          | 1563 |
| atmf enable .....                               | 1565 |
| atmf group (membership) .....                   | 1566 |
| atmf guest-class .....                          | 1568 |
| atmf log-verbose .....                          | 1570 |
| atmf management subnet .....                    | 1571 |
| atmf management vlan .....                      | 1573 |
| atmf master .....                               | 1574 |
| atmf mtu .....                                  | 1575 |
| atmf network-name .....                         | 1576 |
| atmf node-recovery disable-forwarding .....     | 1577 |
| atmf provision node clone .....                 | 1579 |
| atmf provision node configure boot config ..... | 1581 |
| atmf provision node configure boot system ..... | 1582 |
| atmf provision node create .....                | 1583 |
| atmf provision node delete .....                | 1585 |
| atmf provision node license-cert .....          | 1587 |
| atmf provision node locate .....                | 1589 |

---

|   |      |
|---|------|
| atmf provision.....                         | 1578 |
| atmf reboot-rolling .....                   | 1590 |
| atmf recover guest.....                     | 1596 |
| atmf recover led-off.....                   | 1597 |
| atmf recover.....                           | 1594 |
| atmf remote-login .....                     | 1598 |
| atmf restricted-login.....                  | 1599 |
| atmf select-area .....                      | 1600 |
| atmf virtual-link .....                     | 1601 |
| atmf working-set .....                      | 1603 |
| attribute .....                             | 1310 |
| auth auth-fail vlan .....                   | 1130 |
| auth critical.....                          | 1132 |
| auth dynamic-vlan-creation.....             | 1133 |
| auth guest-vlan forward .....               | 1139 |
| auth guest-vlan.....                        | 1136 |
| auth host-mode .....                        | 1141 |
| auth log .....                              | 1143 |
| auth max-supplicant.....                    | 1145 |
| auth profile (Global Configuration) .....   | 1147 |
| auth profile (Interface Configuration)..... | 1148 |
| auth radius send nas-identifier .....       | 1286 |
| auth radius send service-type .....         | 1287 |
| auth reauthentication.....                  | 1149 |
| auth roaming disconnected.....              | 1150 |
| auth roaming enable .....                   | 1152 |
| auth supplicant-ip .....                    | 1154 |
| auth supplicant-mac.....                    | 1157 |
| auth timeout connect-timeout.....           | 1160 |
| auth timeout quiet-period .....             | 1162 |
| auth timeout reauth-period.....             | 1163 |
| auth timeout server-timeout .....           | 1165 |
| auth timeout supp-timeout.....              | 1167 |
| auth two-step enable .....                  | 1169 |
| authentication.....                         | 1313 |

---

|  |      |
|--|------|
| auth-mac accounting .....                            | 1172 |
| auth-mac authentication.....                         | 1173 |
| auth-mac enable .....                                | 1174 |
| auth-mac method .....                                | 1176 |
| auth-mac password.....                               | 1178 |
| auth-mac reauth-relearning.....                      | 1179 |
| auth-mac username .....                              | 1180 |
| auth-web accounting.....                             | 1181 |
| auth-web authentication .....                        | 1182 |
| auth-web enable .....                                | 1183 |
| auth-web forward .....                               | 1185 |
| auth-web max-auth-fail.....                          | 1188 |
| auth-web method .....                                | 1190 |
| auth-web-server blocking-mode .....                  | 1191 |
| auth-web-server dhcp ipaddress .....                 | 1192 |
| auth-web-server dhcp lease.....                      | 1193 |
| auth-web-server dhcp-wpad-option .....               | 1194 |
| auth-web-server gateway (deleted) .....              | 1195 |
| auth-web-server host-name.....                       | 1196 |
| auth-web-server http-redirect (deleted) .....        | 1197 |
| auth-web-server intercept-port .....                 | 1198 |
| auth-web-server ipaddress.....                       | 1199 |
| auth-web-server login-url.....                       | 1201 |
| auth-web-server mode (deleted) .....                 | 1202 |
| auth-web-server page language .....                  | 1200 |
| auth-web-server page logo .....                      | 1203 |
| auth-web-server page sub-title.....                  | 1204 |
| auth-web-server page success-message.....            | 1205 |
| auth-web-server page title .....                     | 1206 |
| auth-web-server page welcome-message .....           | 1207 |
| auth-web-server ping-poll enable .....               | 1208 |
| auth-web-server ping-poll failcount.....             | 1209 |
| auth-web-server ping-poll interval .....             | 1210 |
| auth-web-server ping-poll reauth-timer-refresh ..... | 1211 |
| auth-web-server ping-poll timeout.....               | 1212 |



---

|   |      |
|---|------|
| auth-web-server port .....                | 1213 |
| auth-web-server redirect-delay-time ..... | 1214 |
| auth-web-server redirect-url .....        | 1215 |
| auth-web-server session-keep .....        | 1216 |
| auth-web-server ssl intercept-port .....  | 1219 |
| auth-web-server ssl .....                 | 1217 |
| auth-web-server sslport (deleted) .....   | 1218 |
| autoboot enable.....                      | 86   |
| backpressure .....                        | 402  |
| banner exec .....                         | 204  |
| banner login (SSH).....                   | 1942 |
| banner login (system).....                | 206  |
| banner motd .....                         | 208  |
| boot config-file backup .....             | 89   |
| boot config-file .....                    | 87   |
| boot system backup .....                  | 92   |
| boot system .....                         | 90   |
| bootfile .....                            | 1694 |
| cd.....                                   | 93   |
| channel-group .....                       | 601  |
| circuit-failover .....                    | 1469 |
| class.....                                | 1026 |
| class-map .....                           | 1027 |
| clear aaa local user lockout.....         | 1276 |
| clear arp security statistics .....       | 1362 |
| clear arp-cache .....                     | 676  |
| clear atmf links statistics .....         | 1605 |
| clear counter ipv6 dhcp-client.....       | 1757 |
| clear counter ipv6 dhcp-server .....      | 1758 |
| clear counter stack.....                  | 1425 |
| clear exception log .....                 | 301  |
| clear gvrp statistics .....               | 650  |
| clear ip dhcp binding .....               | 1695 |
| clear ip dhcp snooping binding .....      | 1363 |
| clear ip dhcp snooping statistics .....   | 1364 |

---

|  |      |
|--|------|
| clear ip dns forwarding cache .....                          | 677  |
| clear ip igmp group.....                                     | 816  |
| clear ip igmp interface .....                                | 817  |
| clear ip igmp .....  | 815  |
| clear ip mroute statistics .....                             | 785  |
| clear ip mroute .....  | 784  |
| clear ip prefix-list .....                                   | 974  |
| clear ipv6 dhcp binding.....                                 | 1759 |
| clear ipv6 dhcp client .....                                 | 1761 |
| clear ipv6 mld group.....                                    | 872  |
| clear ipv6 mld interface .....                               | 873  |
| clear ipv6 mld .....   | 871  |
| clear ipv6 mroute statistics.....                            | 787  |
| clear ipv6 mroute.....                                       | 786  |
| clear ipv6 neighbors .....                                   | 738  |
| clear lacp counters.....                                     | 603  |
| clear line console .....                                     | 148  |
| clear line vty.....  | 149  |
| clear lldp statistics .....                                  | 1862 |
| clear lldp table.....  | 1863 |
| clear log buffered.....                                      | 303  |
| clear log permanent .....                                    | 304  |
| clear log.....   | 302  |
| clear loop-protection counters .....                         | 404  |
| clear mac address-table dynamic.....                         | 405  |
| clear mac address-table static .....                         | 407  |
| clear mls qos interface policer-counters .....               | 1028 |
| clear ping-poll .....  | 2030 |
| clear port counter .....                                     | 408  |
| clear port-security intrusion.....                           | 409  |
| clear power-inline counters interface.....                   | 625  |
| clear radius local-server statistics .....                   | 1314 |
| clear spanning-tree detected protocols (RSTP and MSTP) ..... | 526  |
| clear spanning-tree statistics.....                          | 525  |
| clear ssh.....   | 1943 |

---

|  |      |
|--|------|
| clear test cable-diagnostics tdr .....               | 276  |
| clear test interface .....                           | 395  |
| clear vlan statistics .....                          | 472  |
| clock set .....                                      | 210  |
| clock summer-time date .....                         | 211  |
| clock summer-time recurring .....                    | 213  |
| clock timezone .....                                 | 215  |
| commit (IPv4) .....                                  | 937  |
| commit (IPv6) .....                                  | 988  |
| configure terminal .....                             | 72   |
| continuous-reboot-prevention .....                   | 216  |
| copy (filename) .....                                | 94   |
| copy current-software .....                          | 96   |
| copy debug .....                                     | 97   |
| copy fdb-radius-users (to file) .....                | 1315 |
| copy local-radius-user-db (from file) .....          | 1317 |
| copy local-radius-user-db (to file) .....            | 1318 |
| copy proxy-autoconfig-file .....                     | 1220 |
| copy running-config .....                            | 98   |
| copy startup-config .....                            | 99   |
| copy web-auth-https-file .....                       | 1221 |
| copy zmodem .....                                    | 100  |
| create autoboot .....                                | 101  |
| critical-interval .....                              | 2031 |
| crypto key destroy hostkey .....                     | 1944 |
| crypto key destroy userkey .....                     | 1945 |
| crypto key generate hostkey .....                    | 1946 |
| crypto key generate userkey .....                    | 1947 |
| crypto key pubkey-chain knownhosts .....             | 1948 |
| crypto key pubkey-chain userkey .....                | 1950 |
| crypto pki enroll local local-radius-all-users ..... | 1320 |
| crypto pki enroll local user .....                   | 1321 |
| crypto pki enroll local .....                        | 1319 |
| crypto pki export local pem .....                    | 1322 |
| crypto pki export local pkcs12 .....                 | 1323 |

---

|                                      |      |
|--------------------------------------|------|
| crypto pki trustpoint local.....     | 1324 |
| day.....                             | 1991 |
| deadtime (RADIUS server group) ..... | 1288 |
| debug aaa.....                       | 1277 |
| debug arp security.....              | 1365 |
| debug atmf packet .....              | 1608 |
| debug atmf.....                      | 1606 |
| debug crypto pki .....               | 1325 |
| debug dot1x .....                    | 1091 |
| debug epsr .....                     | 1507 |
| debug fiber-monitoring.....          | 277  |
| debug gvrp.....                      | 651  |
| debug igmp.....                      | 818  |
| debug ip dhcp snooping.....          | 1366 |
| debug ip dns forwarding.....         | 678  |
| debug ip packet interface.....       | 679  |
| debug lacp .....                     | 604  |
| debug lldp .....                     | 1864 |
| debug loopprot .....                 | 412  |
| debug mail .....                     | 1919 |
| debug mld .....                      | 874  |
| debug mstp (RSTP and STP).....       | 527  |
| debug nsm mcast .....                | 789  |
| debug nsm mcast6 .....               | 790  |
| debug ping-poll .....                | 2032 |
| debug platform packet .....          | 413  |
| debug power-inline.....              | 626  |
| debug radius .....                   | 1289 |
| debug sflow agent.....               | 2054 |
| debug sflow .....                    | 2053 |
| debug snmp.....                      | 1821 |
| debug ssh client .....               | 1952 |
| debug ssh server .....               | 1953 |
| debug stack .....                    | 1426 |
| debug trigger .....                  | 1993 |

---

|  |      |
|--|------|
| debug vrrp events .....                    | 1472 |
| debug vrrp packet .....                    | 1473 |
| debug vrrp .....                           | 1471 |
| default log buffered .....                 | 305  |
| default log console .....                  | 306  |
| default log email .....                    | 307  |
| default log host .....                     | 308  |
| default log monitor .....                  | 309  |
| default log permanent .....                | 310  |
| default-action .....                       | 1029 |
| default-router .....                       | 1696 |
| delete debug .....                         | 103  |
| delete mail .....                          | 1920 |
| delete .....                               | 102  |
| description (Authentication Profile) ..... | 1222 |
| description (interface) .....              | 378  |
| description (ping-polling) .....           | 2033 |
| description (QoS policy-map) .....         | 1030 |
| description (trigger) .....                | 1994 |
| dir .....                                  | 104  |
| disable (Privileged Exec mode) .....       | 73   |
| disable (VRRP) .....                       | 1474 |
| discovery .....                            | 1611 |
| dns-server (DHCPv6) .....                  | 1762 |
| dns-server .....                           | 1697 |
| do .....                                   | 74   |
| domain-name (DHCPv6) .....                 | 1764 |
| domain-name .....                          | 1698 |
| domain-style .....                         | 1326 |
| dos .....                                  | 975  |
| dot1x accounting .....                     | 1089 |
| dot1x authentication .....                 | 1090 |
| dot1x control-direction .....              | 1092 |
| dot1x eap .....                            | 1094 |
| dot1x eapol-version .....                  | 1095 |

---

|   |      |
|---|------|
| dot1x initialize interface .....                | 1097 |
| dot1x initialize supplicant.....                | 1098 |
| dot1x keytransmit .....                         | 1099 |
| dot1x max-auth-fail.....                        | 1100 |
| dot1x max-reauth-req .....                      | 1102 |
| dot1x port-control.....                         | 1104 |
| dot1x timeout tx-period .....                   | 1106 |
| duplex .....                                    | 415  |
| echo .....                                      | 375  |
| ecofriendly led .....                           | 218  |
| ecofriendly lpi .....                           | 219  |
| edit (filename).....                            | 107  |
| edit .....                                      | 106  |
| egress-rate-limit .....                         | 1031 |
| egress-vlan-id .....                            | 1327 |
| egress-vlan-name.....                           | 1329 |
| enable (Privileged Exec mode) .....             | 75   |
| enable (VRRP) .....                             | 1475 |
| enable password .....                           | 150  |
| enable secret.....                              | 153  |
| end .....                                       | 77   |
| epsr configuration.....                         | 1510 |
| epsr datavlan.....                              | 1511 |
| epsr enhancedrecovery enable.....               | 1512 |
| epsr mode master controlvlan primary port ..... | 1513 |
| epsr mode transit controlvlan .....             | 1514 |
| epsr priority .....                             | 1515 |
| epsr state.....                                 | 1516 |
| epsr trap .....                                 | 1517 |
| epsr .....                                      | 1508 |
| erase factory-default.....                      | 1613 |
| erase proxy-autoconfig-file .....               | 1223 |
| erase startup-config .....                      | 108  |
| erase web-auth-https-file .....                 | 1224 |
| exec-timeout .....                              | 156  |

---

|   |      |
|---|------|
| exit.....   | 78   |
| fail-count.....   | 2034 |
| fiber-monitoring action.....                              | 279  |
| fiber-monitoring baseline.....                            | 280  |
| fiber-monitoring enable.....                              | 282  |
| fiber-monitoring interval.....                            | 283  |
| fiber-monitoring sensitivity.....                         | 284  |
| findme trigger.....                                       | 223  |
| findme.....   | 221  |
| flowcontrol (switch port).....                            | 417  |
| flowcontrol hardware (asyn/console).....                  | 158  |
| group.....  | 1331 |
| gui-timeout.....  | 199  |
| gvrp (interface).....                                     | 653  |
| gvrp dynamic-vlan-creation.....                           | 654  |
| gvrp enable (global).....                                 | 655  |
| gvrp registration.....                                    | 656  |
| gvrp timer.....   | 657  |
| help.....   | 79   |
| host (DHCP).....  | 1699 |
| hostname.....   | 224  |
| http-enable.....  | 1614 |
| instance priority (MSTP).....                             | 531  |
| instance vlan (MSTP).....                                 | 533  |
| interface (to configure).....                             | 379  |
| ip (ping-polling).....                                    | 2035 |
| ip address (IP Addressing and Protocol).....              | 681  |
| ip address dhcp.....                                      | 1700 |
| ip dhcp bootp ignore.....                                 | 1702 |
| ip dhcp leasequery enable.....                            | 1703 |
| ip dhcp option.....                                       | 1704 |
| ip dhcp pool.....   | 1706 |
| ip dhcp snooping agent-option allow-untrusted.....        | 1369 |
| ip dhcp snooping agent-option circuit-id vlantriplet..... | 1370 |
| ip dhcp snooping agent-option remote-id.....              | 1371 |

---

|  |      |
|--|------|
| ip dhcp snooping agent-option .....                    | 1368 |
| ip dhcp snooping binding .....                         | 1372 |
| ip dhcp snooping database .....                        | 1373 |
| ip dhcp snooping delete-by-client .....                | 1374 |
| ip dhcp snooping delete-by-linkdown.....               | 1375 |
| ip dhcp snooping max-bindings .....                    | 1376 |
| ip dhcp snooping subscriber-id .....                   | 1377 |
| ip dhcp snooping trust.....                            | 1378 |
| ip dhcp snooping verify mac-address.....               | 1379 |
| ip dhcp snooping violation.....                        | 1380 |
| ip dhcp snooping.....                                  | 1367 |
| ip dhcp-relay agent-option checking .....              | 1709 |
| ip dhcp-relay agent-option remote-id .....             | 1710 |
| ip dhcp-relay agent-option subscriber-id-auto-mac..... | 1765 |
| ip dhcp-relay agent-option .....                       | 1707 |
| ip dhcp-relay information policy .....                 | 1711 |
| ip dhcp-relay maxhops .....                            | 1713 |
| ip dhcp-relay max-message-length.....                  | 1714 |
| ip dhcp-relay server-address .....                     | 1716 |
| ip directed-broadcast.....                             | 683  |
| ip dns forwarding cache .....                          | 686  |
| ip dns forwarding dead-time.....                       | 687  |
| ip dns forwarding retry .....                          | 688  |
| ip dns forwarding source-interface .....               | 689  |
| ip dns forwarding timeout .....                        | 690  |
| ip dns forwarding.....                                 | 685  |
| ip domain-list.....                                    | 691  |
| ip domain-lookup .....                                 | 692  |
| ip domain-name.....                                    | 693  |
| ip forward-protocol udp .....                          | 694  |
| ip gratuitous-arp-link .....                           | 696  |
| ip helper-address.....                                 | 698  |
| ip igmp access-group.....                              | 820  |
| ip igmp flood specific-query .....                     | 821  |
| ip igmp immediate-leave .....                          | 822  |



---

|   |     |
|---|-----|
| ip igmp last-member-query-count .....     | 823 |
| ip igmp last-member-query-interval.....   | 824 |
| ip igmp limit.....                        | 825 |
| ip igmp mroute-proxy .....                | 826 |
| ip igmp proxy-service.....                | 827 |
| ip igmp querier-timeout .....             | 828 |
| ip igmp query-holdtime .....              | 829 |
| ip igmp query-interval .....              | 831 |
| ip igmp query-max-response-time .....     | 833 |
| ip igmp ra-option (Router Alert).....     | 835 |
| ip igmp robustness-variable .....         | 836 |
| ip igmp snooping fast-leave.....          | 838 |
| ip igmp snooping mrouter.....             | 839 |
| ip igmp snooping querier.....             | 840 |
| ip igmp snooping report-suppression ..... | 841 |
| ip igmp snooping routermode .....         | 842 |
| ip igmp snooping tcn query solicit .....  | 844 |
| ip igmp snooping.....                     | 837 |
| ip igmp source-address-check .....        | 846 |
| ip igmp ssm .....                         | 847 |
| ip igmp ssm-map enable.....               | 848 |
| ip igmp ssm-map static .....              | 849 |
| ip igmp startup-query-count.....          | 853 |
| ip igmp startup-query-interval .....      | 854 |
| ip igmp static-group .....                | 851 |
| ip igmp trusted .....                     | 855 |
| ip igmp version.....                      | 856 |
| ip igmp.....                              | 819 |
| ip limited-local-proxy-arp .....          | 700 |
| ip local-proxy-arp.....                   | 701 |
| ip mroute .....                           | 791 |
| ip multicast forward-first-packet .....   | 793 |
| ip multicast route.....                   | 794 |
| ip multicast route-limit.....             | 796 |
| ip multicast wrong-vif-suppression.....   | 797 |

---

|   |      |
|---|------|
| ip multicast-routing .....                | 798  |
| ip name-server .....                      | 702  |
| ip proxy-arp .....                        | 704  |
| ip radius source-interface .....          | 1290 |
| ip redirects .....                        | 705  |
| ip route .....                            | 772  |
| ip source binding .....                   | 1381 |
| ip tftp source-interface .....            | 109  |
| ip unreachable .....                      | 707  |
| ipv6 access-list (named) .....            | 989  |
| ipv6 access-list extended (named) .....   | 1005 |
| ipv6 access-list extended proto .....     | 1009 |
| ipv6 access-list standard (named) .....   | 1017 |
| ipv6 address (DHCPv6 PD) .....            | 1766 |
| ipv6 address autoconfig .....             | 741  |
| ipv6 address dhcp .....                   | 1769 |
| ipv6 address .....                        | 739  |
| ipv6 dhcp client pd .....                 | 1771 |
| ipv6 dhcp option .....                    | 1773 |
| ipv6 dhcp pool .....                      | 1775 |
| ipv6 dhcp server .....                    | 1777 |
| ipv6 enable .....                         | 743  |
| ipv6 forwarding .....                     | 745  |
| ipv6 local pool .....                     | 1778 |
| ipv6 mld access-group .....               | 878  |
| ipv6 mld immediate-leave .....            | 879  |
| ipv6 mld last-member-query-count .....    | 880  |
| ipv6 mld last-member-query-interval ..... | 881  |
| ipv6 mld limit .....                      | 882  |
| ipv6 mld querier-timeout .....            | 884  |
| ipv6 mld query-interval .....             | 885  |
| ipv6 mld query-max-response-time .....    | 886  |
| ipv6 mld robustness-variable .....        | 887  |
| ipv6 mld snooping fast-leave .....        | 890  |
| ipv6 mld snooping mrouter .....           | 891  |

---

|   |      |
|---|------|
| ipv6 mld snooping querier .....               | 893  |
| ipv6 mld snooping report-suppression .....    | 894  |
| ipv6 mld snooping .....                       | 888  |
| ipv6 mld static-group .....                   | 896  |
| ipv6 mld version .....                        | 898  |
| ipv6 mld .....                                | 877  |
| ipv6 multicast forward-slow-path-packet ..... | 746  |
| ipv6 multicast forward-slow-path-packet ..... | 788  |
| ipv6 multicast route .....                    | 799  |
| ipv6 multicast route-limit .....              | 802  |
| ipv6 multicast-routing .....                  | 803  |
| ipv6 nd managed-config-flag .....             | 747  |
| ipv6 nd minimum-ra-interval .....             | 748  |
| ipv6 nd other-config-flag .....               | 749  |
| ipv6 nd prefix (DHCPv6) .....                 | 1780 |
| ipv6 nd prefix .....                          | 750  |
| ipv6 nd raguard .....                         | 754  |
| ipv6 nd ra-interval .....                     | 752  |
| ipv6 nd ra-lifetime .....                     | 753  |
| ipv6 nd reachable-time .....                  | 756  |
| ipv6 nd retransmission-time .....             | 757  |
| ipv6 nd suppress-ra .....                     | 758  |
| ipv6 neighbor .....                           | 759  |
| ipv6 opportunistic-nd .....                   | 760  |
| ipv6 route .....                              | 761  |
| ipv6 tftp source-interface .....              | 110  |
| ipv6 traffic-filter .....                     | 1001 |
| ipv6 unreachable .....                        | 762  |
| lACP global-passive-mode enable .....         | 605  |
| lACP port-priority .....                      | 606  |
| lACP system-priority .....                    | 607  |
| lACP timeout .....                            | 608  |
| lease .....                                   | 1718 |
| length (asyn) .....                           | 160  |
| length (ping-poll data) .....                 | 2036 |

---

|   |      |
|---|------|
| license member (deleted) .....              | 189  |
| license .....                               | 187  |
| line .....                                  | 161  |
| link-address .....                          | 1782 |
| linkflap action .....                       | 419  |
| lldp faststart-count .....                  | 1866 |
| lldp holdtime-multiplier .....              | 1867 |
| lldp management-address .....               | 1868 |
| lldp med-notifications .....                | 1869 |
| lldp med-tlv-select .....                   | 1870 |
| lldp non-strict-med-tlv-order-check .....   | 1872 |
| lldp notification-interval .....            | 1873 |
| lldp notifications .....                    | 1874 |
| lldp port-number-type .....                 | 1875 |
| lldp reinit .....                           | 1876 |
| lldp run .....                              | 1877 |
| lldp timer .....                            | 1878 |
| lldp tlv-select .....                       | 1879 |
| lldp transmit receive .....                 | 1881 |
| lldp tx-delay .....                         | 1882 |
| local-proxy-arp .....                       | 706  |
| location civic-location configuration ..... | 1883 |
| location civic-location identifier .....    | 1887 |
| location civic-location-id .....            | 1888 |
| location coord-location configuration ..... | 1889 |
| location coord-location identifier .....    | 1891 |
| location coord-location-id .....            | 1892 |
| location elin-location .....                | 1893 |
| location elin-location-id .....             | 1894 |
| log buffered (filter) .....                 | 312  |
| log buffered exclude .....                  | 315  |
| log buffered size .....                     | 318  |
| log buffered .....                          | 311  |
| log console (filter) .....                  | 320  |
| log console exclude .....                   | 323  |

---

|   |      |
|---|------|
| log console .....                       | 319  |
| log email (filter).....                 | 327  |
| log email exclude.....                  | 330  |
| log email time .....                    | 333  |
| log email .....                         | 326  |
| log facility .....                      | 335  |
| log host (filter).....                  | 338  |
| log host exclude.....                   | 341  |
| log host source .....                   | 344  |
| log host time .....                     | 345  |
| log host .....                          | 337  |
| log monitor (filter) .....              | 347  |
| log monitor exclude .....               | 350  |
| log permanent (filter) .....            | 354  |
| log permanent exclude .....             | 357  |
| log permanent size .....                | 360  |
| log permanent .....                     | 353  |
| login authentication .....              | 1278 |
| logout.....                             | 80   |
| log-rate-limit nsm .....                | 361  |
| loop-protection action.....             | 421  |
| loop-protection action-delay-time ..... | 422  |
| loop-protection loop-detect .....       | 420  |
| loop-protection timeout .....           | 423  |
| mac address-table acquire .....         | 424  |
| mac address-table ageing-time .....     | 425  |
| mac address-table logging.....          | 426  |
| mac address-table static .....          | 427  |
| mac address-table thrash-limit.....     | 428  |
| mail from.....                          | 1922 |
| mail smtpserver .....                   | 1923 |
| mail .....                              | 1921 |
| match access-group .....                | 1032 |
| match cos .....                         | 1034 |
| match dscp.....                         | 1035 |

---

|                                  |      |
|----------------------------------|------|
| match eth-format protocol.....   | 1036 |
| match inner-cos .....            | 1039 |
| match inner-vlan .....           | 1040 |
| match ip-precedence .....        | 1041 |
| match mac-type .....             | 1042 |
| match tcp-flags.....             | 1043 |
| match vlan .....                 | 1044 |
| max-fib-routes.....              | 226  |
| max-fib-routes.....              | 774  |
| maximum-access-list .....        | 978  |
| maximum-paths.....               | 776  |
| max-static-routes.....           | 227  |
| max-static-routes.....           | 775  |
| mirror interface.....            | 429  |
| mkdir .....                      | 111  |
| mls qos cos.....                 | 1045 |
| mls qos enable .....             | 1046 |
| mls qos map cos-queue to .....   | 1047 |
| mls qos map premark-dscp to..... | 1048 |
| modeltype .....                  | 1616 |
| move debug.....                  | 113  |
| move.....                        | 112  |
| mru .....                        | 381  |
| mtu .....                        | 383  |
| multicast.....                   | 804  |
| nas.....                         | 1332 |
| network (DHCP) .....             | 1720 |
| next-server .....                | 1721 |
| no debug all.....                | 228  |
| no police .....                  | 1050 |
| normal-interval .....            | 2037 |
| ntp access-group .....           | 1802 |
| ntp authenticate.....            | 1803 |
| ntp authentication-key .....     | 1804 |
| ntp broadcastdelay.....          | 1805 |

---

|  |      |
|--|------|
| ntp master .....                         | 1806 |
| ntp peer.....                            | 1807 |
| ntp server .....                         | 1809 |
| ntp source.....                          | 1811 |
| ntp trusted-key .....                    | 1813 |
| openflow controller.....                 | 1409 |
| openflow native vlan .....               | 1410 |
| openflow version .....                   | 1411 |
| openflow.....                            | 1408 |
| optimistic-nd.....                       | 709  |
| option (DHCPv6).....                     | 1784 |
| option.....                              | 1722 |
| ping ipv6.....                           | 763  |
| ping.....                                | 710  |
| ping-poll .....                          | 2038 |
| platform hwfilter-size .....             | 431  |
| platform l3-vlan-hashing-algorithm ..... | 1225 |
| platform load-balancing .....            | 432  |
| platform mac-vlan-hashing-algorithm..... | 1226 |
| platform stop-unreg-mc-flooding .....    | 434  |
| platform vlan-stacking-tpid .....        | 436  |
| polarity.....                            | 437  |
| police single-rate action .....          | 1051 |
| police twin-rate action.....             | 1053 |
| policy-map .....                         | 1055 |
| port-vlan-forwarding-priority .....      | 473  |
| power-inline allow-legacy.....           | 628  |
| power-inline description.....            | 629  |
| power-inline enable .....                | 630  |
| power-inline max.....                    | 631  |
| power-inline priority.....               | 633  |
| power-inline usage-threshold.....        | 635  |
| preempt-mode .....                       | 1476 |
| prefix-delegation pool.....              | 1786 |
| priority .....                           | 1478 |

---

|                                    |      |
|------------------------------------|------|
| priority-queue .....               | 1056 |
| private-vlan association .....     | 477  |
| private-vlan .....                 | 476  |
| privilege level .....              | 163  |
| probe enable .....                 | 1724 |
| probe packets .....                | 1725 |
| probe timeout .....                | 1726 |
| probe type .....                   | 1727 |
| pwd .....                          | 114  |
| radius-server deadtime .....       | 1291 |
| radius-server host .....           | 1292 |
| radius-server key .....            | 1295 |
| radius-server local .....          | 1333 |
| radius-server retransmit .....     | 1296 |
| radius-server timeout .....        | 1298 |
| range .....                        | 1728 |
| reboot rolling .....               | 1427 |
| reboot .....                       | 229  |
| region (MSTP) .....                | 535  |
| reload rolling .....               | 1428 |
| reload .....                       | 230  |
| remark new-cos .....               | 1059 |
| remark-map .....                   | 1057 |
| remote-command (deleted) .....     | 1429 |
| remote-login .....                 | 1430 |
| repeat .....                       | 1995 |
| revision (MSTP) .....              | 536  |
| rmdir .....                        | 115  |
| rmon alarm .....                   | 1928 |
| rmon collection history .....      | 1930 |
| rmon collection stats .....        | 1931 |
| rmon event .....                   | 1932 |
| route .....                        | 1729 |
| router ipv6 vrrp (interface) ..... | 1480 |
| router vrrp (interface) .....      | 1482 |



---

|   |      |
|---|------|
| sample-size .....                           | 2039 |
| script .....                                | 1996 |
| security-password forced-change .....       | 165  |
| security-password history .....             | 164  |
| security-password lifetime .....            | 166  |
| security-password minimum-categories .....  | 167  |
| security-password minimum-length .....      | 168  |
| security-password reject-expired-pwd .....  | 169  |
| security-password warning .....             | 170  |
| server (Server Group) .....                 | 1300 |
| server auth-port .....                      | 1334 |
| server enable .....                         | 1335 |
| service advanced-vty .....                  | 171  |
| service dhcp-relay .....                    | 1730 |
| service dhcp-server .....                   | 1731 |
| service dhcp-snooping .....                 | 1383 |
| service http .....                          | 200  |
| service password-encryption .....           | 172  |
| service power-inline .....                  | 636  |
| service ssh .....                           | 1954 |
| service telnet .....                        | 173  |
| service terminal-length (deleted) .....     | 174  |
| service test .....                          | 396  |
| service-policy input .....                  | 1061 |
| set ip next-hop (PBR) .....                 | 1062 |
| sflow agent (address) .....                 | 2055 |
| sflow collector (address) .....             | 2057 |
| sflow collector max-datagram-size .....     | 2059 |
| sflow enable .....                          | 2060 |
| sflow max-header-size .....                 | 2061 |
| sflow polling-interval .....                | 2063 |
| sflow sampling-rate .....                   | 2064 |
| show aaa local user locked .....            | 1279 |
| show aaa server group .....                 | 1280 |
| show access-list (IPv4 Hardware ACLs) ..... | 938  |

---

|  |      |
|--|------|
| show access-list (IPv4 Software ACLs)..... | 979  |
| show arp security interface.....           | 1386 |
| show arp security statistics.....          | 1388 |
| show arp security.....                     | 1385 |
| show arp.....                              | 711  |
| show atmf area guests.....                 | 1624 |
| show atmf area guests-detail.....          | 1626 |
| show atmf area nodes.....                  | 1628 |
| show atmf area nodes-detail.....           | 1630 |
| show atmf area summary.....                | 1632 |
| show atmf area.....                        | 1621 |
| show atmf backup area.....                 | 1637 |
| show atmf backup guest.....                | 1639 |
| show atmf backup.....                      | 1633 |
| show atmf detail.....                      | 1641 |
| show atmf group members.....               | 1645 |
| show atmf group.....                       | 1643 |
| show atmf guest.....                       | 1647 |
| show atmf links detail.....                | 1651 |
| show atmf links guest.....                 | 1660 |
| show atmf links statistics.....            | 1663 |
| show atmf links.....                       | 1649 |
| show atmf memory (deprecated).....         | 1666 |
| show atmf nodes.....                       | 1667 |
| show atmf provision nodes.....             | 1669 |
| show atmf tech.....                        | 1670 |
| show atmf virtual-links.....               | 1673 |
| show atmf working-set.....                 | 1675 |
| show atmf.....                             | 1617 |
| show auth diagnostics.....                 | 1229 |
| show auth interface.....                   | 1231 |
| show auth sessionstatistics.....           | 1234 |
| show auth statistics interface.....        | 1235 |
| show auth supplicant interface.....        | 1239 |
| show auth supplicant.....                  | 1236 |

---

|   |      |
|---|------|
| show auth two-step supplicant brief .....                 | 1240 |
| show auth.....  | 1227 |
| show auth-web-server page .....                           | 1242 |
| show auth-web-server .....                                | 1241 |
| show autoboot .....                                       | 116  |
| show banner login.....                                    | 1956 |
| show boot.....  | 117  |
| show class-map .....                                      | 1064 |
| show clock .....  | 231  |
| show continuous-reboot-prevention.....                    | 233  |
| show counter dhcp-client.....                             | 1732 |
| show counter dhcp-relay .....                             | 1733 |
| show counter dhcp-server .....                            | 1736 |
| show counter ipv6 dhcp-client.....                        | 1788 |
| show counter ipv6 dhcp-server .....                       | 1790 |
| show counter log.....                                     | 363  |
| show counter mail.....                                    | 1924 |
| show counter ntp.....                                     | 1814 |
| show counter ping-poll .....                              | 2041 |
| show counter snmp-server.....                             | 1822 |
| show counter stack.....                                   | 1431 |
| show cpu history .....                                    | 237  |
| show cpu.....   | 234  |
| show crypto key hostkey.....                              | 1957 |
| show crypto key pubkey-chain knownhosts .....             | 1958 |
| show crypto key pubkey-chain userkey.....                 | 1959 |
| show crypto key userkey.....                              | 1960 |
| show crypto pki certificates local-radius-all-users ..... | 1338 |
| show crypto pki certificates user .....                   | 1340 |
| show crypto pki certificates .....                        | 1336 |
| show crypto pki trustpoints .....                         | 1342 |
| show debugging aaa .....                                  | 1281 |
| show debugging arp security .....                         | 1390 |
| show debugging atmf packet .....                          | 1677 |
| show debugging atmf .....                                 | 1676 |

---

|  |      |
|--|------|
| show debugging dot1x .....               | 1108 |
| show debugging epsr .....                | 1518 |
| show debugging gvrp .....                | 659  |
| show debugging igmp.....                 | 857  |
| show debugging ip dhcp snooping .....    | 1391 |
| show debugging ip dns forwarding .....   | 713  |
| show debugging ip packet.....            | 714  |
| show debugging lacp.....                 | 610  |
| show debugging lldp .....                | 1895 |
| show debugging loopprot .....            | 438  |
| show debugging mld.....                  | 899  |
| show debugging mstp.....                 | 537  |
| show debugging platform packet .....     | 439  |
| show debugging power-inline .....        | 637  |
| show debugging radius.....               | 1302 |
| show debugging sflow .....               | 2065 |
| show debugging snmp .....                | 1826 |
| show debugging stack.....                | 1435 |
| show debugging trigger .....             | 1998 |
| show debugging vrrp.....                 | 1484 |
| show debugging .....                     | 240  |
| show dhcp lease.....                     | 1738 |
| show diagnostic channel-group.....       | 611  |
| show dos interface.....                  | 981  |
| show dot1x diagnostics.....              | 1112 |
| show dot1x interface .....               | 1114 |
| show dot1x sessionstatistics .....       | 1119 |
| show dot1x statistics interface .....    | 1120 |
| show dot1x supplicant interface .....    | 1123 |
| show dot1x supplicant.....               | 1121 |
| show dot1x.....                          | 1109 |
| show ecofriendly .....                   | 241  |
| show epsr <epsr-instance> counters ..... | 1527 |
| show epsr <epsr-instance> .....          | 1526 |
| show epsr common segments .....          | 1524 |

---

|   |      |
|---|------|
| show epsr config-check.....                     | 1525 |
| show epsr counters.....                         | 1528 |
| show epsr summary .....                         | 1529 |
| show epsr .....                                 | 1519 |
| show etherchannel detail .....                  | 614  |
| show etherchannel summary .....                 | 615  |
| show etherchannel .....                         | 613  |
| show exception log.....                         | 364  |
| show file systems.....                          | 120  |
| show file .....                                 | 119  |
| show flowcontrol interface.....                 | 440  |
| show gvrp configuration.....                    | 660  |
| show gvrp machine.....                          | 661  |
| show gvrp statistics.....                       | 662  |
| show gvrp timer.....                            | 663  |
| show history.....                               | 81   |
| show hosts .....                                | 716  |
| show http .....                                 | 201  |
| show interface access-group.....                | 940  |
| show interface brief.....                       | 389  |
| show interface err-disabled .....               | 441  |
| show interface memory.....                      | 243  |
| show interface status .....                     | 390  |
| show interface switchport vlan translation..... | 479  |
| show interface switchport .....                 | 442  |
| show interface.....                             | 385  |
| show ip access-list .....                       | 984  |
| show ip dhcp binding.....                       | 1740 |
| show ip dhcp pool.....                          | 1742 |
| show ip dhcp server statistics .....            | 1747 |
| show ip dhcp server summary .....               | 1749 |
| show ip dhcp snooping acl.....                  | 1393 |
| show ip dhcp snooping agent-option .....        | 1396 |
| show ip dhcp snooping binding.....              | 1398 |
| show ip dhcp snooping interface.....            | 1400 |

---

|  |      |
|--|------|
| show ip dhcp snooping statistics .....           | 1402 |
| show ip dhcp snooping .....                      | 1392 |
| show ip dhcp-relay .....                         | 1746 |
| show ip dns forwarding cache .....               | 718  |
| show ip dns forwarding server .....              | 719  |
| show ip dns forwarding .....                     | 717  |
| show ip domain-list .....                        | 720  |
| show ip domain-name .....                        | 721  |
| show ip igmp groups .....                        | 858  |
| show ip igmp interface .....                     | 860  |
| show ip igmp proxy .....                         | 864  |
| show ip igmp snooping mrouter .....              | 865  |
| show ip igmp snooping routermode .....           | 866  |
| show ip igmp snooping statistics .....           | 867  |
| show ip interface .....                          | 722  |
| show ip mroute .....                             | 805  |
| show ip mvif .....                               | 807  |
| show ip name-server .....                        | 723  |
| show ip route database .....                     | 779  |
| show ip route summary .....                      | 780  |
| show ip route .....                              | 777  |
| show ip rpf .....                                | 808  |
| show ip sockets .....                            | 724  |
| show ip source binding .....                     | 1405 |
| show ip traffic .....                            | 727  |
| show ipv6 access-list (IPv6 Hardware ACLs) ..... | 1002 |
| show ipv6 access-list (IPv6 Software ACLs) ..... | 1021 |
| show ipv6 dhcp binding .....                     | 1793 |
| show ipv6 dhcp interface .....                   | 1796 |
| show ipv6 dhcp pool .....                        | 1798 |
| show ipv6 dhcp .....                             | 1792 |
| show ipv6 forwarding .....                       | 764  |
| show ipv6 interface brief .....                  | 765  |
| show ipv6 mif .....                              | 812  |
| show ipv6 mld groups .....                       | 900  |

---

|   |      |
|---|------|
| show ipv6 mld interface .....             | 901  |
| show ipv6 mld snooping mrouter .....      | 902  |
| show ipv6 mld snooping statistics .....   | 903  |
| show ipv6 mroute .....                    | 809  |
| show ipv6 multicast forwarding .....      | 811  |
| show ipv6 neighbors .....                 | 766  |
| show ipv6 route summary .....             | 769  |
| show ipv6 route .....                     | 767  |
| show lacp sys-id .....                    | 616  |
| show lacp-counter .....                   | 617  |
| show license brief member .....           | 194  |
| show license brief .....                  | 192  |
| show license member .....                 | 196  |
| show license .....                        | 190  |
| show lldp interface .....                 | 1899 |
| show lldp local-info .....                | 1901 |
| show lldp neighbors detail .....          | 1908 |
| show lldp neighbors .....                 | 1906 |
| show lldp statistics interface .....      | 1914 |
| show lldp statistics .....                | 1912 |
| show lldp .....                           | 1897 |
| show location .....                       | 1916 |
| show log config .....                     | 368  |
| show log permanent .....                  | 370  |
| show log .....                            | 365  |
| show loop-protection .....                | 443  |
| show mac address-table thrash-limit ..... | 447  |
| show mac address-table .....              | 445  |
| show mail .....                           | 1925 |
| show memory allocations .....             | 247  |
| show memory history .....                 | 249  |
| show memory pools .....                   | 251  |
| show memory shared .....                  | 252  |
| show memory .....                         | 245  |
| show mirror interface .....               | 449  |

---

|   |      |
|---|------|
| show mirror .....   | 448  |
| show mls qos interface policer-counters.....                | 1069 |
| show mls qos interface queue-counters .....                 | 1071 |
| show mls qos interface storm-status.....                    | 1073 |
| show mls qos interface.....                                 | 1066 |
| show mls qos maps cos-queue .....                           | 1074 |
| show mls qos maps premark-dscp .....                        | 1075 |
| show mls qos.....   | 1065 |
| show ntp associations .....                                 | 1816 |
| show ntp status .....                                       | 1818 |
| show openflow config .....                                  | 1412 |
| show openflow coverage .....                                | 1414 |
| show openflow flows .....                                   | 1416 |
| show openflow rules.....                                    | 1417 |
| show openflow status .....                                  | 1419 |
| show ping-poll .....  | 2043 |
| show platform classifier statistics utilization brief ..... | 1076 |
| show platform classifier statistics utilization brief ..... | 451  |
| show platform port .....                                    | 452  |
| show platform.....  | 450  |
| show policy-map .....                                       | 1077 |
| show port etherchannel .....                                | 618  |
| show port-security interface .....                          | 456  |
| show port-security intrusion .....                          | 457  |
| show port-vlan-forwarding-priority .....                    | 478  |
| show power-inline counters .....                            | 641  |
| show power-inline interface detail .....                    | 645  |
| show power-inline interface .....                           | 643  |
| show power-inline.....                                      | 638  |
| show privilege.....   | 175  |
| show process.....   | 253  |
| show provisioning (stack) .....                             | 1437 |
| show proxy-autoconfig-file .....                            | 1243 |
| show radius local-server group.....                         | 1343 |
| show radius local-server nas .....                          | 1344 |



---

|  |      |
|--|------|
| show radius local-server statistics .....    | 1345 |
| show radius local-server user.....           | 1346 |
| show radius server group .....               | 1282 |
| show radius statistics .....                 | 1306 |
| show radius .....                            | 1303 |
| show reboot history .....                    | 256  |
| show rmon alarm.....                         | 1933 |
| show rmon event.....                         | 1934 |
| show rmon history.....                       | 1936 |
| show rmon statistics .....                   | 1938 |
| show router-id.....                          | 258  |
| show running-config access-list.....         | 124  |
| show running-config as-path access-list..... | 125  |
| show running-config atmf .....               | 1678 |
| show running-config dhcp.....                | 126  |
| show running-config full.....                | 127  |
| show running-config interface .....          | 129  |
| show running-config ip route .....           | 131  |
| show running-config ipv6 access-list .....   | 132  |
| show running-config ipv6 route.....          | 133  |
| show running-config key chain.....           | 134  |
| show running-config lldp .....               | 135  |
| show running-config log.....                 | 372  |
| show running-config power-inline .....       | 136  |
| show running-config route-map .....          | 137  |
| show running-config router ipv6 vrrp .....   | 1485 |
| show running-config router vrrp .....        | 1486 |
| show running-config router.....              | 138  |
| show running-config router-id .....          | 139  |
| show running-config security-password.....   | 140  |
| show running-config sflow.....               | 2067 |
| show running-config snmp .....               | 1827 |
| show running-config ssh.....                 | 1961 |
| show running-config stack.....               | 1436 |
| show running-config trigger .....            | 1999 |

---

|  |      |
|--|------|
| show running-config .....                              | 122  |
| show security-password configuration .....             | 176  |
| show security-password user.....                       | 177  |
| show sflow interface .....                             | 2070 |
| show sflow .....                                       | 2068 |
| show snmp-server community .....                       | 1829 |
| show snmp-server group .....                           | 1830 |
| show snmp-server user .....                            | 1831 |
| show snmp-server view.....                             | 1832 |
| show snmp-server .....                                 | 1828 |
| show spanning-tree brief .....                         | 541  |
| show spanning-tree mst config .....                    | 543  |
| show spanning-tree mst detail interface.....           | 546  |
| show spanning-tree mst detail interface.....           | 551  |
| show spanning-tree mst detail .....                    | 544  |
| show spanning-tree mst instance interface .....        | 549  |
| show spanning-tree mst instance .....                  | 548  |
| show spanning-tree mst interface .....                 | 550  |
| show spanning-tree mst .....                           | 542  |
| show spanning-tree statistics instance interface ..... | 556  |
| show spanning-tree statistics instance .....           | 555  |
| show spanning-tree statistics interface .....          | 558  |
| show spanning-tree statistics .....                    | 553  |
| show spanning-tree vlan range-index .....              | 560  |
| show spanning-tree .....                               | 538  |
| show ssh client .....                                  | 1965 |
| show ssh server allow-users.....                       | 1968 |
| show ssh server deny-users .....                       | 1969 |
| show ssh server.....                                   | 1966 |
| show ssh .....   | 1963 |
| show stack detail .....                                | 1440 |
| show stack resiliencylink.....                         | 1444 |
| show stack .....                                       | 1438 |
| show startup-config .....                              | 141  |
| show static-channel-group.....                         | 619  |

---

|  |      |
|--|------|
| show storm-control.....                    | 458  |
| show system environment.....               | 261  |
| show system fiber-monitoring .....         | 286  |
| show system interrupts.....                | 262  |
| show system mac.....                       | 263  |
| show system pci device.....                | 265  |
| show system pci tree .....                 | 266  |
| show system pluggable detail.....          | 291  |
| show system pluggable diagnostics.....     | 295  |
| show system pluggable.....                 | 289  |
| show system serialnumber.....              | 267  |
| show system .....                          | 259  |
| show tacacs+.....                          | 1352 |
| show tech-support .....                    | 268  |
| show telnet.....                           | 178  |
| show test cable-diagnostics tdr .....      | 297  |
| show trigger.....                          | 2000 |
| show users .....                           | 179  |
| show version .....                         | 142  |
| show vlan classifier group interface ..... | 482  |
| show vlan classifier group.....            | 481  |
| show vlan classifier interface group ..... | 483  |
| show vlan classifier rule.....             | 484  |
| show vlan private-vlan.....                | 485  |
| show vlan statistics .....                 | 486  |
| show vlan .....                            | 480  |
| show vrrp (session) .....                  | 1493 |
| show vrrp counters .....                   | 1489 |
| show vrrp ipv6.....                        | 1492 |
| show vrrp .....                            | 1487 |
| shutdown .....                             | 393  |
| snmp trap link-status suppress .....       | 1835 |
| snmp trap link-status .....                | 1833 |
| snmp-server community.....                 | 1839 |
| snmp-server contact.....                   | 1840 |

---

|   |      |
|---|------|
| snmp-server enable trap .....                     | 1841 |
| snmp-server engineID local reset .....            | 1846 |
| snmp-server engineID local .....                  | 1844 |
| snmp-server group .....                           | 1847 |
| snmp-server host .....                            | 1849 |
| snmp-server legacy-ifadminstatus .....            | 1851 |
| snmp-server location .....                        | 1852 |
| snmp-server source-interface .....                | 1853 |
| snmp-server startup-trap-delay .....              | 1854 |
| snmp-server user .....                            | 1855 |
| snmp-server view .....                            | 1858 |
| snmp-server .....                                 | 1837 |
| sntp-address .....                                | 1800 |
| source-ip .....                                   | 2047 |
| spanning-tree autoedge (RSTP and MSTP) .....      | 561  |
| spanning-tree bpdu .....                          | 562  |
| spanning-tree cisco-interoperability (MSTP) ..... | 564  |
| spanning-tree edgeport (RSTP and MSTP) .....      | 565  |
| spanning-tree enable .....                        | 566  |
| spanning-tree errdisable-timeout enable .....     | 568  |
| spanning-tree errdisable-timeout interval .....   | 569  |
| spanning-tree force-version .....                 | 570  |
| spanning-tree forward-time .....                  | 571  |
| spanning-tree guard root .....                    | 572  |
| spanning-tree hello-time .....                    | 573  |
| spanning-tree link-type .....                     | 574  |
| spanning-tree max-age .....                       | 575  |
| spanning-tree max-hops (MSTP) .....               | 576  |
| spanning-tree mode .....                          | 577  |
| spanning-tree mst configuration .....             | 578  |
| spanning-tree mst instance path-cost .....        | 580  |
| spanning-tree mst instance priority .....         | 582  |
| spanning-tree mst instance restricted-role .....  | 583  |
| spanning-tree mst instance restricted-tcn .....   | 585  |
| spanning-tree mst instance .....                  | 579  |

---

|  |      |
|--|------|
| spanning-tree path-cost .....                  | 586  |
| spanning-tree portfast (STP) .....             | 587  |
| spanning-tree portfast bpdu-filter .....       | 589  |
| spanning-tree portfast bpdu-guard .....        | 591  |
| spanning-tree priority (bridge priority) ..... | 593  |
| spanning-tree priority (port priority) .....   | 594  |
| spanning-tree restricted-role .....            | 595  |
| spanning-tree restricted-tcn .....             | 596  |
| spanning-tree transmit-holdcount .....         | 597  |
| speed (asyn) .....                             | 270  |
| speed .....                                    | 459  |
| ssh client .....                               | 1972 |
| ssh server allow-users .....                   | 1976 |
| ssh server authentication .....                | 1978 |
| ssh server deny-users .....                    | 1980 |
| ssh server max-auth-tries .....                | 1982 |
| ssh server resolve-host .....                  | 1983 |
| ssh server scp .....                           | 1984 |
| ssh server sftp .....                          | 1985 |
| ssh server .....                               | 1974 |
| ssh .....                                      | 1970 |
| stack disabled-master-monitoring .....         | 1446 |
| stack enable .....                             | 1447 |
| stack management subnet .....                  | 1449 |
| stack management vlan .....                    | 1450 |
| stack priority .....                           | 1451 |
| stack renumber cascade .....                   | 1453 |
| stack renumber .....                           | 1452 |
| stack resiliencylink .....                     | 1455 |
| stack software-auto-synchronize .....          | 1457 |
| stack virtual-chassis-id .....                 | 1458 |
| stack virtual-mac .....                        | 1459 |
| static-channel-group .....                     | 620  |
| storm-action .....                             | 1078 |
| storm-control level .....                      | 461  |

---

|  |      |
|--|------|
| storm-downtime .....                                 | 1079 |
| storm-protection .....                               | 1080 |
| storm-rate .....                                     | 1081 |
| storm-window .....                                   | 1082 |
| subnet-mask .....                                    | 1750 |
| switch provision (stack) .....                       | 1460 |
| switchport access vlan .....                         | 487  |
| switchport atmf-arealink remote-area .....           | 1679 |
| switchport atmf-crosslink .....                      | 1681 |
| switchport atmf-guestlink .....                      | 1683 |
| switchport atmf-link .....                           | 1685 |
| switchport enable vlan .....                         | 488  |
| switchport mode access .....                         | 489  |
| switchport mode private-vlan trunk promiscuous ..... | 491  |
| switchport mode private-vlan trunk secondary .....   | 493  |
| switchport mode private-vlan .....                   | 490  |
| switchport mode trunk .....                          | 495  |
| switchport port-security aging .....                 | 463  |
| switchport port-security maximum .....               | 464  |
| switchport port-security violation .....             | 465  |
| switchport port-security .....                       | 462  |
| switchport private-vlan host-association .....       | 496  |
| switchport private-vlan mapping .....                | 497  |
| switchport resiliencylink .....                      | 1461 |
| switchport trunk allowed vlan .....                  | 498  |
| switchport trunk native vlan .....                   | 501  |
| switchport vlan translation default drop .....       | 504  |
| switchport vlan translation .....                    | 503  |
| switchport vlan-stacking (double tagging) .....      | 505  |
| switchport voice dscp .....                          | 506  |
| switchport voice vlan priority .....                 | 510  |
| switchport voice vlan .....                          | 507  |
| system territory (deprecated) .....                  | 272  |
| tacacs-server host .....                             | 1353 |
| tacacs-server key .....                              | 1355 |

---

|   |      |
|---|------|
| tacacs-server timeout.....                | 1356 |
| tcpdump.....                              | 733  |
| telnet server.....                        | 181  |
| telnet .....                              | 180  |
| terminal length.....                      | 182  |
| terminal monitor .....                    | 273  |
| terminal resize.....                      | 183  |
| test cable-diagnostics tdr interface..... | 298  |
| test interface .....                      | 397  |
| test .....                                | 2005 |
| thrash-limiting .....                     | 466  |
| time (trigger) .....                      | 2006 |
| timeout (ping polling) .....              | 2049 |
| traceroute ipv6 .....                     | 770  |
| traceroute.....                           | 734  |
| transition-mode .....                     | 1495 |
| trap .....                                | 2008 |
| trigger activate .....                    | 2010 |
| trigger .....                             | 2009 |
| trust dscp .....                          | 1083 |
| type atmf node .....                      | 1686 |
| type atmf node .....                      | 2011 |
| type cpu .....                            | 2014 |
| type interface .....                      | 2015 |
| type memory.....                          | 2016 |
| type periodic .....                       | 2017 |
| type ping-poll .....                      | 2018 |
| type reboot .....                         | 2019 |
| type stack disabled-master.....           | 2020 |
| type stack link .....                     | 2021 |
| type stack master-fail .....              | 2022 |
| type stack member .....                   | 2023 |
| type time.....                            | 2024 |
| type usb.....                             | 2025 |
| undebg aaa .....                          | 1284 |

---

|                                  |      |
|----------------------------------|------|
| undebg all .....                 | 274  |
| undebg atmf .....                | 1689 |
| undebg dot1x .....               | 1126 |
| undebg epsr .....                | 1530 |
| undebg igmp .....                | 868  |
| undebg ip packet interface ..... | 735  |
| undebg lacp .....                | 622  |
| undebg loopprot .....            | 468  |
| undebg mail .....                | 1926 |
| undebg mstp .....                | 598  |
| undebg ping-poll .....           | 2051 |
| undebg platform packet .....     | 469  |
| undebg radius .....              | 1307 |
| undebg sflow .....               | 2071 |
| undebg snmp .....                | 1859 |
| undebg ssh client .....          | 1986 |
| undebg ssh server .....          | 1987 |
| undebg stack .....               | 1464 |
| undebg trigger .....             | 2026 |
| undebg vrrp events .....         | 1498 |
| undebg vrrp packet .....         | 1499 |
| undebg vrrp .....                | 1497 |
| up-count .....                   | 2050 |
| user (RADIUS server) .....       | 1348 |
| username .....                   | 1690 |
| username .....                   | 184  |
| virtual-ip .....                 | 1500 |
| virtual-ipv6 .....               | 1502 |
| vlan (RADIUS server) .....       | 1350 |
| vlan classifier activate .....   | 512  |
| vlan classifier group .....      | 513  |
| vlan classifier rule ipv4 .....  | 514  |
| vlan classifier rule proto ..... | 515  |
| vlan database .....              | 518  |
| vlan mode stack-local-vlan ..... | 1462 |



---

|  |      |
|--|------|
| vlan mode stack-local-vlan.....          | 519  |
| vlan statistics .....                    | 521  |
| vlan .....                               | 511  |
| vrrp vmac .....                          | 1504 |
| vty access-class (numbered) .....        | 985  |
| vty ipv6 access-class (named) .....      | 1023 |
| wait .....                               | 376  |
| write file.....                          | 143  |
| write memory .....                       | 144  |
| write terminal .....                     | 145  |
| wrr-queue disable queues .....           | 1084 |
| wrr-queue egress-rate-limit queues ..... | 1085 |
| wrr-queue weight queues.....             | 1086 |

# Part 1: Setup and Troubleshooting

# 1

# CLI Navigation Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for the commands used to navigate between different modes. This chapter also provides a reference for the help and show commands used to help navigate within the CLI.

- Command List**
- “[configure terminal](#)” on page 72
  - “[disable \(Privileged Exec mode\)](#)” on page 73
  - “[do](#)” on page 74
  - “[enable \(Privileged Exec mode\)](#)” on page 75
  - “[end](#)” on page 77
  - “[exit](#)” on page 78
  - “[help](#)” on page 79
  - “[logout](#)” on page 80
  - “[show history](#)” on page 81

# configure terminal

**Overview** This command enters the Global Configuration command mode.

**Syntax** `configure terminal`

**Mode** Privileged Exec

**Example** To enter the Global Configuration command mode (note the change in the command prompt), enter the command:

```
awplus# configure terminal  
awplus(config)#
```

# disable (Privileged Exec mode)

**Overview** This command exits the Privileged Exec mode, returning the prompt to the User Exec mode. To end a session, use the [exit](#) command.

**Syntax** `disable`

**Mode** Privileged Exec

**Example** To exit the Privileged Exec mode, enter the command:

```
awplus# disable
awplus>
```

**Related Commands**

- [enable \(Privileged Exec mode\)](#)
- [end](#)
- [exit](#)

# do

**Overview** This command lets you to run User Exec and Privileged Exec mode commands when you are in any configuration mode.

**Syntax** `do <command>`

| Parameter                    | Description                             |
|------------------------------|---|
| <code>&lt;command&gt;</code> | Specify the command and its parameters. |

**Mode** Any configuration mode

**Example** `awplus# configure terminal`  
`awplus(config)# do ping 192.0.2.23`

# enable (Privileged Exec mode)

**Overview** This command enters the Privileged Exec mode and optionally changes the privilege level for a session. If a privilege level is not specified then the maximum privilege level (15) is applied to the session. If the optional privilege level is omitted then only users with the maximum privilege level can access Privileged Exec mode without providing the password as specified by the [enable password](#) or [enable secret](#) commands. If no password is specified then only users with the maximum privilege level set with the [username](#) command can assess Privileged Exec mode.

**Syntax** `enable [<privilege-level>]`

| Parameter                              | Description   |
|--|---|
| <code>&lt;privilege - level&gt;</code> | Specify the privilege level for a CLI session in the range <1–15>, where 15 is the maximum privilege level, 7 is the intermediate privilege level and 1 is the minimum privilege level. The privilege level for a user must match or exceed the privilege level set for the CLI session for the user to access Privileged Exec mode. Privilege level for a user is configured by <a href="#">username</a> . |

**Mode** User Exec

**Usage** Many commands are available from the Privileged Exec mode that configure operating parameters for the device, so you should apply password protection to the Privileged Exec mode to prevent unauthorized use. Passwords can be encrypted but then cannot be recovered. Note that non-encrypted passwords are shown in plain text in configurations.

The [username](#) command sets the privilege level for the user. After login, users are given access to privilege level 1. Users access higher privilege levels with the [enable \(Privileged Exec mode\)](#) command. If the privilege level specified is higher than the users configured privilege level specified by the [username](#) command, then the user is prompted for the password for that level.

Note that a separate password can be configured for each privilege level using the [enable password](#) and the [enable secret](#) commands from the Global Configuration mode. The [service password-encryption](#) command encrypts passwords configured by the [enable password](#) and the [enable secret](#) commands, so passwords are not shown in plain text in configurations.

**Example** The following example shows the use of the **enable** command to enter the Privileged Exec mode (note the change in the command prompt).

```
awplus> enable
awplus#
```

The following example shows the **enable** command enabling access the Privileged Exec mode for users with a privilege level of 7 or greater. Users with a privilege level of 7 or greater do not need to enter a password to access Privileged Exec mode. Users with a privilege level 6 or less need to enter a password to access

Privilege Exec mode. Use the [enable password](#) command or the [enable secret](#) commands to set the password to enable access to Privileged Exec mode.

```
awplus> enable 7
```

```
awplus#
```

**Related  
Commands**

[disable \(Privileged Exec mode\)](#)

[enable password](#)

[enable secret](#)

[exit](#)

[service password-encryption](#)

[username](#)



# end

**Overview** This command returns the prompt to the Privileged Exec command mode from any other advanced command mode.

**Syntax** end

**Mode** All advanced command modes, including Global Configuration and Interface Configuration modes.

**Example** The following example shows the use of the `end` command to return to the Privileged Exec mode directly from Interface mode.

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# end
awplus#
```

**Related Commands**

- [disable \(Privileged Exec mode\)](#)
- [enable \(Privileged Exec mode\)](#)
- [exit](#)

# exit

**Overview** This command exits the current mode, and returns the prompt to the mode at the previous level. When used in User Exec mode, the **exit** command terminates the session.

**Syntax** `exit`

**Mode** All command modes, including Global Configuration and Interface Configuration modes.

**Example** The following example shows the use of `exit` command to exit Interface mode, and return to Configure mode.

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# exit
awplus(config)#
```

**Related Commands**

- [disable \(Privileged Exec mode\)](#)
- [enable \(Privileged Exec mode\)](#)
- [end](#)

# help

**Overview** This command displays a description of the AlliedWare Plus™ OS help system.

**Syntax** help

**Mode** All command modes

**Example** To display a description on how to use the system help, use the command:

```
awplus# help
```

**Output** Figure 1-1: Example output from the **help** command

```
When you need help at the command line, press '?'.

If nothing matches, the help list will be empty. Delete
characters until entering a '?' shows the available options.

Enter '?' after a complete parameter to show remaining valid
command parameters (e.g. 'show ?').

Enter '?' after part of a parameter to show parameters that
complete the typed letters (e.g. 'show ip?').
```

# logout

**Overview** This command exits the User Exec or Privileged Exec modes and ends the session.

**Syntax** `logout`

**Mode** User Exec and Privileged Exec

**Example** To exit the User Exec mode, use the command:

```
awplus# logout
```

# show history

**Overview** This command lists the commands entered in the current session. The history buffer is cleared automatically upon reboot.

The output lists all command line entries, including commands that returned an error.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show history`

**Mode** User Exec and Privileged Exec

**Example** To display the commands entered during the current session, use the command:

```
awplus# show history
```

**Output** Figure 1-2: Example output from the **show history** command

```
1 en
2 show ru
3 conf t
4 route-map er deny 3
5 exit
6 ex
7 di
```

# 2

# File Management Commands

## Introduction

This chapter provides an alphabetical reference of AlliedWare Plus™ OS file management commands.

### Filename Syntax and Keyword Usage

Many of the commands in this chapter use the placeholder “filename” to represent the name and location of the file that you want to act on. The following table explains the syntax of the filename for each different type of file location.

| When you copy a file...                 | Use this syntax:   | Example:   |
|---|--|--|
| Copying in local Flash memory           | <code>flash: [/] [&lt;directory&gt;/] &lt;filename&gt;</code>  | To specify a file in the configs directory in Flash:<br><code>flash:configs/example.cfg</code>   |
| Copying to or from a USB storage device | <code>usb: [/] [&lt;directory&gt;/] &lt;filename&gt;</code>  | To specify a file in the top-level directory of the USB stick:<br><code>usb:example.cfg</code>   |
| Copying with HTTP                       | <code>http://[ [&lt;username&gt;:&lt;password&gt;]@ ]<br/>{&lt;hostname&gt; &lt;host-ip&gt;} [/&lt;filepath&gt;<br/>&gt;] /&lt;filename&gt;</code> | To specify a file in the configs directory on the server:<br><code>http://www.company.com/configs/example.cfg</code>                                 |
| Copying with TFTP                       | <code>tftp://[ [&lt;location&gt;] /&lt;directory&gt; ]<br/>/&lt;filename&gt;</code>  | To specify a file in the top-level directory of the server:<br><code>tftp://172.1.1.1/example.cfg</code>   |
| Copying with SCP                        | <code>scp://&lt;username&gt;@&lt;location&gt; [/&lt;dir<br/>ectory&gt;] [/&lt;filename&gt;]</code>   | To specify a file in the configs directory on the server, logging on as user “bob”:<br>e.g.<br><code>scp://bob@10.10.0.12/configs/example.cfg</code> |

| When you copy a file...               | Use this syntax:  | Example:  |
|---------------------------------------|---|---|
| Copying with SFTP                     | <code>sftp://[&lt;location&gt;]/&lt;directory&gt;/&lt;filename&gt;</code>                                 | To specify a file in the top-level directory of the server:<br><code>sftp://10.0.0.5/example.cfg</code>                               |
| Copying to or from stack member Flash | <code>&lt;hostname&gt;-&lt;stack_ID&gt;/flash:[/][&lt;directory&gt;]/&lt;stack_member_filename&gt;</code> | To specify a file in the configs directory on member 2 of a stack named vcstack:<br><code>vcstack-2/flash:/configs/example.cfg</code> |

**Valid characters** The filename and path can include characters from up to four categories. The categories are:

- 1) uppercase letters: A to Z
- 2) lowercase letters: a to z
- 3) digits: 0 to 9
- 4) special symbols: all printable ASCII characters not included in the previous three categories. Including the following characters:

- -
- /
- .
- \_
- @
- "
- '
- \*
- :
- ~
- ?

Do not use spaces or parentheses within filenames. Use hyphens or underscores instead.

### Syntax for directory listings

A leading slash (/) indicates the root of the current filesystem location.

In commands where you need to specify the local filesystem's Flash base directory, you may use **flash** or **flash:** or **flash:/**. For example, these commands are all the same:

- `dir flash`
- `dir flash:`
- `dir flash:/`

Similarly, you can specify the USB storage device base directory with **usb** or **usb:** or **usb:/**

You cannot name a directory or subdirectory **flash**, **nvs**, **usb**, **card**, **tftp**, **scp**, **sftp** or **http**. These keywords are reserved for tab completion when using various file commands.

In a stacked environment you can only access `flash` and `nvs` using the stack member filepath (e.g. `dir awplus-2/flash:/`). To access a USB storage device on a backup stack member, use the [remote-login](#) command.

- Command List**
- [“autoboot enable”](#) on page 86
  - [“boot config-file”](#) on page 87
  - [“boot config-file backup”](#) on page 89
  - [“boot system”](#) on page 90
  - [“boot system backup”](#) on page 92
  - [“cd”](#) on page 93
  - [“copy \(filename\)”](#) on page 94
  - [“copy current-software”](#) on page 96
  - [“copy debug”](#) on page 97
  - [“copy running-config”](#) on page 98
  - [“copy startup-config”](#) on page 99
  - [“copy zmodem”](#) on page 100
  - [“create autoboot”](#) on page 101
  - [“delete”](#) on page 102
  - [“delete debug”](#) on page 103
  - [“dir”](#) on page 104
  - [“edit”](#) on page 106
  - [“edit \(filename\)”](#) on page 107
  - [“erase startup-config”](#) on page 108
  - [“ip tftp source-interface”](#) on page 109
  - [“ipv6 tftp source-interface”](#) on page 110
  - [“mkdir”](#) on page 111
  - [“move”](#) on page 112
  - [“move debug”](#) on page 113
  - [“pwd”](#) on page 114
  - [“rmdir”](#) on page 115
  - [“show autoboot”](#) on page 116
  - [“show boot”](#) on page 117



- [“show file”](#) on page 119
- [“show file systems”](#) on page 120
- [“show running-config”](#) on page 122
- [“show running-config access-list”](#) on page 124
- [“show running-config as-path access-list”](#) on page 125
- [“show running-config dhcp”](#) on page 126
- [“show running-config full”](#) on page 127
- [“show running-config interface”](#) on page 129
- [“show running-config ip route”](#) on page 131
- [“show running-config ipv6 access-list”](#) on page 132
- [“show running-config ipv6 route”](#) on page 133
- [“show running-config key chain”](#) on page 134
- [“show running-config lldp”](#) on page 135
- [“show running-config power-inline”](#) on page 136
- [“show running-config route-map”](#) on page 137
- [“show running-config router”](#) on page 138
- [“show running-config router-id”](#) on page 139
- [“show running-config security-password”](#) on page 140
- [“show startup-config”](#) on page 141
- [“show version”](#) on page 142
- [“write file”](#) on page 143
- [“write memory”](#) on page 144
- [“write terminal”](#) on page 145

# autoboot enable

**Overview** This command enables the device to restore a release file and/or a configuration file from external media, such as a USB storage device.

When the Autoboot feature is enabled, the device looks for a special file called `autoboot.txt` on the external media. If this file exists, the device will check the key and values in the file and recover the device with a new release file and/or configuration file from the external media. An example of a valid `autoboot.txt` file is shown in the following figure.

Figure 2-1: Example `autoboot.txt` file

```
[AlliedWare Plus]
Copy_from_external_media_enabled=yes
Boot_Release=IX5-5.4.6-0.1.rel
Boot_Config=network1.cfg
```

Use the **no** variant of this command to disable the Autoboot feature.

**NOTE:** *This command is not supported in a stacked configuration.*

**Syntax** `autoboot enable`  
`no autoboot enable`

**Default** The Autoboot feature operates the first time the device is powered up in the field, after which the feature is disabled by default.

**Mode** Global Configuration

**Example** To enable the Autoboot feature, use the command:

```
awplus# configure terminal
awplus# configure terminal
awplus(config)# no autoboot enable
```

**Related Commands** [create autoboot](#)  
[show autoboot](#)  
[show boot](#)

# boot config-file

**Overview** Use this command to set the configuration file to use during the next boot cycle.  
Use the **no** variant of this command to remove the configuration file.

**Syntax** `boot config-file <filepath-filename>`  
`no boot config-file`

| Parameter                              | Description  |
|--|--|
| <code>&lt;filepath-filename&gt;</code> | Filepath and name of a configuration file.<br>The specified configuration file must exist in the specified filesystem.<br>Valid configuration files must have a <b>.cfg</b> extension. |

**Mode** Global Configuration

**Usage** You can only specify that the configuration file is on a USB storage device if there is a backup configuration file already specified in Flash. If you attempt to set the configuration file on a USB storage device and a backup configuration file is not specified in Flash, the following error message is displayed:

```
% Backup configuration files must be stored in the flash  
filesystem
```

For an explanation of the configuration fallback order, see the [File Management Feature Overview and Configuration Guide](#).

**Examples** To run the configuration file `branch.cfg` stored on the device's Flash filesystem the next time the device boots up, use the commands:

```
awplus# configure terminal  
awplus(config)# boot config-file flash:/branch.cfg
```

To remove the configuration file `branch.cfg` stored on the device's Flash filesystem the next time the device boots up, use the commands:

```
awplus# configure terminal  
awplus(config)# no boot config-file flash:/branch.cfg
```

To run the configuration file `branch.cfg` stored on the switch's USB storage device filesystem the next time the device boots up, use the commands:

```
awplus# configure terminal  
awplus(config)# boot config-file usb:/branch.cfg
```

To remove the configuration file `branch.cfg` stored on the switch's USB storage device filesystem the next time the device boots up, use the commands:

```
awplus# configure terminal
```

```
awplus(config)# no boot config-file usb:/branch.cfg
```

**Related  
Commands**

[boot config-file backup](#)

[boot system](#)

[boot system backup](#)

[show boot](#)

# boot config-file backup

**Overview** Use this command to set a backup configuration file to use if the main configuration file cannot be accessed.

Use the **no** variant of this command to remove the backup configuration file.

**Syntax** `boot config-file backup <filepath-filename>`  
`no boot config-file backup`

| Parameter                              | Description   |
|--|---|
| <code>&lt;filepath-filename&gt;</code> | Filepath and name of a backup configuration file. Backup configuration files must be in the Flash filesystem. Valid backup configuration files must have a <b>.cfg</b> extension. |
| <code>backup</code>                    | The specified file is a backup configuration file.  |

**Mode** Global Configuration

**Usage** For an explanation of the configuration fallback order, see the [File Management Feature Overview and Configuration Guide](#).

**Examples** To set the configuration file `backup.cfg` as the backup to the main configuration file, use the commands:

```
awplus# configure terminal
awplus(config)# boot config-file backup flash:/backup.cfg
```

To remove the configuration file `backup.cfg` as the backup to the main configuration file, use the commands:

```
awplus# configure terminal
awplus(config)# no boot config-file backup flash:/backup.cfg
```

**Related Commands** [boot config-file](#)  
[boot system](#)  
[boot system backup](#)  
[show boot](#)

# boot system

**Overview** Use this command to set the release file to load during the next boot cycle.  
Use the **no** variant of this command to remove the release file as the boot file.

**Syntax** `boot system <filepath-filename>`  
`no boot system`

| Parameter                              | Description   |
|--|---|
| <code>&lt;filepath-filename&gt;</code> | Filepath and name of a release file.<br>The specified release file must exist and must be stored in the root directory of the specified filesystem.<br>Valid release files must have a <b>.rel</b> extension. |

**Mode** Global Configuration

**Usage** You can only specify that the release file is on a USB storage device if there is a backup release file already specified in Flash. If you attempt to set the release file on a USB storage device and a backup release file is not specified in Flash, the following error message is displayed:

```
% A backup boot image must be set before setting a current boot  
image on USB storage device
```

In a VCStack configuration, the stack only accepts a release file on a USB storage device if a USB storage device is inserted in all stack members and all stack members have a bootloader version that supports booting from it. If a stack member has a USB storage device removed an error message is displayed. For example, if stack member 2 does not have a USB storage device inserted the following message is displayed:

```
% Stack member 2 has no USB storage device inserted
```

**Examples** To run the release file `IX5-5.4.6-0.1.rel` stored on the device's Flash filesystem the next time the device boots up, use the commands:

```
awplus# configure terminal  
awplus(config)# boot system flash:/IX5-5.4.6-0.1.rel
```

To remove the release file `IX5-5.4.6-0.1.rel` stored on the device's Flash filesystem the next time the device boots up, use the commands:

```
awplus# configure terminal  
awplus(config)# no boot system flash:/IX5-5.4.6-0.1.rel
```

To run the release file `IX5-5.4.6-0.1.rel` stored on the switch's USB storage device filesystem the next time the device boots up, use the commands:

```
awplus# configure terminal
awplus(config)# boot system usb:/IX5-5.4.6-0.1.rel
```

To remove the release file `IX5-5.4.6-0.1.rel` stored on the switch's USB storage device filesystem the next time the device boots up, use the commands:

```
awplus# configure terminal
awplus(config)# boot system usb:/IX5-5.4.6-0.1.rel
```

In a VCStack configuration, if there is not enough space to synchronize the new release across the stack, the boot system command has an interactive mode that prompts you to delete old releases.

```
awplus# configure terminal
awplus(config)# boot system IX5-5.4.6-0.1.rel
```

```
Insufficient flash available on stack member-2 (11370496)
to synchronize file IX5-5.4.6-0.1.rel
(14821895).
```

```
List of release files on stack member-2
      IX5-5.4.6-0.1.rel (14822400)
```

```
Select files to free up space,
Delete awplus-2/flash:/IX5-5.4.6-0.1.rel
? (y/n) [n]:y
```

```
awplus(config)# y
```

```
Deleting selected files, please wait.....
Successful operation
VCS synchronizing file across the stack, please wait.....
File synchronization with stack member-2 successfully completed
[DONE]
```

## Related Commands

[boot config-file](#)  
[boot config-file backup](#)  
[boot system backup](#)  
[show boot](#)

# boot system backup

**Overview** Use this command to set a backup release file to load if the main release file cannot be loaded.

Use the **no** variant of this command to remove the backup release file as the backup boot file.

**Syntax** `boot system backup <filepath-filename>`  
`no boot system backup`

| Parameter                              | Description  |
|--|--|
| <code>&lt;filepath-filename&gt;</code> | Filepath and name of a backup release file. Backup release files must be in the Flash filesystem. Valid release files must have a <b>.rel</b> extension. |
| <code>backup</code>                    | The specified file is a backup release file.   |

**Mode** Global Configuration

**Examples** To specify the file `IX5-5.4.6-0.1.rel` as the backup to the main release file, use the commands:

```
awplus# configure terminal
awplus(config)# boot system backup flash:/IX5-5.4.6-0.1.rel
```

To remove the file `IX5-5.4.6-0.1.rel` as the backup to the main release file, use the commands:

```
awplus# configure terminal
awplus(config)# no boot system backup flash:/IX5-5.4.6-0.1.rel
```

**Related Commands** [boot config-file](#)  
[boot config-file backup](#)  
[boot system](#)  
[show boot](#)



# cd

**Overview** This command changes the current working directory.

**Syntax** `cd <directory-name>`

| Parameter                           | Description                     |
|-------------------------------------|---------------------------------|
| <code>&lt;directory-name&gt;</code> | Name and path of the directory. |

**Mode** Privileged Exec

**Example** To change to the directory called `images`, use the command:

```
awplus# cd images
```

**Related  
Commands**

- `dir`
- `pwd`
- `show file systems`

# copy (filename)

**Overview** This command copies a file. This allows you to:

- copy files from your device to a remote device
- copy files from a remote device to your device
- copy files stored on Flash memory to or from a different memory type, such as a USB storage device
- create two copies of the same file on your device

**Syntax** `copy <source-name> <destination-name>`

| Parameter                             | Description   |
|---------------------------------------|---|
| <code>&lt;source-name&gt;</code>      | The filename and path of the source file. See <a href="#">Introduction</a> on page 82 for valid syntax.       |
| <code>&lt;destination-name&gt;</code> | The filename and path for the destination file. See <a href="#">Introduction</a> on page 82 for valid syntax. |

**Mode** Privileged Exec

**Examples** To use TFTP to copy the file `bob.key` into the current directory from the remote server at `10.0.0.1`, use the command:

```
awplus# copy tftp://10.0.0.1/bob.key bob.key
```

To use SFTP to copy the file `new.cfg` into the current directory from a remote server at `10.0.1.2`, use the command:

```
awplus# copy sftp://10.0.1.2/new.cfg bob.key
```

To use SCP with the username `beth` to copy the file `old.cfg` into the directory `config_files` on a remote server that is listening on TCP port 2000, use the command:

```
awplus# copy scp://beth@serv:2000/config_files/old.cfg old.cfg
```

To copy the file `newconfig.cfg` onto your device's Flash from a USB storage device, use the command:

```
awplus# copy usb:/newconfig.cfg flash:/newconfig.cfg
```

To copy the file `newconfig.cfg` to a USB storage device from your device's Flash, use the command:

```
awplus# copy flash:/newconfig.cfg usb:/newconfig.cfg
```

To copy the file `config.cfg` into the current directory from a USB storage device, and rename it to `configtest.cfg`, use the command:

```
awplus# copy usb:/config.cfg configtest.cfg
```

To copy the file `config.cfg` into the current directory from a remote file server, and rename it to `configtest.cfg`, use the command:

```
awplus# copy fserver:/config.cfg configtest.cfg
```

To copy the file `test.txt` from the top level of Flash on stack member 2 to the current directory in the stack master, use the command:

```
awplus# copy awplus-2/flash:/test.txt test.txt
```

Note that you must specify either the NVS or Flash filesystem on the (backup) stack member (`flash:` in this example).

**Related  
Commands**

[copy zmodem](#)

[edit \(filename\)](#)

[show file systems](#)

# copy current-software

**Overview** This command copies the AlliedWare Plus™ OS software that the device has booted from, to a destination file. Specify whether the destination is Flash or USB when saving the software to the local filesystem.

**Syntax** `copy current-software <destination-name>`

| Parameter                             | Description  |
|---------------------------------------|--|
| <code>&lt;destination-name&gt;</code> | The filename and path where you would like the current running-release saved. This command creates a file if no file exists with the specified filename. If a file already exists, then the CLI prompts you before overwriting the file. See <a href="#">Introduction</a> on page 82 for valid syntax. |

**Mode** Privileged Exec

**Example** To copy the current software as installed in the working directory with the file name `my-release.rel`, use the command:

```
awplus# copy current-software my-release.rel
```

**Related Commands** [boot system backup](#)  
[show boot](#)

# copy debug

**Overview** This command copies a specified debug file to a destination file. Specify whether the destination is Flash or USB when saving the software to the local filesystem.

**Syntax** `copy debug {<destination-name>|debug|flash|nvs|scp|tftp|usb}  
{<source-name>|debug|flash|nvs|scp|tftp|usb}`

| Parameter          | Description  |
|--------------------|--|
| <destination-name> | The filename and path where you would like the debug output saved. See <a href="#">Introduction</a> on page 82 for valid syntax. |
| <source-name>      | The filename and path where the debug output originates. See <a href="#">Introduction</a> on page 82 for valid syntax.           |

**Mode** Privileged Exec

**Example** To copy debug output to a USB storage device with a filename `my-debug`, use the following command:

```
awplus# copy debug usb:my-debug
```

**Output** Figure 2-2: CLI prompt after entering the **copy debug** command

```
Enter source file name []:
```

**Related  
Commands** [delete debug](#)  
[move debug](#)

# copy running-config

**Overview** This command copies the running-config to a destination file, or copies a source file into the running-config. Commands entered in the running-config do not survive a device reboot unless they are saved in a configuration file.

**Syntax** `copy <source-name> running-config`  
`copy running-config [<destination-name>]`  
`copy running-config startup-config`

| Parameter          | Description  |
|--------------------|--|
| <source-name>      | The filename and path of a configuration file. This must be a valid configuration file with a <b>.cfg</b> filename extension. Specify this when you want the script in the file to become the new running-config. See <a href="#">Introduction</a> on page 82 for valid syntax.  |
| <destination-name> | The filename and path where you would like the current running-config saved. This command creates a file if no file exists with the specified filename. If a file already exists, then the CLI prompts you before overwriting the file. See <a href="#">Introduction</a> on page 82 for valid syntax. If you do not specify a file name, the device saves the running-config to a file called default.cfg. |
| startup-config     | Copies the running-config into the file set as the current startup-config file.  |

**Mode** Privileged Exec

**Examples** To copy the running-config into the startup-config, use the command:

```
awplus# copy running-config startup-config
```

To copy the file layer3.cfg into the running-config, use the command:

```
awplus# copy layer3.cfg running-config
```

To use SCP to copy the running-config as current.cfg to the remote server listening on TCP port 2000, use the command:

```
awplus# copy running-config  
scp://user@server:2000/config_files/current.cfg
```

**Related Commands** [copy startup-config](#)  
[write file](#)  
[write memory](#)

# copy startup-config

**Overview** This command copies the startup-config script into a destination file, or alternatively copies a configuration script from a source file into the startup-config file. Specify whether the destination is Flash or USB when loading from the local filesystem.

**Syntax** `copy <source-name> startup-config`  
`copy startup-config <destination-name>`

| Parameter                             | Description  |
|---------------------------------------|--|
| <code>&lt;source-name&gt;</code>      | The filename and path of a configuration file. This must be a valid configuration file with a <b>.cfg</b> filename extension. Specify this to copy the script in the file into the startup-config file. Note that this does not make the copied file the new startup file, so any further changes made in the configuration file are not added to the startup-config file unless you reuse this command. See <a href="#">Introduction</a> on page 82 for valid syntax. |
| <code>&lt;destination-name&gt;</code> | The destination and filename that you are saving the startup-config as. This command creates a file if no file exists with the specified filename. If a file already exists, then the CLI prompts you before overwriting the file. See <a href="#">Introduction</a> on page 82 for valid syntax.   |

**Mode** Privileged Exec

**Examples** To copy the file `Layer3.cfg` to the startup-config, use the command:

```
awplus# copy Layer3.cfg startup-config
```

To copy the startup-config as the file `oldconfig.cfg` in the current directory, use the command:

```
awplus# copy startup-config oldconfig.cfg
```

**Related Commands** [copy running-config](#)

# copy zmodem

**Overview** This command allows you to copy files using ZMODEM using Minicom. ZMODEM works over a serial connection and does not need any interfaces configured to do a file transfer.

**Syntax** `copy <source-name> zmodem`  
`copy zmodem`

| Parameter                        | Description   |
|----------------------------------|---|
| <code>&lt;source-name&gt;</code> | The filename and path of the source file. See <a href="#">Introduction</a> on page 82 for valid syntax. |

**Mode** Privileged Exec

**Example** To copy the local file `asuka.key` using ZMODEM, use the command:  
`awplus# copy asuka.key zmodem`

**Related Commands** [copy \(filename\)](#)  
[show file systems](#)



# create autoboot

**Overview** Use this command to create an `autoboot.txt` file on external media. This command will automatically ensure that the keys and values that are expected in this file are correct. After the file is created the **create autoboot** command will copy the current release and configuration files across to the external media. The external media is then available to restore a release file and/or a configuration file to the device.

**Syntax** `create autoboot [usb]`

**Mode** Privileged Exec

**Example** To create an `autoboot.txt` file on external media, use the command:

```
awplus# create autoboot usb
```

**Related  
Commands** [autoboot enable](#)  
[show autoboot](#)  
[show boot](#)

# delete

**Overview** This command deletes files or directories.

**Syntax** delete [force] [recursive] <filename>

| Parameter  | Description  |
|------------|--|
| force      | Ignore nonexistent filenames and never prompt before deletion.   |
| recursive  | Remove the contents of directories recursively.  |
| <filename> | The filename and path of the file to delete. See <a href="#">Introduction</a> on page 82 for valid syntax. |

**Mode** Privileged Exec

**Examples** To delete the file `temp.cfg` from the current directory, use the command:

```
awplus# delete temp.cfg
```

To delete the read-only file `one.cfg` from the current directory, use the command:

```
awplus# delete force one.cfg
```

To delete the directory `old_configs`, which is not empty, use the command:

```
awplus# delete recursive old_configs
```

To delete the directory `new_configs`, which is not empty, without prompting if any read-only files are being deleted, use the command:

```
awplus# delete force recursive new_configs
```

**Related Commands** [erase startup-config](#)  
[rmdir](#)

# delete debug

**Overview** Use this command to delete a specified debug output file.

**Syntax** `delete debug <source-name>`

| Parameter                        | Description  |
|----------------------------------|--|
| <code>&lt;source-name&gt;</code> | The filename and path where the debug output originates. See <a href="#">Introduction</a> on page 82 for valid URL syntax. |

**Mode** Privileged Exec

**Example** To delete debug output, use the following command:

```
awplus# delete debug
```

**Output** Figure 2-3: CLI prompt after entering the **delete debug** command

```
Enter source file name []:
```

**Related  
Commands** [copy debug](#)  
[move debug](#)

# dir

**Overview** This command lists the files on a filesystem. If no directory or file is specified then this command lists the files in the current working directory.

**Syntax** `dir [all] [recursive] [sort [reverse] [name|size|time]]  
[<filename>|debug|flash|nvs|usb]`

| Parameter  | Description  |
|------------|--|
| all        | List all files.  |
| recursive  | List the contents of directories recursively.  |
| sort       | Sort directory listing.  |
| reverse    | Sort using reverse order.  |
| name       | Sort by name.  |
| size       | Sort by size.  |
| time       | Sort by modification time (default).   |
| <filename> | The name of the directory or file. If no directory or file is specified, then this command lists the files in the current working directory. |
| debug      | Debug root directory   |
| flash      | Flash memory root directory  |
| nvs        | NVS memory root directory  |
| usb        | USB storage device root directory  |

**Mode** Privileged Exec

**Usage** In a stacked environment you can use the CLI on a stack master to access filesystems that are located on another stack member. The syntax is `<hostname>-<stack_ID>/flash:[/] [<directory>/] <stack_member_filename>`. For example, to specify a file in the configs directory on member 2 of a stack, enter:

```
awplus-2/flash:/configs/example.cfg
```

**Examples** To list the files in the current working directory, use the command:

```
awplus# dir
```

To list the non-hidden files in the root of the Flash filesystem, use the command:

```
awplus# dir flash
```

To list all the files in the root of the Flash filesystem, use the command:

```
awplus# dir all flash:
```

To list recursively the files in the Flash filesystem, use the command:

```
awplus# dir recursive flash:
```

To list the files in alphabetical order, use the command:

```
awplus# dir sort name
```

To list the files by size, smallest to largest, use the command:

```
awplus# dir sort reverse size
```

To sort the files by modification time, oldest to newest, use the command:

```
awplus# dir sort reverse time
```

To list the files within the Flash filesystem for stack member 2, use the command:

```
awplus# dir awplus-2/flash:/
```

Note that you must specify the filesystem on the stack member (`flash` in this example).

**Related  
Commands**

`cd`  
`pwd`

# edit

**Overview** This command opens a text file in the AlliedWare Plus™ text editor. Once opened you can use the editor to alter to the file.

If a filename is specified and it already exists, then the editor opens it in the text editor.

If no filename is specified, the editor prompts you for one when you exit it.

Before starting the editor make sure your terminal, terminal emulation program, or Telnet client is 100% compatible with a VT100 terminal. The editor uses VT100 control sequences to display text on the terminal.

For more information about using the editor, including control sequences, see the [File Management Feature Overview and Configuration Guide](#).

**Syntax** `edit [<filename>]`

| Parameter                     | Description                                   |
|-------------------------------|---|
| <code>&lt;filename&gt;</code> | Name of a file in the local Flash filesystem. |

**Mode** Privileged Exec

**Examples** To create and edit a new text file, use the command:

```
awplus# edit
```

To edit the existing configuration file `myconfig.cfg` stored on your device's Flash memory, use the command:

```
awplus# edit myconfig.cfg
```

**Related Commands** [edit \(filename\)](#)  
[show file](#)

# edit (filename)

**Overview** This command opens a remote text file as read-only in the AlliedWare Plus™ text editor.

Before starting the editor make sure your terminal, terminal emulation program, or Telnet client is 100% compatible with a VT100 terminal. The editor uses VT100 control sequences to display text on the terminal.

**Syntax** `edit <filename>`

| Parameter                     | Description   |
|-------------------------------|---|
| <code>&lt;filename&gt;</code> | The filename and path of the remote file. See <a href="#">Introduction</a> on page 82 for valid syntax. |

**Mode** Privileged Exec

**Example** To view the file `bob.key` stored in the security directory of a TFTP server, use the command:

```
awplus# edit tftp://security/bob.key
```

**Related Commands**

- [copy \(filename\)](#)
- [edit](#)
- [show file](#)

# erase startup-config

**Overview** This command deletes the file that is set as the startup-config file, which is the configuration file that the system runs when it boots up.

At the next restart, the device loads the default configuration file, default.cfg. If default.cfg no longer exists, then the device loads with the factory default configuration. This provides a mechanism for you to return the device to the factory default settings.

**Syntax** `erase startup-config`

**Mode** Privileged Exec

**Example** To delete the file currently set as the startup-config, use the command:

```
awplus# erase startup-config
```

**Related Commands**

- [boot config-file backup](#)
- [copy running-config](#)
- [copy startup-config](#)
- [show boot](#)



# ip tftp source-interface

**Overview** Use this command to manually specify the IP address that all TFTP requests originate from. This is useful in network configurations where TFTP servers only accept requests from certain devices, or where the server cannot dynamically determine the source of the request.

Use the **no** variant of this command to stop specifying a source.

**Syntax** `ip tftp source-interface [<interface>|<ip-add>]`  
`no ip tftp source-interface`

| Parameter   | Description  |
|-------------|--|
| <interface> | The VLAN that TFTP requests originate from. The device will use the IP address of this interface as its source IP address. |
| <ip-add>    | The IP address that TFTP requests originate from, in dotted decimal format   |

**Default** There is no default source specified.

**Mode** Global Configuration

**Usage** This command is helpful in network configurations where TFTP traffic needs to traverse point-to-point links or subnets within your network, and you do not want to propagate those point-to-point links through your routing tables.

In those circumstances, the TFTP server cannot dynamically determine the source of the TFTP request, and therefore cannot send the requested data to the correct device. Specifying a source interface or address enables the TFTP server to send the data correctly.

**Example** To specify that TFTP requests originate from the IP address 192.0.2.1, use the following commands:

```
awplus# configure terminal
awplus(config)# ip tftp source-interface 192.0.2.1
```

**Related Commands** [copy \(filename\)](#)

# ipv6 tftp source-interface

**Overview** Use this command to manually specify the IPv6 address that all TFTP requests originate from. This is useful in network configurations where TFTP servers only accept requests from certain devices, or where the server cannot dynamically determine the source of the request.

Use the **no** variant of this command to stop specifying a source.

**Syntax** `ipv6 tftp source-interface [<interface>|<ipv6-add>]`  
`no ipv6 tftp source-interface`

| Parameter   | Description  |
|-------------|--|
| <interface> | The VLAN that TFTP requests originate from. The device will use the IPv6 address of this interface as its source IPv6 address. |
| <ipv6-add>  | The IPv6 address that TFTP requests originate from, in the format x:x::x, for example, 2001:db8::8a2e:7334.                    |

**Default** There is no default source specified.

**Mode** Global Configuration

**Usage** This command is helpful in network configurations where TFTP traffic needs to traverse point-to-point links or subnets within your network, and you do not want to propagate those point-to-point links through your routing tables.

In those circumstances, the TFTP server cannot dynamically determine the source of the TFTP request, and therefore cannot send the requested data to the correct device. Specifying a source interface or address enables the TFTP server to send the data correctly.

**Example** To specify that TFTP requests originate from the IPv6 address 2001:db8::8a2e:7334, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 tftp source-interface 2001:db8::8a2e:7334
```

**Related Commands** [copy \(filename\)](#)

# mkdir

**Overview** This command makes a new directory.

**Syntax** `mkdir <name>`

| Parameter                 | Description   |
|---------------------------|---|
| <code>&lt;name&gt;</code> | The name and path of the directory that you are creating. |

**Mode** Privileged Exec

**Usage** You cannot name a directory or subdirectory **flash**, **nvs**, **usb**, **card**, **tftp**, **scp**, **sftp** or **http**. These keywords are reserved for tab completion when using various file commands.

**Example** To make a new directory called `images` in the current directory, use the command:

```
awplus# mkdir images
```

**Related  
Commands** `cd`  
`dir`  
`pwd`

# move

**Overview** This command renames or moves a file.

**Syntax** `move <source-name> <destination-name>`

| Parameter                             | Description  |
|---------------------------------------|--|
| <code>&lt;source-name&gt;</code>      | The filename and path of the source file. See <a href="#">Introduction</a> on page 82 for valid syntax.      |
| <code>&lt;destination-name&gt;</code> | The filename and path of the destination file. See <a href="#">Introduction</a> on page 82 for valid syntax. |

**Mode** Privileged Exec

**Examples** To rename the file `temp.cfg` to `startup.cfg`, use the command:

```
awplus# move temp.cfg startup.cfg
```

To move the file `temp.cfg` from the root of the Flash filesystem to the directory `myconfigs`, use the command:

```
awplus# move temp.cfg myconfigs/temp.cfg
```

**Related Commands**

- [delete](#)
- [edit](#)
- [show file](#)
- [show file systems](#)

# move debug

**Overview** This command moves a specified debug file to a destination debug file.

**Syntax** `move debug {<destination-name>|debug|flash|nvs|usb}  
{<source-name>|debug|flash|nvs|usb}`

| Parameter                             | Description   |
|---------------------------------------|---|
| <code>&lt;destination-name&gt;</code> | The filename and path where you would like the debug output moved to. See <a href="#">Introduction</a> on page 82 for valid syntax. |
| <code>&lt;source-name&gt;</code>      | The filename and path where the debug output originates. See <a href="#">Introduction</a> on page 82 for valid syntax.              |

**Mode** Privileged Exec

**Example** To move debug output onto a USB storage device with a filename `my-debug`, use the following command:

```
awplus# move debug usb:my-debug
```

**Output** Figure 2-4: CLI prompt after entering the **move debug** command

```
Enter source file name []:
```

**Related  
Commands** [copy debug](#)  
[delete debug](#)

# pwd

**Overview** This command prints the current working directory.

**Syntax** `pwd`

**Mode** Privileged Exec

**Example** To print the current working directory, use the command:

```
awplus# pwd
```

**Related  
Commands** `cd`

# rmdir

**Overview** This command removes a directory. This command only works on empty directories, unless you specify the optional **force** keyword.

**Syntax** `rmdir [force] <name>`

| Parameter                 | Description  |
|---------------------------|--|
| <code>force</code>        | Optional keyword that allows you to delete directories that are not empty and contain files or subdirectories. |
| <code>&lt;name&gt;</code> | The name and path of the directory.  |

**Mode** Privileged Exec

**Usage** In a stacked environment you can use the CLI on a stack master to access filesystems that are located on another stack member. See the [Introduction](#) on page 82 for syntax details.

**Examples** To remove the directory `images` from the top level of the Flash filesystem, use the command:

```
awplus# rmdir flash:/images
```

To create a directory called `level1` containing a subdirectory called `level2`, and then force the removal of both directories, use the commands:

```
awplus# mkdir level1
awplus# mkdir level1/level2
awplus# rmdir force level1
```

To remove a directory called `test` from the top level of the Flash filesystem, in stack member 3, use the command:

```
awplus# rmdir awplus-3/flash:/test
```

Note that you must specify the filesystem, ("flash:" in this example).

**Related Commands**

- [cd](#)
- [dir](#)
- [mkdir](#)
- [pwd](#)

# show autoboot

**Overview** This command displays the Autoboot configuration and status.

**Syntax** show autoboot

**Mode** Privileged Exec

**Example** To show the Autoboot configuration and status, use the command:

```
awplus# show autoboot
```

**Output** Figure 2-5: Example output from the **show autoboot** command

```
awplus#show autoboot
Autoboot configuration
-----
Autoboot status           : enabled
USB file autoboot.txt exists : yes

Restore information on USB
Autoboot enable in autoboot.txt : yes
Restore release file       : IX5-5.4.6-0.1.rel
(file exists)
Restore configuration file  : network_1.cfg (file exists)
```

Figure 2-6: Example output from the **show autoboot** command when an external media source is not present

```
awplus#show autoboot
Autoboot configuration
-----
Autoboot status           : enabled
External media source     : USB not found.
```

**Related Commands**

- [autoboot enable](#)
- [create autoboot](#)
- [show boot](#)



# show boot

**Overview** This command displays the current boot configuration. We recommend that the currently running release is set as the current boot image.

**Syntax** show boot

**Mode** Privileged Exec

**Example** To show the current boot configuration, use the command:

```
awplus# show boot
```

**Output** Figure 2-7: Example output from the **show boot** command when the current boot config is on a USB storage device

```
awplus#show boot
Boot configuration
-----
Current software   : IX5-5.4.6-0.1.rel
Current boot image : usb:/IX5-5.4.6-0.1.rel
Backup boot image  : flash:/IX5-5.4.5-2.1.rel
Default boot config: flash:/default.cfg
Current boot config: usb:/my.cfg (file exists)
Backup boot config: flash:/backup.cfg (file not found)
Autoboot status    : enabled
```

**Table 1:** Parameters in the output of the **show boot** command

| Parameter           | Description  |
|---------------------|--|
| Current software    | The current software release that the device is using.   |
| Current boot image  | The boot image currently configured for use during the next boot cycle.  |
| Backup boot image   | The boot image to use during the next boot cycle if the device cannot load the main image.   |
| Default boot config | The default startup configuration file. The device loads this configuration script if no file is set as the startup-config file.                                 |
| Current boot config | The configuration file currently configured as the startup-config file. The device loads this configuration file during the next boot cycle if this file exists. |

**Table 1:** Parameters in the output of the **show boot** command (cont.)

| Parameter          | Description   |
|--------------------|---|
| Backup boot config | The configuration file to use during the next boot cycle if the main configuration file cannot be loaded. |
| Autoboot status    | The status of the Autoboot feature; either enabled or disabled.   |

**Related  
Commands**

[autoboot enable](#)  
[boot config-file backup](#)  
[boot system backup](#)  
[show autoboot](#)

# show file

**Overview** This command displays the contents of a specified file.

**Syntax** `show file <filename>`

| Parameter                     | Description   |
|-------------------------------|---|
| <code>&lt;filename&gt;</code> | Name of a file on the local Flash filesystem, or name and directory path of a file. |

**Mode** Privileged Exec

**Example** To display the contents of the file `oldconfig.cfg`, which is in the current directory, use the command:

```
awplus# show file oldconfig.cfg
```

**Related  
Commands**

- [edit](#)
- [edit \(filename\)](#)
- [show file systems](#)

# show file systems

**Overview** This command lists the filesystems and their utilization information where appropriate.

If this command is entered on the stack master, it will list the filesystems for all the stack members. A stack member heading is displayed to distinguish the different lists shown for each stack member.

**Syntax** show file systems

**Mode** Privileged Exec

**Examples** To display the filesystems for either a standalone device, or a complete stack, use the command:

```
awplus# show file systems
```

**Output** Figure 2-8: Example output from the **show file systems** command

| awplus#show file systems |          |          |       |          |         |          |       |
|--------------------------|----------|----------|-------|----------|---------|----------|-------|
| Size (b)                 | Free (b) | Type     | Flags | Prefixes | S/D/V   | Lcl/Ntwk | Avail |
| 63.0M                    | 29.4M    | flash    | rw    | flash:   | static  | local    | Y     |
| -                        | -        | system   | rw    | system:  | virtual | local    | -     |
| 10.0M                    | 9.9M     | debug    | rw    | debug:   | static  | local    | Y     |
| 499.0K                   | 404.0K   | nvs      | rw    | nvs:     | static  | local    | Y     |
| -                        | -        | usbstick | rw    | usb:     | dynamic | local    | N     |
| -                        | -        | tftp     | rw    | tftp:    | -       | network  | -     |
| -                        | -        | scp      | rw    | scp:     | -       | network  | -     |
| -                        | -        | sftp     | ro    | sftp:    | -       | network  | -     |
| -                        | -        | http     | ro    | http:    | -       | network  | -     |
| -                        | -        | rsync    | rw    | rsync:   | -       | network  | -     |

**Table 2:** Parameters in the output of the **show file systems** command

| Parameter             | Description  |
|-----------------------|--|
| Size (B)<br>Available | The total memory available to this filesystem. The units are given after the value and are M for Megabytes or k for kilobytes. |
| Free (B)              | The total memory free within this filesystem. The units are given after the value and are M for Megabytes or k for kilobytes.  |

**Table 2:** Parameters in the output of the **show file systems** command (cont.)

| Parameter  | Description  |
|------------|--|
| Type       | The memory type used for this filesystem; one of:<br>flash<br>system<br>nvs<br>usbstick<br>tftp<br>scp<br>sftp<br>http.                      |
| Flags      | The file setting options: rw (read write), ro (read only).   |
| Prefixes   | The prefixes used when entering commands to access the filesystems; one of:<br>flash<br>system<br>nvs<br>usb<br>tftp<br>scp<br>sftp<br>http. |
| S/V/D      | The memory type: static, virtual, dynamic.   |
| Lcl / Ntwk | Whether the memory is located locally or via a network connection.   |
| Avail      | Whether the memory is accessible: Y (yes), N (no), - (not applicable)  |

**Related  
Commands**

- [edit](#)
- [edit \(filename\)](#)
- [show file](#)

# show running-config

**Overview** This command displays the current configuration of your device. Its output includes all non-default configuration. The default settings are not displayed.

You can control the output in the following ways:

- To display only lines that contain a particular word, enter the following parameters after the command:  
`| include <word>`
- To start the display at the first line that contains a particular word, enter the following parameters after the command:  
`| begin <word>`
- To save the output to a file, enter the following parameters after the command:  
`> <filename>`

**Syntax** `show running-config`

**Mode** Privileged Exec and Global Configuration

**Example** To display the current configuration of your device, use the command:

```
awplus# show running-config
```

**Output** Figure 2-9: Example output from the **show running-config** command

```
awplus#show running-config
!
service password-encryption
!
hostname MyNode
!
no banner motd
!
username manager privilege 15 password 8 $1$bJoVec4D$JwOJGPr7YqoExA0GVasdE0
!
no service ssh
!
autoboot enable
!
service telnet
!
service http
!
no clock timezone
!
snmp-server
snmp-server contact Documentation Area
snmp-server location New Zealand
```

```
!  
aaa authentication enable default local  
aaa authentication login default local  
!  
ip domain-lookup  
!  
no service dhcp-server  
!  
no ip multicast-routing  
!  
spanning-tree mode rstp  
!  
switch 1 provision IX5-28  
!  
vlan database  
  vlan 2-15 state enable  
!  
interface port1.0.1-1.0.6  
  switchport  
  switchport mode access  
!  
interface port1.0.25-1.0.26  
  switchport  
  switchport mode access  
  switchport access vlan 14  
!  
interface vlan1  
  ip address 192.168.1.1/24  
  ipv6 enable  
  ipv6 mld  
!  
interface vlan12  
  ip address 192.168.3.1/24!  
ipv6 forwarding  
!  
line con 0  
line vty 0 4  
!  
end
```

**Related** [copy running-config](#)  
**Commands**

# show running-config access-list

**Overview** Use this command to show the running system status and configuration details for access-list.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show running-config access-list

**Mode** Privileged Exec and Global Configuration

**Example** To display the running system status and configuration details for access-list, use the command:

```
awplus# show running-config access-list
```

**Output** Figure 2-10: Example output from the **show running-config access-list** command

```
!  
access-list abc remark annai  
access-list abc deny any  
access-list abd deny any  
!
```

**Related Commands** [copy running-config](#)  
[show running-config](#)



# show running-config as-path access-list

**Overview** Use this command to show the running system status and configuration details for as-path access-list.

**Syntax** `show running-config as-path access-list`

**Mode** Privileged Exec and Global Configuration

**Example** To display the running system status and configuration details for as-path access-list, use the command:

```
awplus# show running-config as-path access-list
```

**Output** Figure 2-11: Example output from the **show running-config as-path access-list** command

```
!  
ip as-path access-list wer permit knsmk  
!
```

**Related  
Commands** [copy running-config](#)  
[show running-config](#)

# show running-config dhcp

**Overview** Use this command to display the running configuration for DHCP server, DHCP snooping, and DHCP relay.

**Syntax** `show running-config dhcp`

**Mode** Privileged Exec and Global Configuration

**Example** To display to display the running configuration for DHCP server, DHCP snooping, and DHCP relay:

```
awplus# show running-config dhcp
```

**Output** Figure 2-12: Example output from the **show running-config dhcp** command

```
awplus#show running-config dhcp
no service dhcp-server
!
service dhcp-snooping
!
interface port1.0.1
 ip dhcp snooping trust
!
interface port1.0.3
 ip dhcp snooping max-bindings 25
 access-group dhcpsnooping
interface port1.0.4
 ip dhcp snooping max-bindings 25
 access-group dhcpsnooping
!
interface pol
 ip dhcp snooping max-bindings 25
 arp security violation log
!
interface sa1
 ip dhcp snooping max-bindings 25
 access-group dhcpsnooping
 arp security violation log
!
interface vlan100
 ip dhcp snooping
 arp security
!
interface vlan200
 ip dhcp snooping
 arp security
!
```

**Related Commands** [copy running-config](#)  
[show running-config](#)

# show running-config full

**Overview** Use this command to show the complete status and configuration of the running system.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show running-config full`

**Mode** Privileged Exec and Global Configuration

**Example** To display the complete status and configuration of the running system, use the command:

```
awplus# show running-config full
```

**Output** Figure 2-13: Example output from the **show running-config full** command

```
awplus#show running-config full
!
service password-encryption
!
hostname MyNode
!
no banner motd
!
username manager privilege 15 password 8 $1$bJoVec4D$JwOJGPr7YqoExA0GVasdE0
!
no service ssh
!
autoboot enable
!
service telnet
!
service http
!
no clock timezone
!
snmp-server
snmp-server contact Documentation Area
snmp-server location New Zealand
```

```
!  
aaa authentication enable default local  
aaa authentication login default local  
!  
ip domain-lookup  
!  
no service dhcp-server  
!  
no ip multicast-routing  
!  
spanning-tree mode rstp  
!  
switch 1 provision IX5-28  
!  
vlan database  
  vlan 2-15 state enable  
!  
interface port1.0.1-1.0.6  
  switchport  
  switchport mode access  
!  
interface port1.0.25-1.0.26  
  switchport  
  switchport mode access  
  switchport access vlan 14  
!  
interface vlan1  
  ip address 192.168.1.1/24  
  ipv6 enable  
  ipv6 mld  
!  
interface vlan12  
  ip address 192.168.3.1/24!  
ipv6 forwarding  
!  
line con 0  
line vty 0 4  
!  
end
```

**Related  
Commands**   [copy running-config](#)  
                  [show running-config](#)

# show running-config interface

**Overview** This command displays the current configuration of one or more interfaces on the device.

**Syntax** `show running-config interface [<interface-list>] [dot1x|ip igmp|lacp|mstp|rstp|stp]`

| Parameter        | Description   |
|------------------|---|
| <interface-list> | The interfaces or ports to display information about. An interface-list can be: <ul style="list-style-type: none"><li>a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen, e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.4</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>a comma-separated list of the above, e.g. <code>port1.0.1,port1.0.4-1.0.6</code>. Do not mix interface types in a list</li></ul> The specified interfaces must exist. |
| dot1x            | Displays running configuration for 802.1X port authentication for the specified interfaces.   |
| lacp             | Displays running configuration for LACP (Link Aggregation Control Protocol) for the specified interfaces.   |
| ip igmp          | Displays running configuration for IGMP (Internet Group Management Protocol) for the specified interfaces.  |
| ip multicast     | Displays running configuration for general multicast settings for the specified interfaces.   |
| mstp             | Displays running configuration for MSTP (Multiple Spanning Tree Protocol) for the specified interfaces.   |
| rstp             | Displays running configuration for RSTP (Rapid Spanning Tree Protocol) for the specified interfaces.  |
| stp              | Displays running configuration for STP (Spanning Tree Protocol) for the specified interfaces.   |

**Mode** Privileged Exec and Global Configuration

**Examples** To display the current running configuration of your device for ports 1 to 4, use the command:

```
awplus# show running-config interface port1.0.1-port1.0.4
```

To display the current running configuration of a device for VLAN 1, use the command:

```
awplus# show running-config interface vlan1
```

To display the current running configuration of a device for VLANs 1 and 3-5, use the command:

```
awplus# show running-config interface vlan1,vlan3-vlan5
```

**Output** Figure 2-14: Example output from a **show running-config interface port1.0.2** command

```
awplus#sh running-config interface port1.0.2
!  
interface port1.0.2  
  switchport  
  switchport mode access  
!
```

Figure 2-15: Example output from the **show running-config interface** command

```
awplus#show running-config interface  
interface port1.0.1-1.0.6  
  switchport  
  switchport mode access  
!  
interface port1.0.25-1.0.26  
  switchport  
  switchport mode access  
  switchport access vlan 14  
!  
interface port1.0.27-1.0.28  
  switchport  
  switchport mode access  
  switchport access vlan 15  
!  
interface vlan1  
  ip address 192.168.1.1/24  
  ipv6 enable  
  ipv6 mld  
!  
interface vlan12  
  ip address 192.168.3.1/24  
!  
interface vlan13  
  ip address 192.168.2.1/24
```

**Related  
Commands** [copy running-config](#)  
[show running-config](#)

# show running-config ip route

**Overview** Use this command to show the running system static IPv4 route configuration.

For information on filtering and saving command output, see “Controlling “show” Command Output” of the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show running-config ip route`

**Mode** Privileged Exec and Global Configuration

**Example** To display the running system static IPv4 route configuration, use the command:

```
awplus# show running-config ip route
```

**Output** Figure 2-16: Example output from the **show running-config ip route** command

```
!  
ip route 3.3.3.3/32 vlan3  
ip route 3.3.3.3/32 vlan2  
!
```

**Related  
Commands** [copy running-config](#)  
[show running-config](#)

# show running-config ipv6 access-list

**Overview** Use this command to show the running system status and configuration for IPv6 ACLs.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show running-config ipv6 access-list`

**Mode** Privileged Exec and Global Configuration

**Example** To display the running system status and configuration for IPv6 ACLs, use the command:

```
awplus# show running-config ipv6 access-list
```

**Output** Figure 2-17: Example output from the **show running-config ipv6 access-list** command

```
!  
ipv6 access-list abc permit any  
!
```

**Related Commands** [copy running-config](#)  
[show running-config](#)



# show running-config ipv6 route

**Overview** Use this command to show the running system static IPv6 route configuration.

For information on filtering and saving command output, see “Controlling “show” Command Output” of the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show running-config ipv6 route`

**Mode** Privileged Exec and Global Configuration

**Example** To display the running system static IPv6 route configuration, use the command:

```
awplus# show running-config ipv6 route
```

**Output** Figure 2-18: Example output from the **show running-config ipv6 route** command

```
!  
ipv6 route 3e11::/64 lo  
ipv6 route 3e11::/64 vlan2  
ipv6 route fe80::/64 vlan3  
!
```

**Related Commands** [copy running-config](#)  
[show running-config](#)

# show running-config key chain

**Overview** Use this command to show the running system key-chain related configuration.

**Syntax** `show running-config key chain`

**Mode** Privileged Exec and Global Configuration

**Example** To display the running system key-chain related configuration, use the command:

```
awplus# show running-config key chain
```

**Output** Figure 2-19: Example output from the **show running-config key chain** command

```
!  
key chain 12  
key 2  
key-string 234  
!  
key chain 123  
key 3  
key-string 345  
!
```

**Related  
Commands** [copy running-config](#)  
[show running-config](#)

# show running-config lldp

**Overview** This command shows the current running configuration of LLDP.

**Syntax** `show running-config lldp`

**Mode** Privileged Exec and Global Configuration

**Example** To display the current configuration of LLDP, use the command:

```
awplus# show running-config lldp
```

**Output** Figure 2-20: Example output from the **show running-config lldp** command

```
awplus#show running-config lldp

lldp notification-interval 10
lldp timer 20
!
interface port1.0.1
  lldp notifications
  lldp tlv-select port-description
  lldp tlv-select system-name
  lldp tlv-select system-description
  lldp tlv-select management-address
  lldp transmit receive
```

**Related  
Commands** [show lldp](#)  
[show lldp interface](#)

# show running-config power-inline

**Overview** Use this command to show the Power over Ethernet (PoE) running system status and configuration details. The PoE usage-threshold percentage as specified by the [power-inline usage-threshold](#) command is displayed in the **running-config** using this command.

**Syntax** `show running-config power-inline`

**Mode** Privileged Exec and Global Configuration

**Example** To display the PoE running system status and configuration details, use the command:

```
awplus# show running-config power-inline
```

**Output** Figure 2-21: Example output from the **show running-config power-inline** command

```
!  
power-inline usage-threshold 90  
!
```

**Related Commands** [power-inline usage-threshold](#)  
[show power-inline](#)

# show running-config route-map

**Overview** Use this command to show the running system status and configuration details for route-map.

For information on filtering and saving command output, see “Controlling “show” Command Output” of the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show running-config route-map

**Mode** Privileged Exec and Global Configuration

**Example** To display the running system status and configuration details for route-map, use the command:

```
awplus# show running-config route-map
```

**Output** Figure 2-22: Example output from the **show running-config route-map** command

```
!  
route-map abc deny 2  
match community 2  
!  
route-map abc permit 3  
match route-type external type-2  
set metric-type type-1  
!
```

**Related Commands** [copy running-config](#)  
[show running-config](#)

# show running-config router

**Overview** Use the show running-config router command to display the current running configuration for a given router.

**Syntax** show running-config router <protocol>

| Parameter  | Description                                |
|------------|--|
| <protocol> | ospf   rip   ipv6 rip   vrrp               |
| ospf       | Open Shortest Path First (OSPF)            |
| rip        | Routing Information Protocol (RIP)         |
| ipv6 rip   | IPv6 RIP                                   |
| vrrp       | Virtual Redundancy Routing Protocol (VRRP) |

**Mode** Privileged Exec and Global Configuration

**Example** To display the current running configuration for a given router, use the command:

```
awplus# show running-config router ospf
```

**Output** Figure 2-23: Example output from the **show running-config router** command

```
!  
router ospf  
 network 192.168.1.0/24 area 0.0.0.0  
 network 192.168.3.0/24 area 0.0.0.0  
!
```

**Related  
Commands** [copy running-config](#)  
[show running-config](#)

# show running-config router-id

**Overview** Use this command to show the running system global router ID configuration.

**Syntax** `show running-config router-id`

**Mode** Privileged Exec and Global Configuration

**Example** To display the running system global router ID configuration, use the command:

```
awplus# show running-config router-id
```

**Output** Figure 2-24: Example output from the **show running-config router-id** command

```
!  
router-id 3.3.3.3  
!
```

**Related Commands** [copy running-config](#)  
[show running-config](#)

# show running-config security-password

**Overview** This command displays the configuration settings for the various security-password rules. If a default parameter is used for a security-password rule, therefore disabling that rule, no output is displayed for that feature.

**Syntax** `show running-config security-password`

**Mode** Privileged Exec and Global Configuration

**Example** To display the current security-password rule settings in the running-config, use the command:

```
awplus# show running-config security-password
```

**Output** Figure 2-25: Example output from the **show running-config security-password** command

```
security-password minimum-length 8
security-password minimum-categories 3
security-password history 4
security-password lifetime 30
security-password warning 3
security-password forced-change
```

**Related Commands** [show security-password configuration](#)  
[show security-password user](#)



# show startup-config

**Overview** This command displays the contents of the start-up configuration file, which is the file that the device runs on start-up.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show startup-config

**Mode** Privileged Exec

**Example** To display the contents of the current start-up configuration file, use the command:

```
awplus# show startup-config
```

**Output** Figure 2-26: Example output from the **show startup-config** command

```
awplus#show startup-config
!
service password-encryption
!
username manager privilege 15 password 8 $1$bJoVec4D$JwOJGPr7YqoExA0GVasdE0
!
no service ssh
!
service telnet
!
service http
!
no clock timezone
.
.
.
line con 0
line vty 0 4
!
end
```

**Related Commands**

- [boot config-file backup](#)
- [copy running-config](#)
- [copy startup-config](#)
- [erase startup-config](#)
- [show boot](#)

# show version

**Overview** This command displays the version number and copyright details of the current AlliedWare Plus™ OS your device is running.

**Syntax** `show version`

**Mode** User Exec and Privileged Exec

**Example** To display the version details of your currently installed software, use the command:

```
awplus# show version
```

**Related Commands** [boot system backup](#)  
[show boot](#)

# write file

**Overview** This command copies the running-config into the file that is set as the current startup-config file. This command is a synonym of the **write memory** and **copy running-config startup-config** commands.

**Syntax** write [file]

**Mode** Privileged Exec

**Example** To write configuration data to the start-up configuration file, use the command:

```
awplus# write file
```

**Related Commands**

- [copy running-config](#)
- [write memory](#)
- [show running-config](#)

# write memory

**Overview** This command copies the running-config into the file that is set as the current startup-config file. This command is a synonym of the **write file** and **copy running-config startup-config** commands.

**Syntax** write [memory]

**Mode** Privileged Exec

**Example** To write configuration data to the start-up configuration file, use the command:

```
awplus# write memory
```

**Related Commands**

- [copy running-config](#)
- [write file](#)
- [show running-config](#)

# write terminal

**Overview** This command displays the current configuration of the device. This command is a synonym of the [show running-config](#) command.

**Syntax** `write terminal`

**Mode** Privileged Exec

**Example** To display the current configuration of your device, use the command:

```
awplus# write terminal
```

**Related  
Commands** [show running-config](#)

# 3

# User Access Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure user access.

- Command List**
- “clear line console” on page 148
  - “clear line vty” on page 149
  - “enable password” on page 150
  - “enable secret” on page 153
  - “exec-timeout” on page 156
  - “flowcontrol hardware (asyn/console)” on page 158
  - “length (asyn)” on page 160
  - “line” on page 161
  - “privilege level” on page 163
  - “security-password history” on page 164
  - “security-password forced-change” on page 165
  - “security-password lifetime” on page 166
  - “security-password minimum-categories” on page 167
  - “security-password minimum-length” on page 168
  - “security-password reject-expired-pwd” on page 169
  - “security-password warning” on page 170
  - “service advanced-vty” on page 171
  - “service password-encryption” on page 172
  - “service telnet” on page 173
  - “service terminal-length (deleted)” on page 174

- ["show privilege"](#) on page 175
- ["show security-password configuration"](#) on page 176
- ["show security-password user"](#) on page 177
- ["show telnet"](#) on page 178
- ["show users"](#) on page 179
- ["telnet"](#) on page 180
- ["telnet server"](#) on page 181
- ["terminal length"](#) on page 182
- ["terminal resize"](#) on page 183
- ["username"](#) on page 184

# clear line console

**Overview** This command resets a console line. If a terminal session exists on the line then the terminal session is terminated. If console line settings have changed then the new settings are applied.

**Syntax** `clear line console 0`

**Mode** Privileged Exec

**Example** To reset the console line (asyn), use the command:

```
awplus# clear line console 0
awplus# % The new settings for console line 0 have been applied
```

**Related Commands**

- [clear line vty](#)
- [flowcontrol hardware \(asyn/console\)](#)
- [line](#)
- [show users](#)



# clear line vty

**Overview** This command resets a VTY line. If a session exists on the line then it is closed.

**Syntax** `clear line vty <0-32>`

| Parameter | Description |
|-----------|-------------|
| <0-32>    | Line number |

**Mode** Privileged Exec

**Example** To reset the first vty line, use the command:

```
awplus# clear line vty 1
```

**Related  
Commands**

- [privilege level](#)
- [line](#)
- [show telnet](#)
- [show users](#)

# enable password

**Overview** To set a local password to control access to various privilege levels, use the [enable password](#) Global Configuration command. Use the [enable password](#) command to modify or create a password to be used, and use the [no enable password](#) command to remove the password.

Note that the [enable secret](#) command is an alias for the [enable password](#) command, and the [no enable secret](#) command is an alias for the [no enable password](#) command. Issuing a [no enable password](#) command removes a password configured with the [enable secret](#) command. The [enable password](#) command is shown in the running and startup configurations. Note that if the [enable secret](#) command is entered then [enable password](#) is shown in the configuration.

**NOTE:** Do not use encrypted passwords for GUI users. The GUI requires unencrypted user passwords only - not encrypted user passwords. Do not use option 8 for GUI users.

**Syntax** `enable password [<plain>|8 <hidden>|level <1-15> 8 <hidden>]`  
`no enable password [level <1-15>]`

| Parameter | Description   |
|-----------|---|
| <plain>   | Specifies the unencrypted password.   |
| 8         | Specifies a hidden password will follow.  |
| <hidden>  | Specifies the hidden encrypted password. Use an encrypted password for better security where a password crosses the network or is stored on a TFTP server.  |
| level     | Privilege level <1-15>. Level for which the password applies. You can specify up to 16 privilege levels, using numbers 1 through 15. Level 1 is normal EXEC-mode user privileges for User Exec mode. If this argument is not specified in the command or the <b>no</b> variant of the command, the privilege level defaults to 15 (enable mode privileges) for Privileged Exec mode. A privilege level of 7 can be set for intermediate CLI security. |

**Default** The privilege level for enable password is level 15 by default. Previously the default was level 1.

**Mode** Global Configuration

**Usage** This command enables the Network Administrator to set a password for entering the Privileged Exec mode when using the [enable \(Privileged Exec mode\)](#) command. There are three methods to enable a password. In the examples below, for each method, note that the configuration is different and the configuration file output is different, but the password string to be used to enter the Privileged Exec mode with the **enable** command is the same (**mypasswd**).

A user can now have an intermediate CLI security level set with this command for privilege level 7 to access all the show commands in Privileged Exec mode and all

the commands in User Exec mode, but not any configuration commands in Privileged Exec mode.

Note that the [enable password](#) command is an alias for the [enable secret](#) command and one password per privilege level is allowed using these commands. Do not assign one password to a privilege level with [enable password](#) and another password to a privilege level with [enable secret](#). Use [enable password](#) or [enable secret](#) commands. Do not use both on the same level.

### Using plain passwords

The plain password is a clear text string that appears in the configuration file as configured.

```
awplus# configure terminal
awplus(config)# enable password mypasswd
awplus(config)# end
```

This results in the following show output:

```
awplus#show run
Current configuration:
hostname awplus
enable password mypasswd
!
interface lo
```

### Using encrypted passwords

You can configure an encrypted password using the [service password-encryption](#) command. First, use the [enable password](#) command to specify the string that you want to use as a password (**mypasswd**). Then, use the [service password-encryption](#) command to encrypt the specified string (**mypasswd**). The advantage of using an encrypted password is that the configuration file does not show **mypasswd**, it will only show the encrypted string **fU7zHzuutY2SA**.

**NOTE:** Do not use encrypted passwords for GUI users. The GUI requires unencrypted user passwords only - not encrypted user passwords. Do not use option 8 for GUI users.

```
awplus# configure terminal
awplus(config)# enable password mypasswd
awplus(config)# service password-encryption
awplus(config)# end
```

This results in the following show output:

```
awplus#show run
Current configuration:
hostname awplus
enable password 8 fU7zHzuutY2SA
service password-encryption
!
interface lo
```

### Using hidden passwords

You can configure an encrypted password using the **HIDDEN** parameter (**8**) with the [enable password](#) command. Use this method if you already know the encrypted string corresponding to the plain text string that you want to use as a

password. It is not required to use the [service password-encryption](#) command for this method. The output in the configuration file will show only the encrypted string, and not the text string.

```
awplus# configure terminal
awplus(config)# enable password 8 fU7zHzuutY2SA
awplus(config)# end
```

This results in the following show output:

```
awplus#show run
Current configuration:
hostname awplus
enable password 8 fU7zHzuutY2SA
!
interface lo
```

### **Related Commands**

[enable \(Privileged Exec mode\)](#)  
[enable secret](#)  
[service password-encryption](#)  
[privilege level](#)  
[show privilege](#)  
[username](#)  
[show running-config](#)

# enable secret

**Overview** To set a local password to control access to various privilege levels, use the **enable secret** Global Configuration command. Use the **enable secret** command to modify or create a password to be used, and use the **no enable secret** command to remove the password.

Note that the **enable secret** command is an alias for the **enable password** command, and the **no enable secret** command is an alias for the **no enable password** command. Issuing a **no enable password** command removes a password configured with the **enable secret** command. The **enable password** command is shown in the running and startup configurations. Note that if the **enable secret** command is entered then **enable password** is shown in the configuration.

**NOTE:** Do not use encrypted passwords for GUI users. The GUI requires unencrypted user passwords only - not encrypted user passwords. Do not use option 8 for GUI users.

**Syntax** `enable secret [<plain>|8 <hidden>|level <0-15> 8 <hidden>]`  
`no enable secret [level <1-15>]`

| Parameter | Description   |
|-----------|---|
| <plain>   | Specifies the unencrypted password.   |
| 8         | Specifies a hidden password will follow.  |
| <hidden>  | Specifies the hidden encrypted password. Use an encrypted password for better security where a password crosses the network or is stored on a TFTP server.  |
| level     | Privilege level <1-15>. Level for which the password applies. You can specify up to 16 privilege levels, using numbers 1 through 15. Level 1 is normal EXEC-mode user privileges for User Exec mode. If this argument is not specified in the command or the <b>no</b> variant of the command, the privilege level defaults to 15 (enable mode privileges) for Privileged Exec mode. A privilege level of 7 can be set for intermediate CLI security. |

**Default** The privilege level for enable secret is level 15 by default.

**Mode** Global Configuration

**Usage** This command enables the Network Administrator to set a password for entering the Privileged Exec mode when using the **enable (Privileged Exec mode)** command. There are three methods to enable a password. In the examples below, for each method, note that the configuration is different and the configuration file output is different, but the password string to be used to enter the Privileged Exec mode with the **enable** command is the same (**mypasswd**).

A user can have an intermediate CLI security level set with this command for privilege level 7 to access all the show commands in Privileged Exec mode and all

the commands in User Exec mode, but not any configuration commands in Privileged Exec mode.

Note that the `enable secret` command is an alias for the `enable password` command and one password per privilege level is allowed using these commands. Do not assign one password to a privilege level with `enable password` and another password to a privilege level with `enable secret`. Use `enable password` or `enable secret` commands. Do not use both on the same level.

### Using plain passwords

The plain password is a clear text string that appears in the configuration file as configured.

```
awplus# configure terminal
awplus(config)# enable secret mypasswd
awplus(config)# end
```

This results in the following show output:

```
awplus#show run
Current configuration:
hostname awplus
enable password mypasswd
!
interface lo
```

### Using encrypted passwords

Configure an encrypted password using the `service password-encryption` command. First, use the `enable password` command to specify the string that you want to use as a password (**mypasswd**). Then, use the `service password-encryption` command to encrypt the specified string (**mypasswd**). The advantage of using an encrypted password is that the configuration file does not show **mypasswd**, it will only show the encrypted string **fU7zHzuutY2SA**.

**NOTE:** Do not use encrypted passwords for GUI users. The GUI requires unencrypted user passwords only - not encrypted user passwords. Do not use option 8 for GUI users.

```
awplus# configure terminal
awplus(config)# enable secret mypasswd
awplus(config)# service password-encryption
awplus(config)# end
```

This results in the following show output:

```
awplus#show run
Current configuration:
hostname awplus
enable password 8 fU7zHzuutY2SA
service password-encryption
!
interface lo
```

### Using hidden passwords

Configure an encrypted password using the **HIDDEN** parameter (**8**) with the `enable password` command. Use this method if you already know the encrypted string corresponding to the plain text string that you want to use as a password. It

is not required to use the [service password-encryption](#) command for this method. The output in the configuration file will show only the encrypted string, and not the text string:

```
awplus# configure terminal
awplus(config)# enable secret 8 fU7zHzuutY2SA
awplus(config)# end
```

This results in the following show output:

```
awplus#show run
Current configuration:
hostname awplus
enable password 8 fU7zHzuutY2SA
!
interface lo
```

### **Related Commands**

[enable \(Privileged Exec mode\)](#)  
[enable secret](#)  
[service password-encryption](#)  
[privilege level](#)  
[show privilege](#)  
[username](#)  
[show running-config](#)

# exec-timeout

**Overview** This command sets the interval your device waits for user input from either a console or VTY connection. Once the timeout interval is reached, the connection is dropped. This command sets the time limit when the console or VTY connection automatically logs off after no activity.

The **no** variant of this command removes a specified timeout and resets to the default timeout (10 minutes).

**Syntax** `exec-timeout {<minutes>} [<seconds>]`  
`no exec-timeout`

| Parameter | Description   |
|-----------|---|
| <minutes> | <0-35791> Required integer timeout value in minutes   |
| <seconds> | <0-2147483> Optional integer timeout value in seconds |

**Default** The default for the **exec-timeout** command is 10 minutes and 0 seconds (**exec-timeout 10 0**).

**Mode** Line Configuration

**Usage** This command is used set the time the telnet session waits for an idle VTY session, before it times out. An **exec-timeout 0 0** setting will cause the telnet session to wait indefinitely. The command **exec-timeout 0 0** is useful while configuring a device, but reduces device security.

If no input is detected during the interval then the current connection resumes. If no connections exist then the terminal returns to an idle state and disconnects incoming sessions.

**Examples** To set VTY connections to timeout after 2 minutes, 30 seconds if there is no response from the user, use the following commands:

```
awplus# configure terminal
awplus(config)# line vty 0 32
awplus(config-line)# exec-timeout 2 30
```

To reset the console connection to the default timeout of 10 minutes 0 seconds if there is no response from the user, use the following commands:

```
awplus# configure terminal
awplus(config)# line console 0
awplus(config-line)# no exec-timeout
```

**Validation Commands** `show running-config`



**Related  
Commands** [line](#)  
[service telnet](#)

# flowcontrol hardware (asyn/console)

**Overview** Use this command to enable RTS/CTS (Ready To Send/Clear To Send) hardware flow control on a terminal console line (asyn port) between the DTE (Data Terminal Equipment) and the DCE (Data Communications Equipment).

**Syntax** `flowcontrol hardware`  
`no flowcontrol hardware`

**Mode** Line Configuration

**Default** Hardware flow control is disabled by default.

**Usage** Hardware flow control makes use of the RTS and CTS control signals between the DTE and DCE where the rate of transmitted data is faster than the rate of received data. Flow control is a technique for ensuring that a transmitting entity does not overwhelm a receiving entity with data. When the buffers on the receiving device are full, a message is sent to the sending device to suspend the transmission until the data in the buffers has been processed.

Hardware flow control can be configured on terminal console lines (e.g. asyn0). For Reverse Telnet connections, hardware flow control must be configured to match on both the Access Server and the Remote Device. For terminal console sessions, hardware flow control must be configured to match on both the DTE and the DCE. Settings are saved in the running configuration. Changes are applied after reboot, clear line console, or after closing the session.

Use **show running-config** and **show startup-config** commands to view hardware flow control settings that take effect after reboot for a terminal console line. See the **show running-config** command output:

```
awplus#show running-config
!
line con 1
  speed 9600
  mode out 2001
  flowcontrol hardware
!
```

Note that line configuration commands do not take effect immediately. Line configuration commands take effect after one of the following commands or events:

- issuing a [clear line console](#) command
- issuing a [reboot](#) command
- logging out of the current session

**Examples** To enable hardware flow control on terminal console line asyn0, use the commands:

```
awplus# configure terminal
awplus(config)# line console 0
awplus(config-line)# flowcontrol hardware
```

To disable hardware flow control on terminal console line asyn0, use the commands:

```
awplus# configure terminal
awplus(config)# line console 0
awplus(config-line)# no flowcontrol hardware
```

**Related  
Commands**

- [clear line console](#)
- [show running-config](#)
- [speed \(asyn\)](#)

# length (asyn)

**Overview** Use this command to specify the number of rows of output that the device will display before pausing, for the console or VTY line that you are configuring.

The **no** variant of this command restores the length of a line (terminal session) attached to a console port or to a VTY to its default length of 22 rows.

**Syntax** `length <0-512>`  
`no length`

| Parameter | Description  |
|-----------|--|
| <0-512>   | Number of lines on screen. Specify 0 for no pausing. |

**Mode** Line Configuration

**Default** The length of a terminal session is 22 rows. The **no length** command restores the default.

**Usage** If the output from a command is longer than the length of the line the output will be paused and the '–More–' prompt allows you to move to the next screen full of data.

A length of 0 will turn off pausing and data will be displayed to the console as long as there is data to display.

**Examples** To set the terminal session length on the console to 10 rows, use the command:

```
awplus# configure terminal
awplus(config)# line console 0
awplus(config-line)# length 10
```

To reset the terminal session length on the console to the default (22 rows), use the command:

```
awplus# configure terminal
awplus(config)# line console 0
awplus(config-line)# no length
```

To display output to the console continuously, use the command:

```
awplus# configure terminal
awplus(config)# line console 0
awplus(config-line)# length 0
```

**Related  
Commands** [terminal resize](#)  
[terminal length](#)

# line

**Overview** Use this command to enter line configuration mode for the specified VTYS or the console. The command prompt changes to show that the device is in Line Configuration mode.

**Syntax** `line vty <first-line> [<last-line>]`  
`line console 0`

| Parameter    | Description                                    |
|--------------|--|
| <first-line> | <0-32> Specify the first line number.          |
| <last-line>  | <0-32> Specify the last line number.           |
| console      | The console terminal line(s) for local access. |
| vtty         | Virtual terminal for remote console access.    |

**Mode** Global Configuration

**Usage** In Line Configuration mode, you can configure console and virtual terminal settings, including setting [speed \(asyn\)](#), [length \(asyn\)](#), [privilege level](#), and authentication ([login authentication](#)) or accounting ([accounting login](#)) method lists.

To change the console (asyn) port speed, use this **line** command to enter Line Configuration mode before using the [speed \(asyn\)](#) command. Set the console speed (Baud rate) to match the transmission rate of the device connected to the console (asyn) port on your device.

Note that line configuration commands do not take effect immediately. Line configuration commands take effect after one of the following commands or events:

- issuing a [clear line console](#) command
- issuing a [reboot](#) command
- logging out of the current session

**Examples** To enter Line Configuration mode in order to configure all VTYS, use the commands:

```
awplus# configure terminal
awplus(config)# line vty 0 32
awplus(config-line)#
```

To enter Line Configuration mode to configure the console (asyn 0) port terminal line, use the commands:

```
awplus# configure terminal
awplus(config)# line console 0
awplus(config-line)#
```

**Related  
Commands**

accounting login  
clear line console  
clear line vty  
flowcontrol hardware (asyn/console)  
length (asyn)  
login authentication  
privilege level  
speed (asyn)

# privilege level

**Overview** This command sets a privilege level for VTY or console connections. The configured privilege level from this command overrides a specific user's initial privilege level at the console login.

**Syntax** `privilege level <1-15>`

**Mode** Line Configuration

**Usage** You can set an intermediate CLI security level for a console user with this command by applying privilege level 7 to access all show commands in Privileged Exec and all User Exec commands. However, intermediate CLI security will not show configuration commands in Privileged Exec.

**Examples** To set the console connection to have the maximum privilege level, use the following commands:

```
awplus# configure terminal
awplus(config)# line console 0
awplus(config-line)# privilege level 15
```

To set all vty connections to have the minimum privilege level, use the following commands:

```
awplus# configure terminal
awplus(config)# line vty 0 5
awplus(config-line)# privilege level 1
```

To set all vty connections to have an intermediate CLI security level, to access all show commands, use the following commands:

```
awplus# configure terminal
awplus(config)# line vty 0 5
awplus(config-line)# privilege level 7
```

**Related  
Commands** [enable password](#)  
[line](#)  
[show privilege](#)  
[username](#)

# security-password history

**Overview** This command specifies the number of previous passwords that are unable to be reused. A new password is invalid if it matches a password retained in the password history.

The **no security-password history** command disables the security password history functionality.

**Syntax** `security-password history <0-15>`  
`no security-password history`

| Parameter | Description  |
|-----------|--|
| <0-15>    | The allowable range of previous passwords to match against. A value of 0 will disable the history functionality and is equivalent to the <b>no security-password history</b> command. If the history functionality is disabled, all users' password history is reset and all password history is lost. |

**Default** The default history value is 0, which will disable the history functionality.

**Mode** Global Configuration

**Examples** To restrict reuse of the three most recent passwords, use the command:

```
awplus# configure terminal
awplus(config)# security-password history 3
```

To allow the reuse of recent passwords, use the command:

```
awplus# configure terminal
awplus(config)# no security-password history
```

**Validation Commands** `show running-config security-password`  
`show security-password configuration`

**Related Commands** `security-password forced-change`  
`security-password lifetime`  
`security-password minimum-categories`  
`security-password minimum-length`  
`security-password reject-expired-pwd`  
`security-password warning`



# security-password forced-change

**Overview** This command specifies whether or not a user is forced to change an expired password at the next login. If this feature is enabled, users whose passwords have expired are forced to change to a password that must comply with the current password security rules at the next login.

Note that to use this command, the lifetime feature must be enabled with the [security-password lifetime](#) command and the reject-expired-pwd feature must be disabled with the [security-password reject-expired-pwd](#) command.

The **no security-password forced-change** command disables the forced-change feature.

**Syntax** `security-password forced-change`  
`no security-password forced-change`

**Default** The forced-change feature is disabled by default.

**Mode** Global Configuration

**Example** To force a user to change their expired password at the next login, use the command:

```
awplus# configure terminal
awplus(config)# security-password forced-change
```

**Validation Commands** [show running-config security-password](#)  
[show security-password configuration](#)

**Related Commands** [security-password history](#)  
[security-password lifetime](#)  
[security-password minimum-categories](#)  
[security-password minimum-length](#)  
[security-password reject-expired-pwd](#)  
[security-password warning](#)

# security-password lifetime

**Overview** This command enables password expiry by specifying a password lifetime in days.

Note that when the password lifetime feature is disabled, it also disables the [security-password forced-change](#) command and the [security-password warning](#) command.

The **no security-password lifetime** command disables the password lifetime feature.

**Syntax** `security-password lifetime <0-1000>`  
`no security-password lifetime`

| Parameter                   | Description   |
|-----------------------------|---|
| <code>&lt;0-1000&gt;</code> | Password lifetime specified in days. A value of 0 will disable lifetime functionality and the password will never expire. This is equivalent to the <b>no security-password lifetime</b> command. |

**Default** The default password lifetime is 0, which will disable the lifetime functionality.

**Mode** Global Configuration

**Example** To configure the password lifetime to 10 days, use the command:

```
awplus# configure terminal
awplus(config)# security-password lifetime 10
```

**Validation Commands** [show running-config security-password](#)  
[show security-password configuration](#)

**Related Commands** [security-password history](#)  
[security-password forced-change](#)  
[security-password minimum-categories](#)  
[security-password minimum-length](#)  
[security-password reject-expired-pwd](#)  
[security-password warning](#)  
[show security-password user](#)

# security-password minimum-categories

**Overview** This command specifies the minimum number of categories that the password must contain in order to be considered valid. The password categories are:

- uppercase letters: A to Z
- lowercase letters: a to z
- digits: 0 to 9
- special symbols: all printable ASCII characters not included in the previous three categories. The question mark (?) cannot be used as it is reserved for help functionality.

Note that to ensure password security, the minimum number of categories should align with the lifetime selected, i.e. the fewer categories specified the shorter the lifetime specified.

**Syntax** `security-password minimum-categories <1-4>`

| Parameter | Description  |
|-----------|--|
| <1-4>     | Number of categories the password must satisfy, in the range 1 to 4. |

**Default** The default number of categories that the password must satisfy is 1.

**Mode** Global Configuration

**Example** To configure the required minimum number of character categories to be 3, use the command:

```
awplus# configure terminal
awplus(config)# security-password minimum-categories 3
```

**Validation Commands** `show running-config security-password`  
`show security-password configuration`

**Related Commands** `security-password history`  
`security-password forced-change`  
`security-password lifetime`  
`security-password minimum-length`  
`security-password reject-expired-pwd`  
`security-password warning`  
`username`

# security-password minimum-length

**Overview** This command specifies the minimum allowable password length. This value is checked against when there is a password change or a user account is created.

**Syntax** `security-password minimum-length <1-23>`

| Parameter                 | Description  |
|---------------------------|--|
| <code>&lt;1-23&gt;</code> | Minimum password length in the range from 1 to 23. |

**Default** The default minimum password length is 1.

**Mode** Global Configuration

**Example** To configure the required minimum password length as 8, use the command:

```
awplus# configure terminal
awplus(config)# security-password minimum-length 8
```

**Validation Commands** `show running-config security-password`  
`show security-password configuration`

**Related Commands** `security-password history`  
`security-password forced-change`  
`security-password lifetime`  
`security-password minimum-categories`  
`security-password reject-expired-pwd`  
`security-password warning`  
`username`

# security-password reject-expired-pwd

**Overview** This command specifies whether or not a user is allowed to login with an expired password. Users with expired passwords are rejected at login if this functionality is enabled. Users then have to contact the Network Administrator to change their password.

**CAUTION:** *Once all users' passwords are expired you are unable to login to the device again if the security-password reject-expired-pwd command has been executed. You will have to reboot the device with a default configuration file, or load an earlier software version that does not have the security password feature.*

*We recommend you never have the command line "security-password reject-expired-pwd" in a default config file.*

Note that when the reject-expired-pwd functionality is disabled and a user logs on with an expired password, if the forced-change feature is enabled with [security-password forced-change](#) command, a user may have to change the password during login depending on the password lifetime specified by the [security-password lifetime](#) command.

The **no security-password reject-expired-pwd** command disables the reject-expired-pwd feature.

**Syntax** security-password reject-expired-pwd  
no security-password reject-expired-pwd

**Default** The reject-expired-pwd feature is disabled by default.

**Mode** Global Configuration

**Example** To configure the system to reject users with an expired password, use the command:

```
awplus# configure terminal
awplus(config)# security-password reject-expired-pwd
```

**Validation Commands** [show running-config security-password](#)  
[show security-password configuration](#)

**Related Commands** [security-password history](#)  
[security-password forced-change](#)  
[security-password lifetime](#)  
[security-password minimum-categories](#)  
[security-password minimum-length](#)  
[security-password warning](#)  
[show security-password user](#)

# security-password warning

**Overview** This command specifies the number of days before the password expires that the user will receive a warning message specifying the remaining lifetime of the password.

Note that the warning period cannot be set unless the lifetime feature is enabled with the [security-password lifetime](#) command.

The **no security-password warning** command disables this feature.

**Syntax** `security-password warning <0-1000>`  
`no security-password warning`

| Parameter | Description  |
|-----------|--|
| <0-1000>  | Warning period in the range from 0 to 1000 days. A value 0 disables the warning functionality and no warning message is displayed for expiring passwords. This is equivalent to the <b>no security-password warning</b> command. The warning period must be less than, or equal to, the password lifetime set with the <a href="#">security-password lifetime</a> command. |

**Default** The default warning period is 0, which disables warning functionality.

**Mode** Global Configuration

**Example** To configure a warning period of three days, use the command:

```
awplus# configure terminal
awplus(config)# security-password warning 3
```

**Validation Commands** [show running-config security-password](#)  
[show security-password configuration](#)

**Related Commands** [security-password history](#)  
[security-password forced-change](#)  
[security-password lifetime](#)  
[security-password minimum-categories](#)  
[security-password minimum-length](#)  
[security-password reject-expired-pwd](#)

# service advanced-vty

**Overview** This command enables the advanced-vty help feature. This allows you to use TAB completion for commands. Where multiple options are possible, the help feature displays the possible options.

The **no service advanced-vty** command disables the advanced-vty help feature.

**Syntax** `service advanced-vty`  
`no service advanced-vty`

**Default** The advanced-vty help feature is enabled by default.

**Mode** Global Configuration

**Examples** To disable the advanced-vty help feature, use the command:

```
awplus# configure terminal
awplus(config)# no service advanced-vty
```

To re-enable the advanced-vty help feature after it has been disabled, use the following commands:

```
awplus# configure terminal
awplus(config)# service advanced-vty
```

# service password-encryption

**Overview** Use this command to enable password encryption. This is enabled by default. When password encryption is enabled, the device displays passwords in the running config in encrypted form instead of in plain text.

Use the **no service password-encryption** command to stop the device from displaying newly-entered passwords in encrypted form. This does not change the display of existing passwords.

**NOTE:** Do not use encrypted passwords for GUI users. The GUI requires unencrypted user passwords only - not encrypted user passwords. Do not use option 8 for GUI users.

**Syntax** `service password-encryption`  
`no service password-encryption`

**Mode** Global Configuration

**Example** `awplus# configure terminal`  
`awplus(config)# service password-encryption`

**Validation  
Commands** `show running-config`

**Related  
Commands** `enable password`



# service telnet

**Overview** Use this command to enable the telnet server. The server is enabled by default. Enabling the telnet server starts the device listening for incoming telnet sessions on the configured port.

The server listens on port 23, unless you have changed the port by using the [privilege level](#) command.

Use the **no** variant of this command to disable the telnet server. Disabling the telnet server will stop the device listening for new incoming telnet sessions. However, existing telnet sessions will still be active.

**Syntax** `service telnet [ip|ipv6]`  
`no service telnet [ip|ipv6]`

**Default** The IPv4 and IPv6 telnet servers are enabled by default.  
The configured telnet port is TCP port 23 by default.

**Mode** Global Configuration

**Examples** To enable both the IPv4 and IPv6 telnet servers, use the following commands:

```
awplus# configure terminal
awplus(config)# service telnet
```

To enable the IPv6 telnet server only, use the following commands:

```
awplus# configure terminal
awplus(config)# service telnet ipv6
```

To disable both the IPv4 and IPv6 telnet servers, use the following commands:

```
awplus# configure terminal
awplus(config)# no service telnet
```

To disable the IPv6 telnet server only, use the following commands:

```
awplus# configure terminal
awplus(config)# no service telnet ipv6
```

**Related  
Commands** [clear line vty](#)  
[show telnet](#)  
[telnet server](#)

# service terminal-length (deleted)

**Overview** This command has been deleted in Software Version 5.4.5-0.1 and later.

# show privilege

**Overview** This command displays the current user privilege level, which can be any privilege level in the range <1-15>. Privilege levels <1-6> allow limited user access (all User Exec commands), privilege levels <7-14> allow restricted user access (all User Exec commands plus Privileged Exec show commands). Privilege level 15 gives full user access to all Privileged Exec commands.

**Syntax** `show privilege`

**Mode** User Exec and Privileged Exec

**Usage** A user can have an intermediate CLI security level set with this command for privilege levels <7-14> to access all show commands in Privileged Exec mode and all commands in User Exec mode, but no configuration commands in Privileged Exec mode.

**Example** To show the current privilege level of the user, use the command:

```
awplus# show privilege
```

**Output** Figure 3-1: Example output from the **show privilege** command

```
awplus#show privilege
Current privilege level is 15
awplus#disable
awplus>show privilege
Current privilege level is 1
```

**Related Commands** [privilege level](#)

# show security-password configuration

**Overview** This command displays the configuration settings for the various security password rules.

**Syntax** `show security-password configuration`

**Mode** Privileged Exec

**Example** To display the current security-password rule configuration settings, use the command:

```
awplus# show security-password configuration
```

**Output** Figure 3-2: Example output from the **show security-password configuration** command

```
Security Password Configuration
Minimum password length ..... 8
Minimum password character categories to match ..... 3
Number of previously used passwords to restrict..... 4
Password lifetime ..... 30 day(s)
    Warning period before password expires ..... 3 day(s)
Reject expired password at login ..... Disabled
    Force changing expired password at login ..... Enabled
```

**Related Commands** [show running-config security-password](#)  
[show security-password user](#)

# show security-password user

**Overview** This command displays user account and password information for all users.

**Syntax** `show security-password user`

**Mode** Privileged Exec

**Example** To display the system users' remaining lifetime or last password change, use the command:

```
awplus# show security-password user
```

**Output** Figure 3-3: Example output from the **show security-password** user command

| User account and password information |           |                 |                    |
|---------------------------------------|-----------|-----------------|--------------------|
| UserName                              | Privilege | Last-PWD-Change | Remaining-lifetime |
| -----                                 |           |                 |                    |
| manager                               | 15        | 4625 day(s) ago | No Expiry          |
| bob15                                 | 15        | 0 day(s) ago    | 30 days            |
| ted7                                  | 7         | 0 day(s) ago    | No Expiry          |
| mike1                                 | 1         | 0 day(s) ago    | No Expiry          |

**Related Commands** [show running-config security-password](#)  
[show security-password configuration](#)

# show telnet

**Overview** This command shows the Telnet server settings.

**Syntax** `show telnet`

**Mode** User Exec and Privileged Exec

**Example** To show the Telnet server settings, use the command:

```
awplus# show telnet
```

**Output** Figure 3-4: Example output from the **show telnet** command

```
Telnet Server Configuration
-----
Telnet server           : Enabled
Protocol                : IPv4, IPv6
Port                   : 23
```

**Related  
Commands**

- [clear line vty](#)
- [service telnet](#)
- [show users](#)
- [telnet server](#)

# show users

**Overview** This command shows information about the users who are currently logged into the device.

**Syntax** `show users`

**Mode** User Exec and Privileged Exec

**Example** To show the users currently connected to the device, use the command:

```
awplus# show users
```

**Output** Figure 3-5: Example output from the **show users** command

| Line   | User    | Host(s) | Idle     | Location    | Priv | Idletime | Timeout |
|--------|---------|---------|----------|-------------|------|----------|---------|
| con 0  | manager | idle    | 00:00:00 | ttyS0       | 15   | 10       | N/A     |
| vtty 0 | bob     | idle    | 00:00:03 | 172.16.11.3 | 1    | 0        | 5       |

**Table 1:** Parameters in the output of the **show users** command

| Parameter | Description  |
|-----------|--|
| Line      | Console port user is connected to.   |
| User      | Login name of user.  |
| Host(s)   | Status of the host the user is connected to.   |
| Idle      | How long the host has been idle.   |
| Location  | URL location of user.  |
| Priv      | The privilege level in the range 1 to 15, with 15 being the highest.                       |
| Idletime  | The time interval the device waits for user input from either a console or VTY connection. |
| Timeout   | The time interval before a server is considered unreachable.                               |

# telnet

**Overview** Use this command to open a telnet session to a remote device.

**Syntax** `telnet {<hostname>|[ip] <ipv4-addr>|[ipv6] <ipv6-addr>}  
[<port>]`

| Parameter   | Description   |
|-------------|---|
| <hostname>  | The host name of the remote system.   |
| ip          | Keyword used to specify the IPv4 address or host name of a remote system.   |
| <ipv4-addr> | An IPv4 address of the remote system.   |
| ipv6        | Keyword used to specify the IPv6 address of a remote system   |
| <ipv6-addr> | Placeholder for an IPv6 address in the format x:x::x:x, for example, 2001:db8::8a2e:7334  |
| <port>      | Specify a TCP port number (well known ports are in the range 1-1023, registered ports are 1024-49151, and private ports are 49152-65535). |

**Mode** User Exec and Privileged Exec

**Examples** To connect to TCP port 2602 on the device at 10.2.2.2, use the command:

```
awplus# telnet 10.2.2.2 2602
```

To connect to the telnet server `host.example`, use the command:

```
awplus# telnet host.example
```

To connect to the telnet server `host.example` on TCP port 100, use the command:

```
awplus# telnet host.example 100
```



# telnet server

**Overview** This command enables the telnet server on the specified TCP port. If the server is already enabled then it will be restarted on the new port. Changing the port number does not affect the port used by existing sessions.

**Syntax** `telnet server {<1-65535>|default}`

| Parameter | Description                         |
|-----------|-------------------------------------|
| <1-65535> | The TCP port to listen on.          |
| default   | Use the default TCP port number 23. |

**Mode** Global Configuration

**Example** To enable the telnet server on TCP port 2323, use the following commands:

```
awplus# configure terminal
awplus(config)# telnet server 2323
```

**Related Commands** [show telnet](#)

# terminal length

**Overview** Use the **terminal length** command to specify the number of rows of output that the device will display before pausing, for the currently-active terminal only.

Use the **terminal no length** command to remove the length specified by this command. The default length will apply unless you have changed the length for some or all lines by using the [length \(asyn\)](#) command.

**Syntax** `terminal length <length>`  
`terminal no length [<length>]`

| Parameter | Description  |
|-----------|--|
| <length>  | <0-512> Number of rows that the device will display on the currently-active terminal before pausing. |

**Mode** User Exec and Privileged Exec

**Examples** The following example sets the number of lines to 15:

```
awplus# terminal length 15
```

The following example removes terminal length set previously:

```
awplus# terminal no length
```

**Related  
Commands** [terminal resize](#)  
[length \(asyn\)](#)

# terminal resize

**Overview** Use this command to automatically adjust the number of rows of output on the console, which the device will display before pausing, to the number of rows configured on the user's terminal.

**Syntax** `terminal resize`

**Mode** User Exec and Privileged Exec

**Usage** When the user's terminal size is changed, then a remote session via SSH or TELNET adjusts the terminal size automatically. However, this cannot normally be done automatically for a serial or console port. This command automatically adjusts the terminal size for a serial or console port.

**Examples** The following example automatically adjusts the number of rows shown on the console:

```
awplus# terminal resize
```

**Related  
Commands** [length \(asyn\)](#)  
[terminal length](#)

# username

**Overview** This command creates or modifies a user to assign a privilege level and a password.

**NOTE:** The default username privilege level of 1 is not shown in running-config output. Any username privilege level that has been modified from the default is shown.

**Syntax**

```
username <name> privilege <0-15> [password [8] <password>]
username <name> password [8] <password>
no username <name>
```

| Parameter  | Description  |        |  |            |   |
|------------|--|--------|--|------------|---|
| <name>     | The login name for the user. Do not use punctuation marks such as single quotes ( ' '), double quotes ( " " ), or colons ( : ) with the user login name.   |        |  |            |   |
| privilege  | <p>The user's privilege level. Use the privilege levels to set the access rights for each user.</p> <table> <tr> <td>&lt;0-15&gt;</td><td> <p>A privilege level: either 0 (no access), 1-14 (limited access) or 15 (full access). A user with privilege level 1-14 can only access higher privilege levels if an <a href="#">enable password</a> has been configured for the level the user tries to access and the user enters that password. A user at privilege level 1 can access the majority of show commands. A user at privilege level 7 can access the majority of show commands including platform show commands. Privilege Level 15 (to access the Privileged Exec command mode) is required to access configuration commands as well as show commands in Privileged Exec.</p> </td></tr> </table>  | <0-15> | <p>A privilege level: either 0 (no access), 1-14 (limited access) or 15 (full access). A user with privilege level 1-14 can only access higher privilege levels if an <a href="#">enable password</a> has been configured for the level the user tries to access and the user enters that password. A user at privilege level 1 can access the majority of show commands. A user at privilege level 7 can access the majority of show commands including platform show commands. Privilege Level 15 (to access the Privileged Exec command mode) is required to access configuration commands as well as show commands in Privileged Exec.</p> |            |   |
| <0-15>     | <p>A privilege level: either 0 (no access), 1-14 (limited access) or 15 (full access). A user with privilege level 1-14 can only access higher privilege levels if an <a href="#">enable password</a> has been configured for the level the user tries to access and the user enters that password. A user at privilege level 1 can access the majority of show commands. A user at privilege level 7 can access the majority of show commands including platform show commands. Privilege Level 15 (to access the Privileged Exec command mode) is required to access configuration commands as well as show commands in Privileged Exec.</p>   |        |  |            |   |
| password   | <p>A password that the user must enter when logging in.</p> <table> <tr> <td>8</td><td> <p>Specifies that you are entering a password as a string that has already been encrypted, instead of entering a plain-text password. The running-config displays the new password as an encrypted string even if password encryption is turned off. Note that the user enters the plain-text version of the password when logging in.</p> </td></tr> <tr> <td>&lt;password&gt;</td><td> <p>The user's password. The password can be up to 23 characters in length and include characters from up to four categories. The password categories are:</p> <ul style="list-style-type: none"> <li>uppercase letters: A to Z</li> <li>lowercase letters: a to z</li> <li>digits: 0 to 9</li> <li>special symbols: all printable ASCII characters not included in the previous three categories. The question mark ? cannot be used as it is reserved for help functionality.</li> </ul> </td></tr> </table> | 8      | <p>Specifies that you are entering a password as a string that has already been encrypted, instead of entering a plain-text password. The running-config displays the new password as an encrypted string even if password encryption is turned off. Note that the user enters the plain-text version of the password when logging in.</p>   | <password> | <p>The user's password. The password can be up to 23 characters in length and include characters from up to four categories. The password categories are:</p> <ul style="list-style-type: none"> <li>uppercase letters: A to Z</li> <li>lowercase letters: a to z</li> <li>digits: 0 to 9</li> <li>special symbols: all printable ASCII characters not included in the previous three categories. The question mark ? cannot be used as it is reserved for help functionality.</li> </ul> |
| 8          | <p>Specifies that you are entering a password as a string that has already been encrypted, instead of entering a plain-text password. The running-config displays the new password as an encrypted string even if password encryption is turned off. Note that the user enters the plain-text version of the password when logging in.</p>   |        |  |            |   |
| <password> | <p>The user's password. The password can be up to 23 characters in length and include characters from up to four categories. The password categories are:</p> <ul style="list-style-type: none"> <li>uppercase letters: A to Z</li> <li>lowercase letters: a to z</li> <li>digits: 0 to 9</li> <li>special symbols: all printable ASCII characters not included in the previous three categories. The question mark ? cannot be used as it is reserved for help functionality.</li> </ul>  |        |  |            |   |

**Mode** Global Configuration

**Default** The privilege level is 1 by default. Note the default is not shown in running-config output.

**Usage** An intermediate CLI security level (privilege level 7 to privilege level 14) allows a CLI user access to the majority of show commands, including the platform show commands that are available at privilege level 1 to privilege level 6). Note that some show commands, such as show running-configuration and show startup-configuration, are only available at privilege level 15.

A privilege level of 0 can be set for port authentication purposes from a RADIUS server.

**Examples** To create the user `bob` with a privilege level of 15, for all show commands including show running-configuration and show startup-configuration and to access configuration commands in Privileged Exec command mode, and the password `bobs_secret`, use the commands:

```
awplus# configure terminal
```

```
awplus(config)# username bob privilege 15 password bobs_secret
```

To create a user `junior_admin` with a privilege level of 7, for intermediate CLI security level access for most show commands, and the password `show_only`, use the commands:

```
awplus# configure terminal
```

```
awplus(config)# username junior_admin privilege 7 password  
show_only
```

**Related  
Commands** [enable password](#)  
[security-password minimum-categories](#)  
[security-password minimum-length](#)

# 4

# Licensing Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for each of the License commands.

- Command List**
- “[license](#)” on page 187
  - “[license member \(deleted\)](#)” on page 189
  - “[show license](#)” on page 190
  - “[show license brief](#)” on page 192
  - “[show license brief member](#)” on page 194
  - “[show license member](#)” on page 196

# license

**Overview** This command activates the licensed software feature set on a standalone switch, or a stack of switches.

Use the **no** variant of this command to deactivate the licensed software feature set on a standalone switch, or a stack of switches.

For feature licenses, contact your authorized distributor or reseller. If a license key expires or is incorrect so the license key is invalid, then some software features will be unavailable.

**NOTE:** See the AlliedWare Plus™ datasheet for a list of current feature licenses available by product, and the AlliedWare Plus™ How To notes for information on obtaining them. Purchase licenses from your authorized dealer or reseller.

Only install feature licenses during scheduled maintenance for any devices in a live environment. For example, if a feature license includes EPSR, EPSR is restarted with a temporary loss of EPSR network traffic.

**Syntax** `license <label> <key>`  
`no license <label>`

| Parameter                  | Description  |
|----------------------------|--|
| <code>&lt;label&gt;</code> | A name for the feature license. To determine names already in use, use the <a href="#">show license</a> command. This can be the default name supplied for the feature, or a renamed feature name. |
| <code>&lt;key&gt;</code>   | The encrypted license key to enable a set of software features.  |

**Mode** Privileged Exec

**Usage** You can change the license label using this command to make it specific to you when you initially add a license. Once a license is added, any change to the license label first requires removal of the license before adding a license again with a new license label.

The default feature license labels are issued along with encrypted license keys by e-mail for you to apply using this command to activate features. You can change default feature license labels, but they must be 15 characters or less to be accepted with the issued keys.

For example, you may want to change the label of the premium license to "premium- license". You can check your new license label by using the [show license](#) command.

In a stacked configuration, the **license** command will add a license to all stack members and the **no license** command will remove a license from all stack members.

You can add a license to a specified stack member after first using the [remote-login](#) command from the stack master. Adding or deleting licenses on individual

switches can cause different members of the stack to have different features enabled, which may cause the stack to fail to operate correctly. Unbalanced stack members will not form a stack. Stack members require the same feature licenses to be balanced.

If you add a feature license you will be prompted at the console that the feature needs to restart. For example, if the feature license contains a license for the EPSR protocol, then that protocol will restart. This action may result in the loss of network traffic. Only install licenses in scheduled maintenance periods for devices in a live environment.

**Examples** To activate the license `name1` with the key `12345678ABCDE123456789ABCDE`, use the command:

```
awplus# license name1 12345678ABCDE123456789ABCDE
```

To deactivate the license `name1`, use the command:

```
awplus# no license name1
```

**Output** Figure 4-1: Example of a license command entry to remove a feature license

```
awplus#no license IPv6
Stack member 1: Removal of "IPv6" will disable the following features:
  IPv6

INFO: Uninstalling license key will disable the affected modules immediately.
Would you like to continue? (y/n): y

Stack member 1 removed 1 license

1 license removed.
```

**Validation** `show license`  
**Command**



# license member (deleted)

**Overview** This command has been deleted. Instead, use the [license](#) command to apply licenses to VCStack members.

In a stacked configuration, the [license](#) command will add a license to all stack members and the **no license** command will remove a license from all stack members.

# show license

**Overview** This command displays information about a specific software feature license, or all enabled software feature licenses on the device.

**Syntax** `show license [feature] [<label>|index <index-number>]`

| Parameter               | Description   |
|-------------------------|---|
| feature                 | Only display license information for any applied feature licenses.  |
| <label>                 | The license name to show information about. This can be used instead of the index number to identify a specific license.                |
| index<br><index-number> | The index number of the license to show information about. This can be used instead of the license name to identify a specific license. |

**Mode** User Exec and Privileged Exec

**Usage** This command will display licenses applied to a stack master only.  
In a stacked configuration, use the [show license member](#) command instead if you need to display license information for a specific stack member or all stack members.

**Examples** To display full information about all enabled licenses, use the command:

```
awplus# show license
```

To display full information about the licenses with index number 1, use the command:

```
awplus# show license index 1
```

**Output** Figure 4-2: Example output from **show license**

|                      |  |
|----------------------|--|
| awplus#show license  |  |
| Board region: Global |  |
| Software Licenses    |  |
| -----                |  |
| Index                | : 1  |
| License name         | : Base License   |
| Customer name        | : Base License   |
| Quantity of licenses | : 1  |
| Type of license      | : Full   |
| License issue date   | : 12-Jul-2014  |
| License expiry date  | : N/A  |
| Features included    | : IPv6Basic, LAG-FULL, MLDSnoop, RADIUS-100, VCS, VRRP |

Table 4-1: Parameters in the output of **show license**

| Parameter            | Description   |
|----------------------|---|
| Board region         | Name of the region for the Base License features.   |
| Index                | Index identifying entry. The index is assigned automatically by the software. It is not configured. |
| License name         | Name of the license key bundle (case-sensitive).  |
| Customer name        | Customer name.  |
| Quantity of licenses | Quantity of licensed installations.   |
| Type of license      | Full or Trial.  |
| License issue date   | Date the license was generated.   |
| License expiry date  | Expiry date for trial license.  |
| Features included    | List of features included in the feature license.   |

**Related  
Commands**

[license](#)  
[show license brief](#)  
[show license member](#)

# show license brief

**Overview** This command displays information about a specific software feature license, or all enabled software feature licenses on the device.

**Syntax** `show license [feature] [<label>|index <index-number>] brief`

| Parameter               | Description   |
|-------------------------|---|
| feature                 | Only display license information for any applied feature licenses.  |
| <label>                 | The license name to show information about. This can be used instead of the index number to identify a specific license.                |
| index<br><index-number> | The index number of the license to show information about. This can be used instead of the license name to identify a specific license. |
| brief                   | Displays a brief summary of license information.  |

**Mode** User Exec and Privileged Exec

**Usage** This command will display licenses applied to a stack master only.  
In a stacked configuration, use the [show license brief member](#) command instead if you need to display license information for a specific stack member or all stack members.

**Examples** To display a brief summary of information about all feature licenses, use the command:

```
awplus# show license feature brief
```

**Output** Figure 4-3: Example output from **show license brief**

```
awplus#show license brief
Board region: Global
Software Licenses
-----
Index License name      Quantity  Customer name
      Type              Version   Period
-----
1      Base License     1         Base License
      Full              N/A       N/A

Current enabled features for displayed licenses:
IPv6Basic, LAG-FULL, MLDSnoop, RADIUS-100, VCS, VRRP
```

Table 4-2: Parameters in the output of **show license brief**

| Parameter                                       | Description   |
|---|---|
| Board region                                    | Name of the region for the Base License features.   |
| Index   | Index identifying entry. The index is assigned automatically by the software. It is not configured. |
| License name                                    | Name of the license key bundle (case-sensitive).  |
| Quantity  | Quantity of licensed installations.   |
| Customer name                                   | Customer name.  |
| Type  | Full or Trial.  |
| Period  | Expiry date for trial license.  |
| Current enabled features for displayed licenses | List of features included in the license.   |

**Related  
Commands**

[license](#)  
[show license](#)  
[show license member](#)

# show license brief member

**Overview** Use this command to display information about either a specific software license, or all software feature licenses enabled on either a specific stack member or all stack members.

**Syntax** `show license [<label>] brief member [<1-8>|all]`

| Parameter | Description   |
|-----------|---|
| <label>   | The name of the license to show information about.    |
| brief     | Display a brief summary of license information.       |
| <1-8>     | The ID of the stack member to show information about. |
| all       | Display information about all stack members.          |

**Mode** User Exec and Privileged Exec

**Usage** Use the **show license brief member all** command for brief table output of all licenses per stack member.

**Examples** To display a brief summary of information about all enabled licenses on stack member 2, use the command:

```
awplus# show license brief member 2
```

To display a brief summary about all enabled licenses on all stack members, use the command:

```
awplus# show license brief member all
```

To display a brief summary about the license `name1` on all stack members, use the command:

```
awplus# show license name1 brief member all
```

**Output** Figure 4-4: Example output from **show license brief member**

```
awplus#show license brief member 1
Board region: Global
Software Release Licenses
-----
1
  Base License    1          Base License

  Full           N/A

Current
enabled features for displayed licenses:
  IPv6Basic,
  LAG-FULL, MLDSnoop, RADIUS-100, VCS, VRRP
```

Table 4-3: Parameters in the output of **show license brief member**

| Parameter                                       | Description   |
|---|---|
| Board region                                    | Name of the region for the Base License features.   |
| Index   | Index identifying entry. The index is assigned automatically by the software. It is not configured. |
| License name                                    | Name of the license key bundle (case-sensitive).  |
| Quantity  | Quantity of licensed installations.   |
| Customer name                                   | Customer name.  |
| Type  | Full or Trial.  |
| Period  | Expiry date for trial license.  |
| Current enabled features for displayed licenses | List of features included in the license.   |

**Related Commands**

- [license](#)
- [show license](#)
- [show license member](#)

# show license member

**Overview** Use this command to display information about either a specific software license, or all software feature licenses enabled on either a specific stack member or all stack members.

**Syntax** `show license [<label>] member [<1-8>|all]`

| Parameter | Description   |
|-----------|---|
| <label>   | The name of the license to show information about.    |
| <1-8>     | The ID of the stack member to show information about. |
| all       | Display information about all stack members.          |

**Mode** User Exec and Privileged Exec

**Usage** Use the **show license member all** command to display full list output of all licenses per stack member.

**Examples** To display full information about all enabled licenses on all stack members, use the command:

```
awplus# show license member all
```

To display full information about all enabled licenses on stack member 2, use the command:

```
awplus# show license member 2
```

To display full information about the license `name1` on all stack members, use the command:

```
awplus# show license name1 member all
```



**Output** Figure 4-5: Example output from **show license member**

```
awplus#show license member all
Board region: Global
Software Feature Licenses
-----
Index                : 1
License name         : Base License
Customer name        : Base License
Quantity of licenses : 1
Type of license      : Full
License issue date   : 12-Jul-2014
License expiry date  : N/A
Features included    : IPv6Basic, LAG-FULL, MLDSnoop, RADIUS-100, VCS,
                      VRRP

Index                : 2
License name         : PIM Trial
Customer name        : PIM Trial
Quantity of licenses : 10
Type of license      : 30 day trial
License issue date   : 12-Jul-2014
License expiry date  : 12-Jul-2014
Features included    : PIM PIM-100
```

Table 4-4: Parameters in the output of **show license member**

| Parameter            | Description   |
|----------------------|---|
| Board region         | Name of the region for the Base License features.   |
| Index                | Index identifying entry. The index is assigned automatically by the software. It is not configured. |
| License name         | Name of the license key bundle (case-sensitive).  |
| Customer name        | Customer name.  |
| Quantity of licenses | Quantity of licensed installations.   |
| Type of license      | Full or Trial.  |
| License issue date   | Date the license was generated.   |
| License expiry date  | Expiry date for trial license.  |
| Features included    | List of features included in the license.   |

**Related Commands**

- license
- show license
- show license brief member

# 5

# GUI Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure the GUI. For more information, see the [Getting Started with Alliedware Plus](#)

- Command List**
- [“gui-timeout”](#) on page 199
  - [“service http”](#) on page 200
  - [“show http”](#) on page 201

# gui-timeout

**Overview** Use this command to configure an idle timeout period for a GUI session. The time can be set in minutes and/or seconds.

Use the **no** variant of this command to disable the GUI session idle timeout.

**Syntax** `gui-timeout {<minutes>}| [<seconds>]`  
`no gui-timeout`

| Parameter | Description   |
|-----------|---|
| <minutes> | Specifies the idle time in minutes from 0 through 35791   |
| <seconds> | Specifies the idle time in seconds from 0 through 2147483 |

**Default** Disabled

**Mode** Configuration

**Usage** The GUI uses the configured timeout period (set in either minutes and/or seconds) to determine when a GUI session should be closed. Once the GUI timeout has expired, you will need to login to reactivate your session.

To enter seconds only, enter 0 for minutes, followed by a space, and then enter the seconds.

If the GUI timeout is disabled, a GUI session will remain active until you terminate it, no idle time will be configured. The same timeout period will apply to all GUI sessions logged into a specific stand-alone device or stack.

**Examples** Use this command to configure the GUI timeout period for 3 minutes and 30 seconds for a GUI session.

```
awplus# gui-timeout 3 30
```

Use this command to configure the GUI timeout period for 0 minutes and 61 seconds for a GUI session.

```
awplus# gui-timeout 0 61
```

Use this command to disable the GUI timeout period.

```
awplus# no gui-timeout
```

**Output** Figure 5-1: Example output from **gui-timeout**

```
awplus#configure terminal
awplus(config)#gui-timeout 3 30
The new gui-timeout settings [3 min 30 sec] will apply to new sessions only
```

**Related Commands** [show running-config](#)

# service http

**Overview** Use this command to enable the HTTP (Hypertext Transfer Protocol) service. This service, which is enabled by default, is required to support the AlliedWare Plus™ GUI Java applet on a Java enabled browser.

Use the **no** variant of this command to disable the HTTP feature.

**Syntax** `service http`  
`no service http`

**Default** Enabled

**Mode** Global Configuration

**Validation Commands** `show running-config`

# show http

**Overview** This command shows the HTTP server settings.

**Syntax** show http

**Mode** User Exec and Privileged Exec

**Example** To show the HTTP server settings, use the command:

```
awplus# show http
```

**Output** Figure 5-2: Example output from the **show http** command

```
awplus#show http
HTTP Server Configuration
-----
HTTP server           : Enabled
Port                  : 80
Web GUI Information
-----
GUI file in use       : webguiGUI
version:              : 3.1
```

**Related  
Commands** [clear line vty](#)  
[service http](#)

# 6

# System Configuration and Monitoring Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands for configuring and monitoring the system.

- Command List**
- ["banner exec"](#) on page 204
  - ["banner login \(system\)"](#) on page 206
  - ["banner motd"](#) on page 208
  - ["clock set"](#) on page 210
  - ["clock summer-time date"](#) on page 211
  - ["clock summer-time recurring"](#) on page 213
  - ["clock timezone"](#) on page 215
  - ["continuous-reboot-prevention"](#) on page 216
  - ["ecofriendly led"](#) on page 218
  - ["ecofriendly lpi"](#) on page 219
  - ["findme"](#) on page 221
  - ["findme trigger"](#) on page 223
  - ["hostname"](#) on page 224
  - ["max-fib-routes"](#) on page 226
  - ["max-static-routes"](#) on page 227
  - ["no debug all"](#) on page 228
  - ["reboot"](#) on page 229
  - ["reload"](#) on page 230
  - ["show clock"](#) on page 231
  - ["show continuous-reboot-prevention"](#) on page 233

- [“show cpu”](#) on page 234
- [“show cpu history”](#) on page 237
- [“show debugging”](#) on page 240
- [“show ecofriendly”](#) on page 241
- [“show interface memory”](#) on page 243
- [“show memory”](#) on page 245
- [“show memory allocations”](#) on page 247
- [“show memory history”](#) on page 249
- [“show memory pools”](#) on page 251
- [“show memory shared”](#) on page 252
- [“show process”](#) on page 253
- [“show reboot history”](#) on page 256
- [“show router-id”](#) on page 258
- [“show system”](#) on page 259
- [“show system environment”](#) on page 261
- [“show system interrupts”](#) on page 262
- [“show system mac”](#) on page 263
- [“show system pci device”](#) on page 265
- [“show system pci tree”](#) on page 266
- [“show system serialnumber”](#) on page 267
- [“show tech-support”](#) on page 268
- [“speed \(asyn\)”](#) on page 270
- [“system territory \(deprecated\)”](#) on page 272
- [“terminal monitor”](#) on page 273
- [“undebg all”](#) on page 274

# banner exec

**Overview** This command configures the User Exec mode banner that is displayed on the console after you login. The **banner exec default** command restores the User Exec banner to the default banner. Use the **no banner exec** command to disable the User Exec banner and remove the default User Exec banner.

**Syntax** `banner exec <banner-text>`  
`banner exec default`  
`no banner exec`

**Default** By default, the AlliedWare Plus™ version and build date is displayed at console login, such as:

```
AlliedWare Plus (TM) 5.4.6-0 03/31/14 00:44:25
```

**Mode** Global Configuration

**Examples** To configure a User Exec mode banner after login, enter the following commands:

```
awplus#configure terminal

awplus(config)#banner exec enable to move to Priv Exec mode

awplus(config)#exit

awplus#exit
awplus login: manager

Password:

enable to move to Priv Exec mode

awplus>
```

To restore the default User Exec mode banner after login, enter the following commands:



```
awplus#configure terminal

awplus(config)#banner exec default

awplus(config)#exit

awplus#exit
awplus login: manager

Password:

AlliedWare
Plus (TM) 5.4.6-0 03/31/14
13:03:59
awplus>
```

To remove the User Exec mode banner after login, enter the following commands:

```
awplus#configure terminal

awplus(config)#no banner exec

awplus(config)#exit

awplus#exit

awplus login: manager

Password:

awplus>
```

**Related  
Commands**    [banner login \(system\)](#)  
              [banner motd](#)

# banner login (system)

**Overview** This command configures the login banner that is displayed on the console when you login. The login banner is displayed on all connected terminals. The login banner is displayed after the MOTD (Message-of-the-Day) banner and before the login username and password prompts.

Use the **no banner login** command to disable the login banner.

**Syntax** banner login  
no banner login

**Default** By default, no login banner is displayed at console login.

**Mode** Global Configuration

**Examples** To configure a login banner to be displayed when you login, enter the following commands:

```
awplus#configure terminal
awplus(config)#banner login
Type CNTL/D to finish.
authorised users only
awplus(config)#exit
awplus#exit
authorised users only
awplus login: manager
Password:
AlliedWare
Plus (TM) 5.4.6-0 03/31/14
13:03:59
awplus>
```

To remove the login banner, enter the following commands:

```
awplus#configure terminal
awplus(config)#no banner login
awplus(config)#exit
awplus#exit
awplus login: manager
Password:
awplus>
```

**Related  
Commands**   [banner exec](#)  
                  [banner motd](#)

# banner motd

**Overview** Use this command to create or edit the text MotD (Message-of-the-Day) banner displayed before login. The MotD banner is displayed on all connected terminals. The MotD banner is useful for sending messages that affect all network users, for example, any imminent system shutdowns.

Use the **no** variant of this command to delete the MotD banner.

**Syntax** `banner motd <motd-text>`  
`no banner motd`

| Parameter                      | Description  |
|--------------------------------|--|
| <code>&lt;motd-text&gt;</code> | The text to appear in the Message of the Day banner. |

**Default** By default, the device displays the AlliedWare Plus™ OS version and build date when you login.

**Mode** Global Configuration

**Examples** To configure a MotD banner to be displayed when you log in, enter the following commands:

```
awplus>enable
awplus#configure terminal
awplus(config)#banner motd system shutdown at 6pm
awplus(config)#exit
awplus#exit
system shutdown at 6pm

awplus login: manager
Password:

AlliedWare
Plus (TM) 5.4.6-0 03/31/14
13:03:59
```

To delete the login banner, enter the following commands:

```
awplus>enable

awplus#configure terminal

awplus(config)#no banner motd

awplus(config)#exit

awplus#exit

awplus login: manager

Password:

AlliedWare
Plus (TM) 5.4.6-0 03/31/14
13:03:59
awplus>
```

**Related  
Commands**   [banner exec](#)  
                  [banner login \(system\)](#)

# clock set

**Overview** This command sets the time and date for the system clock.

**Syntax** `clock set <hh:mm:ss> <day> <month> <year>`

| Parameter  | Description                                   |
|------------|---|
| <hh:mm:ss> | Local time in 24-hour format                  |
| <day>      | Day of the current month <1-31>               |
| <month>    | The first three letters of the current month. |
| <year>     | Current year <2000-2035>                      |

**Mode** Privileged Exec

**Usage** Configure the timezone before setting the local time. Otherwise, when you change the timezone, the device applies the new offset to the local time.

**NOTE:** *If Network Time Protocol (NTP) is enabled, then you cannot change the time or date using this command. NTP maintains the clock automatically using an external time source. If you wish to manually alter the time or date, you must first disable NTP.*

**Example** To set the time and date on your system to 2pm on the 2nd of April 2007, use the command:

```
awplus# clock set 14:00:00 2 apr 2007
```

**Related Commands** [clock timezone](#)

# clock summer-time date

**Overview** This command defines the start and end of summertime for a specific year only, and specifies summertime's offset value to Standard Time for that year.

The **no** variant of this command removes the device's summertime setting. This clears both specific summertime dates and recurring dates (set with the [clock summer-time recurring](#) command).

By default, the device has no summertime definitions set.

**Syntax**

```
clock summer-time <timezone-name> date <start-day>
<start-month> <start-year> <start-time> <end-day>
<end-month> <end-year> <end-time> <1-180>

no clock summer-time
```

| Parameter       | Description   |
|-----------------|---|
| <timezone-name> | A description of the summertime zone, up to 6 characters long.                      |
| date            | Specifies that this is a date-based summertime setting for just the specified year. |
| <start-day>     | Day that the summertime starts, in the range 1-31.                                  |
| <start-month>   | First three letters of the name of the month that the summertime starts.            |
| <start-year>    | Year that summertime starts, in the range 2000-2035.                                |
| <start-time>    | Time of the day that summertime starts, in the 24-hour time format HH:MM.           |
| <end-day>       | Day that summertime ends, in the range 1-31.  |
| <end-month>     | First three letters of the name of the month that the summertime ends.              |
| <end-year>      | Year that summertime ends, in the range 2000-2035.                                  |
| <end-time>      | Time of the day that summertime ends, in the 24-hour time format HH:MM.             |
| <1-180>         | The offset in minutes.  |

**Mode** Global Configuration

**Examples** To set a summertime definition for New Zealand using NZST (UTC+12:00) as the standard time, and NZDT (UTC+13:00) as summertime, with the summertime set to begin on the 1st October 2007 and end on the 18th of March 2008:

```
awplus(config)# clock summer-time NZDT date 1 oct 2:00 2007 18
mar 2:00 2008 60
```

To remove any summertime settings on the system, use the command:

```
awplus(config)# no clock summer-time
```

**Related  
Commands**   [clock summer-time recurring](#)  
[clock timezone](#)



# clock summer-time recurring

**Overview** This command defines the start and end of summertime for every year, and specifies summertime's offset value to Standard Time.

The **no** variant of this command removes the device's summertime setting. This clears both specific summertime dates (set with the [clock summer-time date](#) command) and recurring dates.

By default, the device has no summertime definitions set.

**Syntax** `clock summer-time <timezone-name> recurring <start-week>  
<start-day> <start-month> <start-time> <end-week> <end-day>  
<end-month> <end-time> <1-180>`  
`no clock summer-time`

| Parameter       | Description   |
|-----------------|---|
| <timezone-name> | A description of the summertime zone, up to 6 characters long.  |
| recurring       | Specifies that this summertime setting applies every year from now on.  |
| <start-week>    | Week of the month when summertime starts, in the range 1-5. The value 5 indicates the last week that has the specified day in it for the specified month. For example, to start summertime on the last Sunday of the month, enter 5 for <start-week> and sun for <start-day>. |
| <start-day>     | Day of the week when summertime starts. Valid values are mon, tue, wed, thu, fri, sat or sun.   |
| <start-month>   | First three letters of the name of the month that summertime starts.  |
| <start-time>    | Time of the day that summertime starts, in the 24-hour time format HH:MM.   |
| <end-week>      | Week of the month when summertime ends, in the range 1-5. The value 5 indicates the last week that has the specified day in it for the specified month. For example, to end summertime on the last Sunday of the month, enter 5 for <end-week> and sun for <end-day>.         |
| <end-day>       | Day of the week when summertime ends. Valid values are mon, tue, wed, thu, fri, sat or sun.   |
| <end-month>     | First three letters of the name of the month that summertime ends.  |
| <end-time>      | Time of the day that summertime ends, in the 24-hour time format HH:MM.   |
| <1-180>         | The offset in minutes.  |

**Mode** Global Configuration

**Examples** To set a summertime definition for New Zealand using NZST (UTC+12:00) as the standard time, and NZDT (UTC+13:00) as summertime, with summertime set to start on the 1st Sunday in October, and end on the 3rd Sunday in March, use the command:

```
awplus(config)# clock summer-time NZDT recurring 1 sun oct 2:00  
3 sun mar 2:00 60
```

To remove any summertime settings on the system, use the command:

```
awplus(config)# no clock summer-time
```

**Related  
Commands** [clock summer-time date](#)  
[clock timezone](#)

# clock timezone

**Overview** This command defines the device's clock timezone. The timezone is set as a offset to the UTC.

The **no** variant of this command resets the system time to UTC.

By default, the system time is set to UTC.

**Syntax** `clock timezone <timezone-name> {minus|plus}  
[<0-13>|<0-12>:<00-59>]  
no clock timezone`

| Parameter       | Description  |
|-----------------|--|
| <timezone-name> | A description of the timezone, up to 6 characters long.  |
| minus or plus   | The direction of offset from UTC. The <b>minus</b> option indicates that the timezone is behind UTC. The <b>plus</b> option indicates that the timezone is ahead of UTC. |
| <0-13>          | The offset in hours or from UTC.   |
| <0-12>:<00-59>  | The offset in hours or from UTC.   |

**Mode** Global Configuration

**Usage** Configure the timezone before setting the local time. Otherwise, when you change the timezone, the device applies the new offset to the local time.

**Examples** To set the timezone to New Zealand Standard Time with an offset from UTC of +12 hours, use the command:

```
awplus(config)# clock timezone NZST plus 12
```

To set the timezone to Indian Standard Time with an offset from UTC of +5:30 hours, use the command:

```
awplus(config)# clock timezone IST plus 5:30
```

To set the timezone back to UTC with no offsets, use the command:

```
awplus(config)# no clock timezone
```

**Related Commands** [clock set](#)  
[clock summer-time date](#)  
[clock summer-time recurring](#)

# continuous-reboot-prevention

**Overview** Use this command to enable and to configure the continuous reboot prevention feature. Continuous reboot prevention allows the user to configure the time period during which reboot events are counted, the maximum number of times the switch can reboot within the specified time period, referred to as the threshold, and the action to take if the threshold is exceeded.

Use the **no** variant of this command to disable the continuous reboot prevention feature or to return the **period**, **threshold** and **action** parameters to the defaults.

**Syntax**

```
continuous-reboot-prevention enable  
continuous-reboot-prevention [period <0-604800>] [threshold  
<1-10>] [action [linkdown|logonly|stopreboot]]  
no continuous-reboot-prevention enable  
no continuous-reboot-prevention [period] [threshold] [action]]
```

| Parameter | Description   |
|-----------|---|
| enable    | Enable the continuous reboot prevention feature.  |
| period    | Set the period of time in which reboot events are counted.<br><br><0-604800>                      Period value in seconds. The default is 600.  |
| threshold | Set the maximum number of reboot events allowed in the specified period.<br><br><1-10>                          Threshold value. The default is 1.  |
| action    | Set the action taken if the threshold is exceeded.<br><br>linkdown                      Reboot procedure continues and all switch ports and stack ports stay link-down. The reboot event is logged. This is the default action.<br><br>logonly                        Reboot procedure continues normally and the reboot event is logged.<br><br>stopreboot                    Reboot procedure stops until the user enters the key "c" via the CLI. Normal reboot procedure then continues and the reboot event is logged. |

**Default** Continuous reboot prevention is disabled by default. The default `period` value is 600, the default `threshold` value is 1 and the default `action` is `linkdown`.

**Mode** Global Configuration

**Usage** Note that user initiated reboots via the CLI, and software version auto-synchronization reboots, are not counted toward the threshold value.

**Examples** To enable continuous reboot prevention, use the commands:

```
awplus# configure terminal
awplus(config)# continuous-reboot-prevention enable
```

To set the period to 500 and action to stopreboot, use the commands:

```
awplus# configure terminal
awplus(config)# continuous-reboot-prevention period 500 action
stopreboot
```

To return the period and action to the defaults and keep the continuous reboot prevention feature enabled, use the commands:

```
awplus# configure terminal
awplus(config)# no continuous-reboot-prevention period action
```

To disable continuous reboot prevention, use the commands:

```
awplus# configure terminal
awplus(config)# no continuous-reboot-prevention enable
```

**Related  
Commands** [show continuous-reboot-prevention](#)  
[show reboot history](#)  
[show tech-support](#)

# ecofriendly led

**Overview** Use this command to enable the eco-friendly LED (Light Emitting Diode) feature, which turns off power to the port LEDs, including the stack port status LEDs. Power to the system status and stack management LEDs is not disabled.

Use the **no** variant of this command to disable the eco-friendly LED feature.

**Syntax** `ecofriendly led`  
`no ecofriendly led`

**Default** The eco-friendly LED feature is disabled by default.

**Mode** Global Configuration

**Usage** When the eco-friendly LED feature is enabled, a change in port status will not affect the display of the associated LED. When the eco-friendly LED feature is disabled and power is returned to port LEDs, the LEDs will correctly show the current state of the ports.

In a stack environment, enabling the eco-friendly LED feature on the stack master will apply the feature to every member of the stack.

For an example of how to configure a trigger to turn off power to port LEDs, see the [Triggers Feature Overview and Configuration Guide](#).

**Examples** To enable the eco-friendly LED feature which turns off power to all port LEDs, use the following commands:

```
awplus# configure terminal
awplus(config)# ecofriendly led
```

To disable the eco-friendly LED feature, use the following command:

```
awplus# configure terminal
awplus(config)# no ecofriendly led
```

**Related Commands** [ecofriendly lpi](#)  
[show ecofriendly](#)

## ecofriendly lpi

Use this command to conserve power by enabling the eco-friendly LPI (Low Power Idle) feature. This feature reduces the power supplied to the ports by the switch whenever the ports are idle and are connected to IEEE 802.3az Energy Efficient Ethernet compliant host devices.

LPI is a feature of the IEEE 802.3az Energy Efficient Ethernet (EEE) standard. LPI lowers power consumption of switch ports during periods of low link utilization when connected to IEEE 802.3az compliant host devices. If no data is sent then the switch port can enter a sleep state, called Low Power Idle (LPI), to conserve power used by the switch.

Use the **no** variant of this command to disable the eco-friendly LPI feature.

**Syntax**    `ecofriendly lpi`  
             `no ecofriendly lpi`

**Default**    The eco-friendly LPI feature is disabled by default.

**Mode**       Interface Configuration for a switch port, or Interface Configuration for a range of switch ports.

**Usage**       For an example of how to configure a trigger to enable the eco-friendly LPI feature, see the [Triggers Feature Overview and Configuration Guide](#).

All ports configured for LPI must support LPI in hardware and must be configured to auto negotiate by default or by using the [speed](#) and [duplex](#) commands as needed.

**Examples**    To enable the eco-friendly LPI feature on a switch port, port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# ecofriendly lpi
```

To enable the eco-friendly LPI feature on a range of switch ports, port1.0.2-port1.0.4, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2-port1.0.4
awplus(config-if)# ecofriendly lpi
```

To disable the eco-friendly feature on port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no ecofriendly lpi
```

To disable the eco-friendly feature on a range of switch ports, port1.0.2-port1.0.4, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2-port1.0.4
awplus(config-if)# no ecofriendly lpi
```

**Related  
Commands**

[duplex](#)  
[ecofriendly led](#)  
[show ecofriendly](#)  
[show interface](#)  
[speed](#)



# findme

**Overview** Use this command to physically locate a specific device from a group of similar devices. Activating the command causes a selected number of port LEDs to alternately flash green then amber (if that device has amber LEDs) at a rate of 1 Hz.

Use the **no** variant of this command to deactivate the Find Me feature prior to the timeout expiring.

**Syntax** `findme [interface <port-list>|member <stack-ID>] [timeout <duration>]`  
`no findme`

| Parameter   | Description  |
|-------------|--|
| <port-list> | The ports to flash. The port list can be: <ul style="list-style-type: none"><li>• a switch port, e.g. port1.0.4</li><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-1.0.4</li><li>• a comma-separated list of ports and port ranges, e.g. port1.0.1,port1.0.5-1.0.6.</li></ul> |
| <stack-ID>  | Stack member number, from 1 to 8.  |
| <duration>  | Specify the duration in seconds within the range of 5-3600 seconds.  |

**Default** By default all port LEDs flash for 60 seconds.

**Mode** Privileged Exec

**Usage** Running the **findme** command causes the device's port LEDs to flash. An optional **timeout** parameter specifies the flash behavior duration. Normal LED behavior is restored automatically after either the default time, or a specified time has elapsed, or a **no findme** command is used. You can specify which interface or interfaces are flashed with the optional **interface** parameter.

You can specify a particular stack member with the optional **member** parameter. All available interfaces are flashed by default.

**NOTE:** The **interface** and **member** parameters are mutually exclusive.

**Example** To activate the Find Me feature for the default duration (60 seconds) on all ports, use the following command:

```
awplus# findme
```

To activate the Find Me feature for 120 seconds on all ports, use the following command:

```
awplus# findme timeout 120
```

To activate the Find Me feature for the default duration (60 seconds) on switch port interfaces `port1.0.2` through `port1.0.4`, use the following command:

```
awplus# findme interface port1.0.2-1.0.4
```

In the example above, ports 2 to 4 will flash 4 times and then all ports will flash twice. Each alternate flash will be amber (if that device has amber LEDs). This pattern will repeat until **timeout** (default or set) or **no findme** commands are used.

To deactivate the Find Me feature, use the following command:

```
awplus# no findme
```

To activate the Find Me feature for the default duration on stack member 2, use the following command:

```
awplus# findme member 2
```

In the example above, all ports on member 2 will flash 4 times and then all ports in the stack will flash twice. Each alternate flash will be amber (if that device has amber LEDs). This pattern will repeat until the **timeout** (default or set) expires or the **no findme** commands is used.

# findme trigger

**Overview** When this command is enabled, the LED flashing functionality of the **find-me** command is applied whenever any or all of the selected parameter conditions is detected.

Use the **no** variant to remove the findme trigger function for the selected parameter.

**Syntax** `findme trigger {all|loopprot|thrash-limit|qsp}`  
`no findme trigger {all|loopprot|thrash-limit|qsp}`

| Parameter    | Description   |
|--------------|---|
| all          | Enable the find-me function whenever any of the listed parameter conditions is detected |
| loopprot     | Enable the findme function whenever the loop protection condition is detected.          |
| thrash-limit | Enable the findme function whenever the thrash-limiting condition is detected.          |
| qsp          | Enable the findme function whenever the QoS Storm Protection condition is detected.     |

**Default** The findme trigger function is disabled.

**Mode** Global config

**Example** To enable action LED flashing for the loop protection function:

```
awplus# findme trigger loopprot
```

**Related Commands** [findme](#)  
[loop-protection loop-detect](#)  
[storm-protection](#)

# hostname

**Overview** This command sets the name applied to the device as shown at the prompt. The hostname is:

- displayed in the output of the [show system](#) command
- displayed in the CLI prompt so you know which device you are configuring
- stored in the MIB object sysName

On a stack, after the stack master is elected, the master will have a host name: `awplus` by default, and this also becomes the name of the stack. Individual stack members (excluding the master) will have a host name that is the stack name hyphenated with a numeric suffix. For example, `awplus-1`, `awplus-2` and so on.

The hostname command can then be used to change the stack name and the stack master's host name. For example, for the hostname `Lab` the stack master's host name will be `Lab` and the other stack members will have host names `Lab-1`, `Lab-2` and so on.

In case of stack master fail-over, or stack split, the new stack will use the previous stack name as its host name and the stack name, unless it is changed by executing the hostname command on the new stack master.

Use the **no** variant of this command to revert the hostname setting to its default (`awplus`).

**Syntax** `hostname <hostname>`  
`no hostname [<hostname>]`

| Parameter                     | Description   |
|-------------------------------|---|
| <code>&lt;hostname&gt;</code> | Specifies the name given to a specific device. Also referred to as the Node Name in AMF output screens. |

**Default** `awplus`

**Mode** Global Configuration

**Usage** The name must also follow the rules for ARPANET host names. The name must start with a letter, end with a letter or digit, and use only letters, digits, and hyphens. Refer to RFC 1035.

**NOTE:** *Within an AMF network, any device without a hostname applied will automatically be assigned a name based on its MAC address.*

*To efficiently manage your network using AMF, we strongly advise that you devise a naming convention for your network devices and accordingly apply an appropriate hostname to each device.*

**Example** To set the system name to HQ-Sales, use the command:

```
awplus# configure terminal
awplus(config)# hostname HQ-Sales
```

This changes the prompt to:

```
HQ-Sales(config)#
```

To revert to the default hostname awplus, use the command:

```
HQ-Sales(config)# no hostname
```

This changes the prompt to:

```
awplus(config)#
```

**NOTE:** When AMF is configured, running the **no hostname** command will apply a hostname that is based on the MAC address of the device node, for example, **node\_0000\_5e00\_5301**.

**Related  
Commands** [show system](#)

# max-fib-routes

**Overview** This command enables you to control the maximum number of FIB routes configured. It operates by providing parameters that enable you to configure preset maximums and warning message thresholds. The operation of these parameters is explained in the Parameter / Description table shown below.

**NOTE:** For static routes use the [max-static-routes](#) command.

Use the **no** variant of this command to set the maximum number of FIB routes to the default of 4294967294 FIB routes.

**Syntax** `max-fib-routes <1-4294967294> [<1-100>|warning-only]`  
`no max-fib-routes`

| Parameter      | Description  |
|----------------|--|
| max-fib-routes | This is the maximum number of routes that can be stored in the device's Forwarding Information dataBase. In practice, other practical system limits would prevent this maximum being reached.  |
| <1-4294967294> | The allowable configurable range for setting the maximum number of FIB-routes.   |
| <1-100>        | This parameter enables you to optionally apply a percentage value. This percentage will be based on the maximum number of FIB routes you have specified. This will cause a warning message to appear when your routes reach your specified percentage value. Routes can continue to be added until your configured maximum value is reached. |
| warning-only   | This parameter enables you to optionally apply a warning message. If you set this option a warning message will appear if your maximum configured value is reached. Routes can continue to be added until your device reaches either the maximum capacity value of 4294967294, or a practical system limit.                                  |

**Default** The default number of fib routes is the maximum number of fib routes (4294967294).

**Mode** Global Configuration

**Examples** To set the maximum number of dynamic routes to 2000 and warning threshold of 75%, use the following commands:

```
awplus# config terminal
awplus(config)# max-fib-routes 2000 75
```

# max-static-routes

**Overview** Use this command to set the maximum number of static routes, excluding FIB (Forwarding Information Base) routes.

**NOTE:** For FIB routes use the [max-fib-routes](#) command.

Use the **no** variant of this command to set the maximum number of static routes to the default of 1000 static routes.

**Syntax** `max-static-routes <1-1000>`  
`no max-static-routes`

**Default** The default number of static routes is the maximum number of static routes (1000).

**Mode** Global Configuration

**Example** To reset the maximum number of static routes to the default maximum, use the command:

```
awplus# configure terminal
awplus(config)# no max-static-routes
```

**NOTE:** Static routes are applied before adding routes to the RIB (Routing Information Base). Therefore, rejected static routes will not appear in the running config.

**Related  
Commands** [max-fib-routes](#)

# no debug all

**Overview** This command disables the debugging facility for all features on your device. This stops the device from generating any diagnostic debugging messages.

The debugging facility is disabled by default.

**Syntax** `no debug all [ipv6|dot1x|nsm]`

| Parameter | Description  |
|-----------|--|
| dot1x     | Turns off all debugging for IEEE 802.1X port-based network access-control. |
| ipv6      | Turns off all debugging for IPv6 (Internet Protocol version 6).            |
| nsm       | Turns off all debugging for the NSM (Network Services Module).             |

**Mode** Global Configuration and Privileged Exec

**Example** To disable debugging for all features, use the command:

```
awplus# no debug all
```

To disable all 802.1X debugging, use the command:

```
awplus# no debug all dot1x
```

To disable all IPv6 debugging, use the command:

```
awplus# no debug all ipv6
```

To disable all NSM debugging, use the command:

```
awplus# no debug all nsm
```

**Related Commands** [undebug all](#)



# reboot

**Overview** This command halts the device and performs a cold restart (also known as reload). It displays a confirmation request before restarting.

You can reboot a stand-alone device, a stack, or a specified stack member.

**Syntax**

```
reboot <stack-ID>
reload <stack-ID>
reboot
reload
```

| Parameter  | Description                       |
|------------|-----------------------------------|
| <stack-ID> | Stack member number, from 1 to 8. |

**Mode** Privileged Exec

**Usage** The **reboot** and **reload** commands perform the same action.

When restarting the whole stack, you can either use this **reboot** command to reboot all stack members immediately, or to minimize downtime, reboot the stack members in a rolling sequence by using the [reboot rolling](#) command.

**Examples** To restart the device, use the command:

To restart the stand-alone device, use the command:

```
awplus# reboot
reboot system? (y/n): y
```

To restart all devices in the stack, use the command:

```
awplus# reboot
Are you sure you want to reboot the whole
stack? (y/n): y
```

To restart stack member 2, use the command:

```
awplus# reboot stack-member 2
reboot stack-member 2 system? (y/n): y
```

If the specified stack member ID does not exist in the current stack, the command is rejected.

**Related  
Commands**

- [reboot rolling](#)
- [reload rolling](#)

# reload

**Overview** This command performs the same function as the [reboot](#) command.

# show clock

**Overview** This command displays the system's current configured local time and date. It also displays other clock related information such as timezone and summertime configuration.

**Syntax** show clock

**Mode** User Exec and Privileged Exec

**Example** To display the system's current local time, use the command:

```
awplus# show clock
```

**Output** Figure 6-1: Example output from the **show clock** command for a device using New Zealand time

```
Local Time: Mon,  6 Aug 2007 13:56:06 +1200
UTC Time:   Mon,  6 Aug 2007 01:56:06 +0000
Timezone:  NZST
Timezone Offset: +12:00
Summer time zone: NZDT
Summer time starts: Last Sunday in September at 02:00:00
Summer time ends: First Sunday in April at 02:00:00
Summer time offset: 60 mins
Summer time recurring: Yes
```

**Table 1:** Parameters in the output of the **show clock** command

| Parameter             | Description   |
|-----------------------|---|
| Local Time            | Current local time.   |
| UTC Time              | Current UTC time.   |
| Timezone              | The current configured timezone name.   |
| Timezone Offset       | Number of hours offset to UTC.  |
| Summer time zone      | The current configured summertime zone name.                                    |
| Summer time starts    | Date and time set as the start of summer time.                                  |
| Summer time ends      | Date and time set as the end of summer time.                                    |
| Summer time offset    | Number of minutes that summer time is offset from the system's timezone.        |
| Summer time recurring | Whether the device will apply the summer time settings every year or only once. |

**Related  
Commands**

- [clock set](#)
- [clock summer-time date](#)
- [clock summer-time recurring](#)
- [clock timezone](#)

# show continuous-reboot-prevention

**Overview** This command displays the current continuous reboot prevention configuration.

**Syntax** `show continuous-reboot-prevention`

**Mode** User Exec and Privileged Exec

**Examples** To show the current continuous reboot prevention configuration, use the command:

```
awplus# show continuous-reboot-prevention
```

**Output** Figure 6-2: Example output from the **show continuous-reboot-prevention** command

```
-----  
Continuous reboot prevention  
-----  
status=disabled  
period=600  
threshold=1  
action=linkdown  
-----
```

**Related Commands** [continuous-reboot-prevention](#)  
[show reboot history](#)

# show cpu

**Overview** This command displays a list of running processes with their CPU utilization. For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show cpu [<stack-ID>] [sort {thrds|pri|sleep|runtime}]`

| Parameter  | Description   |
|------------|---|
| <stack-ID> | Stack member number, from 1 to 8.   |
| sort       | Changes the sorting order using the following fields. If you do not specify a field, then the list is sorted by percentage CPU utilization. |
|            | thrds      Sort by the number of threads.   |
|            | pri        Sort by the process priority.  |
|            | sleep      Sort by the average time sleeping.   |
|            | runtime    Sort by the runtime of the process.  |

**Mode** User Exec and Privileged Exec

**Usage** Entering this command on the stack master will display the information for all the stack members. A stack member heading will distinguish the different information for every stack member device.

**Examples** To show the CPU utilization of current processes, sorting them by the number of threads the processes are using, use the command:

```
awplus# show cpu sort thrds
```

Note that in a stack environment, executing this command on the stack master will show CPU utilization for all stack members.

To show CPU utilization for a specific stack member (in this case stack member 2), use the following command:

```
awplus# show cpu 2
```

**Output** Figure 6-3: Example output from the **show cpu** command

```
Stack
member 2:

CPU averages:
  1 second: 12%, 20 seconds: 2%, 60 seconds: 2%
System load averages:
  1 minute: 0.03, 5 minutes: 0.02, 15 minutes: 0.00
Current CPU load:
  userspace: 6%, kernel: 4%, interrupts: 1% iowaits: 0%

user processes
=====
   pid namethrds  cpu%   pri state sleep% runtime
1544 hostd              1   2.8   20  run      0    120
1166 exfx              17   1.8   20 sleep    0   3846
1198 stackd             1   0.9   20 sleep    0    459
1284 aisexec            44   0.9   -2 sleep    0   2606
   1  init              1   0.0   20 sleep    0    120
9772 sh                  1   0.0   20 sleep    0     0
9773 corerotate          1   0.0   20 sleep    0     0
  853 syslog-ng          1   0.0   20 sleep    0    356
  859 klogd               1   0.0   20 sleep    0     1
  910 inetd               1   0.0   20 sleep    0     3
  920 portmap             1   0.0   20 sleep    0     0
  931 crond                1   0.0   20 sleep    0     1
1090 openhpid            11   0.0   20 sleep    0    233
1111 hpilogd              1   0.0   20 sleep    0     0
1240 hsl                  1   0.0   20 sleep    0     79
1453 authd                1   0.0   20 sleep    0     85
1497 cntrd                1   0.0   20 sleep    0     2
1520 epsrd                1   0.0   20 sleep    0     56
1571 imi                  1   0.0   20 sleep    0    275
1594 irdpd                1   0.0   20 sleep    0     23
1617 lacpd                1   0.0   20 sleep    0     87
1638 mstpd                1   0.0   20 sleep    0     75
1662 nsm                  1   0.0   20 sleep    0    163
1685 ospfd                1   0.0   20 sleep    0     35
1708 pdmd                 1   0.0   20 sleep    0     23
1729 pimd                 1   0.0   20 sleep    0     32
1751 ripd                  1   0.0   20 sleep    0     33
1775 ripngd               1   0.0   20 sleep    0     25
1797 rmond                1   0.0   20 sleep    0     64
1963 ntpd                  1   0.0   20 sleep    0     15

...
```

**Table 2:** Parameters in the output of the **show cpu** command

| Parameter            | Description   |
|----------------------|---|
| Stack member         | Stack member number.  |
| CPU averages         | Average CPU utilization for the periods stated.   |
| System load averages | The average number of processes waiting for CPU time for the periods stated.  |
| Current CPU load     | Current CPU utilization specified by load types.  |
| pid                  | Identifier number of the process.   |
| name                 | A shortened name for the process  |
| thrds                | Number of threads in the process.   |
| cpu%                 | Percentage of CPU utilization that this process is consuming.   |
| pri                  | Process priority state.   |
| state                | Process state; one of "run", "sleep", "zombie", and "dead".   |
| sleep%               | Percentage of time that the process is in the sleep state.  |
| runtime              | The time that the process has been running for, measured in jiffies. A jiffy is the duration of one tick of the system timer interrupt. |

**Related  
Commands**

[show memory](#)  
[show memory allocations](#)  
[show memory history](#)  
[show memory pools](#)  
[show process](#)



# show cpu history

**Overview** This command prints a graph showing the historical CPU utilization.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show [<stack-ID>] cpu history`

| Parameter  | Description                       |
|------------|-----------------------------------|
| <stack-ID> | Stack member number, from 1 to 8. |

**Mode** User Exec and Privileged Exec

**Usage** This command’s output displays three graphs of the percentage CPU utilization:

- per second for the last minute, then
- per minute for the last hour, then
- per 30 minutes for the last 30 hours.

If this command is entered on the stack master, it will print graphs for all the stack members. A stack member heading will be displayed to distinguish the different graphs for every stack member.

**Examples** To display a graph showing the historical CPU utilization of the device, use the command:

```
awplus# show cpu history
```

To display the CPU utilization history graph for stack member 2, use the command:

```
awplus# show 2 cpu history
```

where 2 is the node id of the stack member.

**Output** Figure 6-4: Example output from the **show cpu history** command

```

Per second CPU load history

100
 90
 80
 70
 60
 50
 40
 30
 20
 10 *****
    |...|...|...|...|...|...|...|...|...|...|...|...
    Oldest                                         Newest
          CPU load% per second (last 60 seconds)
            * = average CPU load%

Per minute CPU load history

100      *+
 90      +
 80
 70
 60
 50
 40
 30
 20              +              +
 10 *****
    |...|...|...|...|...|...|...|...|...|...|...|...
    Oldest                                         Newest
          CPU load% per minute (last 60 minutes)
            * = average CPU load%, + = maximum

Per (30) minute CPU load history

100                                             +
 90
 80
 70
 60
 50
 40
 30
 20
 10      **
    |...|...|...|...|...|...|...|...|...|...|...|...
    Oldest                                         Newest
          CPU load% per 30 minutes (last 60 values / 30 hours)
            * = average, - = minimum, + = maximum

```

**Related  
Commands**

- `show memory`
- `show memory allocations`
- `show memory pools`
- `show process`

# show debugging

- Overview** This command displays information for all debugging options.
- For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).
- Syntax** `show debugging`
- Default** This command runs all the **show debugging** commands in alphabetical order.
- Mode** User Exec and Privileged Exec
- Usage** This command displays all debugging information, similar to the way the [show tech-support](#) command displays all show output for use by Allied Telesis authorized service personnel only.
- Example** To display all debugging information, use the command:
- ```
awplus# show debugging
```
- Output** Figure 6-5: Example output from the **show debugging** command

```
awplus#show debugging
AAA debugging status:
  Authentication debugging is off
  Accounting debugging is off

% DHCP Snooping service is disabled

802.1X debugging status:

EPSR debugging status:
  EPSR Info debugging is off
  EPSR Message debugging is off
  EPSR Packet debugging is off
  EPSR State debugging is off

IGMP Debugging status:
  IGMP Decoder debugging is off
  IGMP Encoder debugging is off
...
```

# show ecofriendly

**Overview** This command displays the switch's eco-friendly configuration status. The [ecofriendly led](#) and [ecofriendly lpi](#) configuration status are shown in the [show ecofriendly](#) output.

**Syntax** show ecofriendly

**Mode** Privileged Exec and Global Configuration

**Example** To display the switch's eco-friendly configuration status, use the following command:

```
awplus# show ecofriendly
```

**Output** Figure 6-6: Example output from the **show ecofriendly** command

```
awplus#show ecofriendly
Front panel port LEDs          normal
Energy efficient ethernet
Port      Name                 Configured  Status
port1.0.1  Port 1                 lpi        lpi
port1.0.2                      lpi        lpi
port1.0.3                      lpi        lpi
port1.0.4                      off        off
port1.0.5                      lpi        off
port1.0.6  Port 6                 off        off
port1.0.7                      off        -
port1.0.8                      off        -
port1.0.9                      off        -
port1.0.10                     off        -
...
```

**Table 3:** Parameters in the output of the **show ecofriendly** command

| Parameter                                                | Description                                                                                                                                                                                                      |
|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| normal                                                   | The eco-friendly LED feature is disabled and port LEDs show the current state of the ports. This is the default setting.                                                                                         |
| off                                                      | The eco-friendly LED feature is enabled and power to the port LEDs is disabled.                                                                                                                                  |
| normal<br>(configuration<br>overridden by eco<br>button) | The eco-friendly LED feature has been disabled with the eco-switch button, overriding the configuration set with the <a href="#">ecofriendly led</a> command. The port LEDs show the current state of the ports. |

**Table 3:** Parameters in the output of the **show ecofriendly** command (cont.)

| Parameter                                    | Description                                                                                                                                                                                      |
|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| off (configuration overridden by eco button) | The eco-friendly LED feature has been enabled with the eco-switch button, overriding the configuration set with the <a href="#">ecofriendly led</a> command. Power to the port LEDs is disabled. |
| Port                                         | Displays the port number as assigned by the switch.                                                                                                                                              |
| Name                                         | Displays the port name if a name is configured for a port number.                                                                                                                                |
| Configured                                   | The eco-friendly LPI feature is configured on the port. Either LPI or off is displayed.                                                                                                          |
| Status                                       | The eco-friendly LPI feature is active on the port. Either LPI or off is displayed. Ports that are not running show a dash (-).                                                                  |

**Related  
Commands**   [ecofriendly led](#)  
[ecofriendly lpi](#)

# show interface memory

**Overview** This command displays the shared memory used by either all interfaces, or the specified interface or interfaces. The output is useful for diagnostic purposes by Allied Telesis authorized service personnel.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show interface memory`  
`show interface <port-list> memory`

| Parameter   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port-list> | The ports to display information about. The port list can be: <ul style="list-style-type: none"><li>• a switch port (e.g. port1.0.4) a static channel group (e.g. sa2) or a dynamic (LACP) channel group (e.g. po2)</li><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-1.0.4, or sa1-2, or po1-2</li><li>• a comma-separated list of ports and port ranges, e.g. port1.0.1, port1.0.4-1.0.6. Do not mix switch ports, static channel groups, and dynamic (LACP) channel groups in the same list</li></ul> |

**Mode** User Exec and Privileged Exec

**Example** To display the shared memory used by all interfaces, use the command:

```
awplus# show interface memory
```

To display the shared memory used by port1.0.1 and port1.0.5 to port1.0.6, use the command:

```
awplus# show interface port1.0.1,port1.0.5-1.0.6 memory
```

**Output** Figure 6-7: Example output from the **show interface <port-list> memory** command

|                                                        |        |            |        |        |
|--------------------------------------------------------|--------|------------|--------|--------|
| awplus#show interface port1.0.1,port1.0.5-1.0.6 memory |        |            |        |        |
| Vlan blocking state shared memory usage                |        |            |        |        |
| -----                                                  |        |            |        |        |
| Interface                                              | shmid  | Bytes Used | nattch | Status |
| port1.0.1                                              | 393228 | 512        | 1      |        |
| port1.0.5                                              | 491535 | 512        | 1      |        |
| port1.0.6                                              | 557073 | 512        | 1      |        |

Figure 6-8: Example output from the **show interface memory** command

```
awplus#show interface memory
Vlan blocking state shared memory usage
-----
```

| Interface  | shmid   | Bytes Used | nattch | Status |
|------------|---------|------------|--------|--------|
| port1.0.1  | 393228  | 512        | 1      |        |
| port1.0.2  | 458766  | 512        | 1      |        |
| port1.0.3  | 360459  | 512        | 1      |        |
| port1.0.4  | 524304  | 512        | 1      |        |
| port1.0.5  | 491535  | 512        | 1      |        |
| port1.0.6  | 557073  | 512        | 1      |        |
| port1.0.7  | 327690  | 512        | 1      |        |
| port1.0.8  | 655380  | 512        | 1      |        |
| port1.0.9  | 622611  | 512        | 1      |        |
| ...        |         |            |        |        |
| port1.0.21 | 950301  | 512        | 1      |        |
| port1.0.22 | 1048608 | 512        | 1      |        |
| port1.0.23 | 1015839 | 512        | 1      |        |
| port1.0.24 | 1081377 | 512        | 1      |        |
| lo         | 425997  | 512        | 1      |        |
| po1        | 1179684 | 512        | 1      |        |
| po2        | 1212453 | 512        | 1      |        |
| sa3        | 1245222 | 512        | 1      |        |

**Related  
Commands**

[show interface brief](#)  
[show interface status](#)  
[show interface switchport](#)



# show memory

**Overview** This command displays the memory used by each process that is currently running. For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show memory [<stack-ID>] [sort {size|peak|stk}]`

| Parameter  | Description                                                                                                                                |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <stack-ID> | Stack member number, from 1 to 8.                                                                                                          |
| sort       | Changes the sorting order for the list of processes. If you do not specify this, then the list is sorted by percentage memory utilization. |
|            | size Sort by the amount of memory the process is currently using.                                                                          |
|            | peak Sort by the amount of memory the process is currently using.                                                                          |
|            | stk Sort by the stack size of the process.                                                                                                 |

**Mode** User Exec and Privileged Exec

**Usage** If this command is entered on the stack master, it will display corresponding memory utilization information for all the stack members. A stack member heading will display the information for every stack member device.

**Example** To display the memory used by the current running processes, use the command:

```
awplus# show memory
```

**Output** Figure 6-9: Example output from the **show memory** command

```
awplus#show memory

Stack member 1:

RAM total: 514920 kB; free: 382716; buffers: 16368 kB

user processes
=====
pid name          mem%   size   peak   data   stk
962 pss            6    33112  36260  27696  244
1  init            0      348   1092    288    84
797 syslog-ng      0      816   2152    752    84
803 klogd          0      184   1244    124    84
843 inetd          0      256   1256    136    84
...
```

**Table 4:** Parameters in the output of the **show memory** command

| Parameter    | Description                                                      |
|--------------|------------------------------------------------------------------|
| Stack member | Stack member number.                                             |
| RAM total    | Total amount of RAM memory free.                                 |
| free         | Available memory size.                                           |
| buffers      | Memory allocated kernel buffers.                                 |
| pid          | Identifier number for the process.                               |
| name         | Short name used to describe the process.                         |
| mem%         | Percentage of memory utilization the process is currently using. |
| size         | Amount of memory currently used by the process.                  |
| peak         | Greatest amount of memory ever used by the process.              |
| data         | Amount of memory used for data.                                  |
| stk          | The stack size.                                                  |

**Related  
Commands**

- [show memory allocations](#)
- [show memory history](#)
- [show memory pools](#)
- [show memory shared](#)

# show memory allocations

**Overview** This command displays the memory allocations used by processes.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show memory allocations [<process>]

| Parameter | Description                                                   |
|-----------|---------------------------------------------------------------|
| <process> | Displays the memory allocation used by the specified process. |

**Mode** User Exec and Privileged Exec

**Example** To display the memory allocations used by all processes on your device, use the command:

```
awplus# show memory allocations
```

**Output** Figure 6-10: Example output from the **show memory allocations** command

```
awplus#show memory allocations
Memory allocations for imi
-----

Current 15093760 (peak 15093760)

Statically allocated memory:
- binary/exe           :    1675264
- libraries            :    8916992
- bss/global data     :    2985984
- stack                :    139264

Dynamically allocated memory (heap):
- total allocated      :    1351680
- in use               :    1282440
- non-mmapped          :    1351680
- maximum total allocated :    1351680
- total free space     :     69240
- releasable           :     68968
- space in freed fastbins :        16

Context
      filename:line    allocated    freed
+      lib.c:749        484
.
.
.
```

**Related  
Commands**

- show memory
- show memory history
- show memory pools
- show memory shared
- show tech-support

# show memory history

**Overview** This command prints a graph showing the historical memory usage.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show memory history <stack-ID>`

| Parameter                     | Description                       |
|-------------------------------|-----------------------------------|
| <code>&lt;stack-ID&gt;</code> | Stack member number, from 1 to 8. |

**Mode** User Exec and Privileged Exec

**Usage** This command’s output displays three graphs of the percentage memory utilization:

- per second for the last minute, then
- per minute for the last hour, then
- per 30 minutes for the last 30 hours.

If entered on the stack master, this command will display corresponding memory utilization information for all the stack members. A stack member heading will be displayed to distinguish the different lists for every stack member.

**Examples** To show a graph displaying the historical memory usage for either a single unstacked device, or a complete stack, use the command:

```
awplus# show memory history
```

To show a graph displaying the historical memory usage for specific stack member (stack member 2 in this example) within a stack, use the command:

```
awplus# show memory history 2
```

**Output** Figure 6-11: Example output from the **show memory history** command

```
STACK member 1:

Per minute memory utilization history

100
 90
 80
 70
 60
 50
 40*****
 30
 20
 10
   |...|...|...|...|...|...|...|...|...|...|...|...
   Oldest   Newest
      Memory utilization% per minute (last 60 minutes)
          * = average memory utilisation%.
...
```

**Related  
Commands**

- [show memory allocations](#)
- [show memory pools](#)
- [show memory shared](#)
- [show tech-support](#)

# show memory pools

**Overview** This command shows the memory pools used by processes.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show memory pools [<process>]`

| Parameter | Description                                              |
|-----------|----------------------------------------------------------|
| <process> | Displays the memory pools used by the specified process. |

**Mode** User Exec and Privileged Exec

**Example** To shows the memory pools used by processes, use the command:

```
awplus# show memory pools
```

**Output** Figure 6-12: Example output from the **show memory pools** command

```
awplus#show memory pools
Memory pools for imi
-----

Current 15290368 (peak 15290368)

Statically allocated memory:
- binary/exe           :    1675264
- libraries            :    8916992
- bss/global data      :    2985984
- stack                :    139264

Dynamically allocated memory (heap):
- total allocated       :    1548288
- in use                :    1479816
- non-mmapped           :    1548288
- maximum total allocated :    1548288
- total free space      :     68472
- releasable            :     68200
- space in freed fastbins :        16
.
.
.
```

**Related Commands**

- [show memory allocations](#)
- [show memory history](#)
- [show tech-support](#)

# show memory shared

**Overview** This command displays shared memory allocation information. The output is useful for diagnostic purposes by Allied Telesis authorized service personnel.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show memory shared

**Mode** User Exec and Privileged Exec

**Example** To display information about the shared memory allocation used on the device, use the command:

```
awplus# show memory shared
```

**Output** Figure 6-13: Example output from the **show memory shared** command

```
awplus#show memory shared
Shared Memory Status
-----
Segment allocated   = 39
Pages allocated     = 39
Pages resident      = 11

Shared Memory Limits
-----
Maximum number of segments           = 4096
Maximum segment size (kbytes)        = 32768
Maximum total shared memory (pages)  = 2097152
Minimum segment size (bytes)         = 1
```

**Related Commands**

- [show memory allocations](#)
- [show memory history](#)
- [show memory](#)



# show process

**Overview** This command lists a summary of the current running processes.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show process [*<stack-ID>*] [sort {cpu|mem}]

| Parameter               | Description                                                 |
|-------------------------|-------------------------------------------------------------|
| <i>&lt;stack-ID&gt;</i> | Stack member number, from 1 to 8.                           |
| sort                    | Changes the sorting order for the list of processes.        |
|                         | cpu Sorts the list by the percentage of CPU utilization.    |
|                         | mem Sorts the list by the percentage of memory utilization. |

**Mode** User Exec and Privileged Exec

**Usage** For a stacked configuration, if this command is entered on the stack master, it will display the information for all the stack members. A stack member heading will be displayed to distinguish the different information for every stack member.

**Example** To display a summary of the current running processes, use the command:

```
awplus# show process
```

To display a summary of the current running processes on stack member 2, use the command:

```
awplus# show process 2
```

**Output** Figure 6-14: Example output from the **show process** command

```
Stack
member 2:

CPU load for 1 minute: 0%; 5 minutes: 3%; 15 minutes: 0%
RAM total: 514920 kB; free: 382600 kB; buffers: 16368 kB

user processes
=====
pid name          thrds  cpu%  mem%   pri  state  sleep%
962 pss             12    0     6    25  sleep    5
1  init              1    0     0    25  sleep    0
797 syslog-ng        1    0     0    16  sleep   88

kernel threads
=====
pid name          cpu%  pri  state  sleep%
71  aio/0           0    20  sleep    0
3   events/0        0    10  sleep   98
...
```

**Table 5:** Parameters in the output from the **show process** command

| Parameter    | Description                                                        |
|--------------|--------------------------------------------------------------------|
| Stack member | Stack member number.                                               |
| CPU load     | Average CPU load for the given period.                             |
| RAM total    | Total memory size.                                                 |
| free         | Available memory.                                                  |
| buffers      | Memory allocated to kernel buffers.                                |
| pid          | Identifier for the process.                                        |
| name         | Short name to describe the process.                                |
| thrds        | Number of threads in the process.                                  |
| cpu%         | Percentage of CPU utilization that this process is consuming.      |
| mem%         | Percentage of memory utilization that this process is consuming.   |
| pri          | Process priority.                                                  |
| state        | Process state; one of "run", "sleep", "stop", "zombie", or "dead". |
| sleep%       | Percentage of time the process is in the sleep state.              |

**Related  
Commands**    `show cpu`  
                  `show cpu history`

# show reboot history

**Overview** Use this command to display the device's reboot history.

**Syntax** `show reboot history [<stack-ID>]`

| Parameter  | Description                       |
|------------|-----------------------------------|
| <stack-ID> | Stack member number, from 1 to 8. |

**Mode** User Exec and Privileged Exec

**Example** To show the reboot history of stack member 2, use the command:

```
awplus# show reboot history 2
```

**Output** Figure 6-15: Example output from the **show reboot history** command

|                                 |          |            |                                                                      |
|---------------------------------|----------|------------|----------------------------------------------------------------------|
| awplus#show<br>reboot history 2 |          |            |                                                                      |
| Stack<br>member 2:              |          |            |                                                                      |
| <date>                          | <time>   | <type>     | <description>                                                        |
| -----                           |          |            |                                                                      |
| 2014-01-10                      | 01:42:04 | Expected   | User Request                                                         |
| 2014-01-10                      | 01:35:31 | Expected   | User Request                                                         |
| 2014-01-10                      | 01:16:25 | Unexpected | Rebooting due to critical process (network/nsm) failure!             |
| 2014-01-10                      | 01:11:04 | Unexpected | Rebooting due to critical process (network/nsm) failure!             |
| 2014-01-09                      |          |            |                                                                      |
|                                 | 20:46:40 | Unexpected | Rebooting due to VCS duplicate member-ID                             |
| 2014-01-09                      | 19:56:16 | Expected   | User Request                                                         |
| 2010-01-09                      |          |            |                                                                      |
|                                 | 20:36:06 | Unexpected | Rebooting due to VCS duplicate master (Continuous reboot prevention) |
| 2014-01-09                      | 19:51:20 | Expected   | User Request                                                         |

**Table 6:** Parameters in the output from the **show reboot history** command

| Parameter  | Description                                                                                                                                             |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unexpected | Reboot is counted by the continuous reboot prevention feature if the reboot event occurs in the time period specified for continuous reboot prevention. |
| Expected   | Reboot is not counted by continuous reboot prevention feature.                                                                                          |

**Table 6:** Parameters in the output from the **show reboot history** command

| Parameter                    | Description                                                                                                                                                                                                                 |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Continuous reboot prevention | A continuous reboot prevention event has occurred. The action taken is configured with the <b>continuous-reboot-prevention</b> command. The next time period during which reboot events are counted begins from this event. |
| User request                 | User initiated reboot via the CLI.                                                                                                                                                                                          |

**Related Commands** [show continuous-reboot-prevention](#)  
[show tech-support](#)

# show router-id

**Overview** Use this command to show the Router ID of the current system.

**Syntax** `show router-id`

**Mode** User Exec and Privileged Exec

**Example** To display the Router ID of the current system, use the command:

```
awplus# show router-id
```

**Output** Figure 6-16: Example output from the **show router-id** command

```
awplus>show router-id  
Router ID: 10.55.0.2 (automatic)
```

# show system

**Overview** This command displays general system information about the device, including the hardware, installed, memory, and software versions loaded. It also displays location and contact details when these have been set.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show system`

**Mode** User Exec and Privileged Exec

**Example** To display configuration information, use the command:

```
awplus# show system
```

**Usage** For a stacked configuration, if this command is entered on the stack master, it will display the information for all the stack members. A stack member heading will be displayed to distinguish the different information for every stack member.

**Output** Figure 6-17: Example output from **show system**

```
awplus#show system
System Status                               Mon Nov 16 08:42:16 2015

Board      ID  Bay      Board Name                      Rev    Serial number
-----
Base       386                IX5-28GPX                      X5-0   A25DD5002
PSU        335  PSU1     PWR800                        C-0    421LC7023
-----

RAM:  Total: 495756 kB Free: 391896 kB
Flash: 63.0MB Used: 45.5MB Available: 17.5MB
-----

Environment Status : Normal
Uptime              : 0 days 01:20:56
Bootloader version  : 2.0.25

Current software   : IX5-5.4.5-2.1.rel
Software version   : 5.4.5-2.1
Build date        : Thu Nov 12 12:11:29 NZDT 2015

Current boot config: flash:/default.cfg (file exists)

System Name
awplus
System Contact
System Location
```

**Related  
Commands** [show system environment](#)



# show system environment

**Overview** This command displays the current environmental status of your device and any attached PSU, XEM, or other expansion option. The environmental status covers information about temperatures, fans, and voltage.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show system environment`

**Mode** User Exec and Privileged Exec

**Usage** For a stacked configuration, if this command is entered on the stack master, it will display the information for all the stack members. A stack member heading will be displayed to distinguish the different information for every stack member.

**Example** To display the system’s environmental status, use the command:

```
awplus# show system environment
```

**Output** Figure 6-18: Example output from the **show system environment** command

```
Stack Environment Monitoring Status

Stack member 1:

Overall Status: Normal

Resource ID: 1  Name: x510-28GTX
ID  Sensor (Units)                Reading  Low Limit  High Limit  Status
1   Fan: Fan 1 (Rpm)              4344     3000       -           Ok
2   Voltage: 1.8V (Volts)          1.804    1.617      1.978       Ok
3   Voltage: 1.0V (Volts)          0.995    0.896      1.099       Ok
4   Voltage: 3.3V (Volts)          3.291    2.960      3.613       Ok
5   Voltage: 5.0V (Volts)          5.066    4.477      5.498       Ok
6   Voltage: 1.2V (Volts)          1.187    1.072      1.318       Ok
7   Temp: CPU (Degrees C)          50       -10        90          Ok
```

**Related Commands** [show system](#)

# show system interrupts

**Overview** Use this command to display the number of interrupts for each IRQ (Interrupt Request) used to interrupt input lines on a PIC (Programmable Interrupt Controller) on your device.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show system interrupts`

**Mode** User Exec and Privileged Exec

**Example** To display information about the number of interrupts for each IRQ in your device, use the command:

```
awplus# show system interrupts
```

**Output** Figure 6-19: Example output from the **show system interrupts** command

|                               |           |         |   |           |                                        |
|-------------------------------|-----------|---------|---|-----------|----------------------------------------|
| awplus#show system interrupts |           |         |   |           |                                        |
| CPU0                          |           |         |   |           |                                        |
| 5:                            | 10428098  | Enabled | 0 | MIPS      | linux-kernel-bde                       |
| 6:                            | 0         | Enabled | 0 | MIPS      | bcma-usb-ohci:usb1, bcma-usb-ehci:usb2 |
| 7:                            | 300725368 | Enabled | 0 | MIPS      | timer                                  |
| 18:                           | 598364339 | Enabled | 0 | MIPS-CC   | bcma_i2c                               |
| 22:                           | 4909      | Enabled | 0 | MIPS-CC   | serial                                 |
| 31:                           | 1         | Enabled | 0 | MIPS-GPIO | GPIO-Ethernet PHY                      |
| 35:                           | 2         | Enabled | 0 | MIPS-GPIO | GPIO-ECO Button                        |
| 40:                           | 4         | Enabled | 0 | MIPS-GPIO | PSU Interrupt                          |
| 42:                           | 0         | Enabled | 0 | MIPS-GPIO | PSU2 power good                        |
| 43:                           | 0         | Enabled | 0 | MIPS-GPIO | PSU1 power good                        |
| ERR:                          | 0         |         |   |           |                                        |

**Related Commands** [show system environment](#)

# show system mac

**Overview** This command displays the physical MAC address available on a standalone switch, or a stack. This command also shows the virtual MAC address for a stack if the stack virtual MAC address feature is enabled with the [stack virtual-mac](#) or the [stack enable](#) command.

**Syntax** `show system mac`

**Mode** User Exec and Privileged Exec

**Usage** This command also displays the virtual MAC address, if the VCSStack virtual MAC address feature is enabled with the [stack virtual-mac](#) command.

For more information, see the [VCSStack Feature Overview and Configuration Guide](#).

**Example** To display the physical MAC address enter the following command:

```
awplus# show system mac
```

**Output** Figure 6-20: Example output from the **show system mac** command

```
awplus#show system mac
eccd.6d9d.4eed
```

**Output** Figure 6-21: Example output showing how to use the **stack virtual-mac** command and the **show system mac** command

```
awplus#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
awplus(config)#stack virtual-mac
% Please check that the new MAC 0000.cd37.0065 is unique within
the network.
% Save the config and restart the system for this change to take
effect.
Member1#copy run start
Building configuration...
[OK]
Member1#reload
reboot system? (y/n): y

... Rebooting at user request ...
Loading default configuration ....

awplus login: manager
Password:

awplus>show system mac
eccd.6d9d.4eed

Virtual MAC Address 0000.cd37.0065
```

**Related  
Commands** [stack virtual-mac](#)

# show system pci device

**Overview** Use this command to display the PCI devices on your device.

**Syntax** show system pci device

**Mode** User Exec and Privileged Exec

**Example** To display information about the PCI devices on your device, use the command:

```
awplus# show system pci device
```

**Output** Figure 6-22: Example output from the **show system pci device** command

```
awplus#show system pci device
00:0c.0 Class 0200: 11ab:00d1 (rev 01)
      Flags: bus master, 66Mhz, medium devsel, latency 128, IRQ 113
      Memory at 5ffff000 (32-bit, non-prefetchable) [size=4K]
      Memory at 58000000 (32-bit, non-prefetchable) [size=64M]

00:0d.0 Class 0200: 11ab:00d1 (rev 01)
      Flags: bus master, 66Mhz, medium devsel, latency 128, IRQ 116
      Memory at 57fff000 (32-bit, non-prefetchable) [size=4K]
      Memory at 50000000 (32-bit, non-prefetchable) [size=64M]
```

```
Member1#show system pci device
00:00.0 Class 0600: 14e4:5300 (rev 01)
      Subsystem: 14e4:5300
      Flags: bus master, fast devsel, latency 0, IRQ 5
      Memory at 18000000 (64-bit, non-prefetchable) [size=16K]
      Memory at <unassigned> (64-bit, non-prefetchable) [size=128M]
      Capabilities: [40] Power Management version 3
      Capabilities: [58] #09 [0078]
      Capabilities: [48] Message Signalled Interrupts: 64bit+ Queue=0/0 Enable
-
      Capabilities: [d0] #10 [0041]

00:01.0 Class 0200: 14e4:b321 (rev 12)
      Subsystem: 14e4:4d4c
      Flags: bus master, fast devsel, latency 0, IRQ 5
      Memory at 08000000 (64-bit, non-prefetchable) [size=256K]
      Capabilities: [48] Power Management version 3
      Capabilities: [50] Vital Product Data
      Capabilities: [58] Message Signalled Interrupts: 64bit+ Queue=0/3 Enable
-
      Capabilities: [a0] #11 [0000]
      Capabilities: [ac] #10 [0002]
```

**Related Commands** [show system environment](#)  
[show system pci tree](#)

# show system pci tree

**Overview** Use this command to display the PCI tree on your device.

**Syntax** `show system pci tree`

**Mode** User Exec and Privileged Exec

**Example** To display information about the PCI tree on your device, use the command:

```
awplus# show system pci tree
```

**Output** Figure 6-23: Example output from the **show system pci tree** command

```
awplus>show system pci tree
-[00]--+-0c.0 11ab:00d1
        \-0d.0 11ab:00d1
```

**Related Commands** [show system environment](#)  
[show system pci device](#)

# show system serialnumber

**Overview** This command shows the serial number information for the device.  
For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show system serialnumber`

**Mode** User Exec and Privileged Exec

**Example** To display the serial number information for the device, use the command:

```
awplus# show system serialnumber
```

**Output** Figure 6-24: Example output from the **show system serial number** command

```
awplus#show system serialnumber  
45AX5300X
```

# show tech-support

**Overview** This command generates system and debugging information for the device and saves it to a file. You can optionally limit the command output to display only information for a given protocol or feature.

The command generates a large amount of output, which is saved to a file in compressed format. The output file name can be specified by outfile option. If the output file already exists, a new file name is generated with the current time stamp. If the output filename does not end with ".gz", then ".gz" is appended to the filename. Since output files may be too large for Flash on the device we recommend saving files to external memory or a TFTP server whenever possible to avoid device lockup. This method is not likely to be appropriate when running the working set option of AMF across a range of physically separated devices.

**Syntax** `show tech-support`  
`{all|[atmf|dhcpsn|epsr|igmp|ip|ipv6|mld|pim|stack|stp|system|tacacs+]}|[outfile <filename>]}`

| Parameter  | Description                                                                                                     |
|------------|-----------------------------------------------------------------------------------------------------------------|
| all        | Display full information                                                                                        |
| atmf       | Display ATMf- specific information                                                                              |
| dhcpsn     | Display DHCP Snooping specific information                                                                      |
| epsr       | Display EPSR specific information                                                                               |
| igmp       | Display IGMP specific information                                                                               |
| ip         | Display IP specific information                                                                                 |
| ipv6       | Display IPv6 specific information                                                                               |
| mld        | Display MLD specific information                                                                                |
| outfile    | Output file name                                                                                                |
| pim        | Display PIM related information                                                                                 |
| stack      | Display stacking device information                                                                             |
| stp        | Display STP specific information                                                                                |
| system     | Display general system information                                                                              |
| tacacs+    | Display TACACS+ information                                                                                     |
|            | Output modifier                                                                                                 |
| >          | Output redirection                                                                                              |
| >>         | Output redirection (append)                                                                                     |
| <filename> | Specifies a name for the output file. If no name is specified, this file will be saved as: tech-support.txt.gz. |



**Default** Captures **all** information for the device.

By default the output is saved to the file 'tech-support.txt.gz' in the current directory. If this file already exists in the current directory then a new file is generated with the time stamp appended to the file name, for example 'tech-support20080109.txt.gz', so the last saved file is retained.

**Usage** This command is useful for collecting a large amount of information about all protocols or specific protocols on your device so that it can then be analyzed for troubleshooting purposes. The output of this command can be provided to technical support staff when reporting a problem.

**Mode** Privileged Exec

**Examples** show tech-support

```
awplus# show tech-support
```

# speed (asyn)

**Overview** This command changes the console speed from the device. Note that a change in console speed is applied for subsequent console sessions. Exit the current session to enable the console speed change using the [clear line console](#) command.

**Syntax** `speed <console-speed-in-bps>`

| Parameter              | Description                                       |
|------------------------|---------------------------------------------------|
| <console-speed-in-bps> | Console speed Baud rate in bps (bits per second). |
| 1200                   | 1200 Baud                                         |
| 2400                   | 2400 Baud                                         |
| 9600                   | 9600 Baud                                         |
| 19200                  | 19200 Baud                                        |
| 38400                  | 38400 Baud                                        |
| 57600                  | 57600 Baud                                        |
| 115200                 | 115200 Baud                                       |

**Default** The default console speed baud rate is 9600 bps.

**Mode** Line Configuration

**Usage** This command is used to change the console (asyn) port speed. Set the console speed to match the transmission rate of the device connected to the console (asyn) port on your device.

**Example** To set the terminal console (asyn0) port speed from the device to 57600 bps, then exit the session, use the commands:

```
awplus# configure terminal
awplus(config)# line console 0
awplus(config-line)# speed 57600
awplus(config-line)# exit
awplus(config)# exit
awplus# exit
```

Then log in again to enable the change:

```
awplus login:
Password:
awplus>
```

**Related  
Commands**

- [clear line console](#)
- [line](#)
- [show running-config](#)
- [show startup-config](#)
- [speed](#)

# system territory (deprecated)

**Overview** This command has been deprecated in Software Version 5.4.4-0.1 and later. It now has no effect.

It is no longer useful to specify a system territory, so there is no alternative command.

# terminal monitor

**Overview** Use this command to display debugging output on a terminal.

To display the cursor after a line of debugging output, press the Enter key.

Use the command **terminal no monitor** to stop displaying debugging output on the terminal, or use the timeout option to stop displaying debugging output on the terminal after a set time.

**Syntax** terminal monitor [<1-60>]  
terminal no monitor

| Parameter | Description                                                 |
|-----------|-------------------------------------------------------------|
| <1-60>    | Set a timeout between 1 and 60 seconds for terminal output. |

**Default** Disabled

**Mode** User Exec and Privileged Exec

**Examples** To display debugging output on a terminal, enter the command:

```
awplus# terminal monitor
```

To specify timeout of debugging output after 60 seconds, enter the command:

```
awplus# terminal monitor 60
```

To stop displaying debugging output on the terminal, use the command:

```
awplus# terminal no monitor
```

**Related Commands** All debug commands

# undebug all

**Overview** This command applies the functionality of the [no debug all](#) command.

# 7

# Pluggables and Cabling Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure and monitor Pluggables and Cabling, including:

- Cable Fault Locator for finding faults in copper cabling
- Optical Digital Diagnostic Monitoring (DDM) to help find fiber issues when links go down
- Active Fiber Monitoring for detecting changes in optical power received over fiber cables.

For more information, see the [Pluggables and Cabling Feature Overview and Configuration\\_Guide](#).

- Command List**
- “[clear test cable-diagnostics tdr](#)” on page 276
  - “[debug fiber-monitoring](#)” on page 277
  - “[fiber-monitoring action](#)” on page 279
  - “[fiber-monitoring baseline](#)” on page 280
  - “[fiber-monitoring enable](#)” on page 282
  - “[fiber-monitoring interval](#)” on page 283
  - “[fiber-monitoring sensitivity](#)” on page 284
  - “[show system fiber-monitoring](#)” on page 286
  - “[show system pluggable](#)” on page 289
  - “[show system pluggable detail](#)” on page 291
  - “[show system pluggable diagnostics](#)” on page 295
  - “[show test cable-diagnostics tdr](#)” on page 297
  - “[test cable-diagnostics tdr interface](#)” on page 298

# clear test cable-diagnostics tdr

**Overview** This command clears the results of the last cable test that was run.

**Syntax** `clear test cable-diagnostics tdr`

**Mode** Privileged Exec

**Examples** To clear the results of a previous cable-diagnostics test use the following commands:

```
awplus# clear test cable-diagnostics tdr
```



# debug fiber-monitoring

**Overview** Use this command to enable debugging of active fiber monitoring on the specified ports.

Use the **no** variant of this command to disable debugging on all ports or the specified ports.

**Syntax** `debug fiber-monitoring interface <port-list>`  
`no debug fiber-monitoring [interface <port-list>]`

| Parameter   | Description                                                                                                                 |
|-------------|-----------------------------------------------------------------------------------------------------------------------------|
| <port-list> | The list of fiber ports to enable or disable debugging for, as a single port, a comma separated list or a hyphenated range. |

**Default** Debugging of active fiber monitoring is disabled by default.

**Mode** User Exec/Privileged Exec

**Usage** While debugging is enabled by this command for a port, all the optical power readings for the port are sent to the console.

**Example** To enable debugging messages for active fiber monitoring of port 1.0.2 to be sent to the console, use the commands:

```
awplus# debug fiber-monitoring interface port 1.0.2  
awplus# terminal monitor
```

To disable debugging messages for active fiber monitoring on port 1.0.2, use the command:

```
awplus# no debug fiber-monitoring interface port 1.0.2
```

To disable all debugging messages for active fiber monitoring, use the command:

```
awplus# no debug fiber-monitoring
```

**Output** Figure 7-1: Example output from **debug fiber-monitoring**

```
awplus#debug fiber-monitoring interface port2.0.1
awplus#terminal monitor
% Warning: Console logging enabled
awplus#01:42:50 awplus Pluggable[522]: Fiber-monitor port2.0.1: Channel:1
Reading:1748 Baseline:1708 Threshold:1356
01:42:52 awplus Pluggable[522]: Fiber-monitor port2.0.1: Channel:1 Reading:1717
Baseline:1709 Threshold:1357
01:42:54 awplus Pluggable[522]: Fiber-monitor port2.0.1: Channel:1 Reading:1780
Baseline:1709 Threshold:1357
01:42:56 awplus Pluggable[522]: Fiber-monitor port2.0.1: Channel:1 Reading:1685
Baseline:1710 Threshold:1358
01:42:58 awplus Pluggable[522]: Fiber-monitor port2.0.1: Channel:1 Reading:1701
Baseline:1710 Threshold:1358
01:43:01 awplus Pluggable[522]: Fiber-monitor port2.0.1: Channel:1 Reading:1733
Baseline:1709 Threshold:1357
```

**Related** [show system fiber-monitoring](#)  
**Commands**

# fiber-monitoring action

**Overview** Use this command to specify an action to be taken if the optical power received on the port changes from the baseline by the amount specified in the **fiber-monitoring sensitivity** command.

Use the **no** variant of this command to remove the specified action or all actions from the port.

**Syntax** `fiber-monitoring action {trap|shutdown}`  
`no fiber-monitoring action [trap|shutdown]`

| Parameter | Description                |
|-----------|----------------------------|
| trap      | Send an SNMP notification. |
| shutdown  | Shutdown the port.         |

**Default** By default a log message is generated, but no additional action is performed.

**Mode** Interface Configuration mode for a fiber port.

**Usage** If fiber monitoring is enabled and this command is not used to set an action, a change in received power on a fiber port only generates a log message.

**Example** To set the device to send an SNMP notification when ports 1.0.1 or 1.0.2 receive reduced power, use the commands:

```
awplus(config)# interface port1.0.1-1.0.2
awplus(config-if)# fiber-monitoring action trap
```

To set the device to send an SNMP notification and to shut down the port when ports 1.0.1 or 1.0.2 receive reduced power, use the commands:

```
awplus(config)# interface port1.0.1-1.0.2
awplus(config-if)# fiber-monitoring action trap shutdown
```

To set the device not to send an SNMP notification when ports 1.0.1 or 1.0.2 receive reduced power, use the commands:

```
awplus(config)# interface port1.0.1-1.0.2
awplus(config-if)# no fiber-monitoring action trap
```

To set the device not to perform any action when it receives reduced power on ports 1.0.1 or 1.0.2, use the commands:

```
awplus(config)# interface port1.0.1-1.0.2
awplus(config-if)# no fiber-monitoring action
```

**Related Commands** [fiber-monitoring sensitivity](#)  
[show system fiber-monitoring](#)

# fiber-monitoring baseline

- Overview** Use this command to configure how the baseline value for comparison is calculated for active fiber monitoring on the port.
- Note that alarm generation will not commence until the link has been up for a full averaging period.
- Use the **no** variant of this command to set the fiber-monitoring baseline to its default value.

**Syntax** `fiber-monitoring baseline (average <12-150>|fixed <1-65535>)`  
`no fiber-monitoring baseline`

| Parameter | Description                                                                                                                                  |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------|
| average   | Set the baseline optical power received to be based on the moving average of the specified number of most recent (non-zero) values. Default. |
| <12-150>  | The number of most recent values to average for the baseline. Default: 12.                                                                   |
| fixed     | Set the baseline to a fixed level of received optical power. Not recommended—see Usage below.                                                |
| <1-65535> | The fixed baseline value of received optical power in 0.0001mW.                                                                              |

**Default** The default is a moving average of the last 12 values. If the **fiber-monitoring interval** is set to its default (5s), the **fiber-monitoring baseline** default will be the average over the last minute.

**Mode** Interface Configuration for a fiber port

**Usage** ***CAUTION:** We do not recommend setting a fixed value because gradual change over time caused by temperature fluctuations, etc. could lead to unnecessary alarms.*

There are two ways to configure the baseline. The first is to choose a number of readings to average. This is the default and recommended method. The second is to set a fixed value in units of x0.0001mW.

If a fixed value is required, the easiest way is to enable fiber monitoring on the port and use the **show system fiber-monitoring** command to see what readings can be expected.

**Example** To set the baseline optical power to a moving average of the last 30 readings, use the command:

```
awplus(config-if)# fiber-monitoring baseline average 30
```

To set the baseline to its default, averaging the last 12 readings, use the command:

```
awplus(config-if)# no fiber-monitoring baseline
```

**Related  
Commands**    fiber-monitoring interval  
                 fiber-monitoring sensitivity

# fiber-monitoring enable

**Overview** Use this command to enable active fiber monitoring on a fiber port. If the port can support fiber monitoring but does not have the correct SFP or fiber type installed, the configuration will be saved, and monitoring will commence when a supported SFP is inserted. Disabling and re-enabling fiber monitoring on a port resets the baseline calculation.

Use the **no** variants of this command to disable active fiber monitoring on the interface, or to remove all the configuration and state for the ports, respectively.

**Syntax** fiber-monitoring enable  
no fiber-monitoring enable  
no fiber-monitoring

**Default** Active fiber monitoring is disabled by default.

**Mode** Interface Configuration mode for a fiber port

**Examples** To enable active fiber monitoring on a ports 1.0.1 and 1.0.2, use the commands:

```
awplus(config)# interface port1.0.1-1.0.2  
awplus(config-if)# fiber-monitoring enable
```

To disable fiber monitoring on the ports, use the commands:

```
awplus(config)# interface port1.0.1-1.0.2  
awplus(config-if)# no fiber-monitoring enable
```

To remove all fiber-monitoring configuration and state for the ports, use the commands:

```
awplus(config)# interface port1.0.1-1.0.2  
awplus(config-if)# no fiber-monitoring
```

**Related Commands** [fiber-monitoring action](#)  
[fiber-monitoring sensitivity](#)  
[show system fiber-monitoring](#)

# fiber-monitoring interval

**Overview** Use this command to configure the fiber monitoring polling interval in seconds for the port. The optical power will be read every <interval> seconds and compared against the calculated threshold values to see if a log message or other action is required.

Use the **no** variant of this command to reset the polling interval to the default (5 seconds).

**Syntax** fiber-monitoring interval <2-60>  
no fiber-monitoring interval

| Parameter | Description                                |
|-----------|--------------------------------------------|
| <2-60>    | Optical power polling interval in seconds. |

**Default** The interval is set to 5 seconds by default.

**Mode** Interface configuration mode for a fiber port.

**Example** To set the fiber monitoring polling interval for port 1.0.2 to 30 seconds, use the commands:

```
awplus(config)# interface port1.0.2  
awplus(config-if)# fiber-monitoring interval 30
```

To reset the fiber monitoring polling interval back to the default (5s), use the commands:

```
awplus(config)# interface port1.0.2  
awplus(config-if)# no fiber-monitoring interval
```

**Related Commands** [fiber-monitoring baseline](#)  
[show system fiber-monitoring](#)

# fiber-monitoring sensitivity

**Overview** Use this command to configure the sensitivity of the alarm thresholds on the port for active fiber monitoring.

Use the **no** variant of this command to reset the sensitivity to the default.

**Syntax** `fiber-monitoring sensitivity (low|medium|high|highest|fixed <25-65535>)|relative <0.01-10.0>`  
`no fiber-monitoring sensitivity`

| Parameter            | Description                                            |
|----------------------|--------------------------------------------------------|
| low                  | Low sensitivity (+/-2 dB)                              |
| medium               | Medium sensitivity (1 dB) (default)                    |
| high                 | High sensitivity (the greater of 0.5 dB and 0.0025 mW) |
| highest              | The highest sensitivity available: 0.0025mW            |
| fixed<25-65535>      | Fixed sensitivity at the specified level in 0.0001 mW. |
| relative <0.01-10.0> | Relative sensitivity at the specified level in dB.     |

**Default** The default is medium sensitivity.

**Mode** User Exec/Privileged Exec

**Usage** A log message is generated and configured actions are taken if the received optical power drops below the baseline value by the sensitivity configured with this command.

The sensitivity can be configured to one of four pre-defined levels in decibels or to a fixed absolute delta in units of 0.0001mW. The alarm thresholds can be seen in the **show system fiber-monitoring** output. The maximum absolute sensitivity configurable is 0.0025 mW. Note that 0.0025 mW equates to a reduction of approximately 1dB at the maximum attenuation of an AT-SPLX10/1.

**Example** To set the fiber monitoring sensitivity for port 1.0.2 to a relative sensitivity of 0.1 dB, use the commands:

```
awplus(config)# interface port1.0.2
awplus(config-if)# fiber-monitoring sensitivity relative 0.1
```

To reset the fiber monitoring sensitivity to the default (medium), use the commands:

```
awplus(config)# interface port1.0.2
awplus(config-if)# no fiber-monitoring sensitivity
```



**Related  
Commands**

- fiber-monitoring action
- fiber-monitoring baseline
- show system fiber-monitoring

# show system fiber-monitoring

**Overview** Use this command to display settings and current status for Active Fiber Monitoring.

**Syntax** `show system fiber-monitoring`

**Mode** User Exec/Privileged Exec

**Example** To display configuration and status for active fiber monitoring on ports., use the command:

```
awplus# show system fiber-monitoring
```

**Output** Figure 7-2: Example output from **show system fiber-monitoring**

```
awplus#show sys fiber-monitoring
Fiber Monitoring Status
  Reading units 0.0001mW

Stack member 1:

Interface port1.0.1
Status:          enabled
Supported:       Supported pluggable
Debugging:       disabled
Interval:        2 seconds
Sensitivity:     1.00dB
Baseline type:   average of last 35 values greater than 50
Status:
  Baseline value: 496
  Alarm threshold: 393
  Alarm:          no
  Last 12 Readings: 498 498 498 498 498 498 498 498 498 498 498 498
  Minimum reading: 486
  Maximum reading: 498

Interface port1.0.2
Status:          enabled
Supported:       Supported pluggable
Debugging:       disabled
Interval:        2 seconds
Sensitivity:     1.00dB
Baseline type:   average of last 30 values greater than 50
Status:
  Baseline value: 0
  Alarm threshold: 0
  Alarm:          no
  Last 12 Readings: 0 0 0 0 0 0 0 0 0 0 0 0
  Minimum reading: 0
  Maximum reading: 0
```

Table 7-1: Parameters in the output from **show system fiber-monitoring**

| Parameter        | Description                                                                                                                                                 |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Reading units    | The units for optical power readings in the rest of the display, e.g. 0.0001mW.                                                                             |
| Status           | Whether active fiber monitoring is enabled or disabled for this port.                                                                                       |
| Supported        | Whether the pluggable inserted in this port supports active fiber monitoring.                                                                               |
| Debugging        | Whether debugging of active fiber monitoring is enabled or disabled for this port.                                                                          |
| Interval         | The configured interval between readings of optical power on this port.                                                                                     |
| Sensitivity      | The configured sensitivity threshold for optical power changes on this port.                                                                                |
| Baseline type    | How the baseline optical power level is calculated: either the average of the specified number of previous readings or a specified fixed value in 0.0001mW. |
| Status           | Current values for the following parameters.                                                                                                                |
| Baseline value   | The baseline value, calculated according to the configured baseline method, in 0.0001mW.                                                                    |
| Alarm threshold  | The current threshold for a change in optical power, calculated according to the configured sensitivity method, that will result in action.                 |
| Alarm            | Whether the optical power at the most recent reading fallen below the threshold.                                                                            |
| Last 12 readings | The last 12 optical power values measured, in 0.0001mW, with oldest value first.                                                                            |
| Minimum reading  | The lowest optical power reading since the fiber pluggable was last inserted, or since active fiber monitoring was last enabled on the port.                |
| Maximum reading  | The highest optical power reading since the fiber pluggable was last inserted, or since active fiber monitoring was last enabled on the port.               |

**Related Commands**

- [debug fiber-monitoring](#)
- [fiber-monitoring action](#)
- [fiber-monitoring baseline](#)
- [fiber-monitoring enable](#)

fiber-monitoring interval

fiber-monitoring sensitivity

# show system pluggable

**Overview** This command displays **brief** pluggable transceiver information showing the pluggable type, the pluggable serial number, and the pluggable port on the device. Different types of pluggable transceivers are supported in different models of device. See your Allied Telesis dealer for more information about the models of pluggables that your device supports.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show system pluggable [<port-list>]`

| Parameter   | Description                                                                                                                                                                                                                                                                                                              |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port-list> | The ports to display information about. The port list can be: <ul style="list-style-type: none"><li>a switch port (e.g. port1.0.12)</li><li>a continuous range of ports separated by a hyphen, e.g. port1.0.1-1.0.24</li><li>a comma-separated list of ports and port ranges, e.g. port1.0.1,port1.0.4-1.2.24.</li></ul> |

**Mode** User Exec and Privileged Exec

**Usage** For a stacked configuration, if this command is entered on the stack master, it will display information about the pluggable transceivers for all the stack members. A separate heading will be displayed to distinguish each stack member's information.

**Example** To display brief information about pluggable transceivers installed in port1.0.1 through port1.0.4, use the command:

```
awplus# show system pluggable port1.0.1-1.0.4
```

**Output** Figure 7-3: Example output from the **show system pluggable port1.0.1-1.0.4** command

| System Pluggable Information |              |            |                  |          |             |
|------------------------------|--------------|------------|------------------|----------|-------------|
| Port                         | Manufacturer | Device     | Serial Number    | Datecode | Type        |
| 1.0.1                        | AGILENT      | HFBR-5710L | 0401312315461272 | 040131   | 1000BASE-SX |
| 1.0.2                        | AGILENT      | QBCU-5730R | AK0614GKF7       | 060408   | 1000BASE-T  |
| 1.0.3                        | AGILENT      | HFBR-5710L | 0305130112182696 | 030513   | 1000BASE-SX |
| 1.0.4                        | AGILENT      | HBCU-5710R | AK051300SM       | 050402   | 1000BASE-T  |

**Example** To display information about the pluggable transceiver installed in port1.0.1, use the command:

```
awplus# show system pluggable port1.0.1
```

**Output** Figure 7-4: Example output from the **show system pluggable port1.0.1** command

| System Pluggable Information |              |            |                  |          |             |
|------------------------------|--------------|------------|------------------|----------|-------------|
| Port                         | Manufacturer | Device     | Serial Number    | Datecode | Type        |
| 1.0.1                        | AGILENT      | HFBR-5710L | 0401312315461272 | 040131   | 1000BASE-SX |

**Related  
Commands**

- [show system environment](#)
- [show system pluggable detail](#)
- [show system pluggable diagnostics](#)

# show system pluggable detail

**Overview** This command displays detailed pluggable transceiver information showing the pluggable type, the pluggable serial number, and the pluggable port on the device. Different types of pluggable transceivers are supported in different models of device. See your Allied Telesis dealer for more information about the models of pluggables that your device supports.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show system pluggable [<port-list>] detail`

| Parameter                      | Description                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;port-list&gt;</code> | The ports to display information about. The port list can be: <ul style="list-style-type: none"><li>• a switch port (e.g. <code>port1.0.12</code>)</li><li>• a continuous range of ports separated by a hyphen, e.g. <code>port1.0.1-1.0.24</code></li><li>• a comma-separated list of ports and port ranges, e.g. <code>port1.0.1,port1.0.4-1.2.24</code>.</li></ul> |

**Mode** User Exec and Privileged Exec

**Usage** For a stacked configuration, if this command is entered on the stack master, it will display detailed information about the pluggable transceivers for all the stack members. A stack member heading will be displayed to distinguish the different pluggable transceiver information for every stack member.

In addition to the information about pluggable transceivers displayed using the [show system pluggable](#) command (port, manufacturer, serial number, manufacturing datecode, and type information), the **show system pluggable detail** command displays the following information:

- **SFP Laser Wavelength:** Specifies the laser wavelength of the installed pluggable transceiver
- **Single mode Fiber:** Specifies the link length supported by the pluggable transceiver using single mode fiber
- **OM1 (62.5μ m) Fiber:** Specifies the link length, in meters (m) or kilometers (km) supported by the pluggable transceiver using 62.5 micron multi-mode fiber.
- **OM2 (50μ m) Fiber:** Specifies the link length (in meters or kilometers) supported by the pluggable transceiver using 50 micron multi-mode fiber.

- **Diagnostic Calibration:** Specifies whether the pluggable transceiver supports DDM or DOM Internal or External Calibration.
  - **Internal** is displayed if the pluggable transceiver supports DDM or DOM Internal Calibration.
  - **External** is displayed if the pluggable transceiver supports DDM or DOM External Calibration.
  - - is displayed neither Internal Calibration or External Calibration is supported.
- **Power Monitoring:** Displays the received power measurement type, which can be either **OMA**(Optical Module Amplitude) or **Avg**(Average Power) measured in  $\mu$ W.

**NOTE:** For parameters that are not supported or not specified, a hyphen is displayed instead.

**Example** To display detailed information about the pluggable transceivers installed in a particular port on the device, use a command like:

```
awplus# show system pluggable port1.0.24 detail
```

To display detailed information about all the pluggable transceivers installed on the device, use the command:

```
awplus# show system pluggable detail
```

**Output** Figure 7-5: Example output from the **show system pluggable detail** command on a device

```
awplus#show system pluggable port1.0.24 detail
System Pluggable Information Detail

Port1.0.24
=====
Vendor Name:          AGILENT
Device Name:          HFCT-5710L
Device Revision:      A
Device Type:          1000BASE-LX
Serial Number:        0402142241184360
Manufacturing Datecode: 040214
SFP Laser Wavelength: -
Link Length Supported
  Single Mode Fiber : 10Km
  OM1 (62.5um) Fiber: 550m
  OM2 (50um) Fiber : 550m
Diagnostic Calibration: Internal
Power Monitoring:      Avg
FEC BER support:       -
```

**Example** To display detailed information about the pluggable transceivers installed on a stack, use the command:

```
awplus# show system pluggable detail
```



**Output** Figure 7-6: Example output from the **show system pluggable detail** command on a stack

```
awplus#show system pluggable detail
System Pluggable Information Detail

Stack member 1:

Port1.0.24
=====
Vendor Name:                AGILENT
Device Name:                 HFCT-5710L
Device Revision:             A
Device Type:                 1000BASE-LX
Serial Number:               0402142241184360
Manufacturing Datecode:     040214
SFP Laser Wavelength:       -
Link Length Supported
  Single Mode Fiber :        10Km
  OM1 (62.5um) Fiber:        550m
  OM2 (50um) Fiber :         550m
Diagnostic Calibration:      Internal
Power Monitoring:            Avg
FEC BER support:             -

Stack member 2:

Port2.0.24
=====
Vendor Name:                FINISAR CORP.
Device Name:                 FTRJ-8519-7D-CSC
Device Revision:             A
Device Type:                 1000BASE-SX
Serial Number:               P430KGY
Manufacturing Datecode:     030718
SFP Laser Wavelength:       850nm
Link Length Supported
  Single Mode Fiber :        -
  OM1 (62.5um) Fiber:        300m
  OM2 (50um) Fiber :         550m
Diagnostic Calibration:      Internal
Power Monitoring:            OMA
FEC BER support:             Yes
```

**Table 8:** Parameters in the output from the **show system pluggables detail** command:

| Parameter    | Description                                                          |
|--------------|----------------------------------------------------------------------|
| Stack member | The stack member number..                                            |
| Port         | Specifies the port the pluggable transceiver is installed in.        |
| Vendor Name  | Specifies the vendor's name for the installed pluggable transceiver. |

**Table 8:** Parameters in the output from the **show system pluggables detail** command: (cont.)

| Parameter              | Description                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device Name            | Specifies the device name for the installed pluggable transceiver.                                                                                                                                                                                                                                                                                                                                      |
| Device Revision        | Specifies the hardware revision code for the pluggable transceiver. This may be useful for troubleshooting because different devices may support different pluggable transceiver revisions.                                                                                                                                                                                                             |
| Device Type            | Specifies the device type for the installed pluggable transceiver..                                                                                                                                                                                                                                                                                                                                     |
| Serial Number          | Specifies the serial number for the installed pluggable transceiver.                                                                                                                                                                                                                                                                                                                                    |
| Manufacturing Datecode | Specifies the manufacturing datecode for the installed pluggable transceiver. Checking the manufacturing datecode with the vendor may be useful when determining Laser Diode aging issues. For more information, see "How To Troubleshoot Fiber and Pluggable Issues" in the <a href="#">"Getting Started with AlliedWare Plus" Feature Overview and Configuration Guide</a> .                          |
| SFP Laser Wavelength   | Specifies the laser wavelength of the installed pluggable transceiver.                                                                                                                                                                                                                                                                                                                                  |
| Single Mode Fiber      | Specifies the link length supported by the pluggable transceiver using single mode fiber.                                                                                                                                                                                                                                                                                                               |
| OM1 (62.5um) Fiber     | Specifies the link length (in $\mu\text{m}$ - micron) supported by the pluggable transceiver using 62.5 micron multi-mode fiber.                                                                                                                                                                                                                                                                        |
| OM2 (50um) Fiber       | Specifies the link length (in $\mu\text{m}$ - micron) supported by the pluggable transceiver using 50 micron multi-mode fiber.                                                                                                                                                                                                                                                                          |
| Diagnostic Calibration | Specifies whether the pluggable transceiver supports DDM or DOM Internal or External Calibration:<br><b>Internal</b> is displayed if the pluggable transceiver supports DDM or DOM Internal Calibration.<br><b>External</b> is displayed if the pluggable transceiver supports DDM or DOM External Calibration.<br>- is displayed if neither Internal Calibration or External Calibration is supported. |
| Power Monitoring       | Displays the received power measurement type, which can be either <b>OMA</b> (Optical Module Amplitude) or <b>Avg</b> (Average Power) measured in $\mu\text{W}$ .                                                                                                                                                                                                                                       |

**Related Commands**

- [show system environment](#)
- [show system pluggable](#)
- [show system pluggable diagnostics](#)

# show system pluggable diagnostics

**Overview** This command displays diagnostic information about SFP and SFP+ pluggable transceivers that support Digital Diagnostic Monitoring (DDM).

Different types of pluggable transceivers are supported in different models of device. See your device's Datasheet for more information about the models of pluggables that your device supports.

For information on filtering and saving command output, see "Controlling "show" Command Output" in the ["Getting Started with AlliedWare Plus" Feature Overview and Configuration Guide](#).

**Syntax** `show system pluggable [<port-list>] diagnostics`

| Parameter                      | Description                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;port-list&gt;</code> | The ports to display information about. The port list can be: <ul style="list-style-type: none"><li>• a switch port (e.g. <code>port1.0.12</code>)</li><li>• a continuous range of ports separated by a hyphen, e.g. <code>port1.0.1-1.0.24</code></li><li>• a comma-separated list of ports and port ranges, e.g. <code>port1.0.1,port1.0.4-1.2.24</code>.</li></ul> |

**Mode** User Exec and Privileged Exec

**Usage** For a stacked configuration, if this command is entered on the stack master, it will display information about the pluggable transceivers for all the stack members. A stack member heading will be displayed to distinguish different pluggable transceiver information for every stack member.

**Usage** Modern optical SFP and SFP+ transceivers support Digital Diagnostics Monitoring (DDM) functions.

Diagnostic monitoring features allow you to monitor real-time parameters of the pluggable transceiver, such as optical output power, optical input power, temperature, laser bias current, and transceiver supply voltage. Additionally, RX LOS (Loss of Signal) is shown when the received optical level is below a preset threshold. Monitor these parameters to check on the health of all transceivers, selected transceivers or a specific transceiver installed in a device.

**Examples** To display detailed information about all pluggable transceivers installed on a standalone device, use the command:

```
awplus# show system pluggable diagnostics
```

**Output** Figure 7-7: Example output from the **show system pluggable diagnostics** command on a device

```
awplus#show system pluggable diagnostics
System Pluggable Information Diagnostics
```

| Port1.0.21        | Status  |       | Alarms |        |         | Warnings |        |
|-------------------|---------|-------|--------|--------|---------|----------|--------|
|                   | Reading | Alarm | Max    | Min    | Warning | Max      | Min    |
| Temp: (Degrees C) | 29.387  | -     | 100.00 | -40.00 | -       | 85.000   | -10.00 |
| Vcc: (Volts)      | 3.339   | -     | 3.465  | 3.135  | -       | 3.400    | 3.200  |
| Tx Bias: (mA)     | 10.192  | -     | 37.020 | 3.260  | -       | 34.520   | 5.760  |
| Tx Power: (mW)    | 17.872  | -     | 35.643 | 8.953  | -       | 28.313   | 11.271 |
| Rx Power: (mW)    | 0.006   | Low   | 15.849 | 0.025  | Low     | 12.589   | 0.040  |
| Rx LOS:           | Rx Down |       |        |        |         |          |        |

| Port1.0.22        | Status  |       | Alarms |        |         | Warnings |        |
|-------------------|---------|-------|--------|--------|---------|----------|--------|
|                   | Reading | Alarm | Max    | Min    | Warning | Max      | Min    |
| Temp: (Degrees C) | 29.387  | -     | 100.00 | -40.00 | -       | 85.000   | -10.00 |
| Vcc: (Volts)      | 3.378   | -     | 3.630  | 2.970  | -       | 3.465    | 3.135  |
| Tx Bias: (mA)     | 2.802   | -     | 6.000  | 1.000  | -       | 5.000    | 1.000  |
| Tx Power: (mW)    | 2.900   | -     | 11.000 | 0.600  | -       | 10.000   | 0.850  |
| Rx Power: (mW)    | 1.739   | -     | 18.000 | 0.000  | -       | 10.000   | 0.200  |
| Rx LOS:           | Rx Up   |       |        |        |         |          |        |

To display detailed information about the pluggable transceiver installed in port1.0.22 on a standalone switch, use the command:

```
awplus# show system pluggable diagnostics port1.0.22
```

**Table 9:** Parameters in the output from the **show system pluggables diagnostics** command

| Parameter        | Description                                                                                                                                                                                                                                 |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Temp (Degrees C) | Shows the temperature inside the transceiver.                                                                                                                                                                                               |
| Vcc (Volts)      | Shows voltage supplied to the transceiver.                                                                                                                                                                                                  |
| Tx Bias (mA)     | Shows current to the Laser Diode in the transceiver.                                                                                                                                                                                        |
| Tx Power (mW)    | Shows the amount of light transmitted from the transceiver.                                                                                                                                                                                 |
| Rx Power (mW)    | Shows the amount of light received in the transceiver.                                                                                                                                                                                      |
| Rx LOS           | Rx Loss of Signal. This indicates whether: <ul style="list-style-type: none"> <li>light is being received (Rx Up) and therefore the link is up, or</li> <li>light is not being received (Rx Down) and therefore the link is down</li> </ul> |

**Related Commands**

- [show system environment](#)
- [show system pluggable](#)
- [show system pluggable detail](#)

# show test cable-diagnostics tdr

**Overview** This command displays the results of the last cable-diagnostics test that was run using the TDR (Time Domain Reflectometer) on a fixed copper cable port.

The displayed status of the cable can be either:

- OK
- Open
- Short (within-pair)
- Short (across-pair)
- Error

**Syntax** `show test cable-diagnostics tdr`

**Mode** Privileged Exec

**Examples** To show the results of a cable-diagnostics test use the following command:

```
awplus# show test cable-diagnostics tdr
```

**Output** Figure 7-8: Example output from the **show test cable-diagnostics tdr** command

| Port  | Pair | Length | Status |
|-------|------|--------|--------|
| ----- |      |        |        |
| 1.0.1 | A    | —      | OK     |
|       | B    | —      | OK     |
|       | C    | —      | OK     |
|       | D    | —      | OK     |

# test cable-diagnostics tdr interface

**Overview** This command applies the Cable Fault Locator's cable-diagnostics tests to twisted pair data cables for a selected port. The tests will detect either correct, short circuit, or open, circuit terminations. For more information on running the CFL, see the ["Cable Fault Locator" Feature Overview and Configuration Guide](#).

The test can take several seconds to complete. See the related show command to display the test results.

A new test can only be started if no other test is in progress. CFL cannot run on a port that is currently supplying power via PoE.

The displayed status of the cable can be either, OK, Short (within-pair), or Open. The "Open" or "Short" status is accompanied with the distance from the source port to the incorrect termination.

**Syntax** test cable-diagnostics tdr interface <interface>

| Parameter         | Description                                            |
|-------------------|--------------------------------------------------------|
| cable-diagnostics | The cable diagnostic tests.                            |
| tdr               | Time Domain Reflectometry.                             |
| interface         | Selects the interface to test.                         |
| <interface>       | Interface number of the port to be tested, i.e. 1.0.2. |

**Example** To run a cable test on the cable inserted into port 1.0.1 use the following command:

```
awplus# test cable-diagnostics tdr interface port1.0.1
```

You will receive the following message:

```
Link will go down while test is in progress. Continue? (y/n): y
Select y to continue.
```

```
awplus# y
```

You will then receive the following message:

```
Test started. This will take several seconds to complete. Use
"show test cable-diagnostics tdr" to print results.
```

# 8

# Logging Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure logging.

- Command List**
- “clear exception log” on page 301
  - “clear log” on page 302
  - “clear log buffered” on page 303
  - “clear log permanent” on page 304
  - “default log buffered” on page 305
  - “default log console” on page 306
  - “default log email” on page 307
  - “default log host” on page 308
  - “default log monitor” on page 309
  - “default log permanent” on page 310
  - “log buffered” on page 311
  - “log buffered (filter)” on page 312
  - “log buffered exclude” on page 315
  - “log buffered size” on page 318
  - “log console” on page 319
  - “log console (filter)” on page 320
  - “log console exclude” on page 323
  - “log email” on page 326
  - “log email (filter)” on page 327
  - “log email exclude” on page 330

- ["log email time"](#) on page 333
- ["log facility"](#) on page 335
- ["log host"](#) on page 337
- ["log host \(filter\)"](#) on page 338
- ["log host exclude"](#) on page 341
- ["log host source"](#) on page 344
- ["log host time"](#) on page 345
- ["log monitor \(filter\)"](#) on page 347
- ["log monitor exclude"](#) on page 350
- ["log permanent"](#) on page 353
- ["log permanent \(filter\)"](#) on page 354
- ["log permanent exclude"](#) on page 357
- ["log permanent size"](#) on page 360
- ["log-rate-limit nsm"](#) on page 361
- ["show counter log"](#) on page 363
- ["show exception log"](#) on page 364
- ["show log"](#) on page 365
- ["show log config"](#) on page 368
- ["show log permanent"](#) on page 370
- ["show running-config log"](#) on page 372



# clear exception log

**Overview** This command resets the contents of the exception log, but does not remove the associated core files.

**NOTE:** *When this command is used within a stacked environment, it will remove the contents of the exception logs in all stack members.*

**Syntax** `clear exception log`

**Mode** Privileged Exec

**Example** `awplus# clear exception log`

# clear log

**Overview** This command removes the contents of the buffered and permanent logs.

**NOTE:** When this command is used within a stacked environment, it will remove the contents of the buffered and permanent logs in all stack members.

**Syntax** `clear log`

**Mode** Privileged Exec

**Example** To delete the contents of the buffered and permanent log use the command:

```
awplus# clear log
```

**Validation  
Commands** `show log`

**Related  
Commands** `clear log buffered`  
`clear log permanent`

# clear log buffered

**Overview** This command removes the contents of the buffered log.

**NOTE:** *When this command is used within a stacked environment, it will remove the contents of the buffered logs in all stack members.*

**Syntax** `clear log buffered`

**Mode** Privileged Exec

**Example** To delete the contents of the buffered log use the following commands:

```
awplus# clear log buffered
```

**Related  
Commands** [default log buffered](#)

[log buffered](#)

[log buffered \(filter\)](#)

[log buffered size](#)

[log buffered exclude](#)

[show log](#)

[show log config](#)

# clear log permanent

**Overview** This command removes the contents of the permanent log.

**NOTE:** When this command is used within a stacked environment, it will remove the contents of the buffered logs in all stack members.

**Syntax** `clear log permanent`

**Mode** Privileged Exec

**Example** To delete the contents of the permanent log use the following commands:

```
awplus# clear log permanent
```

**Related Commands**

- [default log permanent](#)
- [log permanent](#)
- [log permanent \(filter\)](#)
- [log permanent exclude](#)
- [log permanent size](#)
- [show log config](#)
- [show log permanent](#)

# default log buffered

**Overview** This command restores the default settings for the buffered log stored in RAM. By default the size of the buffered log is 50 kB and it accepts messages with the severity level of “warnings” and above.

**Syntax** `default log buffered`

**Default** The buffered log is enabled by default.

**Mode** Global Configuration

**Example** To restore the buffered log to its default settings use the following commands:

```
awplus# configure terminal
awplus(config)# default log buffered
```

**Related Commands**

- [clear log buffered](#)
- [log buffered](#)
- [log buffered \(filter\)](#)
- [log buffered size](#)
- [log buffered exclude](#)
- [show log](#)
- [show log config](#)

# default log console

**Overview** This command restores the default settings for log messages sent to the terminal when a [log console](#) command is issued. By default all messages are sent to the console when a **log console** command is issued.

**Syntax** default log console

**Mode** Global Configuration

**Example** To restore the log console to its default settings use the following commands:

```
awplus# configure terminal
awplus(config)# default log console
```

**Related Commands**

- [log console](#)
- [log console \(filter\)](#)
- [log console exclude](#)
- [show log config](#)

# default log email

**Overview** This command restores the default settings for log messages sent to an email address. By default no filters are defined for email addresses. Filters must be defined before messages will be sent. This command also restores the remote syslog server time offset value to local (no offset).

**Syntax** `default log email <email-address>`

| Parameter                          | Description                               |
|------------------------------------|-------------------------------------------|
| <code>&lt;email-address&gt;</code> | The email address to send log messages to |

**Mode** Global Configuration

**Example** To restore the default settings for log messages sent to the email address `admin@alliedtelesis.com` use the following commands:

```
awplus# configure terminal
awplus(config)# default log email admin@alliedtelesis.com
```

**Related Commands**

- [log email](#)
- [log email \(filter\)](#)
- [log email exclude](#)
- [log email time](#)
- [show log config](#)

# default log host

**Overview** This command restores the default settings for log sent to a remote syslog server. By default no filters are defined for remote syslog servers. Filters must be defined before messages will be sent. This command also restores the remote syslog server time offset value to local (no offset).

**Syntax** `default log host <ip-addr>`

| Parameter | Description                              |
|-----------|------------------------------------------|
| <ip-addr> | The IP address of a remote syslog server |

**Mode** Global Configuration

**Example** To restore the default settings for messages sent to the remote syslog server with IP address 10.32.16.21 use the following commands:

```
awplus# configure terminal
awplus(config)# default log host 10.32.16.21
```

**Related Commands**

- [log host](#)
- [log host \(filter\)](#)
- [log host exclude](#)
- [log host source](#)
- [log host time](#)
- [show log config](#)



# default log monitor

**Overview** This command restores the default settings for log messages sent to the terminal when a [terminal monitor](#) command is used.

**Syntax** `default log monitor`

**Default** All messages are sent to the terminal when a [terminal monitor](#) command is used.

**Mode** Global Configuration

**Example** To restore the log monitor to its default settings use the following commands:

```
awplus# configure terminal
awplus(config)# default log monitor
```

**Related  
Commands** [log monitor \(filter\)](#)  
[log monitor exclude](#)  
[show log config](#)  
[terminal monitor](#)

# default log permanent

**Overview** This command restores the default settings for the permanent log stored in NVS. By default, the size of the permanent log is 50 kB and it accepts messages with the severity level of `warnings` and above.

**Syntax** `default log permanent`

**Default** The permanent log is enabled by default.

**Mode** Global Configuration

**Example** To restore the permanent log to its default settings use the following commands:

```
awplus# configure terminal
awplus(config)# default log permanent
```

**Related  
Commands**

- `clear log permanent`
- `log permanent`
- `log permanent (filter)`
- `log permanent exclude`
- `log permanent size`
- `show log config`
- `show log permanent`

# log buffered

**Overview** This command configures the device to store log messages in RAM. Messages stored in RAM are not retained on the device over a restart. Once the buffered log reaches its configured maximum allowable size old messages will be deleted to make way for new ones.

**Syntax** `log buffered`  
`no log buffered`

**Default** The buffered log is configured by default.

**Mode** Global Configuration

**Examples** To configured the device to store log messages in RAM use the following commands:

```
awplus# configure terminal
awplus(config)# log buffered
```

To configure the device to not store log messages in a RAM buffer use the following commands:

```
awplus# configure terminal
awplus(config)# no log buffered
```

**Related Commands**

- [clear log buffered](#)
- [default log buffered](#)
- [log buffered \(filter\)](#)
- [log buffered size](#)
- [log buffered exclude](#)
- [show log](#)
- [show log config](#)

# log buffered (filter)

**Overview** Use this command to create a filter to select messages to be sent to the buffered log. Selection can be based on the priority/ severity of the message, the program that generated the message, the logging facility used, a sub-string within the message or a combination of some or all of these.

The **no** variant of this command removes the corresponding filter, so that the specified messages are no longer sent to the buffered log.

**Syntax** `log buffered [level <level>] [program <program-name>] [facility <facility>] [msgtext <text-string>]`  
`no log buffered [level <level>] [program <program-name>] [facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                                           |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| level           | Filter messages to the buffered log by severity level.                                                                                                                                                |
| <level>         | The minimum severity of message to send to the buffered log. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity: |
| 0 emergencies   | System is unusable                                                                                                                                                                                    |
| 1 alerts        | Action must be taken immediately                                                                                                                                                                      |
| 2 critical      | Critical conditions                                                                                                                                                                                   |
| 3 errors        | Error conditions                                                                                                                                                                                      |
| 4 warnings      | Warning conditions                                                                                                                                                                                    |
| 5 notices       | Normal, but significant, conditions                                                                                                                                                                   |
| 6 informational | Informational messages                                                                                                                                                                                |
| 7 debugging     | Debug-level messages                                                                                                                                                                                  |
| program         | Filter messages to the buffered log by program. Include messages from a specified program in the buffered log.                                                                                        |
| <program-name>  | The name of a program to log messages from, either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output:      |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                                                  |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                                                 |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                                              |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                                          |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                                                   |
| mstp            | Multiple Spanning Tree Protocol (MSTP)                                                                                                                                                                |
| imi             | Integrated Management Interface (IMI)                                                                                                                                                                 |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
| imish         | Integrated Management Interface Shell (IMISH)                                                                           |
| epsr          | Ethernet Protection Switched Rings (EPSR)                                                                               |
| rmon          | Remote Monitoring                                                                                                       |
| loopprot      | Loop Protection                                                                                                         |
| poe           | Power-inline (Power over Ethernet)                                                                                      |
| dhcpcsn       | DHCP snooping (DHCP SN)                                                                                                 |
| facility      | Filter messages to the buffered log by syslog facility.                                                                 |
| <facility>    | Specify one of the following syslog facilities to include messages from in the buffered log:                            |
| kern          | Kernel messages                                                                                                         |
| user          | Random user-level messages                                                                                              |
| mail          | Mail system                                                                                                             |
| daemon        | System daemons                                                                                                          |
| auth          | Security/authorization messages                                                                                         |
| syslog        | Messages generated internally by syslogd                                                                                |
| lpr           | Line printer subsystem                                                                                                  |
| news          | Network news subsystem                                                                                                  |
| uucp          | UUCP subsystem                                                                                                          |
| cron          | Clock daemon                                                                                                            |
| authpriv      | Security/authorization messages (private)                                                                               |
| ftp           | FTP daemon                                                                                                              |
| msgtext       | Select messages containing a certain text string.                                                                       |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

**Default** By default the buffered log has a filter to select messages whose severity level is "notices (5)" or higher. This filter may be removed using the **no** variant of this command.

**Mode** Global Configuration

**Examples** To add a filter to send all messages generated by EPSR that have a severity of **notices** or higher to the buffered log use the following commands:

```
awplus# configure terminal
awplus(config)# log buffered level notices program epsr
```

To add a filter to send all messages containing the text *Bridging initialization*, to the buffered log use the following commands:

```
awplus# configure terminal
awplus(config)# log buffered msgtext Bridging initialization
```

To remove a filter that sends all messages generated by EPSR that have a severity of **notices** or higher to the buffered log use the following commands:

```
awplus# configure terminal
awplus(config)# no log buffered level notices program epsr
```

To remove a filter that sends all messages containing the text *Bridging initialization*, to the buffered log use the following commands:

```
awplus# configure terminal
awplus(config)# no log buffered msgtext Bridging initialization
```

**Related  
Commands**

[clear log buffered](#)

[default log buffered](#)

[log buffered](#)

[log buffered size](#)

[log buffered exclude](#)

[show log](#)

[show log config](#)

# log buffered exclude

**Overview** Use this command to exclude specified log messages from the buffered log. You can exclude messages on the basis of:

- the priority/severity of the message
- the program that generated the message
- the logging facility used
- a sub-string within the message, or
- a combination of some or all of these.

Use the **no** variant of this command to stop excluding the specified messages.

**Syntax** `log buffered exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]  
no log buffered exclude [level <level>] [program  
<program-name>] [facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                 |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| level           | Exclude messages of the specified severity level.                                                                                                                           |
| <level>         | The severity level to exclude. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity:     |
| 0 emergencies   | System is unusable                                                                                                                                                          |
| 1 alerts        | Action must be taken immediately                                                                                                                                            |
| 2 critical      | Critical conditions                                                                                                                                                         |
| 3 errors        | Error conditions                                                                                                                                                            |
| 4 warnings      | Warning conditions                                                                                                                                                          |
| 5 notices       | Normal, but significant, conditions                                                                                                                                         |
| 6 informational | Informational messages                                                                                                                                                      |
| 7 debugging     | Debug-level messages                                                                                                                                                        |
| program         | Exclude messages from a specified program.                                                                                                                                  |
| <program-name>  | The name of a program. Either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output. |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                        |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                       |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                    |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                         |
| mstp            | Multiple Spanning Tree Protocol (MSTP)                                                                                                                                      |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
| imi           | Integrated Management Interface (IMI)                                                                                   |
| imish         | Integrated Management Interface Shell (IMISH)                                                                           |
| epsr          | Ethernet Protection Switched Rings (EPSR)                                                                               |
| rmon          | Remote Monitoring                                                                                                       |
| loopprot      | Loop Protection                                                                                                         |
| poe           | Power-inline (Power over Ethernet)                                                                                      |
| dhcpsn        | DHCP snooping (DHCP SN)                                                                                                 |
| facility      | Exclude messages from a syslog facility.                                                                                |
| <facility>    | Specify one of the following syslog facilities to exclude messages from:                                                |
| kern          | Kernel messages                                                                                                         |
| user          | Random user-level messages                                                                                              |
| mail          | Mail system                                                                                                             |
| daemon        | System daemons                                                                                                          |
| auth          | Security/authorization messages                                                                                         |
| syslog        | Messages generated internally by syslogd                                                                                |
| lpr           | Line printer subsystem                                                                                                  |
| news          | Network news subsystem                                                                                                  |
| uucp          | UUCP subsystem                                                                                                          |
| cron          | Clock daemon                                                                                                            |
| authpriv      | Security/authorization messages (private)                                                                               |
| ftp           | FTP daemon                                                                                                              |
| msgtext       | Exclude messages containing a certain text string.                                                                      |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

**Default** No log messages are excluded

**Mode** Global configuration

**Example** To remove messages that contain the string “example of irrelevant message”, use the following commands:

```
awplus# configure terminal
awplus(config)# log buffered exclude msgtext example of
irrelevant message
```

**Related Commands** [clear log buffered](#)  
[default log buffered](#)



log buffered  
log buffered (filter)  
log buffered size  
show log  
show log config

# log buffered size

**Overview** This command configures the amount of memory that the buffered log is permitted to use. Once this memory allocation has been filled old messages will be deleted to make room for new messages.

**Syntax** `log buffered size <50-250>`

| Parameter                   | Description                      |
|-----------------------------|----------------------------------|
| <code>&lt;50-250&gt;</code> | Size of the RAM log in kilobytes |

**Mode** Global Configuration

**Example** To allow the buffered log to use up to 100 kB of RAM use the following commands:

```
awplus# configure terminal
awplus(config)# log buffered size 100
```

**Related Commands**

- `clear log buffered`
- `default log buffered`
- `log buffered`
- `log buffered (filter)`
- `log buffered exclude`
- `show log`
- `show log config`

# log console

**Overview** This command configures the device to send log messages to consoles. The console log is configured by default to send messages to the device's main console port.

Use the **no** variant of this command to configure the device not to send log messages to consoles.

**Syntax** `log console`  
`no log console`

**Mode** Global Configuration

**Examples** To configure the device to send log messages use the following commands:

```
awplus# configure terminal
awplus(config)# log console
```

To configure the device not to send log messages in all consoles use the following commands:

```
awplus# configure terminal
awplus(config)# no log console
```

**Related Commands** [default log console](#)  
[log console \(filter\)](#)  
[log console exclude](#)  
[show log config](#)

# log console (filter)

**Overview** This command creates a filter to select messages to be sent to all consoles when the **log console** command is given. Selection can be based on the priority/severity of the message, the program that generated the message, the logging facility used, a sub-string within the message or a combination of some or all of these.

**Syntax** `log console [level <level>] [program <program-name>] [facility <facility>] [msgtext <text-string>]`  
`no log console [level <level>] [program <program-name>] [facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                                      |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| level           | Filter messages by severity level.                                                                                                                                                               |
| <level>         | The minimum severity of message to send. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity:                |
| 0 emergencies   | System is unusable                                                                                                                                                                               |
| 1 alerts        | Action must be taken immediately                                                                                                                                                                 |
| 2 critical      | Critical conditions                                                                                                                                                                              |
| 3 errors        | Error conditions                                                                                                                                                                                 |
| 4 warnings      | Warning conditions                                                                                                                                                                               |
| 5 notices       | Normal, but significant, conditions                                                                                                                                                              |
| 6 informational | Informational messages                                                                                                                                                                           |
| 7 debugging     | Debug-level messages                                                                                                                                                                             |
| program         | Filter messages by program. Include messages from a specified program.                                                                                                                           |
| <program-name>  | The name of a program to log messages from, either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output: |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                                             |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                                            |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                                         |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                                     |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                                              |
| mstp            | Multiple Spanning Tree Protocol (MSTP)                                                                                                                                                           |
| imi             | Integrated Management Interface (IMI)                                                                                                                                                            |
| imish           | Integrated Management Interface Shell (IMISH)                                                                                                                                                    |
| epsr            | Ethernet Protection Switched Rings (EPSR)                                                                                                                                                        |
| rmon            | Remote Monitoring                                                                                                                                                                                |

| Parameter     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|-----------------|------|------------------------------------|--------|-------------------------|--------|----------------|------|---------------------------------|--------|------------------------------------------|-----|------------------------|------|------------------------|------|----------------|------|--------------|----------|-------------------------------------------|-----|------------|
|               | <table> <tr> <td>loopprot</td><td>Loop Protection</td></tr> <tr> <td>poe</td><td>Power-inline (Power over Ethernet)</td></tr> <tr> <td>dhcpcn</td><td>DHCP snooping (DHCP SN)</td></tr> </table>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | loopprot | Loop Protection | poe  | Power-inline (Power over Ethernet) | dhcpcn | DHCP snooping (DHCP SN) |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| loopprot      | Loop Protection                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| poe           | Power-inline (Power over Ethernet)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| dhcpcn        | DHCP snooping (DHCP SN)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| facility      | Filter messages by syslog facility.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| <facility>    | Specify one of the following syslog facilities to include messages from:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
|               | <table> <tr> <td>kern</td><td>Kernel messages</td></tr> <tr> <td>user</td><td>Random user-level messages</td></tr> <tr> <td>mail</td><td>Mail system</td></tr> <tr> <td>daemon</td><td>System daemons</td></tr> <tr> <td>auth</td><td>Security/authorization messages</td></tr> <tr> <td>syslog</td><td>Messages generated internally by syslogd</td></tr> <tr> <td>lpr</td><td>Line printer subsystem</td></tr> <tr> <td>news</td><td>Network news subsystem</td></tr> <tr> <td>uucp</td><td>UUCP subsystem</td></tr> <tr> <td>cron</td><td>Clock daemon</td></tr> <tr> <td>authpriv</td><td>Security/authorization messages (private)</td></tr> <tr> <td>ftp</td><td>FTP daemon</td></tr> </table> | kern     | Kernel messages | user | Random user-level messages         | mail   | Mail system             | daemon | System daemons | auth | Security/authorization messages | syslog | Messages generated internally by syslogd | lpr | Line printer subsystem | news | Network news subsystem | uucp | UUCP subsystem | cron | Clock daemon | authpriv | Security/authorization messages (private) | ftp | FTP daemon |
| kern          | Kernel messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| user          | Random user-level messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| mail          | Mail system                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| daemon        | System daemons                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| auth          | Security/authorization messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| syslog        | Messages generated internally by syslogd                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| lpr           | Line printer subsystem                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| news          | Network news subsystem                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| uucp          | UUCP subsystem                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| cron          | Clock daemon                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| authpriv      | Security/authorization messages (private)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| ftp           | FTP daemon                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| msgtext       | Select messages containing a certain text string.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |          |                 |      |                                    |        |                         |        |                |      |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |

**Default** By default the console log has a filter to select messages whose severity level is **critical** or higher. This filter may be removed using the **no** variant of this command. This filter may be removed and replaced by filters that are more selective.

**Mode** Global Configuration

**Examples** To create a filter to send all messages generated by MSTP that have a severity of **info** or higher to console instances where the log console command has been given, remove the default filter that includes everything use the following commands:

```
awplus# configure terminal
awplus(config)# log console level info program mstp
and then use the command:
awplus(config)# log console level info program mstp
```

To create a filter to send all messages containing the text "Bridging initialization" to console instances where the log console command has been given use the following commands:

```
awplus# configure terminal
awplus(config)# log console msgtext "Bridging initialization"
```

To remove a filter that sends all messages generated by EPSR that have a severity of notices or higher to consoles use the following commands:

```
awplus# configure terminal
awplus(config)# no log console level notices program epsr
```

To remove a default filter that includes sending critical, alert and emergency level messages to the console use the following commands:

```
awplus# configure terminal
awplus(config)# no log console level critical
```

**Related  
Commands**

[default log console](#)  
[log console](#)  
[log console exclude](#)  
[show log config](#)

# log console exclude

**Overview** Use this command to prevent specified log messages from being sent to the console, when console logging is turned on. You can exclude messages on the basis of:

- the priority/severity of the message
- the program that generated the message
- the logging facility used
- a sub-string within the message, or
- a combination of some or all of these.

Use the **no** variant of this command to stop excluding the specified messages.

**Syntax** `log console exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]`  
`no log console exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                 |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| level           | Exclude messages of the specified severity level.                                                                                                                           |
| <level>         | The severity level to exclude. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity:     |
| 0 emergencies   | System is unusable                                                                                                                                                          |
| 1 alerts        | Action must be taken immediately                                                                                                                                            |
| 2 critical      | Critical conditions                                                                                                                                                         |
| 3 errors        | Error conditions                                                                                                                                                            |
| 4 warnings      | Warning conditions                                                                                                                                                          |
| 5 notices       | Normal, but significant, conditions                                                                                                                                         |
| 6 informational | Informational messages                                                                                                                                                      |
| 7 debugging     | Debug-level messages                                                                                                                                                        |
| program         | Exclude messages from a specified program.                                                                                                                                  |
| <program-name>  | The name of a program. Either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output. |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                        |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                       |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                    |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                         |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
| mstp          | Multiple Spanning Tree Protocol (MSTP)                                                                                  |
| imi           | Integrated Management Interface (IMI)                                                                                   |
| imish         | Integrated Management Interface Shell (IMISH)                                                                           |
| epsr          | Ethernet Protection Switched Rings (EPSR)                                                                               |
| rmon          | Remote Monitoring                                                                                                       |
| loopprot      | Loop Protection                                                                                                         |
| poe           | Power-inline (Power over Ethernet)                                                                                      |
| dhcpcn        | DHCP snooping (DHPCPSN)                                                                                                 |
| facility      | Exclude messages from a syslog facility.                                                                                |
| <facility>    | Specify one of the following syslog facilities to exclude messages from:                                                |
| kern          | Kernel messages                                                                                                         |
| user          | Random user-level messages                                                                                              |
| mail          | Mail system                                                                                                             |
| daemon        | System daemons                                                                                                          |
| auth          | Security/authorization messages                                                                                         |
| syslog        | Messages generated internally by syslogd                                                                                |
| lpr           | Line printer subsystem                                                                                                  |
| news          | Network news subsystem                                                                                                  |
| uucp          | UUCP subsystem                                                                                                          |
| cron          | Clock daemon                                                                                                            |
| authpriv      | Security/authorization messages (private)                                                                               |
| ftp           | FTP daemon                                                                                                              |
| msgtext       | Exclude messages containing a certain text string.                                                                      |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

**Default** No log messages are excluded

**Mode** Global configuration

**Example** To remove messages that contain the string "example of irrelevant message", use the following commands:

```
awplus# configure terminal
awplus(config)# log console exclude msgtext example of
irrelevant message
```

**Related Commands** [default log console](#)



log console  
log console (filter)  
show log config

# log email

**Overview** This command configures the device to send log messages to an email address. The email address is specified in this command.

**Syntax** `log email <email-address>`

| Parameter                          | Description                               |
|------------------------------------|-------------------------------------------|
| <code>&lt;email-address&gt;</code> | The email address to send log messages to |

**Default** By default no filters are defined for email log targets. Filters must be defined before messages will be sent.

**Mode** Global Configuration

**Example** To have log messages emailed to the email address `admin@alliedtelesis.com` use the following commands:

```
awplus# configure terminal
awplus(config)# log email admin@alliedtelesis.com
```

**Related Commands**

- [default log email](#)
- [log email \(filter\)](#)
- [log email exclude](#)
- [log email time](#)
- [show log config](#)

# log email (filter)

**Overview** This command creates a filter to select messages to be sent to an email address. Selection can be based on the priority/ severity of the message, the program that generated the message, the logging facility used, a sub-string within the message or a combination of some or all of these.

The **no** variant of this command configures the device to no longer send log messages to a specified email address. All configuration relating to this log target will be removed.

**Syntax** `log email <email-address> [level <level>] [program <program-name>] [facility <facility>] [msgtext <text-string>]`  
`no log email <email-address> [level <level>] [program <program-name>] [facility <facility>] [msgtext <text-string>]`

| Parameter                          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|--------------------------------------|----------|---------------------------------------|------------|------------------------------------------|----------|------------------------------|------------|-------------------------------------|-----------|----------------------------------------|-----------------|------------------------|-------------|----------------------|
| <code>&lt;email-address&gt;</code> | The email address to send logging messages to                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| <code>level</code>                 | Filter messages by severity level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| <code>&lt;level&gt;</code>         | The minimum severity of message to send. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity: <table> <tr> <td>0 emergencies</td><td>System is unusable</td></tr> <tr> <td>1 alerts</td><td>Action must be taken immediately</td></tr> <tr> <td>2 critical</td><td>Critical conditions</td></tr> <tr> <td>3 errors</td><td>Error conditions</td></tr> <tr> <td>4 warnings</td><td>Warning conditions</td></tr> <tr> <td>5 notices</td><td>Normal, but significant, conditions</td></tr> <tr> <td>6 informational</td><td>Informational messages</td></tr> <tr> <td>7 debugging</td><td>Debug-level messages</td></tr> </table> | 0 emergencies | System is unusable                   | 1 alerts | Action must be taken immediately      | 2 critical | Critical conditions                      | 3 errors | Error conditions             | 4 warnings | Warning conditions                  | 5 notices | Normal, but significant, conditions    | 6 informational | Informational messages | 7 debugging | Debug-level messages |
| 0 emergencies                      | System is unusable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| 1 alerts                           | Action must be taken immediately                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| 2 critical                         | Critical conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| 3 errors                           | Error conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| 4 warnings                         | Warning conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| 5 notices                          | Normal, but significant, conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| 6 informational                    | Informational messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| 7 debugging                        | Debug-level messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| <code>program</code>               | Filter messages by program. Include messages from a specified program.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| <code>&lt;program-name&gt;</code>  | The name of a program to log messages from, either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output: <table> <tr> <td>rsvp</td><td>Resource Reservation Protocol (RSVP)</td></tr> <tr> <td>dot1x</td><td>IEEE 802.1X Port-Based Access Control</td></tr> <tr> <td>lacp</td><td>Link Aggregation Control Protocol (LACP)</td></tr> <tr> <td>stp</td><td>Spanning Tree Protocol (STP)</td></tr> <tr> <td>rstp</td><td>Rapid Spanning Tree Protocol (RSTP)</td></tr> <tr> <td>mstp</td><td>Multiple Spanning Tree Protocol (MSTP)</td></tr> </table>                                                                      | rsvp          | Resource Reservation Protocol (RSVP) | dot1x    | IEEE 802.1X Port-Based Access Control | lacp       | Link Aggregation Control Protocol (LACP) | stp      | Spanning Tree Protocol (STP) | rstp       | Rapid Spanning Tree Protocol (RSTP) | mstp      | Multiple Spanning Tree Protocol (MSTP) |                 |                        |             |                      |
| rsvp                               | Resource Reservation Protocol (RSVP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| dot1x                              | IEEE 802.1X Port-Based Access Control                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| lacp                               | Link Aggregation Control Protocol (LACP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| stp                                | Spanning Tree Protocol (STP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| rstp                               | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |
| mstp                               | Multiple Spanning Tree Protocol (MSTP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                        |             |                      |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
|               | imi Integrated Management Interface (IMI)                                                                               |
|               | imish Integrated Management Interface Shell (IMISH)                                                                     |
|               | epsr Ethernet Protection Switched Rings (EPSR)                                                                          |
|               | rmon Remote Monitoring                                                                                                  |
|               | loopprot Loop Protection                                                                                                |
|               | poe Power-inline (Power over Ethernet)                                                                                  |
|               | dhcpsn DHCP snooping (DHCP SN)                                                                                          |
| facility      | Filter messages by syslog facility.                                                                                     |
| <facility>    | Specify one of the following syslog facilities to include messages from:                                                |
|               | kern Kernel messages                                                                                                    |
|               | user Random user-level messages                                                                                         |
|               | mail Mail system                                                                                                        |
|               | daemon System daemons                                                                                                   |
|               | auth Security/authorization messages                                                                                    |
|               | syslog Messages generated internally by syslogd                                                                         |
|               | lpr Line printer subsystem                                                                                              |
|               | news Network news subsystem                                                                                             |
|               | uucp UUCP subsystem                                                                                                     |
|               | cron Clock daemon                                                                                                       |
|               | authpriv Security/authorization messages (private)                                                                      |
|               | ftp FTP daemon                                                                                                          |
| msgtext       | Select messages containing a certain text string.                                                                       |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

**Mode** Global Configuration

**Examples** To create a filter to send all messages generated by EPSR that have a severity of notices or higher to the email address `admin@homebase.com` use the following commands:

```
awplus# configure terminal
awplus(config)# log email admin@homebase.com level notices
program epsr
```

To create a filter to send all messages containing the text "Bridging initialization", to the email address `admin@homebase.com` use the following commands:

```
awplus# configure terminal
awplus(config)# log email admin@homebase.com msgtext "Bridging
initialization"
```

To create a filter to send messages with a severity level of informational and above to the email address `admin@alliedtelesis.com` use the following commands:

```
awplus# configure terminal
awplus(config)# log email admin@alliedtelesis.com level
informational
```

To stop the device emailing log messages emailed to the email address `admin@alliedtelesis.com` use the following commands:

```
awplus# configure terminal
awplus(config)# no log email admin@homebase.com
```

To remove a filter that sends all messages generated by EPSR that have a severity of notices or higher to the email address `admin@homebase.com` use the following commands:

```
awplus# configure terminal
awplus(config)# no log email admin@homebase.com level notices
program epsr
```

To remove a filter that sends messages with a severity level of informational and above to the email address `admin@alliedtelesis.com` use the following commands:

```
awplus# configure terminal
awplus(config)# no log email admin@alliedtelesis.com level
informational
```

#### **Related Commands**

[default log email](#)  
[log email](#)  
[log email exclude](#)  
[log email time](#)  
[show log config](#)

# log email exclude

**Overview** Use this command to prevent specified log messages from being emailed, when the device is configured to send log messages to an email address. You can exclude messages on the basis of:

- the priority/severity of the message
- the program that generated the message
- the logging facility used
- a sub-string within the message, or
- a combination of some or all of these.

Use the **no** variant of this command to stop excluding the specified messages.

**Syntax** `log email exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]`  
`no log email exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                 |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| level           | Exclude messages of the specified severity level.                                                                                                                           |
| <level>         | The severity level to exclude. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity:     |
| 0 emergencies   | System is unusable                                                                                                                                                          |
| 1 alerts        | Action must be taken immediately                                                                                                                                            |
| 2 critical      | Critical conditions                                                                                                                                                         |
| 3 errors        | Error conditions                                                                                                                                                            |
| 4 warnings      | Warning conditions                                                                                                                                                          |
| 5 notices       | Normal, but significant, conditions                                                                                                                                         |
| 6 informational | Informational messages                                                                                                                                                      |
| 7 debugging     | Debug-level messages                                                                                                                                                        |
| program         | Exclude messages from a specified program.                                                                                                                                  |
| <program-name>  | The name of a program. Either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output. |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                        |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                       |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                    |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                         |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
| mstp          | Multiple Spanning Tree Protocol (MSTP)                                                                                  |
| imi           | Integrated Management Interface (IMI)                                                                                   |
| imish         | Integrated Management Interface Shell (IMISH)                                                                           |
| epsr          | Ethernet Protection Switched Rings (EPSR)                                                                               |
| rmon          | Remote Monitoring                                                                                                       |
| loopprot      | Loop Protection                                                                                                         |
| poe           | Power-inline (Power over Ethernet)                                                                                      |
| dhcpcsn       | DHCP snooping (DHPCPSN)                                                                                                 |
| facility      | Exclude messages from a syslog facility.                                                                                |
| <facility>    | Specify one of the following syslog facilities to exclude messages from:                                                |
| kern          | Kernel messages                                                                                                         |
| user          | Random user-level messages                                                                                              |
| mail          | Mail system                                                                                                             |
| daemon        | System daemons                                                                                                          |
| auth          | Security/authorization messages                                                                                         |
| syslog        | Messages generated internally by syslogd                                                                                |
| lpr           | Line printer subsystem                                                                                                  |
| news          | Network news subsystem                                                                                                  |
| uucp          | UUCP subsystem                                                                                                          |
| cron          | Clock daemon                                                                                                            |
| authpriv      | Security/authorization messages (private)                                                                               |
| ftp           | FTP daemon                                                                                                              |
| msgtext       | Exclude messages containing a certain text string.                                                                      |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

**Default** No log messages are excluded

**Mode** Global configuration

**Example** To remove messages that contain the string "example of irrelevant message", use the following commands:

```
awplus# configure terminal
awplus(config)# log email exclude msgtext example of irrelevant message
```

**Related  
Commands**

- default log email
- log email
- log email (filter)
- log email time
- show log config



# log email time

**Overview** This command configures the time used in messages sent to an email address. If the syslog server is in a different time zone to your device then the time offset can be configured using either the **utc-offset** parameter option keyword or the **local-offset** parameter option keyword, where **utc-offset** is the time difference from UTC (Universal Time, Coordinated) and **local-offset** is the difference from local time.

**Syntax** `log email <email-address> time {local|local-offset|utc-offset {plus|minus}<0-24>}`

| Parameter                          | Description                                                                                                                                                                                                    |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;email-address&gt;</code> | The email address to send log messages to                                                                                                                                                                      |
| <code>time</code>                  | Specify the time difference between the email recipient and the device you are configuring.                                                                                                                    |
| <code>local</code>                 | The device is in the same time zone as the email recipient                                                                                                                                                     |
| <code>local-offset</code>          | The device is in a different time zone to the email recipient. Use the <b>plus</b> or <b>minus</b> keywords and specify the difference (offset) from local time of the device to the email recipient in hours. |
| <code>utc-offset</code>            | The device is in a different time zone to the email recipient. Use the <b>plus</b> or <b>minus</b> keywords and specify the difference (offset) from UTC time of the device to the email recipient in hours.   |
| <code>plus</code>                  | Negative offset (difference) from the device to the email recipient.                                                                                                                                           |
| <code>minus</code>                 | Positive offset (difference) from the device to the email recipient.                                                                                                                                           |
| <code>&lt;0-24&gt;</code>          | World Time zone offset in hours                                                                                                                                                                                |

**Default** The default is **local** time.

**Mode** Global Configuration

**Usage** Use the **local** option if the email recipient is in the same time zone as this device. Messages will display the time as on the local device when the message was generated.

Use the **offset** option if the email recipient is in a different time zone to this device. Specify the time offset of the email recipient in hours. Messages will display the time they were generated on this device but converted to the time zone of the email recipient.

**Examples** To send messages to the email address `test@home.com` in the same time zone as the device's local time zone, use the following commands:

```
awplus# configure terminal
awplus(config)# log email admin@base.com time local 0
```

To send messages to the email address `admin@base.com` with the time information converted to the time zone of the email recipient, which is 3 hours ahead of the device's local time zone, use the following commands:

```
awplus# configure terminal
awplus(config)# log email admin@base.com time local-offset plus
3
```

To send messages to the email address `user@remote.com` with the time information converted to the time zone of the email recipient, which is 3 hours behind the device's UTC time zone, use the following commands:

```
awplus# configure terminal
awplus(config)# log email user@remote.com time utc-offset minus
3
```

**Related  
Commands**

- [default log email](#)
- [log email](#)
- [log email \(filter\)](#)
- [log email exclude](#)
- [show log config](#)

# log facility

**Overview** Use this command to specify an outgoing syslog facility. This determines where the syslog server will store the log messages.

Use the **no** variant of this command to remove the facility.

**Syntax** `log facility`  
{kern|user|mail|daemon|auth|syslog|lpr|news|uucp|cron|authpriv|ftp|local0|local1|local2|local3|local4|local5|local6|local7}  
`no log facility`

| Parameter | Description                                        |
|-----------|----------------------------------------------------|
| kern      | Kernel messages                                    |
| user      | User-level messages                                |
| mail      | Mail system                                        |
| daemon    | System daemons                                     |
| auth      | Security/authorization messages                    |
| syslog    | Messages generated internally by the syslog daemon |
| lpr       | Line printer subsystem                             |
| news      | Network news subsystem                             |
| uucp      | UNIX-to-UNIX Copy Program subsystem                |
| cron      | Clock daemon                                       |
| authpriv  | Security/authorization (private) messages          |
| ftp       | FTP daemon                                         |
| local0    | Local use 0                                        |
| local1    | Local use 1                                        |
| local2    | Local use 2                                        |
| local3    | Local use 3                                        |
| local4    | Local use 4                                        |
| local5    | Local use 5                                        |
| local6    | Local use 6                                        |
| local7    | Local use 7                                        |

**Default** None (the outgoing syslog facility depends on the log message)

**Mode** Global Configuration

**Example** To specify a facility of local0, use the following commands:

```
awplus# configure terminal  
awplus(config)# log facility local0
```

**Related  
Commands** [show log config](#)

# log host

**Overview** This command configures the device to send log messages to a remote syslog server via UDP port 514. The IP address of the remote server must be specified. By default no filters are defined for remote syslog servers. Filters must be defined before messages will be sent.

**Syntax** `log host <ip-addr>`  
`no log host <ip-addr>`

| Parameter                    | Description                                                               |
|------------------------------|---------------------------------------------------------------------------|
| <code>&lt;ip-addr&gt;</code> | The IP address of a remote syslog server in dotted decimal format A.B.C.D |

**Mode** Global Configuration

**Examples** To configure the device to send log messages to a remote syslog server with IP address 10.32.16.99 use the following commands:

```
awplus# configure terminal
awplus(config)# log host 10.32.16.99
```

To stop the device from sending log messages to the remote syslog server with IP address 10.32.16.99 use the following commands:

```
awplus# configure terminal
awplus(config)# no log host 10.32.16.99
```

**Related Commands**

- [default log host](#)
- [log host \(filter\)](#)
- [log host exclude](#)
- [log host source](#)
- [log host time](#)
- [show log config](#)

# log host (filter)

**Overview** This command creates a filter to select messages to be sent to a remote syslog server. Selection can be based on the priority/severity of the message, the program that generated the message, the logging facility used, a substring within the message or a combination of some or all of these.

The **no** variant of this command configures the device to no longer send log messages to a remote syslog server. The IP address of the syslog server must be specified. All configuration relating to this log target will be removed.

**Syntax** `log host <ip-addr> [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]  
no log host <ip-addr> [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]`

| Parameter                         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|--------------------------------------|----------|---------------------------------------|------------|------------------------------------------|----------|------------------------------|------------|-------------------------------------|-----------|----------------------------------------|-----------------|---------------------------------------|-------------|----------------------|
| <code>&lt;ip-addr&gt;</code>      | The IP address of a remote syslog server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| <code>level</code>                | Filter messages by severity level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| <code>&lt;level&gt;</code>        | The minimum severity of message to send. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity: <table> <tr> <td>0 emergencies</td><td>System is unusable</td></tr> <tr> <td>1 alerts</td><td>Action must be taken immediately</td></tr> <tr> <td>2 critical</td><td>Critical conditions</td></tr> <tr> <td>3 errors</td><td>Error conditions</td></tr> <tr> <td>4 warnings</td><td>Warning conditions</td></tr> <tr> <td>5 notices</td><td>Normal, but significant, conditions</td></tr> <tr> <td>6 informational</td><td>Informational messages</td></tr> <tr> <td>7 debugging</td><td>Debug-level messages</td></tr> </table> | 0 emergencies | System is unusable                   | 1 alerts | Action must be taken immediately      | 2 critical | Critical conditions                      | 3 errors | Error conditions             | 4 warnings | Warning conditions                  | 5 notices | Normal, but significant, conditions    | 6 informational | Informational messages                | 7 debugging | Debug-level messages |
| 0 emergencies                     | System is unusable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| 1 alerts                          | Action must be taken immediately                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| 2 critical                        | Critical conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| 3 errors                          | Error conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| 4 warnings                        | Warning conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| 5 notices                         | Normal, but significant, conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| 6 informational                   | Informational messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| 7 debugging                       | Debug-level messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| <code>program</code>              | Filter messages by program. Include messages from a specified program.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| <code>&lt;program-name&gt;</code> | The name of a program to log messages from, either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output: <table> <tr> <td>rsvp</td><td>Resource Reservation Protocol (RSVP)</td></tr> <tr> <td>dot1x</td><td>IEEE 802.1X Port-Based Access Control</td></tr> <tr> <td>lacp</td><td>Link Aggregation Control Protocol (LACP)</td></tr> <tr> <td>stp</td><td>Spanning Tree Protocol (STP)</td></tr> <tr> <td>rstp</td><td>Rapid Spanning Tree Protocol (RSTP)</td></tr> <tr> <td>mstp</td><td>Multiple Spanning Tree Protocol (MSTP)</td></tr> <tr> <td>imi</td><td>Integrated Management Interface (IMI)</td></tr> </table> | rsvp          | Resource Reservation Protocol (RSVP) | dot1x    | IEEE 802.1X Port-Based Access Control | lacp       | Link Aggregation Control Protocol (LACP) | stp      | Spanning Tree Protocol (STP) | rstp       | Rapid Spanning Tree Protocol (RSTP) | mstp      | Multiple Spanning Tree Protocol (MSTP) | imi             | Integrated Management Interface (IMI) |             |                      |
| rsvp                              | Resource Reservation Protocol (RSVP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| dot1x                             | IEEE 802.1X Port-Based Access Control                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| lacp                              | Link Aggregation Control Protocol (LACP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| stp                               | Spanning Tree Protocol (STP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| rstp                              | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| mstp                              | Multiple Spanning Tree Protocol (MSTP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |
| imi                               | Integrated Management Interface (IMI)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                      |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
| imish         | Integrated Management Interface Shell (IMISH)                                                                           |
| epsr          | Ethernet Protection Switched Rings (EPSR)                                                                               |
| rmon          | Remote Monitoring                                                                                                       |
| loopprot      | Loop Protection                                                                                                         |
| poe           | Power-inline (Power over Ethernet)                                                                                      |
| dhcpsn        | DHCP snooping (DHCP SN)                                                                                                 |
| facility      | Filter messages by syslog facility.                                                                                     |
| <facility>    | Specify one of the following syslog facilities to include messages from:                                                |
| kern          | Kernel messages                                                                                                         |
| user          | Random user-level messages                                                                                              |
| mail          | Mail system                                                                                                             |
| daemon        | System daemons                                                                                                          |
| auth          | Security/authorization messages                                                                                         |
| syslog        | Messages generated internally by syslogd                                                                                |
| lpr           | Line printer subsystem                                                                                                  |
| news          | Network news subsystem                                                                                                  |
| uucp          | UUCP subsystem                                                                                                          |
| cron          | Clock daemon                                                                                                            |
| authpriv      | Security/authorization messages (private)                                                                               |
| ftp           | FTP daemon                                                                                                              |
| msgtext       | Select messages containing a certain text string.                                                                       |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

## Mode Global Configuration

**Examples** To create a filter to send all messages generated by EPSR that have a severity of notices or higher to a remote syslog server with IP address 10.32.16.21 use the following commands:

```
awplus# configure terminal
awplus(config)# log host 10.32.16.21 level notices program epsr
```

To create a filter to send all messages containing the text "Bridging initialization", to a remote syslog server with IP address 10.32.16.21 use the following commands:

```
awplus# configure terminal
awplus(config)# log host 10.32.16.21 msgtext "Bridging
initialization"
```

To create a filter to send messages with a severity level of informational and above to the syslog server with IP address 10.32.16.21 use the following commands:

```
awplus# configure terminal
awplus(config)# log host 10.32.16.21 level informational
```

To remove a filter that sends all messages generated by EPSR that have a severity of notices or higher to a remote syslog server with IP address 10.32.16.21 use the following commands:

```
awplus# configure terminal
awplus(config)# no log host 10.32.16.21 level notices program epsr
```

To remove a filter that sends all messages containing the text "Bridging initialization", to a remote syslog server with IP address 10.32.16.21 use the following commands:

```
awplus# configure terminal
awplus(config)# no log host 10.32.16.21 msgtext "Bridging initialization"
```

To remove a filter that sends messages with a severity level of informational and above to the syslog server with IP address 10.32.16.21 use the following commands:

```
awplusawpluls# configure terminal
awplus(config)# no log host 10.32.16.21 level informational
```

**Related  
Commands**

[default log host](#)

[log host](#)

[log host exclude](#)

[log host source](#)

[log host time](#)

[show log config](#)



# log host exclude

**Overview** Use this command to prevent specified log messages from being sent to the remote syslog server, when **log host** is enabled. You can exclude messages on the basis of:

- the priority/severity of the message
- the program that generated the message
- the logging facility used
- a sub-string within the message, or
- a combination of some or all of these.

Use the **no** variant of this command to stop excluding the specified messages.

**Syntax** `log host exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]`  
`no log host exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                 |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| level           | Exclude messages of the specified severity level.                                                                                                                           |
| <level>         | The severity level to exclude. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity:     |
| 0 emergencies   | System is unusable                                                                                                                                                          |
| 1 alerts        | Action must be taken immediately                                                                                                                                            |
| 2 critical      | Critical conditions                                                                                                                                                         |
| 3 errors        | Error conditions                                                                                                                                                            |
| 4 warnings      | Warning conditions                                                                                                                                                          |
| 5 notices       | Normal, but significant, conditions                                                                                                                                         |
| 6 informational | Informational messages                                                                                                                                                      |
| 7 debugging     | Debug-level messages                                                                                                                                                        |
| program         | Exclude messages from a specified program.                                                                                                                                  |
| <program-name>  | The name of a program. Either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output. |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                        |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                       |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                    |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                         |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
| mstp          | Multiple Spanning Tree Protocol (MSTP)                                                                                  |
| imi           | Integrated Management Interface (IMI)                                                                                   |
| imish         | Integrated Management Interface Shell (IMISH)                                                                           |
| epsr          | Ethernet Protection Switched Rings (EPSR)                                                                               |
| rmon          | Remote Monitoring                                                                                                       |
| loopprot      | Loop Protection                                                                                                         |
| poe           | Power-inline (Power over Ethernet)                                                                                      |
| dhcpcsn       | DHCP snooping (DHPCPSN)                                                                                                 |
| facility      | Exclude messages from a syslog facility.                                                                                |
| <facility>    | Specify one of the following syslog facilities to exclude messages from:                                                |
| kern          | Kernel messages                                                                                                         |
| user          | Random user-level messages                                                                                              |
| mail          | Mail system                                                                                                             |
| daemon        | System daemons                                                                                                          |
| auth          | Security/authorization messages                                                                                         |
| syslog        | Messages generated internally by syslogd                                                                                |
| lpr           | Line printer subsystem                                                                                                  |
| news          | Network news subsystem                                                                                                  |
| uucp          | UUCP subsystem                                                                                                          |
| cron          | Clock daemon                                                                                                            |
| authpriv      | Security/authorization messages (private)                                                                               |
| ftp           | FTP daemon                                                                                                              |
| msgtext       | Exclude messages containing a certain text string.                                                                      |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

**Default** No log messages are excluded

**Mode** Global configuration

**Example** To remove messages that contain the string "example of irrelevant message", use the following commands:

```
awplus# configure terminal
awplus(config)# log host exclude msgtext example of irrelevant message
```

**Related Commands** [default log host](#)

log host  
log host (filter)  
log host source  
log host time  
show log config

# log host source

**Overview** Use this command to specify a source interface or IP address for the device to send syslog messages from. You can specify any one of an interface name, an IPv4 address or an IPv6 address.

This is useful if the device can reach the syslog server via multiple interfaces or addresses and you want to control which interface/address the device uses.

Use the **no** variant of this command to stop specifying a source interface or address.

**Syntax** `log host source {<interface-name>|<ipv4-addr>|<ipv6-addr>}`  
`no log host source`

| Parameter                           | Description                                                                                   |
|-------------------------------------|-----------------------------------------------------------------------------------------------|
| <code>&lt;interface-name&gt;</code> | Specify the source interface name. You can enter a VLAN, eth interface or loopback interface. |
| <code>&lt;ipv4-addr&gt;</code>      | Specify the source IPv4 address, in dotted decimal notation (A.B.C.D).                        |
| <code>&lt;ipv6-addr&gt;</code>      | Specify the source IPv6 address, in X:X::X:X notation.                                        |

**Default** None (no source is configured)

**Mode** Global Configuration

**Example** To send syslog messages from 192.168.1.1, use the commands:

```
awplus# configure terminal
awplus(config)# log host source 192.168.1.1
```

**Related Commands**

- [default log host](#)
- [log host](#)
- [log host \(filter\)](#)
- [log host exclude](#)
- [log host time](#)
- [show log config](#)

# log host time

**Overview** This command configures the time used in messages sent to a remote syslog server. If the syslog server is in a different time zone to your device then the time offset can be configured using either the **utc-offset** parameter option keyword or the **local-offset** parameter option keyword, where **utc-offset** is the time difference from UTC (Universal Time, Coordinated) and **local-offset** is the difference from local time.

**Syntax** `log host <email-address> time {local|local-offset|utc-offset {plus|minus} <0-24>}`

| Parameter       | Description                                                                                                                                                                                                    |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <email-address> | The email address to send log messages to                                                                                                                                                                      |
| time            | Specify the time difference between the email recipient and the device you are configuring.                                                                                                                    |
| local           | The device is in the same time zone as the email recipient                                                                                                                                                     |
| local-offset    | The device is in a different time zone to the email recipient. Use the <b>plus</b> or <b>minus</b> keywords and specify the difference (offset) from local time of the device to the email recipient in hours. |
| utc-offset      | The device is in a different time zone to the email recipient. Use the <b>plus</b> or <b>minus</b> keywords and specify the difference (offset) from UTC time of the device to the email recipient in hours.   |
| plus            | Negative offset (difference) from the device to the syslog server.                                                                                                                                             |
| minus           | Positive offset (difference) from the device to the syslog server.                                                                                                                                             |
| <0-24>          | World Time zone offset in hours                                                                                                                                                                                |

**Default** The default is **local** time.

**Mode** Global Configuration

**Usage** Use the **local** option if the remote syslog server is in the same time zone as the device. Messages will display the time as on the local device when the message was generated.

Use the **offset** option if the email recipient is in a different time zone to this device. Specify the time offset of the remote syslog server in hours. Messages will display the time they were generated on this device but converted to the time zone of the remote syslog server.

**Examples** To send messages to the remote syslog server with the IP address 10.32.16.21 in the same time zone as the device's local time zone, use the following commands:

```
awplus# configure terminal
awplus(config)# log host 10.32.16.21 time local 0
```

To send messages to the remote syslog server with the IP address 10.32.16.12 with the time information converted to the time zone of the remote syslog server, which is 3 hours ahead of the device's local time zone, use the following commands:

```
awplus# configure terminal
awplus(config)# log host 10.32.16.12 time local-offset plus 3
```

To send messages to the remote syslog server with the IP address 10.32.16.02 with the time information converted to the time zone of the email recipient, which is 3 hours behind the device's UTC time zone, use the following commands:

```
awplus# configure terminal
awplus(config)# log host 10.32.16.02 time utc-offset minus 3
```

**Related  
Commands**

[default log host](#)

[log host](#)

[log host \(filter\)](#)

[log host exclude](#)

[log host source](#)

[show log config](#)

# log monitor (filter)

**Overview** This command creates a filter to select messages to be sent to the terminal when the **terminal monitor** command is given. Selection can be based on the priority/severity of the message, the program that generated the message, the logging facility used, a sub-string within the message or a combination of some or all of these.

**Syntax** `log monitor [level <level>] [program <program-name>] [facility <facility>] [msgtext <text-string>]`  
`no log monitor [level <level>] [program <program-name>]`  
`[facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|--------------------------------------|----------|---------------------------------------|------------|------------------------------------------|----------|------------------------------|------------|-------------------------------------|-----------|----------------------------------------|-----------------|---------------------------------------|-------------|-----------------------------------------------|------|-------------------------------------------|
| level           | Filter messages by severity level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| <level>         | The minimum severity of message to send. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity: <table><tr><td>0 emergencies</td><td>System is unusable</td></tr><tr><td>1 alerts</td><td>Action must be taken immediately</td></tr><tr><td>2 critical</td><td>Critical conditions</td></tr><tr><td>3 errors</td><td>Error conditions</td></tr><tr><td>4 warnings</td><td>Warning conditions</td></tr><tr><td>5 notices</td><td>Normal, but significant, conditions</td></tr><tr><td>6 informational</td><td>Informational messages</td></tr><tr><td>7 debugging</td><td>Debug-level messages</td></tr></table>                                                                                                                                                        | 0 emergencies | System is unusable                   | 1 alerts | Action must be taken immediately      | 2 critical | Critical conditions                      | 3 errors | Error conditions             | 4 warnings | Warning conditions                  | 5 notices | Normal, but significant, conditions    | 6 informational | Informational messages                | 7 debugging | Debug-level messages                          |      |                                           |
| 0 emergencies   | System is unusable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| 1 alerts        | Action must be taken immediately                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| 2 critical      | Critical conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| 3 errors        | Error conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| 4 warnings      | Warning conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| 5 notices       | Normal, but significant, conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| 6 informational | Informational messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| 7 debugging     | Debug-level messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| program         | Filter messages by program. Include messages from a specified program.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| <program-name>  | The name of a program to log messages from, either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output: <table><tr><td>rsvp</td><td>Resource Reservation Protocol (RSVP)</td></tr><tr><td>dot1x</td><td>IEEE 802.1X Port-Based Access Control</td></tr><tr><td>lacp</td><td>Link Aggregation Control Protocol (LACP)</td></tr><tr><td>stp</td><td>Spanning Tree Protocol (STP)</td></tr><tr><td>rstp</td><td>Rapid Spanning Tree Protocol (RSTP)</td></tr><tr><td>mstp</td><td>Multiple Spanning Tree Protocol (MSTP)</td></tr><tr><td>imi</td><td>Integrated Management Interface (IMI)</td></tr><tr><td>imish</td><td>Integrated Management Interface Shell (IMISH)</td></tr><tr><td>epsr</td><td>Ethernet Protection Switched Rings (EPSR)</td></tr></table> | rsvp          | Resource Reservation Protocol (RSVP) | dot1x    | IEEE 802.1X Port-Based Access Control | lacp       | Link Aggregation Control Protocol (LACP) | stp      | Spanning Tree Protocol (STP) | rstp       | Rapid Spanning Tree Protocol (RSTP) | mstp      | Multiple Spanning Tree Protocol (MSTP) | imi             | Integrated Management Interface (IMI) | imish       | Integrated Management Interface Shell (IMISH) | epsr | Ethernet Protection Switched Rings (EPSR) |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| mstp            | Multiple Spanning Tree Protocol (MSTP)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| imi             | Integrated Management Interface (IMI)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| imish           | Integrated Management Interface Shell (IMISH)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |
| epsr            | Ethernet Protection Switched Rings (EPSR)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |               |                                      |          |                                       |            |                                          |          |                              |            |                                     |           |                                        |                 |                                       |             |                                               |      |                                           |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
| rmon          | Remote Monitoring                                                                                                       |
| loopprot      | Loop Protection                                                                                                         |
| poe           | Power-inline (Power over Ethernet)                                                                                      |
| dhcpsn        | DHCP snooping (DHCP SN)                                                                                                 |
| facility      | Filter messages by syslog facility.                                                                                     |
| <facility>    | Specify one of the following syslog facilities to include messages from:                                                |
| kern          | Kernel messages                                                                                                         |
| user          | Random user-level messages                                                                                              |
| mail          | Mail system                                                                                                             |
| daemon        | System daemons                                                                                                          |
| auth          | Security/authorization messages                                                                                         |
| syslog        | Messages generated internally by syslogd                                                                                |
| lpr           | Line printer subsystem                                                                                                  |
| news          | Network news subsystem                                                                                                  |
| uucp          | UUCP subsystem                                                                                                          |
| cron          | Clock daemon                                                                                                            |
| authpriv      | Security/authorization messages (private)                                                                               |
| ftp           | FTP daemon                                                                                                              |
| msgtext       | Select messages containing a certain text string.                                                                       |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

**Default** By default there is a filter to select all messages. This filter may be removed and replaced by filters that are more selective.

**Mode** Global Configuration

**Examples** To create a filter to send all messages generated by MSTP that have a severity of info or higher to terminal instances where the terminal monitor command has been given use the following commands:

```
awplus# configure terminal
awplus(config)# log monitor level info program mstp
```

To remove a filter that sends all messages generated by EPSR that have a severity of notices or higher to the terminal use the following commands:

```
awplus# configure terminal
awplus(config)# no log monitor level notices program epsr
```



To remove a default filter that includes sending everything to the terminal use the following commands:

```
awplus# configure terminal
```

```
awplus(config)# no log monitor level debugging
```

**Related  
Commands**

[default log monitor](#)

[log monitor exclude](#)

[show log config](#)

[terminal monitor](#)

# log monitor exclude

**Overview** Use this command to prevent specified log messages from being displayed on a terminal, when **terminal monitor** is enabled. You can exclude messages on the basis of:

- the priority/severity of the message
- the program that generated the message
- the logging facility used
- a sub-string within the message, or
- a combination of some or all of these.

Use the **no** variant of this command to stop excluding the specified messages.

**Syntax** `log console exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]  
no log console exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                 |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| level           | Exclude messages of the specified severity level.                                                                                                                           |
| <level>         | The severity level to exclude. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity:     |
| 0 emergencies   | System is unusable                                                                                                                                                          |
| 1 alerts        | Action must be taken immediately                                                                                                                                            |
| 2 critical      | Critical conditions                                                                                                                                                         |
| 3 errors        | Error conditions                                                                                                                                                            |
| 4 warnings      | Warning conditions                                                                                                                                                          |
| 5 notices       | Normal, but significant, conditions                                                                                                                                         |
| 6 informational | Informational messages                                                                                                                                                      |
| 7 debugging     | Debug-level messages                                                                                                                                                        |
| program         | Exclude messages from a specified program.                                                                                                                                  |
| <program-name>  | The name of a program. Either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output. |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                        |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                       |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                    |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                         |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
| mstp          | Multiple Spanning Tree Protocol (MSTP)                                                                                  |
| imi           | Integrated Management Interface (IMI)                                                                                   |
| imish         | Integrated Management Interface Shell (IMISH)                                                                           |
| epsr          | Ethernet Protection Switched Rings (EPSR)                                                                               |
| rmon          | Remote Monitoring                                                                                                       |
| loopprot      | Loop Protection                                                                                                         |
| poe           | Power-inline (Power over Ethernet)                                                                                      |
| dhcpcsn       | DHCP snooping (DHPCPSN)                                                                                                 |
| facility      | Exclude messages from a syslog facility.                                                                                |
| <facility>    | Specify one of the following syslog facilities to exclude messages from:                                                |
| kern          | Kernel messages                                                                                                         |
| user          | Random user-level messages                                                                                              |
| mail          | Mail system                                                                                                             |
| daemon        | System daemons                                                                                                          |
| auth          | Security/authorization messages                                                                                         |
| syslog        | Messages generated internally by syslogd                                                                                |
| lpr           | Line printer subsystem                                                                                                  |
| news          | Network news subsystem                                                                                                  |
| uucp          | UUCP subsystem                                                                                                          |
| cron          | Clock daemon                                                                                                            |
| authpriv      | Security/authorization messages (private)                                                                               |
| ftp           | FTP daemon                                                                                                              |
| msgtext       | Exclude messages containing a certain text string.                                                                      |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

**Default** No log messages are excluded

**Mode** Global configuration

**Example** To remove messages that contain the string "example of irrelevant message", use the following commands:

```
awplus# configure terminal
awplus(config)# log monitor exclude msgtext example of
irrelevant message
```

**Related Commands** [default log monitor](#)

log monitor (filter)

show log config

terminal monitor

# log permanent

**Overview** This command configures the device to send permanent log messages to non-volatile storage (NVS) on the device. The content of the permanent log is retained over a reboot. Once the permanent log reaches its configured maximum allowable size old messages will be deleted to make way for new messages.

The **no** variant of this command configures the device not to send any messages to the permanent log. Log messages will not be retained over a restart.

**Syntax** `log permanent`  
`no log permanent`

**Mode** Global Configuration

**Examples** To enable permanent logging use the following commands:

```
awplus# configure terminal
awplus(config)# log permanent
```

To disable permanent logging use the following commands:

```
awplus# configure terminal
awplus(config)# no log permanent
```

**Related Commands**

- `clear log permanent`
- `default log permanent`
- `log permanent (filter)`
- `log permanent exclude`
- `log permanent size`
- `show log config`
- `show log permanent`

# log permanent (filter)

**Overview** This command creates a filter to select messages to be sent to the permanent log. Selection can be based on the priority/ severity of the message, the program that generated the message, the logging facility used, a sub-string within the message or a combination of some or all of these.

The **no** variant of this command removes the corresponding filter, so that the specified messages are no longer sent to the permanent log.

**Syntax** `log permanent [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]  
no log permanent [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                                      |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| level           | Filter messages sent to the permanent log by severity level.                                                                                                                                     |
| <level>         | The minimum severity of message to send. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity:                |
| 0 emergencies   | System is unusable                                                                                                                                                                               |
| 1 alerts        | Action must be taken immediately                                                                                                                                                                 |
| 2 critical      | Critical conditions                                                                                                                                                                              |
| 3 errors        | Error conditions                                                                                                                                                                                 |
| 4 warnings      | Warning conditions                                                                                                                                                                               |
| 5 notices       | Normal, but significant, conditions                                                                                                                                                              |
| 6 informational | Informational messages                                                                                                                                                                           |
| 7 debugging     | Debug-level messages                                                                                                                                                                             |
| program         | Filter messages by program. Include messages from a specified program.                                                                                                                           |
| <program-name>  | The name of a program to log messages from, either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output: |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                                             |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                                            |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                                         |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                                     |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                                              |
| mstp            | Multiple Spanning Tree Protocol (MSTP)                                                                                                                                                           |
| imi             | Integrated Management Interface (IMI)                                                                                                                                                            |
| imish           | Integrated Management Interface Shell (IMISH)                                                                                                                                                    |

| Parameter     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|-------------------------------------------|------|----------------------------|----------|-----------------|--------|------------------------------------|---------|---------------------------------|--------|------------------------------------------|-----|------------------------|------|------------------------|------|----------------|------|--------------|----------|-------------------------------------------|-----|------------|
|               | <table> <tr> <td>epsr</td><td>Ethernet Protection Switched Rings (EPSR)</td></tr> <tr> <td>rmon</td><td>Remote Monitoring</td></tr> <tr> <td>loopprot</td><td>Loop Protection</td></tr> <tr> <td>poe</td><td>Power-inline (Power over Ethernet)</td></tr> <tr> <td>dhcpcsn</td><td>DHCP snooping (DHPCPSN)</td></tr> </table>                                                                                                                                                                                                                                                                                                                                                                        | epsr | Ethernet Protection Switched Rings (EPSR) | rmon | Remote Monitoring          | loopprot | Loop Protection | poe    | Power-inline (Power over Ethernet) | dhcpcsn | DHCP snooping (DHPCPSN)         |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| epsr          | Ethernet Protection Switched Rings (EPSR)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| rmon          | Remote Monitoring                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| loopprot      | Loop Protection                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| poe           | Power-inline (Power over Ethernet)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| dhcpcsn       | DHCP snooping (DHPCPSN)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| facility      | Filter messages by syslog facility.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| <facility>    | Specify one of the following syslog facilities to include messages from:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
|               | <table> <tr> <td>kern</td><td>Kernel messages</td></tr> <tr> <td>user</td><td>Random user-level messages</td></tr> <tr> <td>mail</td><td>Mail system</td></tr> <tr> <td>daemon</td><td>System daemons</td></tr> <tr> <td>auth</td><td>Security/authorization messages</td></tr> <tr> <td>syslog</td><td>Messages generated internally by syslogd</td></tr> <tr> <td>lpr</td><td>Line printer subsystem</td></tr> <tr> <td>news</td><td>Network news subsystem</td></tr> <tr> <td>uucp</td><td>UUCP subsystem</td></tr> <tr> <td>cron</td><td>Clock daemon</td></tr> <tr> <td>authpriv</td><td>Security/authorization messages (private)</td></tr> <tr> <td>ftp</td><td>FTP daemon</td></tr> </table> | kern | Kernel messages                           | user | Random user-level messages | mail     | Mail system     | daemon | System daemons                     | auth    | Security/authorization messages | syslog | Messages generated internally by syslogd | lpr | Line printer subsystem | news | Network news subsystem | uucp | UUCP subsystem | cron | Clock daemon | authpriv | Security/authorization messages (private) | ftp | FTP daemon |
| kern          | Kernel messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| user          | Random user-level messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| mail          | Mail system                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| daemon        | System daemons                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| auth          | Security/authorization messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| syslog        | Messages generated internally by syslogd                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| lpr           | Line printer subsystem                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| news          | Network news subsystem                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| uucp          | UUCP subsystem                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| cron          | Clock daemon                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| authpriv      | Security/authorization messages (private)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| ftp           | FTP daemon                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| msgtext       | Select messages containing a certain text string.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |      |                                           |      |                            |          |                 |        |                                    |         |                                 |        |                                          |     |                        |      |                        |      |                |      |              |          |                                           |     |            |

**Default** By default the buffered log has a filter to select messages whose severity level is `notices` (5) or higher. This filter may be removed using the **no** variant of this command.

**Mode** Global Configuration

**Examples** To create a filter to send all messages generated by EPSR that have a severity of `notices` or higher to the permanent log use the following commands:

```
awplus# configure terminal
awplus(config)# log permanent level notices program epsr
```

To create a filter to send all messages containing the text "Bridging initialization", to the permanent log use the following commands:

```
awplus# configure terminal
awplus(config)# log permanent msgtext Bridging initialization
```

**Related  
Commands**

clear log permanent  
default log permanent  
log permanent  
log permanent exclude  
log permanent size  
show log config  
show log permanent



# log permanent exclude

**Overview** Use this command to prevent specified log messages from being sent to the permanent log. You can exclude messages on the basis of:

- the priority/severity of the message
- the program that generated the message
- the logging facility used
- a sub-string within the message, or
- a combination of some or all of these.

Use the **no** variant of this command to stop excluding the specified messages.

**Syntax** `log permanent exclude [level <level>] [program <program-name>]  
[facility <facility>] [msgtext <text-string>]  
no log permanent exclude [level <level>] [program  
<program-name>] [facility <facility>] [msgtext <text-string>]`

| Parameter       | Description                                                                                                                                                                 |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| level           | Exclude messages of the specified severity level.                                                                                                                           |
| <level>         | The severity level to exclude. The level can be specified as one of the following numbers or level names, where 0 is the highest severity and 7 is the lowest severity:     |
| 0 emergencies   | System is unusable                                                                                                                                                          |
| 1 alerts        | Action must be taken immediately                                                                                                                                            |
| 2 critical      | Critical conditions                                                                                                                                                         |
| 3 errors        | Error conditions                                                                                                                                                            |
| 4 warnings      | Warning conditions                                                                                                                                                          |
| 5 notices       | Normal, but significant, conditions                                                                                                                                         |
| 6 informational | Informational messages                                                                                                                                                      |
| 7 debugging     | Debug-level messages                                                                                                                                                        |
| program         | Exclude messages from a specified program.                                                                                                                                  |
| <program-name>  | The name of a program. Either one of the following predefined program names (not case-sensitive), or another program name (case-sensitive) that you find in the log output. |
| rsvp            | Resource Reservation Protocol (RSVP)                                                                                                                                        |
| dot1x           | IEEE 802.1X Port-Based Access Control                                                                                                                                       |
| lacp            | Link Aggregation Control Protocol (LACP)                                                                                                                                    |
| stp             | Spanning Tree Protocol (STP)                                                                                                                                                |
| rstp            | Rapid Spanning Tree Protocol (RSTP)                                                                                                                                         |
| mstp            | Multiple Spanning Tree Protocol (MSTP)                                                                                                                                      |

| Parameter     | Description                                                                                                             |
|---------------|-------------------------------------------------------------------------------------------------------------------------|
| imi           | Integrated Management Interface (IMI)                                                                                   |
| imish         | Integrated Management Interface Shell (IMISH)                                                                           |
| epsr          | Ethernet Protection Switched Rings (EPSR)                                                                               |
| rmon          | Remote Monitoring                                                                                                       |
| loopprot      | Loop Protection                                                                                                         |
| poe           | Power-inline (Power over Ethernet)                                                                                      |
| dhcpsn        | DHCP snooping (DHCP SN)                                                                                                 |
| facility      | Exclude messages from a syslog facility.                                                                                |
| <facility>    | Specify one of the following syslog facilities to exclude messages from:                                                |
| kern          | Kernel messages                                                                                                         |
| user          | Random user-level messages                                                                                              |
| mail          | Mail system                                                                                                             |
| daemon        | System daemons                                                                                                          |
| auth          | Security/authorization messages                                                                                         |
| syslog        | Messages generated internally by syslogd                                                                                |
| lpr           | Line printer subsystem                                                                                                  |
| news          | Network news subsystem                                                                                                  |
| uucp          | UUCP subsystem                                                                                                          |
| cron          | Clock daemon                                                                                                            |
| authpriv      | Security/authorization messages (private)                                                                               |
| ftp           | FTP daemon                                                                                                              |
| msgtext       | Exclude messages containing a certain text string.                                                                      |
| <text-string> | A text string to match (maximum 128 characters). This is case sensitive, and must be the last text on the command line. |

**Default** No log messages are excluded

**Mode** Global configuration

**Example** To remove messages that contain the string “example of irrelevant message”, use the following commands:

```
awplus# configure terminal
awplus(config)# log permanent exclude msgtext example of
irrelevant message
```

**Related  
Commands** [clear log permanent](#)  
[default log permanent](#)

log permanent  
log permanent (filter)  
log permanent size  
show log config  
show log permanent

# log permanent size

**Overview** This command configures the amount of memory that the permanent log is permitted to use. Once this memory allocation has been filled old messages will be deleted to make room for new messages.

**Syntax** `log permanent size <50-250>`

| Parameter                   | Description                            |
|-----------------------------|----------------------------------------|
| <code>&lt;50-250&gt;</code> | Size of the permanent log in kilobytes |

**Mode** Global Configuration

**Example** To allow the permanent log to use up to 100 kB of NVS use the following commands:

```
awplus# configure terminal
awplus(config)# log permanent size 100
```

**Related Commands**

- [clear log permanent](#)
- [default log permanent](#)
- [log permanent](#)
- [log permanent \(filter\)](#)
- [log permanent exclude](#)
- [show log config](#)
- [show log permanent](#)

# log-rate-limit nsm

**Overview** This command limits the number of log messages generated by the device for a given interval.

Use the **no** variant of this command to revert to the default number of log messages generated by the device of up to 200 log messages per second.

**Syntax** `log-rate-limit nsm messages <message-limit> interval  
<time-interval>`  
`no log-rate-limit nsm`

| Parameter                          | Description                                                                                                                                                                    |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;message-limit&gt;</code> | <code>&lt;1-65535&gt;</code><br>The number of log messages generated by the device.                                                                                            |
| <code>&lt;time-interval&gt;</code> | <code>&lt;0-65535&gt;</code><br>The time period for log message generation in 1/100 seconds.<br>If an interval of 0 is specified then no log message rate limiting is applied. |

**Default** By default, the device will allow 200 log messages to be generated per second.

**Mode** Global Configuration

**Usage** Previously, if the device received a continuous stream of IGMP packets with errors, such as when a packet storm occurs because of a network loop, then the device generates a lot of log messages using more and more memory, which may ultimately cause the device to shutdown. This log rate limiting feature constrains the rate that log messages are generated by the device.

Note that if within the given time interval, the number of log messages exceeds the limit, then any excess log messages are discarded. At the end of the time interval, a single log message is generated indicating that log messages were discarded due to the log rate limit being exceeded.

Thus if the expectation is that there will be a lot of discarded log messages due to log rate limiting, then it is advisable to set the time interval to no less than 100, which means that there would only be one log message, indicating log excessive log messages have been discarded.

**Examples** To limit the device to generate up to 300 log messages per second, use the following commands:

```
awplus# configure terminal
awplus(config)# log-rate-limit nsm messages 300 interval 100
```

To return the device the default setting, to generate up to 200 log messages per second, use the following commands:

```
awplus# configure terminal
awplus(config)# no log-rate-limit nsm
```

# show counter log

**Overview** This command displays log counter information.

**Syntax** `show counter log`

**Mode** User Exec and Privileged Exec

**Example** To display the log counter information, use the command:

```
awplus# show counter log
```

**Output** Figure 8-1: Example output from the **show counter log** command

|                   |            |
|-------------------|------------|
| Log counters      |            |
| Total Received    | ..... 2328 |
| Total Received P0 | ..... 0    |
| Total Received P1 | ..... 0    |
| Total Received P2 | ..... 1    |
| Total Received P3 | ..... 9    |
| Total Received P4 | ..... 32   |
| Total Received P5 | ..... 312  |
| Total Received P6 | ..... 1602 |
| Total Received P7 | ..... 372  |

**Table 1:** Parameters in output of the **show counter log** command

| Parameter         | Description                                              |
|-------------------|----------------------------------------------------------|
| Total Received    | Total number of messages received by the log             |
| Total Received P0 | Total number of Priority 0 (Emergency) messages received |
| Total Received P1 | Total number of Priority 1 (Alert) messages received     |
| Total Received P2 | Total number of Priority 2 (Critical) messages received  |
| Total Received P3 | Total number of Priority 3 (Error) messages received     |
| Total Received P4 | Total number of Priority 4 (Warning) messages received   |
| Total Received P5 | Total number of Priority 5 (Notice) messages received    |
| Total Received P6 | Total number of Priority 6 (Info) messages received      |
| Total Received P7 | Total number of Priority 7 (Debug) messages received     |

**Related Commands** [show log config](#)

# show exception log

**Overview** This command displays the contents of the exception log. When used within a stacked environment, this command will display the contents of the exception log for all the stack members.

**Syntax** show exception log

**Mode** User Exec and Privileged Exec

**Example** To display the exception log, use the command:

```
awplus# show exception log
```

**Output** Figure 8-2: Example output from the **show exception log** command on a device

```
awplus#show exception log

Stack member 1:

<date> <time> <facility>.<severity> <program[<pid>]>: <message>
-----
2014 Jan 27 09:57:47 local7.debug awplus corehandler : Process imish (PID:3746)
signal 11, core dumped to /flash/imish-x610-5.4.3-3.7-1-1390816667-3746.tgz
2014 Jan 27 09:57:47 local7.debug awplus corehandler : Process imish (PID:2504)
signal 11, core dumped to /flash/imish-x610-5.4.3-3.7-1-1390816667-2504.tgz
2014 Jan 27 09:58:02 local7.debug awplus corehandler : Process ospfd (PID:1512)
signal 5, core dumped to /flash/ospfd-x610-5.4.3-3.7-1-1390816682-1512.tgz
-----

Stack member 2:

<date> <time> <facility>.<severity> <program[<pid>]>: <message>
-----
2014 Jan 27 09:58:16 local7.debug awplus-2 corehandler : Process imi (PID:1427)
signal 5, core dumped to /flash/imi-x610-5.4.3-3.7-2-1390816696-1427.tgz
-----
```



# show log

**Overview** This command displays the contents of the buffered log.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show log [tail [<10-250>]]`

| Parameter | Description                                   |
|-----------|-----------------------------------------------|
| tail      | Display only the latest log entries.          |
| <10-250>  | Specify the number of log entries to display. |

**Default** By default the entire contents of the buffered log is displayed.

**Mode** User Exec, Privileged Exec and Global Configuration

**Usage** If the optional **tail** parameter is specified only the latest 10 messages in the buffered log are displayed. A numerical value can be specified after the **tail** parameter to select how many of the latest messages should be displayed.

**Examples** To display the contents of the buffered log use the command:

```
awplus# show log
```

To display the 10 latest entries in the buffered log use the command:

```
awplus# show log tail 10
```

**Output** Figure 8-3: Example output from the **show log** command

```
awplus#show log

<date> <time> <facility>.<severity> <program[<pid>]>: <message>

-----
2011 Aug 29 07:55:22 kern.notice awplus kernel: Linux version 2.6.32.12-at1 (mak
er@awpmaker03-dl) (gcc version 4.3.3 (Gentoo 4.3.3-r3 p1.2, pie-10.1.5) ) #1 Wed
Dec 8 11:53:40 NZDT 2010
2011 Aug 29 07:55:22 kern.warning awplus kernel: No pci config register base in
dev tree, using default
2011 Aug 29 07:55:23 kern.notice awplus kernel: Kernel command line: console=tty
S0,9600 releasefile=IX5-5.4.6-0.1.rel ramdisk=14688
bootversion=1.1.0-rc12 loglevel=1
extraflash=00000000
2011 Aug 29 07:55:25 kern.notice awplus kernel: RAMDISK: squashfs filesystem fou
nd at block 0
2011 Aug 29 07:55:28 kern.warning awplus kernel: ipifwd: module license 'Proprie
tary' taints kernel.

.
.
.
```

Figure 8-4: Example output from the **show log tail** command

```
awplus#show log tail

<date> <time> <facility>.<severity> <program[<pid>]>: <message>

-----
2006 Nov 10 13:30:01 cron.notice crond[116]: USER manager pid 469 cmd logrotate /
etc/logrotate.conf

2006 Nov 10 13:30:01 cron.notice crond[116]: USER manager pid 471 cmd nbqueue --
wipe

2006 Nov 10 13:35:01 cron.notice crond[116]: USER manager pid 472 cmd nbqueue --
wipe

2006 Nov 10 13:40:01 cron.notice crond[116]: USER manager pid 477 cmd nbqueue --
wipe

2006 Nov 10 13:44:36 syslog.notice syslog-ng[67]: Log statistics;
processed=\'center(queued)=70\', processed=\'2006 Nov 10 13:45:01 cron.notice
crond[116]: USER manager pid 478 cmd logrotate /etc/logrotate.conf

2006 Nov 10 13:45:01 cron.notice crond[116]: USER manager pid 480 cmd nbqueue --
wipe

2006 Nov 10 13:49:32 syslog.notice syslog-ng[67]: SIGHUP received, reloading
configuration;

2006 Nov 10 13:50:01 cron.notice crond[116]: USER manager pid 482 cmd nbqueue --
wipe

2006 Nov 10 13:55:01 cron.notice crond[116]: USER manager pid 483 cmd nbqueue --
wipe

.
.
.
```

**Related  
Commands**

- [clear log buffered](#)
- [default log buffered](#)
- [log buffered](#)
- [log buffered \(filter\)](#)
- [log buffered size](#)
- [log buffered exclude](#)
- [show log config](#)

# show log config

**Overview** This command displays information about the logging system. This includes the configuration of the various log destinations, buffered, permanent, syslog servers (hosts) and email addresses. This also displays the latest status information for each of these destinations.

**Syntax** `show log config`

**Mode** User Exec, Privileged Exec and Global Configuration

**Example** To display the logging configuration use the command:

```
awplus# show log config
```

**Output** Figure 8-5: Example output from the **show log config** command

```
Buffered log:
Status ..... enabled
Maximum size ... 100kb
Filters:
*1 Level ..... notices
  Program ..... any
  Facility ..... any
  Message text . any
  2 Level ..... informational
    Program ..... mstp
    Facility ..... daemon
    Message text . any
  Statistics ..... 1327 messages received, 821 accepted by filter (2015 Nov 11
10:36:16)
Permanent log:
Status ..... enabled
Maximum size ... 60kb
Filters:
1 Level ..... error
  Program ..... any
  Facility ..... any
  Message text . any
*2 Level ..... warnings
  Program ..... dhcp
  Facility ..... any
  Message text . "pool exhausted"
  Statistics ..... 1327 messages received, 12 accepted by filter (2015 Nov 11
10:36:16)
```

```
Host 10.32.16.21:
  Time offset .... +2:00
  Offset type .... UTC
  Filters:
  1 Level ..... critical
    Program ..... any
    Facility ..... any
    Message text . any
  Statistics ..... 1327 messages received, 1 accepted by filter (2015 Nov 11
10:36:16)
Email admin@alliedtelesis.com:
  Time offset .... +0:00
  Offset type .... Local
  Filters:
  1 Level ..... emergencies
    Program ..... any
    Facility ..... any
    Message text . any
  Statistics ..... 1327 messages received, 0 accepted by filter (2015 Nov 11
10:36:16)
...
```

In the above example the '\*' next to filter 1 in the buffered log configuration indicates that this is the default filter. The permanent log has had its default filter removed, so none of the filters are marked with '\*'.

**NOTE:** Terminal log and console log cannot be set at the same time. If console logging is enabled then the terminal logging is turned off.

**Related  
Commands**

- [show counter log](#)
- [show log](#)
- [show log permanent](#)

# show log permanent

**Overview** This command displays the contents of the permanent log.

When used within a stacked environment, this command will display the contents of the permanent log for all the stack members, unless you specify a particular stack member.

**Syntax** `show log permanent [<stack-ID>] [tail [<10-250>]]`

| Parameter  | Description                                   |
|------------|-----------------------------------------------|
| <stack-ID> | Stack member number, from 1 to 8.             |
| tail       | Display only the latest log entries.          |
| <10-250>   | Specify the number of log entries to display. |

**Default** If the optional `tail` parameter is specified only the latest 10 messages in the permanent log are displayed. A numerical value can be specified after the `tail` parameter to select how many of the latest messages should be displayed.

**Mode** User Exec, Privileged Exec and Global Configuration

**Example** To display the permanent log of stack member 2, use the command:

```
awplus# show log permanent 2
```

**Output** Figure 8-6: Example output from the **show log permanent** command

```
awplus#show log permanent 2

Stack member 2:

<date> <time> <facility>.<severity> <program[<pid>]>: <message>
-----
2014 Feb 25 09:10:48 daemon.crit awplus-2 HPI: HOTSWAP Pluggable 2.0.51 hotswapped
in: AT-StackXS/1.0
2014 Feb 25 09:10:48 daemon.crit awplus-2 HPI: HOTSWAP Pluggable 2.0.52 hotswapped
in: 2127931-2
2014 Feb 25 09:10:50 user.crit awplus-2 VCS[922]: Member 1 (eccd.6d7d.a50e) has
joined the stack
2014 Feb 25 09:10:52 user.crit awplus-2 VCS[922]: Member 1 (eccd.6d7d.a50e) has
become the Active Master
2014 Feb 25 09:10:52 local6.alert awplus-2 VCS[922]: stack member has booted from
non-default location, SW version auto synchronization cannot be supported.
2014 Feb 25 09:10:52 user.crit awplus-2 VCS[922]: Stack Virtual MAC is
0000.cd37.0002
2014 Feb 25 09:11:46 user.crit awplus-2 ATMF[862]: awplus-x510 has joined. 1
member in total.
```

**Related  
Commands**

clear log permanent  
default log permanent  
log permanent  
log permanent (filter)  
log permanent exclude  
log permanent size  
show log config

# show running-config log

**Overview** This command displays the current running configuration of the Log utility.

**Syntax** `show running-config log`

**Mode** Privileged Exec and Global Configuration

**Example** To display the current configuration of the log utility, use the command:

```
awplus# show running-config log
```

**Related  
Commands** [show log](#)  
[show log config](#)



# 9

# Scripting Commands

## Introduction

**Overview** This chapter provides commands used for command scripts.

- Command List**
- [“activate”](#) on page 374
  - [“echo”](#) on page 375
  - [“wait”](#) on page 376

# activate

**Overview** This command activates a script file.

**Syntax** `activate [background] <script>`

| Parameter                   | Description                                                                                                                                                                                                                                                                                                                                   |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>background</code>     | Activate a script to run in the background. A process that is running in the background will operate as a separate task, and will not interrupt foreground processing. Generally, we recommend running short, interactive scripts in the foreground and longer scripts in the background. The default is to run the script in the foreground. |
| <code>&lt;script&gt;</code> | The file name of the script to activate. The script is a command script consisting of commands documented in this software reference. Note that you must use either a <b>.scp</b> or a <b>.sh</b> filename extension for a valid script text file, as described below in the usage section for this command.                                  |

**Mode** Privileged Exec

**Usage** When a script is activated, the privilege level is set to 1 enabling User Exec commands to run in the script. If you need to run Privileged Exec commands in your script you need to add an [enable \(Privileged Exec mode\)](#) command to the start of your script. If you need to run Global Configuration commands in your script you need to add a [configure terminal](#) command after the **enable** command at the start of your script.

The **activate** command executes the script in a new shell. A [terminal length](#) shell command, such as **terminal length 0** may also be required to disable a delay that would pause the display.

A script must be a text file with a filename extension of either **.sh** or **.scp** only for the AlliedWare Plus™ CLI to activate the script file. The **.sh** filename extension indicates the file is an ASH script, and the **.scp** filename extension indicates the file is an AlliedWare Plus™ script.

**Examples** To activate a command script to run as a background process, use the command:

```
awplus# activate background test.scp
```

**Related Commands**

- [configure terminal](#)
- [echo](#)
- [enable \(Privileged Exec mode\)](#)
- [wait](#)

# echo

**Overview** This command echoes a string to the terminal, followed by a blank line.

**Syntax** `echo <line>`

| Parameter                 | Description        |
|---------------------------|--------------------|
| <code>&lt;line&gt;</code> | The string to echo |

**Mode** User Exec and Privileged Exec

**Usage** This command may be useful in CLI scripts, to make the script print user-visible comments.

**Example** To echo the string `Hello World` to the console, use the command:  
`awplus# echo Hello World`

**Output**

```
Hello World
```

**Related  
Commands** [activate](#)  
[wait](#)

# wait

**Overview** This command pauses execution of the active script for the specified period of time.

**Syntax** `wait <delay>`

| Parameter                  | Description                                                    |
|----------------------------|----------------------------------------------------------------|
| <code>&lt;delay&gt;</code> | <code>&lt;1-65335&gt;</code> Specify the time delay in seconds |

**Default** No wait delay is specified by default to pause script execution.

**Mode** Privileged Exec (when executed from a script not directly from the command line)

**Usage** Use this command to pause script execution in an **.scp** (AlliedWare Plus™ script) or an **.sh** (ASH script) file executed by the [activate](#) command. The script must contain an [enable \(Privileged Exec mode\)](#) command since the **wait** command is only executed in the Privileged Exec mode. When a script is activated, the privilege level is set to 1 enabling User Exec commands to run in the script. If you need to run Privileged Exec commands in your script you need to add an [enable \(Privileged Exec mode\)](#) command to the start of your script.

## Example

**Related Commands**

- [activate](#)
- [echo](#)
- [enable \(Privileged Exec mode\)](#)

# 10

# Interface Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure and display interfaces.

- Command List**
- ["description \(interface\)"](#) on page 378
  - ["interface \(to configure\)"](#) on page 379
  - ["mru"](#) on page 381
  - ["mtu"](#) on page 383
  - ["show interface"](#) on page 385
  - ["show interface brief"](#) on page 389
  - ["show interface status"](#) on page 390
  - ["shutdown"](#) on page 393

# description (interface)

**Overview** Use this command to add a description to a specific port or interface.

**Syntax** `description <description>`

| Parameter                        | Description                             |
|----------------------------------|-----------------------------------------|
| <code>&lt;description&gt;</code> | Text describing the specific interface. |

**Mode** Interface Configuration

**Example** The following example uses this command to describe the device that a switch port is connected to.

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# description Boardroom PC
```

# interface (to configure)

**Overview** Use this command to select one or more interfaces to configure.

**Syntax** `interface <interface-list>`  
`interface lo`

| Parameter                           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;interface-list&gt;</code> | <p>The interfaces or ports to configure.</p> <p>An interface-list can be:</p> <ul style="list-style-type: none"><li>• an interface such as a VLAN (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.6</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1,port1.0.4-1.0.6</code>. Do not mix interface types in a list</li></ul> <p>The specified interfaces must exist.</p> |
| <code>lo</code>                     | The local loopback interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

**Usage** A local loopback interface is one that is always available for higher layer protocols to use and advertise to the network. Although a local loopback interface is assigned an IP address, it does not have the usual requirement of connecting to a lower layer physical entity. This lack of physical attachment creates the perception of a local loopback interface always being accessible via the network.

Local loopback interfaces can be utilized by a number of protocols for various purposes. They can be used to improve access to the device and also increase its reliability, security, scalability and protection. In addition, local loopback interfaces can add flexibility and simplify management, information gathering and filtering.

One example of this increased reliability is for OSPF to advertise a local loopback interface as an interface-route into the network irrespective of the physical links that may be “up” or “down” at the time. This provides a higher probability that the routing traffic will be received and subsequently forwarded.

**Mode** Global Configuration

**Example** The following example shows how to enter Interface mode to configure `vlan1`. Note how the prompt changes.

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)#
```

The following example shows how to enter Interface mode to configure the local loopback interface.

```
awplus# configure terminal
awplus(config)# interface lo
awplus(config-if)#
```

**Related Commands**

- [ip address \(IP Addressing and Protocol\)](#)
- [show interface](#)
- [show interface brief](#)



## mru

**Overview** Use this command to set the Maximum Receive Unit (MRU) size for switch ports, where MRU is the maximum frame size (excluding headers) that switch ports can receive. For more information, see the [Switching Feature Overview and Configuration Guide](#).

Use the **no** variant of this command to remove a previously specified Maximum Receive Unit (MRU) size for switch ports, and restore the default MRU size (1500 bytes) for switch ports.

**NOTE:** The figure of 1500 bytes specifies the payload only. For an IEEE 802.1q frame, provision is made (internally) for the following additional components:

- Source and Destination addresses
- EtherType field
- Priority and VLAN tag fields
- FCS

These additional components increase the frame size internally to 1522 bytes.

**Syntax** `mru <mru-size>`  
`no mru`

| Parameter                     | Description                                                                                                                                                  |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;mru-size&gt;</code> | <code>&lt;68-16357&gt;</code><br>Specifies the Maximum Receive Unit (MRU) size in bytes, where 1500 bytes is the default Ethernet MRU size for an interface. |

**Default** The default MRU size is 1500 bytes for switch ports.

**Mode** Interface Configuration for switch ports.

**Usage** Note that [show interface](#) output will only show MRU size for switch ports.

**Examples** To configure an MRU of 16357 bytes on `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# mru 16357
```

To configure an MRU of 1500 bytes on `port1.0.2` to `port1.0.4` use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2-port1.0.4
awplus(config-if)# mru 1500
```

To restore the MRU size of 1500 bytes on port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no mru
```

**Related  
Commands**   [show interface](#)

# mtu

**Overview** Use this command to set the Maximum Transmission Unit (MTU) size for VLANs, where MTU is the maximum packet size that VLANs can transmit. The MTU size setting is applied to both IPv4 and IPv6 packet transmission.

Use the **no** variant of this command to remove a previously specified Maximum Transmission Unit (MTU) size for VLANs, and restore the default MTU size (1500 bytes) for VLANs.

**Syntax** `mtu <68-1582>`  
`no mtu`

**Default** The default MTU size is 1500 bytes for VLAN interfaces.

**Mode** Interface Configuration for VLAN interfaces.

**Usage** If a device receives an IPv4 packet for Layer 3 switching to another VLAN with an MTU size smaller than the packet size, and if the packet has the '**don't fragment**' bit set, then the device will send an ICMP '**destination unreachable**' (3) packet type and a '**fragmentation needed and DF set**' (4) code back to the source. For IPv6 packets bigger than the MTU size of the transmitting VLAN interface, an ICMP '**packet too big**' (ICMP type 2 code 0) message is sent to the source.

Note that [show interface](#) output will only show MTU size for VLAN interfaces.

**Examples** To configure an MTU size of 1500 bytes on interface `vlan2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# mtu 1500
```

To configure an MTU size of 1500 bytes on interfaces `vlan2` to `vlan4`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# mtu 1500
```

To restore the MTU size to the default MTU size of 1500 bytes on `vlan2`, use the commands

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no mtu
```

To restore the MTU size to the default MTU size of 1500 bytes on `vlan2` and `vlan4`, use the commands

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# no mtu
```

**Related  
Commands** [show interface](#)

# show interface

**Overview** Use this command to display interface configuration and status.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show interface [<interface-list>]`  
`show interface lo`

| Parameter                           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;interface-list&gt;</code> | <p>The interfaces or ports to configure. An interface-list can be:</p> <ul style="list-style-type: none"><li>• an interface such as a VLAN (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.6</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1,port1.0.4-1.0.6</code>. Do not mix interface types in a list</li></ul> <p>The specified interfaces must exist.</p> |
| <code>lo</code>                     | The local loopback interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

**Mode** User Exec and Privileged Exec

**Usage** Note that the output displayed with this command will show MTU (Maximum Transmission Unit) size for VLAN interfaces, and MRU (Maximum Received Unit) size for switch ports.

**Example** To display configuration and status information for all interfaces, use the command:

```
awplus# show interface
```

Figure 10-1: Example output from the **show interface** command

```
awplus#show interface
Interface port1.0.1
  Scope: both
  Link is UP, administrative state is UP
  Thrash-limiting
    Status Not Detected, Action link-down, Timeout 60(s)
  Hardware is Ethernet, address is 0000.cd24.daeb
  index 5001 metric 1 mru 1500
  <UP,BROADCAST,RUNNING,MULTICAST>
  current duplex full, current speed 1000
  configured duplex auto, configured speed auto, configured polarity auto
  current ecofriendly lpi
  configured ecofriendly lpi
  SNMP link-status traps: Sending (Suppressed after 20 traps in 60 sec.)
    input packets 2396, bytes 324820, dropped 0, multicast packets 2370
    output packets 73235, bytes 406566, multicast packets 7321 broadcast packets 7
  Time since last state change: 0 days 16:35:52

...

Interface lo
  Scope: both
  Link is UP, administrative state is UP
  Hardware is Loopback
  index 1 metric 1
  <UP,LOOPBACK,RUNNING>
  SNMP link-status traps: Disabled
    input packets 0, bytes 0, dropped 0, multicast packets 0
    output packets 0, bytes 0, multicast packets 0 broadcast packets 0
  Time since last state change: 0 days 16:35:52

Interface vlan1
  Scope: both
  Link is DOWN, administrative state is UP
  Hardware is VLAN, address is 0000.cd24.daa8
  index 201 metric 1 mtu 1500
  arp ageing timeout 300
  <UP,BROADCAST,MULTICAST>
  VRF Binding: Not bound
  SNMP link-status traps: Disabled
  Bandwidth 1g
    input packets 0, bytes 0, dropped 0, multicast packets 0
    output packets 29, bytes 1334, multicast packets 0 broadcast packets 0
  Time since last state change: 0 days 05:36:40
```

To display configuration and status information for interface `lo`, use the command:

```
awplus# show interface lo
```

Figure 10-2: Example output from the **show interface lo** command

```
awplus#show interface lo
Interface lo
  Scope: both
  Link is UP, administrative state is UP
  Hardware is Loopback
  index 1 metric 1
  <UP,LOOPBACK,RUNNING>
  SNMP link-status traps: Disabled
    input packets 0, bytes 0, dropped 0, multicast packets 0
    output packets 0, bytes 0, multicast packets 0 broadcast packets 0
  Time since last state change: 69 days 01:28:47
```

To display configuration and status information for interfaces `vlan1` and `vlan2`, use the command:

```
awplus# show interface vlan1,vlan2
```

Figure 10-3: Example output from the **show interface vlan1,vlan2** command

```
awplus#show interface vlan1,vlan2
Interface vlan1
  Scope: both
  Link is UP, administrative state is UP
  Hardware is VLAN, address is 0015.77e9.5c50
  IPv4 address 192.168.1.1/24 broadcast 192.168.1.255
  index 201 metric 1 mtu 1500
  arp ageing timeout 300
  <UP,BROADCAST,RUNNING,MULTICAST>
  SNMP link-status traps: Disabled
  Bandwidth 1g
    input packets 295606, bytes 56993106, dropped 5, multicast packets 156
    output packets 299172, bytes 67379392, multicast packets 0 broadcast packets 0
  Time since last state change: 0 days 14:22:39

Interface vlan2
  Scope: both
  Link is DOWN, administrative state is UP
  Hardware is VLAN, address is 0015.77e9.5c50
  IPv4 address 192.168.2.1/24 broadcast 192.168.2.255
  Description: ip_phone_vlan
  index 202 metric 1 mtu 1500
  arp ageing timeout 300
  <UP,BROADCAST,MULTICAST>
  SNMP link-status traps: Disabled
  Bandwidth 1g
    input packets 0, bytes 0, dropped 0, multicast packets 0
    output packets 90, bytes 4244, multicast packets 0 broadcast packets 0
  Time since last state change: 0 days 14:22:39
```

**Related  
Commands**

- [ecofriendly lpi](#)
- [mru](#)
- [mtu](#)
- [show interface brief](#)



# show interface brief

**Overview** Use this command to display brief interface, configuration, and status information, including provisioning information.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the “[Getting Started with AlliedWare Plus](#)” [Feature Overview and Configuration Guide](#).

**Syntax** `show interface brief`

**Mode** User Exec and Privileged Exec

**Output** Figure 10-4: Example output from the **show interface brief** command

```
awplus#show int brief
Interface          Status      Protocol
port1.0.1          admin up    down
port1.0.2          admin up    down
port1.0.3          admin up    down
port1.0.4          admin up    down
port1.0.5          admin up    down
port1.0.6          admin up    running
lo                  admin up    running
vlan1               admin up    down
vlan2               admin up    down
```

**Table 1:** Parameters in the output of the **show interface brief** command

| Parameter | Description                                                                               |
|-----------|-------------------------------------------------------------------------------------------|
| Interface | The name or type of interface.                                                            |
| Status    | The administrative state. This can be either <b>admin up</b> or <b>admin down</b> .       |
| Protocol  | The link state. This can be either <b>down</b> , <b>running</b> , or <b>provisioned</b> . |

**Related Commands** [show interface](#)  
[show interface memory](#)

# show interface status

**Overview** Use this command to display the status of the specified interface or interfaces. Note that when no interface or interfaces are specified then the status of all interfaces on the device are shown.

**Syntax** `show interface [<port-list>] status`

| Parameter   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port-list> | The ports to display information about. The port list can be: <ul style="list-style-type: none"><li>• a switch port (e.g. port1.0.6) a static channel group (e.g. sa2) or a dynamic (LACP) channel group (e.g. po2)</li><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-1.0.6, or sa1-2, or po1-2</li><li>• a comma-separated list of ports and port ranges, e.g. port1.0.1,port1.0.4-1.0.6. Do not mix switch ports, static channel groups, and dynamic (LACP) channel groups in the same list</li></ul> |

**Examples** To display the status of ports 1.0.1 to 1.0.5, use the commands:

```
awplus# show interface port1.0.1-1.0.4 status
```

**Table 2:** Example output from the **show interface <port-list> status** command

| awplus#show interface port1.0.1 -1.0.5 status |      |            |      |        |       |            |
|-----------------------------------------------|------|------------|------|--------|-------|------------|
| Port                                          | Name | Status     | Vlan | Duplex | Speed | Type       |
| port1.0.1                                     |      | notconnect | 1    | auto   | auto  | 1000BASE-T |
| port1.0.2                                     |      | notconnect | 1    | auto   | auto  | 1000BASE-T |
| port1.0.3                                     |      | notconnect | 1    | auto   | auto  | 1000BASE-T |
| port1.0.4                                     |      | notconnect | 1    | auto   | auto  | 1000BASE-T |

To display the status of all ports, use the commands:

```
awplus# show interface status
```

**Table 3:** Example output from the **show interface status** command

```
awplus#sho int status
```

| Port       | Name         | Status     | Vlan  | Duplex | Speed  | Type        |
|------------|--------------|------------|-------|--------|--------|-------------|
| port1.0.1  | Trunk_Net    | connected  | trunk | a-full | a-1000 | 1000BaseTX  |
| port1.0.2  | Access_Net1  | connected  | 5     | full   | 100    | 1000BaseTX  |
| port1.0.3  | Access_Net1  | disabled   | 5     | auto   | auto   | 1000BaseTX  |
| port1.0.4  | Access_Net2  | connected  | 6     | a-half | a-100  | 1000BaseTX  |
| port1.0.5  | Private_Prom | connected  | 10    | a-full | a-100  | 1000BaseTX  |
| port1.0.6  | Private_Net1 | connected  | 10,11 | a-full | a-100  | 1000BaseTX  |
| port1.0.7  | Private_Net2 | connected  | 10,12 | a-full | a-100  | 1000BaseTX  |
| port1.0.8  |              | notconnect | 1     | auto   | auto   | 1000BaseTX  |
| .          |              |            |       |        |        |             |
| .          |              |            |       |        |        |             |
| port1.0.23 |              | disabled   | 1     | auto   | auto   | not present |
| port1.0.24 |              | notconnect | 1     | auto   | auto   | unknown     |
| sa1        |              | notconnect | trunk | auto   | auto   |             |

**Table 4:** Parameters in the output from the **show interface status** command

| Parameter | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Port      | Name/Type of the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Name      | Description of the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Status    | The administrative and operational status of the interface; one of: <ul style="list-style-type: none"> <li>disabled: the interface is administratively down.</li> <li>connect: the interface is operationally up.</li> <li>notconnect: the interface is operationally down.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Vlan      | VLAN type or VLAN IDs associated with the port: <ul style="list-style-type: none"> <li>When the VLAN mode is trunk, it displays <b>trunk</b> (it does not display the VLAN IDs).</li> <li>When the VLAN mode is access, it displays the VLAN ID.</li> <li>When the VLAN mode is private promiscuous, it displays the primary VLAN ID if it has one, and <b>promiscuous</b> if it does not have a VLAN ID.</li> <li>When the VLAN mode is private host, it displays the primary and secondary VLAN IDs.</li> <li>When the port is an Eth port, it displays <b>none</b>: there is no VLAN associated with it.</li> <li>When the VLAN is dynamically assigned, it displays the current dynamically assigned VLAN ID (not the access VLAN ID), or <b>dynamic</b> if it has multiple VLANs dynamically assigned.</li> </ul> |

**Table 4:** Parameters in the output from the **show interface status** command

| Parameter | Description                                                                                                                                                                                         |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Duplex    | The actual duplex mode of the interface, preceded by <b>a-</b> if it has autonegotiated this duplex mode. If the port is disabled or not connected, it displays the configured duplex setting.      |
| Speed     | The actual link speed of the interface, preceded by <b>a-</b> if it has autonegotiated this speed. If the port is disabled or not connected, it displays the configured speed setting.              |
| Type      | The type of interface, e.g. 1000BaseTX. For SFP bays, it displays <b>Unknown</b> if it does not recognize the type of SFP installed, or <b>Not present</b> if an SFP is not installed or is faulty. |

**Related  
Commands**    [show interface](#)  
                  [show interface memory](#)

# shutdown

**Overview** This command shuts down the selected interface. This administratively disables the link and takes the link down at the physical (electrical) layer.

Use the **no** variant of this command to disable this function and therefore to bring the link back up again.

**Syntax** shutdown  
no shutdown

**Mode** Interface Configuration

**Usage** If you shutdown an aggregator, the device shows the admin status of the aggregator and its component ports as “admin down”. While the aggregator is down, the device accepts **shutdown** and **no shutdown** commands on component ports, but these have no effect on port status. Ports will not come up again while the aggregator is down.

**Example** To shut down port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# shutdown
```

To bring up port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no shutdown
```

To shut down vlan2, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# shutdown
```

To bring up vlan2, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no shutdown
```

# 11

# Interface Testing Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used for testing interfaces.

- Command List**
- “[clear test interface](#)” on page 395
  - “[service test](#)” on page 396
  - “[test interface](#)” on page 397

# clear test interface

**Overview** This command clears test results and counters after issuing a test interface command. Test results and counters must be cleared to issue subsequent test interface commands later on.

**Syntax** `clear test interface {<port-list>|all}`

| Parameter   | Description                                                                                                                                                                                                                                                                                                                 |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port-list> | The ports to test. A port-list can be: <ul style="list-style-type: none"><li>• a switch port (e.g. port1.0.6)</li><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-port1.0.6</li><li>• a comma-separated list of the above, e.g. port1.0.1,port1.0.5-1.0.6</li></ul> The specified ports must exist. |
| all         | All interfaces                                                                                                                                                                                                                                                                                                              |

**Mode** Privileged Exec

**Examples** To clear the counters for port1.0.1 use the command:

```
awplus# clear test interface port1.0.1
```

To clear the counters for all interfaces use the command:

```
awplus# clear test interface all
```

**Related Commands** [test interface](#)

# service test

**Overview** This command puts the device into the interface testing state, ready to begin testing. After entering this command, enter Interface Configuration mode for the desired interfaces and enter the command [test interface](#).

Do not test interfaces on a device that is part of a live network—disconnect the device first.

Use the **no** variant of this command to stop the test service.

**Syntax** `service test`  
`no service test`

**Mode** Global Configuration

**Example** To put the device into a test state, use the command:

```
awplus(config)# service test
```

**Related  
Commands** [test interface](#)



# test interface

**Overview** This command starts a test on a port or all ports or a selected range or list of ports.

Use the **no** variant of this command to disable this function. The test duration can be configured by specifying the time in minutes after specifying a port or ports to test.

For an example of all the commands required to test switch ports, see the Examples section in this command. To test the Eth port, set its speed to 100 by using the command **speed 100**.

**NOTE:** Do not run test interface on live networks because this will degrade network performance.

**Syntax** test interface {<port-list>|all} [time{<1-60>|cont}]  
no test interface {<port-list>|all}

| Parameter   | Description                                                                                                                                                                                                                                                                                                                 |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port-list> | The ports to test. A port-list can be: <ul style="list-style-type: none"><li>• a switch port (e.g. port1.0.6)</li><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-port1.0.6</li><li>• a comma-separated list of the above, e.g. port1.0.1,port1.0.5-1.0.6</li></ul> The specified ports must exist. |
| all         | All ports                                                                                                                                                                                                                                                                                                                   |
| time        | Keyword entered prior to the value for the time duration of the interface test.                                                                                                                                                                                                                                             |
| <1-60>      | Specifies duration of time to test the interface or interfaces in minutes (from a minimum of 1 minute to a maximum of 60 minutes). The default is 4 minutes.                                                                                                                                                                |
| cont        | Specifies continuous interface testing until canceled with command negation.                                                                                                                                                                                                                                                |

**Mode** Privileged Exec

**Example** To test the switch ports in VLAN 1, install loopbacks in the ports, and enter the following commands:

```
awplus(config)# service test
awplus(config)# no spanning-tree rstp enable bridge-forward
awplus(config)# interface vlan1
awplus(config-if)# shutdown
awplus(config-if)# end
awplus# test interface all
```

To see the output, use the commands:

```
awplus# show test
awplus# show test count
```

To start the test on all interfaces for 1 minute use the command:

```
awplus# test interface all time 1
```

**Related  
Commands** [clear test interface](#)

# Part 2: Layer Two Switching

# 12

# Switching Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure switching.

For more information, see the [Switching Feature Overview and Configuration Guide](#).

- Command List**
- “backpressure” on page 402
  - “clear loop-protection counters” on page 404
  - “clear mac address-table dynamic” on page 405
  - “clear mac address-table static” on page 407
  - “clear port counter” on page 408
  - “clear port-security intrusion” on page 409
  - “debug loopprot” on page 412
  - “debug platform packet” on page 413
  - “duplex” on page 415
  - “flowcontrol (switch port)” on page 417
  - “linkflap action” on page 419
  - “loop-protection loop-detect” on page 420
  - “loop-protection action” on page 421
  - “loop-protection action-delay-time” on page 422
  - “loop-protection timeout” on page 423
  - “mac address-table acquire” on page 424
  - “mac address-table ageing-time” on page 425
  - “mac address-table logging” on page 426

- [“mac address-table static”](#) on page 427
- [“mac address-table thrash-limit”](#) on page 428
- [“mirror interface”](#) on page 429
- [“platform hwfilter-size”](#) on page 431
- [“platform load-balancing”](#) on page 432
- [“platform stop-unreg-mc-flooding”](#) on page 434
- [“platform vlan-stacking-tpid”](#) on page 436
- [“polarity”](#) on page 437
- [“show debugging loopprot”](#) on page 438
- [“show debugging platform packet”](#) on page 439
- [“show flowcontrol interface”](#) on page 440
- [“show interface err-disabled”](#) on page 441
- [“show interface switchport”](#) on page 442
- [“show loop-protection”](#) on page 443
- [“show mac address-table”](#) on page 445
- [“show mac address-table thrash-limit”](#) on page 447
- [“show mirror”](#) on page 448
- [“show mirror interface”](#) on page 449
- [“show platform”](#) on page 450
- [“show platform classifier statistics utilization brief”](#) on page 451
- [“show platform port”](#) on page 452
- [“show port-security interface”](#) on page 456
- [“show port-security intrusion”](#) on page 457
- [“show storm-control”](#) on page 458
- [“speed”](#) on page 459
- [“storm-control level”](#) on page 461
- [“switchport port-security”](#) on page 462
- [“switchport port-security aging”](#) on page 463
- [“switchport port-security maximum”](#) on page 464
- [“switchport port-security violation”](#) on page 465
- [“thrash-limiting”](#) on page 466
- [“undebg loopprot”](#) on page 468
- [“undebg platform packet”](#) on page 469

# backpressure

**Overview** This command provides a method of applying flow control to ports running in half duplex mode. The setting will only apply when the link is in the half-duplex state.

You can disable backpressure on an interface using the **off** parameter or the **no** variant of this command.

**Syntax** `backpressure {on|off}`  
`no backpressure`

| Parameters | Description                        |
|------------|------------------------------------|
| on         | Enables half-duplex flow control.  |
| off        | Disables half-duplex flow control. |

**Default** Backpressure is turned off by default. You can determine whether an interface has backpressure enabled by viewing the running-config output; **backpressure on** is shown for interfaces if this feature is enabled.

**Mode** Interface Configuration

**Usage** The backpressure feature enables half duplex Ethernet ports to control traffic flow during congestion by preventing further packets arriving. Back pressure utilizes a pre-802.3x mechanism in order to apply Ethernet flow control to switch ports that are configured in the half duplex mode.

The flow control applied by the [flowcontrol \(switch port\)](#) command operates only on full-duplex links, whereas back pressure operates only on half-duplex links.

If a port has insufficient capacity to receive further frames, the device will simulate a collision by transmitting a CSMA/CD jamming signal from this port until the buffer empties. The jamming signal causes the sending device to stop transmitting and wait a random period of time, before retransmitting its data, thus providing time for the buffer to clear. Although this command is only valid for switch ports operating in half-duplex mode the remote device (the one sending the data) can be operating in the full duplex mode.

To see the currently-negotiated duplex mode for ports whose links are up, use the command [show interface](#). To see the configured duplex mode (when different from the default), use the command [show running-config](#).

**Examples** To enable back pressure flow control on interfaces `port1.0.1-port1.0.2` enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1-port1.0.2
awplus(config-if)# backpressure on
```

To disable back pressure flow control on interface `port1.0.2` enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# backpressure off
```

**Validation  
Commands**    `show running-config`  
                  `show interface`

**Related  
Commands**    `duplex`

# clear loop-protection counters

**Overview** Use this command to clear the counters for the Loop Protection counters.

**Syntax** `clear loop-protection [interface <port-list>] counters`

| Parameters  | Description                                     |
|-------------|-------------------------------------------------|
| interface   | The interface whose counters are to be cleared. |
| <port-list> | A port, a port range, or an aggregated link.    |

**Mode** Privileged Exec

**Examples** To clear the counter information for all interfaces:

```
awplus# clear loop-protection counters
```

To clear the counter information for a single port:

```
awplus# clear loop-protection interface port1.0.1 counters
```



# clear mac address-table dynamic

**Overview** Use this command to clear the filtering database of all entries learned for a selected MAC address, an MSTP instance, a switch port interface or a VLAN interface.

**Syntax** `clear mac address-table dynamic [address <mac-address>|interface <port> [instance <inst>]|vlan <vid>]`

| Parameter     | Description                                                                                  |
|---------------|----------------------------------------------------------------------------------------------|
| address       | Specify a MAC (Media Access Control) address to be cleared from the filtering database.      |
| <mac-address> | Enter a MAC address to be cleared from the database in the format HHHH.HHHH.HHHH.            |
| interface     | Specify a switch port to be cleared from the filtering database.                             |
| instance      | Specify an MSTP (Multiple Spanning Tree) instance to be cleared from the filtering database. |
| <inst>        | Enter an MSTP instance in the range 1 to 63 to be cleared from the filtering database.       |
| vlan          | Specify a VLAN to be cleared from the filtering database.                                    |
| <vid>         | Enter a VID (VLAN ID) in the range 1 to 4094 to be cleared from the filtering database.      |

**Mode** Privileged Exec

**Usage** Use this command with options to clear the filtering database of all entries learned for a given MAC address, interface or VLAN. Use this command without options to clear any learned entries.

Use the optional `instance` parameter to clear the filtering database entries associated with a specified MSTP instance. Note that you must first specify a switch port interface before you can specify an MSTP instance.

Compare this usage and operation with the [clear mac address-table static](#) command. Note that an MSTP instance cannot be specified with the command **clear mac address-table static**.

**Examples** This example shows how to clear all dynamically learned filtering database entries for all interfaces, addresses, VLANs.

```
awplus# clear mac address-table dynamic
```

This example shows how to clear all dynamically learned filtering database entries when learned through device operation for the MAC address 0000.5E00.5302.

```
awplus# clear mac address-table dynamic address 0000.5E00.5302
```

This example shows how to clear all dynamically learned filtering database entries when learned through device operation for a given MSTP instance 1 on switch port interface port1.0.2.

```
awplus# clear mac address-table dynamic interface port1.0.2  
instance 1
```

**Related  
Commands**

[clear mac address-table static](#)  
[show mac address-table](#)

# clear mac address-table static

**Overview** Use this command to clear the filtering database of all statically configured entries for a selected MAC address, interface, or VLAN.

**Syntax** `clear mac address-table static [address <mac-address>|interface <port>|vlan <vid>]`

| Parameter     | Description                                                                                                                                                                                              |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| address       | The MAC address whose entries are to be cleared from the filtering database.                                                                                                                             |
| <mac-address> | Specifies the MAC (Media Access Control) address to be cleared from. Enter this address in the format HHHH.HHHH.HHHH.                                                                                    |
| interface     | Specify the interface from which statically configured entries are to be cleared.                                                                                                                        |
| <port>        | Specify the switch port from which address entries will be cleared. This can be a single switch port, (e.g. port1.0.4), a static channel group (e.g. sa2), or a dynamic (LACP) channel group (e.g. po2). |
| vlan          | A VLAN whose statically configured entries are to be cleared.                                                                                                                                            |
| <vid>         | Specifies the VLAN ID whose statically configured entries are to be cleared.                                                                                                                             |

**Mode** Privileged Exec

**Usage** Use this command with options to clear the filtering database of all entries made from the CLI for a given MAC address, interface or VLAN. Use this command without options to clear any entries made from the CLI.

Compare this usage with [clear mac address-table dynamic](#) command.

**Examples** This example shows how to clear all filtering database entries configured through the CLI.

```
awplus# clear mac address-table static
```

This example shows how to clear all filtering database entries for a specific interface configured through the CLI.

```
awplus# clear mac address-table static interface port1.0.3
```

This example shows how to clear filtering database entries configured through the CLI for the mac address 0000.5E00.5302.

```
awplus# clear mac address-table static address 0000.5E00.5302
```

**Related Commands**

- [clear mac address-table dynamic](#)
- [mac address-table static](#)
- [show mac address-table](#)

# clear port counter

**Overview** Use this command to clear the packet counters of the port.

**Syntax** `clear port counter [<port>]`

| Parameter | Description              |
|-----------|--------------------------|
| <port>    | The port number or range |

**Mode** Privileged Exec

**Example** To clear the packet counter for `port1.0.1`, use the command:

```
awplus# clear port counter port1.0.1
```

**Related  
Commands** [show platform port](#)

# clear port-security intrusion

**Overview** Use this command to clear the history of the port-security intrusion list on all ports, or an individual port. If a port is not specified, the intrusion lists of all ports are cleared. This command does not clear any MAC addresses the device has already learned on the ports. If you want to clear MAC addresses on a switch port from the filtering database, you can use the [clear mac address-table dynamic](#) command or the [clear mac address-table static](#) command.

**Syntax** `clear port-security intrusion [interface <port>]`

| Parameter | Description                                                                                                                                                                                                                          |
|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port>    | Specify the switch port from which the history of violated address entries will be cleared. The port can be a single switch port, (e.g. port1.0.4), a static channel group (e.g. sa2), or a dynamic (LACP) channel group (e.g. po2). |

**Mode** Privileged Exec

**Examples** To see the port-security status on port1.0.1, use the following command:

```
awplus# show port-security interface port1.0.1
```

**Table 1:** Example output from the **show port-security interface** command

```
awplus#show port-security interface port1.0.1
Port Security configuration
-----
Security Enabled : YES
Port Status : ENABLED
Violation Mode : TRAP
Aging : OFF
Maximum MAC Addresses : 1
Total MAC Addresses : 1
Lock Status : LOCKED
Security Violation Count : 1
Last Violation Source Address : 801f.0200.19da
```

To see the intrusion list on port1.0.1, use the following command:

```
awplus# show port-security intrusion interface port1.0.1
```

**Table 2:** Example output from the **show port-security intrusion** command

```
awplus#show port-security intrusion interface port1.0.1
Port Security Intrusion List
-----
Interface: port1.0.1      - 1 intrusion(s) detected
801f.0200.19da
```

To clear the history of port-security intrusion list on port1.0.1, use the following command:

```
awplus# clear port-security intrusion interface port1.0.1
```

To see the port-security status on port1.0.1, use the following command:

```
awplus# show port-security interface port1.0.1
```

**Table 3:** Example output from the **show port-security interface** command

```
awplus#show port-security interface port1.0.1
Port Security configuration
-----
Security Enabled : YES
Port Status : ENABLED
Violation Mode : TRAP
Aging : OFF
Maximum MAC Addresses : 1
Total MAC Addresses : 1
Lock Status : LOCKED
Security Violation Count : 0
Last Violation Source Address : None
```

**NOTE:** Note that the port status is still locked while the history of port violation is cleared from the database.

To see the intrusion list on port1.0.1, use the following command:

```
awplus# show port-security intrusion interface port1.0.1
```

**Table 4:** Example output from the **show port-security intrusion** command

```
awplus#show port-security intrusion interface port1.0.1
Port Security Intrusion List
-----
Interface: port1.0.1      - no intrusions detected
```

**Related  
Commands**

- show port-security interface
- show port-security intrusion
- switchport port-security
- switchport port-security aging
- switchport port-security maximum
- switchport port-security violation

# debug loopprot

**Overview** This command enables Loop Protection debugging.  
The **no** variant of this command disables Loop Protection debugging.

**Syntax** `debug loopprot {info|msg|pkt|state|nsm|all}`  
`no debug loopprot {info|msg|pkt|state|nsm|all}`

| Parameter | Description                                                                    |
|-----------|--------------------------------------------------------------------------------|
| info      | General Loop Protection information.                                           |
| msg       | Received and transmitted Loop Detection Frames (LDFs).                         |
| pkt       | Echo raw ASCII display of received and transmitted LDF packets to the console. |
| state     | Loop Protection states transitions.                                            |
| nsm       | Network Service Module information.                                            |
| all       | All debugging information.                                                     |

**Mode** Privileged Exec and Global Configuration

**Example** To enable debug for all state transitions, use the command:

```
awplus# debug loopprot state
```

**Related Commands** [show debugging loopprot](#)  
[undebug loopprot](#)



# debug platform packet

**Overview** This command enables platform to CPU level packet debug functionality on the device.

Use the **no** variant of this command to disable platform to CPU level packet debug. If the result means both send and receive packet debug are disabled, then any active timeout will be canceled.

**Syntax** `debug platform packet [recv] [send] [sflow] [timeout <timeout>]  
[vlan <vlan-id>|all]`  
`no debug platform packet [recv] [send]`

| Parameter | Description                                        |
|-----------|----------------------------------------------------|
| recv      | Debug packets received.                            |
| send      | Debug packets sent.                                |
| sflow     | Debug sFlow packets.                               |
| timeout   | Stop debug after a specified time.                 |
| <timeout> | <0-3600>The timeout period, specified in seconds.  |
| vlan      | Limit debug to a single VLAN ID specified.         |
| <vlan-id> | <1-4094> The VLAN ID to limit the debug output on. |
| all       | Debug all VLANs (default setting).                 |

**Default** A 5 minute timeout is configured by default if no other timeout duration is specified.

**Mode** Privileged Exec and Global Configuration

**Usage** This command can be used to trace packets sent and received by the CPU. If a timeout is not specified, then a default 5 minute timeout will be applied.  
If a timeout of 0 is specified, packet debug will be generated until the **no** variant of this command is used or another timeout value is specified. The timeout value applies to both send and receive debug and is updated whenever the **debug platform packet** command is used.

**Examples** To enable both receive and send packet debug for the default timeout of 5 minutes, enter:

```
awplus# debug platform packet
```

To enable receive packet debug for 10 seconds, enter:

```
awplus# debug platform packet recv timeout 10
```

To enable packet debug for sFlow packets only for the default timeout of 5 minutes, enter:

```
awplus# debug platform packet sflow
```

To enable send packet debug with no timeout, enter:

```
awplus# debug platform packet send timeout 0
```

To enable VLAN packet debug for VLAN 2 with a timeout duration of 3 minutes, enter:

```
awplus# debug platform packet vlan 2 timeout 150
```

To disable receive packet debug, enter:

```
awplus# no debug platform packet recv
```

**Related  
Commands**

[show debugging platform packet](#)

[undebug platform packet](#)

# duplex

**Overview** This command changes the duplex mode for the specified port.

To see the currently-negotiated duplex mode for ports whose links are up, use the command [show interface](#). To see the configured duplex mode (when different from the default), use the command [show running-config](#).

**Syntax** duplex {auto|full|half}

| Parameter | Description                       |
|-----------|-----------------------------------|
| auto      | Auto-negotiate duplex mode.       |
| full      | Operate in full duplex mode only. |
| half      | Operate in half duplex mode only. |

**Default** By default, ports auto-negotiate duplex mode (except for 100Base-FX ports which do not support auto-negotiation, so default to full duplex mode).

**Mode** Interface Configuration

**Usage** Switch ports in a static or dynamic (LACP) channel group must have the same port speed and be in full duplex mode. Once switch ports have been aggregated into a channel group, you can set the duplex mode of all the switch ports in the channel group by applying this command to the channel group.

**Examples** To specify full duplex for port1.0.4, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# duplex full
```

To specify half duplex for port1.0.4, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# duplex half
```

To auto-negotiate duplex mode for port1.0.4, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# duplex auto
```

**Related  
Commands**

- [backpressure](#)
- [polarity](#)
- [speed](#)
- [show interface](#)

# flowcontrol (switch port)

**Overview** Use this command to enable flow control, and configure the flow control mode for the switch port.

Use the **no** variant of this command to disable flow control for the specified switch port.

**Syntax** `flowcontrol {send|receive} {off|on}`  
`no flowcontrol`

| Parameter | Description                                                                                                                                          |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| receive   | When the port receives pause frames, it temporarily stops (pauses) sending traffic.                                                                  |
| on        | Enable the specified flow control.                                                                                                                   |
| off       | Disable the specified flow control.                                                                                                                  |
| send      | When the port is congested (receiving too much traffic), it sends pause frames to request the other end to temporarily stop (pause) sending traffic. |

**Default** By default, flow control is disabled.

**Mode** Interface Configuration

**Usage** The flow control mechanism specified by 802.3x is only for full duplex links. It operates by sending PAUSE frames to the link partner to temporarily suspend transmission on the link

Flow control enables connected Ethernet ports to control traffic rates during congestion by allowing congested nodes to pause link operation at the other end. If one port experiences congestion, and cannot receive any more traffic, it notifies the other port to stop sending until the condition clears. When the local device detects congestion at its end, it notifies the remote device by sending a pause frame. On receiving a pause frame, the remote device stops sending data packets, which prevents loss of data packets during the congestion period.

Flow control is not recommended when running QoS or ACLs, because the complex queuing, scheduling, and filtering configured by QoS or ACLs may be slowed by applying flow control.

For half-duplex links, an older form of flow control known as backpressure is supported. See the related [backpressure](#) command.

For flow control on async serial (console) ports, see the [flowcontrol hardware \(asyn/console\)](#) command.

**Examples**

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# flowcontrol receive on
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# flowcontrol send on
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# flowcontrol receive off
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# flowcontrol send off
```

**Validation** [show running-config](#)  
**Commands**

**Related** [backpressure](#)  
**Commands**

# linkflap action

**Overview** Use this command to detect flapping on all ports. If more than 15 flaps occur in less than 15 seconds the flapping port will shut down.

Use the **no** variant of this command to disable flapping detection at this rate.

**Syntax** `linkflap action [shutdown]`  
`no linkflap action`

| Parameter | Description                       |
|-----------|-----------------------------------|
| linkflap  | Global setting for link flapping. |
| action    | Specify the action for port.      |
| shutdown  | Shutdown the port.                |

**Default** Linkflap action is disabled by default.

**Mode** Global Configuration

**Example** To enable the linkflap action command on the device, use the following commands:

```
awplus# configure terminal
awplus(config)# linkflap action shutdown
```

# loop-protection loop-detect

**Overview** Use this command to enable the loop-protection loop-detect feature and configure its parameters.

Use the **no** variant of this command to disable the loop-protection loop-detect feature.

**Syntax** `loop-protection loop-detect [ldf-interval <period>]  
[ldf-rx-window <frames>] [fast-block]`  
`no loop-protection loop-detect`

| Parameter                   | Description                                                                                                              |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <code>ldf-interval</code>   | The time (in seconds) between successive loop-detect frames being sent.                                                  |
| <code>&lt;period&gt;</code> | Specify a period between 1 and 600 seconds. The default is 10 seconds.                                                   |
| <code>ldf-rx-window</code>  | The number of transmitted loop detect frames whose details are held for comparing with frames arriving at the same port. |
| <code>&lt;frames&gt;</code> | Specify a value for the window size between 1 and 5 frames. The default is 3 frames.                                     |
| <code>[fast-block]</code>   | The fast-block blocks transmitting port to keep partial connectivity.                                                    |

**Default** The loop-protection loop-detect feature is disabled by default. The default interval is 10 seconds, and the default window size is 3 frames.

**Mode** Global Configuration

**Usage** See the “Loop Protection” section in the [Switching Feature Overview and Configuration Guide](#) for relevant conceptual, configuration, and overview information prior to applying this command.

**Example** To enable the loop-detect mechanism on the switch, and generate loop-detect frames once every 5 seconds, use the following commands:

```
awplus# configure terminal
awplus(config)# loop-protection loop-detect ldf-interval 5
```

**Related Commands** [loop-protection action](#)  
[loop-protection timeout](#)  
[show loop-protection](#)  
[thrash-limiting](#)



# loop-protection action

**Overview** Use this command to specify the protective action to apply when a network loop is detected on an interface.

Use the **no** variant of this command to reset the loop protection actions to the default action, vlan-disable, on an interface.

**Syntax** `loop-protection action`  
`{link-down|log-only|port-disable|vlan-disable|none}`  
`no loop-protection action`

| Parameter    | Description                                                                                                                                                             |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| link-down    | Block all traffic on a port (or aggregated link) that detected the loop, and take <b>down</b> the link.                                                                 |
| log-only     | Details of loop conditions are logged. No action is applied to the port (or aggregated link).                                                                           |
| port-disable | Block all traffic on interface for which the loop occurred, but keep the link in the <b>up</b> state.                                                                   |
| vlan-disable | Block all traffic for the VLAN on which the loop traffic was detected. Note that setting this parameter will also enable ingress filtering. This is the default action. |
| none         | Applies no protective action.                                                                                                                                           |

**Default** `loop-protection action vlan-disable`

**Mode** Interface Configuration

**Usage** See the “Loop Protection” section in the [Switching Feature Overview and Configuration Guide](#) for relevant conceptual, configuration, and overview information prior to applying this command.

**Example** To disable the interface `port1.0.4` and bring the link down when a network loop is detected, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# loop-protection action link-down
```

**Related Commands** [loop-protection loop-detect](#)  
[loop-protection timeout](#)  
[show loop-protection](#)  
[thrash-limiting](#)

# loop-protection action-delay-time

**Overview** Use this command to sets the loop protection action delay time for an interface to specified values in seconds. The action delay time specifies the waiting period for the action.

Use the **no** variant of this command to reset the loop protection action delay time for an interface to default.

**Syntax** `loop-protection action-delay-time <0-86400>`  
`no loop-protection action`

| Parameter                    | Description                                              |
|------------------------------|----------------------------------------------------------|
| <code>&lt;0-86400&gt;</code> | Time in seconds; 0 means action delay timer is disabled. |

**Default** Action delay timer is disabled by default.

**Mode** Interface Configuration

**Example** To configure a loop protection action delay time of 10 seconds on port 1.0.4, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# loop-protection action-delay-time 10
```

**Related Commands** [show loop-protection](#)

# loop-protection timeout

**Overview** Use this command to specify the Loop Protection recovery action duration on an interface.

Use the **no** variant of this command to set the loop protection timeout to the default.

**Syntax** `loop-protection timeout <duration>`  
`no loop-protection timeout`

| Parameter                     | Description                                                                                                                                                                                                      |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;duration&gt;</code> | The time (in seconds) for which the configured action will apply before being disabled. This duration can be set between 0 and 86400 seconds (24 hours). The set of 0 means infinity so timeout does not expire. |

**Default** The default is 7 seconds.

**Mode** Interface Configuration

**Usage** See the “Loop Protection” section in the [Switching Feature Overview and Configuration Guide](#) for relevant conceptual, configuration, and overview information prior to applying this command.

**Example** To configure a loop protection action timeout of 10 seconds for `port1.0.4`, use the command:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# loop-protection timeout 10
```

**Related Commands** [loop-protection loop-detect](#)  
[loop-protection action](#)  
[show loop-protection](#)  
[thrash-limiting](#)

# mac address-table acquire

**Overview** Use this command to enable MAC address learning on the device.

Use the **no** variant of this command to disable learning.

**Syntax** `mac address-table acquire`  
`no mac address-table acquire`

**Default** Learning is enabled by default for all instances.

**Mode** Global Configuration

**Example** `awplus# configure terminal`  
`awplus(config)# mac address-table acquire`

# mac address-table ageing-time

**Overview** Use this command to specify an ageing-out time for a learned MAC address. The learned MAC address will persist for at least the specified time.

The **no** variant of this command will reset the ageing-out time back to the default of 300 seconds (5 minutes).

**Syntax** `mac address-table ageing-time <ageing-timer> none`  
`no mac address-table ageing-time`

| Parameter                         | Description                                                           |
|-----------------------------------|-----------------------------------------------------------------------|
| <code>&lt;ageing-timer&gt;</code> | <code>&lt;10-1000000&gt;</code> The number of seconds of persistence. |
| <code>none</code>                 | Disable learned MAC address timeout.                                  |

**Default** The default ageing time is 300 seconds.

**Mode** Global Configuration

**Examples** The following commands specify various ageing timeouts on the device:

```
awplus# configure terminal
awplus(config)# mac address-table ageing-time 1000
awplus# configure terminal
awplus(config)# mac address-table ageing-time none
awplus# configure terminal
awplus(config)# no mac address-table ageing-time
```

# mac address-table logging

**Overview** Use this command to create log entries when the content of the FDB (forwarding database) changes. Log messages are produced when a MAC address is added to or removed from the FDB.

**CAUTION:** *MAC address table logging may impact the performance of the switch. Only enable it when necessary as a debug tool.*

Use the **no** variant of this command to stop creating log entries when the content of the FDB changes.

**Syntax** `mac address-table logging`  
`no mac address-table logging`

**Default** MAC address table logging is disabled by default.

**Mode** User Exec/Privileged Exec

**Usage** When MAC address table logging is enabled, the switch produces the following messages:

| Change      | Message format                 | Example                                   |
|-------------|--------------------------------|-------------------------------------------|
| MAC added   | MAC add <mac> <port> <vlan>    | MAC add eccd.6db5.68a7 port1.0.1 vlan2    |
| MAC removed | MAC remove <mac> <port> <vlan> | MAC remove eccd.6db5.68a7 port1.0.1 vlan2 |

Note that rapid changes may not be logged. For example, if an entry is added and then removed within a few seconds, those actions may not be logged.

To see whether MAC address table logging is enabled, use the command [show running-config](#).

**Example** To create log messages when the content of the FDB changes, use the command:

```
awplus# mac address-table logging
```

**Related Commands** [show running-config](#)

# mac address-table static

**Overview** Use this command to statically configure the MAC address-table to forward or discard frames with a matching destination MAC address.

**Syntax** `mac address-table static <mac-addr> {forward|discard} interface <port> [vlan <vid>]`  
`no mac address-table static <mac-addr> {forward|discard} interface <port> [vlan <vid>]`

| Parameter  | Description                                                                                                                                                             |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <mac-addr> | The destination MAC address in HHHH . HHHH . HHHH format.                                                                                                               |
| <port>     | The port to display information about. The port may be a switch port (e.g. port1.0.4), a static channel group (e.g. sa2), or a dynamic (LACP) channel group (e.g. po2). |
| <vid>      | The VLAN ID. If you do not specify a VLAN, its value defaults to vlan 1.                                                                                                |

**Mode** Global Configuration

**Usage** The **mac address-table static** command is only applicable to Layer 2 switched traffic within a single VLAN. Do not apply the **mac address-table static** command to Layer 3 switched traffic passing from one VLAN to another VLAN. Frames will not be discarded across VLANs because packets are routed across VLANs. This command only works on Layer 2 traffic.

**Example** `awplus# configure terminal`  
`awplus(config)# mac address-table static 2222.2222.2222 forward`  
`interface port1.0.4 vlan 3`

**Related Commands** [clear mac address-table static](#)  
[show mac address-table](#)

# mac address-table thrash-limit

**Overview** Use this command to set the thrash limit on the device or stack.

Thrashing occurs when a MAC address table rapidly “flips” its mapping of a single MAC address between two subnets, usually as a result of a network loop.

Use the **no** variant of this command to disable thrash limiting.

**Syntax** `mac address-table thrash-limit <rate>`  
`no mac address-table thrash-limit`

| Parameter                 | Description                                                                                                                                                                                                      |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;rate&gt;</code> | sets the maximum thrash rate at which limiting is applied. This rate can be set between 5 and 255 MAC thrashing flips per second. Once the thrash limit rate is reached, the port is considered to be thrashing. |

**Default** No thrash limiting

**Mode** Global Configuration

**Usage** Use this command to limit thrashing on the selected port range.

**Example** To apply a thrash limit of 100 MAC address flips per second:

```
awplus# configure terminal
awplus(config)# mac address-table thrash-limit 100
```

**Related Commands** [show mac address-table thrash-limit](#)



# mirror interface

**Overview** Use this command to define a mirror port and mirrored (monitored) ports and direction of traffic to be mirrored. The port for which you enter interface mode will be the mirror port.

The destination port is removed from all VLANs, and no longer participates in other switching.

Use the **no** variant of this command to disable port mirroring by the destination port on the specified source port.

Use the **none** variant of this command when using copy-to-mirror ACL and QoS commands.

**Syntax** `mirror interface <source-port-list> direction  
{both|receive|transmit}  
  
mirror interface none  
  
no mirror interface <source-port-list>  
  
no mirror interface none`

| Parameter                             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;source-port-list&gt;</code> | The source switch ports to mirror. A port-list can be: <ul style="list-style-type: none"><li>a port (e.g. <code>port1.0.2</code>)</li><li>a continuous range of ports separated by a hyphen, e.g. <code>port1.0.1-1.0.2</code></li><li>a comma-separated list of ports and port ranges, e.g. <code>port1.0.1,port1.0.4-1.0.6</code></li></ul> The source port list cannot include dynamic or static channel groups (link aggregators).                                                                                                  |
| <code>direction</code>                | Specifies whether to mirror traffic that the source port receives, transmits, or both.                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <code>both</code>                     | Mirroring traffic both received and transmitted by the source port.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <code>receive</code>                  | Mirroring traffic received by the source port.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <code>transmit</code>                 | Mirroring traffic transmitted by the source port.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <code>none</code>                     | Specify this parameter for use with the ACL (Access Control List) <b>access-list</b> and QoS (Quality of Service) default action commands when used with the <b>copy-to-mirror</b> parameter option, so you can specify the destination port (the analyzer port) for the traffic without specifying a source mirror port. See the ACL commands <a href="#">access-list (hardware IP numbered)</a> and <a href="#">access-list (hardware MAC numbered)</a> , and the QoS command <a href="#">default-action</a> for further information. |

**Mode** Interface Configuration

**Usage** Use this command to send traffic to another device connected to the mirror port for monitoring.

See the “Port Mirroring” section in the [Switching Feature Overview and Configuration Guide](#) for more information.

A mirror port cannot be associated with a VLAN. If a switch port is configured to be a mirror port, it is automatically removed from any VLAN it was associated with.

This command can only be applied to a single mirror (destination) port, not to a range of ports, nor to a static or dynamic channel group. Do not apply multiple interfaces with an interface command before issuing the mirror interface command. One interface may have multiple mirror interfaces.

**Example** To mirror traffic received and transmitted on port1.0.4 and port1.0.5 to destination port1.0.3, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.3
awplus(config-if)# mirror interface port1.0.4,port1.0.5
direction both
```

To enable use with the [access-list \(hardware IP numbered\)](#) ACL and [default-action](#) QoS commands to destination port1.0.3 without specifying a source port, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.3
awplus(config-if)# mirror interface none
```

To mirror all TCP traffic, received or transmitted to analyzer port1.0.1, see the sample config below:

```
awplus#show running-config

!
mls qos enable
access-list 3000 copy-to-mirror tcp any any
access-group 3000
!
interface port1.0.1
 mirror interface none
 switchport
!
```

**Related Commands** [access-list \(hardware IP numbered\)](#)  
[access-list \(hardware MAC numbered\)](#)  
[default-action](#)

# platform hwfilter-size

**Overview** You can use this command to control the configuration of hardware Access Control Lists (ACLs), which determines the total available number and functionality of hardware ACLs.

For this command to take effect, you need to reboot the affected service.

One cannot attach an IPv6 ACL to a port if the ACL contains a specified source or destination IPv6 address or both and the **hw-filter size** setting is **ipv4-limited-ipv6**. If you do so, a diagnostic message will be generated.

**Syntax** `platform hwfilter-size {ipv4-limited-ipv6|ipv4-full-ipv6}`

| Parameter         | Description                                                                                                                                                                                                                                  |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| hwfilter-size     | Configure hardware ACLs command.                                                                                                                                                                                                             |
| ipv4-full-ipv6    | Configure hardware ACLs to filter IPv4 traffic, MAC addresses and IPv6 traffic, including filtering on source or destination IPv6 addresses, or both; however, this will reduce the total number of filters available in the hardware table. |
| ipv4-limited-ipv6 | Configure hardware ACLs to filter IPv4 traffic, MAC addresses and IPv6 traffic. Source or destination IPv6 addresses or both are not filtered.                                                                                               |

**Default** The default mode is **ipv4-limited-ipv6**.

**Mode** Global Configuration

**Example** To configure hardware ACLs to filter IPv4 and IPv6 traffic, use the following commands:

```
awplus# configure terminal
awplus(config)# platform hwfilter-size ipv4-full-ipv6
```

**Related Commands** [show platform](#)  
[ipv6 access-list \(named\)](#)

# platform load-balancing

**Overview** This command selects which address fields are used as inputs into the load balancing algorithm for aggregated links. The output from this algorithm is used to select which individual path a given packet will traverse within an aggregated link.

The **no** variant of this command turns off the specified inputs.

**Syntax** `platform load-balancing [src-dst-mac] [src-dst-ip]  
[src-dst-port] [ethertype]`  
`no platform load-balancing [src-dst-mac] [src-dst-ip]  
[src-dst-port] [ethertype]`

| Parameter    | Description                                                                                                                                                                                                              |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| src-dst-mac  | Include the source and destination MAC addresses (Layer 2)                                                                                                                                                               |
| src-dst-ip   | Include the source and destination IP addresses (Layer 3). If you choose this option, the algorithm will use MAC addresses to calculate load balancing for Layer 2 and non-IP packets.                                   |
| src-dst-port | The source and destination TCP/UDP port data (Layer 4). If you include this option, make sure that <b>src-dst-ip</b> is also selected.                                                                                   |
| ethertype    | A two-octet field in an Ethernet frame that shows which protocol is encapsulated in the payload of the Ethernet frame. Ethertype is the same for all IP traffic, but is different for different kinds of non-IP traffic. |

**Default** By default, all load-balancing input options are used.

**Mode** Global configuration

**Usage** By default, all load-balancing input options are turned on. Therefore, to use a different set of inputs, you must **turn off** the inputs you do not want.

Useful combinations of inputs include:

- all four inputs
- MAC address, IP address and Layer 4 port number
- MAC address and Ethertype
- MAC address only
- IP address and Layer 4 port number
- IP address only

The following examples show how to configure some of these combinations.

Use the [show platform](#) command to verify this command's setting.

**Examples** To use all four inputs, you do not have to enter any commands, because this is the default. Note that this setting is not displayed in the **show running-config** output. Use the **show platform** command to verify this setting.

To use MAC addresses, IP addresses and Layer 4 port numbers, remove Ethertype by entering:

```
awplus# configure terminal
awplus(config)# no platform load-balancing ethertype
```

To use MAC addresses and Ethertype, remove the IP inputs by entering:

```
awplus# configure terminal
awplus(config)# no platform load-balancing src-dst-ip
src-dest-port
```

To use MAC addresses only, remove the other inputs by entering:

```
awplus# configure terminal
awplus(config)# no platform load-balancing src-dst-ip
src-dest-port ethertype
```

To use IP addresses and Layer 4 port numbers, remove MAC addresses and Ethertype by entering:

```
awplus# configure terminal
awplus(config)# no platform load-balancing src-dst-mac
ethertype
```

**Related  
Commands** **show platform**

# platform stop-unreg-mc-flooding

**Overview** This command stops multicast packets flooding out of all the ports in the VLAN until these packets are registered. This command does this by sending unregistered multicast packets to the switch processor, so there is no flooding of the multicast traffic onto the VLAN. Unregistered traffic will not flow until the switch has registered it, regardless of attempts to subscribe to it. Once the traffic is registered, it flows to registered subscribers and ports.

Use the **no** variant of this command to revert to default behavior and disable this feature.

**NOTE:** *This command should not be used within any IPv6 networks.*

*IPv6 neighbor discovery operation is inhibited by this feature.*

*This command does not stop Local Network Control Block IPv4 multicast packets in the address range 224.0.0.1 to 224.0.0.255 (224.0.0/24).*

See

[www.iana.org/assignments/multicast-addresses/multicast-addresses.xml#multicast-addresses-1](http://www.iana.org/assignments/multicast-addresses/multicast-addresses.xml#multicast-addresses-1)

**Syntax** platform stop-unreg-mc-flooding  
no platform stop-unreg-mc-flooding

**Default** This feature is disabled by default.

**Mode** Global Configuration

**Usage** This command stops the periodic flooding of unknown or unregistered multicast packets when the Group Membership interval timer expires and there are no subscribers to a multicast group. If there is multicast traffic in a VLAN without subscribers, multicast traffic temporarily floods out of the VLAN when the Group Membership interval timer expires, which happens when the switch does not get replies from Group Membership queries.

This command also stops the initial flood of multicast packets that happens when a new multicast source starts to send traffic. This flooding lasts until snooping recognizes the multicast group. For example, in sites where IP cameras have multicast groups, traffic is flooded to the VLAN and causes large bursts of traffic. Use this command when there is limited processing available for large bursts of traffic, such as in sites with IP cameras.

**Output** See the console message warning about IPv6 operation after entering this command:

```
% WARNING: IPv6 will not work with this setting enabled
% Please consult the documentation for more information
```

See these sample console messages when the Group Membership interval timer expires, which happens when the switch does not get replies from Group Membership queries:

```
awplus: [MLD-EVENTS] Grp - Rec Liveness Timer: Expiry for Grp ff0e::1 on port1.2.7  
awplus: [IGMP-EVENTS] : Expiry (Unreg MC Timer) for Grp 224.2.2.2 on vlan4
```

**Examples** To enable this feature and stop multicast packet flooding, use the following commands:

```
awplus# configure terminal  
awplus(config)# platform stop-unreg-mc-flooding
```

To disable this feature and allow multicast packet flooding, use the following commands:

```
awplus# configure terminal  
awplus(config)# no platform stop-unreg-mc-flooding
```

**Related  
Commands** [show platform](#)  
[show running-config](#)

# platform vlan-stacking-tpid

**Overview** This command specifies the Tag Protocol Identifier (TPID) value that applies to all frames that are carrying double tagged VLANs. All nested VLANs must use the same TPID value. (This feature is sometimes referred to as VLAN stacking or VLAN double-tagging.)

Use the **no** variant of this command to revert to the default TPID value (0x8100).

**NOTE:** Because the additional tag increases the frame size beyond 1522 bytes, you must increase the MRU size to activate VLAN-stacking. Go into interface mode for the appropriate ports and use the [mru](#) command.

**Syntax** `platform vlan-stacking-tpid <tpid>`  
`no platform vlan-stacking-tpid`

| Parameter                 | Description                                                               |
|---------------------------|---------------------------------------------------------------------------|
| <code>&lt;tpid&gt;</code> | The Ethernet type of the tagged packet, as a two byte hexadecimal number. |

**Default** The default TPID value is 0x8100.

**Mode** Global Configuration

**Examples** To set the VLAN stacking TPID value to 0x9100, use the following commands:

```
awplus# configure terminal
awplus(config)# platform vlan-stacking-tpid 9100
```

To reset the VLAN stacking TPID value to the default (0x8100), use the following commands:

```
awplus# configure terminal
awplus(config)# no platform vlan-stacking-tpid
```

**Related Commands** [switchport vlan-stacking \(double tagging\)](#)  
[show platform](#)  
[show running-config](#)



# polarity

**Overview** This command sets the MDI/MDIX polarity on a copper-based switch port.

**Syntax** `polarity {auto|mdi|mdix}`

| Parameter | Description                                                                  |
|-----------|------------------------------------------------------------------------------|
| mdi       | Sets the polarity to MDI (medium dependent interface).                       |
| mdix      | Sets the polarity to MDI-X (medium dependent interface crossover).           |
| auto      | The switch port sets the polarity automatically. This is the default option. |

**Default** By default, switch ports set the polarity automatically (**auto**).

**Mode** Interface Configuration

**Usage** We recommend the default **auto** setting for MDI/MDIX polarity. Polarity applies to copper 10BASE-T, 100BASE-T, and 1000BASE-T switch ports; It does not apply to fiber ports. See the “MDI/MDIX Connection Modes” section in the [Switching Feature Overview and Configuration Guide](#) for more information.

**Example** To set the polarity for `port1.0.6` to fixed MDI mode, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.6
awplus(config-if)# polarity mdi
```

# show debugging loopprot

**Overview** This command shows Loop Protection debugging information.

**Syntax** `show debugging loopprot`

**Mode** User Exec and Privileged Exec

**Example** To display the enabled Loop Protection debugging modes, use the command:

```
awplus# show debugging loopprot
```

**Related  
Commands** [debug loopprot](#)

# show debugging platform packet

**Overview** This command shows platform to CPU level packet debugging information.

**Syntax** `show debugging platform packet`

**Mode** User Exec and Privileged Exec

**Example** To display the platform packet debugging information, use the command:

```
awplus# show debugging platform packet
```

**Related  
Commands** [debug platform packet](#)  
[undebg platform packet](#)

# show flowcontrol interface

**Overview** Use this command to display flow control information.

**Syntax** `show flowcontrol interface <port>`

| Parameter | Description                                     |
|-----------|-------------------------------------------------|
| <port>    | Specifies the name of the port to be displayed. |

**Mode** User Exec and Privileged Exec

**Example** To display the flow control for the `port1.0.5`, use the command:

```
awplus# show flowcontrol interface port1.0.5
```

**Output** Figure 12-1: Example output from the **show flowcontrol interface** command for a specific interface

| Port      | Send<br>admin | FlowControl<br>oper | Receive<br>admin | FlowControl<br>oper | RxPause | TxPause |
|-----------|---------------|---------------------|------------------|---------------------|---------|---------|
| -----     | -----         | -----               | -----            | -----               | -----   | -----   |
| port1.0.5 | on            | on                  | on               | on                  | 0       | 0       |

# show interface err-disabled

**Overview** Use this command to show the ports which have been dynamically shut down by protocols running on the device and the protocols responsible for the shutdown.

**Syntax** `show interface [<IFRANGE> err-disabled]`

| Parameter    | Description                                        |
|--------------|----------------------------------------------------|
| <IFRANGE>    | Interface range                                    |
| err-disabled | Brief summary of interfaces shut down by protocols |

**Mode** User Exec and Privileged Exec

**Example** Show the protocols that have shut down port2.0.21 and port2.0.23, use the commands:

```
awplus# show interface err-disabled
```

**Output** Figure 12-2: Example output from the **show interface err-disabled** command

|                                    |                 |
|------------------------------------|-----------------|
| awplus#show interface err-disabled |                 |
| Interface                          | Reason          |
| port2.0.21                         | loop protection |
| port2.0.23                         | loop protection |

# show interface switchport

**Overview** Use this command to show VLAN information about each switch port.

**Syntax** `show interface switchport`

**Mode** User Exec and Privileged Exec

**Example** To display VLAN information about each switch port, enter the command:

```
awplus# show interface switchport
```

**Output** Figure 12-3: Example output from the **show interface switchport** command

```
Interface name      : port1.0.1
Switchport mode    : access
Ingress filter      : enable
Acceptable frame types : all
Default Vlan       : 2
Configured Vlans    : 2

Interface name      : port1.0.2
Switchport mode    : trunk
Ingress filter      : enable
Acceptable frame types : all
Default Vlan       : 1
Configured Vlans    : 1 4 5 6 7 8
...
```

**Related Commands** [show interface memory](#)

# show loop-protection

**Overview** Use this command to display the current loop protection setup for the device.

**Syntax** `show loop-protection [interface <port-list>] [counters]`

| Parameter   | Description                                       |
|-------------|---------------------------------------------------|
| interface   | The interface selected for display.               |
| <port-list> | A port, a port range, or an aggregated link.      |
| counters    | Displays counter information for loop protection. |

**Mode** User Exec and Privileged Exec

**Usage** This command is used to display the current configuration and operation of the Loop Protection feature

**Examples** To display the current configuration status for `port1.0.1`, use the command:

```
awplus# show loop-protection interface port1.0.1
```

Figure 12-4: Example output from the **show loop-protection** command

|                    |              |
|--------------------|--------------|
| Loop-Detection:    | Enabled      |
| LDF Interval:      | 10 [sec]     |
| Interface:         | port1.0.1    |
| Action:            | port-disable |
| Timeout:           | 300 [sec]    |
| Vlan:              | 1            |
| Status:            | Blocking     |
| Timeout Remaining: | 115 [sec]    |
| Vlan:              | 2            |
| Status:            | Normal       |
| Timeout Remaining: | 0 [sec]      |

To display the counter information for `port1.0.1`, use the command:

```
awplus# show loop-protection interface port1.0.1 counters
```

Figure 12-5: Example output from the **show loop-protection interface counters** command for port1.0.1

|                 |           |
|-----------------|-----------|
| Interface:      | port1.0.1 |
| Vlan:           | 1         |
| LDF Tx:         | 3         |
| LDF Rx:         | 1         |
| Invalid LDF Rx: | 1         |
| Action:         | 1         |
| Vlan:           | 2         |
| LDF Tx:         | 3         |
| LDF Rx:         | 0         |
| Invalid LDF Rx: | 0         |
| Action:         | 0         |



# show mac address-table

**Overview** Use this command to display the mac address-table for all configured VLANs.

**Syntax** `show mac address-table`

**Mode** User Exec and Privileged Exec

**Usage** The **show mac address-table** command is only applicable to view a mac address-table for Layer 2 switched traffic within VLANs.

**Example** To display the mac address-table, use the following command:

```
awplus# show mac address-table
```

**Output** See the below sample output captured when there was no traffic being switched:

```
awplus#show mac address-table
```

| VLAN | Port    | MAC            | State  |
|------|---------|----------------|--------|
| 1    | unknown | 0000.cd28.0752 | static |
| ARP  | -       | 0000.cd00.0000 | static |

See the sample output captured when packets were switched and mac addresses were learned:

```
awplus#show mac address-table
```

| VLAN | Port      | MAC            | State   |
|------|-----------|----------------|---------|
| 1    | unknown   | 0000.cd28.0752 | static  |
| 1    | port1.0.6 | 0030.846e.9bf4 | dynamic |
| 1    | port1.0.4 | 0030.846e.bac7 | dynamic |
| ARP  | -         | 0000.cd00.0000 | static  |

Note the new mac addresses learned for port1.0.4 and port1.0.6 added as dynamic entries.

Note the first column of the output below shows VLAN IDs if multiple VLANs are configured:

```
awplus#show mac address-table
```

| VLAN | Port      | MAC            | State   |
|------|-----------|----------------|---------|
| 1    | unknown   | 0000.cd28.0752 | static  |
| 1    | port1.0.4 | 0030.846e.bac7 | dynamic |
| 2    | unknown   | 0000.cd28.0752 | static  |
| 2    | port1.0.6 | 0030.846e.9bf4 | dynamic |
| ARP  | -         | 0000.cd00.0000 | static  |

Also note manually configured static mac-addresses are shown to the right of the type column:

```
awplus(config)#mac address-table static 0000.1111.2222 for int
port1.0.3 vlan 2
awplus(config)#end
awplus#
awplus#show mac address-table
```

| VLAN | Port      | MAC            | State   |
|------|-----------|----------------|---------|
| 1    | unknown   | 0000.cd28.0752 | static  |
| 1    | port1.0.2 | 0030.846e.bac7 | dynamic |
| 2    | port1.0.3 | 0000.1111.2222 | static  |
| 2    | unknown   | 0000.cd28.0752 | static  |
| 2    | port1.0.5 | 0030.846e.9bf4 | dynamic |
| ARP  | -         | 0000.cd00.0000 | statics |

**Related  
Commands**

- [clear mac address-table dynamic](#)
- [clear mac address-table static](#)
- [mac address-table static](#)

# show mac address-table thrash-limit

**Overview** Use this command to display the current thrash limit set for all interfaces on the device.

**Syntax** `show mac address-table thrash-limit`

**Mode** User Exec and Privileged Exec

**Example** To display the current, use the following command:

```
awplus# show mac address-table thrash-limit
```

**Output** Figure 12-6: Example output from the **show mac address-table thrash-limit** command

```
% Thrash-limit 7 movements per second
```

**Related Commands** [mac address-table thrash-limit](#)

# show mirror

**Overview** Use this command to display the status of all mirrored ports.

**Syntax** `show mirror`

**Mode** User Exec and Privileged Exec

**Example** To display the status of all mirrored ports, use the following command:

```
awplus# show mirror
```

**Output** Figure 12-7: Example output from the **show mirror** command

```
Mirror Test Port Name: port1.0.1
Mirror option: Enabled
Mirror direction: both
Monitored Port Name: port1.0.2
Mirror Test Port Name: port1.0.3
Mirror option: Enabled
Mirror direction: receive
Monitored Port Name: port1.0.4
Mirror Test Port Name: port1.0.3
Mirror option: Enabled
Mirror direction: receive
Monitored Port Name: port1.0.1
Mirror Test Port Name: port1.0.1
Mirror option: Enabled
Mirror direction: receive
Monitored Port Name: port1.0.3
Mirror Test Port Name: port1.0.1
Mirror option: Enabled
Mirror direction: transmit
Monitored Port Name: port1.0.4
```

# show mirror interface

**Overview** Use this command to display port mirroring configuration for a mirrored (monitored) switch port.

**Syntax** `show mirror interface <port>`

| Parameter | Description                                             |
|-----------|---------------------------------------------------------|
| <port>    | The monitored switch port to display information about. |

**Mode** User Exec, Privileged Exec and Interface Configuration

**Example** To display port mirroring configuration for the `port1.0.4`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# show mirror interface port1.0.4
```

**Output** Figure 12-8: Example output from the **show mirror interface** command

```
Mirror Test Port Name: port1.0.3
Mirror option: Enabled
Mirror direction: both
Monitored Port Name: port1.0.4
```

# show platform

**Overview** This command displays the settings configured by using the **platform** commands.

**Syntax** `show platform`

**Mode** Privileged Exec

**Usage** This command displays the settings in the running config. For changes in some of these settings to take effect, the device must be rebooted with the new settings in the startup config.

**Example** To check the settings configured with **platform** commands on the device, use the following command:

```
awplus# show platform
```

**Output** Figure 12-9: Example output from the **show platform** command

```
awplus# show platform

Vlan-stacking TPID          0x8100
```

**Table 5:** Parameters in the output of the **show platform** command

| Parameter          | Description                                                                                                                                     |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Load Balancing     |                                                                                                                                                 |
| Vlan-stacking TPID | The value of the TPID set in the Ethernet type field when a frame has a double VLAN tag ( <a href="#">platform vlan-stacking-tpid</a> command). |

**Related Commands** [platform load-balancing](#)  
[platform vlan-stacking-tpid](#)

# show platform classifier statistics utilization brief

**Overview** This command displays the number of used entries available for various platform functions, and the percentage that number of entries represents of the total available.

**Syntax** `show platform classifier statistics utilization brief`

**Mode** Privileged Exec

**Example** To display the platform classifier utilization statistics, use the following command:  
`awplus# show platform classifier statistics utilization brief`

**Output** Figure 12-10: Output from the **show platform classifier statistics utilization brief** command

```
awplus#show platform classifier statistics utilization brief

[Instance 0]
Number of Entries:
Policy Type      Group ID      Used / Total
-----
ACL              1476395009    0 / 118 ( 0%)
Web Auth         Inactive       0 / 0 ( 0%)
QoS              0 / 128 ( 0%)
```

**Related Commands** [show platform](#)

# show platform port

**Overview** This command displays the various port registers or platform counters for specified switchports.

**Syntax** `show platform port [<port-list>|counters]`

| Parameter   | Description                                                                                                                                                                                                                                                                      |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port-list> | The ports to display information about. A port-list can be: <ul style="list-style-type: none"><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-1.0.6</li><li>• a comma-separated list of ports and port ranges, e.g. port1.0.1,port1.0.4-1.0.6.</li></ul> |
| counters    | Show the platform counters.                                                                                                                                                                                                                                                      |

**Mode** Privileged Exec

**Examples** To display port registers for port1.0.1 and port1.0.2 use the following command:

```
awplus# show platform port port1.0.1-port1.0.2
```

To display platform counters for port1.0.1 and port1.0.2 use the following command:

```
awplus# show platform port port1.0.1-port1.0.2 counters
```



**Output** Figure 12-11: Example output from the **show platform port** command

```
awplus#show platform port port1.0.1
Phy register value for port1.0.1 (ifindex: 5001)

00:1140 01:79ed 02:0362 03:5e7b 04:01e1 05:c1e1 06:006d 07:2001
08:4d77 09:0600 0a:3800 0b:0000 0c:0000 0d:4007 0e:0000 0f:3000
10:0000 11:0f00 12:0000 13:0400 14:0000 15:0000 16:0000 17:0000
18:4400 19:871c 1a:243e 1b:ffff 1c:0000 1d:2442 1e:0000 1f:0000

Port configuration for lport 0x08002003:
Phy Driver: 54680 Gigabit PHY Driver
enabled: 1
loopback: 0
link: 1
speed: 1000 max speed: 1000
duplex: 1
linkscan: 2
autonegotiate: 1
master: 2
tx pause: 0 rx pause: 0
untagged vlan: 4000
vlan filter: 3
stp state: 4
learn: 5
discard: 0
jam: 0
max frame size: 1500
MC Disable SA: no
MC Disable TTL: no
MC egress untag: 0
MC egress vid: 1
MC TTL threshold: -1
```

**Table 6:** Parameters in the output from the **show platform port** command

| Parameter                                                   | Description                                                    |
|-------------------------------------------------------------|----------------------------------------------------------------|
| <b>Ethernet MAC counters</b>                                |                                                                |
| Combined receive/transmit packets by size (octets) counters | Number of packets in each size range received and transmitted. |
| 64                                                          | Number of 64 octet packets received and transmitted.           |
| 65 - 127                                                    | Number of 65 - 127 octet packets received and transmitted.     |
| 128 - 255                                                   | Number of 128 - 255 octet packets received and transmitted.    |

**Table 6:** Parameters in the output from the **show platform port** command

| Parameter               | Description                                                                                    |
|-------------------------|------------------------------------------------------------------------------------------------|
| 256 - 511               | Number of 256 - 511 octet packets received and transmitted.                                    |
| 512 - 1023              | Number of 512 - 1023 octet packets received and transmitted.                                   |
| 1024 - MaxPktSz         | Number of packets received and transmitted with size 1024 octets to the maximum packet length. |
| 1519 - 1522             | Number of 1519 - 1522 octet packets received and transmitted.                                  |
| 1519 - 2047             | Number of 1519 - 2047 octet packets received and transmitted.                                  |
| 2048 - 4095             | Number of 2048 - 4095 octet packets received and transmitted.                                  |
| 4096 - 9216             | Number of 4096 - 9216 octet packets received and transmitted.                                  |
| <b>General Counters</b> |                                                                                                |
| Receive                 | Counters for traffic received.                                                                 |
| Octets                  | Number of octets received.                                                                     |
| Pkts                    | Number of packets received.                                                                    |
| FCSErrors               | Number of FCS (Frame Check Sequence) error events received.                                    |
| UnicastPkts             | Number of unicast packets received.                                                            |
| MulticastPkts           | Number of multicast packets received.                                                          |
| BroadcastPkts           | Number of broadcast packets received.                                                          |
| PauseMACCtlFrms         | Number of Pause MAC Control Frames received.                                                   |
| OversizePkts            | Number of oversize packets received.                                                           |
| Fragments               | Number of fragments received.                                                                  |
| Jabbers                 | Number of jabber frames received.                                                              |
| UnsupportOpcode         | Number of MAC Control frames with unsupported opcode received.                                 |
| AlignmentErrors         | Receive Alignment Error Frame Counter.                                                         |
| SysErDurCarrier         | Receive Code Error Counter.                                                                    |

**Table 6:** Parameters in the output from the **show platform port** command

| Parameter                     | Description                                     |
|-------------------------------|-------------------------------------------------|
| CarrierSenseErr               | Receive False Carrier Counter.                  |
| UndersizePkts                 | Number of undersized packets received.          |
| Transmit                      | Counters for traffic transmitted.               |
| Octets                        | Number of octets transmitted.                   |
| Pkts                          | Number of packets transmitted.                  |
| UnicastPkts                   | Number of unicast packets transmitted.          |
| MulticastPkts                 | Number of multicast packets transmitted.        |
| BroadcastPkts                 | Number of broadcast packets transmitted.        |
| PauseMACCtlFrms               | Number of Pause MAC Control Frames transmitted. |
| OversizePkts                  | Number of oversize packets transmitted.         |
| FrameWDeferrdTx               | Transmit Single Deferral Frame counter.         |
| FrmWExcesDefer                | Transmit Multiple Deferral Frame counter.       |
| SingleCollsnFrm               | Transmit Single Collision Frame counter.        |
| MultCollsnFrm                 | Transmit Multiple Collision Frame counter.      |
| LateCollisions                | Transmit Late Collision Frame counter.          |
| ExcessivCollsns               | Transmit Excessive Collision Frame counter.     |
| Collisions                    | Transmit Total Collision counter                |
| <b>Layer 3 Counters</b>       |                                                 |
| ifInUcastPkts                 | Inbound interface Unicast counter.              |
| ifInDiscards                  | Inbound interface Discarded Packets counter.    |
| ipInHdrErrors                 | Inbound interface Header Errors counter.        |
| ifOutUcastPkts                | Outbound interface Unicast counter.             |
| ifOutErrors                   | Outbound interface Error counter.               |
| <b>Miscellaneous Counters</b> |                                                 |
| DropEvents                    | Drop Event counter                              |
| ifOutDiscards                 | Outbound interface Discarded Packets counter.   |
| MTUExcdDiscard                | Receive MTU Check Error Frame Counter           |

# show port-security interface

**Overview** Use this command to show the current port-security configuration and the switch port status.

**Syntax** `show port-security interface <port>`

| Parameter | Description                                                                                                                                                                                                       |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port>    | The port to display information about. The port may be a switch port (e.g. <code>port1.0.4</code> ), a static channel group (e.g. <code>sa3</code> ), or a dynamic (LACP) channel group (e.g. <code>po4</code> ). |

**Mode** Privileged Exec

**Example** To see the port-security status on port1.0.1, use the following command:

```
awplus# show port-security interface port1.0.1
```

**Output** Figure 12-12: Example output from the **show port-security interface** command

|                               |            |
|-------------------------------|------------|
| Port Security configuration   |            |
| Security Enabled              | : YES      |
| Port Status                   | : ENABLED  |
| Violation Mode                | : TRAP     |
| Aging                         | : OFF      |
| Maximum MAC Addresses         | : 3        |
| Total MAC ddresses            | : 1        |
| Lock Status                   | : UNLOCKED |
| Security Violation Count      | : 0        |
| Last Violation Source Address | : None     |

**Related Commands**

- [clear port-security intrusion](#)
- [show port-security intrusion](#)
- [switchport port-security](#)
- [switchport port-security aging](#)
- [switchport port-security maximum](#)
- [switchport port-security violation](#)

# show port-security intrusion

**Overview** Use this command to show the intrusion list. If the port is not specified, the entire intrusion table is shown.

**Syntax** `show port-security intrusion [interface <port>]`

| Parameter | Description                                                                                                                                                             |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| interface | Specify a port                                                                                                                                                          |
| <port>    | The port to display information about. The port may be a switch port (e.g. port1.0.4), a static channel group (e.g. sa3), or a dynamic (LACP) channel group (e.g. po4). |

**Mode** Privileged Exec

**Example** To see the intrusion list on port1.0.1, use the following command:

```
awplus# show port-security intrusion interface port1.0.1
```

**Output** Figure 12-13: Example output from the **show port-security intrusion** command for port 1.0.1

```
Port Security Intrusion List
Interface: port1.0.1 -3 intrusion(s) detected
11-22-33-44-55-04 11-22-33-44-55-06 11-22-33-44-55-08
```

**Related Commands**

- [clear port-security intrusion](#)
- [show port-security interface](#)
- [switchport port-security](#)
- [switchport port-security aging](#)
- [switchport port-security maximum](#)
- [switchport port-security violation](#)

# show storm-control

**Overview** Use this command to display storm-control information for all interfaces or a particular interface.

**Syntax** `show storm-control [<port>]`

| Parameter | Description                                                                                                                                                                                                       |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port>    | The port to display information about. The port may be a switch port (e.g. <code>port1.0.4</code> ), a static channel group (e.g. <code>sa2</code> ), or a dynamic (LACP) channel group (e.g. <code>po2</code> ). |

**Mode** User Exec and Privileged Exec

**Example** To display storm-control information for `port1.0.2`, use the following command:

```
awplus# show storm-control port1.0.2
```

**Output** Figure 12-14: Example output from the **show storm-control** command for `port1.0.2`

| Port      | BcastLevel | McastLevel | DlfLevel |
|-----------|------------|------------|----------|
| port1.0.2 | 40. 0%     | 100. 0%    | 100. 0%  |

**Related Commands** [storm-control level](#)

# speed

**Overview** This command changes the speed of the specified port. You can optionally specify the speed or speeds that get autonegotiated, so autonegotiation is only attempted at the specified speeds.

To see the currently-negotiated speed for ports whose links are up, use the [show interface](#) command. To see the configured speed (when different from the default), use the [show running-config](#) command.

**Syntax** `speed {10|100|1000|10000|auto [10][100][1000][10000]}`

The following table shows the speed options for each type of port.

| Port type                  | Speed Options (units are Mbps)      |
|----------------------------|-------------------------------------|
| RJ-45 and RJ.5copper ports | auto (default)<br>10<br>100<br>1000 |
| 10000Mbps fiber SFP+       | auto (default)<br>10000             |

**Mode** Interface Configuration

**Default** By default, ports autonegotiate speed.

**Usage** Switch ports in a static or dynamic (LACP) channel group must have the same port speed and be in full duplex mode. Once switch ports have been aggregated into a channel group, you can set the speed of all the switch ports in the channel group by applying this command to the channel group.

**NOTE:** *If multiple speeds are specified after the auto option to autonegotiate speeds, then the device only attempts autonegotiation at those specified speeds.*

**Examples** To set the speed of a tri-speed port to 100Mbps, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# speed 100
```

To return the port to auto-negotiating its speed, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# speed auto
```

To set the port to auto-negotiate its speed at 100Mbps and 1000Mbps, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# speed auto 100 1000
```

To set the port to auto-negotiate its speed at 1000Mbps only, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# speed auto 1000
```

**Related  
Commands**

[duplex](#)  
[ecofriendly lpi](#)  
[polarity](#)  
[show interface](#)  
[speed \(asyn\)](#)



# storm-control level

**Overview** Use this command to specify the speed limiting level for broadcasting, multicast, or destination lookup failure (DLF) traffic for the port. Storm-control limits the selected traffic type to the specified percentage of the maximum port speed.

Use the **no** variant of this command to disable storm-control for broadcast, multicast or DLF traffic.

**Syntax** `storm-control {broadcast|multicast|dlf} level <level>`  
`no storm-control {broadcast|multicast|dlf} level`

| Parameter | Description                                                                                                                        |
|-----------|------------------------------------------------------------------------------------------------------------------------------------|
| <level>   | <0-100> Specifies the percentage of the maximum port speed allowed for broadcast, multicast or destination lookup failure traffic. |
| broadcast | Applies the storm-control to broadcast frames.                                                                                     |
| multicast | Applies the storm-control to multicast frames.                                                                                     |
| dlf       | Applies the storm-control to destination lookup failure traffic.                                                                   |

**Default** By default, storm-control is disabled.

**Mode** Interface Configuration

**Usage** Flooding techniques are used to block the forwarding of unnecessary flooded traffic. A packet storm occurs when a large number of broadcast packets are received on a port. Forwarding these packets can cause the network to slow down or time out.

**Example** To limit broadcast traffic on `port1.0.2` to 30% of the maximum port speed, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# storm-control broadcast level 30
```

**Related Commands** [show storm-control](#)

# switchport port-security

**Overview** Use this command to enable the port-security feature. This feature is also known as the port-based learn limit. It allows the user to set the maximum number of MAC addresses that each port can learn.

Use the **no** variant of this command to disable the port-security feature.

**Syntax** `switchport port-security`  
`no switchport port-security`

**Mode** Interface Configuration

**Examples** To enable the port-security feature on port1.0.4, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# switchport port-security
```

To disable the port-security feature on port1.0.4, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# no switchport port-security
```

**Related Commands**

- [clear port-security intrusion](#)
- [show port-security interface](#)
- [show port-security intrusion](#)
- [switchport port-security aging](#)
- [switchport port-security maximum](#)
- [switchport port-security violation](#)

# switchport port-security aging

**Overview** Use this command to set MAC addresses that have been learned by port security to age out.

Use the **no** variant of this command to set the MAC addresses to not age out.

**Syntax** `switchport port-security aging`  
`no switchport port-security aging`

**Mode** Interface Configuration

**Examples** To set port1.0.4 so that the MAC addresses that have been learned by port security age out, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# switchport port-security aging
```

To stop the MAC addresses that have been learned by port security from aging out on port1.0.4, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# no switchport port-security aging
```

**Related Commands**

- `clear port-security intrusion`
- `show port-security interface`
- `show port-security intrusion`
- `switchport port-security`
- `switchport port-security maximum`
- `switchport port-security violation`

# switchport port-security maximum

**Overview** Use this command to set the maximum number of MAC addresses that each port can learn.

Use the **no** variant of this command to unset the maximum number of MAC addresses that each port can learn. This is same as setting the maximum number to 0. This command also resets the intrusion list table.

If a new MAC is seen on a port with port security enabled and the MAC is statically configured for another port, a violation is triggered. The maximum learn limit will be ignored and the specified intrusion action for the port will be carried out.

**Syntax** `switchport port-security maximum <0-256>`  
`no switchport port-security maximum`

| Parameter                          | Description                                       |
|------------------------------------|---------------------------------------------------|
| <code>maximum &lt;0-256&gt;</code> | Specify the maximum number of addresses to learn. |

**Mode** Interface Configuration

**Examples** To learn 3 MAC addresses on `port1.0.4`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# switchport port-security maximum 3
```

To remove the MAC learning limit on `port1.0.4`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# no switchport port-security maximum
```

**Related Commands**

- [clear port-security intrusion](#)
- [show port-security interface](#)
- [show port-security intrusion](#)
- [switchport port-security](#)
- [switchport port-security aging](#)
- [switchport port-security violation](#)

# switchport port-security violation

**Overview** Use this command to set the action taken on a switch port when the port exceeds the learning limits. The port action can be either **shutdown**, **restrict** or **protect**. If **shutdown** is set, the physical link will be disabled and "shutdown" will be shown in the config. If **restrict** is set, the packet from the un-authorized MAC will be discarded and SNMP TRAP will be generated to alert management. If **protect** is set, the packet will simply be discarded by the packet processor silently.

Use the **no** variant of this command to set the violation action to default. The default violation action is protect.

**Syntax** `switchport port-security violation {shutdown|restrict|protect}`  
`no switchport port-security violation`

| Parameter | Description                      |
|-----------|----------------------------------|
| shutdown  | Disable the port.                |
| restrict  | Alert the network administrator. |
| protect   | Discard the packet.              |

**Mode** Interface Configuration

**Examples** To set the action to be shutdown on port1.0.4, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# switchport port-security violation shutdown
```

To set the port-security action to the default (protect) on port1.0.4, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# no switchport port-security violation
```

**Related Commands**

- [clear port-security intrusion](#)
- [show port-security interface](#)
- [show port-security intrusion](#)
- [switchport port-security](#)
- [switchport port-security aging](#)
- [switchport port-security maximum](#)

# thrash-limiting

**Overview** Sets and configures the thrash limit action that will be applied to any port on the device when a thrashing condition is detected. The thrash-limiting timeout specifies the time, in seconds, for which the thrash action is employed.

**Syntax**

```
thrash-limiting {[action  
{learn-disable|link-down|port-disable|vlan-disable|none}}  
[timeout <0-86400>]}  
  
no thrash-limiting {action|timeout}
```

| Parameter     | Description                                                                                       |
|---------------|---------------------------------------------------------------------------------------------------|
| action        | The mac thrashing detected action. The default is vlan-disable.                                   |
| learn-disable | Disable mac address learning                                                                      |
| link-down     | Block all traffic on an interface - link down                                                     |
| port-disable  | Block all traffic on an interface - link remains up                                               |
| vlan-disable  | Block all traffic on a vlan. Note that setting this parameter will also enable ingress filtering. |
| none          | No thrash action                                                                                  |
| timeout       | Set the duration for the thrash action                                                            |
| <0-86400>     | The duration of the applied thrash action in seconds. The default is 1 seconds.                   |

**Default** The default action is learn-disable.

**Mode** Interface Configuration

**Usage** See the “Thrash Limiting” section in the [Switching Feature Overview and Configuration Guide](#) for relevant conceptual, configuration, and overview information prior to applying this command.

**Examples** To set the action to learn disable for port1.0.4, use the following commands:

```
awplus# configure terminal  
awplus(config)# interface port1.0.4  
awplus(config-if)# thrash-limiting action learn-disable
```

To block all traffic on a vlan, use the following command:

```
awplus# configure terminal  
awplus(config)# thrash-limiting action vlan-disable
```

To set the thrash limiting timeout to 5 seconds, use the following command:

```
awplus(config-if)# thrash-limiting timeout 5
```

To set the thrash limiting action to its default, use the following command:

```
awplus(config-if)# no thrash-limiting action
```

To set the thrash limiting timeout to its default, use the following command:

```
awplus(config-if)# no thrash-limiting timeout
```

**Related  
Commands**

[loop-protection loop-detect](#)

[loop-protection action](#)

[loop-protection timeout](#)

[show loop-protection](#)

# undebbug loopprot

**Overview** This command applies the functionality of the no [debug loopprot](#) command.



# undebug platform packet

**Overview** This command applies the functionality of the no [debug platform packet](#) command.

# 13

# VLAN Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure VLANs. For more information see the [VLAN Feature Overview and Configuration Guide](#).

- Command List**
- [“clear vlan statistics”](#) on page 472
  - [“port-vlan-forwarding-priority”](#) on page 473
  - [“private-vlan”](#) on page 476
  - [“private-vlan association”](#) on page 477
  - [“show port-vlan-forwarding-priority”](#) on page 478
  - [“show interface switchport vlan translation”](#) on page 479
  - [“show vlan”](#) on page 480
  - [“show vlan classifier group”](#) on page 481
  - [“show vlan classifier group interface”](#) on page 482
  - [“show vlan classifier interface group”](#) on page 483
  - [“show vlan classifier rule”](#) on page 484
  - [“show vlan private-vlan”](#) on page 485
  - [“show vlan statistics”](#) on page 486
  - [“switchport access vlan”](#) on page 487
  - [“switchport enable vlan”](#) on page 488
  - [“switchport mode access”](#) on page 489
  - [“switchport mode private-vlan”](#) on page 490
  - [“switchport mode private-vlan trunk promiscuous”](#) on page 491
  - [“switchport mode private-vlan trunk secondary”](#) on page 493

- [“switchport mode trunk”](#) on page 495
- [“switchport private-vlan host-association”](#) on page 496
- [“switchport private-vlan mapping”](#) on page 497
- [“switchport trunk allowed vlan”](#) on page 498
- [“switchport trunk native vlan”](#) on page 501
- [“switchport vlan translation”](#) on page 503
- [“switchport vlan translation default drop”](#) on page 504
- [“switchport vlan-stacking \(double tagging\)”](#) on page 505
- [“switchport voice dscp”](#) on page 506
- [“switchport voice vlan”](#) on page 507
- [“switchport voice vlan priority”](#) on page 510
- [“vlan”](#) on page 511
- [“vlan classifier activate”](#) on page 512
- [“vlan classifier group”](#) on page 513
- [“vlan classifier rule ipv4”](#) on page 514
- [“vlan classifier rule proto”](#) on page 515
- [“vlan database”](#) on page 518
- [“vlan mode stack-local-vlan”](#) on page 519
- [“vlan statistics”](#) on page 521

# clear vlan statistics

**Overview** This command resets the counters for either a specific VLAN statistics instance or (by not specifying an instance) resets the counters for all instances.

The terms **frame** and **packet** are used interchangeably.

**Syntax** `clear vlan statistics [name <instance_name>]`

| Parameter                          | Description                                                                                  |
|------------------------------------|----------------------------------------------------------------------------------------------|
| <code>vlan statistics</code>       | The count of incoming frames or bytes collected on a per VLAN basis. <sup>1</sup>            |
| <code>&lt;instance-name&gt;</code> | The name of the instance for which incoming frames and their bytes are counted. <sup>1</sup> |

**Mode** Privileged Exec

**Examples** To reset all packet counters for the packet counter instance **vlan2-data**:

```
awplus# clear vlan statistics name vlan2-data
```

To reset all packet counters for all packet counter instances.

```
awplus# clear vlan statistics
```

**Related Commands** [show vlan statistics](#)  
[vlan statistics](#)

# port-vlan-forwarding-priority

**Overview** Use this command to set the highest priority protocol to control transitions from blocking to forwarding traffic. This command prioritizes switch port forwarding mode control, when more than one of EPSR, Loop Protection, and MAC thrashing protection protocols are used on the switch.

EPSR, Loop Protection and MAC Thrashing use the same mechanism to block or forward traffic. This command sets the highest priority protocol to control transitions from blocking to forwarding traffic. Setting the priority stops contention between protocols.

For example, If EPSR is set to the highest priority protocol to block traffic on vlan10 on port1.0.2 then this stops MAC Thrashing from forwarding traffic on vlan10 on port1.0.2.

**CAUTION:** The **loop-protection** and **none** parameter options must not be set on an EPSR master node. Use the **epsr** parameter option on an EPSR master node instead. Setting this command incorrectly on an EPSR master node could cause unexpected broadcast storms .

Use the **no** variant of this command to restore the default highest priority protocol back to the default of EPSR.

For more information about EPSR, see the [EPSR Feature Overview and Configuration Guide](#).

**Syntax** `port-vlan-forwarding-priority {epsr|loop-protection|none}`  
`no port-vlan-forwarding-priority`

| Parameter       | Description                                                                                                                                                                                                                                                                                                                                      |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| epsr            | Sets EPSR as the highest priority protocol. Use this parameter on an EPSR master node to avoid unexpected broadcast storms.                                                                                                                                                                                                                      |
| loop-protection | Sets Loop Protection as the highest priority protocol. Note that this option must not be set on an EPSR master node. Use the epsr parameter option on an EPSR master node to avoid unexpected broadcast storms.                                                                                                                                  |
| none            | Sets the protocols to have equal priority. This was the previous behavior before this command was added, and allows protocols to override each other to set a port to forwarding a VLAN. Note that this option must not be set on a EPSR master node. Use the epsr parameter option on an EPSR master node to avoid unexpected broadcast storms. |

**Default** By default, the highest priority protocol is EPSR

**Mode** Global Configuration

**Usage** EPSR, Loop Protection and MAC Thrashing protection do not usually need to be configured on a switch, because they perform similar functions—each prevents network loops by blocking a selected port for each (loop containing) VLAN.

However, if more than one of these three features is configured on a switch, you can use this command to prioritize either EPSR or Loop Protection when their effects on a port would conflict and override each other. Previously, each protocol could set a port to forwarding for a VLAN, sometimes overriding the previous setting by another protocol to block the port. This could sometimes lead to unexpected broadcast storms.

Now, when a protocol is set to have the highest priority over a data VLAN on a port, it will not allow other protocols to put that port-vlan into a forwarding state if the highest priority protocol blocked it.

The priority mechanism is only used for blocking-to-forwarding transitions; protocols remain independent on the forwarding-to-blocking transitions.

For example, with an EPSR master node in a two-node ESPR ring with the below settings:

- The EPSR master node primary port is configured to switchport interface port1.0.1
- The EPSR master node secondary port is configured to switchport interface port1.0.2
- The EPSR master node control VLAN is configured to VLAN interface vlan10
- The EPSR master node has a first data VLAN configured to VLAN interface vlan20
- The EPSR master node has a second data VLAN configured to VLAN interface vlan30.

Initially, the EPSR ring is complete, with port1.0.2 blocking data VLANs vlan20 and vlan30 and some broadcast traffic flowing through. If the user removes vlan30 from EPSR, a storm is created on vlan30. MAC thrashing protection detects it and blocks vlan30.

Then after the storm has stopped, MAC thrashing protection sets it to forwarding again and it keeps oscillating between forwarding and blocking. In the meantime, the user adds back vlan30 to EPSR as a data VLAN and EPSR blocks it on port1.0.2.

If the priority is set to none (**port-vlan-forwarding-priority none**), MAC thrashing protection notices that the storm has stopped again and decides to put vlan30 on port1.0.2 into forwarding state. This overrides what EPSR requires for this port-VLAN and creates a storm. This matches the old behavior before this feature was implemented.

If the priority is set to EPSR or default (**port-vlan-forwarding-priority epsr**), MAC thrashing protection notices that the storm has stopped again and attempts to put vlan30 on port1.0.2 into forwarding state. The higher priority protocol (EPSR) is blocking the VLAN on this port, so it stays blocking and no storm occurs.

**Example** To prioritize EPSR over Loop Protection or MAC Thrashing protection settings, so that Loop Protection or MAC Thrashing protection cannot set a port to the forwarding state a VLAN if EPSR has set it to the blocking state, use the commands:

```
awplus# configure terminal
awplus(config)# port-vlan-forwarding-priority epsr
```

To prioritize Loop Protection over EPSR or MAC Thrashing protection settings, so that EPSR or MAC Thrashing protection cannot set a port to the forwarding state a VLAN if Loop Protection has set it to the blocking state, use the commands:

```
awplus# configure terminal
awplus(config)# port-vlan-forwarding-priority loop-protection
```

To set EPSR, Loop Protection, and MAC Thrashing protection protocols to have equal priority for port forwarding and blocking, which allows the protocols to override each other to set a port to the forwarding or blocking states, use the commands:

```
awplus# configure terminal
awplus(config)# port-vlan-forwarding-priority none
```

To restore the default highest priority protocol back to the default of EPSR, use the commands:

```
awplus# configure terminal
awplus(config)# no port-vlan-forwarding-priority
```

**Related Commands** [show port-vlan-forwarding-priority](#)

# private-vlan

**Overview** Use this command to create a private VLAN. Private VLANs can be either primary or secondary. Secondary VLANs can be either community or isolated.

Use the **no** variant of this command to remove the specified private VLAN.

For more information, see the [VLAN Feature Overview and Configuration Guide](#).

**Syntax** `private-vlan <vlan-id> {community|isolated|primary}`  
`no private-vlan <vlan-id> {community|isolated|primary}`

| Parameter | Description                                                                    |
|-----------|--------------------------------------------------------------------------------|
| <vlan-id> | VLAN ID in the range <2-4094> for the VLAN which is to be made a private VLAN. |
| community | Community VLAN.                                                                |
| isolated  | Isolated VLAN.                                                                 |
| primary   | Primary VLAN.                                                                  |

**Mode** VLAN Configuration

**Examples**

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# vlan 2 name vlan2 state enable
awplus(config-vlan)# vlan 3 name vlan3 state enable
awplus(config-vlan)# vlan 4 name vlan4 state enable
awplus(config-vlan)# private-vlan 2 primary
awplus(config-vlan)# private-vlan 3 isolated
awplus(config-vlan)# private-vlan 4 community
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# no private-vlan 2 primary
awplus(config-vlan)# no private-vlan 3 isolated
awplus(config-vlan)# no private-vlan 4 community
```



# private-vlan association

**Overview** Use this command to associate a secondary VLAN to a primary VLAN. Only one isolated VLAN can be associated to a primary VLAN. Multiple community VLANs can be associated to a primary VLAN.

Use the **no** variant of this command to remove association of all the secondary VLANs to a primary VLAN.

For more information, see the [VLAN Feature Overview and Configuration Guide](#).

**Syntax** `private-vlan <primary-vlan-id> association {add  
<secondary-vlan-id>|remove <secondary-vlan-id>}  
no private-vlan <primary-vlan-id> association`

| Parameter           | Description                                                   |
|---------------------|---------------------------------------------------------------|
| <primary-vlan-id>   | VLAN ID of the primary VLAN.                                  |
| <secondary-vlan-id> | VLAN ID of the secondary VLAN (either isolated or community). |

**Mode** VLAN Configuration

**Examples** The following commands associate primary VLAN 2 with secondary VLAN 3:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# private-vlan 2 association add 3
```

The following commands remove the association of primary VLAN 2 with secondary VLAN 3:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# private-vlan 2 association remove 3
```

The following commands remove all secondary VLAN associations of primary VLAN 2:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# no private-vlan 2 association
```

# show port-vlan-forwarding-priority

**Overview** Use this command to display the highest priority protocol that controls port-vlan forwarding or blocking traffic. This command displays whether EPSR or Loop Protection is set as the highest priority for determining whether a port forwards a VLAN, as set by the [port-vlan-forwarding-priority](#) command.

For more information about EPSR, see the [EPSR Feature Overview and Configuration Guide](#).

**Syntax** `show port-vlan-forwarding-priority`

**Mode** Privileged Exec

**Example** To display the highest priority protocol, use the command:

```
awplus# show port-vlan-forwarding-priority
```

**Output** Figure 13-1: Example output from the **show port-vlan-forwarding-priority** command

```
Port-vlan Forwarding Priority: EPSR
```

**Related Commands** [port-vlan-forwarding-priority](#)

# show interface switchport vlan translation

**Overview** Use this command to display VLAN translation information for some or all interfaces.

**Syntax** `show interface switchport vlan translation interface [<int>]`

| Parameter                          | Description                                                                                                                                                                     |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>interface &lt;int&gt;</code> | The interface to display information about. An interface can be a switch port (e.g. port1.0.6), a static channel group (e.g. sa2) or a dynamic (LACP) channel group (e.g. po2). |

**Mode** User Exec/Privileged Exec

**Example** To display VLAN translation information for port1.0.1, use the command:

```
awplus# show interface switchport vlan translation port1.0.1
```

**Output** Figure 13-2: Example output from **show interface switchport vlan translation port1.0.1**

```
awplus#show interface switchport vlan translation port1.0.1

Interface: port1.0.1
VLAN on Wire      VLAN
-----
1649              100
default           drop
```

Table 13-1: Parameters in the output from **show interface switchport vlan translation**

| Parameter    | Description                                                                                                                |
|--------------|----------------------------------------------------------------------------------------------------------------------------|
| Interface    | The interface on which VLAN-IDs will be translated                                                                         |
| VLAN on Wire | VLAN-ID of the packet as it will be seen on the wire                                                                       |
| VLAN         | VLAN-ID of the VLAN as it was assigned when the VLAN was created                                                           |
| default      | The action taken on inbound tagged packets that do not match a VLAN translation entry; either <b>drop</b> or <b>accept</b> |

**Related Commands** [switchport vlan translation](#)  
[switchport vlan translation default drop](#)

# show vlan

**Overview** Use this command to display information about a particular VLAN by specifying its VLAN ID. Selecting **all** will display information for all the VLANs configured.

**Syntax** `show vlan {all|brief|dynamic|static|auto|static-ports<1-4094>}`

| Parameter     | Description                                                  |
|---------------|--------------------------------------------------------------|
| <1-4094>      | Display information about the VLAN specified by the VLAN ID. |
| all           | Display information about all VLANs on the device.           |
| brief         | Display information about all VLANs on the device.           |
| dynamic       | Display information about all VLANs learned dynamically.     |
| static        | Display information about all statically configured VLANs.   |
| auto          | Display information about all auto-configured VLANs.         |
| static- ports | Display static egress/forbidden ports.                       |

**Mode** User Exec and Privileged Exec

**Example** To display information about VLAN 2, use the command:

```
awplus# show vlan 2
```

**Output** Figure 13-3: Example output from the **show vlan** command

| VLAN ID                  | Name     | Type   | State  | Member ports                                           |
|--------------------------|----------|--------|--------|--------------------------------------------------------|
| (u)-Untagged, (t)-Tagged |          |        |        |                                                        |
| 2                        | VLAN0002 | STATIC | ACTIVE | port1.0.3(u) port1.0.4(u) port1.0.5(u)<br>port1.0.6(u) |
| ...                      |          |        |        |                                                        |

**Related Commands** [vlan](#)

# show vlan classifier group

**Overview** Use this command to display information about all configured VLAN classifier groups or a specific group.

**Syntax** `show vlan classifier group [<1-16>]`

| Parameter | Description                      |
|-----------|----------------------------------|
| <1-16>    | VLAN classifier group identifier |

**Mode** User Exec and Privileged Exec

**Usage** If a group ID is not specified, all configured VLAN classifier groups are shown. If a group ID is specified, a specific configured VLAN classifier group is shown.

**Example** To display information about VLAN classifier group 1, enter the command:

```
awplus# show vlan classifier group 1
```

**Related Commands** [vlan classifier group](#)

# show vlan classifier group interface

**Overview** Use this command to display information about a single switch port interface for all configured VLAN classifier groups.

**Syntax** `show vlan classifier group interface <switch-port>`

| Parameter                        | Description                                                   |
|----------------------------------|---------------------------------------------------------------|
| <code>&lt;switch-port&gt;</code> | Specify the switch port interface classifier group identifier |

**Mode** User Exec and Privileged Exec

**Usage** All configured VLAN classifier groups are shown for a single interface.

**Example** To display VLAN classifier group information for switch port interface `port1.0.2`, enter the command:

```
awplus# show vlan classifier group interface port1.0.2
```

**Output** Figure 13-4: Example output from the **show vlan classifier group interface port1.0.1** command:

```
vlan classifier group 1 interface port1.0.1
```

**Related Commands** [vlan classifier group](#)  
[show vlan classifier interface group](#)

# show vlan classifier interface group

**Overview** Use this command to display information about all interfaces configured for a VLAN group or all the groups.

**Syntax** `show vlan classifier interface group [<1-16>]`

| Parameter | Description                                |
|-----------|--------------------------------------------|
| <1-16>    | VLAN classifier interface group identifier |

**Mode** User Exec and Privileged Exec

**Usage** If a group ID is not specified, all interfaces configured for all VLAN classifier groups are shown. If a group ID is specified, the interfaces configured for this VLAN classifier group are shown.

**Example** To display information about all interfaces configured for all VLAN groups, enter the command:

```
awplus# show vlan classifier interface group
```

To display information about all interfaces configured for VLAN group 1, enter the command:

```
awplus# show vlan classifier interface group 1
```

**Output** Figure 13-5: Example output from the **show vlan classifier interface group** command

```
vlan classifier group 1 interface port1.0.1
vlan classifier group 1 interface port1.0.2
vlan classifier group 2 interface port1.0.3
vlan classifier group 2 interface port1.0.4
```

**Output** Figure 13-6: Example output from the **show vlan classifier interface group 1** command

```
vlan classifier group 1 interface port1.0.1
vlan classifier group 1 interface port1.0.2
```

**Related Commands** [vlan classifier group](#)  
[show vlan classifier group interface](#)

# show vlan classifier rule

**Overview** Use this command to display information about all configured VLAN classifier rules or a specific rule.

**Syntax** `show vlan classifier rule [<1-256>]`

| Parameter | Description                     |
|-----------|---------------------------------|
| <1-256>   | VLAN classifier rule identifier |

**Mode** User Exec and Privileged Exec

**Usage** If a rule ID is not specified, all configured VLAN classifier rules are shown. If a rule ID is specified, a specific configured VLAN classifier rule is shown.

**Example** To display information about VLAN classifier rule 1, enter the command:

```
awplus# show vlan classifier rule 1
```

**Output** Figure 13-7: Example output from the **show vlan classifier rule1** command

```
vlan classifier group 1 add rule 1
```

**Related Commands**

- [vlan classifier activate](#)
- [vlan classifier rule ipv4](#)
- [vlan classifier rule proto](#)



# show vlan private-vlan

**Overview** Use this command to display the private VLAN configuration and associations.

**Syntax** `show vlan private-vlan`

**Mode** User Exec and Privileged Exec

**Example** To display the private VLAN configuration and associations, enter the command:

```
awplus# show vlan private-vlan
```

**Output** Figure 13-8: Example output from the **show vlan private-vlan** command

|                               |           |           |            |
|-------------------------------|-----------|-----------|------------|
| awplus#show vlan private-vlan |           |           |            |
| PRIMARY                       | SECONDARY | TYPE      | INTERFACES |
| -----                         | -----     | -----     | -----      |
| 2                             | 3         | isolated  |            |
| 2                             | 4         | community |            |
|                               | 8         | isolated  |            |

**Related Commands** [private-vlan](#)  
[private-vlan association](#)

# show vlan statistics

**Overview** Use this command to display the current configuration for either a specific VLAN statistics instance, or (by not specifying an instance) display all VLAN packet counter instances.

**Syntax** `show vlan statistics [name <instance_name>]`

**Mode** User Exec and Privileged Exec

**Examples** To display all packet counters for the packet counter instance **vlan2-data**

```
awplus# show vlan statistics name vlan2-data
```

To display all packet counters for all packet counter instances.

```
awplus# show vlan statistics
```

Table 13-2: Example output from the **show vlan statistics** command

```
VLAN Stats Collection: vlan2-data
VLAN ID: 2
Port Map: port1.0.1, port1.0.2, port1.0.4
Ingress Packets: total 941, bytes 66185
```

**Related Commands** [clear vlan statistics](#)  
[vlan statistics](#)

# switchport access vlan

**Overview** Use this command to change the port-based VLAN of the current port.

Use the **no** variant of this command to change the port-based VLAN of this port to the default VLAN, vlan1.

**Syntax** `switchport access vlan <vlan-id>`  
`no switchport access vlan`

| Parameter | Description                                   |
|-----------|-----------------------------------------------|
| <vlan-id> | <1-4094> The port-based VLAN ID for the port. |

**Default** Reset the default VLAN 1 to specified switchports using the negated form of this command.

**Mode** Interface Configuration

**Usage** Any untagged frame received on this port will be associated with the specified VLAN.

**Examples** To change the port-based VLAN to VLAN 3 for port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport access vlan 3
```

To reset the port-based VLAN to the default VLAN 1 for port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no switchport access vlan
```

**Validation Command** `show interface switchport`

**Related Commands** `show vlan`

# switchport enable vlan

**Overview** This command enables the VLAN on the port manually once disabled by certain actions, such as QSP (QoS Storm Protection) or EPSR (Ethernet Protection Switching Ring). Note that if the VID is not given, all disabled VLANs are re-enabled.

**Syntax** `switchport  
enable vlan [<1-4094>]`

| Parameter                   | Description                      |
|-----------------------------|----------------------------------|
| <code>vlan</code>           | Re-enables the VLAN on the port. |
| <code>&lt;1-4094&gt;</code> | VLAN ID.                         |

**Mode** Interface Configuration

**Example** To re-enable the `port1.0.1` from VLAN 1:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# switchport enable vlan 1
```

**Related Commands** [show mls qos interface storm-status](#)  
[storm-window](#)

# switchport mode access

**Overview** Use this command to set the switching characteristics of the port to access mode. Received frames are classified based on the VLAN characteristics, then accepted or discarded based on the specified filtering criteria.

**Syntax** `switchport mode access [ingress-filter {enable|disable}]`

| Parameter                   | Description                                                                               |
|-----------------------------|-------------------------------------------------------------------------------------------|
| <code>ingress-filter</code> | Set the ingress filtering for the received frames.                                        |
| <code>enable</code>         | Turn on ingress filtering for received frames. This is the default.                       |
| <code>disable</code>        | Turn off ingress filtering to accept frames that do not meet the classification criteria. |

**Default** By default, ports are in access mode with ingress filtering on.

**Usage** Use access mode to send untagged frames only.

**Mode** Interface Configuration

**Example**

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport mode access ingress-filter enable
```

**Validation Command** `show interface switchport`

# switchport mode private-vlan

**Overview** Use this command to make a Layer 2 port a private VLAN host port or a promiscuous port.

Use the **no** variant of this command to remove the configuration.

**Syntax** `switchport mode private-vlan {host|promiscuous}`  
`no switchport mode private-vlan {host|promiscuous}`

| Parameter   | Description                                                                                                                                                                                                                                                                    |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| host        | This port type can communicate with all other host ports assigned to the same community VLAN, but it cannot communicate with the ports in the same isolated VLAN. All communications outside of this VLAN must pass through a promiscuous port in the associated primary VLAN. |
| promiscuous | A promiscuous port can communicate with all interfaces, including the community and isolated ports within a private VLAN.                                                                                                                                                      |

**Mode** Interface Configuration

**Examples** `awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# switchport mode private-vlan host`  
`awplus(config)# interface port1.0.3`  
`awplus(config-if)# switchport mode private-vlan promiscuous`  
`awplus(config)# interface port1.0.4`  
`awplus(config-if)# no switchport mode private-vlan promiscuous`

**Related Commands** [switchport private-vlan mapping](#)

# switchport mode private-vlan trunk promiscuous

**Overview** Use this command to enable a port in trunk mode to be promiscuous port for isolated VLANs.

**NOTE:** Private VLAN trunk ports are not supported by the current AlliedWare Plus GVRP implementation. Private VLAN trunk ports and GVRP are mutually exclusive.

Use the **no** variant of this command to remove a port in trunk mode as a promiscuous port for isolated VLANs. You must first remove the secondary port, or ports, in trunk mode associated with the promiscuous port with the **no switchport mode private-vlan trunk secondary** command.

**Syntax** `switchport mode private-vlan trunk promiscuous group <group-id>`  
`no switchport mode private-vlan trunk promiscuous`

| Parameter                     | Description                                                                                                               |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;group-id&gt;</code> | The group ID is a numeric value in the range 1 to 32 that is used to associate the promiscuous port with secondary ports. |

**Default** By default, a port in trunk mode is disabled as a promiscuous port.

**Mode** Interface Configuration

**Usage** A port must be put in trunk mode with [switchport mode trunk](#) command before it can be enabled as a promiscuous port.

To add VLANs to be trunked over the promiscuous port, use the [switchport trunk allowed vlan](#) command. These VLANs can be isolated VLANs, or non-private VLANs.

To configure the native VLAN for the promiscuous port, use the [switchport trunk native vlan](#) command. The native VLAN can be an isolated VLAN, or a non-private VLAN.

When you enable a promiscuous port, all of the secondary port VLANs associated with the promiscuous port via the group ID number must be added to the promiscuous port. In other words, the set of VLANs on the promiscuous port must be a superset of all the VLANs on the secondary ports within the group.

**Examples** To create the isolated VLANs 2, 3 and 4 and then enable port1.0.2 in trunk mode as a promiscuous port for these VLANs with the group ID of 3, use the following commands:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# vlan 2-4
awplus(config-vlan)# private-vlan 2 isolated
awplus(config-vlan)# private-vlan 3 isolated
awplus(config-vlan)# private-vlan 4 isolated
awplus(config-vlan)# exit
awplus(config)# interface port1.0.2
awplus(config-if)# switchport mode trunk
awplus(config-if)# switchport trunk allowed vlan add 2-4
awplus(config-if)# switchport mode private-vlan trunk
promiscuous group 3
```

To remove port1.0.2 in trunk mode as a promiscuous port for a private VLAN, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no switchport mode private-vlan trunk
promiscuous
```

Note that you must remove the secondary port or ports enabled as trunk ports that are associated with the promiscuous port before removing the promiscuous port.

**Related Commands**

- [switchport mode private-vlan trunk secondary](#)
- [switchport mode trunk](#)
- [switchport trunk allowed vlan](#)
- [switchport trunk native vlan](#)
- [show vlan private-vlan](#)



# switchport mode private-vlan trunk secondary

**Overview** Use this command to enable a port in trunk mode to be a secondary port for isolated VLANs.

**NOTE:** Private VLAN trunk ports are not supported by the current AlliedWare Plus GVRP implementation. Private VLAN trunk ports and GVRP are mutually exclusive.

Use the **no** variant of this command to remove a port in trunk mode as a secondary port for isolated VLANs.

**Syntax** `switchport mode private-vlan trunk secondary group <group-id>`  
`no switchport mode private-vlan trunk secondary`

| Parameter                     | Description                                                                                                                |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;group-id&gt;</code> | The group ID is a numeric value in the range 1 to 32 that is used to associate a secondary port with its promiscuous port. |

**Default** By default, a port in trunk mode is disabled as a secondary port.  
When a port in trunk mode is enabled to be a secondary port for isolated VLANs, by default it will have a native VLAN of **none**(no native VLAN specified).

**Mode** Interface Configuration

**Usage** A port must be put in trunk mode with [switchport mode trunk](#) command before the port is enabled as a secondary port in trunk mode.

To add VLANs to be trunked over the secondary port use the [switchport trunk allowed vlan](#) command. These must be isolated VLANs and must exist on the associated promiscuous port.

To configure the native VLAN for the secondary port, use the [switchport trunk native vlan](#) command. The native VLAN must be an isolated VLAN and must exist on the associated promiscuous port.

**Examples** To create isolated private VLAN 2 and then enable port1.0.3 in trunk mode as a secondary port for the this VLAN with the group ID of 3, use the following commands:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# vlan 2
awplus(config-vlan)# private-vlan 2 isolated
awplus(config-vlan)# exit
awplus(config)# interface port1.0.3
awplus(config-if)# switchport mode trunk
awplus(config-if)# switchport trunk allowed vlan add 2
awplus(config-if)# switchport mode private-vlan trunk secondary
group 3
```

To remove port1.0.3 in trunk mode as a secondary port, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.3
awplus(config-if)# no switchport mode private-vlan trunk
secondary
```

**Related Commands**

- [switchport mode private-vlan trunk promiscuous](#)
- [switchport mode trunk](#)
- [switchport trunk allowed vlan](#)
- [switchport trunk native vlan](#)
- [show vlan private-vlan](#)

# switchport mode trunk

**Overview** Use this command to set the switching characteristics of the port to trunk. Received frames are classified based on the VLAN characteristics, then accepted or discarded based on the specified filtering criteria.

**Syntax** `switchport mode trunk [ingress-filter {enable|disable}]`

| Parameter                   | Description                                                                               |
|-----------------------------|-------------------------------------------------------------------------------------------|
| <code>ingress-filter</code> | Set the ingress filtering for the frames received.                                        |
| <code>enable</code>         | Turn on ingress filtering for received frames. This is the default.                       |
| <code>disable</code>        | Turn off ingress filtering to accept frames that do not meet the classification criteria. |

**Default** By default, ports are in access mode, are untagged members of the default VLAN (vlan1), and have ingress filtering on.

**Mode** Interface Configuration

**Usage** A port in trunk mode can be a tagged member of multiple VLANs, and an untagged member of one native VLAN.

To configure which VLANs this port will trunk for, use the [switchport trunk allowed vlan](#) command.

**Example**

```
awplus# configure terminal
awplus(config)# interface port1.0.3
awplus(config-if)# switchport mode trunk ingress-filter enable
```

**Validation Command** [show interface switchport](#)

# switchport private-vlan host-association

**Overview** Use this command to associate a primary VLAN and a secondary VLAN to a host port. Only one primary and secondary VLAN can be associated to a host port.

Use the **no** variant of this command to remove the association.

**Syntax** `switchport private-vlan host-association <primary-vlan-id> add <secondary-vlan-id>`  
`no switchport private-vlan host-association`

| Parameter                              | Description                                                   |
|----------------------------------------|---------------------------------------------------------------|
| <code>&lt;primary-vlan-id&gt;</code>   | VLAN ID of the primary VLAN.                                  |
| <code>&lt;secondary-vlan-id&gt;</code> | VLAN ID of the secondary VLAN (either isolated or community). |

**Mode** Interface Configuration

**Examples** `awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# switchport private-vlan host-association 2`  
`add 3`  
`awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# no switchport private-vlan host-association`

# switchport private-vlan mapping

**Overview** Use this command to associate a primary VLAN and a set of secondary VLANs to a promiscuous port.

Use the **no** variant of this to remove all the association of secondary VLANs to primary VLANs for a promiscuous port.

**Syntax** `switchport private-vlan mapping <primary-vlan-id> add <secondary-vid-list>`  
`switchport private-vlan mapping <primary-vlan-id> remove <secondary-vid-list>`  
`no switchport private-vlan mapping`

| Parameter                               | Description                                                                                                                       |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;primary-vlan-id&gt;</code>    | VLAN ID of the primary VLAN.                                                                                                      |
| <code>&lt;secondary-vid-list&gt;</code> | VLAN ID of the secondary VLAN (either isolated or community), or a range of VLANs, or a comma-separated list of VLANs and ranges. |

**Mode** Interface Configuration

**Usage** This command can be applied to a switch port or a static channel group, but not a dynamic (LACP) channel group. LACP channel groups (dynamic/LACP aggregators) cannot be promiscuous ports in private VLANs.

**Examples** `awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# switchport private-vlan mapping 2 add 3-4`  
`awplus(config-if)# switchport private-vlan mapping 2 remove 3-4`  
`awplus(config-if)# no switchport private-vlan mapping`

**Related Commands** [switchport mode private-vlan](#)

# switchport trunk allowed vlan

**Overview** Use this command to add VLANs to be trunked over this switch port. Traffic for these VLANs can be sent and received on the port.

Use the **no** variant of this command to reset switching characteristics of a specified interface to negate a trunked configuration specified with **switchport trunk allowed vlan** command.

**Syntax**

```
switchport trunk allowed vlan all
switchport trunk allowed vlan none
switchport trunk allowed vlan add <vid-list>
switchport trunk allowed vlan remove <vid-list>
switchport trunk allowed vlan except <vid-list>
no switchport trunk
```

| Parameter  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| all        | Allow all VLANs to transmit and receive through the port.                                                                                                                                                                                                                                                                                                                                                                                    |
| none       | Allow no VLANs to transmit and receive through the port.                                                                                                                                                                                                                                                                                                                                                                                     |
| add        | Add a VLAN to transmit and receive through the port. Only use this parameter if a list of VLANs are already configured on a port.                                                                                                                                                                                                                                                                                                            |
| remove     | Remove a VLAN from transmit and receive through the port. Only use this parameter if a list of VLANs are already configured on a port.                                                                                                                                                                                                                                                                                                       |
| except     | All VLANs, except the VLAN for which the VID is specified, are part of its port member set. Only use this parameter to remove VLANs after either this parameter or the <b>all</b> parameter have added VLANs to a port.                                                                                                                                                                                                                      |
| <vid-list> | <2-4094> The ID of the VLAN or VLANs that will be added to, or removed from, the port. A single VLAN, VLAN range, or comma-separated VLAN list can be set.<br>For a VLAN range, specify two VLAN numbers: lowest, then highest number in the range, separated by a hyphen.<br>For a VLAN list, specify the VLAN numbers separated by commas. Do not enter spaces between hyphens or commas when setting parameters for VLAN ranges or lists. |

**Default** By default, ports are untagged members of the default VLAN (vlan1).

**Mode** Interface Configuration

**Usage** The **all** parameter sets the port to be a tagged member of all the VLANs configured on the device. The **none** parameter removes all VLANs from the port's tagged member set. The **add** and **remove** parameters will add and remove VLANs to and from the port's member set. See the note below about restrictions when using the **add**, **remove**, **except**, and **all** parameters.

**NOTE:** Only use the **add** or the **remove** parameters with this command if a list of VLANs are configured on a port. Only use the **except** parameter to remove VLANs after either the **except** or the **all** parameters have first been used to add a list of VLANs to a port.

To remove a VLAN, where the configuration for `port1.0.6` shows the below output:

```
awplus#show running-config

!
interface port1.0.6
switchport
switchport mode trunk
switchport trunk allowed vlan except 4
```

Remove VLAN 3 by re-entering the **except** parameter with the list of VLANs to remove, instead of using the **remove** parameter, as shown in the command example below:

```
awplus# configure terminal
awplus(config)# interface port1.0.6
awplus(config-if)# switchport trunk allowed vlan except 3,4
```

Then the configuration is changed after entering the above commands to remove VLAN 3:

```
awplus#show running-config

!
interface port1.0.6
switchport
switchport mode trunk
switchport trunk allowed vlan except 3-4
```

To add a VLAN, where the configuration for `port1.0.6` shows the below output:

```
awplus#show running-config

!
interface port1.0.6
switchport
switchport mode trunk
switchport trunk allowed vlan except 3-5
```

Add VLAN 4 by re-entering the **except** parameter with a list of VLANs to exclude, instead of using the **add** parameter to include VLAN 4, as shown in the command example below:

```
awplus# configure terminal
awplus(config)# interface port1.0.5
awplus(config-if)# switchport trunk allowed vlan except 3,5
```

The configuration is changed after entering the above commands to add VLAN 4:

```
awplus#show running-config

!

interface port1.0.5
switchport
switchport mode trunk
switchport trunk allowed vlan except 3,5
```

**Examples** The following shows adding a single VLAN to the port's member set.

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport trunk allowed vlan add 2
```

The following shows adding a range of VLANs to the port's member set.

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport trunk allowed vlan add 2-4
```

The following shows adding a list of VLANs to the port's member set.

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport trunk allowed vlan add 2,3,4
```



# switchport trunk native vlan

**Overview** Use this command to configure the native VLAN for this port. The native VLAN is used for classifying the incoming untagged packets. Use the **none** parameter with this command to remove the native VLAN from the port and set the acceptable frame types to vlan-tagged only.

Use the **no** variant of this command to revert the native VLAN to the default VLAN ID 1. Command negation removes tagged VLANs, and sets the native VLAN to the default VLAN.

**Syntax** `switchport trunk native vlan {<vid>|none}`  
`no switchport trunk native vlan`

| Parameter | Description                                                                                                                                                                                                                                                                                        |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <vid>     | <2-4094><br>The ID of the VLAN that will be used to classify the incoming untagged packets. The VLAN ID must be a part of the VLAN member set of the port.                                                                                                                                         |
| none      | No native VLAN specified. This option removes the native VLAN from the port and sets the acceptable frame types to vlan-tagged only. Note: Use the <b>no</b> variant of this command to revert to the default VLAN 1 as the native VLAN for the specified interface switchport - not <b>none</b> . |

**Default** VLAN 1 (the default VLAN), which is reverted to using the **no** form of this command.

**Mode** Interface Configuration

**Examples** The following commands show configuration of VLAN 2 as the native VLAN for interface `port1.0.2`:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport trunk native vlan 2
```

The following commands show the removal of the native VLAN for interface `port1.0.2`:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport trunk native vlan none
```

The following commands revert the native VLAN to the default VLAN 1 for interface port1.0.2:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no switchport trunk native vlan
```

# switchport vlan translation

- Overview** Use this command to create a VLAN translation entry on an interface. The translation entry translates a packet's VLAN-ID as seen on the wire.
- Use the **no** variant of this command to remove all translation entries or a specific entry.
- This command can be applied to a switch port or a static channel group, or a dynamic (LACP) channel group. The interface must be in a mode that supports tagged packets.

**Syntax** `switchport vlan translation vlan <wire-vid> vlan <vid>`  
`no switchport vlan translation [all|vlan <wire-vid>]`

| Parameter                          | Description                                                       |
|------------------------------------|-------------------------------------------------------------------|
| <code>vlan &lt;wire-vid&gt;</code> | VLAN-ID of the packet as you want it to be seen on the wire.      |
| <code>vlan &lt;vid&gt;</code>      | VLAN-ID of the VLAN as it was assigned when the VLAN was created. |
| <code>all</code>                   | Delete all translation entries.                                   |

**Default** None (by default, no translation entries exist)

**Mode** Interface Configuration for a switch port or a static channel group, or a dynamic (LACP) channel group. The interface must be in a mode that supports tagged packets.

**Example** To translate VLAN100 to VLAN200 on port 1.0.1, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# switchport vlan translation vlan 200 vlan 100
```

**Related Commands** [show interface switchport vlan translation](#)  
[switchport vlan translation default drop](#)

# switchport vlan translation default drop

**Overview** Use this command to configure a default behavior of dropping inbound tagged packets that have a VLAN-ID that does not match any entries in the VLAN translation table for an interface.

Use the **no** variant of this command to stop dropping non-matching inbound packets and let them be accepted as is for further processing.

**Syntax** `switchport vlan translation default drop`  
`no switchport vlan translation default drop`

**Default** Do not drop packets

**Mode** Interface Configuration for a switch port or a static channel group, or a dynamic (LACP) channel group. The interface must be in a mode that supports tagged packets.

**Example** To drop inbound tagged packets arriving at port1.0.1 unless they match a VLAN translation entry, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# switchport vlan translation default drop
```

To accept inbound tagged packets arriving at port1.0.1 regardless of whether they match a VLAN translation entry, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no switchport vlan translation default drop
```

**Related Commands** [show interface switchport vlan translation](#)  
[switchport vlan translation default drop](#)

# switchport vlan-stacking (double tagging)

**Overview** Use this command to enable VLAN stacking on a port and set it to be a customer-edge-port or provider-port. This is sometimes referred to as VLAN double-tagging, nested VLANs, or Q in Q.

Use **no** parameter with this command to disable VLAN stacking on an interface.

**Syntax** `switchport vlan-stacking {customer-edge-port|provider-port}`  
`no switchport vlan-stacking`

| Parameter          | Description                                                                        |
|--------------------|------------------------------------------------------------------------------------|
| customer-edge-port | Set the port to be a customer edge port. This port must already be in access mode. |
| provider-port      | Set the port to be a provider port. This port must already be in trunk mode.       |

**Default** By default, ports are not VLAN stacking ports.

**Mode** Interface Configuration

**Usage** Use VLAN stacking to separate traffic from different customers so that they can be managed over a provider network.

Note that you must also set an MRU of 1504 or higher on the customer edge port, using the [mru](#) command.

Traffic with an extra VLAN header added by VLAN stacking cannot be routed.

**Example** To apply vlan-stacking to the selected port, configure it to be a customer edge port, and increase the MRU, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport vlan-stacking customer-edge-port
awplus(config-if)# mru 10240
```

# switchport voice dscp

**Overview** Use this command for a specific port to configure the Layer 3 DSCP value advertised when the transmission of LLDP-MED Network Policy TLVs for voice devices is enabled. When LLDP-MED capable IP phones receive this network policy information, they transmit voice data with the specified DSCP value.

Use the **no** variant of this command to reset the DSCP value to the default, 0.

**Syntax** `switchport voice dscp <0-63>`  
`no switchport voice dscp`

| Parameter | Description                          |
|-----------|--------------------------------------|
| dscp      | Specify a DSCP value for voice data. |
| <0-63>    | DSCP value.                          |

**Default** A DSCP value of 0 will be advertised.

**Mode** Interface Configuration

**Usage** LLDP-MED advertisements including Network Policy TLVs are transmitted via a port if:

- LLDP is enabled (`lldp run` command)
- Voice VLAN is configured for the port (`switchport voice vlan` command)
- The port is configured to transmit LLDP advertisements—enabled by default (`lldp transmit receive` command)
- The port is configured to transmit Network Policy TLVs—enabled by default (`lldp med-tlv-select` command)
- There is an LLDP-MED device connected to the port

**Example** To tell IP phones connected to `port1.0.5` to send voice data with DSCP value 27, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.5
awplus(config-if)# switchport voice dscp 27
```

**Related Commands** `lldp med-tlv-select`  
`show lldp`  
`switchport voice vlan`

# switchport voice vlan

**Overview** Use this command to configure the Voice VLAN tagging advertised when the transmission of LLDP-MED Network Policy TLVs for voice endpoint devices is enabled. When LLDP-MED capable IP phones receive this network policy information, they transmit voice data with the specified tagging. This command also sets the ports to be spanning tree edge ports, that is, it enables spanning tree portfast on the ports.

Use the **no** variant of this command to remove LLDP-MED network policy configuration for voice devices connected to these ports. This does not change the spanning tree edge port status.

**Syntax** `switchport voice vlan [<vid>|dot1p|dynamic|untagged]`  
`no switchport voice vlan`

| Parameter | Description                                                                                                                                                                                                                                   |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <vid>     | VLAN identifier, in the range 1 to 4094.                                                                                                                                                                                                      |
| dot1p     | The IP phone should send User Priority tagged packets, that is, packets in which the tag contains a User Priority value, and a VID of 0. (The User Priority tag is also known as the 802.1p priority tag, or the Class of Service (CoS) tag.) |
| dynamic   | The VLAN ID with which the IP phone should send tagged packets will be assigned by RADIUS authentication.                                                                                                                                     |
| untagged  | The IP phone should send untagged packets.                                                                                                                                                                                                    |

**Default** By default, no Voice VLAN is configured, and therefore no network policy is advertised for voice devices.

**Mode** Interface Configuration

**Usage** LLDP-MED advertisements including Network Policy TLVs are transmitted via a port if:

- LLDP is enabled ([lldp run](#) command)
- Voice VLAN is configured for the port using this command ([switchport voice vlan](#))
- The port is configured to transmit LLDP advertisements—enabled by default ([lldp transmit receive](#) command)
- The port is configured to transmit Network Policy TLVs—enabled by default ([lldp med-tlv-select](#) command)
- There is an LLDP-MED device connected to the port.

To set the priority value to be advertised for tagged frames, use the [switchport voice vlan priority](#) command.

If the Voice VLAN details are to be assigned by RADIUS, then the RADIUS server must be configured to send the attribute "Egress-VLANID (56)" or "Egress-VLAN-Name (58)" in the RADIUS Accept message when authenticating a phone attached to this port.

To set these attributes on the local RADIUS server, use the [egress-vlan-id](#) command or the [egress-vlan-name](#) command.

For more information about configuring authentication for Voice VLAN, see the [LLDP Feature Overview and Configuration Guide](#).

If the ports have been set to be edge ports by the [switchport voice vlan](#) command, the **no** variant of this command will leave them unchanged as edge ports. To set them back to their default non-edge port configuration, use the [spanning-tree edgeport \(RSTP and MSTP\)](#) command.

**Examples** To tell IP phones connected to `port1.0.5` to send voice data tagged for VLAN 10, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.5
awplus(config-if)# switchport voice vlan 10
```

To tell IP phones connected to ports 1.0.2-1.0.6 to send priority tagged packets (802.1p priority tagged with VID 0, so that they will be assigned to the port VLAN) use the following commands. The priority value is 5 by default, but can be configured with the [switchport voice vlan priority](#) command.

```
awplus# configure terminal
awplus(config)# interface port1.0.2-port1.0.6
awplus(config-if)# switchport voice vlan dot1p
```

To dynamically configure the VLAN ID advertised to IP phones connected to `port1.0.1` based on the VLAN assigned by RADIUS authentication (with RADIUS attribute "Egress-VLANID" or "Egress-VLAN-Name" in the RADIUS accept packet), use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# switchport voice vlan dynamic
```

To remove the Voice VLAN, and therefore disable the transmission of LLDP-MED network policy information for voice devices on `port1.0.6`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.6
awplus(config-if)# no switchport voice vlan
```



**Related  
Commands**

- egress-vlan-id
- egress-vlan-name
- lldp med-tlv-select
- spanning-tree edgeport (RSTP and MSTP)
- switchport voice dscp
- switchport voice vlan priority
- show lldp

# switchport voice vlan priority

**Overview** Use this command to configure the Layer 2 user priority advertised when the transmission of LLDP-MED Network Policy TLVs for voice devices is enabled. This is the priority in the User Priority field of the IEEE 802.1Q VLAN tag, also known as the Class of Service (CoS), or 802.1p priority. When LLDP-MED capable IP phones receive this network policy information, they transmit voice data with the specified priority.

**Syntax** `switchport voice vlan priority <0-7>`  
`no switchport voice vlan priority`

| Parameter                | Description                                   |
|--------------------------|-----------------------------------------------|
| <code>priority</code>    | Specify a user priority value for voice data. |
| <code>&lt;0-7&gt;</code> | Priority value.                               |

**Default** By default, the Voice VLAN user priority value is 5.

**Mode** Interface Configuration

**Usage** LLDP-MED advertisements including Network Policy TLVs are transmitted via a port if:

- LLDP is enabled ([lldp run](#) command)
- Voice VLAN is configured for the port ([switchport voice vlan](#) command)
- The port is configured to transmit LLDP advertisements—enabled by default ([lldp transmit receive](#) command)
- The port is configured to transmit Network Policy TLVs—enabled by default ([lldp med-tlv-select](#) command)
- There is an LLDP-MED device connected to the port.

To set the Voice VLAN tagging to be advertised, use the [switchport voice vlan](#) command.

**Example** To remove the Voice VLAN, and therefore disable the transmission of LLDP-MED network policy information for voice devices on `port1.0.6`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.6
awplus(config-if)# no switchport voice vlan
```

**Related Commands** [lldp med-tlv-select](#)  
[show lldp](#)  
[switchport voice vlan](#)

# vlan

**Overview** This command creates VLANs, assigns names to them, and enables or disables them. Specifying the `disable` state causes all forwarding over the specified VLAN ID to cease. Specifying the `enable` state allows forwarding of frames on the specified VLAN.

The **no** variant of this command destroys the specified VLANs.

**Syntax**

```
vlan <vid> [name <vlan-name>] [state {enable|disable}]  
vlan <vid-range> [state {enable|disable}]  
vlan {<vid>|<vlan-name>} [mtu <mtu-value>]  
no vlan {<vid>|<vid-range>} [mtu]
```

| Parameter   | Description                                                                                               |
|-------------|-----------------------------------------------------------------------------------------------------------|
| <vid>       | The VID of the VLAN to enable or disable in the range < <b>1-4094</b> >.                                  |
| <vlan-name> | The ASCII name of the VLAN. Maximum length: <b>32</b> characters.                                         |
| <vid-range> | Specifies a range of VLAN identifiers.                                                                    |
| <mtu-value> | Specifies the Maximum Transmission Unit (MTU) size in bytes, in the range 68 to 1500 bytes, for the VLAN. |
| enable      | Sets VLAN into an <code>enable</code> state.                                                              |
| disable     | Sets VLAN into a <code>disable</code> state.                                                              |

**Default** By default, VLANs are enabled when they are created.

**Mode** VLAN Configuration

**Examples**

```
awplus# configure terminal  
awplus(config)# vlan database  
awplus(config-vlan)# vlan 45 name accounts state enable  
awplus# configure terminal  
awplus(config)# vlan database  
awplus(config-vlan)# no vlan 45
```

**Related Commands**

- [mtu](#)
- [vlan database](#)
- [show vlan](#)

# vlan classifier activate

**Overview** Use this command in Interface Configuration mode to associate a VLAN classifier group with the switch port.

Use the **no** variant of this command to remove the VLAN classifier group from the switch port.

**Syntax** `vlan classifier activate <vlan-class-group-id>`  
`no vlan classifier activate <vlan-class-group-id>`

| Parameter                                | Description                                                     |
|------------------------------------------|-----------------------------------------------------------------|
| <code>&lt;vlan-class-group-id&gt;</code> | Specify a VLAN classifier group identifier in the range <1-16>. |

**Mode** Interface Configuration mode for a switch port.

**Usage** See the protocol-based VLAN configuration example in the [VLAN Feature Overview and Configuration Guide](#) for configuration details.

You cannot enter this command on a link aggregator. Enter it on the aggregator's switch ports instead.

**Example** To associate VLAN classifier group 3 with switch port `port1.0.3`, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.3
awplus(config-if)# vlan classifier activate 3
```

To remove VLAN classifier group 3 from switch port `port1.0.3`, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.3
awplus(config-if)# no vlan classifier activate 3
```

**Related Commands**

- [show vlan classifier rule](#)
- [vlan classifier group](#)
- [vlan classifier rule ipv4](#)
- [vlan classifier rule proto](#)

# vlan classifier group

**Overview** Use this command to create a group of VLAN classifier rules. The rules must already have been created.

Use the **no** variant of this command to delete a group of VLAN classifier rules.

**Syntax** `vlan classifier group <1-16> {add|delete} rule  
<vlan-class-rule-id>  
no vlan classifier group <1-16>`

| Parameter            | Description                          |
|----------------------|--------------------------------------|
| <1-16>               | VLAN classifier group identifier     |
| add                  | Add the rule to the group.           |
| delete               | Delete the rule from the group.      |
| <vlan-class-rule-id> | The VLAN classifier rule identifier. |

**Mode** Global Configuration

**Example** `awplus# configure terminal  
awplus(config)# vlan classifier group 3 add rule 5`

**Related  
Commands** [show vlan classifier rule](#)  
[vlan classifier activate](#)  
[vlan classifier rule ipv4](#)  
[vlan classifier rule proto](#)

# vlan classifier rule ipv4

**Overview** Use this command to create an IPv4 subnet-based VLAN classifier rule and map it to a specific VLAN. Use the **no** variant of this command to delete the VLAN classifier rule.

**Syntax** `vlan classifier rule <1-256> ipv4 <ip-addr/prefix-length> vlan <1-4094>`  
`no vlan classifier rule <1-256>`

| Parameter               | Description                                                                    |
|-------------------------|--------------------------------------------------------------------------------|
| <1-256>                 | Specify the VLAN Classifier Rule identifier.                                   |
| <ip-addr/prefix-length> | Specify the IP address and prefix length.                                      |
| <1-4094>                | Specify a VLAN ID to which an untagged packet is mapped in the range <1-4094>. |

**Mode** Global Configuration

**Usage** If the source IP address matches the IP subnet specified in the VLAN classifier rule, the received packets are mapped to the specified VLAN.

**Example** `awplus# configure terminal`  
`awplus(config)# vlan classifier rule 3 ipv4 3.3.3.3/8 vlan 5`

**Related Commands** [show vlan classifier rule](#)  
[vlan classifier activate](#)  
[vlan classifier rule proto](#)

## vlan classifier rule proto

**Overview** Use this command to create a protocol type-based VLAN classifier rule, and map it to a specific VLAN. See the published IANA EtherType IEEE 802 numbers here:

[www.iana.org/assignments/ieee-802-numbers/ieee-802-numbers.txt](http://www.iana.org/assignments/ieee-802-numbers/ieee-802-numbers.txt).

Instead of a protocol name the decimal value of the protocol's EtherType can be entered. The EtherType field is a two-octet field in an Ethernet frame. It is used to show which protocol is encapsulated in the payload of the Ethernet frame. Note that EtherTypes in the IANA 802 numbers are given as hexadecimal values.

The **no** variant of this command removes a previously set rule.

**Syntax**

```
vlan classifier rule <1-256> proto <protocol> encap  
{ethv2|nosnapllc|snapllc} vlan <1-4094>  
  
no vlan classifier rule <1-256>
```

| Parameter                   | Description                                                                                          |
|-----------------------------|------------------------------------------------------------------------------------------------------|
| <1-256>                     | VLAN Classifier identifier                                                                           |
| proto                       | Protocol type                                                                                        |
| <protocol>                  | Specify a protocol either by its decimal number (0-65535) or by one of the following protocol names: |
| [arp 2054]                  | Address Resolution protocol                                                                          |
| [atalkarp 33011]            | Appletalk AARP protocol                                                                              |
| [atalkddp 32923]            | Appletalk DDP protocol                                                                               |
| [atmmulti 34892]            | MultiProtocol Over ATM protocol                                                                      |
| [atmtransport 34948]        | Frame-based ATM Transport protocol                                                                   |
| [dec 24576]                 | DEC Assigned protocol                                                                                |
| [deccustom 24582]           | DEC Customer use protocol                                                                            |
| [decdiagnostics 24581]      | DEC Systems Comms Arch protocol                                                                      |
| [decdnadumpload 24577]      | DEC DNA Dump/Load protocol                                                                           |
| [decdnareMOTEconsole 24578] | DEC DNA Remote Console protocol                                                                      |
| [decdnarouting 24579]       | DEC DNA Routing protocol                                                                             |
| [declat 24580]              | DEC LAT protocol                                                                                     |

| Parameter            | Description                                                                   |
|----------------------|-------------------------------------------------------------------------------|
| [decsyscomm 24583]   | DEC Systems Comms Arch protocol                                               |
| [g8bpqx25 2303]      | G8BPQ AX.25 protocol                                                          |
| [ieeeaddrtrans 2561] | Xerox IEEE802.3 PUP Address                                                   |
| [ieeepup 2560]       | Xerox IEEE802.3 PUP protocol                                                  |
| [ip 2048]            | IP protocol                                                                   |
| [ipv6 34525]         | IPv6 protocol                                                                 |
| [ipx 33079]          | IPX protocol                                                                  |
| [netbeui 61680]      | IBM NETBIOS/NETBEUI protocol                                                  |
| [netbeui 61681]      | IBM NETBIOS/NETBEUI protocol                                                  |
| [pppdiscovery 34915] | PPPoE discovery protocol                                                      |
| [pppsession 34916]   | PPPoE session protocol                                                        |
| [rarp 32821]         | Reverse Address Resolution protocol                                           |
| [x25 2056]           | CCITT.25 protocol                                                             |
| [xeroxaddrtrans 513] | Xerox PUP Address Translation protocol                                        |
| [xeroxpup 512]       | Xerox PUP protocol                                                            |
| ethv2                | Ethernet Version 2 encapsulation                                              |
| nosnapllc            | LLC without SNAP encapsulation                                                |
| snapllc              | LLC SNAP encapsulation                                                        |
| <1-4094>             | Specify a VLAN ID to which an untagged packet is mapped in the range <1-4094> |

**Mode** Global Configuration

**Usage** If the protocol type matches the protocol specified in the VLAN classifier rule, the received packets are mapped to the specified VLAN. Ethernet Frame Numbers may be entered in place of the protocol names listed. For a full list please refer to the IANA list  
online:[www.iana.org/assignments/ieee-802-numbers/ieee-802-numbers.txt](http://www.iana.org/assignments/ieee-802-numbers/ieee-802-numbers.txt)



**Examples**

```
awplus# configure terminal
awplus(config)# vlan classifier rule 1 proto x25 encaps ethv2
vlan 2
awplus(config)# vlan classifier rule 2 proto 512 encaps ethv2
vlan 2
awplus(config)# vlan classifier rule 3 proto 2056 encaps ethv2
vlan 2
awplus(config)# vlan classifier rule 4 proto 2054 encaps ethv2
vlan 2
awplus(config)# vlan classifier rule 5 proto encaps ethv2 vlan
234525
awplus(config)# vlan classifier rule 6 proto encaps ethv2 vlan
2ipv6
awplus(config)# vlan classifier rule 7 proto encaps ethv2 vlan
22048
awplus(config)# vlan classifier rule 8 proto encaps ethv2 vlan
2ip
```

**Validation Output**

```
awplus# show vlan classifier rule
```

```
vlan classifier rule 16 proto rarp encaps ethv2 vlan 2
vlan classifier rule 8 proto encaps ethv2 vlan 2
vlan classifier rule 4 proto arp encaps ethv2 vlan 2
vlan classifier rule 3 proto xeroxpup encaps ethv2 vlan 2
vlan classifier rule 2 proto ip encaps ethv2 vlan 2
vlan classifier rule 1 proto ipv6 encaps ethv2 vlan 2
```

**Related Commands**

- [show vlan classifier rule](#)
- [vlan classifier activate](#)
- [vlan classifier group](#)

# vlan database

**Overview** Use this command to enter the VLAN Configuration mode.

**Syntax** `vlan database`

**Mode** Global Configuration

**Usage** Use this command to enter the VLAN configuration mode. You can then add or delete a VLAN, or modify its values.

**Example** In the following example, note the change to VLAN configuration mode from Configure mode:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)#
```

**Related  
Commands** [vlan](#)

# vlan mode stack-local-vlan

**Overview** This command enables you to create stack-local-VLANs and use ICMP to monitor and diagnose issues within specific members of the stack. When a VLAN is added using this method, all its traffic will be trapped to and processed by the CPU of the specific local stack member, rather than the CPU of the stack master.

**Syntax** `vlan <vid> mode stack-local-vlan <member-id>`  
`no vlan <vid>`

| Parameter             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <vid>                 | The VID of the VLAN to be created in the range 2-4094. We recommend that the first stack-local-vlan be assigned the number 4001 for the first stack member, then incremented by one for each stack member. For example, a stack of four members would be assigned the following VID numbers: <ul style="list-style-type: none"><li>• stack member one: VID 4001</li><li>• stack member two: VID 4002</li><li>• stack member three: VID 4003</li><li>• stack member four: VID 4004</li></ul> |
| mode stack-local-vlan | Specifies that the new VLAN will function as a stack-local-VLAN.                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <member-id>           | Specifies the new stack member ID. Enter a decimal number in the range 1-8.                                                                                                                                                                                                                                                                                                                                                                                                                 |

**Default** By default, VLANs are automatically enabled as they are added.

**Mode** VLAN Configuration

**Usage** If IGMP snooping is operating on a stack-local-VLAN, the device will try to process some multicast traffic via that VLAN, if it is connected to a Microsoft Windows PC.

To avoid this, we recommend disabling IGMP snooping on stack-local-VLANs, by using the command **no ip igmp snooping**.

**Examples** To add a stack-local-VLAN with the VID of 4002 and assign it to stack member 2, use the following commands:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# vlan 4002 mode stack-local-vlan 2
awplus(config-vlan)# exit
awplus(config)# interface vlan4002
awplus(config-if)# no ip igmp snooping
```

To remove VLAN 4002, use the following commands:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# no vlan 4002
```

**Related  
Commands**

[ip igmp snooping](#)  
[mtu](#)  
[vlan database](#)

# vlan statistics

**Overview** This command creates a VLAN packet counter instance, and enables you to add one or more ports to a defined counter instance. This command can only be applied to switch ports. You cannot apply it to aggregated links or eth ports.

The **no** variant of this command enables the deletion of VLAN packet counter instances, or for removing one or more ports that are currently mapped to a counter instance. Note that the selected range of ports must all be switch ports.

**NOTE:**

*In describing this command, the terms frame and packet are used interchangeably.*

**Syntax** `vlan <vid> statistics name <instance_name>`  
`no vlan statistics name <instance_name>`

| Parameter       | Description                                                                     |
|-----------------|---------------------------------------------------------------------------------|
| <vid>           | The VID of the VLAN that is associated with <instance-name>.                    |
| <instance-name> | The name of the instance for which incoming frames and their bytes are counted. |

**Mode** Interface Configuration

**Usage** A maximum of 128 packet counter instances can be created. When the first instance is configured, the switch will reserve sufficient resources to support 128 packet counter instances. These resources are also shared with other features such as QoS and ACLs. Where the remaining resources are insufficient to support the VLAN Statistics feature the feature will not be enabled, and an error message will display.

**Examples** Create a VLAN packet counter instance named **vlan2-data**, and apply this to count incoming vlan2 tagged frames on ports 1.0.4 and 1.0.5.

```
awplus# configure terminal
awplus(config)# interface port1.0.4,port1.0.5
awplus(config-if)# vlan 2 statistics name vlan2-data
```

From the previous example, add ports in the range 1.0.2 to 1.0.3 to the VLAN packet counter instance. The **vlan2-data** instance will now count all incoming vlan2 tagged frames on ports within the range 1.0.1 to 1.0.5.

```
awplus(config)# interface port1.0.2-port1.0.3
awplus(config-if)# vlan 2 statistics name vlan2-data
```

To remove port1.0.5 from the packet counter instance named **vlan2-data**.

```
awplus(config)# interface port1.0.5
awplus(config-if)# no vlan statistics name vlan2-data
```

To remove the remaining ports 1.0.2 to 1.0.4 from the packet counter instance named **vlan2-data**. Note that because there are no ports associated with the **vlan2-data**, this instance will be removed.

```
awplus(config)# interface port1.0.2-port1.0.4
```

```
awplus(config-if)# no vlan statistics name vlan2-data
```

**Related  
Commands**

[clear vlan statistics](#)

[show vlan statistics](#)

# 14

# Spanning Tree Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure RSTP, STP or MSTP. For information about spanning trees, including configuration procedures, see the [STP Feature Overview and Configuration Guide](#).

- Command List**
- [“clear spanning-tree statistics”](#) on page 525
  - [“clear spanning-tree detected protocols \(RSTP and MSTP\)”](#) on page 526
  - [“debug mstp \(RSTP and STP\)”](#) on page 527
  - [“instance priority \(MSTP\)”](#) on page 531
  - [“instance vlan \(MSTP\)”](#) on page 533
  - [“region \(MSTP\)”](#) on page 535
  - [“revision \(MSTP\)”](#) on page 536
  - [“show debugging mstp”](#) on page 537
  - [“show spanning-tree”](#) on page 538
  - [“show spanning-tree brief”](#) on page 541
  - [“show spanning-tree mst”](#) on page 542
  - [“show spanning-tree mst config”](#) on page 543
  - [“show spanning-tree mst detail”](#) on page 544
  - [“show spanning-tree mst detail interface”](#) on page 546
  - [“show spanning-tree mst instance”](#) on page 548
  - [“show spanning-tree mst instance interface”](#) on page 549
  - [“show spanning-tree mst interface”](#) on page 550
  - [“show spanning-tree mst detail interface”](#) on page 551
  - [“show spanning-tree statistics”](#) on page 553

- ["show spanning-tree statistics instance"](#) on page 555
- ["show spanning-tree statistics instance interface"](#) on page 556
- ["show spanning-tree statistics interface"](#) on page 558
- ["show spanning-tree vlan range-index"](#) on page 560
- ["spanning-tree autoedge \(RSTP and MSTP\)"](#) on page 561
- ["spanning-tree bpdu"](#) on page 562
- ["spanning-tree cisco-interoperability \(MSTP\)"](#) on page 564
- ["spanning-tree edgeport \(RSTP and MSTP\)"](#) on page 565
- ["spanning-tree enable"](#) on page 566
- ["spanning-tree errdisable-timeout enable"](#) on page 568
- ["spanning-tree errdisable-timeout interval"](#) on page 569
- ["spanning-tree force-version"](#) on page 570
- ["spanning-tree forward-time"](#) on page 571
- ["spanning-tree guard root"](#) on page 572
- ["spanning-tree hello-time"](#) on page 573
- ["spanning-tree link-type"](#) on page 574
- ["spanning-tree max-age"](#) on page 575
- ["spanning-tree max-hops \(MSTP\)"](#) on page 576
- ["spanning-tree mode"](#) on page 577
- ["spanning-tree mst configuration"](#) on page 578
- ["spanning-tree mst instance"](#) on page 579
- ["spanning-tree mst instance path-cost"](#) on page 580
- ["spanning-tree mst instance priority"](#) on page 582
- ["spanning-tree mst instance restricted-role"](#) on page 583
- ["spanning-tree mst instance restricted-tcn"](#) on page 585
- ["spanning-tree path-cost"](#) on page 586
- ["spanning-tree portfast \(STP\)"](#) on page 587
- ["spanning-tree portfast bpdu-filter"](#) on page 589
- ["spanning-tree portfast bpdu-guard"](#) on page 591
- ["spanning-tree priority \(bridge priority\)"](#) on page 593
- ["spanning-tree priority \(port priority\)"](#) on page 594
- ["spanning-tree restricted-role"](#) on page 595
- ["spanning-tree restricted-tcn"](#) on page 596
- ["spanning-tree transmit-holdcount"](#) on page 597
- ["undebg mstp"](#) on page 598



# clear spanning-tree statistics

**Overview** Use this command to clear all the STP BPDU (Bridge Protocol Data Unit) statistics.

**Syntax** `clear spanning-tree statistics`  
`clear spanning-tree statistics [instance <mstp-instance>]`  
`clear spanning-tree statistics [interface <port> [instance <mstp-instance>]]`

| Parameter       | Description                                                                                                                                                                                                           |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port>          | The port to clear STP BPDU statistics for. The port may be a switch port (e.g. <code>port1.0.4</code> ), a static channel group (e.g. <code>sa2</code> ), or a dynamic (LACP) channel group (e.g. <code>po2</code> ). |
| <mstp-instance> | The MSTP instance (MSTI - Multiple Spanning Tree Instance) to clear MSTP BPDU statistics.                                                                                                                             |

**Mode** User Exec and Privileged Exec

**Usage** Use this command with the **instance** parameter in MSTP mode. Specifying this command with the **interface** parameter only not the instance parameter will work in STP and RSTP mode.

**Examples** `awplus# clear spanning-tree statistics`  
`awplus# clear spanning-tree statistics instance 1`  
`awplus# clear spanning-tree statistics interface port1.0.2`  
`awplus# clear spanning-tree statistics interface port1.0.2 instance 1`

# clear spanning-tree detected protocols (RSTP and MSTP)

**Overview** Use this command to clear the detected protocols for a specific port, or all ports.  
Use this command in RSTP or MSTP mode only.

**Syntax** `clear spanning-tree detected protocols [interface <port>]`

| Parameter | Description                                                                                                                                                                                                          |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port>    | The port to clear detected protocols for. The port may be a switch port (e.g. <code>port1.0.4</code> ), a static channel group (e.g. <code>sa2</code> ), or a dynamic (LACP) channel group (e.g. <code>po2</code> ). |

**Mode** Privileged Exec

**Example** `awplus# clear spanning-tree detected protocols`

# debug mstp (RSTP and STP)

**Overview** Use this command to enable debugging for the configured spanning tree mode, and echo data to the console, at various levels. Note that although this command uses the keyword **mstp** it displays debugging output for RSTP and STP protocols as well the MSTP protocol.

Use the **no** variant of this command to disable spanning tree debugging.

**Syntax**

```
debug mstp {all|cli|protocol [detail]|timer [detail]}
debug mstp {packet {rx|tx} [decode] [interface <interface>]}
debug mstp {topology-change [interface <interface>]}
no debug mstp {all|cli|protocol [detail]|timer [detail]}
no debug mstp {packet {rx|tx} [decode] [interface <interface>]}
no debug mstp {topology-change [interface <interface>]}
```

| Parameter       | Description                                                             |
|-----------------|-------------------------------------------------------------------------|
| all             | Echoes all spanning tree debugging levels to the console.               |
| cli             | Echoes spanning tree commands to the console.                           |
| packet          | Echoes spanning tree packets to the console.                            |
| rx              | Received packets.                                                       |
| tx              | Transmitted packets.                                                    |
| protocol        | Echoes protocol changes to the console.                                 |
| timer           | Echoes timer information to the console.                                |
| detail          | Detailed output.                                                        |
| decode          | Interprets packet contents                                              |
| topology-change | Interprets topology change messages                                     |
| interface       | Keyword before <interface> placeholder to specify an interface to debug |
| <interface>     | Placeholder used to specify the name of the interface to debug.         |

**Mode** Privileged Exec and Global Configuration mode

**Usage 1** Use the **debug mstp topology-change interface** command to generate debugging messages when the device receives an indication of a topology change in a BPDU from another device. The debugging can be activated on a per-port basis. Although this command uses the keyword **mstp**, it displays debugging output for RSTP and STP protocols as well as the MSTP protocol.

Due to the likely volume of output, these debug messages are best viewed using the [terminal monitor](#) command before issuing the relevant **debug mstp**

command. The default terminal monitor filter will select and display these messages. Alternatively, the messages can be directed to any of the other log outputs by adding a filter for the MSTP application using [log buffered \(filter\)](#) command:

```
awplus# configure terminal
awplus(config)# log buffered program mstp
```

### Output 1

```
awplus#terminal monitor
awplus#debug mstp topology-change interface port1.0.4
10:09:09 awplus MSTP[1409]: Topology change rcvd on port1.0.4 (internal)
10:09:09 awplus MSTP[1409]: Topology change rcvd on MSTI 1 port1.0.4
aawplus#debug mstp topology-change interface port1.0.6
10:09:29 awplus MSTP[1409]: Topology change rcvd on port1.0.6 (external)
10:09:29 awplus MSTP[1409]: Topology change rcvd on MSTI 1 port1.0.6
```

**Usage 2** Use the **debug mstp packet rx|tx decode interface** command to generate debugging messages containing the entire contents of a BPDU displayed in readable text for transmitted and received xSTP BPDUs. The debugging can be activated on a per-port basis and transmit and receive debugging is controlled independently. Although this command uses the keyword **mstp**, it displays debugging output for RSTP and STP protocols as well as the MSTP protocol.

Due to the likely volume of output, these debug messages are best viewed using the [terminal monitor](#) command before issuing the relevant **debug mstp** command. The default terminal monitor filter will select and display these messages. Alternatively, the messages can be directed to any of the other log outputs by adding a filter for the MSTP application using the [log buffered \(filter\)](#) command:

```
awplus(config)# log buffered program mstp
```

**Output 2** In MSTP mode - an MSTP BPDU with 1 MSTI:

```
awplus#terminal monitor
awplus#debug mstp packet rx decode interface port1.0.4
17:23:42 awplus MSTP[1417]: port1.0.4 xSTP BPDU rx - start
17:23:42 awplus MSTP[1417]: Protocol version: MSTP, BPDU type: RST
17:23:42 awplus MSTP[1417]: CIST Flags: Agree Forward Learn role=Desig
17:23:42 awplus MSTP[1417]: CIST root id      : 0000:0000cd1000fe
17:23:42 awplus MSTP[1417]: CIST ext pathcost : 0
17:23:42 awplus MSTP[1417]: CIST reg root id  : 0000:0000cd1000fe
17:23:42 awplus MSTP[1417]: CIST port id     : 8001 (128:1)
17:23:42 awplus MSTP[1417]: msg age: 0 max age: 20 hellotime: 2 fwd delay: 15
17:23:42 awplus MSTP[1417]: Version 3 length : 80
17:23:42 awplus MSTP[1417]: Format id        : 0
17:23:42 awplus MSTP[1417]: Config name      : test
17:23:42 awplus MSTP[1417]: Revision level   : 0
17:23:42 awplus MSTP[1417]: Config digest    : 3ab68794d602fdf43b21c0b37ac3bca8
17:23:42 awplus MSTP[1417]: CIST int pathcost : 0
17:23:42 awplus MSTP[1417]: CIST bridge id    : 0000:0000cd1000fe
17:23:42 awplus MSTP[1417]: CIST hops remaining : 20
17:23:42 awplus MSTP[1417]: MSTI flags        : Agree Forward Learn role=Desig
17:23:42 awplus MSTP[1417]: MSTI reg root id  : 8001:0000cd1000fe
17:23:42 awplus MSTP[1417]: MSTI pathcost     : 0
17:23:42 awplus MSTP[1417]: MSTI bridge priority : 32768 port priority : 128
17:23:42 awplus MSTP[1417]: MSTI hops remaining : 20
17:23:42 awplus MSTP[1417]: port1.0.4 xSTP BPDU rx - finish
```

In STP mode transmitting a TCN BPDU:

```
awplus#terminal monitor
awplus#debug mstp packet tx decode interface port1.0.4
17:28:09 awplus MSTP[1417]: port1.0.4 xSTP BPDU tx - start
17:28:09 awplus MSTP[1417]: Protocol version: STP, BPDU type: TCN
17:28:09 awplus MSTP[1417]: port1.0.4 xSTP BPDU tx - finish
```

In STP mode receiving an STP BPDU:

```
awplus#terminal monitor
awplus#debug mstp packet rx decode interface port1.0.4
17:31:36 awplus MSTP[1417]: port1.0.4 xSTP BPDU rx - start
17:31:36 awplus MSTP[1417]: Protocol version: STP, BPDU type: Config
17:31:36 awplus MSTP[1417]: Flags: role=none
17:31:36 awplus MSTP[1417]: Root id          : 8000:0000cd1000fe
17:31:36 awplus MSTP[1417]: Root pathcost    : 0
17:31:36 awplus MSTP[1417]: Bridge id       : 8000:0000cd1000fe
17:31:36 awplus MSTP[1417]: Port id         : 8001 (128:1)
17:31:36 awplus MSTP[1417]: msg age: 0 max age: 20 hellotime: 2 fwd delay: 15
17:31:36 awplus MSTP[1417]: port1.0.4 xSTP BPDU rx - finish
```

In RSTP mode receiving an RSTP BPDU:

```
awplus#terminal monitor
awplus#debug mstp packet rx decode interface port1.0.4
awplus#17:30:17 awplus MSTP[1417]: port1.0.4 xSTP BPDU rx - start
17:30:17 awplus MSTP[1417]: Protocol version: RSTP, BPDU type: RST
17:30:17 awplus MSTP[1417]: CIST Flags: Forward Learn role=Desig
17:30:17 awplus MSTP[1417]: CIST root id      : 8000:0000cd1000fe
17:30:17 awplus MSTP[1417]: CIST ext pathcost : 0
17:30:17 awplus MSTP[1417]: CIST reg root id  : 8000:0000cd1000fe
17:30:17 awplus MSTP[1417]: CIST port id     : 8001 (128:1)
17:30:17 awplus MSTP[1417]: msg age: 0 max age: 20 hellotime: 2 fwd delay: 15
17:30:17 awplus MSTP[1417]: port1.0.4 xSTP BPDU rx - finish
```

### Examples

```
awplus# debug mstp all
awplus# debug mstp cli
awplus# debug mstp packet rx
awplus# debug mstp protocol detail
awplus# debug mstp timer
awplus# debug mstp packet rx decode interface port1.0.2
awplus# debug mstp packet tx decode interface port1.0.6
```

### Related Commands

[log buffered \(filter\)](#)  
[show debugging mstp](#)  
[terminal monitor](#)  
[undebug mstp](#)

# instance priority (MSTP)

**Overview** Use this command to set the priority for this device to become the root bridge for the specified MSTI (Multiple Spanning Tree Instance).

Use this command for MSTP only.

Use the **no** variant of this command to restore the root bridge priority of the device for the instance to the default.

**Syntax** `instance <instance-id> priority <priority>`  
`no instance <instance-id> priority`

| Parameter                        | Description                                                                                                                                                                                                                                                                                                                                                              |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;instance-id&gt;</code> | Specify an MSTP instance in the range 1-15.                                                                                                                                                                                                                                                                                                                              |
| <code>&lt;priority&gt;</code>    | Specify the root bridge priority for the device for the MSTI in the range <0-61440>. Note that a lower priority number indicates a greater likelihood of the device becoming the root bridge. The priority values can be set only in increments of 4096. If you specify a number that is not a multiple of 4096, it will be rounded down. The default priority is 32768. |

**Default** The default priority value for all instances is 32768.

**Mode** MST Configuration

**Usage** MSTP lets you distribute traffic more efficiently across a network by blocking different links for different VLANs. You do this by making different devices into the root bridge for each MSTP instance, so that each instance blocks a different link.

If all devices have the same root bridge priority for the instance, MSTP selects the device with the lowest MAC address to be the root bridge. Give the device a higher priority for becoming the root bridge for a particular instance by assigning it a lower priority number, or vice versa.

**Examples** To set the root bridge priority for MSTP instance 2 to be the highest (0), so that it will be the root bridge for this instance when available, use the commands:

```
awplus# configure terminal
awplus(config)# spanning-tree mst configuration
awplus(config-mst)# instance 2 priority 0
```

To reset the root bridge priority for instance 2 to the default (32768), use the commands:

```
awplus# configure terminal
awplus(config)# spanning-tree mst configuration
awplus(config-mst)# no instance 2 priority
```

**Related  
Commands**

- region (MSTP)
- revision (MSTP)
- show spanning-tree mst config
- spanning-tree mst instance
- spanning-tree mst instance priority



# instance vlan (MSTP)

**Overview** Use this command to create an MST Instance (MSTI), and associate the specified VLANs with it. An MSTI is a spanning tree instance that exists within an MST region (MSTR).

When a VLAN is associated with an MSTI the member ports of the VLAN are automatically configured to send and receive spanning-tree information for the associated MSTI. You can disable this automatic configuration of member ports of the VLAN to the associated MSTI by using a **no spanning-tree mst instance** command to remove the member port from the MSTI.

Use the **instance vlan** command for MSTP only.

Use the **no** variant of this command to remove the specified VLANs from the MSTI.

**Syntax** `instance <instance-id> vlan <vid-list>`  
`no instance <instance-id> vlan <vid-list>`

| Parameter     | Description                                                                                                                                                                                           |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <instance-id> | Specify an MSTP instance in the range 1-15.                                                                                                                                                           |
| <vid-list>    | Specify one or more VLAN identifiers (VID) to be associated with the MSTI specified. This can be a single VID in the range 1-4094, or a hyphen-separated range or a comma-separated list of VLAN IDs. |

**Mode** MST Configuration

**Usage** The VLANs must be created before being associated with an MST instance (MSTI). If the VLAN range is not specified, the MSTI will not be created.

This command removes the specified VLANs from the CIST and adds them to the specified MSTI. If you use the **no** variant of this command to remove the VLAN from the MSTI, it returns it to the CIST. To move a VLAN from one MSTI to another, you must first use the **no** variant of this command to return it to the CIST.

Ports in these VLANs will remain in the control of the CIST until you associate the ports with the MSTI using the [spanning-tree mst instance](#) command.

**Example** To associate VLAN 30 with MSTI 2, use the commands:

```
awplus# configure terminal
awplus(config)# spanning-tree mode mstp
awplus(config)# spanning-tree mst configuration
awplus(config-mst)# instance 2 vlan 30
```

**Related  
Commands**

- region (MSTP)
- revision (MSTP)
- show spanning-tree mst config
- spanning-tree mst instance
- vlan

## region (MSTP)

**Overview** Use this command to assign a name to the device's MST Region. MST Instances (MSTI) of a region form different spanning trees for different VLANs.

Use this command for MSTP only.

Use the **no** variant of this command to remove this region name and reset it to the default.

**Syntax** `region <region-name>`  
`no region`

| Parameter                        | Description                                                                                                           |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <code>&lt;region-name&gt;</code> | Specify the name of the region, up to 32 characters. Valid characters are upper-case, lower-case, digits, underscore. |

**Default** By default, the region name is My Name.

**Mode** MST Configuration

**Usage** The region name, the revision number, and the digest of the VLAN to MSTI configuration table must be the same on all devices that are intended to be in the same MST region.

**Example** `awplus# configure terminal`  
`awplus(config)# spanning-tree mst configuration`  
`awplus(config-mst)# region ATL`

**Related Commands** [revision \(MSTP\)](#)  
[show spanning-tree mst config](#)

## revision (MSTP)

**Overview** Use this command to specify the MST revision number to be used in the configuration identifier.

Use this command for MSTP only.

**Syntax** `revision <revision-number>`

| Parameter                            | Description                                   |
|--------------------------------------|-----------------------------------------------|
| <code>&lt;revision-number&gt;</code> | <code>&lt;0-65535&gt;</code> Revision number. |

**Default** The default of revision number is 0.

**Mode** MST Configuration

**Usage** The region name, the revision number, and the digest of the VLAN to MSTI configuration table must be the same on all devices that are intended to be in the same MST region.

**Example**

```
awplus# configure terminal
awplus(config)# spanning-tree mst configuration
awplus(config-mst)# revision 25
```

**Related Commands**

- [region \(MSTP\)](#)
- [show spanning-tree mst config](#)
- [instance vlan \(MSTP\)](#)

# show debugging mstp

**Overview** Use this command to show the MSTP debugging options set.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show debugging mstp`

**Mode** User Exec and Privileged Exec mode

**Example** To display the MSTP debugging options set, enter the command:

```
awplus# show debugging mstp
```

**Output** Figure 14-1: Example output from **show debugging mstp**

```
MSTP debugging status:
MSTP receiving packet debugging is on
```

**Related Commands** [debug mstp \(RSTP and STP\)](#)

# show spanning-tree

**Overview** Use this command to display detailed spanning tree information on the specified port or on all ports. Use this command for RSTP, MSTP or STP.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show spanning-tree [interface <port-list>]`

| Parameter   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| interface   | Display information about the following port only.                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <port-list> | The ports to display information about. A port-list can be: <ul style="list-style-type: none"><li>• a switch port (e.g. port1.0.6) a static channel group (e.g. sa2) or a dynamic (LACP) channel group (e.g. po2)</li><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-1.0.4, or sa1-2, or po1-2</li><li>• a comma-separated list of ports and port ranges, e.g. port1.0.1, port1.0.4-1.0.6. Do not mix switch ports, static channel groups, and dynamic (LACP) channel groups in the same list</li></ul> |

**Mode** User Exec and Privileged Exec

**Usage** Note that any list of interfaces specified must not span any interfaces that are not installed.

A topology change counter has been included for RSTP and MSTP. You can see the topology change counter for RSTP by using the **show spanning-tree** command. You can see the topology change counter for MSTP by using the **show spanning-tree mst instance** command.

**Example** To display spanning tree information about port1.0.3, use the command:

```
awplus# show spanning-tree interface port1.0.3
```

**Output** Figure 14-2: Example output from **show spanning-tree** in RSTP mode

```
awplus#show spanning-tree
% 1: Bridge up - Spanning Tree Enabled
% 1: Root Path Cost 0 - Root Port 0 - Bridge Priority 32768
% 1: Forward Delay 15 - Hello Time 2 - Max Age 20
% 1: Root Id 80000000cd24ff2d
% 1: Bridge Id 80000000cd24ff2d
% 1: last topology change Thu Jul 26 02:06:26 2007
% 1: portfast bpdu-filter disabled
% 1: portfast bpdu-guard disabled
% 1: portfast errdisable timeout disabled
% 1: portfast errdisable timeout interval 300 sec
% port1.0.1: Port 5001 - Id 8389 - Role Disabled - State Discarding
% port1.0.1: Designated Path Cost 0
% port1.0.1: Configured Path Cost 20000000 - Add type Explicit ref count 1
% port1.0.1: Designated Port Id 8389 - Priority 128 -
% port1.0.1: Root 80000000cd24ff2d
% port1.0.1: Designated Bridge 80000000cd24ff2d
% port1.0.1: Message Age 0 - Max Age 20
% port1.0.1: Hello Time 2 - Forward Delay 15
% port1.0.1: Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0 - topo change
timer 0
% port1.0.1: forward-transitions 0
% port1.0.1: Version Rapid Spanning Tree Protocol - Received None - Send STP
% port1.0.1: No portfast configured - Current portfast off
% port1.0.1: portfast bpdu-guard default - Current portfast bpdu-guard off
% port1.0.1: portfast bpdu-filter default - Current portfast bpdu-filter off
% port1.0.1: no root guard configured - Current root guard off
% port1.0.1: Configured Link Type point-to-point - Current shared
%
% port1.0.2: Port 5002 - Id 838a - Role Disabled - State Discarding
% port1.0.2: Designated Path Cost 0
% port1.0.2: Configured Path Cost 20000000 - Add type Explicit ref count 1
% port1.0.2: Designated Port Id 838a - Priority 128 -
% port1.0.2: Root 80000000cd24ff2d
% port1.0.2: Designated Bridge 80000000cd24ff2d
% port1.0.2: Message Age 0 - Max Age 20
% port1.0.2: Hello Time 2 - Forward Delay 15
% port1.0.2: Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0 - topo change
timer 0
% port1.0.2: forward-transitions 0
% port1.0.2: Version Rapid Spanning Tree Protocol - Received None - Send STP
% port1.0.2: No portfast configured - Current portfast off
% port1.0.2: portfast bpdu-guard default - Current portfast bpdu-guard off
% port1.0.2: portfast bpdu-filter default - Current portfast bpdu-filter off
% port1.0.2: no root guard configured - Current root guard off
% port1.0.2: Configured Link Type point-to-point - Current shared
```

**Output** Figure 14-3: Example output from **show spanning-tree**

```
% 1: Bridge up - Spanning Tree Enabled
% 1: Root Path Cost 0 - Root Port 0 - Bridge Priority 32768
% 1: Forward Delay 15 - Hello Time 2 - Max Age 20
% 1: Root Id 80000000cd20f093
% 1: Bridge Id 80000000cd20f093
% 1: last topology change Sun Nov 20 12:24:24 1977
% 1: portfast bpdu-filter disabled
% 1: portfast bpdu-guard disabled
% 1: portfast errdisable timeout disabled
% 1: portfast errdisable timeout interval 300 sec
%   port1.0.3: Port 5023 - Id 839f - Role Designated - State Forwarding
%   port1.0.3: Designated Path Cost 0
%   port1.0.3: Configured Path Cost 200000 - Add type Explicit ref count 1
%   port1.0.3: Designated Port Id 839f - Priority 128 -
%   port1.0.3: Root 80000000cd20f093
%   port1.0.3: Designated Bridge 80000000cd20f093
%   port1.0.3: Message Age 0 - Max Age 20
%   port1.0.3: Hello Time 2 - Forward Delay 15
%   port1.0.3: Forward Timer 0 - Msg Age Timer 0 - Hello Timer 1 - topo change
timer 0
%   port1.0.3: forward-transitions 32
%   port1.0.3: Version Rapid Spanning Tree Protocol - Received None - Send RSTP
%   port1.0.3: No portfast configured - Current portfast off
%   port1.0.3: portfast bpdu-guard default - Current portfast bpdu-guard off
%   port1.0.3: portfast bpdu-filter default - Current portfast bpdu-filter off
%   port1.0.3: no root guard configured - Current root guard off
%   port1.0.3: Configured Link Type point-to-point - Current point-to-point
...
```



# show spanning-tree brief

**Overview** Use this command to display a summary of spanning tree status information on all ports. Use this command for RSTP, MSTP or STP.

**Syntax** `show spanning-tree brief`

| Parameter | Description                                   |
|-----------|-----------------------------------------------|
| brief     | A brief summary of spanning tree information. |

**Mode** User Exec and Privileged Exec

**Usage** Note that any list of interfaces specified must not span any interfaces that are not installed.

A topology change counter has been included for RSTP and MSTP. You can see the topology change counter for RSTP by using the **show spanning-tree** command. You can see the topology change counter for MSTP by using the **show spanning-tree mst instance** command.

**Example** To display a summary of spanning tree status information, use the command:

```
awplus# show spanning-tree brief
```

**Output** Figure 14-4: Example output from **show spanning-tree brief**

|                                                                        |                   |         |            |            |
|------------------------------------------------------------------------|-------------------|---------|------------|------------|
| Default: Bridge up - Spanning Tree Enabled                             |                   |         |            |            |
| Default: Root Path Cost 40000 - Root Port 4501 - Bridge Priority 32768 |                   |         |            |            |
| Default: Root Id 8000:0000cd250001                                     |                   |         |            |            |
| Default: Bridge Id 8000:0000cd296eb1                                   |                   |         |            |            |
| Port                                                                   | Designated Bridge | Port Id | Role       | State      |
| sa1                                                                    | 8000:001577c9744b | 8195    | Rootport   | Forwarding |
| po1                                                                    | 8000:0000cd296eb1 | 81f9    | Designated | Forwarding |
| port1.0.1                                                              | 8000:0000cd296eb1 | 8389    | Disabled   | Discarding |
| port1.0.2                                                              | 8000:0000cd296eb1 | 838a    | Disabled   | Discarding |
| port1.0.3                                                              | 8000:0000cd296eb1 | 838b    | Disabled   | Discarding |
| ...                                                                    |                   |         |            |            |

**Related Commands** [show spanning-tree](#)

# show spanning-tree mst

**Overview** This command displays bridge-level information about the CIST and VLAN to MSTI mappings.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show spanning-tree mst`

**Mode** User Exec, Privileged Exec and Interface Configuration

**Example** To display bridge-level information about the CIST and VLAN to MSTI mappings, enter the command:

```
awplus# show spanning-tree mst
```

**Output** Figure 14-5: Example output from **show spanning-tree mst**

```
% 1: Bridge up - Spanning Tree Enabled
% 1: CIST Root Path Cost 0 - CIST Root Port 0 - CIST Bridge
Priority 32768
% 1: Forward Delay 15 - Hello Time 2 - Max Age 20 - Max-hops 20
% 1: CIST Root Id 8000000475e93ffe
% 1: CIST Reg Root Id 8000000475e93ffe
% 1: CST Bridge Id 8000000475e93ffe
% 1: portfast bpdu-filter disabled
% 1: portfast bpdu-guard disabled
% 1: portfast errdisable timeout disabled
% 1: portfast errdisable timeout interval 300 sec
%
% Instance      VLAN
% 0:            1
% 2:            4
```

**Related Commands** [show spanning-tree mst interface](#)

# show spanning-tree mst config

**Overview** Use this command to display MSTP configuration identifier for the device.

**Syntax** `show spanning-tree mst config`

**Mode** User Exec, Privileged Exec and Interface Configuration

**Usage** The region name, the revision number, and the digest of the VLAN to MSTI configuration table must be the same on all devices that are intended to be in the same MST region.

**Example** To display MSTP configuration identifier information, enter the command:

```
awplus# show spanning-tree mst config
```

**Output** Figure 14-6: Example output from **show spanning-tree mst config**

```
awplus#show spanning-tree mst config
%
%  MSTP Configuration Information:
%-----
%  Format Id      : 0
%  Name           : My Name
%  Revision Level : 0
%  Digest         : 0x80DEE46DA92A98CF21C603291B22880A
%-----
```

**Related Commands**

- [instance vlan \(MSTP\)](#)
- [region \(MSTP\)](#)
- [revision \(MSTP\)](#)

# show spanning-tree mst detail

**Overview** This command displays detailed information about each instance, and all interfaces associated with that particular instance.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show spanning-tree mst detail

**Mode** User Exec, Privileged Exec and Interface Configuration

**Example** To display detailed information about each instance, and all interfaces associated with them, enter the command:

```
awplus# show spanning-tree mst detail
```

**Output** Figure 14-7: Example output from **show spanning-tree mst detail**

```
% 1: Bridge up - Spanning Tree Enabled
% 1: CIST Root Path Cost 0 - CIST Root Port 0 - CIST Bridge Priority 32768
% 1: Forward Delay 15 - Hello Time 2 - Max Age 20 - Max-hops 20
% 1: CIST Root Id 80000000cd24ff2d
% 1: CIST Reg Root Id 80000000cd24ff2d
% 1: CIST Bridge Id 80000000cd24ff2d
% 1: portfast bpdu-filter disabled
% 1: portfast bpdu-guard disabled
% 1: portfast errdisable timeout disabled
% 1: portfast errdisable timeout interval 300 sec
% port1.0.1: Port 5001 - Id 8389 - Role Disabled - State Discarding
% port1.0.1: Designated External Path Cost 0 -Internal Path Cost 0
% port1.0.1: Configured Path Cost 20000000 - Add type Explicit ref count 1
% port1.0.1: Designated Port Id 8389 - CIST Priority 128 -
% port1.0.1: CIST Root 80000000cd24ff2d
% port1.0.1: Regional Root 80000000cd24ff2d
% port1.0.1: Designated Bridge 80000000cd24ff2d
% port1.0.1: Message Age 0 - Max Age 20
% port1.0.1: CIST Hello Time 2 - Forward Delay 15
% port1.0.1: CIST Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0 - topo
change timer 0
...
% port1.0.2: forward-transitions 0
% port1.0.2: Version Multiple Spanning Tree Protocol - Received None - Send STP
% port1.0.2: No portfast configured - Current portfast off
% port1.0.2: portfast bpdu-guard default - Current portfast bpdu-guard off
% port1.0.2: portfast bpdu-filter default - Current portfast bpdu-filter off
% port1.0.2: no root guard configured - Current root guard off
% port1.0.2: Configured Link Type point-to-point - Current shared
%
```

```
% port1.0.3: Port 5003 - Id 838b - Role Disabled - State Discarding
% port1.0.3: Designated External Path Cost 0 -Internal Path Cost 0
% port1.0.3: Configured Path Cost 20000000 - Add type Explicit ref count 1
% port1.0.3: Designated Port Id 838b - CIST Priority 128 -
% port1.0.3: CIST Root 80000000cd24ff2d
% port1.0.3: Regional Root 80000000cd24ff2d
% port1.0.3: Designated Bridge 80000000cd24ff2d
% port1.0.3: Message Age 0 - Max Age 20
% port1.0.3: CIST Hello Time 2 - Forward Delay 15
% port1.0.3: CIST Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0 - topo
change timer 0
% port1.0.3: forward-transitions 0
% port1.0.3: Version Multiple Spanning Tree Protocol - Received None - Send STP
% port1.0.3: No portfast configured - Current portfast off
% port1.0.3: portfast bpdu-guard default - Current portfast bpdu-guard off
% port1.0.3: portfast bpdu-filter default - Current portfast bpdu-filter off
% port1.0.3: no root guard configured - Current root guard off
% port1.0.3: Configured Link Type point-to-point - Current shared
```

# show spanning-tree mst detail interface

**Overview** This command displays detailed information about the specified switch port, and the MST instances associated with it.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show spanning-tree mst detail interface <port>`

| Parameter | Description                                                                                                                                                                                                       |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port>    | The port to display information about. The port may be a switch port (e.g. <code>port1.0.4</code> ), a static channel group (e.g. <code>sa2</code> ), or a dynamic (LACP) channel group (e.g. <code>po2</code> ). |

**Mode** User Exec, Privileged Exec and Interface Configuration

**Example** To display detailed information about `port1.0.3` and the instances associated with it, enter the command:

```
awplus# show spanning-tree mst detail interface port1.0.3
```

**Output** Figure 14-8: Example output from **show spanning-tree mst detail interface**

```
% 1: Bridge up - Spanning Tree Enabled
% 1: CIST Root Path Cost 0 - CIST Root Port 0 - CIST Bridge Priority 32768
% 1: Forward Delay 15 - Hello Time 2 - Max Age 20 - Max-hops 20
% 1: CIST Root Id 80000000cd24ff2d
% 1: CIST Reg Root Id 80000000cd24ff2d
% 1: CIST Bridge Id 80000000cd24ff2d
% 1: portfast bpdu-filter disabled
% 1: portfast bpdu-guard disabled
% 1: portfast errdisable timeout disabled
% 1: portfast errdisable timeout interval 300 sec
% port1.0.2: Port 5002 - Id 838a - Role Disabled - State Discarding
% port1.0.2: Designated External Path Cost 0 -Internal Path Cost 0
% port1.0.2: Configured Path Cost 20000000 - Add type Explicit ref count 2
% port1.0.2: Designated Port Id 838a - CIST Priority 128 -
% port1.0.2: CIST Root 80000000cd24ff2d
% port1.0.2: Regional Root 80000000cd24ff2d
% port1.0.2: Designated Bridge 80000000cd24ff2d
% port1.0.2: Message Age 0 - Max Age 20
% port1.0.2: CIST Hello Time 2 - Forward Delay 15
% port1.0.2: CIST Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0 - topo
change timer 0
% port1.0.2: forward-transitions 0
% port1.0.2: Version Multiple Spanning Tree Protocol - Received None - Send STP
```

```
% port1.0.2: No portfast configured - Current portfast off
% port1.0.2: portfast bpdu-guard default - Current portfast bpdu-guard off
% port1.0.2: portfast bpdu-filter default - Current portfast bpdu-filter off
% port1.0.2: no root guard configured - Current root guard off
% port1.0.2: Configured Link Type point-to-point - Current shared
%
% Instance 2: Vlan: 2
% 1: MSTI Root Path Cost 0 -MSTI Root Port 0 - MSTI Bridge Priority 32768
% 1: MSTI Root Id 80020000cd24ff2d
% 1: MSTI Bridge Id 80020000cd24ff2d
% port1.0.2: Port 5002 - Id 838a - Role Disabled - State Discarding
% port1.0.2: Designated Internal Path Cost 0 - Designated Port Id 838a
% port1.0.2: Configured Internal Path Cost 20000000
% port1.0.2: Configured CST External Path cost 20000000
% port1.0.2: CST Priority 128 - MSTI Priority 128
% port1.0.2: Designated Root 80020000cd24ff2d
% port1.0.2: Designated Bridge 80020000cd24ff2d
% port1.0.2: Message Age 0 - Max Age 0
% port1.0.2: Hello Time 2 - Forward Delay 15
% port1.0.2: Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0
```

# show spanning-tree mst instance

**Overview** This command displays detailed information for the specified instance, and all switch ports associated with that instance.

A topology change counter has been included for RSTP and MSTP. You can see the topology change counter for RSTP by using the [show spanning-tree](#) command. You can see the topology change counter for MSTP by using the **show spanning-tree mst instance** command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show spanning-tree mst instance <instance-id>`

| Parameter     | Description                                 |
|---------------|---------------------------------------------|
| <instance-id> | Specify an MSTP instance in the range 1-15. |

**Mode** User Exec, Privileged Exec, and Interface Configuration

**Usage** To display detailed information for **instance 2**, and all switch ports associated with that instance, use the command:

```
awplus# show spanning-tree mst instance 2
```

**Output** Figure 14-9: Example output from **show spanning-tree mst instance**

```
% 1: MSTI Root Path Cost 0 - MSTI Root Port 0 - MSTI Bridge Priority 32768
% 1: MSTI Root Id 80020000cd24ff2d
% 1: MSTI Bridge Id 80020000cd24ff2d
% port1.0.2: Port 5002 - Id 838a - Role Disabled - State Discarding
% port1.0.2: Designated Internal Path Cost 0 - Designated Port Id 838a
% port1.0.2: Configured Internal Path Cost 20000000
% port1.0.2: Configured CST External Path cost 20000000
% port1.0.2: CST Priority 128 - MSTI Priority 128
% port1.0.2: Designated Root 80020000cd24ff2d
% port1.0.2: Designated Bridge 80020000cd24ff2d
% port1.0.2: Message Age 0 - Max Age 0
% port1.0.2: Hello Time 2 - Forward Delay 15
% port1.0.2: Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0
%
```



# show spanning-tree mst instance interface

**Overview** This command displays detailed information for the specified MST (Multiple Spanning Tree) instance, and the specified switch port associated with that MST instance.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show spanning-tree mst instance <instance-id> interface <port>`

| Parameter     | Description                                                                                                                                                                                                       |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <instance-id> | Specify an MSTP instance in the range 1-15.                                                                                                                                                                       |
| <port>        | The port to display information about. The port may be a switch port (e.g. <code>port1.0.4</code> ), a static channel group (e.g. <code>sa2</code> ), or a dynamic (LACP) channel group (e.g. <code>po2</code> ). |

**Mode** User Exec, Privileged Exec, and Interface Configuration

**Example** To display detailed information for instance 2, interface `port1.0.2`, use the command:

```
awplus# show spanning-tree mst instance 2 interface port1.0.2
```

**Output** Figure 14-10: Example output from **show spanning-tree mst instance**

```
% 1: MSTI Root Path Cost 0 - MSTI Root Port 0 - MSTI Bridge Priority 32768
% 1: MSTI Root Id 80020000cd24ff2d
% 1: MSTI Bridge Id 80020000cd24ff2d
% port1.0.2: Port 5002 - Id 838a - Role Disabled - State Discarding
% port1.0.2: Designated Internal Path Cost 0 - Designated Port Id 838a
% port1.0.2: Configured Internal Path Cost 20000000
% port1.0.2: Configured CST External Path cost 20000000
% port1.0.2: CST Priority 128 - MSTI Priority 128
% port1.0.2: Designated Root 80020000cd24ff2d
% port1.0.2: Designated Bridge 80020000cd24ff2d
% port1.0.2: Message Age 0 - Max Age 0
% port1.0.2: Hello Time 2 - Forward Delay 15
% port1.0.2: Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0
%
```

# show spanning-tree mst interface

**Overview** This command displays the number of instances created, and VLANs associated with it for the specified switch port.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show spanning-tree mst interface <port>`

| Parameter | Description                                                                                                                                                             |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port>    | The port to display information about. The port may be a switch port (e.g. port1.0.4), a static channel group (e.g. sa2), or a dynamic (LACP) channel group (e.g. po2). |

**Mode** User Exec, Privileged Exec, and Interface Configuration

**Example** To display detailed information about each instance, and all interfaces associated with them, for port1.0.4, use the command:

```
awplus# show spanning-tree mst interface port1.0.4
```

**Output** Figure 14-11: Example output from **show spanning-tree mst interface**

|                                                                            |          |      |
|----------------------------------------------------------------------------|----------|------|
| % 1: Bridge up - Spanning Tree Enabled                                     |          |      |
| % 1: CIST Root Path Cost 0 - CIST Root Port 0 - CIST Bridge Priority 32768 |          |      |
| % 1: Forward Delay 15 - Hello Time 2 - Max Age 20 - Max-hops 20            |          |      |
| % 1: CIST Root Id 80000008c73a2b22                                         |          |      |
| % 1: CIST Reg Root Id 80000008c73a2b22                                     |          |      |
| % 1: CST Bridge Id 80000008c73a2b22                                        |          |      |
| % 1: portfast bpdu-filter disabled                                         |          |      |
| % 1: portfast bpdu-guard disabled                                          |          |      |
| % 1: portfast errdisable timeout disabled                                  |          |      |
| % 1: portfast errdisable timeout interval 1 sec                            |          |      |
| %                                                                          |          |      |
| %                                                                          | Instance | VLAN |
| %                                                                          | 0:       | 1    |
| %                                                                          | 1:       | 2-3  |
| %                                                                          | 2:       | 4-5  |

# show spanning-tree mst detail interface

**Overview** This command displays detailed information about the specified switch port, and the MST instances associated with it.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show spanning-tree mst detail interface <port>`

| Parameter | Description                                                                                                                                                             |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port>    | The port to display information about. The port may be a switch port (e.g. port1.0.4), a static channel group (e.g. sa2), or a dynamic (LACP) channel group (e.g. po2). |

**Mode** User Exec, Privileged Exec and Interface Configuration

**Example** To display detailed information about port1.0.3 and the instances associated with it, enter the command:

```
awplus# show spanning-tree mst detail interface port1.0.3
```

**Output** Figure 14-12: Example output from **show spanning-tree mst detail interface**

```
% 1: Bridge up - Spanning Tree Enabled
% 1: CIST Root Path Cost 0 - CIST Root Port 0 - CIST Bridge Priority 32768
% 1: Forward Delay 15 - Hello Time 2 - Max Age 20 - Max-hops 20
% 1: CIST Root Id 80000000cd24ff2d
% 1: CIST Reg Root Id 80000000cd24ff2d
% 1: CIST Bridge Id 80000000cd24ff2d
% 1: portfast bpdu-filter disabled
% 1: portfast bpdu-guard disabled
% 1: portfast errdisable timeout disabled
% 1: portfast errdisable timeout interval 300 sec
% port1.0.2: Port 5002 - Id 838a - Role Disabled - State Discarding
% port1.0.2: Designated External Path Cost 0 -Internal Path Cost 0
% port1.0.2: Configured Path Cost 20000000 - Add type Explicit ref count 2
% port1.0.2: Designated Port Id 838a - CIST Priority 128 -
% port1.0.2: CIST Root 80000000cd24ff2d
% port1.0.2: Regional Root 80000000cd24ff2d
% port1.0.2: Designated Bridge 80000000cd24ff2d
% port1.0.2: Message Age 0 - Max Age 20
% port1.0.2: CIST Hello Time 2 - Forward Delay 15
% port1.0.2: CIST Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0 - topo
change timer 0
% port1.0.2: forward-transitions 0
% port1.0.2: Version Multiple Spanning Tree Protocol - Received None - Send STP
```

```
% port1.0.2: No portfast configured - Current portfast off
% port1.0.2: portfast bpdu-guard default - Current portfast bpdu-guard off
% port1.0.2: portfast bpdu-filter default - Current portfast bpdu-filter off
% port1.0.2: no root guard configured - Current root guard off
% port1.0.2: Configured Link Type point-to-point - Current shared
%
% Instance 2: Vlan: 2
% 1: MSTI Root Path Cost 0 -MSTI Root Port 0 - MSTI Bridge Priority 32768
% 1: MSTI Root Id 80020000cd24ff2d
% 1: MSTI Bridge Id 80020000cd24ff2d
% port1.0.2: Port 5002 - Id 838a - Role Disabled - State Discarding
% port1.0.2: Designated Internal Path Cost 0 - Designated Port Id 838a
% port1.0.2: Configured Internal Path Cost 20000000
% port1.0.2: Configured CST External Path cost 20000000
% port1.0.2: CST Priority 128 - MSTI Priority 128
% port1.0.2: Designated Root 80020000cd24ff2d
% port1.0.2: Designated Bridge 80020000cd24ff2d
% port1.0.2: Message Age 0 - Max Age 0
% port1.0.2: Hello Time 2 - Forward Delay 15
% port1.0.2: Forward Timer 0 - Msg Age Timer 0 - Hello Timer 0
```

# show spanning-tree statistics

**Overview** This command displays BPDU (Bridge Protocol Data Unit) statistics for all spanning-tree instances, and all switch ports associated with all spanning-tree instances.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show spanning-tree statistics

**Mode** Privileged Exec

**Usage** To display BPDU statistics for all spanning-tree instances, and all switch ports associated with all spanning-tree instances, use the command:

```
awplus# show spanning-tree statistics
```

**Output** Figure 14-13: Example output from **show spanning-tree statistics**

```
Port number = 915 Interface = port1.0.6
=====
% BPDU Related Parameters
% -----
% Port Spanning Tree           : Disable
% Spanning Tree Type          : Rapid Spanning Tree Protocol
% Current Port State           : Discarding
% Port ID                      : 8393
% Port Number                  : 393
% Path Cost                    : 20000000
% Message Age                  : 0
% Designated Root              : ec:cd:6d:20:c0:ed
% Designated Cost              : 0
% Designated Bridge            : ec:cd:6d:20:c0:ed
% Designated Port Id           : 8393
% Top Change Ack               : FALSE
% Config Pending               : FALSE
% PORT Based Information & Statistics
% -----
% Config Bpdu's xmitted        : 0
% Config Bpdu's received       : 0
% TCN Bpdu's xmitted           : 0
% TCN Bpdu's received          : 0
% Forward Trans Count          : 0
```

|                               |            |
|-------------------------------|------------|
| % STATUS of Port Timers       |            |
| % -----                       |            |
| % Hello Time Configured       | : 2        |
| % Hello timer                 | : INACTIVE |
| % Hello Time Value            | : 0        |
| % Forward Delay Timer         | : INACTIVE |
| % Forward Delay Timer Value   | : 0        |
| % Message Age Timer           | : INACTIVE |
| % Message Age Timer Value     | : 0        |
| % Topology Change Timer       | : INACTIVE |
| % Topology Change Timer Value | : 0        |
| % Hold Timer                  | : INACTIVE |
| % Hold Timer Value            | : 0        |
| % Other Port-Specific Info    |            |
| % -----                       |            |
| % Max Age Transitions         | : 1        |
| % Msg Age Expiry              | : 0        |
| % Similar BPDUS Rcvd          | : 0        |
| % Src Mac Count               | : 0        |
| % Total Src Mac Rcvd          | : 0        |
| % Next State                  | : Learning |
| % Topology Change Time        | : 0        |

# show spanning-tree statistics instance

**Overview** This command displays BPDU (Bridge Protocol Data Unit) statistics for the specified MST (Multiple Spanning Tree) instance, and all switch ports associated with that MST instance.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show spanning-tree statistics instance *<instance-id>*

| Parameter                  | Description                                 |
|----------------------------|---------------------------------------------|
| <i>&lt;instance-id&gt;</i> | Specify an MSTP instance in the range 1-15. |

**Mode** Privileged Exec

**Usage** To display BPDU statistics information for MST instance 2, and all switch ports associated with that MST instance, use the command:

```
awplus# show spanning-tree statistics instance 2
```

**Output** Figure 14-14: Example output from **show spanning-tree statistics instance**

```
% % INST_PORT port1.0.3 Information & Statistics
% -----
% Config Bpdu's xmitted (port/inst)      : (0/0)
% Config Bpdu's received (port/inst)     : (0/0)
% TCN Bpdu's xmitted (port/inst)         : (0/0)
% TCN Bpdu's received (port/inst)        : (0/0)
% Message Age(port/Inst)                 : (0/0)
% port1.0.3: Forward Transitions          : 0
% Next State                             : Learning
% Topology Change Time                   : 0
...
```

**Related Commands** [show spanning-tree statistics](#)

# show spanning-tree statistics instance interface

**Overview** This command displays BPDU (Bridge Protocol Data Unit) statistics for the specified MST (Multiple Spanning Tree) instance and the specified switch port associated with that MST instance.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show spanning-tree statistics instance <instance-id> interface <port>`

| Parameter                        | Description                                                                                                                                                                                                       |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;instance-id&gt;</code> | Specify an MSTP instance in the range 1-15.                                                                                                                                                                       |
| <code>&lt;port&gt;</code>        | The port to display information about. The port may be a switch port (e.g. <code>port1.0.4</code> ), a static channel group (e.g. <code>sa2</code> ), or a dynamic (LACP) channel group (e.g. <code>po2</code> ). |

**Mode** Privileged Exec

**Example** To display BPDU statistics for MST instance 2, interface `port1.0.2`, use the command:

```
awplus# show spanning-tree statistics instance 2 interface  
port1.0.2
```



**Output** Figure 14-15: Example output from **show spanning-tree statistics instance interface**

```
awplus#sh spanning-tree statistics interface port1.0.2 instance 1
Spanning Tree Enabled for Instance : 1
=====
% INST_PORT port1.0.2 Information & Statistics
% -----
% Config Bpdu's xmitted (port/inst)      : (0/0)
% Config Bpdu's received (port/inst)     : (0/0)
% TCN Bpdu's xmitted (port/inst)         : (0/0)
% TCN Bpdu's received (port/inst)        : (0/0)
% Message Age(port/Inst)                  : (0/0)
% port1.0.2: Forward Transitions          : 0
% Next State                             : Learning
% Topology Change Time                    : 0

% Other Inst/Vlan Information & Statistics
% -----
% Bridge Priority                          : 0
% Bridge Mac Address                      : ec:cd:6d:20:c0:ed
% Topology Change Initiator               : 5023
% Last Topology Change Occured            : Mon Aug 22 05:42:06 2011
% Topology Change                         : FALSE
% Topology Change Detected                : FALSE
% Topology Change Count                   : 1
% Topology Change Last Recvd from         : 00:00:00:00:00:00
```

**Related Commands** [show spanning-tree statistics](#)

# show spanning-tree statistics interface

**Overview** This command displays BPDU (Bridge Protocol Data Unit) statistics for the specified switch port, and all MST instances associated with that switch port.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show spanning-tree statistics interface <port>

| Parameter | Description                                                                                                                                                             |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <port>    | The port to display information about. The port may be a switch port (e.g. port1.0.4), a static channel group (e.g. sa2), or a dynamic (LACP) channel group (e.g. po2). |

**Mode** Privileged Exec

**Example** To display BPDU statistics about each MST instance for port1.0.4, use the command:

```
awplus# show spanning-tree statistics interface port1.0.4
```

**Output** Figure 14-16: Example output from **show spanning-tree statistics interface**

```
awplus#show spanning-tree statistics interface port1.0.2

      Port number = 906 Interface = port1.0.2
      =====
% BPDU Related Parameters
% -----
% Port Spanning Tree           : Disable
% Spanning Tree Type          : Multiple Spanning Tree Protocol
% Current Port State           : Discarding
% Port ID                      : 838a
% Port Number                  : 38a
% Path Cost                    : 20000000
% Message Age                  : 0
% Designated Root              : ec:cd:6d:20:c0:ed
% Designated Cost              : 0
% Designated Bridge            : ec:cd:6d:20:c0:ed
% Designated Port Id           : 838a
% Top Change Ack               : FALSE
% Config Pending               : FALSE
```

```
% PORT Based Information & Statistics
% -----
% Config Bpdu's xmitted           : 0
% Config Bpdu's received          : 0
% TCN Bpdu's xmitted              : 0
% TCN Bpdu's received             : 0
% Forward Trans Count             : 0

% STATUS of Port Timers
% -----
% Hello Time Configured           : 2
% Hello timer                     : INACTIVE
% Hello Time Value                 : 0
% Forward Delay Timer             : INACTIVE
% Forward Delay Timer Value       : 0
% Message Age Timer               : INACTIVE
% Message Age Timer Value         : 0
% Topology Change Timer           : INACTIVE
% Topology Change Timer Value     : 0
% Hold Timer                      : INACTIVE
% Hold Timer Value                : 0

% Other Port-Specific Info
% -----
% Max Age Transitions             : 1
% Msg Age Expiry                  : 0
% Similar BPDUS Rcvd             : 0
% Src Mac Count                   : 0
% Total Src Mac Rcvd              : 0
% Next State                      : Learning
% Topology Change Time            : 0
% Other Bridge information & Statistics
% -----
% STP Multicast Address           : 01:80:c2:00:00:00
% Bridge Priority                  : 32768
% Bridge Mac Address              : ec:cd:6d:20:c0:ed
% Bridge Hello Time               : 2
% Bridge Forward Delay            : 15
% Topology Change Initiator       : 5023
% Last Topology Change Occured    : Mon Aug 22 05:41:20 2011
% Topology Change                 : FALSE
% Topology Change Detected        : TRUE
% Topology Change Count           : 1
% Topology Change Last Recvd from : 00:00:00:00:00:00
```

**Related Commands** [show spanning-tree statistics](#)

# show spanning-tree vlan range-index

**Overview** Use this command to display information about MST (Multiple Spanning Tree) instances and the VLANs associated with them including the VLAN range-index value for the device.

**Syntax** `show spanning-tree vlan range-index`

**Mode** Privileged Exec

**Example** To display information about MST instances and the VLANs associated with them for the device, including the VLAN range-index value, use the following command:

```
awplus# show spanning-tree vlan range-index
```

**Output** Figure 14-17: Example output from **show spanning-tree vlan range-index**

```
awplus#show spanning-tree vlan range-index
% MST Instance  VLAN      RangeIdx
%      1         1         1%
```

**Related Commands** [show spanning-tree statistics](#)

# spanning-tree autoedge (RSTP and MSTP)

**Overview** Use this command to enable the autoedge feature on the port.

The autoedge feature allows the port to automatically detect that it is an edge port. If it does not receive any BPDUs in the first three seconds after linkup, enabling, or entering RSTP or MSTP mode, it sets itself to be an edgeport and enters the forwarding state.

Use this command for RSTP or MSTP.

Use the **no** variant of this command to disable this feature.

**Syntax** `spanning-tree autoedge`  
`no spanning-tree autoedge`

**Default** Disabled

**Mode** Interface Configuration

**Example** `awplus# configure terminal`  
`awplus(config)# interface port1.0.3`  
`awplus(config-if)# spanning-tree autoedge`

**Related Commands** [spanning-tree edgeport \(RSTP and MSTP\)](#)

## spanning-tree bpdudata-bbox="164 158 883 204" data-label="Text"> **Overview** Use this command in Global Configuration mode to configure BPDU (Bridge Protocol Data Unit) discarding or forwarding, with STP (Spanning Tree Protocol) disabled on the switch.

See the Usage note about disabling Spanning Tree before using this command, and using this command to forward unsupported BPDUs unchanged for unsupported STP Protocols.

There is not a **no** variant for this command. Instead, apply the `discard` parameter to reset it back to the default then re-enable STP with **spanning-tree enable** command.

**Syntax** `spanning-tree bpdudata-bbox="262 386 891 627" data-label="Table">

| Parameter                                                                                     | Description                                                                                                    |
|-----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <code>bpdudata-bbox="404 464 479 479" data-label="Text"&gt;<p><code>discard</code></p></code> | Discards all ingress STP BPDU frames.                                                                          |
| <code>forward</code>                                                                          | Forwards any ingress STP BPDU packets to all ports, regardless of any VLAN membership.                         |
| <code>forward-untagged-vlan</code>                                                            | Forwards any ingress STP BPDU frames to all ports that are untagged members of the ingress port's native VLAN. |
| <code>forward-vlan</code>                                                                     | Forwards any ingress STP BPDU frames to all ports that are tagged members of the ingress port's native VLAN.   |`

**Default** The discard parameter is enabled by default.

**Mode** Global Configuration

**Usage** You must first disable Spanning Tree with the `spanning-tree enable` command before you can use this command to then configure BPDU discarding or forwarding.

This command enables the switch to forward unsupported BPDUs with an unsupported Spanning Tree Protocol, such as proprietary STP protocols with unsupported BPDUs, by forwarding BPDU (Bridge Protocol Data Unit) frames unchanged through the switch.

When you want to revert to default behavior on the switch, issue a **spanning-tree bdpudata-bbox="101 940 213 954" data-label="Page-Footer">

C613-50071-01 REV A**

**Examples** To enable STP BPDU discard in Global Configuration mode with STP disabled, which discards all ingress STP BPDU frames, enter the commands:

```
awplus# configure terminal
awplus(config)# no spanning-tree stp enable
awplus(config)# spanning-tree bpdu discard
```

To enable STP BPDU forward in Global Configuration mode with STP disabled, which forwards any ingress STP BPDU frames to all ports regardless of any VLAN membership, enter the commands:

```
awplus# configure terminal
awplus(config)# no spanning-tree stp enable
awplus(config)# spanning-tree bpdu forward
```

To enable STP BPDU forwarding for untagged frames in Global Configuration mode with STP disabled, which forwards any ingress STP BPDU frames to all ports that are untagged members of the ingress port's native VLAN, enter the commands:

```
awplus# configure terminal
awplus(config)# no spanning-tree stp enable
awplus(config)# spanning-tree bpdu forward-untagged-vlan
```

To enable STP BPDU forwarding for tagged frames in Global Configuration mode with STP disabled, which forwards any ingress STP BPDU frames to all ports that are tagged members of the ingress port's native VLAN, enter the commands:

```
awplus# configure terminal
awplus(config)# no spanning-tree stp enable
awplus(config)# spanning-tree bpdu forward-vlan
```

To reset STP BPDU back to the default `discard` parameter and re-enable STP on the switch, enter the commands:

```
awplus# configure terminal
awplus(config)# spanning-tree bpdu discard
awplus(config)# spanning-tree stp enable
```

**Related  
Commands** [show spanning-tree](#)  
[spanning-tree enable](#)

# spanning-tree cisco-interoperability (MSTP)

**Overview** Use this command to enable/disable Cisco-interoperability for MSTP.  
Use this command for MSTP only.

**Syntax** `spanning-tree cisco-interoperability {enable|disable}`

| Parameter | Description                              |
|-----------|------------------------------------------|
| enable    | Enable Cisco interoperability for MSTP.  |
| disable   | Disable Cisco interoperability for MSTP. |

**Default** If this command is not used, Cisco interoperability is disabled.

**Mode** Global Configuration

**Usage** For compatibility with certain Cisco devices, all devices in the switched LAN running the AlliedWare Plus™ Operating System must have Cisco-interoperability enabled. When the AlliedWare Plus Operating System is interoperating with Cisco, the only criteria used to classify a region are the region name and revision level. VLAN to instance mapping is not used to classify regions when interoperating with Cisco.

**Examples** To enable Cisco interoperability on a Layer 2 device:

```
awplus# configure terminal
awplus(config)# spanning-tree cisco-interoperability enable
```

To disable Cisco interoperability on a Layer 2 device:

```
awplus# configure terminal
awplus(config)# spanning-tree cisco-interoperability disable
```



# spanning-tree edgeport (RSTP and MSTP)

**Overview** Use this command to set a port as an edge-port.

Use this command for RSTP or MSTP.

This command has the same effect as the [spanning-tree portfast \(STP\)](#) command, but the configuration displays differently in the output of some show commands.

Use the **no** variant of this command to set a port to its default state (not an edge-port).

**Syntax** `spanning-tree edgeport`  
`no spanning-tree edgeport`

**Default** Not an edge port.

**Mode** Interface Configuration

**Usage** Use this command on a switch port connected to a LAN that has no other bridges attached. If a BPDU is received on the port that indicates that another bridge is connected to the LAN, then the port is no longer treated as an edge port.

**Example** `awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# spanning-tree edgeport`

**Related Commands** [spanning-tree autoedge \(RSTP and MSTP\)](#)

# spanning-tree enable

**Overview** Use this command in Global Configuration mode to enable the specified spanning tree protocol for all switch ports. Note that this must be the spanning tree protocol that is configured on the device by the [spanning-tree mode](#) command.

Use the **no** variant of this command to disable the configured spanning tree protocol. This places all switch ports in the forwarding state.

**Syntax** `spanning-tree {mstp|rstp|stp} enable`  
`no spanning-tree {mstp|rstp|stp} enable`

| Parameter | Description                                                 |
|-----------|-------------------------------------------------------------|
| mstp      | Enables or disables MSTP (Multiple Spanning Tree Protocol). |
| rstp      | Enables or disables RSTP (Rapid Spanning Tree Protocol).    |
| stp       | Enables or disables STP (Spanning Tree Protocol).           |

**Default** RSTP is enabled by default for all switch ports.

**Mode** Global Configuration

**Usage** With no configuration, spanning tree is enabled, and the spanning tree mode is set to RSTP. To change the mode, see [spanning-tree mode](#) command.

**Examples** To enable STP in Global Configuration mode, enter the below commands:

```
awplus# configure terminal
awplus(config)# spanning-tree stp enable
```

To disable STP in Global Configuration mode, enter the below commands:

```
awplus# configure terminal
awplus(config)# no spanning-tree stp enable
```

To enable MSTP in Global Configuration mode, enter the below commands:

```
awplus# configure terminal
awplus(config)# spanning-tree mstp enable
```

To disable MSTP in Global Configuration mode, enter the below commands:

```
awplus# configure terminal
awplus(config)# no spanning-tree mstp enable
```

To enable RSTP in Global Configuration mode, enter the below commands:

```
awplus# configure terminal
awplus(config)# spanning-tree rstp enable
```

To disable RSTP in Global Configuration mode, enter the below commands:

```
awplus# configure terminal
```

```
awplus(config)# no spanning-tree rstp enable
```

**Related  
Commands**

[spanning-tree bpdud](#)

[spanning-tree mode](#)

# spanning-tree errdisable-timeout enable

**Overview** Use this command to enable the errdisable-timeout facility, which sets a timeout for ports that are disabled due to the BPDU guard feature.

Use this command for RSTP or MSTP.

Use the **no** variant of this command to disable the errdisable-timeout facility.

**Syntax** `spanning-tree errdisable-timeout enable`  
`no spanning-tree errdisable-timeout enable`

**Default** By default, the errdisable-timeout is disabled.

**Mode** Global Configuration

**Usage** The BPDU guard feature shuts down the port on receiving a BPDU on a BPDU-guard enabled port. This command associates a timer with the feature such that the port is re-enabled without manual intervention after a set interval. This interval can be configured by the user using the [spanning-tree errdisable-timeout interval](#) command.

**Example** `awplus# configure terminal`  
`awplus(config)# spanning-tree errdisable-timeout enable`

**Related Commands** [show spanning-tree](#)  
[spanning-tree errdisable-timeout interval](#)  
[spanning-tree portfast bpdu-guard](#)

# spanning-tree errdisable-timeout interval

**Overview** Use this command to specify the time interval after which a port is brought back up when it has been disabled by the BPDU guard feature.

Use this command for RSTP or MSTP.

**Syntax** `spanning-tree errdisable-timeout interval <10-1000000>`  
`no spanning-tree errdisable-timeout interval`

| Parameter                       | Description                                         |
|---------------------------------|-----------------------------------------------------|
| <code>&lt;10-1000000&gt;</code> | Specify the errdisable-timeout interval in seconds. |

**Default** By default, the port is re-enabled after 300 seconds.

**Mode** Global Configuration

**Example** `awplus# configure terminal`  
`awplus(config)# spanning-tree errdisable-timeout interval 34`

**Related Commands** [show spanning-tree](#)  
[spanning-tree errdisable-timeout enable](#)  
[spanning-tree portfast bpdu-guard](#)

# spanning-tree force-version

**Overview** Use this command in Interface Configuration mode for a switch port interface only to force the protocol version for the switch port. Use this command for RSTP or MSTP only.

**Syntax** `spanning-tree force-version <version>`  
`no spanning-tree force-version`

| Parameter | Description                                                                                                                                                                            |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <version> | <0-3> Version identifier.                                                                                                                                                              |
| 0         | Forces the port to operate in STP mode.                                                                                                                                                |
| 1         | Not supported.                                                                                                                                                                         |
| 2         | Forces the port to operate in RSTP mode. If it receives STP BPDUs, it can automatically revert to STP mode.                                                                            |
| 3         | Forces the port to operate in MSTP mode (this option is only available if MSTP mode is configured). If it receives RSTP or STP BPDUs, it can automatically revert to RSTP or STP mode. |

**Default** By default, no version is forced for the port. The port is in the spanning tree mode configured for the device, or a lower version if it automatically detects one.

**Mode** Interface Configuration mode for a switch port interface only.

**Examples** Set the value to enforce the spanning tree protocol (STP):

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# spanning-tree force-version 0
```

Set the default protocol version:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no spanning-tree force-version
```

**Related Commands** [show spanning-tree](#)

# spanning-tree forward-time

**Overview** Use this command to set the forward delay value. Use the **no** variant of this command to reset the forward delay value to the default setting of 15 seconds.

The **forward delay** sets the time (in seconds) to control how fast a port changes its spanning tree state when moving towards the forwarding state. If the mode is set to STP, the value determines how long the port stays in each of the listening and learning states which precede the forwarding state. If the mode is set to RSTP or MSTP, this value determines the maximum time taken to transition from discarding to learning and from learning to forwarding.

This value is used only when the device is acting as the root bridge. Devices not acting as the Root Bridge use a dynamic value for the **forward delay** set by the root bridge. The **forward delay**, **max-age**, and **hello time** parameters are interrelated.

**Syntax** `spanning-tree forward-time <forward-delay>`  
`no spanning-tree forward-time`

| Parameter                          | Description                                                     |
|------------------------------------|-----------------------------------------------------------------|
| <code>&lt;forward-delay&gt;</code> | <code>&lt;4-30&gt;</code> The forwarding time delay in seconds. |

**Default** The default is 15 seconds.

**Mode** Global Configuration

**Usage** The allowable range for forward-time is 4-30 seconds.

The **forward delay**, **max-age**, and **hello time** parameters should be set according to the following formula, as specified in IEEE Standard 802.1d:

$2 \times (\text{forward delay} - 1.0 \text{ seconds}) \geq \text{max-age}$

$\text{max-age} \geq 2 \times (\text{hello time} + 1.0 \text{ seconds})$

**Example** `awplus# configure terminal`  
`awplus(config)# spanning-tree forward-time 6`

**Related Commands** `show spanning-tree`  
`spanning-tree forward-time`  
`spanning-tree hello-time`  
`spanning-tree mode`

# spanning-tree guard root

**Overview** Use this command in Interface Configuration mode for a switch port only to enable the Root Guard feature for the switch port. The root guard feature disables reception of superior BPDUs. You can use this command for RSTP, STP or MSTP.

Use the **no** variant of this command to disable the root guard feature for the port.

**Syntax** `spanning-tree guard root`  
`no spanning-tree guard root`

**Mode** Interface Configuration mode for a switch port interface only.

**Usage** The Root Guard feature makes sure that the port on which it is enabled is a designated port. If the Root Guard enabled port receives a superior BPDU, it goes to a Listening state (for STP) or discarding state (for RSTP and MSTP).

**Example** `awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# spanning-tree guard root`



# spanning-tree hello-time

**Overview** Use this command to set the hello-time. This sets the time in seconds between the transmission of device spanning tree configuration information when the device is the Root Bridge of the spanning tree or is trying to become the Root Bridge.

Use this command for RSTP, STP or MSTP.

Use the **no** variant of this command to restore the default of the hello time.

**Syntax** `spanning-tree hello-time <hello-time>`  
`no spanning-tree hello-time`

| Parameter                       | Description                                                   |
|---------------------------------|---------------------------------------------------------------|
| <code>&lt;hello-time&gt;</code> | <code>&lt;1-10&gt;</code> The hello BPDU interval in seconds. |

**Default** Default is 2 seconds.

**Mode** Global Configuration and Interface Configuration for switch ports.

**Usage** The allowable range of values is 1-10 seconds.

The forward delay, max-age, and hello time parameters should be set according to the following formula, as specified in IEEE Standard 802.1d:

$$2 \times (\text{forward delay} - 1.0 \text{ seconds}) \geq \text{max-age}$$
$$\text{max-age} \geq 2 \times (\text{hello time} + 1.0 \text{ seconds})$$

**Example** `awplus# configure terminal`  
`awplus(config)# spanning-tree hello-time 3`

**Related Commands** [spanning-tree forward-time](#)  
[spanning-tree max-age](#)  
[show spanning-tree](#)

# spanning-tree link-type

**Overview** Use this command in Interface Configuration mode for a switch port interface only to enable or disable point-to-point or shared link types on the switch port.

Use this command for RSTP or MSTP only.

Use the **no** variant of this command to return the port to the default link type.

**Syntax** `spanning-tree link-type {point-to-point|shared}`  
`no spanning-tree link-type`

| Parameter      | Description               |
|----------------|---------------------------|
| shared         | Disable rapid transition. |
| point-to-point | Enable rapid transition.  |

**Default** The default link type is point-to-point.

**Mode** Interface Configuration mode for a switch port interface only.

**Usage** You may want to set link type to shared if the port is connected to a hub with multiple devices connected to it.

**Examples** `awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# spanning-tree link-type point-to-point`

# spanning-tree max-age

**Overview** Use this command to set the max-age. This sets the maximum age, in seconds, that dynamic spanning tree configuration information is stored in the device before it is discarded.

Use this command for RSTP, STP or MSTP.

Use the **no** variant of this command to restore the default of max-age.

**Syntax** `spanning-tree max-age <max-age>`  
`no spanning-tree max-age`

| Parameter                    | Description                                             |
|------------------------------|---------------------------------------------------------|
| <code>&lt;max-age&gt;</code> | <code>&lt;6-40&gt;</code> The maximum time, in seconds. |

**Default** The default of spanning-tree max-age is 20 seconds.

**Mode** Global Configuration

**Usage** Max-age is the maximum time in seconds for which a message is considered valid. Configure this value sufficiently high, so that a frame generated by the root bridge can be propagated to the leaf nodes without exceeding the max-age.

The **forward delay**, **max-age**, and **hello time** parameters should be set according to the following formula, as specified in IEEE Standard 802.1d:

$2 \times (\text{forward delay} - 1.0 \text{ seconds}) \geq \text{max-age}$

$\text{max-age} \geq 2 \times (\text{hello time} + 1.0 \text{ seconds})$

**Example** `awplus# configure terminal`  
`awplus(config)# spanning-tree max-age 12`

**Related Commands** [show spanning-tree](#)  
[spanning-tree forward-time](#)  
[spanning-tree hello-time](#)

# spanning-tree max-hops (MSTP)

**Overview** Use this command to specify the maximum allowed hops for a BPDU in an MST region. This parameter is used by all the instances of the MST region.

Use the **no** variant of this command to restore the default.

Use this command for MSTP only.

**Syntax** `spanning-tree max-hops <hop-count>`  
`no spanning-tree max-hops <hop-count>`

| Parameter                      | Description                                                              |
|--------------------------------|--------------------------------------------------------------------------|
| <code>&lt;hop-count&gt;</code> | Specify the maximum hops the BPDU will be valid for in the range <1-40>. |

**Default** The default max-hops in a MST region is 20.

**Mode** Global Configuration

**Usage** Specifying the max hops for a BPDU prevents the messages from looping indefinitely in the network. The hop count is decremented by each receiving port. When a device receives an MST BPDU that has a hop count of zero, it discards the BPDU.

**Examples** `awplus# configure terminal`  
`awplus(config)# spanning-tree max-hops 25`  
`awplus# configure terminal`  
`awplus(config)# no spanning-tree max-hops`

# spanning-tree mode

**Overview** Use this command to change the spanning tree protocol mode on the device. The spanning tree protocol mode on the device can be configured to either STP, RSTP or MSTP.

**Syntax** `spanning-tree mode {stp|rstp|mstp}`

**Default** The default spanning tree protocol mode on the device is RSTP.

**Mode** Global Configuration

**Usage** With no configuration, the device will have spanning tree enabled, and the spanning tree mode will be set to RSTP. Use this command to change the spanning tree protocol mode on the device. MSTP is VLAN aware, but RSTP and STP are not VLAN aware. To enable or disable spanning tree operation, see the [spanning-tree enable](#) command.

**Examples** To change the spanning tree mode from the default of RSTP to MSTP, use the following commands:

```
awplus# configure terminal
awplus(config)# spanning-tree mode mstp
```

**Related Commands** [spanning-tree enable](#)

# spanning-tree mst configuration

**Overview** Use this command to enter the MST Configuration mode to configure the Multiple Spanning-Tree Protocol.

**Syntax** `spanning-tree mst configuration`

**Mode** Global Configuration

**Examples** The following example uses this command to enter MST Configuration mode. Note the change in the command prompt.

```
awplus# configure terminal
awplus(config)# spanning-tree mst configuration
awplus(config-mst)#
```

# spanning-tree mst instance

**Overview** Use this command to assign a Multiple Spanning Tree instance (MSTI) to a switch port or channel group.

Note that ports are automatically configured to send and receive spanning-tree information for the associated MSTI when VLANs are assigned to MSTIs using the [instance vlan \(MSTP\)](#) command.

Use the **no** variant of this command in Interface Configuration mode to remove the MSTI from the specified switch port or channel group.

**Syntax** `spanning-tree mst instance <instance-id>`  
`no spanning-tree mst instance <instance-id>`

| Parameter     | Description                                                                                                                                         |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <instance-id> | Specify an MSTP instance in the range 1-15. The MST instance must have already been created using the <a href="#">instance vlan (MSTP)</a> command. |

**Default** A port automatically becomes a member of an MSTI when it is assigned to a VLAN.

**Mode** Interface Configuration mode for a switch port or channel group.

**Usage** You can disable automatic configuration of member ports of a VLAN to an associated MSTI by using a **no spanning-tree mst instance** command to remove the member port from the MSTI. Use the **spanning-tree mst instance** command to add a VLAN member port back to the MSTI.

**Examples** To assign instance 3 to a switch port, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# spanning-tree mst instance 3
```

To remove instance 3 from a switch port, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no spanning-tree mst instance 3
```

**Related Commands** [instance vlan \(MSTP\)](#)  
[spanning-tree mst instance path-cost](#)  
[spanning-tree mst instance priority](#)  
[spanning-tree mst instance restricted-role](#)  
[spanning-tree mst instance restricted-tcn](#)

# spanning-tree mst instance path-cost

**Overview** Use this command to set the cost of a path associated with a switch port, for the specified MSTI.

This specifies the switch port's contribution to the cost of a path to the MSTI regional root via that port. This applies when the port is the root port for the MSTI.

Use the **no** variant of this command to restore the default cost value of the path.

**Syntax** `spanning-tree mst instance <instance-id> path-cost <path-cost>`  
`no spanning-tree mst instance <instance-id> path-cost`

| Parameter     | Description                                                                                                                                               |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <instance-id> | Specify an MSTP instance in the range 1-15.                                                                                                               |
| <path-cost>   | Specify the cost of path in the range of <1-200000000>, where a lower path-cost indicates a greater likelihood of the specific interface becoming a root. |

**Default** The default path cost values and the range of recommended path cost values depend on the port speed, as shown in the following table from the IEEE 802.1q-2003 standard.

| Port speed         | Default path cost | Recommended path cost range |
|--------------------|-------------------|-----------------------------|
| Less than 100 Kb/s | 200,000,000       | 20,000,000-200,000,000      |
| 1Mbps              | 20,000,000        | 2,000,000-20,000,000        |
| 10Mbps             | 2,000,000         | 200,000-2,000,000           |
| 100 Mbps           | 200,000           | 20,000-200,000              |
| 1 Gbps             | 20,000            | 2,000-20,000                |
| 10 Gbps            | 2,000             | 200-2,000                   |
| 100 Gbps           | 200               | 20-200                      |
| 1Tbps              | 20                | 2-200                       |
| 10 Tbps            | 2                 | 2-20                        |

**Mode** Interface Configuration mode for a switch port interface only.

**Usage** Before you can use this command to set a path-cost in a VLAN configuration, you must explicitly add an MST instance to a port using the [spanning-tree mst instance](#) command.

**Examples** To set a path cost of 1000 on instance 3, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# spanning-tree mst instance 3 path-cost 1000
```



To return the path cost to its default value on instance 3, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no spanning-tree mst instance 3 path-cost
```

**Related  
Commands**

[instance vlan \(MSTP\)](#)  
[spanning-tree mst instance](#)  
[spanning-tree mst instance priority](#)  
[spanning-tree mst instance restricted-role](#)  
[spanning-tree mst instance restricted-tcn](#)

# spanning-tree mst instance priority

**Overview** Use this command in Interface Configuration mode for a switch port interface only to set the port priority for an MST instance (MSTI).

Use the **no** variant of this command to restore the default priority value (128).

**Syntax** `spanning-tree mst instance <instance-id> priority <priority>`  
`no spanning-tree mst instance <instance-id> [priority]`

| Parameter                        | Description                                                                                                                                   |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;instance-id&gt;</code> | Specify an MSTP instance in the range 1-15.                                                                                                   |
| <code>&lt;priority&gt;</code>    | This must be a multiple of 16 and within the range <0-240>. A lower priority indicates greater likelihood of the port becoming the root port. |

**Default** The default is 128.

**Mode** Interface Configuration mode for a switch port interface.

**Usage** This command sets the value of the priority field contained in the port identifier. The MST algorithm uses the port priority when determining the root port for the switch in the MSTI. The port with the lowest value has the highest priority, so it will be chosen as root port over a port that is equivalent in all other aspects but with a higher priority value.

**Examples** To set the priority to 112 on instance 3, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# spanning-tree mst instance 3 priority 112
```

To return the priority to its default value of 128 on instance 3, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no spanning-tree mst instance 3 priority
```

**Related Commands**

- [instance vlan \(MSTP\)](#)
- [spanning-tree priority \(port priority\)](#)
- [spanning-tree mst instance](#)
- [spanning-tree mst instance path-cost](#)
- [spanning-tree mst instance restricted-role](#)
- [spanning-tree mst instance restricted-tcn](#)

# spanning-tree mst instance restricted-role

**Overview** Use this command in Interface Configuration mode for a switch port interface only to enable the restricted role for an MSTI (Multiple Spanning Tree Instance) on a switch port. Configuring the restricted role for an MSTI on a switch port prevents the switch port from becoming the root port in a spanning tree topology.

Use the **no** variant of this command to disable the restricted role for an MSTI on a switch port. Removing the restricted role for an MSTI on a switch port allows the switch port to become the root port in a spanning tree topology.

**Syntax** `spanning-tree mst instance <instance-id> restricted-role`  
`no spanning-tree mst instance <instance-id> restricted-role`

| Parameter     | Description                                                                                                                                         |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <instance-id> | Specify an MSTP instance in the range 1-15. The MST instance must have already been created using the <a href="#">instance vlan (MSTP)</a> command. |

**Default** The restricted role for an MSTI instance on a switch port is disabled by default.

**Mode** Interface Configuration mode for a switch port interface only.

**Usage** The root port is the port providing the best path from the bridge to the root bridge. Use this command to disable a port from becoming a root port. Use the **no** variant of this command to enable a port to become a root port. See the [STP Feature Overview and Configuration Guide](#) for root port information.

**Examples** To prevent a switch port from becoming the root port, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# spanning-tree mst instance 3 restricted-role
```

To stop preventing the switch port from becoming the root port, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no spanning-tree mst instance 3
restricted-role
```

**Related  
Commands**

- instance vlan (MSTP)
- spanning-tree priority (port priority)
- spanning-tree mst instance
- spanning-tree mst instance path-cost
- spanning-tree mst instance restricted-tcn

# spanning-tree mst instance restricted-tcn

**Overview** Use this command to prevent a switch port from propagating received topology change notifications and topology changes to other switch ports. This is named restricted TCN (Topology Change Notification). A TCN is a simple Bridge Protocol Data Unit (BPDU) that a bridge sends out to its root port to signal a topology change.

Use the **no** variant of this command to stop preventing the switch port from propagating received topology change notifications and topology changes to other switch ports for the specified MSTI (Multiple Spanning Tree Instance).

The restricted TCN setting applies only to the specified MSTI (Multiple Spanning Tree Instance).

**Syntax** `spanning-tree mst instance <instance-id> restricted-tcn`  
`no spanning-tree mst instance <instance-id> restricted-tcn`

| Parameter     | Description                                                                                                                                         |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <instance-id> | Specify an MSTP instance in the range 1-15. The MST instance must have already been created using the <a href="#">instance vlan (MSTP)</a> command. |

**Default** Disabled. By default, switch ports propagate TCNs.

**Mode** Interface Configuration mode for a switch port interface only.

**Examples** To prevent a switch port from propagating received topology change notifications and topology changes to other switch ports, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# spanning-tree mst instance 3 restricted-tcn
```

To stop preventing a switch port from propagating received topology change notifications and topology changes to other switch ports, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no spanning-tree mst instance 3
restricted-tcn
```

**Related Commands** [instance vlan \(MSTP\)](#)  
[spanning-tree priority \(port priority\)](#)  
[spanning-tree mst instance](#)  
[spanning-tree mst instance path-cost](#)  
[spanning-tree mst instance restricted-role](#)

# spanning-tree path-cost

**Overview** Use this command in Interface Configuration mode for a switch port interface only to set the cost of a path for the specified port. This value then combines with others along the path to the root bridge in order to determine the total cost path value from the particular port, to the root bridge. The lower the numeric value, the higher the priority of the path. This applies when the port is the root port.

Use this command for RSTP, STP or MSTP. When MSTP mode is configured, this will apply to the port's path cost for the CIST.

**Syntax** `spanning-tree path-cost <pathcost>`  
`no spanning-tree path-cost`

| Parameter                     | Description                                                            |
|-------------------------------|------------------------------------------------------------------------|
| <code>&lt;pathcost&gt;</code> | <code>&lt;1-2000000000&gt;</code> The cost to be assigned to the port. |

**Default** The default path cost values and the range of recommended path cost values depend on the port speed, as shown in the following table from the IEEE 802.1q-2003 and IEEE 802.1d-2004 standards.

| Port speed         | Default path cost | Recommended path cost range |
|--------------------|-------------------|-----------------------------|
| Less than 100 Kb/s | 200,000,000       | 20,000,000-200,000,000      |
| 1Mbps              | 20,000,000        | 2,000,000-20,000,000        |
| 10Mbps             | 2,000,000         | 200,000-2,000,000           |
| 100 Mbps           | 200,000           | 20,000-200,000              |
| 1 Gbps             | 20,000            | 2,000-20,000                |
| 10 Gbps            | 2,000             | 200-2,000                   |
| 100 Gbps           | 200               | 20-200                      |
| 1Tbps              | 20                | 2-200                       |
| 10 Tbps            | 2                 | 2-20                        |

**Mode** Interface Configuration mode for switch port interface only.

**Example** `awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# spanning-tree path-cost 123`

# spanning-tree portfast (STP)

**Overview** Use this command in Interface Configuration mode for a switch port interface only to set a port as an edge-port. The portfast feature enables a port to rapidly move to the forwarding state, without having first to pass through the intermediate spanning tree states. This command has the same effect as the [spanning-tree edgeport \(RSTP and MSTP\)](#) command, but the configuration displays differently in the output of some show commands.

**NOTE:** You can run either of two additional parameters with this command. To simplify the syntax these are documented as separate commands. See the following additional portfast commands:

- [spanning-tree portfast bpdu-filter](#) command
- [spanning-tree portfast bpdu-guard](#) command.

You can obtain the same effect by running the [spanning-tree edgeport \(RSTP and MSTP\)](#) command. However, the configuration output may display differently in some show commands.

Use the **no** variant of this command to set a port to its default state (not an edge-port).

**Syntax** `spanning-tree portfast`  
`no spanning-tree portfast`

**Default** Not an edge port.

**Mode** Interface Configuration mode for a switch port interface only.

**Usage** Portfast makes a port move from a blocking state to a forwarding state, bypassing both listening and learning states. The portfast feature is meant to be used for ports connected to end-user devices. Enabling portfast on ports that are connected to a workstation or server allows devices to connect to the network without waiting for spanning-tree to converge.

For example, you may need hosts to receive a DHCP address quickly and waiting for STP to converge would cause the DHCP request to time out. Ensure you do not use portfast on any ports connected to another device to avoid creating a spanning-tree loop on the network.

Use this command on a switch port that connects to a LAN with no other bridges attached. An edge port should never receive BPDUs. Therefore if an edge port receives a BPDU, the portfast feature takes one of three actions.

- Cease to act as an edge port and pass BPDUs as a member of a spanning tree network ([spanning-tree portfast \(STP\)](#) command disabled).
- Filter out the BPDUs and pass only the data and continue to act as a edge port ([spanning-tree portfast bpdu-filter](#) command enabled).
- Block the port to all BPDUs and data ([spanning-tree portfast bpdu-guard](#) command enabled).

**Example**    `awplus# configure terminal`  
              `awplus(config)# interface port1.0.2`  
              `awplus(config-if)# spanning-tree portfast`

**Related  
Commands**    `spanning-tree edgeport (RSTP and MSTP)`  
                  `show spanning-tree`  
                  `spanning-tree portfast bpdu-filter`  
                  `spanning-tree portfast bpdu-guard`



# spanning-tree portfast bpdu-filter

**Overview** This command sets the bpdu-filter feature and applies a filter to any BPDUs (Bridge Protocol Data Units) received. Enabling this feature ensures that configured ports will not transmit any BPDUs and will ignore (filter out) any BPDUs received. BPDU Filter is not enabled on a port by default.

Using the **no** variant of this command to turn off the bpdu-filter, but retain the port's status as an enabled port. If the port then receives a BPDU it will change its role from an **edge-port** to a **non edge-port**.

**Syntax (Global Configuration)**

```
spanning-tree portfast bpdu-filter  
no spanning-tree portfast bpdu-filter
```

**Syntax (Interface Configuration)**

```
spanning-tree portfast bpdu-filter {default|disable|enable}  
no spanning-tree portfast bpdu-filter
```

| Parameter   | Description                                                                                                                                                                               |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| bpdu-filter | A port that has bpdu-filter enabled will not transmit any BPDUs and will ignore any BPDUs received. This port type has one of the following parameters (in Interface Configuration mode): |
| default     | Takes the setting that has been configured for the whole device, i.e. the setting made from the Global configuration mode.                                                                |
| disable     | Turns off BPDU filter.                                                                                                                                                                    |
| enable      | Turns on BPDU filter.                                                                                                                                                                     |

**Default** BPDU Filter is not enabled on any ports by default.

**Mode** Global Configuration and Interface Configuration

**Usage** This command filters the BPDUs and passes only data to continue to act as an edge port. Using this command in Global Configuration mode applies the portfast bpdu-filter feature to all ports on the device. Using it in Interface mode applies the feature to a specific port, or range of ports. The command will operate in both RSTP and MSTP networks.

Use the [show spanning-tree](#) command to display status of the bpdu-filter parameter for the switch ports.

**Example** To enable STP BPDU filtering in Global Configuration mode, enter the commands:

```
awplus# configure terminal  
awplus(config)# spanning-tree portfast bpdu-filter
```

To enable STP BPDU filtering in Interface Configuration mode, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# spanning-tree portfast bpdu-filter enable
```

**Related  
Commands**

[spanning-tree edgeport \(RSTP and MSTP\)](#)  
[show spanning-tree](#)  
[spanning-tree portfast \(STP\)](#)  
[spanning-tree portfast bpdu-guard](#)

# spanning-tree portfast bpduguard

**Overview** This command applies a BPDU (Bridge Protocol Data Unit) guard to the port. A port with the bpduguard feature enabled will block all traffic (BPDUs and user data), if it starts receiving BPDUs.

Use this command in Global Configuration mode to apply BPDU guard to all ports on the device. Use this command in Interface mode for an individual interface or a range of interfaces specified. BPDU Guard is not enabled on a port by default.

Use the **no** variant of this command to disable the BPDU Guard feature on a device in Global Configuration mode or to disable the BPDU Guard feature on a port in Interface mode.

## Syntax (Global Configuration)

```
spanning-tree portfast bpduguard  
no spanning-tree portfast bpduguard
```

## Syntax (Interface Configuration)

```
spanning-tree portfast bpduguard {default|disable|enable}  
no spanning-tree portfast bpduguard
```

| Parameter | Description                                                                                                                                                                        |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| bpduguard | A port that has bpduguard turned on will enter the STP blocking state if it receives a BPDU. This port type has one of the following parameters (in Interface Configuration mode): |
| default   | Takes the setting that has been configured for the whole device, i.e. the setting made from the Global configuration mode.                                                         |
| disable   | Turns off BPDU guard.                                                                                                                                                              |
| enable    | Turns on BPDU guard and will also set the port as an edge port.                                                                                                                    |

**Default** BPDU Guard is not enabled on any ports by default.

**Mode** Global Configuration or Interface Configuration

**Usage** This command blocks the port(s) to all devices and data when enabled. BPDU Guard is a port-security feature that changes how a portfast-enabled port behaves if it receives a BPDU. When **bpduguard** is set, then the port shuts down if it receives a BPDU. It does not process the BPDU as it is considered suspicious. When **bpduguard** is not set, then the port will negotiate spanning-tree with the device sending the BPDUs. By default, bpduguard is not enabled on a port.

You can configure a port disabled by the bpduguard to re-enable itself after a specific time interval. This interval is set with the [spanning-tree errdisable-timeout interval](#) command. If you do not use the **errdisable-timeout** feature, then you will need to manually re-enable the port by using the **no shutdown** command.

Use the [show spanning-tree](#) command to display the device and port configurations for the BPDU Guard feature. It shows both the administratively configured and currently running values of bpdu-guard.

**Example** To enable STP BPDU guard in Global Configuration mode, enter the below commands:

```
awplus# configure terminal
awplus(config)# spanning-tree portfast bpdu-guard
```

To enable STP BPDU guard in Interface Configuration mode, enter the below commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# spanning-tree portfast bpdu-guard enable
```

**Related Commands**

- [spanning-tree edgeport \(RSTP and MSTP\)](#)
- [show spanning-tree](#)
- [spanning-tree portfast \(STP\)](#)
- [spanning-tree portfast bpdu-filter](#)

# spanning-tree priority (bridge priority)

- Overview** Use this command to set the bridge priority for the device. A lower priority value indicates a greater likelihood of the device becoming the root bridge.
- Use this command for RSTP, STP or MSTP. When MSTP mode is configured, this will apply to the CIST.
- Use the **no** variant of this command to reset it to the default.

**Syntax** `spanning-tree priority <priority>`  
`no spanning-tree priority`

| Parameter                     | Description                                                                                    |
|-------------------------------|------------------------------------------------------------------------------------------------|
| <code>&lt;priority&gt;</code> | <code>&lt;0-61440&gt;</code> The bridge priority, which will be rounded to a multiple of 4096. |

**Default** The default priority is 32678.

**Mode** Global Configuration

**Usage** To force a particular device to become the root bridge use a lower value than other devices in the spanning tree.

**Example** `awplus# configure terminal`  
`awplus(config)# spanning-tree priority 4096`

**Related Commands** [spanning-tree mst instance priority](#)  
[show spanning-tree](#)

# spanning-tree priority (port priority)

**Overview** Use this command in Interface Configuration mode for a switch port interface only to set the port priority for port. A lower priority value indicates a greater likelihood of the port becoming part of the active topology.

Use this command for RSTP, STP, or MSTP. When the device is in MSTP mode, this will apply to the CIST.

Use the **no** variant of this command to reset it to the default.

**Syntax** `spanning-tree priority <priority>`  
`no spanning-tree priority`

| Parameter                     | Description                                                                                      |
|-------------------------------|--------------------------------------------------------------------------------------------------|
| <code>&lt;priority&gt;</code> | <0-240>, in increments of 16. The port priority, which will be rounded down to a multiple of 16. |

**Default** The default priority is 128.

**Mode** Interface Configuration mode for a switch port interface only.

**Usage** To force a port to be part of the active topology (for instance, become the root port or a designated port) use a lower value than other ports on the device. (This behavior is subject to network topology, and more significant factors, such as bridge ID.)

**Example**

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# spanning-tree priority 16
```

**Related Commands** [spanning-tree mst instance priority](#)  
[spanning-tree priority \(bridge priority\)](#)  
[show spanning-tree](#)

# spanning-tree restricted-role

**Overview** Use this command in Interface Configuration mode for a switch port interface only to restrict the port from becoming a root port.

Use the **no** variant of this command to disable the restricted role functionality.

**Syntax** `spanning-tree restricted-role`  
`no spanning-tree restricted-role`

**Default** The restricted role is disabled.

**Mode** Interface Configuration mode for a switch port interface only.

**Example** `awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# spanning-tree restricted-role`

# spanning-tree restricted-tcn

**Overview** Use this command in Interface Configuration mode for a switch port interface only to prevent TCN (Topology Change Notification) BPDUs (Bridge Protocol Data Units) from being sent on a port. If this command is enabled, after a topology change a bridge is prevented from sending a TCN to its designated bridge.

Use the **no** variant of this command to disable the restricted TCN functionality.

**Syntax** `spanning-tree restricted-tcn`  
`no spanning-tree restricted-tcn`

**Default** The restricted TCN is disabled.

**Mode** Interface Configuration mode for a switch port interface only.

**Example** `awplus# configure terminal`  
`awplus(config)# interface port1.0.2`  
`awplus(config-if)# spanning-tree restricted-tcn`



# spanning-tree transmit-holdcount

**Overview** Use this command to set the maximum number of BPDU transmissions that are held back.

Use the **no** variant of this command to restore the default transmit hold-count value.

**Syntax** `spanning-tree transmit-holdcount`  
`no spanning-tree transmit-holdcount`

**Default** Transmit hold-count default is 3.

**Mode** Global Configuration

**Example** `awplus# configure terminal`  
`awplus(config)# spanning-tree transmit-holdcount`

# undebbug mstp

**Overview** This command applies the functionality of the no `debug mstp` (RSTP and STP) command.

# 15

# Link Aggregation Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure a static channel group (static aggregator) and dynamic channel group (LACP channel group, etherchannel or LACP aggregator). Link aggregation is also sometimes referred to as channeling.

**NOTE:** *AlliedWare Plus™ supports IEEE 802.3ad link aggregation and uses the Link Aggregation Control Protocol (LACP). LACP does not interoperate with devices that use Port Aggregation Protocol (PAgP).*

*Link aggregation does not necessarily achieve exact load balancing across the links. The load sharing algorithm is designed to ensure that any given data flow always goes down the same link. It also aims to spread data flows across the links as evenly as possible.*

*Link aggregation hashes one or more of the source and destination MAC address, IP address and UDP/TCP ports to select a link on which to send a packet. So packet flow between a pair of hosts always takes the same link inside the Link Aggregation Group (LAG). The net effect is that the bandwidth for a given packet stream is restricted to the speed of one link in the LAG.*

*For example, for a 2 Gbps LAG that is a combination of two 1 Gbps ports, any one flow of traffic can only ever reach a maximum throughput of 1 Gbps. However, the hashing algorithm should spread the flows across the links so that when many flows are operating, the full 2 Gbps can be utilized.*

For a description of static and dynamic link aggregation (LACP), and configuration examples, see the [Link Aggregation Feature Overview and Configuration Guide](#).

- Command List**
- “[channel-group](#)” on page 601
  - “[clear lacp counters](#)” on page 603
  - “[debug lacp](#)” on page 604
  - “[lacp global-passive-mode enable](#)” on page 605
  - “[lacp port-priority](#)” on page 606

- ["lacp system-priority"](#) on page 607
- ["lacp timeout"](#) on page 608
- ["show debugging lacp"](#) on page 610
- ["show diagnostic channel-group"](#) on page 611
- ["show etherchannel"](#) on page 613
- ["show etherchannel detail"](#) on page 614
- ["show etherchannel summary"](#) on page 615
- ["show lacp sys-id"](#) on page 616
- ["show lacp-counter"](#) on page 617
- ["show port etherchannel"](#) on page 618
- ["show static-channel-group"](#) on page 619
- ["static-channel-group"](#) on page 620
- ["undebg lacp"](#) on page 622

# channel-group

**Overview** Use this command to either create a new dynamic channel group while at the same time adding a port to it, or to add a port to an existing dynamic channel group. Note that you must also set the LACP mode to be either active or passive.

You can create up to 32 dynamic (LACP) channel groups (and up to 96 static channel groups).

Use the **no** variant of this command to turn off link aggregation on the device port. You will be returned to Global Configuration mode from Interface Configuration mode.

**Syntax** `channel-group <dynamic-channel-group-number> mode {active|passive}`  
`no channel-group`

| Parameter                                         | Description                                                                                                                                                                                |
|---------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;dynamic-channel-group-number&gt;</code> | <code>&lt;1-32&gt;</code> Specify a dynamic channel group number for an LACP link. You can create up to 32 dynamic (LACP) channel groups (in addition to up to 96 static channel groups).  |
| <code>active</code>                               | Enables initiation of LACP negotiation on a port. The port will transmit LACP dialogue messages whether or not it receives them from the partner device.                                   |
| <code>passive</code>                              | Disables initiation of LACP negotiation on a port. The port will only transmit LACP dialogue messages if the partner device is transmitting them, i.e., the partner is in the active mode. |

**Mode** Interface Configuration

**Usage** All the device ports in a channel-group must belong to the same VLANs, have the same tagging status, and can only be operated on as a group. All device ports within a channel group must have the same port speed and be in full duplex mode.

Once the LACP channel group has been created, it is treated as a device port, and can be referred to in most other commands that apply to device ports.

To refer to an LACP channel group in other LACP commands, use the channel group number. To specify an LACP channel group (LACP aggregator) in other commands, prefix the channel group number with **po**. For example, 'po2' refers to the LACP channel group with channel group number 2.

For more information about LACP, see the [Link Aggregation Feature Overview and Configuration Guide](#) which is available on our website at [alliedtelesis.com](#).

**Examples** To add device port1.0.6 to a newly created LACP channel group 2 use the commands below:

```
awplus# configure terminal
awplus(config)# interface port1.0.6
awplus(config-if)# channel-group 2 mode active
```

To remove device port1.0.6 from any created LACP channel groups use the command below:

```
awplus# configure terminal
awplus(config)# interface port1.0.6
awplus(config-if)# no channel-group
```

To reference channel group 2 as an interface, use the following commands:

```
awplus# configure terminal
awplus(config)# interface po2
awplus(config-if)#
```

**Related  
Commands**

- [show etherchannel](#)
- [show etherchannel detail](#)
- [show etherchannel summary](#)
- [show port etherchannel](#)

# clear lacp counters

**Overview** Use this command to clear all counters of all present LACP aggregators (channel groups) or a given LACP aggregator.

**Syntax** `clear lacp [<1-32>] counters`

| Parameter | Description           |
|-----------|-----------------------|
| <1-32>    | Channel-group number. |

**Mode** Privileged Exec

**Example** `awplus# clear lacp 2 counters`

# debug lacp

**Overview** Use this command to enable all LACP troubleshooting functions.

Use the **no** variant of this command to disable this function.

**Syntax** `debug lacp {all|cli|event|ha|packet|sync|timer[detail]}`  
`no debug lacp {all|cli|event|ha|packet|sync|timer[detail]}`

| Parameter | Description                                                                                               |
|-----------|-----------------------------------------------------------------------------------------------------------|
| all       | Turn on all debugging for LACP.                                                                           |
| cli       | Specifies debugging for CLI messages.<br>Echoes commands to the console.                                  |
| event     | Specifies debugging for LACP events.<br>Echoes events to the console.                                     |
| ha        | Specifies debugging for HA (High Availability) events.<br>Echoes High Availability events to the console. |
| packet    | Specifies debugging for LACP packets.<br>Echoes packet contents to the console.                           |
| sync      | Specified debugging for LACP synchronization.<br>Echoes synchronization to the console.                   |
| timer     | Specifies debugging for LACP timer.<br>Echoes timer expiry to the console.                                |
| detail    | Optional parameter for LACP timer-detail.<br>Echoes timer start/stop details to the console.              |

**Mode** Privileged Exec and Global Configuration

**Examples** `awplus# debug lacp timer detail`  
`awplus# debug lacp all`

**Related Commands** [show debugging lacp](#)  
[undebug lacp](#)



# lacp global-passive-mode enable

**Overview** Use this command to enable LACP channel-groups to dynamically self-configure when they are connected to another device that has LACP channel-groups configured with Active Mode.

**Syntax** `lacp global-passive-mode enable`  
`no lacp global-passive-mode enable`

**Default** Enabled

**Mode** Global Configuration

**Usage** Do not mix LACP configurations (manual & dynamic). When LACP global passive mode is turned on (by using the **lacp global-passive-mode enable** command), we do not recommend using a mixed configuration in a LACP channel-group; i.e. some links are manually configured (by the **channel-group** command) and others are dynamically learned in the same channel-group.

**Example** To enable global passive mode for LACP channel groups, use the command:

```
awplus(config)# lacp global-passive-mode enable
```

To disable global passive mode for LACP channel groups, use the command:

```
awplus(config)# no lacp global-passive-mode enable
```

**Related  
Commands** [show etherchannel](#)  
[show etherchannel detail](#)

# lacp port-priority

**Overview** Use this command to set the priority of a device port. Ports are selected for aggregation based on their priority, with the higher priority (numerically lower) ports selected first.

Use the **no** variant of this command to reset the priority of port to the default.

**Syntax** lacp port-priority <1-65535>  
no lacp port-priority

| Parameter | Description                     |
|-----------|---------------------------------|
| <1-65535> | Specify the LACP port priority. |

**Default** The default is 32768.

**Mode** Interface Configuration

**Example** awplus# configure terminal  
awplus(config)# interface port1.0.5  
awplus(config-if)# lacp port-priority 34

# lacp system-priority

**Overview** Use this command to set the system priority of a local system. This is used in determining the system responsible for resolving conflicts in the choice of aggregation groups.

Use the **no** variant of this command to reset the system priority of the local system to the default.

**Syntax** lacp system-priority <1-65535>  
no lacp system-priority

| Parameter | Description                                                          |
|-----------|----------------------------------------------------------------------|
| <1-65535> | LACP system priority. Lower numerical values have higher priorities. |

**Default** The default is 32768.

**Mode** Global Configuration

**Example** awplus# configure terminal  
awplus(config)# lacp system-priority 6700

# lacp timeout

**Overview** Use this command to set the short or long timeout on a port. Ports will time out of the aggregation if three consecutive updates are lost.

**Syntax** `lacp timeout {short|long}`

| Parameter | Description                                                            |
|-----------|------------------------------------------------------------------------|
| timeout   | Number of seconds before invalidating a received LACP data unit (DU).  |
| short     | LACP short timeout. The <b>short</b> timeout value is <b>1</b> second. |
| long      | LACP long timeout. The <b>long</b> timeout value is <b>30</b> seconds. |

**Default** The default is **long** timeout (30 seconds).

**Mode** Interface Configuration

**Usage** This command enables the device to indicate the rate at which it expects to receive LACPDU's from its neighbor.

If the timeout is set to **long**, then the device expects to receive an update every **30** seconds, and this will time a port out of the aggregation if no updates are seen for 90 seconds (i.e. 3 consecutive updates are lost).

If the timeout is set to **short**, then the device expects to receive an update every second, and this will time a port a port out of the aggregation if no updates are seen for 3 seconds (i.e. 3 consecutive updates are lost).

The device indicates its preference by means of the Timeout field in the Actor section of its LACPDUs. If the Timeout field is set to 1, then the device has set the **short** timeout. If the Timeout field is set to 0, then the device has set the **long** timeout.

Setting the **short** timeout enables the device to be more responsive to communication failure on a link, and does not add too much processing overhead to the device (1 packet per second).

**NOTE:** *It is not possible to configure the rate that the device sends LACPDUs; the device must send at the rate which the neighbor indicates it expects to receive LACPDUs.*

**Examples** The following commands set the LACP long timeout period for 30 seconds on port1.0.2.

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# lacp timeout long
```

The following commands set the LACP short timeout for 1 second on port1.0.2.

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# lacp timeout short
```

# show debugging lacp

**Overview** Use this command to display the LACP debugging option set.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show debugging lacp

**Mode** User Exec and Privileged Exec

**Example** awplus# show debugging lacp

**Output** Figure 15-1: Example output from the **show debugging lacp** command

```
LACP debugging status:
LACP timer debugging is on
LACP timer-detail debugging is on
LACP cli debugging is on
LACP packet debugging is on
LACP event debugging is on
LACP sync debugging is on
```

**Related  
Commands** [debug lacp](#)

# show diagnostic channel-group

**Overview** This command displays dynamic and static channel group interface status information. The output of this command is useful for Allied Telesis authorized service personnel for diagnostic purposes.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the “[Getting Started with AlliedWare Plus](#)” [Feature Overview and Configuration Guide](#).

**Syntax** show diagnostic channel-group

**Mode** User Exec and Privileged Exec

**Example** awplus# show diagnostic channel-group

**Output** Figure 15-2: Example output from the **show diagnostic channel-group** command

```
awplus#show diagnostic channel-group
```

|                                        |           |         |             |         |        |     |
|----------------------------------------|-----------|---------|-------------|---------|--------|-----|
| Channel Group Info based on NSM:       |           |         |             |         |        |     |
| Note: Pos - position in hardware table |           |         |             |         |        |     |
| Dev                                    | Interface | IfIndex | Member port | IfIndex | Active | Pos |
| sa3                                    |           | 4503    | port1.0.15  | 5015    | No     |     |
| sa3                                    |           | 4503    | port1.0.18  | 5018    | No     |     |
| po1                                    |           | 4601    | port1.0.7   | 5007    | No     |     |
| po1                                    |           | 4601    | port1.0.8   | 5008    | No     |     |
| po1                                    |           | 4601    | port1.0.9   | 5009    | No     |     |

|                                        |           |         |             |         |        |     |
|----------------------------------------|-----------|---------|-------------|---------|--------|-----|
| Channel Group Info based on HSL:       |           |         |             |         |        |     |
| Note: Pos - position in hardware table |           |         |             |         |        |     |
| Dev                                    | Interface | IfIndex | Member port | IfIndex | Active | Pos |
| sa3                                    |           | 4503    |             |         | N/a    |     |
| po1                                    |           | 4601    |             |         | N/a    |     |

|                                        |           |         |             |         |        |     |
|----------------------------------------|-----------|---------|-------------|---------|--------|-----|
| Channel Group Info based on IPIFWD:    |           |         |             |         |        |     |
| Note: Pos - position in hardware table |           |         |             |         |        |     |
| Dev                                    | Interface | IfIndex | Member port | IfIndex | Active | Pos |
| sa3                                    |           | 4503    |             |         | N/a    |     |
| po1                                    |           | 4601    |             |         | N/a    |     |

```
Channel Group Info based on HW:
Note: Pos - position in hardware table
      Only entries from first device are displayed.
-----
Dev  Interface  IfIndex  Member port  IfIndex  Active  Pos
-----
      sa3        4503                N/a
      po1        4601                N/a

No error found
```

**Related** [show tech-support](#)  
**Commands**



# show etherchannel

**Overview** Use this command to display information about a LACP channel specified by the channel group number.

The command output also shows the thrash limiting status. If thrash limiting is detected and the **thrash limiting** parameter of the [thrash-limiting](#) command is set to **vlan disable**, the output will also show the VLANs on which thrashing is detected.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#), which is available on our website at [alliedtelesis.com](http://alliedtelesis.com).

**Syntax** `show etherchannel [<1-32>]`

| Parameter | Description           |
|-----------|-----------------------|
| <1-32>    | Channel-group number. |

**Mode** User Exec and Privileged Exec

**Example** `awplus# show etherchannel 2`

**Output** Example output from **show etherchannel** for a particular channel

```
% LACP Aggregator: po1

Thrash-limiting

Status Vlan Thrashing Detected, Action vlan-disable 60(s)

Thrashing Vlan 1 2 3 4 5
% Member:
  port1.0.4
  port1.0.6
```

# show etherchannel detail

**Overview** Use this command to display detailed information about all LACP channels.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#), which is available on our website at [alliedtelesis.com](http://alliedtelesis.com).

**Syntax** show etherchannel detail

**Mode** User Exec and Privileged Exec

**Example** awplus# show etherchannel detail

**Output** Example output from **show etherchannel detail**

```
awplus#show etherchannel detail
Aggregator po1 (IfIndex: 4601)
  Mac address: 00:00:cd:37:05:17
  Admin Key: 0001 - Oper Key 0001
  Receive link count: 2 - Transmit link count: 2
  Individual: 0 - Ready: 1
  Partner LAG: 0x8000,00-00-cd-37-02-9a,0x0001
    Link: port1.0.1 (IfIndex: 8002) synchronized
    Link: port1.0.2 (IfIndex: 20002) synchronized
Aggregator po2 (IfIndex: 4602)
  Mac address: 00:00:cd:37:05:17
  Admin Key: 0002 - Oper Key 0002
  Receive link count: 2 - Transmit link count: 2
  Individual: 0 - Ready: 1
  Partner LAG: 0x8000,ec-cd-6d-aa-c8-56,0x0002
    Link: port1.0.3 (IfIndex: 8001) synchronized
    Link: port1.0.4 (IfIndex: 20001) synchronized
```

# show etherchannel summary

**Overview** Use this command to display a summary of all LACP channels.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#), which is available on our website at [alliedtelesis.com](http://alliedtelesis.com).

**Syntax** `show etherchannel summary`

**Mode** User Exec and Privileged Exec

**Example** `awplus# show etherchannel summary`

**Output** Example output from **show etherchannel summary**

```
awplus#show etherchannel summary
Aggregator po10 (IfIndex: 4610)
Admin Key: 0010 - Oper Key 0010
  Link: port1.0.1 (IfIndex: 7007) synchronized
  Link: port1.0.2 (IfIndex: 8007) synchronized
  Link: port1.0.3 (IfIndex: 11007) synchronized
```

# show lacp sys-id

**Overview** Use this command to display the LACP system ID and priority.  
For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#), which is available on our website at [alliedtelesis.com](http://alliedtelesis.com).

**Syntax** `show lacp sys-id`

**Mode** User Exec and Privileged Exec

**Example** `awplus# show lacp sys-id`

**Output** Example output from **show lacp sys-id**

```
System Priority: 0x8000 (32768)
MAC Address: 0200.0034.5684
```

# show lacp-counter

**Overview** Use this command to display the packet traffic on all ports of all present LACP aggregators, or a given LACP aggregator.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#), which is available on our website at [alliedtelesis.com](http://alliedtelesis.com).

**Syntax** show lacp-counter [<1-32>]

| Parameter | Description           |
|-----------|-----------------------|
| <1-32>    | Channel-group number. |

**Mode** User Exec and Privileged Exec

**Example** awplus# show lacp-counter 2

**Output** Example output from **show lacp-counter**

|                                  |         |      |        |      |          |      |
|----------------------------------|---------|------|--------|------|----------|------|
| % Traffic statistics             |         |      |        |      |          |      |
| Port                             | LACPDUs |      | Marker |      | Pckt err |      |
|                                  | Sent    | Recv | Sent   | Recv | Sent     | Recv |
| % Aggregator po2 (IfIndex: 4604) |         |      |        |      |          |      |
| port1.0.2                        | 0       | 0    | 0      | 0    | 0        | 0    |

# show port etherchannel

**Overview** Use this command to show LACP details of the device port specified.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#), which is available on our website at [alliedtelesis.com](http://alliedtelesis.com).

**Syntax** show port etherchannel <port>

| Parameter | Description                                                |
|-----------|------------------------------------------------------------|
| <port>    | Name of the device port to display LACP information about. |

**Mode** User Exec and Privileged Exec

**Example** awplus# show port etherchannel port1.0.2

**Output** Example output from **show port etherchannel**

```
awplus#show port etherchannel port1.0.2
LACP link info: port1.0.2 - 7007
Link: port1.0.2 (IfIndex: 7007)
Aggregator: po10 (IfIndex: 4610)
Receive machine state: Current
Periodic Transmission machine state: Slow periodic
Mux machine state: Collecting/Distributing
Actor Information:
Selected ..... Selected
Physical Admin Key ..... 2
Port Key ..... 10
Port Priority ..... 32768
Port Number ..... 7007
Mode ..... Active
Timeout ..... Long
Individual ..... Yes
Synchronised ..... Yes
Collecting ..... Yes
Distributing ..... Yes
Defaulted ..... No
Expired ..... No
Partner Information:
Partner Sys Priority ..... 0x8000
Partner System .. ec-cd-6d-d1-64-d0
Port Key ..... 10
Port Priority ..... 32768
Port Number ..... 5001
Mode ..... Active
Timeout ..... Long
Individual ..... Yes
Synchronised ..... Yes
Collecting ..... Yes
Distributing ..... Yes
Defaulted ..... No
Expired ..... No
```

# show static-channel-group

**Overview** Use this command to display all configured static channel groups and their corresponding member ports. Note that a static channel group is the same as a static aggregator.

The command output also shows the thrash limiting status. If thrash limiting is detected and the **thrash limiting** parameter of the [thrash-limiting](#) command is set to **vlan disable**, the output will also show the VLANs on which thrashing is detected.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#), which is available on our website at [alliedtelesis.com](http://alliedtelesis.com).

**Syntax** `show static-channel-group`

**Mode** User Exec and Privileged Exec

**Example** `awplus# show static-channel-group`

**Output** Example output from **show static-channel-group**

```
% LAG Maximum      : 128
% LAG Static  Maximum: 96
% LAG Dynamic Maximum: 32
% LAG Static  Count  : 2
% LAG Dynamic Count  : 2
% LAG Total   Count  : 4
% Static Aggregator: sa2
% Member:
  port1.0.1
% Static Aggregator: sa3
% Member:
  port1.0.2
```

**Related Commands** [static-channel-group](#)

# static-channel-group

**Overview** Use this command to create a static channel group, or add a member port to an existing static channel group. Static channel groups are also known as static aggregators.

You can create up to 96 static channel groups (and up to 32 dynamic channel groups).

Use the **no** variant of this command to remove the device port from the static channel group.

**Syntax** `static-channel-group <static-channel-group-number>`  
`[member-filters]`  
`no static-channel-group`

| Parameter                                        | Description                                                                                                                                                                                                       |
|--------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;static-channel-group-number&gt;</code> | <1-96> Static channel group number.                                                                                                                                                                               |
| <code>member-filters</code>                      | Allow QoS and ACL settings to be configured on the aggregator's individual member ports, instead of the aggregator itself. This configuration is required when using QoS Storm Protection on a static aggregator. |

**Mode** Interface Configuration

**Usage** This command adds the device port to the static channel group with the specified channel group number. If the channel group does not exist, it is created, and the port is added to it. The **no** prefix detaches the port from the static channel group. If the port is the last member to be removed, the static channel group is deleted.

All the ports in a channel group must have the same VLAN configuration: they must belong to the same VLANs and have the same tagging status, and can only be operated on as a group.

Once the static channel group has been created, it is treated as a device port, and can be referred to in other commands that apply to device ports.

To refer to a static channel group in other static channel group commands, use the channel group number. To specify a static channel group in other commands, prefix the channel group number with **sa**. For example, 'sa2' refers to the static channel group with channel group number 2.

**Examples** To define static channel group 2 on a device port, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# static-channel-group 2
```



To reference static channel group 2 as an interface, use the commands:

```
awplus# configure terminal
awplus(config)# interface sa2
awplus(config-if)#
```

To make it possible to use QoS Storm Protection on static channel group 2 on port1.0.6, with an ACL named "test-acl", use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.6
awplus(config-if)# static-channel-group 2 member-filters
awplus(config-if)# access-group test-acl
```

**Related Commands** [show static-channel-group](#)

# undebbug lacp

**Overview** This command applies the functionality of the no `debug lacp` command.

# 16

# Power over Ethernet Commands

## Introduction

**Overview** This chapter contains an alphabetical list of commands used to configure Power over Ethernet (PoE). Each command contains a functional description and shows examples of configuration and output screens for show commands. These commands are only supported on PoE capable ports. An error message will display on the console if you enter a PoE command on a port that does not support PoE. The following documents offer further information for configuring PoE on AlliedWare Plus switches.

- the [PoE Feature Overview and Configuration\\_Guide](#).
- the [Support for Allied Telesis Enterprise\\_MIBs in AlliedWare Plus](#), for information about which PoE MIB objects are supported.
- the [SNMP Feature Overview and Configuration\\_Guide](#), for information about SNMP traps.

Power over Ethernet (PoE) is a technology allowing devices such as IP phones to receive power over existing LAN cabling.

PoE is configured using the commands in this chapter. Note the Power Sourcing Equipment (PSE) referred to throughout this chapter is an Allied Telesis PoE switch running the AlliedWare Plus™ Operating System, supporting the IEEE 802.3af and IEEE 802.3at Power Ethernet standards. The Powered Device (PD) referred to throughout this chapter is a PoE or PoE+ powered device, such as an IP phone or a Wireless Access Point (WAP).

The commands in this chapter are available on the Allied Telesis IX5-28GPX switch. IX5-28GPX switches are Layer 2 PoE+ Gigabit Ethernet switches with SFP+ support.

**NOTE:** Note that IX5-28GPX Layer 2 Gigabit Ethernet PoE+ switches with SFP / SFP+ support can have one or two hot-swappable AT-PWR800 (800 W) power supplies installed.

See the **IX5 Series Installation Guide** for information about PSU options.

**NOTE:**

- Command List**
- [“clear power-inline counters interface”](#) on page 625
  - [“debug power-inline”](#) on page 626
  - [“power-inline allow-legacy”](#) on page 628
  - [“power-inline description”](#) on page 629
  - [“power-inline enable”](#) on page 630
  - [“power-inline max”](#) on page 631
  - [“power-inline priority”](#) on page 633
  - [“power-inline usage-threshold”](#) on page 635
  - [“service power-inline”](#) on page 636
  - [“show debugging power-inline”](#) on page 637
  - [“show power-inline”](#) on page 638
  - [“show power-inline counters”](#) on page 641
  - [“show power-inline interface”](#) on page 643
  - [“show power-inline interface detail”](#) on page 645

# clear power-inline counters interface

**Overview** This command will clear the counters from a specified port, a range of ports, or all ports on the Power Sourcing Equipment (PSE). If no ports are entered then PoE counters for all ports are cleared. It will also clear all Power over Ethernet (PoE) counters supported by the Power Ethernet MIB (RFC 3621).

**Syntax** `clear power-inline counters interface [<port-list>]`

| Parameter   | Description                                                 |
|-------------|-------------------------------------------------------------|
| <port-list> | Selects the port or ports whose counters are to be cleared. |

**Mode** Privileged Exec

**Usage** The PoE counters are displayed with the [show power-inline counters](#) command.

**Examples** To clear the PoE counters for `port1.0.2` only, use the following command:

```
awplus# clear power-inline counters interface port1.0.2
```

To clear the PoE counters for `port1.0.1` through `port1.0.10`, use the following command:

```
awplus# clear power-inline counters interface  
port1.0.1-port1.0.10
```

To clear the PoE counters for all ports, use the following command:

```
awplus# clear power-inline counters interface
```

**Validation  
Commands** [show power-inline counters](#)

# debug power-inline

**Overview** This command enables debugging display for messages that are specific to Power over Ethernet (PoE).

Use the **no** variant of this command to disable the specified PoE debugging messages.

**Syntax** `debug power-inline [all|event|info|power]`  
`no debug power-inline [all|event|info|power]`

| Parameter | Description                                                                                                                      |
|-----------|----------------------------------------------------------------------------------------------------------------------------------|
| all       | Displays all (event, info, nsm, power) debug messages.                                                                           |
| event     | Displays event debug information, showing any error conditions that may occur during PoE operation.                              |
| info      | Displays informational level debug information, showing high-level essential debugging, such as information about message types. |
| power     | Displays power management debug information.                                                                                     |

**Default** No debug messages are enabled by default.

**Mode** Privileged Exec

**Usage** Use the [terminal monitor](#) command to display PoE debug messages on the console.

Use the [show debugging power-inline](#) command to show the PoE debug configuration.

**Examples** To enable PoE debugging and start the display of PoE `event` and `info` debug messages on the console, use the following commands:

```
awplus# terminal monitor
awplus# debug power-inline event info
```

To enable PoE debugging and start the display of all PoE debugging messages on the console, use the following commands:

```
awplus# terminal monitor
awplus# debug power-inline all
```

To disable PoE debugging and stop the display of PoE `event` and `info` debug messages on the console, use the following command:

```
awplus# no debug power-inline event info
```

To disable all PoE debugging and stop the display of any PoE debugging messages on the console, use the following command:

```
awplus# no debug power-inline all
```

**Validation** [show debugging power-inline](#)  
**Commands**

**Related** [terminal monitor](#)  
**Commands**

# power-inline allow-legacy

**Overview** This command enables detection of pre-IEEE 802.3af Power Ethernet standard legacy Powered Devices (PDs).

The no variant of this command disables detection of pre-IEEE 802.3af Power Ethernet standard legacy Powered Devices (PDs).

**Syntax** `power-inline allow-legacy`  
`no power-inline allow-legacy`

**Default** Detection of legacy PDs is enabled on all ports on the Power Sourcing Equipment (PSE).

**Mode** Global Configuration

**Examples** To disable detection of legacy PDs, use the following commands:

```
awplus# configure terminal
awplus(config)# no power-inline allow-legacy
```

To enable detection of legacy PDs, use the following commands:

```
awplus# configure terminal
awplus(config)# power-inline allow-legacy
```

**Validation Commands** `show power-inline`  
`show running-config power-inline`



# power-inline description

**Overview** This command adds a description for a Powered Device (PD) connected to a PoE port.

The **no** variant of this command clears a previously entered description for a connected PD, resetting the PD description to the default (null).

**Syntax** `power-inline description <pd-description>`  
`no power-inline description`

| Parameter                           | Description                                                                                                             |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;pd-description&gt;</code> | Description of the PD connected to the PoE capable port (with a maximum 256 character string limit per PD description). |

**Default** No description for a connected PD is set by default.

**Mode** Interface Configuration

**Usage** Select a PoE port, a list of PoE ports, or a range of PoE ports with the preceding [interface \(to configure\)](#) command. If you specify a range or list of ports they must all be PoE capable ports.

**Examples** To add the description `Desk Phone` for a connected PD on `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# power-inline description Desk Phone
```

To clear the description as added above for the connected PD on `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no power-inline description
```

**Validation Commands** [show power-inline interface](#)  
[show running-config power-inline](#)

# power-inline enable

**Overview** This command enables Power over Ethernet (PoE) to detect a connected Powered Device (PD) and supply power from the Power Sourcing Equipment (PSE).

The **no** variant of this command disables PoE functionality on the selected PoE port(s). No power is supplied to a connected PD after PoE is disabled on the selected PoE port(s).

**Syntax** `power-inline enable`  
`no power-inline enable`

**Default** PoE is enabled by default on all ports on the PSE.

**Mode** Interface Configuration

**Usage** In a stack of IX5 switches this command is supported on all PoE capable ports.

Select a PoE port, a list of PoE ports, or a range of PoE ports from the preceding [interface \(to configure\)](#) command. If you specify a range or list of ports they must all be PoE capable ports.

No PoE log messages are generated for specified PoE port(s) after PoE is disabled. The disabled PoE port(s) still provide Ethernet connectivity after PoE is disabled.

**Examples** To disable PoE on ports `port1.0.1` to `port1.0.4`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1-port1.0.4
awplus(config-if)# no power-inline enable
```

To enable PoE on ports `port1.0.1` to `port1.0.4`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1-port1.0.4
awplus(config-if)# power-inline enable
```

**Validation Commands** [show power-inline](#)  
[show power-inline interface](#)  
[show power-inline interface detail](#)  
[show running-config power-inline](#)

# power-inline max

**Overview** This command sets the “maximum” power allocated to a Power over an Ethernet (PoE and PoE+) port. The amount of power actually supplied to the port depends on the power requirements of the connected PD. It is also a function of the total PoE power loading on the switch and the PoE priority set for the port by the [power-inline priority](#) command. However this command (power-inline max) does apply a “maximum” value to the power that the port is able to supply.

Note that the value set by this command will be the figure the switch will use when apportioning the power budget for its ports. For example, if 15.4 W is assigned to a port whose PD only consumes 5 W, the switch will reserve the full 15.4 W for this port when determining its total power PoE power requirement.

The **no** variant of this command sets the maximum power supplied to a PoE port to the default, which is set to the maximum power limit for the class of the connected Powered Device (PD).

**Syntax** `power-inline max <4000-30000>`  
`no power-inline max`

| Parameter                       | Description                                                   |
|---------------------------------|---------------------------------------------------------------|
| <code>&lt;4000-30000&gt;</code> | The maximum power allocated to a PoE port in milliwatts (mW). |

**Default** The Power Sourcing Equipment (PSE) supplies the maximum power limit for the class of the PD connected to the port by default.

**NOTE:** See the [PoE Feature Overview and Configuration Guide](#) for further information about power classes.

**Mode** Interface Configuration

**Usage** In a stack of IX5 switches this command is supported on all PoE capable ports. Select a PoE port, a list of PoE ports, or a range of PoE ports with the preceding [interface \(to configure\)](#) command. If you specify a range or list of ports they must all be PoE capable ports.

If you select a range of PoE ports in Interface Configuration mode before issuing this command, then each port in the range selected will have the same maximum power value configured. If the PoE port attempts to draw more than the maximum power, this is logged and all power is removed. Note that the value entered is rounded up to the next value supported by the hardware.

See the actual value used, as shown after command entry, in the sample console output below:

```
awplus#configure terminal

awplus(config)#interface
port1.0.1

awplus(config-if)#power-line max 5300

% The maximum power has been rounded to 5450mW in hardware.
```

See the [LLDP Feature Overview and Configuration Guide](#) for information about power monitoring at the PD.

Note the difference in power supplied from the PSE to the power available at the PD due to line loss.

See the [PoE Feature Overview and Configuration Guide](#) for further information about the difference between the power supplied from the PSE and the power available at the PD.

**Examples** To set the maximum power supplied to ports in the range 1.0.2 to 1.0.4 to 6450mW per port, use the following commands:

```
awplus# configure terminal

awplus(config)# interface port1.0.2-port1.0.4

awplus(config-if)# power-inline max 6450
```

To set the maximum power supplied to port 1.0.2, to 6450 mW, use the following commands:

```
awplus# configure terminal

awplus(config)# interface port1.0.2

awplus(config-if)# power-inline max 6450
```

To clear the user-configured maximum power supplied to port 1.0.2, and revert to using the default maximum power of 30000 mW, use the following commands:

```
awplus# configure terminal

awplus(config)# interface port1.0.2

awplus(config-if)# no power-inline max
```

**Validation Commands** [show power-inline interface](#)  
[show running-config power-inline](#)

# power-inline priority

**Overview** This command sets the Power over Ethernet (PoE) priority level of a PoE port to one of three available priority levels:

- low
- high
- critical

The **no** variant of this command restores the PoE port priority to the default (low).

**Syntax** `power-inline priority {low|high|critical}`  
`no power-inline priority`

| Parameter | Description                                                                                                                                                                                                                                                                    |
|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| low       | The lowest priority for a PoE enabled port (default). PoE ports set to <code>low</code> only receive power if all the PoE ports assigned to the other two levels are already receiving power.                                                                                  |
| high      | The second highest priority for a PoE enabled port. PoE ports set to <code>high</code> receive power only if all the ports set to <code>critical</code> are already receiving power.                                                                                           |
| critical  | The highest priority for a PoE enabled port. PoE ports set to <code>critical</code> are guaranteed power before any ports assigned to the other two priority levels. Ports assigned to the other priority levels receive power only if all Critical ports are receiving power. |

**Default** The default priority is `low` for all PoE ports on the Power Sourcing Equipment (PSE).

**Mode** Interface Configuration

**Usage** This command is supported on all PoE capable ports, whether operating as a stand-alone switch, or within a VCS stack.

Select a PoE port, a list of PoE ports, or a range of PoE ports with the preceding [interface \(to configure\)](#) command. If you specify a range or list of ports they must all be PoE capable ports.

PoE ports with higher priorities are given power before PoE ports with lower priorities. If the priorities for two PoE ports are the same then the lower numbered PoE port is given power before the higher numbered PoE port.

See the [PoE Feature Overview and Configuration Guide](#) for further information about PoE priority.

**Examples** To set the priority level to high for port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# power-inline priority high
```

To reset the priority level to the default for port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no power-inline priority
```

**Validation  
Commands** [show power-inline](#)  
[show power-inline interface](#)  
[show running-config power-inline](#)

**Related  
Commands** [power-inline usage-threshold](#)

# power-inline usage-threshold

**Overview** This command sets the level at which the Power Sourcing Equipment (PSE) will issue a message that the power supplied to all Powered Devices (PDs) has reached a critical level of the nominal power rating for the PSE. The level is set as a percentage of total available power.

The **no** variant of this command resets the notification usage-threshold to the default (80% of the nominal power rating of the PSE).

**Syntax** `power-inline usage-threshold <1-99>`  
`no power-inline usage-threshold`

| Parameter                 | Description                                                  |
|---------------------------|--------------------------------------------------------------|
| <code>&lt;1-99&gt;</code> | The usage-threshold percentage configured with this command. |

**Default** The default power usage threshold is 80% of the nominal power rating of the PSE.

**Mode** Global Configuration

**Usage** Use the [snmp-server enable trap](#) command to configure SNMP notification. An SNMP notification is sent when the usage-threshold, as configured in the example, is exceeded.

**Examples** To generate SNMP notifications when power supplied exceeds 70% of the nominal PSE power, use the following commands:

```
awplus# configure terminal
awplus(config)# snmp-server enable trap power-inline
awplus(config)# power-inline usage-threshold 70
```

To reset the notification threshold to the default (80% of the nominal PSE power rating), use the following commands:

```
awplus# configure terminal
awplus(config)# no power-inline usage-threshold
```

**Validation Commands** [show power-inline interface](#)  
[show running-config power-inline](#)

**Related Commands** [snmp-server enable trap](#)

# service power-inline

**Overview** This command enables Power over Ethernet (PoE) globally on the Power Sourcing Equipment (PSE) for all PoE ports.

**Syntax** `service power-inline`  
`no service power-inline`

**Default** PoE functionality is enabled by default on the PSE.

**Mode** Global Configuration

**Usage** In a stack, issuing this command enables PoE globally for all PoE ports.  
  
In a stack configuration, only stack members containing PoE hardware will have PoE enabled by default in software.

**Examples** To disable PoE on the PSE, use the following commands:

```
awplus# configure terminal
awplus(config)# no service power-inline
```

To re-enable PoE on the PSE, if PoE has been disabled, use the following commands:

```
awplus# configure terminal
awplus(config)# service power-inline
```

**Validation Commands** `show power-inline`  
`show running-config power-inline`



# show debugging power-inline

**Overview** This command displays Power over Ethernet (PoE) debug settings.  
For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show debugging power-inline

**Mode** User Exec and Privileged Exec

**Example** To display PoE debug settings, use the following command:

```
awplus# show debugging power-inline
```

**Output** Figure 16-1: Example output from the **show debugging power-inline** command

```
awplus#show debugging power-inline
PoE Debugging status:
PoE Informational debugging is disabled
PoE Event debugging is disabled
PoE Power Management debugging is disabled

PoE NSM debugging is enabled
```

**Related Commands** [debug power-inline](#)  
[terminal monitor](#)

# show power-inline

**Overview** This command displays the Power over Ethernet (PoE) status for all ports on the Power Sourcing Equipment (PSE).

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show power-inline

**Mode** User Exec and Privileged Exec

**Example** To display the PoE status for all ports on the PSE, use the following command:

```
awplus# show power-inline
```

**Output** Figure 16-2: Example output from the **show power-inline** command

```
awplus#show power-inline
PoE Status:

Stack Member 2
Nominal Power: 370W
Power Allocated: 246W

Actual Power Consumption: 151W
Operational Status: On
Power Usage Threshold: 80% (296W)

PoE Interface:
Interface  Admin   Pri  Oper   Power  Device  Class  Max (mW)
port2.0.1  Enabled Low   Powered 3840   n/a     1     4000 [C]
port2.0.2  Enabled High Powered 6720   n/a     2     7000 [C]
port2.0.3  Enabled Low   Powered 14784  n/a     3    15400 [C]
port2.0.4  Enabled Crit Powered 14784  n/a     3    15400 [C]
port2.0.5  Enabled Crit Powered 3840   n/a     1     4000 [C]
port2.0.6  Enabled High Powered 6720   n/a     2     7000 [C]
port2.0.7  Enabled Low   Powered 14784  n/a     3    15400 [C]
```

**Table 1:** Parameters in the **show power-inline** command output

| Parameter       | Description                                                                                                                                     |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Nominal Power   | The nominal power available on the switch in watts (W).                                                                                         |
| Power Allocated | The current power allocated in watts (W) that is available to be drawn by any connected Powered Devices (PDs). This is updated every 5 seconds. |

**Table 1:** Parameters in the **show power-inline** command output (cont.)

| Parameter                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Actual Power Consumption  | The current power consumption in watts (W) drawn by all connected Powered Devices (PDs). This is updated every 5 seconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Operational Status        | The operational status of the PSU hardware on the PSE when this command was issued: <ul style="list-style-type: none"> <li>• <b>On</b> if the PSU as installed inside the PSE is switched on.</li> <li>• <b>Off</b> when the PSU in the PSE is switched off (an RPS may be connected to the PSE to power PoE instead of the PSU).</li> <li>• <b>Fault</b> when there is an issue with the PSE PSU hardware.</li> </ul>                                                                                                                                                     |
| Power Usage Threshold (%) | The configured SNMP trap / log threshold for the PSE, as configured from a <a href="#">power-inline usage-threshold</a> command.                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Interface                 | The PoE port(s) in the format <code>portx.y.z</code> , where <code>x</code> is the device number, <code>y</code> is the module number within the device, and <code>z</code> is the PoE port number within the module.                                                                                                                                                                                                                                                                                                                                                      |
| Admin                     | The administrative state of PoE on a PoE port, either <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Pri                       | The current PoE priorities for PoE ports on the PSE, as configured from a <a href="#">power-inline priority</a> command: <ul style="list-style-type: none"> <li>• <b>Low</b> displays when the <code>low</code> parameter is issued. The lowest priority for a PoE enabled port (default).</li> <li>• <b>High</b> displays when the <code>high</code> parameter is issued. The second highest priority for a PoE enabled port.</li> <li>• <b>Crit</b> displays when the <code>critical</code> parameter is issued. The highest priority for a PoE enabled port.</li> </ul> |
| Oper                      | The current PSE PoE port state when this command was issued: <ul style="list-style-type: none"> <li>• <b>Powered</b> displays when there is a PD connected and power is being supplied from the PSE.</li> <li>• <b>Disabled</b> displays when supplying power would make the PSE go over the power budget.</li> <li>• <b>Off</b> displays when PoE has been disabled for the PoE port.</li> <li>• <b>Fault</b> displays when a PSE goes over its power allocation.</li> </ul>                                                                                              |
| Power                     | The power consumption in milliwatts (mW) for the PoE port when this command was entered.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Device                    | The description of the connected PD device if a description has been added with the <a href="#">power-inline description</a> command. No description is shown for PDs not configured with the <a href="#">power-inline description</a> command.                                                                                                                                                                                                                                                                                                                            |

**Table 1:** Parameters in the **show power-inline** command output (cont.)

| Parameter | Description                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Class     | The class of the connected PD, if power is being supplied to the PD from the PSE. See the <b>Power over Ethernet Introduction</b> chapter for further information about PD classes and the power levels assigned per class.                                                                                                                                                                                                                        |
| Max (mW)  | The power in milliwatts (mW) allocated for the PoE port. Additionally, note the following as displayed per PoE port: <ul style="list-style-type: none"><li>• <b>[U]</b> if the power limit for a port was user configured (with the <a href="#">power-inline max</a> command).</li><li>• <b>[L]</b> if the power limit for a port was supplied by LLDP.</li><li>• <b>[C]</b> if the power limit for a port was supplied by the PD class.</li></ul> |

**Related Commands** [show power-inline counters](#)  
[show power-inline interface](#)

# show power-inline counters

**Overview** This command displays Power over Ethernet (PoE) event counters for ports on the Power Sourcing Equipment (PSE). The PoE event counters displayed can also be accessed by objects in the PoE MIB (RFC 3621). See [the MIB Objects Feature Overview and Configuration Guide](#) for information about which PoE MIB objects are supported.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show power-inline counters [<port-list>]`

| Parameter                      | Description                                                       |
|--------------------------------|-------------------------------------------------------------------|
| <code>&lt;port-list&gt;</code> | Enter the PoE port(s) to display all PoE event counters for them. |

**Mode** User Exec and Privileged Exec

**Usage** To display all PoE event counters for all PoE ports on the PSE, do not enter the optional interface parameter.

**Examples** To display all PoE event counters for all PoE ports on the PSE, use the command:

```
awplus# show power-inline counters
```

To display the PoE event counters for the port range 1.0.1 to 1.0.3, use the command:

```
awplus# show power-inline counters interface port1.0.1-1.0.3
```

**Output** Figure 16-3: Example output from the **show power-inline counters** command

|                                                                  |           |          |       |         |        |
|------------------------------------------------------------------|-----------|----------|-------|---------|--------|
| awplus#show power-inline counters interface port1.0.4-port1.0.12 |           |          |       |         |        |
| PoE Counters:                                                    |           |          |       |         |        |
| Interface                                                        | MPSAbsent | Overload | Short | Invalid | Denied |
| port1.0.4                                                        | 0         | 0        | 0     | 0       | 0      |
| port1.0.5                                                        | 0         | 0        | 0     | 0       | 0      |
| port1.0.6                                                        | 0         | 0        | 0     | 0       | 0      |
| port1.0.7                                                        | 0         | 0        | 0     | 0       | 0      |
| port1.0.8                                                        | 0         | 0        | 0     | 0       | 0      |
| port1.0.9                                                        | 0         | 0        | 0     | 0       | 0      |
| port1.0.10                                                       | 0         | 0        | 0     | 0       | 0      |
| port1.0.11                                                       | 0         | 0        | 0     | 0       | 0      |
| port1.0.12                                                       | 0         | 0        | 0     | 0       | 0      |

**Table 2:** Parameters in the **show power-inline counters** command output

| Parameter | Description                                                                                                                                                                                                                           |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface | The PoE port(s) in the format <code>portx.y.z</code> , where <code>x</code> is the device number, <code>y</code> is the module number within the device, and <code>z</code> is the PoE port number within the module.                 |
| MPSAbsent | The number of instances when the PoE MPS (Maintain Power Signature) signal has been lost. The PoE MPS signal is lost when a PD is disconnected from the PSE. Also increments <code>pethPsePortMPSAbsentCounter</code> in the PoE MIB. |
| Overload  | The number of instances when a PD exceeds its configured power limit (as configured by the <code>power-inline max</code> command). Also increments <code>pethPsePortOverLoadCounter</code> in the PoE MIB.                            |
| Short     | The number of short circuits that have happened with a PD. Also increments <code>pethPsePortShortCounter</code> in the PoE MIB.                                                                                                       |
| Invalid   | The number of times a PD with an Invalid Signature (where the PD has an open or short circuit, or is a legacy PD) is detected. Also increments <code>pethPseInvalidSignatureCounter</code> in the PoE MIB.                            |
| Denied    | The number of times a PD has been refused power due to power budget limitations for the PSE. Also increments <code>pethPsePortPowerDeniedCounter</code> in the PoE MIB.                                                               |

**Related Commands**

- `clear power-inline counters interface`
- `show power-inline`
- `show power-inline interface`

# show power-inline interface

**Overview** This command displays a summary of Power over Ethernet (PoE) information for specified ports. If no ports are specified then PoE information is displayed for all ports on the Power Sourcing Equipment (PSE).

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show power-inline interface [<port-list>]`

| Parameter   | Description                                                                   |
|-------------|-------------------------------------------------------------------------------|
| <port-list> | Enter the PoE port(s) to display PoE specific information in the show output. |

**Mode** User Exec and Privileged Exec

**Usage** To display PoE information for all PoE ports on the PSE, do not specify any ports.

**Example** To display the PoE port specific information for all PoE ports on the switch, use the following command:

```
awplus# show power-inline interface
```

To display the PoE port specific information for the port range 1.0.1 to 1.0.4, use the following command:

```
awplus# show power-inline interface port1.0.1-port1.0.4
```

**Output** Figure 16-4: Example output from the **show power-inline interface** command

| awplus#show power-inline interface port1.0.1-port1.0.4 |          |      |          |       |             |       |          |
|--------------------------------------------------------|----------|------|----------|-------|-------------|-------|----------|
| Interface                                              | Admin    | Pri  | Oper     | Power | Device      | Class | Max (mW) |
| port1.0.1                                              | Disabled | Low  | Disabled | 0     | n/a         | n/a   | n/a      |
| port1.0.2                                              | Enabled  | High | Powered  | 3840  | Desk Phone  | 1     | 5000 [U] |
| port1.0.3                                              | Enabled  | Crit | Powered  | 6720  | AccessPoint | 2     | 7000 [C] |
| port1.0.4                                              | Disabled | Low  | Disabled | 0     | n/a         | n/a   | n/a      |

**Table 3:** Parameters in the **show power-inline interface** command output

| Parameter | Description                                                                                                                                                      |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface | The PoE port(s) in the format portx.y.z, where x is the device number, y is the module number within the device, and z is the PoE port number within the module. |
| Admin     | The administrative state of PoE on a PoE port, either <b>Enabled</b> or <b>Disabled</b> .                                                                        |

**Table 3:** Parameters in the **show power-inline interface** command output

| Parameter | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pri       | <p>The current PoE priorities for PoE ports on the PSE, as configured from a <a href="#">power-inline priority</a> command:</p> <ul style="list-style-type: none"> <li>• <b>Low</b> displays when the <code>low</code> parameter is issued. The lowest priority for a PoE enabled port (default).</li> <li>• <b>High</b> displays when the <code>high</code> parameter is issued. The second highest priority for a PoE enabled port.</li> <li>• <b>Crit</b> displays when the <code>critical</code> parameter is issued. The highest priority for a PoE enabled port.</li> </ul> |
| Oper      | <p>The current PSE PoE port state when this command was issued:</p> <ul style="list-style-type: none"> <li>• <b>Powered</b> displays when there is a PD connected and power is being supplied from the PSE.</li> <li>• <b>Denied</b> displays when supplying power would make the PSE go over the power budget.</li> <li>• <b>Disabled</b> displays when the PoE port is administratively disabled.</li> <li>• <b>Off</b> displays when PoE has been disabled for the port.</li> <li>• <b>Fault</b> displays when a PSE goes over its power allocation.</li> </ul>                |
| Power     | The power consumption in milliwatts (mW) for the PoE port when this command was entered.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Device    | The description of the connected PD device if a description has been added with the <a href="#">power-inline description</a> command. No description is shown for PDs not configured with the <a href="#">power-inline description</a> command.                                                                                                                                                                                                                                                                                                                                   |
| Class     | <p>The class of the connected PD, if power is being supplied to the PD from the PSE.</p> <p>See the <a href="#">PoE Feature Overview and Configuration Guide</a> for further information about power classes.</p>                                                                                                                                                                                                                                                                                                                                                                 |
| Max (mW)  | <p>The power in milliwatts (mW) allocated for the PoE port. Additionally, note the following as displayed per PoE port:</p> <ul style="list-style-type: none"> <li>• <b>[U]</b> if the power limit for a port was user configured (with the <b>power-inline max</b> command).</li> <li>• <b>[L]</b> if the power limit for a port was supplied by LLDP.</li> <li>• <b>[C]</b> if the power limit for a port was supplied by the PD class.</li> </ul>                                                                                                                              |

**Related Commands** [show power-inline](#)  
[show power-inline interface detail](#)



# show power-inline interface detail

**Overview** This command displays detailed information for specified Power over Ethernet (PoE) port(s) on the Power Sourcing Equipment (PSE).

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show power-inline interface [<port-list>] detail`

| Parameter                      | Description                                                         |
|--------------------------------|---------------------------------------------------------------------|
| <code>&lt;port-list&gt;</code> | Enter the PoE port(s) to display the PoE port specific information. |

**Mode** User Exec and Privileged Exec

**Usage** To show detailed PoE information for all ports on the PSE, do not specify any ports. The power allocated to each port is listed in the `Power allocated` row, and is limited by the maximum power per Powered Device (PD) class, or a user configured power limit.

**Example** To display detailed PoE port specific information for the port range 1.0.1 to 1.0.2, use the following command:

```
awplus# show power-inline interface port1.0.1-port1.0.2 detail
```

**Output** Figure 16-5: Example output from the **show power-inline interface detail** command

```
awplus#show power-inline interface port1.0.1-1.0.2 detail
Interface port1.0.1
  Powered device type: Desk Phone #1
  PoE admin enabled
  Priority Low
  Detection status: Powered
  Current power consumption: 4800 mW
  Powered device class: 1
  Power allocated: 5000 mW (from configuration)
  Detection of legacy devices is disabled
  Powered pairs: Data
Interface port1.0.2
  Powered device type: Access Point #3
  PoE admin enabled
  Priority High
  Detection status: Powered
  Current power consumption: 6720 mW
  Powered device class: 2
  Power allocated: 7000 mW (from powered device class)
  Detection of legacy devices is enabled
  Powered pairs: Data
```

**Table 4:** Parameters in **show power-inline interface detail** command output

| Parameter            | Description                                                                                                                                                                                                                            |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface            | The PoE port(s) in the format <code>portx.y.z</code> , where <code>x</code> is the device number, <code>y</code> is the module number within the device, and <code>z</code> is the PoE port number within the module.                  |
| Powered device type: | The name of the PD, if connected and if power is being supplied to the PD from the PSE, configured with the <a href="#">power-inline description</a> command. <b>n/a</b> displays if a description has not been configured for the PD. |
| PoE admin            | The administrative state of PoE on a PoE capable port, either <b>Enabled</b> or <b>Disabled</b> as configured from the <a href="#">power-inline enable</a> command or the <b>no power-inline enable</b> command respectively.          |
| Priority             | The PoE priority of a port, which is either <b>Low</b> , or <b>High</b> , or <b>Critical</b> , as configured by the <a href="#">power-inline priority</a> command.                                                                     |

**Table 4:** Parameters in **show power-inline interface detail** command output

| Parameter                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Detection status:              | <p>The current PSE PoE port state when this command was issued:</p> <ul style="list-style-type: none"> <li>• <b>Powered</b> displays when there is a PD connected and power is being supplied from the PSE.</li> <li>• <b>Denied</b> displays when supplying power would make the PSE go over the power budget.</li> <li>• <b>Disabled</b> displays when the PoE port is administratively disabled.</li> <li>• <b>Off</b> displays when PoE has been disabled for the port.</li> <li>• <b>Fault</b> displays when a PSE goes over its power allocation.</li> </ul> |
| Current power consumption:     | <p>The power consumption for the PoE port when this command was entered. Note that the power consumption may have changed since the command was entered and the power is displayed.</p>                                                                                                                                                                                                                                                                                                                                                                            |
| Powered device class:          | <p>The class of the connected PD if connected, and if power is being supplied to the PD from the PSE.<br/>See the <a href="#">PoE Feature Overview and Configuration Guide</a> for further information about power classes.</p>                                                                                                                                                                                                                                                                                                                                    |
| Power allocated:               | <p>The power in milliwatts (mW) allocated for the PoE port. Additionally, note the following as displayed per PoE port:</p> <ul style="list-style-type: none"> <li>• <b>[U]</b> if the power limit for a port was user configured (with the <b>power-inline max</b> command).</li> <li>• <b>[L]</b> if the power limit for a port was supplied by LLDP.</li> <li>• <b>[C]</b> if the power limit for a port was supplied by the PD class.</li> </ul>                                                                                                               |
| Detection of legacy devices is | <p>[Enabled Disabled]<br/>The status of legacy PoE detection on the PoE port, as configured for the PoE port with the <a href="#">power-inline allow-legacy</a> command.</p>                                                                                                                                                                                                                                                                                                                                                                                       |
| Powered pairs:                 | <p>[Data Spare]<br/>The IEEE 802.3af and IEEE 802.3at standards allow for either <b>data</b> or <b>spare</b> twisted pairs to be used to transfer power to a PD. The powered pairs status for each port. AlliedWare Plus™ PoE switches implement IEEE 802.3af and IEEE 802.3at Endpoint PSE Alternative A (<b>Data</b>).</p>                                                                                                                                                                                                                                       |

**Related Commands**    [show power-inline](#)  
[show power-inline interface](#)

# 17

# GVRP Commands

## Introduction

**Overview** With GVRP enabled the switch can exchange VLAN configuration information with other GVRP enabled switches. VLANs can be dynamically created and managed through trunk ports.

- There is limit of 400 VLANs supported by the AlliedWare Plus GVRP implementation. VLANs may be numbered 1-4094, but a limit of 400 of these VLANs are supported.
- MSTP is not supported by the AlliedWare Plus GVRP implementation. GVRP and MSTP are mutually exclusive. STP and RSTP are supported by GVRP.
- VCSStack is not supported by the current AlliedWare Plus GVRP implementation.

This chapter provides an alphabetical reference for commands used to configure GVRP. For information about GVRP, including configuration, see the [GVRP Feature Overview and Configuration Guide](#).

- Command List**
- [“clear gvrp statistics”](#) on page 650
  - [“debug gvrp”](#) on page 651
  - [“gvrp \(interface\)”](#) on page 653
  - [“gvrp dynamic-vlan-creation”](#) on page 654
  - [“gvrp enable \(global\)”](#) on page 655
  - [“gvrp registration”](#) on page 656
  - [“gvrp timer”](#) on page 657
  - [“show debugging gvrp”](#) on page 659
  - [“show gvrp configuration”](#) on page 660
  - [“show gvrp machine”](#) on page 661
  - [“show gvrp statistics”](#) on page 662

- [“show gvrp timer”](#) on page 663

# clear gvrp statistics

**Overview** Use this command to clear the GVRP statistics for all switchports, or for a specific switchport.

**Syntax** `clear gvrp statistics {all|<interface>}`

| Parameter   | Description                                       |
|-------------|---------------------------------------------------|
| all         | Specify all switchports to clear GVRP statistics. |
| <interface> | Specify the switchport to clear GVRP statistics.  |

**Mode** Privileged Exec

**Usage** Use this command together with the [show gvrp statistics](#) command to troubleshoot GVRP.

**Examples** To clear all GVRP statistics for all switchport on the switch, enter the command:

```
awplus# clear gvrp statistics all
```

To clear GVRP statistics for switchport interface `port1.0.3`, enter the command:

```
awplus# clear gvrp statistics port1.0.3
```

**Related Commands** [show gvrp statistics](#)

# debug gvrp

**Overview** Use this command to debug GVRP packets and commands, sending output to the console.

Use the **no** variant of this command to turn off debugging for GVRP packets and commands.

**Syntax** debug gvrp {all|cli|event|packet}  
no debug gvrp {all|cli|event|packet}

| Parameter | Description                         |
|-----------|-------------------------------------|
| all       | Specifies debugging for all levels. |
| cli       | Specifies debugging for commands.   |
| event     | Specified debugging for events.     |
| packet    | Specifies debugging for packets.    |

**Mode** Privileged Exec and Global Configuration

**Examples** To enable GVRP on interfaces port1.0.1-port1.0.2, enter the commands:

```
awplus# configure terminal
awplus(config)# gvrp enable
awplus(config)# interface port1.0.1-port1.0.2
awplus(config-if)# gvrp
```

To disable GVRP on interfaces port1.0.1-port1.0.2, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1-port1.0.2
awplus(config-if)# no gvrp
```

**Examples** To send debug output to the console for GVRP packets and GVRP commands, and to enable the display of debug output on the console first, enter the commands:

```
awplus# terminal monitor
awplus# configure terminal
awplus(config)# debug gvrp all
```

To send debug output for GVRP packets to the console, enter the commands:

```
awplus# terminal monitor
awplus# configure terminal
awplus(config)# debug gvrp packets
```

To send debug output for GVRP commands to the console, enter the commands:

```
awplus# terminal monitor
awplus# configure terminal
awplus(config)# debug gvrp cli
```

To stop sending debug output for GVRP packets and GVRP commands to the console, and to stop the display of any debug output on the console, enter the commands:

```
awplus# terminal no monitor
awplus# configure terminal
awplus(config)# no debug gvrp all
```

**Related  
Commands**    [show debugging gvrp](#)  
              [terminal monitor](#)



# gvrp (interface)

**Overview** Use this command to enable GVRP for switchport interfaces.  
Use the **no** variant of this command to disable GVRP for switchport interfaces.

**Syntax** gvrp  
no gvrp

**Mode** Interface Configuration (for switchport interfaces).

**Default** Disabled by default.

**Usage** Use this command to enable GVRP on switchport interfaces. Note this command does not enable GVRP for the switch. To enable GVRP on switchports use this command in Interface Configuration mode. You must issue a [gvrp enable \(global\)](#) command before issuing a [gvrp \(interface\)](#) command.

You must enable GVRP on both ends of a link for GVRP to propagate VLANs between links.

**NOTE:** *MSTP is not supported by the current AlliedWare Plus GVRP implementation. GVRP and MSTP are mutually exclusive. STP and RSTP are supported by GVRP.*

*Private VLAN trunk ports are not supported by the current AlliedWare Plus GVRP implementation. GVRP and private VLAN trunk ports are mutually exclusive.*

**Examples** To enable GVRP on interfaces port1.0.1-port1.0.2, enter the commands:

```
awplus# configure terminal
awplus(config)# gvrp enable
awplus(config)# interface port1.0.1-port1.0.2
awplus(config-if)# gvrp
```

To disable GVRP on interfaces port1.0.1-port1.0.2, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1-port1.0.2
awplus(config-if)# no gvrp
```

**Validation Commands** [show gvrp configuration](#)

**Related Commands** [gvrp dynamic-vlan-creation](#)  
[gvrp enable \(global\)](#)

# gvrp dynamic-vlan-creation

**Overview** Use this command to enable dynamic VLAN creation globally for the switch.

Use the **no** variant of this command to disable dynamic VLAN creation globally for the switch.

**Syntax** gvrp dynamic-vlan-creation  
no gvrp dynamic-vlan-creation

**Mode** Global Configuration

**Default** Disabled by default.

**Usage** You must enable GVRP on both ends of a link for GVRP to propagate VLANs between links.

You must also enable GVRP globally in Global Configuration mode before enabling GVRP on an interface in Interface Configuration mode. Both of these tasks must occur to create VLANs.

**NOTE:** *There is limit of 400 VLANs supported by the AlliedWare Plus GVRP implementation. VLANs may be numbered 1-4094, but a limit of 400 of these VLANs are supported.*

**Examples** Enter the following commands for switches with hostnames `switch1` and `switch2` respectively, so `switch1` propagates VLANs to `switch2` and `switch2` propagates VLANs to `switch1`:

Switch1:

```
switch1# configure terminal
switch1(config)# gvrp enable
switch1(config)# gvrp dynamic-vlan-creation
```

Switch2:

```
switch2# configure terminal
switch2(config)# gvrp enable
switch2(config)# gvrp dynamic-vlan-creation
```

To disable GVRP dynamic VLAN creation on the switch, enter the commands:

```
awplus# configure terminal
awplus(config)# no gvrp dynamic-vlan-creation
```

**Validation Commands** [show gvrp configuration](#)

**Related Commands** [gvrp enable \(global\)](#)

# gvrp enable (global)

**Overview** Use this command to enable GVRP globally for the switch.  
Use the **no** variant of this command to disable GVRP globally for the switch.

**Syntax** gvrp enable  
no gvrp enable

**Mode** Global Configuration

**Default** Disabled by default.

**Usage** Use this command to enable GVRP on the switch. Note that this command does not enable GVRP on switchports. To enable GVRP on switchports use the [gvrp \(interface\)](#) command in Interface Configuration mode. You must issue a [gvrp enable \(global\)](#) command before issuing a [gvrp \(interface\)](#) command.

You must enable GVRP on both ends of a link for GVRP to propagate VLANs between links.

**NOTE:** MSTP is not supported by the current AlliedWare Plus GVRP implementation. GVRP and MSTP are mutually exclusive. STP and RSTP are supported by GVRP.

Private VLAN trunk ports are not supported by the current AlliedWare Plus GVRP implementation. GVRP and private VLAN trunk ports are mutually exclusive.

**Examples** To enable GVRP for the switch, before enabling GVRP on switchports, enter the commands:

```
awplus# configure terminal
awplus(config)# gvrp enable
```

To disable GVRP on the switch, which will also disable GVRP enabled on switchports, enter the commands:

```
awplus# configure terminal
awplus(config)# no gvrp enable
```

**Validation Commands** [show gvrp configuration](#)

**Related Commands** [gvrp \(interface\)](#)  
[gvrp dynamic-vlan-creation](#)

# gvrp registration

**Overview** Use this command to set GVRP registration to normal, fixed, and forbidden registration modes.

Use the **no** variant of this command to disable GVRP registration.

**Syntax** `gvrp registration {normal|fixed|forbidden}`  
`no gvrp registration {normal|fixed|forbidden}`

| Parameter | Description                                                    |
|-----------|----------------------------------------------------------------|
| normal    | Specify dynamic GVRP registration and deregistration of VLANs. |
| fixed     | Specify fixed GVRP registration and deregistration of VLANs.   |
| forbidden | Specify no GVRP registration of VLANs. VLANs are deregistered. |

**Mode** Interface Configuration

**Default** Normal registration is the default.

**Usage** Configuring a trunk port in normal registration mode allows dynamic creation of VLANs. Normal mode is the default mode. Validate using the [show gvrp configuration](#) command.

Configuring a trunk port in fixed registration mode allows manual creation of VLANs.

Configuring a trunk port in forbidden registration mode prevents VLAN creation on the port.

**Examples** To configure GVRP registration to `fixed` on `port1.0.1`, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# gvrp registration fixed
```

To disable GVRP registration on interfaces `port1.0.1`, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no gvrp registration
```

**Validation Commands** [show gvrp configuration](#)

# gvrp timer

**Overview** Use this command to set GVRP timers in Interface Configuration mode for a given interface.

Use the **no** variant of this command to reset the GVRP timers to the defaults specified in the table below.

**Syntax** `gvrp timer {join <timer-value>|leave <timer-value>|leaveall <timer-value>}`  
`no gvrp timer {join|leave|leaveall}`

| Parameter     | Description                                                                                                                 |
|---------------|-----------------------------------------------------------------------------------------------------------------------------|
| join          | Specifies the timer for joining the group (default is 20 centiseconds / hundredths of a second, or 200 milliseconds).       |
| leave         | Specifies the timer for leaving a group (default is 60 centiseconds / hundredths of a second, or 600 milliseconds).         |
| leaveall      | Specifies the timer for leaving all groups (default is 1000 centiseconds / hundredths of a second, or 10,000 milliseconds). |
| <timer-value> | <1-65535> The timer value in hundredths of a second (centiseconds).                                                         |

**Mode** Interface Configuration

**Defaults** The default join time value is 20 centiseconds (200 milliseconds), the default leave timer value is 60 centiseconds (600 milliseconds), and the default leaveall timer value is 1000 centiseconds (10,000 milliseconds).

**Usage** When configuring the `leave` timer, set it to more than or equal to three times the `join` timer value. The settings for the `leave` and `join` timers must be the same for all GVRP enabled switches. See also the section “Setting the GVRP Timers” in the [GVRP Feature Overview and Configuration Guide](#).

Use the `show gvrp timer` command to confirm GVRP timers set with this command.

**Examples** To set the GVRP `join` timer to 30 hundredths of a second (300 milliseconds) for interface `port1.0.1`, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# gvrp timer join 30
```

To set the GVRP `leave` timer to 90 hundredths of a second (900 milliseconds) for interface `port1.0.1`, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# gvrp timer leave 90
```

To reset the GVRP join timer to its default of 20 hundredths of a second for interface `port1.0.1`, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no gvrp timer join
```

**Related  
Commands**   [show gvrp timer](#)

# show debugging gvrp

**Overview** Use this command to display the GVRP debugging option set.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show debugging gvrp

**Mode** User Exec and Privileged Exec

**Example** Enter the following commands to display GVRP debugging output on the console:

```
awplus# configure terminal
awplus(config)# debug gvrp all
awplus(config)# exit
awplus# show debugging gvrp
```

**Output** See sample output from the **show debugging gvrp** command after entering **debug gvrp all**:

```
GVRP debugging status:
  GVRP Event debugging is on
  GVRP CLI debugging is on
  GVRP Timer debugging is on
  GVRP Packet debugging is on
```

**Related  
Commands** [debug gvrp](#)

# show gvrp configuration

- Overview** Use this command to display GVRP configuration data for a switch.
- For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).
- Syntax** `show gvrp configuration`
- Mode** User Exec and Privileged Exec
- Example** To show GVRP configuration for the switch, enter the command:
- ```
awplus# show gvrp configuration
```
- Output** The following is an output of this command displaying the GVRP configuration for a switch:

```
awplus#show gvrp configuration
Global GVRP Configuration:
GVRP Feature: Enabled
Dynamic Vlan Creation: Disabled
Port based GVRP Configuration:

Port      GVRP Status Registration Applicant Timers (centiseconds)
-----
port1.0.1 Enabled    Normal      Normal      20      60      1000
port1.0.2 Enabled    Normal      Normal      200     600     10000
```



# show gvrp machine

**Overview** Use this command to display the state machine for GVRP.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show gvrp machine`

**Mode** User Exec and Privileged Exec

**Example** To show the GVRP state machine for the switch, enter the command:

```
awplus# show gvrp machine
```

**Output** See the following output of this command displaying the GVRP state machine.

```
awplus show gvrp machine
port = 1.0.1 applicant state = QA registrar state = INN
port = 1.0.2 applicant state = QA registrar state = INN
```

# show gvrp statistics

**Overview** Use this command to display a statistical summary of GVRP information for the switch.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the “[Getting Started with AlliedWare Plus](#)” [Feature Overview and Configuration Guide](#).

**Syntax** show gvrp statistics [<interface>]

| Parameter   | Description                           |
|-------------|---------------------------------------|
| <interface> | The name of the switchport interface. |

**Mode** User Exec and Privileged Exec

**Usage** Use this command together with the [clear gvrp statistics](#) command to troubleshoot GVRP.

**Examples** To show the GVRP statistics for all switchport interfaces, enter the command:

```
awplus# show gvrp statistics
```

To show the GVRP statistics for switchport interfaces port1.0.1 and port1.0.2, enter the command:

```
awplus# show gvrp statistics port1.0.1-port1.0.2
```

**Output** The following is an output of this command displaying a statistical summary for port1.0.1-port1.0.2

| awplus# show gvrp statistics port1.0.1-port1.0.2 |           |        |            |         |       |   |
|--|-----------|--------|------------|---------|-------|---|
| Port   | JoinEmpty | JoinIn | LeaveEmpty | LeaveIn | Empty |   |
| -----  |           |        |            |         |       |   |
| 1.0.1  | RX        | 0      | 2          | 0       | 0     | 0 |
|  | TX        | 0      | 0          | 0       | 0     | 0 |
| 1.0.2  | RX        | 0      | 1          | 0       | 0     | 1 |
|  | TX        | 0      | 0          | 0       | 0     | 0 |

**Related Commands** [clear gvrp statistics](#)

# show gvrp timer

**Overview** Use this command to display data for the GVRP timers set with the [gvrp timer](#) command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the “[Getting Started with AlliedWare Plus](#)” Feature Overview and Configuration Guide.

**Syntax** `show gvrp timer <interface>`

| Parameter   | Description                           |
|-------------|---------------------------------------|
| <interface> | The name of the switchport interface. |

**Mode** User Exec and Privileged Exec

**Examples** To show the GVRP timers for all switchport interfaces, enter the command:

```
awplus# show gvrp timer
```

To show the GVRP timers for switchport interface `port1.0.1`, enter the command:

```
awplus# show gvrp timer port1.0.1
```

**Output** The following show output displays data for timers on the switchport interface `port1.0.1`

```
awplus# show gvrp timer port1.0.1
Timer                Timer Value (centiseconds)
-----
Join                  20
Leave                  60
Leave All              1000
```

**Related  
Commands** [gvrp timer](#)

# Part 3: Layer Three, Switching and Routing

# 18

# IP Addressing and Protocol Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure various IP features, including the following protocols:

- Address Resolution Protocol (ARP)
- Domain Name Service (DNS)

For more information, see the [IP Feature Overview and Configuration Guide](#).

- Command List**
- ["arp-aging-timeout"](#) on page 667
  - ["arp-mac-disparity"](#) on page 668
  - ["arp \(IP address MAC\)"](#) on page 670
  - ["arp log"](#) on page 671
  - ["arp opportunistic-nd"](#) on page 674
  - ["arp-reply-bc-dmac"](#) on page 675
  - ["clear arp-cache"](#) on page 676
  - ["clear ip dns forwarding cache"](#) on page 677
  - ["debug ip dns forwarding"](#) on page 678
  - ["debug ip packet interface"](#) on page 679
  - ["ip address \(IP Addressing and Protocol\)"](#) on page 681
  - ["ip directed-broadcast"](#) on page 683
  - ["ip dns forwarding"](#) on page 685
  - ["ip dns forwarding cache"](#) on page 686
  - ["ip dns forwarding dead-time"](#) on page 687
  - ["ip dns forwarding retry"](#) on page 688
  - ["ip dns forwarding source-interface"](#) on page 689

- [“ip dns forwarding timeout”](#) on page 690
- [“ip domain-list”](#) on page 691
- [“ip domain-lookup”](#) on page 692
- [“ip domain-name”](#) on page 693
- [“ip forward-protocol udp”](#) on page 694
- [“ip gratuitous-arp-link”](#) on page 696
- [“ip helper-address”](#) on page 698
- [“ip limited-local-proxy-arp”](#) on page 700
- [“ip local-proxy-arp”](#) on page 701
- [“ip name-server”](#) on page 702
- [“ip proxy-arp”](#) on page 704
- [“ip redirects”](#) on page 705
- [“local-proxy-arp”](#) on page 706
- [“ip unreachable”](#) on page 707
- [“optimistic-nd”](#) on page 709
- [“ping”](#) on page 710
- [“show arp”](#) on page 711
- [“show debugging ip dns forwarding”](#) on page 713
- [“show debugging ip packet”](#) on page 714
- [“show hosts”](#) on page 716
- [“show ip dns forwarding”](#) on page 717
- [“show ip dns forwarding cache”](#) on page 718
- [“show ip dns forwarding server”](#) on page 719
- [“show ip domain-list”](#) on page 720
- [“show ip domain-name”](#) on page 721
- [“show ip interface”](#) on page 722
- [“show ip name-server”](#) on page 723
- [“show ip sockets”](#) on page 724
- [“show ip traffic”](#) on page 727
- [“tcpdump”](#) on page 733
- [“traceroute”](#) on page 734
- [“undebg ip packet interface”](#) on page 735

# arp-aging-timeout

**Overview** This command sets a timeout period on dynamic ARP entries associated with a specific interface. If your device stops receiving traffic for the host specified in a dynamic ARP entry, it deletes the ARP entry from the ARP cache after this timeout is reached.

Your device times out dynamic ARP entries to ensure that the cache does not fill with entries for hosts that are no longer active. Static ARP entries are not aged or automatically deleted.

By default the time limit for dynamic ARP entries is 300 seconds on all interfaces.

The **no** variant of this command sets the time limit to the default of 300 seconds.

**Syntax** `arp-aging-timeout <0-432000>`  
`no arp-aging timeout`

| Parameter                     | Description                    |
|-------------------------------|--------------------------------|
| <code>&lt;0-432000&gt;</code> | The timeout period in seconds. |

**Default** 300 seconds (5 minutes)

**Mode** Interface Configuration for a VLAN interface.

**Example** To set the ARP entries on interface `vlan30` to time out after two minutes, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan30
awplus(config-if)# arp-aging-timeout 120
```

**Related  
Commands** [clear arp-cache](#)  
[show arp](#)

# arp-mac-disparity

**Overview** Use this command to enable the switch to support services like Microsoft Network Load Balancing (MS-NLB).

Such services use ARP with disparate MAC addresses to ensure that packets destined for a server cluster virtual address are sent to all servers in the cluster. Disparate MAC addresses mean that the MAC address in the “sender hardware address” field of an ARP reply is different to the MAC address in the “Source MAC address” field of the Ethernet header that the ARP packet is encapsulated in.

The **no** variant of this command reverts to the default behavior. See the Default section below for more information.

**Syntax** `arp-mac-disparity {multicast|multicast-igmp|unicast}`  
`no arp-mac-disparity {multicast|multicast-igmp|unicast}`

| Parameter      | Description   |
|----------------|---|
| multicast      | Enables support of server clusters operating in multicast mode. Packets destined for the server cluster are flooded to all ports in the VLAN.   |
| multicast-igmp | Enables support of server clusters operating in multicast/IGMP mode. In multicast/IGMP mode, the MS-NLB server cluster uses IGMP reports to forward server traffic to a limited set of ports. |
| unicast        | Enables support of server clusters operating in unicast mode. Packets destined for the server cluster are flooded to all ports in the VLAN.   |

**Default** ARP-MAC disparity support is disabled and:

- If the disparate ARP has a multicast MAC address in the ARP reply, the switch drops the ARP reply and does not learn any associated addresses
- If the disparate ARP has a unicast MAC address in the ARP reply, the switch learns the address in the ARP reply. The learned ARP entry points to the single port that the ARP reply arrived on. Matching traffic will go out this port.

**Mode** Interface Configuration for a VLAN interface.

**Usage** When you are using **multicast** mode, you can limit the number of ports that packets are flooded to, instead of flooding to all ports in the VLAN. To do this, specify the list of ports when creating the ARP entry.



For example, to flood only port1.0.1 to port1.0.3, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# arp 10.10.1.100 010e.11ff.2222
port1.0.1-port1.0.3
```

**Examples** To enable support for MS-NLB in unicast mode on interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# arp-mac-disparity unicast
```

To disable support for MS-NLB in unicast mode on interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no arp-mac-disparity unicast
```

**Related  
Commands** [arp \(IP address MAC\)](#)  
[clear arp-cache](#)  
[show arp](#)

## arp (IP address MAC)

**Overview** This command adds a static ARP entry to the ARP cache. This is typically used to add entries for hosts that do not support ARP or to speed up the address resolution function for a host. The ARP entry must not already exist. Use the **alias** parameter to allow your device to respond to ARP requests for this IP address.

The **no** variant of this command removes the static ARP entry. Use the [clear arp-cache](#) command to remove the dynamic ARP entries in the ARP cache.

**Syntax** `arp <ip-addr> <mac-address> [<port-number>] [alias]`  
`no arp <ip-addr>`

| Parameter                        | Description   |
|----------------------------------|---|
| <code>&lt;ip-addr&gt;</code>     | The IPv4 address of the device you are adding as a static ARP entry.  |
| <code>&lt;mac-address&gt;</code> | The MAC address of the device you are adding as a static ARP entry, in hexadecimal notation with the format HHHH.HHHH.HHHH.               |
| <code>&lt;port-number&gt;</code> | The port number associated with the IP address. Specify this when the IP address is part of a VLAN.                                       |
| <code>alias</code>               | Allows your device to respond to ARP requests for the IP address. Proxy ARP must be enabled on the interface before using this parameter. |

**Mode** Global Configuration

**Examples** To add the IP address 10.10.10.9 with the MAC address 0010.2533.4655 into the ARP cache, and have your device respond to ARP requests for this address, use the commands:

```
awplus# configure terminal
awplus(config)# arp 10.10.10.9 0010.2355.4566 alias
```

**Related Commands** [arp-mac-disparity](#)  
[clear arp-cache](#)  
[ip proxy-arp](#)  
[show arp](#)

# arp log

**Overview** This command enables the logging of dynamic and static ARP entries in the ARP cache. The ARP cache contains mappings of device ports, VLAN IDs, and IP addresses to physical MAC addresses for hosts.

This command can display the MAC addresses in the ARP log either using the default hexadecimal notation (HHHH.HHHH.HHHH), or using the IEEE standard hexadecimal notation (HH-HH-HH-HH-HH-HH).

Use the **no** variant of this command to disable the logging of dynamic and static ARP entries in the ARP cache.

**Syntax** `arp log [mac-address-format ieee]`  
`no arp log [mac-address-format ieee]`

| Parameter                            | Description  |
|--------------------------------------|--|
| <code>mac-address-format ieee</code> | Display the MAC address in hexadecimal notation with the standard IEEE format (HH-HH-HH-HH-HH-HH), instead of displaying the MAC address with the default hexadecimal format (HHHH.HHHH.HHHH). |

**Default** The ARP logging feature is disabled by default.

**Mode** Global Configuration

**Usage** You have the option to change how the MAC address is displayed in the ARP log message, to use the default hexadecimal notation (HHHH.HHHH.HHHH), or the IEEE format hexadecimal notation (HH-HH-HH-HH-HH-HH) when you apply the **mac-address-format ieee** parameter.

Enter the **arp log** command without the optional **mac-address-format ieee** parameter specified for MAC addresses in the ARP log output to use the default hexadecimal notation (HHHH.HHHH.HHHH).

Enter the **arp log mac-address-format ieee** command for MAC addresses in the ARP log output to use the IEEE standard format hexadecimal notation (HH-HH-HH-HH-HH-HH).

Use the **no** variant of this command (**no arp log**) without the optional **mac-address-format ieee** parameter specified to disable ARP logging on the device

Use the **no** variant of this command with the optional **mac-address-format ieee** parameter specified (**no arp log mac-address-format ieee**) to disable IEEE standard format hexadecimal notation (HH-HH-HH-HH-HH-HH) and revert to the default hexadecimal notation (HHHH.HHHH.HHHH) for MAC addresses in the ARP log output.

To display ARP log messages use the **show log | include ARP\_LOG** command.

**Examples** To enable ARP logging and use the default hexadecimal notation (HHHH.HHHH.HHHH), use the following commands:

```
awplus# configure terminal
awplus(config)# arp log
```

To disable ARP logging on the device of MAC addresses displayed using the default hexadecimal notation (HHHH.HHHH.HHHH), use the following commands:

```
awplus# configure terminal
awplus(config)# no arp log
```

To enable ARP logging and to specify that the MAC address in the log message is displayed in the standard IEEE format hexadecimal notation (HH-HH-HH-HH-HH-HH), use the following commands:

```
awplus# configure terminal
awplus(config)# arp log mac-address-format ieee
```

To disable ARP logging on the device of MAC addresses displayed using the standard IEEE format hexadecimal notation (HH-HH-HH-HH-HH-HH), and revert to the use of the default hexadecimal notation (HHHH.HHHH.HHHH) instead, use the following commands:

```
awplus# configure terminal
awplus(config)# no arp log mac-address-format ieee
```

To display ARP log messages, use following command:

```
awplus# show log | include ARP_LOG
```

**Output** Below is example output from the **show log | include ARP\_LOG** command after enabling ARP logging displaying default hexadecimal notation MAC addresses (HHHH.HHHH.HHHH) using the **arp log** command.

```
awplus#configure terminal
awplus(config)#arp log
awplus(config)#exit
awplus#show log | include ARP_LOG
2010 Apr  6 06:21:01 user.notice awplus HSL[1007]: ARP_LOG port1.0.6 vlan1 add
0013.4078.3b98 (192.168.2.4)
2010 Apr  6 06:22:30 user.notice awplus HSL[1007]: ARP_LOG port1.0.6 vlan1 del
0013.4078.3b98 (192.168.2.4)
2010 Apr  6 06:23:26 user.notice awplus HSL[1007]: ARP_LOG port1.0.6 vlan1 add
0030.940e.136b (192.168.2.20)
2010 Apr  6 06:23:30 user.notice awplus IMISH[1830]: show log | include ARP_LOG
```

Below is example output from the **show log | include ARP\_LOG** command after enabling ARP logging displaying IEEE standard format hexadecimal notation MAC addresses (HH- HH-HH-HH-HH-HH) using the **arp log mac-address format ieee** command.

**Table 1:** Example output from the **show log | include ARP\_LOG** command

```
awplus#configure terminal
awplus(config)#arp log mac-address-format ieee
awplus(config)#exit
awplus#show log | include ARP_LOG
2010 Apr  6 06:25:28 user.notice awplus HSL[1007]: ARP_LOG port1.0.6 vlan1 add 00-17-9a-b6-03-69 (192.168.2.12)
2010 Apr  6 06:25:30 user.notice awplus HSL[1007]: ARP_LOG port1.0.6 vlan1 add 00-03-37-6b-a6-a5 (192.168.2.10)
2010 Apr  6 06:26:53 user.notice awplus HSL[1007]: ARP_LOG port1.0.6 vlan1 del 00-30-94-0e-13-6b (192.168.2.20)
2010 Apr  6 06:27:31 user.notice awplus HSL[1007]: ARP_LOG port1.0.6 vlan1 del 00-17-9a-b6-03-69 (192.168.2.12)
2010 Apr  6 06:28:09 user.notice awplus HSL[1007]: ARP_LOG port1.0.6 vlan1 del 00-03-37-6b-a6-a5 (192.168.2.10)
2010 Apr  6 06:28:14 user.notice awplus IMISH[1830]: show log | include ARP_LOG
```

Below are the parameters in output of the **show log | include ARP\_LOG** command with an ARP log message format of **<ARP\_LOG> <port number> <VLAN ID> <Operation> <MAC> <IP>** after **<date> <time> <severity> <hostname> <program-name>** information.

**Table 2:** Parameters in output of the **show log | include ARP\_LOG** command

| Parameter     | Description  |
|---------------|--|
| <ARP_LOG>     | Indicates ARP log entry information follows <date> <time> <severity> <hostname> <program name> log information.  |
| <port number> | Indicates device port number for the ARP log entry.  |
| <VLAN ID>     | Indicates the VLAN ID for the ARP log entry.   |
| <Operation>   | Indicates 'add' if the ARP log entry displays an ARP addition. Indicates 'del' if the ARP log entry displays an ARP deletion.  |
| <MAC>         | Indicates the MAC address for the ARP log entry, either in the default hexadecimal notation (HHHH.HHHH.HHHH) or in the IEEE standard format hexadecimal notation (HH-HH-HH-HH-HH-HH) as specified with the <b>arp log</b> or the <b>arp log mac-address-format ieee</b> command. |
| <IP>          | Indicates the IP address for the ARP log entry.  |

**Validation Commands** [show running-config](#)

**Related Commands** [show log](#)

# arp opportunistic-nd

**Overview** This command changes the behavior for unsolicited ARP packet forwarding on the device.

Use this command to enable opportunistic neighbor discovery for the global ARP cache.

Use the **no** variant of this command to disable opportunistic neighbor discovery for the global ARP cache.

**Syntax** `arp opportunistic-nd`  
`no arp opportunistic-nd`

**Default** Opportunistic neighbor discovery is disabled by default.

**Mode** Global Configuration

**Usage** When opportunistic neighbor discovery is enabled, the device will reply to any received unsolicited ARP packets (but not gratuitous ARP packets). The source MAC address for the unsolicited ARP packet is added to the ARP cache, so the device forwards the ARP packet. When opportunistic neighbor discovery is disabled, the source MAC address for the ARP packet is not added to the ARP cache, so the ARP packet is not forwarded by the device.

**Examples** To enable opportunistic neighbor discovery for the global ARP cache, enter:

```
awplus# configure terminal
awplus(config)# arp opportunistic-nd
```

To disable opportunistic neighbor discovery for the global ARP cache, enter:

```
awplus# configure terminal
awplus(config)# no arp opportunistic-nd
```

**Related Commands** [ipv6 opportunistic-nd](#)  
[show arp](#)

**Validation Commands** [show running-config interface](#)

# arp-reply-bc-dmac

**Overview** Use this command to allow processing of ARP replies that arrive with a broadcast destination MAC (ffff.ffff.ffff). This makes neighbors reachable if they send ARP responses that contain a broadcast destination MAC.

Use the **no** variant of this command to turn off processing of ARP replies that arrive with a broadcast destination MAC.

**Syntax** `arp-reply-bc-dmac`  
`no arp-reply-bc-dmac`

**Default** By default, this functionality is disabled.

**Mode** Interface Configuration for VLAN interfaces

**Example** To allow processing of ARP replies that arrive on VLAN2 with a broadcast destination MAC, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# arp-reply-bc-dmac
```

**Related  
Commands** `clear arp-cache`  
`show arp`

# clear arp-cache

**Overview** This command deletes dynamic ARP entries from the ARP cache. You can optionally specify the IPv4 address of an ARP entry to be cleared from the ARP cache.

**Syntax** `clear arp-cache [<ip-address>]`

| Parameter    | Description  |
|--------------|--|
| <ip-address> | The IPv4 address of an ARP entry that is to be cleared from the ARP cache. |

**Mode** Privileged Exec

**Usage** To display the entries in the ARP cache, use the [show arp](#) command. To remove static ARP entries, use the no variant of the [arp \(IP address MAC\)](#) command.

**Example** To clear all dynamic ARP entries, use the command:

```
awplus# clear arp-cache
```

To clear all dynamic ARP entries associated with the IPv4 address 192.168.1.1, use the command:

```
awplus# clear arp-cache 192.168.1.1
```

**Related Commands**

- [arp-mac-disparity](#)
- [arp \(IP address MAC\)](#)
- [show arp](#)



# clear ip dns forwarding cache

**Overview** Use this command to clear the DNS Relay name resolver cache.

**Syntax** `clear ip dns forwarding cache`

**Mode** Privileged Exec

**Examples** To clear all cached data, use the command:

```
awplus# clear ip dns forwarding cache
```

**Related  
Commands** [ip dns forwarding cache](#)

# debug ip dns forwarding

**Overview** Use this command to enable DNS Relay debugging.  
Use the **no** variant of this command to disable DNS Relay debugging.

**Syntax** `debug ip dns forwarding`  
`no debug ip dns forwarding`

**Default** DNS Relay debugging is disabled by default.

**Mode** Privileged Exec

**Examples** To enable DNS forwarding debugging, use the commands:

```
awplus# debug ip dns forwarding
```

To disable DNS forwarding debugging, use the commands:

```
awplus# no debug ip dns forwarding
```

**Related Commands** [ip dns forwarding](#)  
[show debugging ip dns forwarding](#)

# debug ip packet interface

- Overview** The **debug ip packet interface** command enables IP packet debug and is controlled by the **terminal monitor** command.
- If the optional **icmp** keyword is specified then ICMP packets are shown in the output.
- The **no** variant of this command disables the **debug ip interface** command.

**Syntax** `debug ip packet interface {<interface-name>|all} [address <ip-address>|verbose|hex|arp|udp|tcp|icmp]`  
`no debug ip packet interface [<interface-name>]`

| Parameter    | Description  |
|--------------|--|
| <interface>  | Specify a single Layer 3 interface name (not a range of interfaces)<br>This keyword can be specified as either all or as a single Layer 3 interface to show debugging for either all interfaces or a single interface. |
| all          | Specify all Layer 3 interfaces on the device.  |
| <ip-address> | Specify an IPv4 address.<br>If this keyword is specified, then only packets with the specified IP address as specified in the ip-address placeholder are shown in the output.  |
| verbose      | Specify <b>verbose</b> to output more of the IP packet.<br>If this keyword is specified then more of the packet is shown in the output.  |
| hex          | Specify <b>hex</b> to output the IP packet in hexadecimal.<br>If this keyword is specified, then the output for the packet is shown in hex.  |
| arp          | Specify <b>arp</b> to output ARP protocol packets.<br>If this keyword is specified, then ARP packets are shown in the output.  |
| udp          | Specify <b>udp</b> to output UDP protocol packets.<br>If this keyword is specified then UDP packets are shown in the output.   |
| tcp          | Specify <b>tcp</b> to output TCP protocol packets.<br>If this keyword is specified, then TCP packets are shown in the output.  |
| icmp         | Specify <b>icmp</b> to output ICMP protocol packets.<br>If this keyword is specified, then ICMP packets are shown in the output.   |

**Mode** Privileged Exec and Global Configuration

**Examples** To turn on ARP packet debugging on `vlan1`, use the command:

```
awplus# debug ip packet interface vlan1 arp
```

To turn on all packet debugging on all interfaces on the device, use the command:

```
awplus# debug ip packet interface all
```

To turn on TCP packet debugging on `vlan1` and IP address `192.168.2.4`, use the command:

```
awplus# debug ip packet interface vlan1 address 192.168.2.4 tcp
```

To turn off IP packet interface debugging on all interfaces, use the command:

```
awplus# no debug ip packet interface
```

To turn off IP packet interface debugging on interface `vlan2`, use the command:

```
awplus# no debug ip packet interface vlan2
```

**Related Commands**

- [no debug all](#)
- [show debugging ip dns forwarding](#)
- [tcpdump](#)
- [terminal monitor](#)
- [undebug ip packet interface](#)

# ip address (IP Addressing and Protocol)

**Overview** This command sets a static IP address on an interface.

The **no** variant of this command removes the IP address from the interface. You cannot remove the primary address when a secondary address is present.

**Syntax** `ip address <ip-addr/prefix-length> [secondary] [label <label>]`  
`no ip address [<ip-addr/prefix-length>] [secondary]`

| Parameter               | Description  |
|-------------------------|--|
| <ip-addr/prefix-length> | The IPv4 address and prefix length you are assigning to the interface.   |
| secondary               | Secondary IP address.  |
| label                   | Adds a user-defined description of the secondary IP address.   |
| <label>                 | A user-defined description of the secondary IP address. Valid characters are any printable character and spaces. |

**Mode** Interface Configuration for a VLAN interface or a local loopback interface.

**Usage** To set the primary IP address on the interface, specify only **ip address** <ip-address/m>. This overwrites any configured primary IP address. To add additional IP addresses on this interface, use the **secondary** parameter. You must configure a primary address on the interface before configuring a secondary address.

**NOTE:** Use **show running-config interface** not **show ip interface brief** when you need to view a secondary address configured on an interface. **show ip interface brief** will only show the primary address not a secondary address for an interface.

**Examples** To add the primary IP address 10.10.10.50/24 to the interface `vlan3`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan3
awplus(config-if)# ip address 10.10.10.50/24
```

To add the secondary IP address 10.10.11.50/24 to the same interface, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan3
awplus(config-if)# ip address 10.10.11.50/24 secondary
```

To add the IP address 10.10.11.50/24 to the local loopback interface `lo`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface lo
awplus(config-if)# ip address 10.10.11.50/24
```

**Related Commands**

- [interface \(to configure\)](#)
- [show ip interface](#)
- [show running-config interface](#)

# ip directed-broadcast

**Overview** Use this command to enable flooding of directed broadcast packets into a directly connected subnet. If this command is configured on a VLAN interface, then directed broadcasts received on other VLAN interfaces, destined for the subnet on this VLAN, will be flooded to the subnet broadcast address of this VLAN.

Use the **no** variant of this command to disable **ip directed-broadcast**. When this feature is disabled using the **no** variant of this command, directed broadcasts are not forwarded.

**Syntax** `ip directed-broadcast`  
`no ip directed-broadcast`

**Default** The **ip directed-broadcast** command is disabled by default.

**Mode** Interface Configuration for a VLAN interface or a local loopback interface.

**Usage** IP directed-broadcast is enabled and disabled per VLAN interface. When enabled a directed broadcast packet is forwarded to an enabled VLAN interface if received on another subnet.

An IP directed broadcast is an IP packet whose destination address is a broadcast address for some IP subnet, but originates from a node that is not itself part of that destination subnet. When a directed broadcast packet reaches a device that is directly connected to its destination subnet, that packet is flooded as a broadcast on the destination subnet.

The **ip directed-broadcast** command controls the flooding of directed broadcasts when they reach target subnets. The command affects the final transmission of the directed broadcast on its destination subnet. It does not affect the transit unicast routing of IP directed broadcasts. If directed broadcast is enabled for an interface, incoming directed broadcast IP packets intended for the subnet assigned to interface will be flooded as broadcasts on that subnet.

If the **no ip directed-broadcast** command is configured for an interface, directed broadcasts destined for the subnet where the interface is attached will be dropped instead of broadcast.

**Examples** To enable **ip directed-broadcast**, to flood broadcast packets out via the `vlan2` interface, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip directed-broadcast
```

To disable **ip directed-broadcast**, disabling the flooding of broadcast packets via `vlan2`, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ip directed-broadcast
```

**Related  
Commands**

- [ip forward-protocol udp](#)
- [ip helper-address](#)
- [show running-config](#)



# ip dns forwarding

**Overview** Use this command to enable DNS Relay, the forwarding of incoming DNS queries for IP hostname-to-address translation.

Use the **no** variant of this command to disable the forwarding of incoming DNS queries for IP hostname-to-address translation.

**Syntax** `ip dns forwarding`  
`no ip dns forwarding`

**Default** The forwarding of incoming DNS query packets is disabled by default.

**Mode** Global Configuration

**Usage** DNS Relay requires that IP domain lookup is enabled. IP domain lookup is enabled by default, but if it has been disabled, you can re-enable it by using the command [ip domain-lookup](#).

See the [IP Feature Overview and Configuration Guide](#) for more information about DNS Relay. See the [ip dns forwarding dead-time](#) command used with this command.

**Examples** To enable the forwarding of incoming DNS query packets, use the commands:

```
awplus# configure terminal
awplus(config)# ip dns forwarding
```

To disable the forwarding of incoming DNS query packets, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dns forwarding
```

**Related Commands**

- [clear ip dns forwarding cache](#)
- [debug ip dns forwarding](#)
- [ip dns forwarding cache](#)
- [ip dns forwarding dead-time](#)
- [ip dns forwarding retry](#)
- [ip dns forwarding source-interface](#)
- [ip dns forwarding timeout](#)
- [ip name-server](#)
- [show ip dns forwarding](#)
- [show ip dns forwarding cache](#)
- [show ip dns forwarding server](#)

# ip dns forwarding cache

**Overview** Use this command to set the DNS Relay name resolver cache size and cache entry lifetime period. The DNS Relay name resolver cache stores the mappings between domain names and IP addresses.

Use the **no** variant of this command to set the default DNS Relay name resolver cache size and cache entry lifetime period.

Note that the lifetime period of the cache entry can be overwritten by the time-out period of the DNS reply from the DNS server if the time-out period of the DNS reply from the DNS server is smaller than the configured time-out period. The time-out period of the cache entry will only be used when the time-out period of the DNS reply from the DNS server is bigger than the time-out period configured on the device.

**Syntax** `ip dns forwarding cache [size <0-1000>] [timeout <60-3600>]`  
`no ip dns forwarding cache [size|timeout]`

| Parameter | Description   |
|-----------|---|
| <0-1000>  | Number of entries in the DNS Relay name resolver cache. |
| <60-3600> | Timeout value in seconds.                               |

**Default** The default cache size is 0 (no entries) and the default lifetime is 1800 seconds.

**Mode** Global Configuration

**Usage** See the [IP Feature Overview and Configuration Guide](#) for more information about DNS Relay.

**Examples** To set the cache size to 10 entries and the lifetime to 500 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# ip dns forwarding cache size 10 time 500
```

To set the cache size to the default, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dns forwarding cache size
```

**Related Commands**

- [clear ip dns forwarding cache](#)
- [debug ip dns forwarding](#)
- [ip dns forwarding](#)
- [show ip dns forwarding](#)
- [show ip dns forwarding cache](#)

# ip dns forwarding dead-time

**Overview** Use this command to set the time period in seconds when the device stops sending any DNS requests to an unresponsive server and all retries set using [ip dns forwarding retry](#) are used. This time period is the DNS forwarding dead-time. The device stops sending DNS requests at the DNS forwarding dead-time configured and when all of the retries are used.

Use the **no** variant of this command to restore the default DNS forwarding dead-time value of 3600 seconds.

**Syntax** `ip dns forwarding dead-time <60-43200>`  
`no ip dns forwarding retry`

| Parameter  | Description   |
|------------|---|
| <60-43200> | Set the DNS forwarding dead-time in seconds. At the dead-time set, the switch stops sending DNS requests to an unresponsive server. |

**Default** The default time to stop sending DNS requests to an unresponsive server is 3600 seconds.

**Mode** Global Configuration

**Usage** See the [IP Feature Overview and Configuration Guide](#) for more information about DNS Relay. See the [ip dns forwarding retry](#) command used with this command.

**Examples** To set the DNS forwarding retry count to 50 and to set the DNS forwarding dead-time to 1800 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# ip dns forwarding dead-time 1800
awplus(config)# ip dns forwarding retry 50
```

To reset the DNS retry count to the default of 2 and the DNS forwarding dead-time to the default of 3600, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dns forwarding dead-time
awplus(config)# no ip dns forwarding retry
```

**Related Commands**

- [debug ip dns forwarding](#)
- [ip dns forwarding](#)
- [ip dns forwarding retry](#)
- [show ip dns forwarding](#)
- [show ip dns forwarding server](#)

# ip dns forwarding retry

**Overview** Use this command to set the number of times DNS Relay will retry to forward DNS queries. The device stops sending DNS requests to an unresponsive server at the time set using the [ip dns forwarding dead-time](#) command and when all of the retries are used.

Use the **no** variant of this command to set the number of retries to the default of 2.

**Syntax** `ip dns forwarding retry <0-100>`  
`no ip dns forwarding retry`

| Parameter | Description  |
|-----------|--|
| <0-100>   | Set the number of times DNS Relay will retry to forward a DNS query. |

**Default** The default number of retries is 2 DNS requests to an unresponsive server.

**Mode** Global Configuration

**Usage** See the [IP Feature Overview and Configuration Guide](#) for more information about DNS Relay. See the [ip dns forwarding dead-time](#) command used with this command.

**Examples** To set the DNS forwarding retry count to 50 and to set the DNS forwarding dead-time to 1800 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# ip dns forwarding retry 50
awplus(config)# ip dns forwarding dead-time 1800
```

To reset the DNS retry count to the default of 2 and the DNS forwarding dead-time to the default of 3600 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dns forwarding retry
awplus(config)# no ip dns forwarding dead-time
```

**Related Commands** [debug ip dns forwarding](#)  
[ip dns forwarding](#)  
[ip dns forwarding dead-time](#)  
[show ip dns forwarding](#)

# ip dns forwarding source-interface

**Overview** Use this command to set the interface to use for forwarding and receiving DNS queries.

Use the **no** variant of this command to unset the interface used for forwarding and receiving DNS queries.

**Syntax** `ip dns forwarding source-interface <interface-name>`  
`no ip dns forwarding source-interface`

| Parameter        | Description  |
|------------------|--|
| <interface-name> | An alphanumeric string that is the interface name. |

**Default** The default is that no interface is set and the device selects the appropriate source IP address automatically.

**Mode** Global Configuration

**Usage** See the [IP Feature Overview and Configuration Guide](#) for more information about DNS Relay.

**Examples** To set `vlan1` as the source interface for relayed DNS queries, use the commands:

```
awplus# configure terminal
awplus(config)# ip dns forwarding source-interface vlan1
```

To clear the source interface for relayed DNS queries, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dns forwarding source-interface
```

**Related Commands** [debug ip dns forwarding](#)  
[ip dns forwarding](#)  
[show ip dns forwarding](#)

# ip dns forwarding timeout

**Overview** Use this command to set the time period for the DNS Relay to wait for a DNS response.

Use the **no** variant of this command to set the time period to wait for a DNS response to the default of 3 seconds.

**Syntax** `ip dns forwarding timeout <0-3600>`  
`no ip dns forwarding timeout`

| Parameter | Description               |
|-----------|---------------------------|
| <0-3600>  | Timeout value in seconds. |

**Default** The default timeout value is 3 seconds.

**Mode** Global Configuration

**Usage** See the [IP Feature Overview and Configuration Guide](#) for more information about DNS Relay.

**Examples** To set the timeout value to 12 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# ip dns forwarding timeout 12
```

To set the timeout value to the default of 3 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dns forwarding timeout
```

**Related Commands** [debug ip dns forwarding](#)  
[ip dns forwarding](#)  
[show ip dns forwarding](#)

# ip domain-list

**Overview** This command adds a domain to the DNS list. Domains are appended to incomplete host names in DNS requests. Each domain in this list is tried in turn in DNS lookups. This list is ordered so that the first entry you create is checked first.

The **no** variant of this command deletes a domain from the list.

**Syntax** `ip domain-list <domain-name>`  
`no ip domain-list <domain-name>`

| Parameter                        | Description                               |
|----------------------------------|---|
| <code>&lt;domain-name&gt;</code> | Domain string, for example "company.com". |

**Mode** Global Configuration

**Usage** If there are no domains in the DNS list, then your device uses the domain specified with the `ip domain-name` command. If any domain exists in the DNS list, then the device does not use the domain set using the **ip domain-name** command.

**Example** To add the domain `example.net` to the DNS list, use the following commands:

```
awplus# configure terminal
awplus(config)# ip domain-list example.net
```

**Related Commands** `ip domain-lookup`  
`ip domain-name`  
`show ip domain-list`

# ip domain-lookup

**Overview** This command enables the DNS client on your device. This allows you to use domain names instead of IP addresses in commands. The DNS client resolves the domain name into an IP address by sending a DNS inquiry to a DNS server, specified with the [ip name-server](#) command.

The **no** variant of this command disables the DNS client. The client will not attempt to resolve domain names. You must use IP addresses to specify hosts in commands.

**Syntax** `ip domain-lookup`  
`no ip domain-lookup`

**Mode** Global Configuration

**Usage** The client is enabled by default. However, it does not attempt DNS inquiries unless there is a DNS server configured.

For more information about DNS clients, see the [IP Feature Overview and Configuration Guide](#).

If you are using DNS Relay (see the command [ip dns forwarding](#)), you must have IP domain lookup enabled.

**Examples** To enable the DNS client on your device, use the following commands:

```
awplus# configure terminal
awplus(config)# ip domain-lookup
```

To disable the DNS client on your device, use the following commands:

```
awplus# configure terminal
awplus(config)# no ip domain-lookup
```

**Related Commands** [ip domain-list](#)  
[ip domain-name](#)  
[ip name-server](#)  
[show hosts](#)  
[show ip name-server](#)



# ip domain-name

**Overview** This command sets a default domain for the DNS. The DNS client appends this domain to incomplete host-names in DNS requests.

The **no** variant of this command removes the domain-name previously set by this command.

**Syntax** `ip domain-name <domain-name>`  
`no ip domain-name <domain-name>`

| Parameter                        | Description                               |
|----------------------------------|---|
| <code>&lt;domain-name&gt;</code> | Domain string, for example "company.com". |

**Mode** Global Configuration

**Usage** If there are no domains in the DNS list (created using the [ip domain-list](#) command) then your device uses the domain specified with this command. If any domain exists in the DNS list, then the device does not use the domain configured with this command.

When your device is using its DHCP client for an interface, it can receive Option 15 from the DHCP server. This option replaces the domain name set with this command.

**Example** To configure the domain name, enter the following commands:

```
awplus# configure terminal
awplus(config)# ip domain-name company.com
```

**Related Commands** [ip domain-list](#)  
[show ip domain-list](#)  
[show ip domain-name](#)

# ip forward-protocol udp

**Overview** This command enables you to control which UDP broadcasts will be forwarded to the helper address(es). A UDP broadcast will only be forwarded if the destination UDP port number in the packet matches one of the port numbers specified using this command.

Refer to the IANA site ([www.iana.org](http://www.iana.org)) for a list of assigned UDP port numbers for protocols to forward using **ip forward-protocol udp**.

Use the **no** variant of this command to remove a port number from the list of destination port numbers that are used as the criterion for deciding if a given UDP broadcast should be forwarded to the IP helper address(es).

**Syntax** `ip forward-protocol udp <port>`  
`no ip forward-protocol udp <port>`

| Parameter | Description      |
|-----------|------------------|
| <port>    | UDP Port Number. |

**Default** The **ip forward-protocol udp** command is not enabled by default.

**Mode** Global Configuration

**Usage** Combined with the **ip helper-address** command in interface mode, the **ip forward-protocol udp** command in Global Configuration mode allows control of which protocols (destination port numbers) are forwarded. The **ip forward-protocol udp** command configures protocols for forwarding, and the **ip helper-address** command configures the destination address(es).

**NOTE:**

*The types of UDP broadcast packets that the device will forward are ONLY those specified by the **ip forward-protocol** command(s). There are no other UDP packet types that the IP helper process forwards by default.*

**NOTE:**

*The **ip forward-protocol udp** command does not support BOOTP / DHCP Relay. The **ip dhcp-relay** command must be used instead. For this reason, you may not configure UDP ports 67 and 68 with the **ip forward-protocol udp** command.*

See the [IP Feature Overview and Configuration Guide](#) for more information about DNS Relay.

**Examples** To configure forwarding of packets on a UDP port, use the following commands:

```
awplus# configure terminal
awplus(config)# ip forward-protocol udp <port>
```

To delete a UDP port from the UDP ports that the device forwards, use the following commands:

```
awplus# configure terminal
```

```
awplus(config)# no ip forward-protocol udp <port>
```

**Related  
Commands**

[ip helper-address](#)

[ip directed-broadcast](#)

[show running-config](#)

# ip gratuitous-arp-link

**Overview** This command sets the Gratuitous ARP time limit for all switchports. The time limit restricts the sending of Gratuitous ARP packets to one Gratuitous ARP packet within the time in seconds.

**NOTE:** This command specifies time between sequences of Gratuitous ARP packets, and time between individual Gratuitous ARP packets occurring in a sequence, to allow legacy support for older devices and interoperation between other devices that are not ready to receive and forward data until several seconds after linkup.

Additionally, jitter has been applied to the delay following linkup, so Gratuitous ARP packets applicable to a given port are spread over a period of 1 second so are not all sent at once. Remaining Gratuitous ARP packets in the sequence occur after a fixed delay from the first one.

**Syntax** ip gratuitous-arp-link <0-300>  
no ip gratuitous-arp-link

| Parameter | Description   |
|-----------|---|
| <0-300>   | Specify the minimum time between sequences of Gratuitous ARPs and the fixed time between Gratuitous ARPs occurring in a sequence, in seconds.<br>0 disables the sending of Gratuitous ARP packets.<br>The default is 8 seconds. |

**Default** The default Gratuitous ARP time limit for all switchports is 8 seconds.

**Mode** Global Configuration

**Usage** Every switchport will send a sequence of 3 Gratuitous ARP packets to each VLAN that the switchport is a member of, whenever the switchport moves to the forwarding state. The first Gratuitous ARP packet is sent 1 second after the switchport becomes a forwarding switchport. The second and third Gratuitous ARP packets are each sent after the time period specified by the Gratuitous ARP time limit.

Additionally, the Gratuitous ARP time limit specifies the minimum time between the end of one Gratuitous ARP sequence and the start of another Gratuitous ARP sequence. When a link is flapping, the switchport's state is set to forwarding several times. The Gratuitous ARP time limit is imposed to prevent Gratuitous ARP packets from being sent undesirably often.

**Examples** To disable the sending of Gratuitous ARP packets, use the commands :

```
awplus# configure terminal
awplus(config)# ip gratuitous-arp-link 0
```

To restrict the sending of Gratuitous ARP packets to one every 20 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# ip gratuitous-arp-link 20
```

**Validation**    **show running-config**  
**Commands**

# ip helper-address

**Overview** This command adds a forwarding destination address for IP Helper to enable forwarding of User Datagram Protocol (UDP) broadcasts on an interface.

Use the **no** variant of this command to disable the forwarding of broadcast packets to specific addresses.

**Syntax** `ip helper-address <ip-addr>`  
`no ip helper-address <ip-addr>`

| Parameter | Description                                      |
|-----------|--|
| <ip-addr> | Forwarding destination IP address for IP Helper. |

**Default** The destination address for the **ip helper-address** command is not configured by default.

**Mode** Interface Configuration for a VLAN interface or a local loopback interface.

**Usage** Combined with the **ip forward-protocol udp** command in global configuration mode, the **ip helper-address** command in interface mode allows control of which protocols (destination port numbers) are forwarded. The **ip forward-protocol udp** command configures protocols for forwarding, and the **ip helper-address** command configures the destination address(es).

The destination address can be a unicast address or a subnet broadcast address. The UDP destination port is configured separately with the **ip forward-protocol udp** command. If multiple destination addresses are registered then UDP packets are forwarded to each IP address added to an IP Helper. Up to 32 destination addresses may be added using IP Helper.

**NOTE:**

*The types of UDP broadcast packets that the device will forward are ONLY those specified by the **ip forward-protocol** command(s). There are no other UDP packet types that the IP helper process forwards by default.*

**NOTE:**

*The **ip helper-address** command does not support BOOTP / DHCP Relay. The **ip dhcp-relay** command must be used instead. For this reason, you may not configure UDP ports 67 and 68 with the **ip forward-protocol** command.*

See the [IP Feature Overview and Configuration Guide](#) for more information about DNS Relay.

**Examples** The following example defines IPv4 address 192.168.1.100 as an IP Helper destination address to which to forward UDP broadcasts received on `vlan2`:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip helper-address 192.168.1.100
```

The following example removes IPv4 address 192.168.1.100 as an IP Helper destination address to which to forward UDP broadcasts received on `vlan2`:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ip helper-address 192.168.1.100
```

**Validation Commands** `show running-config`

**Related Commands** `ip forward-protocol udp`  
`ip directed-broadcast`

# ip limited-local-proxy-arp

**Overview** Use this command to enable local proxy ARP, but only for a specified set of IP addresses. This makes the device respond to ARP requests for those IP addresses when the addresses are reachable via the interface you are configuring.

To specify the IP addresses, use the command [local-proxy-arp](#).

Use the **no** variant of this command to disable limited local proxy ARP. This stops your device from intercepting and responding to ARP requests for the specified hosts. This allows the hosts to use MAC address resolution to communicate directly with one another.

**Syntax** `ip limited-local-proxy-arp`  
`no ip limited-local-proxy-arp`

**Default** Limited local proxy ARP is disabled by default.

**Mode** Interface Configuration

**Usage** This command allows you to stop MAC address resolution for specified hosts. Limited local proxy ARP works by intercepting ARP requests for the specified hosts and responding with your device's own MAC address details instead of the destination host's details. This stops hosts from learning the MAC address of the other hosts through ARP requests.

Limited local proxy ARP ensures that the specified devices cannot send traffic that bypasses Layer 3 routing on your device. This gives you control over which hosts may communicate with one another.

**Example** To enable limited local proxy ARP, so that the device makes ARP responses to ARP requests for specified addresses, when the ARP requests are received on VLAN2 and the addresses are routed out VLAN2, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip limited-local-proxy-arp
```

**Related Commands** [ip local-proxy-arp](#)  
[local-proxy-arp](#)



# ip local-proxy-arp

**Overview** This command allows you to stop MAC address resolution between hosts within a private VLAN edge interface. Local Proxy ARP works by intercepting ARP requests between hosts within a subnet and responding with your device's own MAC address details instead of the destination host's details. This stops hosts from learning the MAC address of other hosts within its subnet through ARP requests.

Local Proxy ARP ensures that devices within a subnet cannot send traffic that bypasses Layer 3 routing on your device. This lets you monitor and filter traffic between hosts in the same subnet, and enables you to have control over which hosts may communicate with one another.

When Local Proxy ARP is operating on an interface, your device does not generate or forward any ICMP-Redirect messages on that interface. This command does not enable proxy ARP on the interface; see the [ip proxy-arp](#) command for more information on enabling proxy ARP.

The **no** variant of this command disables Local Proxy ARP to stop your device from intercepting and responding to ARP requests between hosts within a subnet. This allows the hosts to use MAC address resolution to communicate directly with one another. Local Proxy ARP is disabled by default.

**Syntax** `ip local-proxy-arp`  
`no ip local-proxy-arp`

**Default** Local proxy ARP is disabled by default

**Mode** Interface Configuration for a VLAN interface or a local loopback interface.

**Examples** To enable your device to apply Local Proxy ARP on the interface `vlan7`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan7
awplus(config-if)# ip local-proxy-arp
```

To disable your device to apply Local Proxy ARP on the interface `vlan7`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan7
awplus(config-if)# no ip local-proxy-arp
```

**Related  
Commands** [ip proxy-arp](#)  
[show arp](#)  
[show running-config](#)

# ip name-server

**Overview** This command adds IPv4 or IPv6 DNS server addresses. The DNS client on your device sends DNS queries to IP addresses in this list when trying to resolve a host name. Host names cannot be resolved until you have added at least one server to this list. A maximum of three name servers can be added to this list.

The **no** variant of this command removes the specified DNS name-server address.

**Syntax** `ip name-server <ip-addr>`  
`no ip name-server <ip-addr>`

| Parameter                    | Description  |
|------------------------------|--|
| <code>&lt;ip-addr&gt;</code> | The IP address of the DNS server that is being added to the name server list. The address is entered in the form A.B.C.D for an IPv4 address, or in the form X:X::X:X for an IPv6 address. |

**Mode** Global Configuration

**Usage** To allow the device to operate as a DNS proxy, your device must have learned about a DNS name-server to forward requests to. Name-servers can be learned through the following means:

- Manual configuration, using the **ip name-server** command
- Learned from DHCP server with Option 6
- Learned over a PPP tunnel if the neighbor advertises the DNS server

This command is used to statically configure a DNS name-server for the device to use.

For more information about DHCP and DNS, see the [IP Feature Overview and Configuration Guide](#). For more information about PPP and DNS, see the [PPP Feature Overview and Configuration Guide](#).

**Examples** To allow a device to send DNS queries to a DNS server with the IPv4 address 10.10.10.5, use the commands:

```
awplus# configure terminal
awplus(config)# ip name-server 10.10.10.5
```

To enable your device to send DNS queries to a DNS server with the IPv6 address 2001:0db8:010d::1, use the commands:

```
awplus# configure terminal
awplus(config)# ip name-server 2001:0db8:010d::1
```

**Related  
Commands**

- [ip domain-list](#)
- [ip domain-lookup](#)
- [ip domain-name](#)
- [show ip dns forwarding cache](#)
- [show ip name-server](#)

# ip proxy-arp

**Overview** This command enables Proxy ARP responses to ARP requests on an interface. When enabled, your device intercepts ARP broadcast packets and substitutes its own physical address for that of the remote host. By responding to the ARP request, your device ensures that subsequent packets from the local host are directed to its physical address, and it can then forward these to the remote host.

Your device responds only when it has a specific route to the address being requested, excluding the interface route that the ARP request arrived from. It ignores all other ARP requests. See the [ip local-proxy-arp](#) command about enabling your device to respond to other ARP messages.

The **no** variant of this command disables Proxy ARP responses on an interface. Proxy ARP is disabled by default.

**Syntax** `ip proxy-arp`  
`no ip proxy-arp`

**Default** Proxy ARP is disabled by default.

**Mode** Interface Configuration for a VLAN interface or a local loopback interface.

**Examples** To enable your device to Proxy ARP on the interface `vlan13`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan13
awplus(config-if)# ip proxy-arp
```

To disable your device to Proxy ARP on the interface `vlan13`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan13
awplus(config-if)# no ip proxy-arp
```

**Related Commands** [arp \(IP address MAC\)](#)  
[ip local-proxy-arp](#)  
[show arp](#)  
[show running-config](#)

# ip redirects

**Overview** This command enables the device to send ICMP redirects on one or more interfaces.

Use the **no** variant of this command to stop the device from sending ICMP redirects on one or more interfaces.

**Syntax** `ip redirects`  
`no ip redirects`

**Default** ICMP redirects are disabled by default.

**Mode** Interface Configuration for a VLAN interface.

**Usage** ICMP redirect messages are used to notify hosts that a better route is available to a destination.

ICMP redirects are used when a packet is routed into the device on the same interface that the packet is routed out of the device. ICMP redirects are only sent to packet sources that are directly connected to the device.

**Examples** To enable the device to send ICMP redirects on interface vlan2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip redirects
```

To stop the device from sending ICMP redirects on interface vlan2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ip redirects
```

# local-proxy-arp

**Overview** Use this command to specify an IP subnet for use with limited local proxy ARP. When limited local proxy ARP is enabled with the command [ip limited-local-proxy-arp](#), the device will respond to ARP requests for addresses in that subnet.

Use the **no** variant of this command to stop specifying a subnet for use with limited local proxy ARP.

**Syntax** `local-proxy-arp [<ip-add/mask>]`  
`no local-proxy-arp [<ip-add/mask>]`

| Parameter                        | Description   |
|----------------------------------|---|
| <code>&lt;ip-add/mask&gt;</code> | The IP subnet to use with limited local proxy ARP, in dotted decimal format (A.B.C.D/M). To specify a single IP address, use a 32-bit mask. |

**Default** No subnets are specified for use with limited local proxy ARP.

**Mode** Global Configuration

**Example** To specify limited local proxy ARP for the address 172.22.0.3, use the following commands:

```
awplus# configure terminal
awplus(config)# local-proxy-arp 172.22.0.3/32
```

**Related Commands** [ip limited-local-proxy-arp](#)

# ip unreachables

**Overview** Use this command to enable ICMP (Internet Control Message Protocol) type 3, destination unreachable, messages.

Use the **no** variant of this command to disable destination unreachable messages. This prevents an attacker from using these messages to discover the topology of a network.

**Syntax** `ip unreachables`  
`no ip unreachables`

**Default** Destination unreachable messages are enabled by default.

**Mode** Global Configuration

**Usage** When a device receives a packet for a destination that is unreachable it returns an ICMP type 3 message, this message includes a reason code, as per the table below. An attacker can use these messages to obtain information regarding the topology of a network. Disabling destination unreachable messages, using the **no ip unreachables** command, secures your network against this type of probing.

**NOTE:** *Disabling ICMP destination unreachable messages breaks applications such as traceroute and Path MTU Discovery (PMTUD), which depend on these messages to operate correctly.*

Table 18-1: ICMP type 3 reason codes and description

| Code | Description [RFC]                                  |
|------|--|
| 0    | Network unreachable [RFC792]                       |
| 1    | Host unreachable [RFC792]                          |
| 2    | Protocol unreachable [RFC792]                      |
| 3    | Port unreachable [RFC792]                          |
| 4    | Fragmentation required, and DF flag set [RFC792]   |
| 5    | Source route failed [RFC792]                       |
| 6    | Destination network unknown [RFC1122]              |
| 7    | Destination host unknown [RFC1122]                 |
| 8    | Source host isolated [RFC1122]                     |
| 9    | Network administratively prohibited [RFC768]       |
| 10   | Host administratively prohibited [RFC869]          |
| 11   | Network unreachable for Type of Service [RFC908]   |
| 12   | Host unreachable for Type of Service [RFC938]      |
| 13   | Communication administratively prohibited [RFC905] |

Table 18-1: ICMP type 3 reason codes and description (cont.)

| Code | Description [RFC]                     |
|------|---------------------------------------|
| 14   | Host Precedence Violation [RFC1812]   |
| 15   | Precedence cutoff in effect [RFC1812] |

**Example** To disable destination unreachable messages, use the commands

```
awplus# configure terminal
awplus(config)# no ip unreachable
```

To enable destination unreachable messages, use the commands

```
awplus# configure terminal
awplus(config)# ip unreachable
```



# optimistic-nd

**Overview** Use this command to enable the optimistic neighbor discovery feature for both IPv4 and IPv6.

Use the **no** variant of this command to disable the optimistic neighbor discovery feature.

**Syntax** `optimistic-nd`  
`no optimistic-nd`

**Default** The optimistic neighbor discovery feature is enabled by default.

**Mode** Interface Configuration for a VLAN interface.

**Usage** The optimistic neighbor discovery feature allows the device, after learning an IPv4 or IPv6 neighbor, to refresh the neighbor before the neighbor is deleted from the hardware L3 switching table. The neighbor is put into the 'stale' state in the software switching table if it is not refreshed, then the 'stale' neighbors are deleted from the hardware L3 switching table.

The optimistic neighbor discovery feature enables the device to sustain L3 traffic switching to a neighbor without interruption. Without the optimistic neighbor discovery feature enabled L3 traffic is interrupted when a neighbor is 'stale' and is then deleted from the L3 switching table.

If a neighbor receiving optimistic neighbor solicitations does not answer optimistic neighbor solicitations with neighbor advertisements, then the neighbor will be put into the 'stale' state, and subsequently deleted from both the software and the hardware L3 switching tables.

**Examples** To enable the optimistic neighbor discovery feature on `vlan100`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan100
awplus(config-if)# optimistic-nd
```

To disable the optimistic neighbor discovery feature on `vlan100`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan100
awplus(config-if)# no optimistic-nd
```

**Validation  
Commands** `show running-config`

# ping

**Overview** This command sends a query to another IPv4 host (send Echo Request messages).

**Syntax** ping [ip] <host> [broadcast] [df-bit {yes|no}] [interval <0-128>] [pattern <hex-data-pattern>] [repeat {<1-2147483647>|continuous}] [size <36-18024>] [source <ip-addr>] [timeout <1-65535>] [tos <0-255>]

| Parameter                  | Description  |
|----------------------------|--|
| <host>                     | The destination IP address or hostname.  |
| broadcast                  | Allow pinging of a broadcast address.  |
| df-bit                     | Enable or disable the do-not-fragment bit in the IP header.  |
| interval <0-128>           | Specify the time interval in seconds between sending ping packets. The default is 1. You can use decimal places to specify fractions of a second. For example, to ping every millisecond, set the interval to 0.001. |
| pattern <hex-data-pattern> | Specify the hex data pattern.  |
| repeat                     | Specify the number of ping packets to send.  |
| <1-2147483647>             | Specify repeat count. The default is 5.  |
| continuous                 | Continuous ping  |
| size <36-18024>            | The number of data bytes to send, excluding the 8 byte ICMP header. The default is 56 (64 ICMP data bytes).  |
| source <ip-addr>           | The IP address of a configured IP interface to use as the source in the IP header of the ping packet.  |
| timeout <1-65535>          | The time in seconds to wait for echo replies if the ARP entry is present, before reporting that no reply was received. If no ARP entry is present, it does not wait.   |
| tos <0-255>                | The value of the type of service in the IP header.   |

**Mode** User Exec and Privileged Exec

**Example** To ping the IP address 10.10.0.5 use the following command:

```
awplus# ping 10.10.0.5
```

# show arp

**Overview** Use this command to display entries in the ARP routing and forwarding table—the ARP cache contains mappings of IP addresses to physical addresses for hosts. To have a dynamic entry in the ARP cache, a host must have used the ARP protocol to access another host.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show arp [security [interface [<interface-list>]]`  
`show arp [statistics [detail][interface [<interface-list>]]`

**Mode** User Exec and Privileged Exec

**Usage** Running this command with no additional parameters will display all entries in the ARP routing and forwarding table.

**Example** To display all ARP entries in the ARP cache, use the following command:

```
awplus# show arp
```

**Output** Figure 18-1: Example output from the **show arp** command

```
awplus#show
arp
```

| IP Address    | MAC Address    | Interface | Port      | Type    |
|---------------|----------------|-----------|-----------|---------|
| 192.168.10.2  | 0015.77ad.fad8 | vlan1     | port1.0.1 | dynamic |
| 192.168.20.2  | 0015.77ad.fa48 | vlan2     | port1.0.2 | dynamic |
| 192.168.1.100 | 00d0.6b04.2a42 | vlan2     | port1.0.6 | static  |

**Table 19:** Parameters in the output of the **show arp** command

| Parameter   | Meaning  |
|-------------|--|
| IP Address  | IP address of the network device this entry maps to.   |
| MAC Address | Hardware address of the network device.  |
| Interface   | Interface over which the network device is accessed.   |
| Port        | Physical port that the network device is attached to.  |
| Type        | Whether the entry is a static or dynamic entry. Static entries are added using the <a href="#">arp (IP address MAC)</a> command. Dynamic entries are learned from ARP request/reply message exchanges. |

**Related  
Commands**    arp (IP address MAC)  
                  clear arp-cache

# show debugging ip dns forwarding

**Overview** Use this command to display the DNS Relay debugging status. DNS Relay debugging is set using the **debug ip dns forwarding** command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show debugging ip dns forwarding

**Mode** User Exec and Privileged Exec

**Example** To display the DNS Relay debugging status, use the command:

```
awplus# show debugging ip dns forwarding
```

**Output** Figure 18-2: Example output from the **show debugging ip dns forwarding** command

```
awplus#show debugging ip dns forwarding

DNS Relay debugging status:
  debugging is on
```

**Related Commands** [debug ip dns forwarding](#)

# show debugging ip packet

**Overview** Use this command to show the IP interface debugging status. IP interface debugging is set using the **debug ip packet interface** command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show debugging ip packet

**Mode** User Exec and Privileged Exec

**Example** To display the IP interface debugging status when the terminal monitor off, use the command:

```
awplus# terminal no monitor
awplus# show debug ip packet
```

**Output** Figure 18-3: Example output from the **show debugging ip packet** command with **terminal monitor** off

```
awplus#terminal no monitor

awplus#show debug ip packet

IP debugging status:

interface all tcp (stopped)

interface vlan1 arp verbose (stopped)
```

**Example** To display the IP interface debugging status when the terminal monitor is on, use the command:

```
awplus# terminal monitor
awplus# show debug ip packet
```

**Output** Figure 18-4: Example output from the **show debugging ip packet** command with **terminal monitor** on

```
awplus#terminal monitor

awplus#show debug ip packet

IP debugging status:

interface all tcp (running)

interface vlan1 arp verbose (running)
```

**Related  
Commands**    [debug ip packet interface](#)  
                  [terminal monitor](#)

# show hosts

**Overview** This command shows the default domain, domain list, and name servers configured on your device.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show hosts

**Mode** User Exec and Privileged Exec

**Example** To display the default domain, use the command:

```
awplus# show hosts
```

**Output** Figure 18-5: Example output from the **show hosts** command

```
awplus#show hosts

Default domain is mycompany.com
Domain list: company.com
Name/address lookup uses domain service
Name servers are 10.10.0.2 10.10.0.88
```

**Related  
Commands**

- [ip domain-list](#)
- [ip domain-lookup](#)
- [ip domain-name](#)
- [ip name-server](#)



# show ip dns forwarding

**Overview** Use this command to display the DNS Relay status.

**Syntax** `show ip dns forwarding`

**Mode** User Exec and Privileged Exec

**Examples** To display the DNS Relay status, use the command:

```
awplus# show ip dns forwarding
```

**Output** Figure 18-6: Example output from the **show ip dns forwarding** command

```
awplus#show ip dns forwarding

Max-Retry      : 2
Timeout        : 3 second(s)
Dead-Time      : 3600 second(s)
Source-Interface: not specified
DNS Cache      : disabled
```

**Related Commands** [ip dns forwarding](#)

# show ip dns forwarding cache

**Overview** Use this command to display the DNS Relay name resolver cache.

**Syntax** `show ip dns forwarding cache`

**Mode** User Exec and Privileged Exec

**Example** To display the DNS Relay name resolver cache, use the command:

```
awplus# show ip dns forwarding cache
```

**Output** Figure 18-7: Example output from the **show ip dns forwarding cache** command

```
awplus#show ip dns forwarding cache
```

| Host             | Address         | Expires | Flags   |
|------------------|-----------------|---------|---------|
| www.example.com  | 172.16.1.1.     | 180     |         |
| mail.example.com | www.example.com | 180     | CNAME   |
| www.example.com  | 172.16.1.1.     | 180     | REVERSE |
| mail.example.com | 172.16.1.5.     | 180     |         |

**Related Commands** [ip dns forwarding cache](#)  
[ip name-server](#)

# show ip dns forwarding server

**Overview** Use this command to display the status of DNS forwarding name servers.

**Syntax** `show ip dns forwarding server`

| Parameter            | Description                     |
|----------------------|---------------------------------|
| forwarding<br>server | The DNS forwarding name server. |

**Mode** User Exec and Privileged Exec

**Examples** To display the status of DNS Relay name servers, use the command:

```
awplus# show ip dns forwarding server
```

**Output** Figure 18-8: Example output from the **show ip dns forwarding server** command

|                                      |          |       |           |
|--------------------------------------|----------|-------|-----------|
| awplus#show ip dns forwarding server |          |       |           |
| Servers                              | Forwards | Fails | Dead-Time |
| 172.16.1.1                           | 12       | 0     | active    |
| 172.16.1.2                           | 6        | 3     | 3900      |

**Related Commands** [ip dns forwarding](#)  
[ip dns forwarding dead-time](#)

# show ip domain-list

**Overview** This command shows the domains configured in the domain list. The DNS client uses the domains in this list to append incomplete hostnames when sending a DNS inquiry to a DNS server.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip domain-list`

**Mode** User Exec and Privileged Exec

**Example** To display the list of domains in the domain list, use the command:

```
awplus# show ip domain-list
```

**Output** Figure 18-9: Example output from the **show ip domain-list** command

```
awplus#show ip domain-list
alliedtelesis.com
mycompany.com
```

**Related  
Commands** [ip domain-list](#)  
[ip domain-lookup](#)

# show ip domain-name

**Overview** This command shows the default domain configured on your device. When there are no entries in the DNS list, the DNS client appends this domain to incomplete hostnames when sending a DNS inquiry to a DNS server.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip domain-name`

**Mode** User Exec and Privileged Exec

**Example** To display the default domain configured on your device, use the command:

```
awplus# show ip domain-name
```

**Output** Figure 18-10: Example output from the **show ip domain-name** command

```
awplus#show ip domain-name  
alliedtelesis.com
```

**Related  
Commands** [ip domain-name](#)  
[ip domain-lookup](#)

# show ip interface

**Overview** Use this command to display information about interfaces and the IP addresses assigned to them. To display information about a specific interface, specify the interface name with the command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip interface [<interface-list>] [brief]`

| Parameter                           | Description  |
|-------------------------------------|--|
| <code>&lt;interface-list&gt;</code> | The interfaces to display information about. An interface-list can be: <ul style="list-style-type: none"><li>• an interface, e.g. <code>vlan2</code></li><li>• a continuous range of interfaces separated by a hyphen, e.g. <code>vlan2-8</code> or <code>vlan2-vlan5</code></li><li>• a comma-separated list of interfaces or interface ranges, e.g. <code>vlan2,vlan5,vlan8-10</code></li></ul> The specified interfaces must exist. |

**Mode** User Exec and Privileged Exec

**Examples** To show brief information for the assigned IP address for interface port1.0.2 use the command:

```
awplus# show ip interface port1.0.2 brief
```

To show the IP addresses assigned to vlan2 and vlan3, use the command:

```
awplus# show ip interface vlan2-3 brief
```

**Output** Figure 18-11: Example output from the **show ip interface brief** command

| Interface | IP-Address  | Status   | Protocol |
|-----------|-------------|----------|----------|
| port1.0.2 | unassigned  | admin up | down     |
| vlan1     | 192.168.1.1 | admin up | running  |
| vlan2     | 192.168.2.1 | admin up | running  |
| vlan3     | 192.168.3.1 | admin up | running  |
| vlan8     | unassigned  | admin up | down     |

# show ip name-server

**Overview** This command displays a list of IPv4 and IPv6 DNS server addresses that your device will send DNS requests to. This is a static list configured using the [ip name-server](#) command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip name-server`

**Mode** User Exec and Privileged Exec

**Example** To display the list of DNS servers that your device sends DNS requests to, use the command:

```
awplus# show ip name-server
```

**Output** Figure 18-12: Example output from the **show ip name-server** command

```
awplus# show ip name-server
10.10.0.123
10.10.0.124
2001:0db8:010d::1
```

**Related Commands** [ip domain-lookup](#)  
[ip name-server](#)

# show ip sockets

**Overview** Use this command to display information about the IP or TCP sockets that are present on the device. It includes TCP, UDP listen sockets, displaying associated IP address and port.

The information displayed for established TCP sessions includes the remote IP address, port, and session state. Raw IP protocol listen socket information is also displayed for protocols such as VRRP and ICMP6, which are configured to receive IP packets with the associated protocol number.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show ip sockets

**Mode** Privileged Exec

**Usage** Use this command to verify that the socket being used is opening correctly. If there is a local and remote endpoint, a connection is established with the ports indicated.

Note that this command does not display sockets that are used internally for exchanging data between the various processes that exist on the device and are involved in its operation and management. It only displays sockets that are present for the purposes of communicating with other external devices.

**Example** To display IP sockets currently present on the device, use the command:

```
awplus# show ip sockets
```

**Output** Figure 18-13: Example output from the **show ip sockets** command

|                                     |               |                |        |
|-------------------------------------|---------------|----------------|--------|
| Socket information                  |               |                |        |
| Not showing 40 local connections    |               |                |        |
| Not showing 7 local listening ports |               |                |        |
| Typ                                 | Local Address | Remote Address | State  |
| tcp                                 | 0.0.0.0:111   | 0.0.0.0:*      | LISTEN |
| tcp                                 | 0.0.0.0:80    | 0.0.0.0:*      | LISTEN |
| tcp                                 | 0.0.0.0:23    | 0.0.0.0:*      | LISTEN |
| tcp                                 | 0.0.0.0:443   | 0.0.0.0:*      | LISTEN |
| tcp                                 | 0.0.0.0:4743  | 0.0.0.0:*      | LISTEN |
| tcp                                 | 0.0.0.0:873   | 0.0.0.0:*      | LISTEN |



|     |                 |           |        |
|-----|-----------------|-----------|--------|
| tcp | :::23           | :::*      | LISTEN |
| udp | 0.0.0.0:111     | 0.0.0.0:* |        |
| udp | 226.94.1.1:5405 | 0.0.0.0:* |        |
| udp | 0.0.0.0:161     | 0.0.0.0:* |        |
| udp | :::161          | :::*      |        |
| raw | 0.0.0.0:112     | 0.0.0.0:* | 112    |
| raw | :::58           | :::*      | 58     |
| raw | :::112          | :::*      | 112    |

**Table 20:** Parameters in the output of the **show ip sockets** command

| Parameter  | Description  |
|--|--|
| Not showing<br><number><br>local<br>connections        | This field refers to established sessions between processes internal to the device, that are used in its operation and management. These sessions are not displayed as they are not useful to the user. <number> is some positive integer.   |
| Not showing<br><number><br>local<br>listening<br>ports | This field refers to listening sockets belonging to processes internal to the device, that are used in its operation and management. They are not available to receive data from other devices. These sessions are not displayed as they are not useful to the user. <number> is some positive integer.  |
| Typ  | This column displays the type of the socket. Possible values for this column are:<br>tcp: IP Protocol 6<br>udp: IP Protocol 17<br>raw: Indicates that socket is for a non port-orientated protocol (i.e. a protocol other than TCP or UDP) where all packets of a specified IP protocol type are accepted. For raw socket entries the protocol type is indicated in subsequent columns.  |
| Local<br>Address                                       | For TCP and UDP listening sockets this shows the destination IP address (either IPv4 or IPv6) and destination TCP or UDP port number for which the socket will receive packets. The address and port are separated by ':'. If the socket will accept packets addressed to any of the device's IP addresses, the IP address will be 0.0.0.0 for IPv4 or :: for IPv6. For active TCP sessions the IP address will display which of the devices addresses the session was established with. For raw sockets this displays the IP address and IP protocol for which the socket will accept IP packets. The address and protocol are separated by ':'. If the socket will accept packets addressed to any of the device's IP addresses, the IP address will be 0.0.0.0 for IPv4 and :: for IPv6. IP Protocol assignments are described at: <a href="http://www.iana.org/assignments/protocol-numbers">www.iana.org/assignments/protocol-numbers</a> |

**Table 20:** Parameters in the output of the **show ip sockets** command (cont.)

| Parameter      | Description  |
|----------------|--|
| Remote Address | For TCP and UDP listening sockets this shows the source IP address (either IPv4 or IPv6) and source TCP or UDP port number for which the socket will accept packets. The address and port are separated by ':'. If the socket will accept packets addressed from any IP address, the IP address will be 0.0.0.0 for IPv4 or :: for IPv6. This is the usual case for a listening socket. Normally for a listen socket any source port will be accepted. This is indicated by *. For active TCP sessions the IP address will display the remote address and port the session was established with. For raw sockets the entry in this column will be 0.0.0.0: or ::: for IPv4 and IPv6, respectively. |
| State          | <p>This column shows the state of the socket. For TCP sockets this shows the state of the TCP state machine. For UDP sockets this column is blank. For raw sockets it contains the IP protocol number. The possible TCP states are:</p> <p>LISTEN<br/> SYN-SENT<br/> SYN-RECEIVED<br/> ESTABLISHED<br/> FIN-WAIT-1<br/> FIN-WAIT-2<br/> CLOSE-WAIT<br/> CLOSING<br/> LAST-ACK<br/> TIME-WAIT<br/> CLOSED</p> <p>RFC793 contains the TCP state machine diagram with Section 3.2 describing each of the states.</p>  |

# show ip traffic

**Overview** Use this command to display statistics regarding IP traffic sent and received by all interfaces on the device, showing totals for IP and IPv6 and then broken down into sub-categories such as TCP, UDP, ICMP and their IPv6 equivalents when appropriate.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show ip traffic

**Mode** Privileged Exec

**Example** To display IP traffic statistics, use the command:

```
awplus# show ip traffic
```

**Output** Figure 18-14: Example output from the **show ip traffic** command

```
IP:
    261998 packets received
    261998 delivered
    261998 sent
    69721 multicast packets received
    69721 multicast packets sent
    23202841 bytes received
    23202841 bytes sent
    7669296 multicast bytes received
    7669296 multicast bytes sent
IPv6:
    28 packets discarded on transmit due to no route
ICMP6:
UDP6:
UDPLite6:
TCP:
    0 remote connections established
    40 local connections established
    7 remote listening ports
    7 local listening ports
    261 active connection openings
    247 passive connection openings
    14 connection attempts failed
    122535 segments received
    122535 segments transmitted
    14 resets transmitted
    227 TCP sockets finished time wait in fast timer
```

```

155 delayed acks sent
21187 headers predicted
736 pure ACKs
80497 pure ACKs predicted
UDP:
139468 datagrams received
139468 datagrams sent
UDPLite:

```

**Table 21:** Parameters in the output of the **show ip traffic** command

| Parameter                              | Description                            |
|--|--|
| IPv4                                   | IPv4 counters                          |
| IPv6                                   | IPv6 counters                          |
| received packets with no route         | Received packets with no route         |
| truncated packets received             | Truncated packets received             |
| multicast packets received             | Multicast packets received             |
| multicast packets sent                 | Multicast packets sent                 |
| broadcast packets received             | Broadcast packets received             |
| broadcast packets sent                 | Broadcast packets sent                 |
| bytes received                         | Bytes received                         |
| bytes sent                             | Bytes sent                             |
| multicast bytes received               | Multicast bytes received               |
| multicast bytes sent                   | Multicast bytes sent                   |
| broadcast bytes received               | Broadcast bytes received               |
| broadcast bytes sent                   | Broadcast bytes sent                   |
| packets received                       | Packets received                       |
| packets received with invalid headers  | Packets received with invalid headers  |
| oversize packets received              | Oversize packets received              |
| packets received with no route         | Packets received with no route         |
| packets received with invalid address  | Packets received with invalid address  |
| packets received with unknown protocol | Packets received with unknown protocol |
| truncated packets received             | Truncated packets received             |
| received packets discarded             | Received packets discarded             |
| received packets delivered             | Received packets delivered             |
| forwarded packets transmitted          | Forwarded packets transmitted          |

**Table 21:** Parameters in the output of the **show ip traffic** command (cont.)

| Parameter                                     | Description                                   |
|---|---|
| packets transmitted                           | Packets transmitted                           |
| packets discarded on transmit                 | Packets discarded on transmit                 |
| packets discarded on transmit due to no route | Packets discarded on transmit due to no route |
| fragment reassembly timeouts                  | Fragment reassembly timeouts                  |
| fragment reassembly required                  | Fragment reassembly required                  |
| fragment reassembly OK                        | Fragment reassembly OK                        |
| fragment reassembly failures                  | Fragment reassembly failures                  |
| fragmentations succeeded                      | Fragmentations succeeded                      |
| fragmentations failed                         | Fragmentations failed                         |
| fragments created                             | Fragments created                             |
| ICMP6   | ICMPv6 counters                               |
| messages received                             | Messages received                             |
| errors received                               | Errors received                               |
| messages sent                                 | Messages sent                                 |
| TCP   | TCP counters                                  |
| remote connections established                | Remote connections established                |
| local connections established                 | Local connections established                 |
| remote listening ports                        | Remote listening ports                        |
| local listening ports                         | Local listening ports                         |
| active connection openings                    | Active connection openings                    |
| passive connection openings                   | Passive connection openings                   |
| connection attempts failed                    | Connection attempts failed                    |
| connection resets received                    | Connection resets received                    |
| segments received                             | Segments received                             |
| segments transmitted                          | Segments transmitted                          |
| retransmits                                   | Retransmits                                   |
| bad segments received                         | Bad segments received                         |
| resets transmitted                            | Resets transmitted                            |
| datagrams received                            | Datagrams received                            |
| received for unknown port                     | Received for unknown port                     |
| datagrams sent                                | Datagrams sent                                |
| syncookies sent                               | Syncookies sent                               |

**Table 21:** Parameters in the output of the **show ip traffic** command (cont.)

| Parameter                                    | Description   |
|--|---|
| syncookies received                          | Syncookies received   |
| syncookies failed                            | Syncookies failed   |
| embryonic resets                             | Embryonic resets  |
| sockets pruned                               | Sockets pruned  |
| ICMPs out of window                          | ICMPs out of window   |
| ICMPs dropped due to lock                    | ICMPs dropped due to lock   |
| ARPs filtered                                | ARPs filtered   |
| TCP sockets finished time wait in fast timer | TCP sockets finished time wait in fast timer                            |
| time wait sockets recycled by time stamp     | Time wait sockets recycled by time stamp                                |
| time wait sockets killed                     | Time wait sockets killed  |
| delayed acks sent                            | Delayed acks sent delayed acks further delayed because of locked socket |
| delayed acks lost                            | Delayed acks lost   |
| listening socket overflows                   | Listening socket overflows  |
| listening socket drops                       | Listening socket drops  |
| headers predicted                            | Headers predicted   |
| pure ACKs                                    | Pure ACKs   |
| pure ACKs predicted                          | Pure ACKs predicted   |
| losses recovered by TCP Reno                 | Losses recovered by TCP Reno  |
| losses recovered by SACK                     | Losses recovered by SACK  |
| SACKs renegged                               | SACKs renegged  |
| detected reordering by FACK                  | Detected reordering by FACK   |
| detected reordering by SACK                  | Detected reordering by SACK   |
| detected reordering by TCP Reno              | Detected reordering by TCP Reno   |
| detected reordering by sequence              | Detected reordering by sequence   |
| full undos                                   | Full undos  |
| partial undos                                | Partial undos   |
| SACK undos                                   | SACK undos  |
| loss undos                                   | Loss undos  |
| segments lost                                | Segments lost   |
| lost retransmits                             | Lost retransmits  |

**Table 21:** Parameters in the output of the **show ip traffic** command (cont.)

| Parameter                                   | Description                                 |
|---|---|
| TCP Reno failures                           | TCP Reno failures                           |
| SACK failures                               | SACK failures                               |
| loss failures                               | Loss failures                               |
| fast retransmits                            | Fast retransmits                            |
| forward retransmits                         | Forward retransmits                         |
| retransmits in slow start                   | Retransmits in slow start                   |
| timeouts                                    | Timeouts                                    |
| TCP Reno recovery failures                  | TCP Reno recovery failures                  |
| SACK recovery failures                      | SACK recovery failures                      |
| collapsed segments received                 | Collapsed segments received                 |
| DSACKs sent for old packets                 | DSACKs sent for old packets                 |
| DSACKs sent for out of order segments       | DSACKs sent for out of order segments       |
| DSACKs received                             | DSACKs received                             |
| DSACKs received for out of order segments   | DSACKs received for out of order segments   |
| connections reset due to unexpected SYN     | Connections reset due to unexpected SYN     |
| connections reset due to unexpected data    | Connections reset due to unexpected data    |
| connections reset due to early user close   | Connections reset due to early user close   |
| connections aborted due to lack of memory   | Connections aborted due to lack of memory   |
| connections aborted due to timeout          | Connections aborted due to timeout          |
| connections aborted due to lingering        | Connections aborted due to lingering        |
| connection aborts due to connection failure | Connection aborts due to connection failure |
| TCP memory pressure events                  | TCP memory pressure events                  |
| SACKs discarded                             | SACKs discarded                             |
| Old DSACKs ignored                          | Old DSACKs ignored                          |
| DSACKs ignored without undo                 | DSACKs ignored without undo                 |
| Spurious RTOs                               | Spurious RTOs                               |
| TCP MD5 Not Found                           | TCP MD5 Not Found                           |

**Table 21:** Parameters in the output of the **show ip traffic** command (cont.)

| Parameter                           | Description                         |
|-------------------------------------|-------------------------------------|
| TCP MD5 Unexpected                  | TCP MD5 Unexpected                  |
| TCP SACKs shifted                   | TCP SACKs shifted                   |
| TCP SACKs merged                    | TCP SACKs merged                    |
| TCP SACK shift fallback             | TCP SACK shift fallback             |
| UDP                                 | UDP Counters                        |
| UDPLite                             | UDPLite Counters                    |
| UDP6                                | UDIPv6 Counters                     |
| UDPLite6                            | UDPLitev6 Counters                  |
| datagrams received                  | Datagrams received                  |
| datagrams received for unknown port | Datagrams received for unknown port |
| datagram receive errors             | Datagram receive errors             |
| datagrams transmitted               | Datagrams transmitted               |
| datagrams received                  | Datagrams received                  |
| datagrams received for unknown port | Datagrams received for unknown port |
| datagram receive errors             | Datagram receive errors             |
| datagrams transmitted               | Datagrams transmitted               |



# tcpdump

**Overview** Use this command to start a tcpdump, which gives the same output as the Unix-like **tcpdump** command to display TCP/IP traffic. Press <ctrl> + c to stop a running tcpdump.

**Syntax** tcpdump <line>

| Parameter | Description  |
|-----------|--|
| <line>    | Specify the dump options. For more information on the options for this placeholder see <a href="http://www.tcpdump.org/tcpdump_man.html">http://www.tcpdump.org/tcpdump_man.html</a> |

**Mode** Privileged Exec

**Example** To start a tcpdump running to capture IP packets, enter the command:

```
awplus# tcpdump ip
```

**Output** Figure 18-15: Example output from the **tcpdump** command

```
03:40:33.221337 IP 192.168.1.1 > 224.0.0.13: PIMv2, Hello,  
length: 34  
1 packets captured  
2 packets received by filter  
0 packets dropped by kernel
```

**Related Commands** [debug ip packet interface](#)

# traceroute

**Overview** Use this command to trace the route to the specified IPv4 host.

**Syntax** `traceroute {<ip-addr>|<hostname>}`

| Parameter                     | Description   |
|-------------------------------|---|
| <code>&lt;ip-addr&gt;</code>  | The destination IPv4 address. The IPv4 address uses the format A.B.C.D. |
| <code>&lt;hostname&gt;</code> | The destination hostname.   |

**Mode** User Exec and Privileged Exec

**Example** `awplus# traceroute 10.10.0.5`

# undebug ip packet interface

**Overview** This command applies the functionality of the no [debug ip packet interface](#) command.

# 19

# IPv6 Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure IPv6. For more information, see the [IPv6 Feature Overview and Configuration Guide](#).

- Command List**
- “clear ipv6 neighbors” on page 738
  - “ipv6 address” on page 739
  - “ipv6 address autoconfig” on page 741
  - “ipv6 enable” on page 743
  - “ipv6 forwarding” on page 745
  - “ipv6 multicast forward-slow-path-packet” on page 746
  - “ipv6 nd managed-config-flag” on page 747
  - “ipv6 nd minimum-ra-interval” on page 748
  - “ipv6 nd other-config-flag” on page 749
  - “ipv6 nd prefix” on page 750
  - “ipv6 nd ra-interval” on page 752
  - “ipv6 nd ra-lifetime” on page 753
  - “ipv6 nd rguard” on page 754
  - “ipv6 nd reachable-time” on page 756
  - “ipv6 nd retransmission-time” on page 757
  - “ipv6 nd suppress-ra” on page 758
  - “ipv6 neighbor” on page 759
  - “ipv6 opportunistic-nd” on page 760
  - “ipv6 route” on page 761

- [“ipv6 unreachable”](#) on page 762
- [“ping ipv6”](#) on page 763
- [“show ipv6 forwarding”](#) on page 764
- [“show ipv6 interface brief”](#) on page 765
- [“show ipv6 neighbors”](#) on page 766
- [“show ipv6 route”](#) on page 767
- [“show ipv6 route summary”](#) on page 769
- [“traceroute ipv6”](#) on page 770

# clear ipv6 neighbors

**Overview** Use this command to clear all dynamic IPv6 neighbor entries.

**Syntax** `clear ipv6 neighbors`

**Mode** Privileged Exec

**Example** `awplus# clear ipv6 neighbors`

# ipv6 address

**Overview** Use this command to set the IPv6 address of a VLAN interface and enable IPv6.

Use the optional **eui64** parameter to derive the interface identifier of the IPv6 address from the MAC address of the interface. Note that the MAC address of the default VLAN is applied if the interface does not have a MAC address of its own when specifying the **eui64** parameter.

Use the **no** variant of this command to remove the IPv6 address assigned and disable IPv6. Note that if no global addresses are left after removing the IPv6 address then IPv6 is disabled.

**Syntax** `ipv6 address <ipv6-addr/prefix-length> [eui64]`  
`no ipv6 address <ipv6-addr/prefix-length> [eui64]`

| Parameter                                    | Description   |
|--|---|
| <code>&lt;ipv6-addr/prefix-length&gt;</code> | Specifies the IPv6 address to be set. The IPv6 address uses the format X:X::X/X/Prefix-Length. The prefix-length is usually set between 0 and 64. Note that your switch will not accept prefix lengths greater than 64. |
| <code>eui64</code>                           | EUI-64 is a method of automatically deriving the lower 64 bits of an IPv6 address, based on the switch's MAC address. See the Usage section for more information.   |

**Mode** Interface Configuration for a VLAN interface.

**Usage** If the **eui64** parameter is specified then the lower 64 bits of the IPv6 address are appended with the same address that would be acquired through stateless address autoconfiguration (SLAAC) if the device received an RA (Router Advertisement) specifying this prefix. See [ipv6 address autoconfig](#) for a detailed command description and examples to enable and disable SLAAC. For more information, see "IPv6 EUI-64 Addressing" in the [IPv6 Feature Overview and Configuration Guide](#).

Note that link-local addresses are retained in the system until they are negated by using the **no** variant of the command that established them. See the [ipv6 enable](#) command for more information.

Also note that the link-local address is retained in the system if the global address is removed using another command, which was not used to establish the link-local address. For example, if a link local address is established with the [ipv6 enable](#) command then it will not be removed using a **no ipv6 address** command.

**Examples** To assign the IPv6 address 2001:0db8::a2/64 to the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 address 2001:0db8::a2/64
```

To remove the IPv6 address 2001:0db8::a2/64 from the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 address 2001:0db8::a2/64
```

To assign the **eui64** derived address in the prefix 2001:db8::/48 to VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-fr-subif)# ipv6 address 2001:0db8::/48 eui64
```

To remove the **eui64** derived address in the prefix 2001:db8::/48 from VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-fr-subif)# no ipv6 address 2001:0db8::/48 eui64
```

**Related Commands**

- [ipv6 address autoconfig](#)
- [show running-config](#)
- [show ipv6 interface brief](#)
- [show ipv6 route](#)



# ipv6 address autoconfig

**Overview** Use this command to enable IPv6 stateless address autoconfiguration (SLAAC) for an interface. This configures an IPv6 address on an interface derived from the MAC address on the interface.

Use the **no** variant of this command to disable IPv6 SLAAC on an interface. Note that if no global addresses are left after removing all IPv6 autoconfigured addresses then IPv6 is disabled.

**Syntax** `ipv6 address autoconfig`  
`no ipv6 address autoconfig`

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command enables automatic configuration of IPv6 addresses using stateless autoconfiguration on an interface and enables IPv6, but does not enable IPv6 forwarding. See the [ipv6 forwarding](#) command for further description and examples.

IPv6 hosts can configure themselves when connected to an IPv6 network using ICMPv6 (Internet Control Message Protocol version 6) router discovery messages. Configured routers respond with a Router Advertisement (RA) containing configuration parameters for IPv6 hosts.

The SLAAC process derives the interface identifier of the IPv6 address from the MAC address of the interface. When applying SLAAC to an interface, note that the MAC address of the default VLAN is applied to the interface if the interface does not have its own MAC address.

If SLAAC is not suitable then a network can use stateful configuration with DHCPv6 (Dynamic Host Configuration Protocol version 6) Relay, or hosts can be configured statically. See [ip dhcp-relay server-address](#) for the DHCPv6 Relay server command description and examples. See the [IP Feature Overview and Configuration Guide](#) for more information about DNS Relay.

Note that link-local addresses are retained in the system until they are negated by using the no variant of the command that established them. See the [ipv6 enable](#) command for more information.

Also note that the link-local address is retained in the system if the global address is removed using another command that was not used to establish the link-local address. For example, if a link local address is established with the [ipv6 enable](#) command then it will not be removed using a **no ipv6 address** command.

**Examples** To enable SLAAC on the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 address autoconfig
```

To disable SLAAC on the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 address autoconfig
```

**Related  
Commands**

[ipv6 address](#)  
[ipv6 enable](#)  
[show ipv6 interface brief](#)  
[show ipv6 route](#)  
[show running-config](#)

# ipv6 enable

**Overview** Use this command to enable IPv6 on an interface without an IPv6 global address for the interface. This enables IPv6 with a IPv6 link-local address, not an IPv6 global address.

Use the no variant of this command to disable IPv6 on an interface without a global address. Note the **no** variant of this command does not operate on an interface with an IPv6 global address or an interface configured for IPv6 stateless address autoconfiguration (SLAAC).

**Syntax** `ipv6 enable`  
`no ipv6 enable`

**Mode** Interface Configuration for a VLAN interface.

**Usage** The `ipv6 enable` command automatically configures an IPv6 link-local address on the interface and enables the interface for IPv6 processing.

A link-local address is an IP (Internet Protocol) address that is only used for communications in the local network, or for a point-to-point connection. Routing does not forward packets with link-local addresses. IPv6 requires that a link-local address is assigned to each interface that has the IPv6 protocol enabled, and when addresses are assigned to interfaces for routing IPv6 packets.

Note that link-local addresses are retained in the system until they are negated by using the no variant of the command that established them.

Also note that the link-local address is retained in the system if the global address is removed using another command that was not used to establish the link-local address. For example, if a link local address is established with the `ipv6 enable` command then it will not be removed using a **no ipv6 address** command.

**Examples** To enable IPv6 with only a link-local IPv6 address on the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
```

To disable IPv6 with only a link-local IPv6 address on the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 enable
```

**Related  
Commands**

- ipv6 address
- ipv6 address autoconfig
- show ipv6 interface brief
- show ipv6 route
- show running-config

# ipv6 forwarding

**Overview** Use this command to turn on IPv6 unicast routing for IPv6 packet forwarding.

Execute this command globally on your device prior to issuing [ipv6 enable](#) on individual interfaces.

Use this **no** variant of this command to turn off IPv6 unicast routing. Note IPv6 unicast routing is disabled by default.

**Syntax** `ipv6 forwarding`  
`no ipv6 forwarding`

**Mode** Global Configuration

**Default** IPv6 unicast forwarding is disabled by default.

**Usage** Enable IPv6 unicast forwarding globally for all interface on your device with this command. Use the **no** variant of this command to disable IPv6 unicast forwarding globally for all interfaces on your device.

IPv6 unicast forwarding allows devices to communicate with devices that are more than one hop away, providing that there is a route to the destination address. If IPv6 forwarding is not enabled then pings to addresses on devices that are more than one hop away will fail, even if there is a route to the destination address.

**Examples** To enable IPv6 unicast routing, use this command as shown below:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
```

To disable IPv6 unicast routing, use the no variant of this command as shown below:

```
awplus# configure terminal
awplus(config)# no ipv6 forwarding
```

**Related Commands** [ipv6 enable](#)  
[ipv6 multicast-routing](#)

# ipv6 multicast forward-slow-path-packet

**Overview** Use this command to enable multicast packets to be forwarded to the CPU. Enabling this command will ensure that the layer L3 MTU is set correctly for each IP multicast group and will apply the value of the smallest MTU among the outgoing interfaces for the multicast group.

It will also ensure that a received packet that is larger than the MTU value will result in the generation of an ICMP Too Big message.

Use the **no** variant of this command to disable the above functionality.

**Syntax** `ipv6 multicast forward-slow-path-packet`  
`no ipv6 multicast forward-slow-path-packet`

**Default** Disabled.

**Mode** Privileged Exec

**Example** To enable the ipv6 multicast forward-slow-path-packet function, use the following commands:

```
awplus# configure terminal
awplus(config)# ip multicast forward-slow-path-packet
```

**Related Commands** [show ipv6 forwarding](#)

# ipv6 nd managed-config-flag

**Overview** Use this command to set the managed address configuration flag, contained within the router advertisement field.

Setting this flag indicates the operation of a stateful autoconfiguration protocol such as DHCPv6 for address autoconfiguration, and that address information (i.e. the network prefix) and other (non-address) information can be requested from the device.

An unset flag enables hosts receiving the advertisements to use a stateless autoconfiguration mechanism to establish their IPv6 addresses. The default is flag unset.

Use the **no** variant of this command to reset this command to its default of, flag unset.

**Syntax** `ipv6 nd managed-config-flag`  
`no ipv6 nd managed-config-flag`

**Default** Unset

**Mode** Interface Configuration for a VLAN interface.

**Usage** Advertisement flags will not be transmitted unless you have applied the [ipv6 nd suppress-ra](#) command. This step is included in the example below.

**Example** To set the managed address configuration flag on the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 nd managed-config-flag
awplus(config-if)# no ipv6 nd suppress-ra
```

**Related Commands** [ipv6 nd suppress-ra](#)  
[ipv6 nd prefix](#)  
[ipv6 nd other-config-flag](#)

# ipv6 nd minimum-ra-interval

**Overview** Use this command in Interface Configuration mode to set a minimum Router Advertisement (RA) interval for a VLAN interface.

Use the **no** variant of this command in Interface Configuration mode to remove the minimum RA interval for a VLAN interface.

**Syntax** `ipv6 nd minimum-ra-interval <seconds>`  
`no ipv6 nd minimum-ra-interval [<seconds>]`

| Parameter | Description  |
|-----------|--|
| <seconds> | Specifies the number of seconds between IPv6 Router Advertisements (RAs). Valid values are from 3 to 1350 seconds. |

**Default** The RA interval for a VLAN interface is unset by default.

**Mode** Interface Configuration for a VLAN interface.

**Examples** To set the minimum RA interval for the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 nd minimum-ra-interval 60
```

To remove the minimum RA interval for the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 nd minimum-ra-interval 60
```

**Related Commands**

- [ipv6 nd ra-interval](#)
- [ipv6 nd suppress-ra](#)
- [ipv6 nd prefix](#)
- [ipv6 nd other-config-flag](#)



# ipv6 nd other-config-flag

**Overview** Use this command to set the **other** stateful configuration flag (contained within the router advertisement field) to be used for IPv6 address auto-configuration. This flag is used to request the router to provide information in addition to providing addresses.

**NOTE:**

*Setting the `ipv6 nd managed-config-flag` command implies that the `ipv6 nd other-config-flag` will also be set.*

Use **no** variant of this command to reset the value to the default.

**Syntax** `ipv6 nd other-config-flag`  
`no ipv6 nd other-config-flag`

**Default** Unset

**Mode** Interface Configuration for a VLAN interface.

**Usage** Advertisement flags will not be transmitted unless you have applied the `ipv6 nd suppress-ra` command. This step is included in the example below.

**Example** To set the IPv6 other-config-flag on the VLAN interface `vlan4`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# ipv6 nd other-config-flag
awplus(config-if)# no ipv6 nd suppress-ra
```

**Related Commands** `ipv6 nd suppress-ra`  
`ipv6 nd prefix`  
`ipv6 nd managed-config-flag`

# ipv6 nd prefix

**Overview** Use this command in Interface Configuration mode for a VLAN interface to specify the IPv6 prefix information that is advertised by the router advertisement for IPv6 address auto-configuration.

Use the **no** parameter with this command to reset the IPv6 prefix for a VLAN interface in Interface Configuration mode.

**Syntax**

```

ipv6 nd prefix <ipv6-prefix/length>
ipv6 nd prefix <ipv6-prefix/length> [<valid-lifetime>]
ipv6 nd prefix <ipv6-prefix/length>
<valid-lifetime><preferred-lifetime> [no-autoconfig]
ipv6 nd prefix <ipv6-prefix/length>
<valid-lifetime><preferred-lifetime> off-link [no-autoconfig]
no ipv6 nd prefix [<ipv6-addr/prefix-length>|all]

```

| Parameter            | Description   |
|----------------------|---|
| <ipv6-prefix/length> | The prefix to be advertised by the router advertisement message.<br>The IPv6 address prefix uses the format X:X::/prefix-length. The prefix-length is usually set between 0 and 64. The default is X:X::/64.  |
| <valid-lifetime>     | The the period during which the specified IPv6 address prefix is valid. This can be set to a value between 0 and 4294967295 seconds. The default is 2592000 (30 days). Note that this period should be set to a value greater than that set for the prefix preferred-lifetime.  |
| <preferred-lifetime> | Specifies the IPv6 prefix preferred lifetime. This is the period during which the IPv6 address prefix is considered a current (undeprecated) value. After this period, the command is still valid but should not be used in new communications. Set to a value between 0 and 4294967295 seconds. The default is 604800 seconds (7 days). Note that this period should be set to a value less than that set for the prefix valid-lifetime. |
| off-link             | Specify the IPv6 prefix off-link flag. The default is flag set.   |
| no-autoconfig        | Specify the IPv6 prefix no autoconfiguration flag. Setting this flag indicates that the prefix is not to be used for autoconfiguration. The default is flag set.  |
| all                  | Specify all IPv6 prefixes associated with the VLAN interface.   |

**Default** Valid-lifetime default is 2592000 seconds (30 days). Preferred-lifetime default is 604800 seconds (7 days).

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command specifies the IPv6 prefix flags that are advertised by the router advertisement message.

**Examples** The following example configures the device to issue router advertisements on the VLAN interface `vlan4`, and advertises the address prefix of `2001:0db8::/64`.

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# ipv6 nd prefix 2001:0db8::/64
```

The following example configures the device to issue router advertisements on the VLAN interface `vlan4`, and advertises the address prefix of `2001:0db8::/64` with a valid lifetime of 10 days and a preferred lifetime of 5 days.

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# ipv6 nd prefix 2001:0db8::/64 864000 432000
```

The following example configures the device to issue router advertisements on the VLAN interface `vlan4`, and advertises the address prefix of `2001:0db8::/64` with a valid lifetime of 10 days, a preferred lifetime of 5 days and no prefix used for autoconfiguration.

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# ipv6 nd prefix 2001:0db8::/64 864000 43200
no-autoconfig
```

The following example resets router advertisements on the VLAN interface `vlan4`, so the address prefix of `2001:0db8::/64` is not advertised from the device.

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# no ipv6 nd prefix 2001:0db8::/64
```

The following example resets all router advertisements on the VLAN interface `vlan4`:

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# no ipv6 nd prefix all
```

**Related  
Commands** [ipv6 nd suppress-ra](#)

# ipv6 nd ra-interval

**Overview** Use this command to specify the interval between IPv6 Router Advertisements (RA) transmissions.

Use **no** parameter with this command to reset the value to the default value (600 seconds).

**Syntax** `ipv6 nd ra-interval <seconds>`  
`no ipv6 nd ra-interval`

| Parameter                    | Description  |
|------------------------------|--|
| <code>&lt;seconds&gt;</code> | Specifies the number of seconds between IPv6 Router Advertisements (RAs). Valid values are from 4 to 1800 seconds. |

**Default** 600 seconds.

**Mode** Interface Configuration for a VLAN interface.

**Usage** Advertisement flags will not be transmitted unless you have applied the [ipv6 nd suppress-ra](#) command as shown in the example below.

**Example** To set the advertisements interval on the VLAN interface `vlan4` to be 60 seconds, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# ipv6 nd ra-interval 60
awplus(config-if)# no ipv6 nd suppress-ra
```

**Related Commands** [ipv6 nd minimum-ra-interval](#)  
[ipv6 nd suppress-ra](#)  
[ipv6 nd prefix](#)

# ipv6 nd ra-lifetime

**Overview** Use this command to specify the time period that this router can usefully act as a default gateway for the network. Each router advertisement resets this time period.

Use **no** parameter with this command to reset the value to default.

**Syntax** `ipv6 nd ra-lifetime <seconds>`  
`no ipv6 nd ra-lifetime`

| Parameter                    | Description  |
|------------------------------|--|
| <code>&lt;seconds&gt;</code> | Time period in seconds. Valid values are from 0 to 9000. Note that you should set this time period to a value greater than the value you have set using the <a href="#">ipv6 nd ra-interval</a> command. |

**Default** 1800 seconds

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command specifies the lifetime of the current router to be announced in IPv6 Router Advertisements.

Advertisement flags will not be transmitted unless you have applied the [ipv6 nd suppress-ra](#) command. This instruction is included in the example shown below.

**Examples** To set the advertisement lifetime of 8000 seconds on the VLAN interface `vlan4`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# ipv6 nd ra-lifetime 8000
awplus(config-if)# no ipv6 nd suppress-ra
```

**Related Commands** [ipv6 nd suppress-ra](#)  
[ipv6 nd prefix](#)

# ipv6 nd raguard

**Overview** Use this command to apply the Router Advertisements (RA) Guard feature from the Interface Configuration mode for a device port. This blocks all RA messages received on a device port.

For more information about RA Guard, see the [IPv6 Feature Overview and Configuration Guide](#).

Use the **no** parameter with this command to disable RA Guard for a specified device port.

**Syntax** `ipv6 nd raguard`  
`no ipv6 nd raguard`

**Default** RA Guard is not enabled by default.

**Mode** Interface Configuration for a device port interface.

**Usage** Router Advertisements (RAs) are used by Routers to announce themselves on the link. Applying RA Guard to a device port disallows Router Advertisements and redirect messages. RA Guard blocks RAs from untrusted hosts. Blocking RAs stops untrusted hosts from flooding malicious RAs and stops any misconfigured hosts from disrupting traffic on the local network.

Enabling RA Guard on a port blocks RAs from a connected host and indicates the port and host are untrusted. Disabling RA Guard on a port allows RAs from a connected host and indicates the port and host are trusted. Ports and hosts are trusted by default to allow RAs.

**Example** To enable RA Guard on device ports `port1.0.2-1.0.12`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2-1.0.12
awplus(config-if)# ipv6 nd raguard
```

To verify RA Guard is enabled on device port interface `port1.0.2`, use the command:

```
awplus# show running-config interface port1.0.2
```

To disable RA Guard on device ports `port1.0.2-1.0.12`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2-port1.0.12
awplus(config-if)# no ipv6 nd raguard
```

When RA Guard is disabled on a device port it is not displayed in **show running-config** output.

**Output** Example output from a **show running-config interface** port1.0.2 to verify RA Guard:

```
!  
interface port1.0.2  
  switchport mode access  
  
  ipv6 nd raguard  
!
```

**Related  
Commands** [show running-config interface](#)

# ipv6 nd reachable-time

**Overview** Use this command to specify the reachable time in the router advertisement to be used for detecting reachability of the IPv6 neighbor.

Use the **no** variant of this command to reset the value to default.

**Syntax** `ipv6 nd reachable-time <milliseconds>`  
`no ipv6 nd reachable-time`

| Parameter      | Description   |
|----------------|---|
| <milliseconds> | Time period in milliseconds. Valid values are from 1000 to 3600000.<br>Setting this value to 0 indicates an unspecified reachable-time. |

**Default** 0 milliseconds

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command specifies the reachable time of the current router to be announced in IPv6 Router Advertisements.

Advertisement flags will not be transmitted unless you have applied the [ipv6 nd suppress-ra](#) command. This instruction is included in the example shown below.

**Example** To set the reachable-time in router advertisements on the VLAN interface `vlan4` to be 1800000 milliseconds, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# ipv6 nd reachable-time 1800000
awplus(config-if)# no ipv6 nd suppress-ra
```

To reset the reachable-time in router advertisements on the VLAN interface `vlan4` to an unspecified reachable-time (0 milliseconds), enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# no ipv6 nd reachable-time
```

**Related Commands** [ipv6 nd suppress-ra](#)  
[ipv6 nd prefix](#)



# ipv6 nd retransmission-time

**Overview** Use this command to specify the advertised retransmission interval for Neighbor Solicitation in milliseconds between IPv6 Routers.

Use the **no** variant of this command to reset the retransmission time to the default (1 second).

**Syntax** `ipv6 nd retransmission-time <milliseconds>`  
`no ipv6 nd retransmission-time [<milliseconds>]`

| Parameter      | Description   |
|----------------|---|
| <milliseconds> | Time period in milliseconds. Valid values are from 1000 to 3600000. |

**Default** 1000 milliseconds (1 second)

**Mode** Interface Configuration for a VLAN interface.

**Examples** To set the retransmission-time of Neighbor Solicitation on the VLAN interface `vlan2` to be 800000 milliseconds, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 nd retransmission-time 800000
```

To reset the retransmission-time of Neighbor Solicitation on the VLAN interface `vlan2` to the default 1000 milliseconds (1 second), enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 nd retransmission-time
```

**Related Commands** [ipv6 nd suppress-ra](#)  
[ipv6 nd prefix](#)

# ipv6 nd suppress-ra

**Overview** Use this command to inhibit IPv6 Router Advertisement (RA) transmission for the current interface. Router advertisements are used when applying IPv6 stateless auto-configuration.

Use **no** parameter with this command to enable Router Advertisement transmission.

**Syntax** `ipv6 nd suppress-ra`  
`no ipv6 nd suppress-ra`

**Default** Router Advertisement (RA) transmission is suppressed by default.

**Mode** Interface Configuration for a VLAN interface.

**Example** To enable the transmission of router advertisements from the VLAN interface `vlan4` on the device, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# no ipv6 nd suppress-ra
```

**Related Commands** [ipv6 nd ra-interval](#)  
[ipv6 nd prefix](#)

# ipv6 neighbor

**Overview** Use this command to add a static IPv6 neighbor entry.

Use the **no** variant of this command to remove a specific IPv6 neighbor entry.

**Syntax** `ipv6 neighbor <ipv6-address> <vlan-name> <mac-address>  
<port-list>`

`no ipv6 neighbor <ipv6-address> <vlan-name> <port-list>`

| Parameter      | Description  |
|----------------|--|
| <ipv6-address> | Specify the neighbor's IPv6 address in the format X:X::X:X.                                |
| <vlan-name>    | Specify the neighbor's VLAN name.  |
| <mac-address>  | Specify the MAC hardware address in hexadecimal notation in the format HHHH . HHHH . HHHH. |
| <port-list>    | Specify the port number, or port range.  |

**Mode** Global Configuration

**Usage** Use this command to clear a specific IPv6 neighbor entry. To clear all dynamic address entries, use the [clear ipv6 neighbors](#) command.

**Example** To create a static neighbor entry for IPv6 address 2001:0db8::a2, on vlan 4, MAC address 0000.cd28.0880, on port1.0.6, use the command:

```
awplus# configure terminal
awplus(config)# ipv6 neighbor 2001:0db8::a2 vlan4
0000.cd28.0880 port1.0.6
```

**Related Commands** [clear ipv6 neighbors](#)

# ipv6 opportunistic-nd

**Overview** Use this command to enable opportunistic neighbor discovery for the global IPv6 ND cache. Opportunistic neighbor discovery changes the behavior for unsolicited ICMPv6 ND packet forwarding on the device.

Use the **no** variant of this command to disable opportunistic neighbor discovery for the global IPv6 ND cache.

**Syntax** `ipv6 opportunistic-nd`  
`no ipv6 opportunistic-nd`

**Default** Opportunistic neighbor discovery is disabled by default.

**Mode** Global Configuration

**Usage** When opportunistic neighbor discovery is enabled, the device will reply to any received unsolicited ICMPv6 ND packets. The source MAC address for the unsolicited ICMPv6 ND packet is added to the IPv6 ND cache, so the device forwards the ICMPv6 ND packet. When opportunistic neighbor discovery is disabled, the source MAC address for the ICMPv6 packet is not added to the IPv6 ND cache, so the ICMPv6 ND packet is not forwarded by the device.

**Examples** To enable opportunistic neighbor discovery for the IPv6 ND cache, enter:

```
awplus# configure terminal
awplus(config)# ipv6 opportunistic-nd
```

To disable opportunistic neighbor discovery for the IPv6 ND cache, enter:

```
awplus# configure terminal
awplus(config)# no ipv6 opportunistic-nd
```

**Related Commands** [arp opportunistic-nd](#)  
[show ipv6 neighbors](#)

**Validation Commands** [show running-config interface](#)

# ipv6 route

**Overview** Use this command to establish the distance for static routes of a network prefix.

Use the **no** variant of this command to disable the distance for static routes of the network prefix.

**Syntax**

```
ipv6 route <dest-prefix> <dest-prefix/length>
{<gateway-ip>|<gateway-name>} [<distvalue>]

no ipv6 route <dest-prefix> <dest-prefix/length>
{<gateway-ip>|<gateway-name>} [<distvalue>]
```

| Parameter            | Description   |
|----------------------|---|
| <dest-prefix/length> | Specifies the IP destination prefix. The IPv6 address prefix uses the format X:X::/prefix-length. The prefix-length is usually set between 0 and 64.        |
| <gateway-ip>         | Specifies the IP gateway (or next hop) address. The IPv6 address uses the format X:X::X:X/Prefix-Length. The prefix-length is usually set between 0 and 64. |
| <distvalue>          | Specifies the administrative distance for the route. Valid values are from 1 to 255.  |
| <gateway-name>       | Specifies the name of the gateway (or next hop) interface.  |

**Mode** Global Configuration

**Example**

```
awplus# configure terminal
awplus(config)# ipv6 route myintname 322001:0db8::1/128
```

**Validation Commands**

```
show running-config
show ipv6 route
```

# ipv6 unreachable

**Overview** Use this command to enable ICMPv6 (Internet Control Message Protocol version 6) type 1, destination unreachable, messages.

Use the **no** variant of this command to disable destination unreachable messages. This prevents an attacker from using these messages to discover the topology of a network.

**Syntax** `ipv6 unreachable`  
`no ipv6 unreachable`

**Default** Destination unreachable messages are enabled by default.

**Mode** Global Configuration

**Usage** When a device receives a packet for a destination that is unreachable it returns an ICMPv6 type 1 message. This message includes a reason code, as per the table below. An attacker can use these messages to obtain information regarding the topology of a network. Disabling destination unreachable messages, using the **no ipv6 unreachable** command, secures your network against this type of probing.

**NOTE:** Disabling ICMPv6 destination unreachable messages breaks applications such as traceroute, which depend on these messages to operate correctly.

Table 19-1: ICMPv6 type 1 reason codes and description

| Code | Description [RFC]  |
|------|--|
| 0    | No route to destination [RFC4443]                                    |
| 1    | Communication with destination administratively prohibited [RFC4443] |
| 2    | Beyond scope of source address [RFC4443]                             |
| 3    | Address unreachable [RFC4443]  |
| 4    | Port unreachable [RFC4443]   |
| 5    | Source address failed ingress/egress policy [RFC4443]                |
| 6    | Reject route to destination [RFC4443]                                |
| 7    | Error in Source Routing Header [RFC6554]                             |

**Example** To disable destination unreachable messages, use the commands

```
awplus# configure terminal
awplus(config)# no ipv6 unreachable
```

To enable destination unreachable messages, use the commands

```
awplus# configure terminal
awplus(config)# ipv6 unreachable
```

# ping ipv6

**Overview** This command sends a query to another IPv6 host (send Echo Request messages).

**NOTE:** Use of the interface parameter keyword, plus an interface or an interface range, with this command is only valid when pinging an IPv6 link local address.

**Syntax** `ping ipv6 {<host>|<ipv6-address>} [repeat {<1-2147483647>|continuous}] [size <10-1452>] [interface <interface-list>] [timeout <1-65535>]`

| Parameter                     | Description  |
|-------------------------------|--|
| <ipv6-addr>                   | The destination IPv6 address. The IPv6 address uses the format X:X::X:X.   |
| <hostname>                    | The destination hostname.  |
| repeat                        | Specify the number of ping packets to send.  |
| <1-2147483647>                | Specify repeat count. The default is 5.  |
| size <10-1452>                | The number of data bytes to send, excluding the 8 byte ICMP header. The default is 56 (64 ICMP data bytes).  |
| interface<br><interface-list> | The interface or range of configured IP interfaces to use as the source in the IP header of the ping packet.   |
| timeout<br><1-65535>          | The time in seconds to wait for echo replies if the ARP entry is present, before reporting that no reply was received. If no ARP entry is present, it does not wait. |
| repeat                        | Specify the number of ping packets to send.  |
| <1-2147483647>                | Specify repeat count. The default is 5.  |
| continuous                    | Continuous ping.   |
| size <10-1452>                | The number of data bytes to send, excluding the 8 byte ICMP header. The default is 56 (64 ICMP data bytes).  |
| timeout<br><1-65535>          | The time in seconds to wait for echo replies if the ARP entry is present, before reporting that no reply was received. If no ARP entry is present, it does not wait. |

**Mode** User Exec and Privileged Exec

**Example** `awplus# ping ipv6 2001:0db8::a2`

**Related Commands** [traceroute ipv6](#)

# show ipv6 forwarding

**Overview** Use this command to display IPv6 forwarding status.

**Syntax** `show ipv6 forwarding`

**Mode** User Exec and Privileged Exec

**Example** `awplus# show ipv6 forwarding`

**Output** Figure 19-1: Example output from the **show ipv6 forwarding** command

```
ipv6 forwarding is on
```



# show ipv6 interface brief

**Overview** Use this command to display brief information about interfaces and the IPv6 address assigned to them.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 interface [brief]`

| Parameter | Description  |
|-----------|--|
| brief     | Specify this optional parameter to display brief IPv6 interface information. |

**Mode** User Exec and Privileged Exec

**Examples** `awplus# show ipv6 interface brief`

**Output** Figure 19-2: Example output from the **show ipv6 interface brief** command

|                                  |                             |          |          |
|----------------------------------|-----------------------------|----------|----------|
| awplus#show ipv6 interface brief |                             |          |          |
| Interface                        | IPv6-Address                | Status   | Protocol |
| lo                               | unassigned                  | admin up | running  |
| vlan1                            | 2001:db8::1/48              | admin up | down     |
|                                  | fe80::215:77ff:fee9:5c50/64 |          |          |

**Related Commands** [show interface brief](#)

# show ipv6 neighbors

**Overview** Use this command to display all IPv6 neighbors.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 neighbors`

**Mode** User Exec and Privileged Exec

# show ipv6 route

**Overview** Use this command to display the IPv6 routing table for a protocol or from a particular table.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 route`  
[connected|database|static|summary|<ipv6-address>|<ipv6-addr/prefix-length>]

| Parameter            | Description  |
|----------------------|--|
| connected            | Displays only the routes learned from connected interfaces.  |
| database             | Displays only the IPv6 routing information extracted from the database.  |
| static               | Displays only the IPv6 static routes you have configured.  |
| summary              | Displays summary information from the IPv6 routing table.  |
| <ipv6-address>       | Displays the routes for the specified address in the IP routing table. The IPv6 address uses the format X:X::X/X/Prefix-Length. The prefix-length is usually set between 0 and 64. |
| <ipv6-prefix/length> | Displays only the routes for the specified IP prefix.  |

**Mode** User Exec and Privileged Exec

**Example 1** To display an IP route with all parameters turned on, use the following command:

```
awplus# show ipv6 route
```

**Output** Figure 19-3: Example output of the **show ipv6 route** command

```
IPv6 Routing Table
Codes: C - connected, S - staticS    ::/0 [1/0] via
2001::a:0:0:c0a8:a6, vlan10
C    2001:db8::a:0:0:0:0/64 via ::, vlan10
C    2001:db8::14:0:0:0:0/64 via ::, vlan20
C    2001:db8::0:0:0:0:0/64 via ::, vlan30
C    2001:db8::28:0:0:0:0/64 via ::, vlan40
C    2001:db8::fa:0:0:0:0/64 via ::, vlan250
C    2001:db8::/64 via ::, vlan250
C    2001:db8::/64 via ::, vlan40
C    2001:db8::/64 via ::, vlan20
C    2001:db8::/64 via ::, vlan10
```

**Example 2** To display all database entries for an IP route, use the following command:

```
awplus# show ipv6 route database
```

**Output** Figure 19-4: Example output of the **show ipv6 route database** command

```
IPv6 Routing Table
Codes: C - connected, S - static      > - selected route, * - FIB
route, p - stale info
Timers: Uptime

S    ::/0 [1/0] via 2001::a:0:0:c0a8:a01 inactive, 6d22h12m
      [1/0] via 2001::fa:0:0:c0a8:fa01 inactive, 6d22h12m
```

# show ipv6 route summary

**Overview** Use this command to display the summary of the current NSM RIB entries.  
For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 route summary`

**Mode** User Exec and Privileged Exec

**Example** To display IP route summary, use the following command:

```
awplus# show ipv6 route summary
```

**Output** Figure 19-5: Example output from the **show ipv6 route summary** command

```
IPv6 routing table name is Default-IPv6-Routing-Table(0)
IPv6 routing table maximum-paths is 4
RouteSource      Networks
connected        4
FIB               5
```

**Related Commands** [show ip route database](#)

# traceroute ipv6

**Overview** Use this command to trace the route to the specified IPv6 host.

**Syntax** `traceroute ipv6 {<ipv6-addr>|<hostname>}`

| Parameter                      | Description  |
|--------------------------------|--|
| <code>&lt;ipv6-addr&gt;</code> | The destination IPv6 address. The IPv6 address uses the format X:X::X:X. |
| <code>&lt;hostname&gt;</code>  | The destination hostname.  |

**Mode** User Exec and Privileged Exec

**Example** To run a traceroute for the IPv6 address 2001:0db8::a2, use the following command:

```
awplus# traceroute ipv6 2001:0db8::a2
```

**Related Commands** [ping ipv6](#)

# 20

# Routing Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of routing commands that are common across the routing IP protocols.

For more information, see the [Route Selection Feature Overview and Configuration Guide](#).

- Command List**
- [“ip route”](#) on page 772
  - [“max-fib-routes”](#) on page 774
  - [“max-static-routes”](#) on page 775
  - [“maximum-paths”](#) on page 776
  - [“show ip route”](#) on page 777
  - [“show ip route database”](#) on page 779
  - [“show ip route summary”](#) on page 780

# ip route

**Overview** This command adds a static route to the Routing Information Base (RIB). If this route is the best route for the destination, then your device adds it to the Forwarding Information Base (FIB). Your device uses the FIB to advertise routes to neighbors and forward packets.

The **no** variant of this command removes the static route from the RIB and FIB.

**Syntax** `ip route <subnet&mask> {<gateway-ip>|<interface>} [<distance>]`  
`no ip route <subnet&mask> {<gateway-ip>|<interface>} [<distance>]`

| Parameter     | Description   |
|---------------|---|
| <subnet&mask> | The IPv4 address of the destination subnet defined using either a prefix length or a separate mask specified in one of the following formats:<br><br>The IPv4 subnet address in dotted decimal notation followed by the subnet mask, also in dotted decimal notation.<br><br>The IPv4 subnet address in dotted decimal notation, followed by a forward slash, then the prefix length. |
| <gateway-ip>  | The IPv4 address of the gateway device.   |
| <interface>   | The interface that connects your device to the network. Enter the name of the VLAN or its VID. You can also enter 'null' as an interface. Specify a 'null' interface to add a null or blackhole route to the device.<br>The gateway IP address or the interface is required.  |
| <distance>    | The administrative distance for the static route in the range <1-255>. Static routes by default have an administrative distance of 1.   |

**Mode** Global Configuration

**Default** The default administrative distance for a static route is 1 for priority over non-static routes.

**Usage** Administrative distance can be modified so static routes do not take priority over other routes.

Specify a 'Null' interface to add a null or blackhole route to the switch. A null or blackhole route is a routing table entry that does not forward packets, so any packets sent to it are dropped.



**Examples** To add the destination 192.168.3.0 with the mask 255.255.255.0 as a static route available through the device at "10.10.0.2" with the default administrative distance, use the commands:

```
awplus# configure terminal
awplus(config)# ip route 192.168.3.0 255.255.255.0 10.10.0.2
```

To remove the destination 192.168.3.0 with the mask 255.255.255.0 as a static route available through the device at "10.10.0.2" with the default administrative distance, use the commands:

```
awplus# configure terminal
awplus(config)# no ip route 192.168.3.0 255.255.255.0 10.10.0.2
```

To specify a null or blackhole route 192.168.4.0/24, so packets forwarded to this route are dropped, use the commands:

```
awplus# configure terminal
awplus(config)# ip route 192.168.4.0/24 null
```

To add the destination 192.168.3.0 with the mask 255.255.255.0 as a static route available through the device at "10.10.0.2" with an administrative distance of 128, use the commands:

```
awplus# configure terminal
awplus(config)# ip route 192.168.3.0 255.255.255.0 10.10.0.2
128
```

**Related  
Commands** [show ip route](#)  
[show ip route database](#)

# max-fib-routes

**Overview** This command enables you to control the maximum number of FIB routes configured. It operates by providing parameters that enable you to configure preset maximums and warning message thresholds. The operation of these parameters is explained in the Parameter / Description table shown below.

**NOTE:** For static routes use the [max-static-routes](#) command.

Use the **no** variant of this command to set the maximum number of FIB routes to the default of 4294967294 FIB routes.

**Syntax** `max-fib-routes <1-4294967294> [<1-100>|warning-only]`  
`no max-fib-routes`

| Parameter      | Description  |
|----------------|--|
| max-fib-routes | This is the maximum number of routes that can be stored in the device's Forwarding Information dataBase. In practice, other practical system limits would prevent this maximum being reached.  |
| <1-4294967294> | The allowable configurable range for setting the maximum number of FIB-routes.   |
| <1-100>        | This parameter enables you to optionally apply a percentage value. This percentage will be based on the maximum number of FIB routes you have specified. This will cause a warning message to appear when your routes reach your specified percentage value. Routes can continue to be added until your configured maximum value is reached. |
| warning-only   | This parameter enables you to optionally apply a warning message. If you set this option a warning message will appear if your maximum configured value is reached. Routes can continue to be added until your device reaches either the maximum capacity value of 4294967294, or a practical system limit.                                  |

**Default** The default number of fib routes is the maximum number of fib routes (4294967294).

**Mode** Global Configuration

**Examples** To set the maximum number of dynamic routes to 2000 and warning threshold of 75%, use the following commands:

```
awplus# config terminal
awplus(config)# max-fib-routes 2000 75
```

# max-static-routes

**Overview** Use this command to set the maximum number of static routes, excluding FIB (Forwarding Information Base) routes.

**NOTE:** For FIB routes use the [max-fib-routes](#) command.

Use the **no** variant of this command to set the maximum number of static routes to the default of 1000 static routes.

**Syntax** `max-static-routes <1-1000>`  
`no max-static-routes`

**Default** The default number of static routes is the maximum number of static routes (1000).

**Mode** Global Configuration

**Example** To reset the maximum number of static routes to the default maximum, use the command:

```
awplus# configure terminal
awplus(config)# no max-static-routes
```

**NOTE:** Static routes are applied before adding routes to the RIB (Routing Information Base). Therefore, rejected static routes will not appear in the running config.

**Related  
Commands** [max-fib-routes](#)

# maximum-paths

**Overview** This command enables ECMP on your device, and sets the maximum number of paths that each route has in the Forwarding Information Base (FIB). ECMP is enabled by default.

The **no** variant of this command sets the maximum paths to the default of 4.

**Syntax** `maximum-paths <1-8>`  
`no maximum-paths`

| Parameter                | Description   |
|--------------------------|---|
| <code>&lt;1-8&gt;</code> | The maximum number of paths that a route can have in the FIB. |

**Default** By default the maximum number of paths is 4.

**Mode** Global Configuration

**Examples** To set the maximum number of paths for each route in the FIB to 5, use the command:

```
awplus# configure terminal
awplus(config)# maximum-paths 5
```

To set the maximum paths for a route to the default of 4, use the command:

```
awplus# configure terminal
awplus(config)# no maximum-paths
```

# show ip route

**Overview** Use this command to display routing entries in the FIB (Forwarding Information Base). The FIB contains the best routes to a destination, and your device uses these routes when forwarding traffic. You can display a subset of the entries in the FIB based on protocol.

To modify the lines displayed, use the | (output modifier token); to save the output to a file, use the > output redirection token.

**Syntax** `show ip route [bgp|connected|ospf|rip|static|<ip-addr>|<ip-addr/prefix-length>]`

| Parameter               | Description   |
|-------------------------|---|
| connected               | Displays only the routes learned from connected interfaces.                             |
| static                  | Displays only the static routes you have configured.                                    |
| <ip-addr>               | Displays the routes for the specified address. Enter an IPv4 address.                   |
| <ip-addr/prefix-length> | Displays the routes for the specified network. Enter an IPv4 address and prefix length. |

**Mode** User Exec and Privileged Exec

**Example** To display the static routes in the FIB, use the command:

```
awplus# show ip route static
```

**Output** Each entry in the output from this command has a code preceding it, indicating the source of the routing entry. The first few lines of the output list the possible codes that may be seen with the route entries.

Typically, route entries are composed of the following elements:

- code
- a second label indicating the sub-type of the route
- network or host ip address
- administrative distance and metric
- next hop ip address
- outgoing interface name
- time since route entry was added

Figure 20-1: Example output from the **show ip route** command

```
Codes: C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       * - candidate default

C       3.3.3.0/24 is directly connected, vlan1
C       10.10.31.0/24 is directly connected, vlan2
C       10.70.0.0/24 is directly connected, vlan4
C       33.33.33.33/32 is directly connected, lo
```

To avoid repetition, only selected route entries comprising of different elements are described here:

**Connected Route** The connected route entry consists of:

```
C       10.10.31.0/24 is directly connected, vlan2
```

This route entry denotes:

- Route entries for network 10.10.31.0/24 are derived from the IP address of local interface `vlan2`.
- These routes are marked as Connected routes (C) and always preferred over routes for the same network learned from other routing protocols.

**Related Commands** [show ip route database](#)

# show ip route database

**Overview** This command displays the routing entries in the RIB (Routing Information Base).

When multiple entries are available for the same prefix, RIB uses the routes' administrative distances to choose the best route. All best routes are entered into the FIB (Forwarding Information Base). To view the routes in the FIB, use the [show ip route](#) command.

To modify the lines displayed, use the | (output modifier token); to save the output to a file, use the > output redirection token.

**Syntax** `show ip route database [connected|ospf|rip|static]`

| Parameter | Description   |
|-----------|---|
| connected | Displays only the routes learned from connected interfaces. |
| static    | Displays only the static routes you have configured.        |

**Mode** User Exec and Privileged Exec

**Example** To display the static routes in the RIB, use the command:

```
awplus# show ip route database static
```

**Output** Figure 20-2: Example output from the **show ip route database** command

```
Codes: C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
> - selected route, * - FIB route, p - stale info

C    *> 10.10.31.0/24 is directly connected, vlan2
S    *> 10.10.34.0/24 [1/0] via 10.10.31.16, vlan2
C    *> 10.30.0.0/24 is directly connected, vlan6
S    *> 11.22.11.0/24 [1/0] via 10.10.31.16, vlan2
S    *> 16.16.16.16/32 [1/0] via 10.10.31.16, vlan2
C    *> 45.45.45.45/32 is directly connected, lo
C    *> 127.0.0.0/8 is directly connected, lo
```

The routes added to the FIB are marked with a \*. When multiple routes are available for the same prefix, the best route is indicated with the > symbol. All unselected routes have neither the \* nor the > symbol.

**Related Commands** [show ip route](#)

# show ip route summary

**Overview** This command displays a summary of the current RIB (Routing Information Base) entries.

To modify the lines displayed, use the | (output modifier token); to save the output to a file, use the > output redirection token.

**Syntax** `show ip route summary`

**Mode** User Exec and Privileged Exec

**Example** To display a summary of the current RIB entries, use the command:

```
awplus# show ip route summary
```

**Output** Figure 20-3: Example output from the **show ip route summary** command

```
IP routing table name is Default-IP-Routing-Table(0)
IP routing table maximum-paths is 4
Route Source      Networks
connected         5
Total             8
```

**Related Commands** [show ip route](#)  
[show ip route database](#)



# Part 4: Multicast Applications

# 21

# Multicast Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of generic multicast commands. For commands for particular multicast protocols, see:

- [IGMP and IGMP Snooping Commands.](#)
- [MLD and MLD Snooping Commands](#)

**NOTE:** The IPv6 Multicast addresses shown can be derived from IPv6 unicast prefixes as per RFC 3306. The IPv6 unicast prefix reserved for documentation is 2001:0db8::/32 as per RFC 3849. Using the base /32 prefix the IPv6 multicast prefix for 2001:0db8::/32 is ff3x:20:2001:0db8::/64. Where an RP address is 2001:0db8::1 the embedded RP multicast prefix is ff7x:120:2001:0db8::/96. For ASM (Any-Source Multicast) the IPV6 multicast addresses allocated for documentation purposes are ff0x::0db8:0:0/96 as per RFC 6676. This is a /96 prefix so that it can be used with group IDs as per RFC 3307. These addresses should not be used for practical networks (other than for testing purposes), nor should they appear in any public network.

The IPv6 addresses shown use the address space 2001:0db8::/32, defined in RFC 3849 for documentation purposes. These addresses should not be used for practical networks (other than for testing purposes) nor should they appear on any public network.

- Command List**
- [“clear ip mroute”](#) on page 784
  - [“clear ip mroute statistics”](#) on page 785
  - [“clear ipv6 mroute”](#) on page 786
  - [“clear ipv6 mroute statistics”](#) on page 787
  - [“ipv6 multicast forward-slow-path-packet”](#) on page 788
  - [“debug nsm mcast”](#) on page 789
  - [“debug nsm mcast6”](#) on page 790
  - [“ip mroute”](#) on page 791
  - [“ip multicast forward-first-packet”](#) on page 793

- [“ip multicast route”](#) on page 794
- [“ip multicast route-limit”](#) on page 796
- [“ip multicast wrong-vif-suppression”](#) on page 797
- [“ip multicast-routing”](#) on page 798
- [“ipv6 multicast route”](#) on page 799
- [“ipv6 multicast route-limit”](#) on page 802
- [“ipv6 multicast-routing”](#) on page 803
- [“multicast”](#) on page 804
- [“show ip mroute”](#) on page 805
- [“show ip mvif”](#) on page 807
- [“show ip rpf”](#) on page 808
- [“show ipv6 mroute”](#) on page 809
- [“show ipv6 multicast forwarding”](#) on page 811
- [“show ipv6 mif”](#) on page 812

# clear ip mroute

**Overview** Use this command to delete entries from the IPv4 multicast routing table.

**NOTE:** If you use this command, you should also use the [clear ip igmp group](#) command to clear IGMP group membership records.

**Syntax** `clear ip mroute {*|<ipv4-group-address>  
[<ipv4-source-address>]} [pim sparse-mode]`

| Parameter             | Description  |
|-----------------------|--|
| *                     | Deletes all multicast routes.  |
| <ipv4-group-address>  | Group IPv4 address, in dotted decimal notation in the format A.B.C.D.  |
| <ipv4-source-address> | Source IPv4 address, in dotted decimal notation in the format A.B.C.D. |
| pim sparse-mode       | Clear specified IPv4 multicast route(s) for PIM Sparse Mode only.      |

**Mode** Privileged Exec

**Usage** When this command is used, the Multicast Routing Information Base (MRIB) clears the IPv4 multicast route entries in its IPv4 multicast route table, and removes the entries from the multicast forwarder. The MRIB sends a “clear” message to the multicast protocols. Each multicast protocol has its own “clear” multicast route command. The protocol-specific “clear” command clears multicast routes from PIM Sparse Mode, and also clears the routes from the MRIB.

**Examples** `awplus# clear ip mroute 225.1.1.1 192.168.3.3`  
`awplus# clear ip mroute *`

**Related  
Commands** [ip multicast route](#)  
[show ip mroute](#)

# clear ip mroute statistics

**Overview** Use this command to delete multicast route statistics entries from the IP multicast routing table.

**Syntax** `clear ip mroute statistics {*|<ipv4-group-addr>  
[<ipv4-source-addr>]}`

| Parameter          | Description  |
|--------------------|--|
| *                  | All multicast route entries.   |
| <ipv4-group-addr>  | Group IPv4 address, in dotted decimal notation in the format A.B.C.D.  |
| <ipv4-source-addr> | Source IPv4 address, in dotted decimal notation in the format A.B.C.D. |

**Mode** Privileged Exec

**Example** `awplus# clear ip mroute statistics 225.1.1.2 192.168.4.4`  
`awplus# clear ip mroute statistics *`

# clear ipv6 mroute

**Overview** Use this command to delete one or more dynamically-added route entries from the IPv6 multicast routing table. You need to do this, for example, if you want to create a static route instead of an existing dynamic route.

**Syntax** `clear ipv6 mroute {*|<ipv6-group-address>  
[<ipv6-source-address>]}`

| Parameter             | Description  |
|-----------------------|--|
| *                     | Deletes all dynamically-learned IPv6 multicast routes.               |
| <ipv6-group-address>  | Group IPv6 address, in hexadecimal notation in the format X.X::X.X.  |
| <ipv6-source-address> | Source IPv6 address, in hexadecimal notation in the format X.X::X.X. |

**Mode** Privileged Exec

**Usage** When this command is used, the Multicast Routing Information Base (MRIB) clears the relevant IPv6 multicast route entries in its IPv6 multicast route table, and removes the entries from the multicast forwarder. The MRIB sends a “clear” message to the multicast protocols. Each multicast protocol has its own “clear” multicast route command.

This command does not remove static routes from the routing table or the configuration. To remove static routes, use the `no` parameter of the command [ipv6 multicast route](#).

**Example** `awplus# clear ipv6 mroute 2001::2 ff08::1`

**Related  
Commands** [ipv6 multicast route](#)  
[show ipv6 mroute](#)

# clear ipv6 mroute statistics

**Overview** Use this command to delete multicast route statistics entries from the IPv6 multicast routing table.

**NOTE:** Static IPv6 multicast routes take priority over dynamic IPv6 multicast routes. Use the [clear ipv6 mroute](#) command to clear static IPv6 multicast routes and ensure dynamic IPv6 multicast routes can take over from previous static IPv6 multicast routes.

**Syntax** `clear ipv6 mroute statistics {*|<ipv6-group-address> [<ipv6-source-address>]}`

| Parameter          | Description  |
|--------------------|--|
| *                  | All multicast route entries.   |
| <ipv6-group-addr>  | Group IPv6 address, in hexadecimal notation in the format X.X::X.X.  |
| <ipv6-source-addr> | Source IPv6 address, in hexadecimal notation in the format X.X::X.X. |

**Mode** Privileged Exec

**Examples** `awplus# clear ipv6 mroute statistics 2001::2 ff08::1`  
`awplus# clear ipv6 mroute statistics *`

# ipv6 multicast forward-slow-path-packet

**Overview** Use this command to enable multicast packets to be forwarded to the CPU. Enabling this command will ensure that the layer L3 MTU is set correctly for each IP multicast group and will apply the value of the smallest MTU among the outgoing interfaces for the multicast group.

It will also ensure that a received packet that is larger than the MTU value will result in the generation of an ICMP Too Big message.

Use the **no** variant of this command to disable the above functionality.

**Syntax** `ipv6 multicast forward-slow-path-packet`  
`no ipv6 multicast forward-slow-path-packet`

**Default** Disabled.

**Mode** Privileged Exec

**Example** To enable the ipv6 multicast forward-slow-path-packet function, use the following commands:

```
awplus# configure terminal
awplus(config)# ip multicast forward-slow-path-packet
```

**Related Commands** [show ipv6 forwarding](#)



# debug nsm mcast

**Overview** Use this command to debug IPv4 events in the Multicast Routing Information Base (MRIB).

**Syntax** `debug nsm mcast`  
`{all|fib-msg|mrt|mtrace|mtrace-detail|register|stats|vif}`

| Parameter     | Description                                 |
|---------------|---|
| all           | All IPv4 multicast debugging.               |
| fib-msg       | Forwarding Information Base (FIB) messages. |
| mrt           | Multicast routes.                           |
| mtrace        | Multicast traceroute.                       |
| mtrace-detail | Multicast traceroute detailed debugging.    |
| register      | Multicast PIM register messages.            |
| stats         | Multicast statistics.                       |
| vif           | Multicast interface.                        |

**Mode** Privileged Exec and Global Configuration

**Examples**

```
awplus# configure terminal
awplus(config)# debug nsm mcast all
awplus# configure terminal
awplus(config)# debug nsm mcast fib-msg
awplus# configure terminal
awplus(config)# debug nsm mcast mrt
awplus# configure terminal
awplus(config)# debug nsm mcast mtrace
awplus# configure terminal
awplus(config)# debug nsm mcast mtrace-detail
awplus# configure terminal
awplus(config)# debug nsm mcast register
awplus# configure terminal
awplus(config)# debug nsm mcast stat
awplus# configure terminal
awplus(config)# debug nsm mcast vif
```

# debug nsm mcast6

**Overview** Use this command to debug IPv6 events in the Multicast Routing Information Base (MRIB).

**Syntax** `debug nsm mcast6`  
`{all|fib-msg|mrt|mtrace|mtrace-detail|register|stats|vif}`

| Parameter | Description                                 |
|-----------|---|
| all       | All IPv4 multicast debugging.               |
| fib-msg   | Forwarding Information Base (FIB) messages. |
| mif       | Multicast interfaces.                       |
| mrt       | Multicast routes.                           |
| register  | Multicast PIM register messages.            |
| stats     | Multicast statistics.                       |

**Mode** Privileged Exec and Global Configuration

**Examples**

```
awplus# configure terminal
awplus(config)# debug nsm mcast6 all
awplus# configure terminal
awplus(config)# debug nsm mcast6 fib-msg
awplus# configure terminal
awplus(config)# debug nsm mcast6 mif
awplus# configure terminal
awplus(config)# debug nsm mcast6 mrt
awplus# configure terminal
awplus(config)# debug nsm mcast6 register
awplus# configure terminal
awplus(config)# debug nsm mcast6 stats
```

# ip mroute

**Overview** Use this command to inform multicast of the RPF (Reverse Path Forwarding) route to a given IPv4 multicast source.

Use the **no** variant of this command to delete a route to an IPv4 multicast source.

**Syntax**

```
ip mroute <ipv4-source-address/mask-length>
[bgp|ospf|rip|static] <rpf-address> [<admin-distance>]

no ip mroute <ipv4-source-address/mask-length>
[bgp|ospf|rip|static]
```

| Parameter                         | Description  |
|-----------------------------------|--|
| <ipv4-source-address/mask-length> | A multicast source IPv4 address and mask length, in dotted decimal notation in the format A.B.C.D/M.   |
| ospf                              | OSPF unicast routing protocol.   |
| rip                               | RIP unicast routing protocol.  |
| static                            | Specifies a static route.  |
| <rpf-address>                     | A.B.C.D<br>The closest known address on the multicast route back to the specified source. This host IPv4 address can be within a directly connected subnet or within a remote subnet. In the case that the address is in a remote subnet, a lookup is done from the unicast route table to find the next hop address on the path to this host. |
| <admin-distance>                  | The administrative distance. Use this to determine whether the RPF lookup selects the unicast or multicast route. Lower distances have preference. If the multicast static route has the same distance as the other RPF sources, the multicast static route takes precedence. The default is 0 and the range available is 0-255.               |

**Mode** Global Configuration

**Usage** Typically, when a Layer 3 multicast routing protocol is determining the RPF (Reverse Path Forwarding) interface for the path to an IPv4 multicast source, it uses the unicast route table to find the best path to the source. However, in some networks a deliberate choice is made to send multicast via different paths to those used for unicast. In this case, the interface via which a multicast stream from a given source enters a router may not be the same as the interface that connects to the best unicast route to that source.

This command enables the user to statically configure the device with “multicast routes” back to given sources. When performing the RPF check on a stream from a given IPv4 source, the multicast routing protocol will look at these static entries as well as looking into the unicast routing table. The route with the lowest

administrative distance - whether a static “multicast route” or a route from the unicast route table - will be chosen as the RPF route to the source.

Note that in this context the term “multicast route” does not imply a route via which the current router will forward multicast; instead it refers to the route the multicast will have traversed in order to arrive at the current router.

**Examples** The following example creates a static multicast IPv4 route back to the sources in the 10.10.3.0/24 subnet. The multicast route is via the host 192.168.2.3, and has an administrative distance of 2:

```
awplus# configure terminal
awplus(config)# ip mroute 10.10.3.0/24 static 2 192.168.2.3 2
```

The following example creates a static multicast IPv4 route back to the sources in the 192.168.3.0/24 subnet. The multicast route is via the host 10.10.10.50. The administrative distance on this route has the default value of 0:

```
awplus# configure terminal
awplus(config)# ip mroute 192.168.3.0/24 10.10.10.50
```

**Validation  
Commands** `show ip rpf`

# ip multicast forward-first-packet

**Overview** Use this command to enable multicast to forward the first multicast packets coming to the device.

Use the **no** variant of this command to disable this feature.

**Syntax** `ip multicast forward-first-packet`  
`no ip multicast forward-first-packet`

**Default** By default, this feature is disabled.

**Mode** Global Configuration

**Usage** If this command is enabled, the device will forward the first packets in a multicast stream that create the multicast route, possibly causing degradation in the quality of the multicast stream, such as the pixelation of video and audio data.

**NOTE:** *If you use this command, ensure that the [ip igmp snooping](#) command is enabled, the default setting, otherwise the device will not process the first packets of the multicast stream correctly.*

The device will forward the first multicast packets to all interfaces which are on the same VLAN as those which asked for this multicast group.

**Examples** To enable the forwarding of the first multicast packets, use the following commands:

```
awplus# configure terminal
awplus(config)# ip multicast forward-first-packet
```

To disable the forwarding of the first multicast packets, use the following commands:

```
awplus# configure terminal
awplus(config)# no ip multicast forward-first-packet
```

# ip multicast route

**Overview** Use this command to add an IPv4 static multicast route for a specific multicast source and group IPv4 address to the multicast Routing Information Base (RIB). This IPv4 multicast route is used to forward multicast traffic from a specific source and group ingressing on an upstream VLAN to a single or range of downstream VLANs.

Use the **no** variant of this command to either remove an IPv4 static multicast route set with this command or to remove a specific downstream VLAN interface from an IPv4 static multicast route for a specific multicast source and group IPv4 address.

**Syntax**

```
ip multicast route <ipv4-source-addr> <ipv4-group-addr>  
<upstream-vlan-id> [<downstream-vlan-id>]  
  
no ip multicast route <ipv4-source-addr> <ipv4-group-addr>  
[<upstream-vlan-id> <downstream-vlan-id>]
```

| Parameter            | Description  |
|----------------------|--|
| <ipv4-source-addr>   | Source IPv4 address, in dotted decimal notation in the format A.B.C.D.                         |
| <ipv4-group-addr>    | Group IPv4 address, in dotted decimal notation in the format A.B.C.D.                          |
| <upstream-vlan-id>   | Upstream VLAN interface on which the multicast packets ingress.                                |
| <downstream-vlan-id> | Downstream VLAN interface or range of VLAN interfaces to which the multicast packets are sent. |

**Default** By default, this feature is disabled.

**Mode** Global Configuration

**Usage** Only one multicast route entry per IPv4 address and multicast group can be specified. Therefore, if one entry for a static multicast route is configured, PIM will not be able to update this multicast route in any way.

If a dynamic multicast route exists you cannot create a static multicast route with same source IPv4 address, group IPv4 address, upstream VLAN and downstream VLANs. An error message is displayed and logged. To add a new static multicast route, either wait for the dynamic multicast route to timeout or clear the dynamic multicast route with the [clear ip mroute](#) command.

To update an existing static multicast route entry with more or a new set of downstream VLANs, you must firstly remove the existing static multicast route and then add the new static multicast route with all downstream VLANs specified. If you attempt to update an existing static multicast route entry with an additional VLAN or VLANs an error message is displayed and logged.

To create a blackhole or null route where packets from a specified source and group address coming from an upstream VLAN are dropped rather than

forwarded, do not specify the optional *<downstream-vlan-id>* parameter when entering this command.

To remove a specific downstream VLAN from an existing static multicast route entry, specify the VLAN you want to remove with the *<downstream-vlan-id>* parameter when entering the **no** variant of this command.

**Examples** To create a static multicast route for the multicast source IPv4 address 2.2.2.2 and group IPv4 address 224.9.10.11, specifying the upstream VLAN interface as *vlan10* and the downstream VLAN interface as *vlan20*, use the following commands:

```
awplus# configure terminal
awplus(config)# ip multicast route 2.2.2.2 224.9.10.11 vlan10
vlan20
```

To create a blackhole route for the multicast source IPv4 address 2.2.2.2 and group IPv4 address 224.9.10.11, specifying the upstream VLAN interface as *vlan10*, use the following commands:

```
awplus# configure terminal
awplus(config)# ip multicast route 2.2.2.2 224.9.10.11 vlan10
```

To create an IPv4 static multicast route for the multicast source IPv4 address 2.2.2.2 and group IP address 224.9.10.11, specifying the upstream VLAN interface as *vlan10* and the downstream VLAN range as *vlan20-25*, use the following commands:

```
awplus# configure terminal
awplus(config)# ip multicast route 2.2.2.2 224.9.10.11 vlan10
vlan20-25
```

To remove the downstream VLAN 23 from the IPv4 static multicast route created with the above command, use the following commands:

```
awplus# configure terminal
awplus(config)# no ip multicast route 2.2.2.2 224.9.10.11
vlan10 vlan23
```

To delete an IPv4 static multicast route for the multicast source IP address 2.2.2.2 and group IP address 224.9.10.11, use the following commands:

```
awplus# configure terminal
awplus(config)# no ip multicast route 2.2.2.2 224.9.10.11
```

**Related  
Commands** [clear ip mroute](#)  
[show ip mroute](#)

# ip multicast route-limit

**Overview** Use this command to limit the number of multicast routes that can be added to an IPv4 multicast routing table.

Use the no variant of this command to return the IPv4 route limit to the default.

**Syntax** `ip multicast route-limit <limit> [<threshold>]`  
`no ip multicast route-limit`

| Parameter   | Description  |
|-------------|--|
| <limit>     | <1-2147483647> Number of routes.   |
| <threshold> | <1-2147483647> Threshold above which to generate a warning message. The mroute warning threshold must not exceed the mroute limit. |

**Default** The default limit and threshold value is 2147483647.

**Mode** Global Configuration

**Usage** This command limits the number of multicast IPv4 routes (mroutes) that can be added to a router, and generates an error message when the limit is exceeded. If the threshold parameter is set, a threshold warning message is generated when this threshold is exceeded, and the message continues to occur until the number of mroutes reaches the limit set by the limit argument.

**Examples** `awplus# configure terminal`  
`awplus(config)# ip multicast route-limit 34 24`  
`awplus# configure terminal`  
`awplus(config)# no ip multicast route-limit`



# ip multicast wrong-vif-suppression

**Overview** Use this command to prevent unwanted multicast packets received on an unexpected VLAN being trapped to the CPU.

Use the no variant of this command to disable wrong VIF suppression.

**Syntax** `ip ip multicast wrong-vif-suppression`  
`no ip multicast wrong-vif-suppression`

**Default** By default, this feature is disabled.

**Mode** Global Configuration

**Usage** Use this command if there is excessive CPU load and multicast traffic is enabled. To confirm that VIF messages are being sent to the CPU use the [debug nsm mcast6](#) command.

**Examples** To enable the suppression of wrong VIF packets, use the following commands:

```
awplus# configure terminal
awplus(config)# ip multicast wrong-vif-suppression
```

To disable the suppression of wrong VIF packets, use the following commands:

```
awplus# configure terminal
awplus(config)# no ip multicast wrong-vif-suppression
```

# ip multicast-routing

**Overview** Use this command to turn on/off IPv4 multicast routing on the router; when turned off the device does not perform multicast functions.

Use the **no** variant of this command to disable IPv4 multicast routing after enabling it. Note the default stated below.

**Syntax** `ip multicast-routing`  
`no ip multicast-routing`

**Default** By default, IPv4 multicast routing is off.

**Mode** Global Configuration

**Usage** When the **no** variant of this command is used, the Multicast Routing Information Base (MRIB) cleans up Multicast Routing Tables (MRT), stops IGMP operation, and stops relaying multicast forwarder events to multicast protocols.

When multicast routing is enabled, the MRIB starts processing any MRT addition/deletion requests, and any multicast forwarding events.

You must enable multicast routing before issuing other multicast commands.

**Example** `awplus# configure terminal`  
`awplus(config)# ip multicast-routing`

**Validation  
Commands** `show running-config`

# ipv6 multicast route

**Overview** Use this command to add an IPv6 static multicast route for a specific multicast source and group IPv6 address to the multicast Routing Information Base (RIB). This IPv6 multicast route is used to forward IPv6 multicast traffic from a specific source and group ingress on an upstream VLAN to a single or range of downstream VLANs.

See detailed usage notes below to configure static multicast router ports when using static IPv6 multicast routes with EPSR, and the destination VLAN is an EPSR data VLAN.

Use the **no** variant of this command to either remove an IPv6 static multicast route set with this command or to remove a specific downstream VLAN interface from an IPv6 static multicast route for a specific IPv6 multicast source and group address.

**Syntax** `ipv6 multicast route <ipv6-source-addr> <ipv6-group-addr>  
<upstream-vlan-id> [<downstream-vlan-id>]`  
`no ipv6 multicast route <ipv6-source-addr> <ipv6-group-addr>  
[<upstream-vlan-id> <downstream-vlan-id>]`

| Parameter                               | Description  |
|---|--|
| <code>&lt;ipv6-group-addr&gt;</code>    | Source IPv6 address, in dotted decimal notation in the format X.X::X.X.                        |
| <code>&lt;ipv6-group-addr&gt;</code>    | Group IP address, in dotted decimal notation in the format X.X::X.X.                           |
| <code>&lt;upstream-vlan-id&gt;</code>   | Upstream VLAN interface on which the multicast packets ingress.                                |
| <code>&lt;downstream-vlan-id&gt;</code> | Downstream VLAN interface or range of VLAN interfaces to which the multicast packets are sent. |

**Default** By default, no static routes exist.

**Mode** Global Configuration

**Usage** Only one multicast route entry per IPv6 address and multicast group can be specified. Therefore, if one entry for an IPv6 static multicast route is configured, PIM will not be able to update this multicast route in any way.

If a dynamic multicast route exists, you cannot create a static multicast route with the same source IPv6 address and group IPv6 address. An error message is displayed and logged. To add a new static multicast route, either wait for the dynamic multicast route to time out or clear the dynamic multicast route with the [clear ipv6 mroute](#) command.

To update an existing IPv6 static multicast route entry with new or additional downstream VLANs, you must firstly remove the existing static multicast route and then add the new static multicast route with all downstream VLANs specified. If

you attempt to update an existing static multicast route entry with an additional VLAN or VLANs an error message is displayed and logged.

To create a blackhole or null route where packets from a specified source and group address coming from an upstream VLAN are dropped rather than forwarded, do not specify the optional `<downstream-vlan-id>` parameter when entering this command.

To remove a specific downstream VLAN from an existing static multicast route entry, specify the VLAN you want to remove with the `<downstream-vlan-id>` parameter when entering the **no** variant of this command.

Note that if static IPv6 multicast routing is being used with EPSR and the destination VLAN is an EPSR data VLAN, then multicast router (mrouter) ports must be statically configured. This minimizes disruption for multicast traffic in the event of ring failure or restoration.

When configuring the EPSR data VLAN, statically configure mrouter ports so that the multicast router can be reached in either direction around the EPSR ring.

For example, if port1.0.1 and port1.0.14 are ports on an EPSR data VLAN `vlan101`, which is the destination for a static IPv6 multicast route, then configure both ports as multicast router (mrouter) ports as shown in the example commands listed below:

**Output** Figure 21-1: Example ipv6 mld snooping mrouter commands when static IPv6 multicast routing is being used and the destination VLAN is an EPSR data VLAN:

```
awplus>enable
awplus#configure terminal
awplus(config)#interface vlan101
awplus(config-if)#ipv6 mld snooping mrouter interface port1.0.1
awplus(config-if)#ipv6 mld snooping mrouter interface port1.0.14
```

See [ipv6 mld snooping mrouter](#) for a command description and command examples.

**Examples** To create an IPv6 static multicast route for the multicast source IPv6 address `2001::1` and group IPv6 address `ff08::1`, specifying the upstream VLAN interface as `vlan10` and the downstream VLAN interface as `vlan20`, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 multicast route 2001::1 ff08::1 vlan10
vlan20
```

To create a blackhole route for the IPv6 multicast source IP address 2001::1 and group IP address ff08::1, specifying the upstream VLAN interface as `vlan10`, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 multicast route 2001::1 ff08::1 vlan10
```

To create an IPv6 static multicast route for the multicast source IPv6 address 2001::1 and group IPv6 address ff08::1, specifying the upstream VLAN interface as `vlan10` and the downstream VLAN range as `vlan20-25`, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 multicast route 2001::1 ff08::1 vlan10
vlan20-25
```

To remove the downstream VLAN 23 from the IPv6 static multicast route created with the above command, use the following commands:

```
awplus# configure terminal
awplus(config)# no ipv6 multicast route 2001::1 ff08::1 vlan10
vlan23
```

To delete an IPv6 static multicast route for the multicast source IPv6 address 2001::1 and group IPv6 address ff08::1, use the following commands:

```
awplus# configure terminal
awplus(config)# no ipv6 multicast route 2001::1 ff08::1
```

**Related  
Commands**

[clear ipv6 mroute](#)

[ipv6 mld snooping mrouter](#)

[show ipv6 mroute](#)

# ipv6 multicast route-limit

**Overview** Use this command to limit the number of multicast routes that can be added to an IPv6 multicast routing table.

Use the no variant of this command to return the IPv6 route limit to the default.

**Syntax** `ipv6 multicast route-limit <limit> [<threshold>]`  
`no ipv6 multicast route-limit`

| Parameter   | Description  |
|-------------|--|
| <limit>     | <1-2147483647> Number of routes.   |
| <threshold> | <1-2147483647> Threshold above which to generate a warning message. The mroute warning threshold must not exceed the mroute limit. |

**Default** The default limit and threshold value is 2147483647.

**Mode** Global Configuration

**Usage** This command limits the number of multicast IPv6 routes (mroutes) that can be added to a router, and generates an error message when the limit is exceeded. If the threshold parameter is set, a threshold warning message is generated when this threshold is exceeded, and the message continues to occur until the number of mroutes reaches the limit set by the limit argument.

**Examples** `awplus# configure terminal`  
`awplus(config)# ipv6 multicast route-limit 34 24`  
`awplus# configure terminal`  
`awplus(config)# no ipv6 multicast route-limit`

# ipv6 multicast-routing

**Overview** Use this command to turn on/off IPv6 multicast routing on the router; when turned off the device does not perform multicast functions.

Use the **no** variant of this command to disable IPv6 multicast routing after enabling it. Note the default stated below.

**Syntax** `ipv6 multicast-routing`  
`no ipv6 multicast-routing`

**Default** By default, IPv6 multicast routing is off.

**Mode** Global Configuration

**Usage** When the **no** variant of this command is used, the Multicast Routing Information Base (MRIB) cleans up Multicast Routing Tables (MRT), and stops relaying multicast forwarder events to multicast protocols.

When multicast routing is enabled, the MRIB starts processing any MRT addition/deletion requests, and any multicast forwarding events.

You must enable multicast routing before issuing other multicast commands.

**Examples** `awplus# configure terminal`  
`awplus(config)# ipv6 multicast-routing`  
`awplus# configure terminal`  
`awplus(config)# no ipv6 multicast-routing`

**Validation Commands** `show running-config`

# multicast

**Overview** Use this command to enable a device port to route multicast packets that ingress the port.

Use the **no** variant of this command to stop the device port from routing multicast packets that ingress the port. Note that this does not affect Layer 2 forwarding of multicast packets. If you enter **no multicast** on a port, multicast packets received on that port will not be forwarded to other VLANs, but ports in the same VLANs as the receiving port will still receive the multicast packets.

**Syntax** `multicast`  
`no multicast`

**Default** By default, all device ports route multicast packets.

**Mode** Interface Configuration

**Examples** `awplus# configure terminal`  
`awplus(config)# interface port1.0.1`  
`awplus(config-if)# multicast`  
`awplus# configure terminal`  
`awplus(config)# interface port1.0.1`  
`awplus(config-if)# no multicast`

**Validation Commands** `show running-config`



# show ip mroute

**Overview** Use this command to display the contents of the IPv4 multicast routing (mroute) table.

**Syntax** `show ip mroute [<ipv4-group-addr>] [<ipv4-source-addr>]  
[ {dense|sparse} ] [ {count|summary} ]`

| Parameter          | Description   |
|--------------------|---|
| <ipv4-group-addr>  | Group IPv4 address, in dotted decimal notation in the format A.B.C.D.                     |
| <ipv4-source-addr> | Source IPv4 address, in dotted decimal notation in the format A.B.C.D.                    |
| dense              | Display dense IPv4 multicast routes.  |
| sparse             | Display sparse IPv4 multicast routes.   |
| count              | Display the route and packet count from the IPv4 multicast routing (mroute) table.        |
| summary            | Display the contents of the IPv4 multicast routing (mroute) table in an abbreviated form. |

**Mode** User Exec and Privileged Exec

**Examples** `awplus# show ip mroute 10.10.3.34 224.1.4.3`  
`awplus# show ip mroute 10.10.5.24 225.2.2.2 count`  
`awplus# show ip mroute 10.10.1.34 summary`

**Output** The following is a sample output of this command displaying the IPv4 multicast routing table, with and without specifying the group and source IPv4 address:

Figure 21-2: Example output from the **show ip mroute** command

```
awplus# show ip mroute
IP Multicast Routing Table
Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder
installed
Timers: Uptime/Stat Expiry
Interface State: Interface (TTL)

(10.10.1.52, 224.0.1.3), uptime 00:00:31, stat expires 00:02:59
Owner PIM-SM, Flags: TF
  Incoming interface: vlan2
  Outgoing interface list:
    vlan3 (1)
```

Figure 21-3: Example output from the **show ip mroute** command with the source and group IPv4 address specified

```
awplus# show ip mroute 10.10.1.52 224.0.1.3

IP Multicast Routing Table
Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder
installed
Timers: Uptime/Stat Expiry
Interface State: Interface (TTL)

(10.10.1.52, 224.0.1.3), uptime 00:03:24, stat expires 00:01:28
Owner PIM-SM, Flags: TF
  Incoming interface: vlan2
  Outgoing interface list:
    vlan3 (1)
```

The following is a sample output of this command displaying the packet count from the IPv4 multicast routing table:

Figure 21-4: Example output from the **show ip mroute count** command

```
awplus# show ip mroute count

IP Multicast Statistics
Total 1 routes using 132 bytes memory
Route limit/Route threshold: 2147483647/2147483647
Total NOCACHE/WRONGVIF/WHOLEPKT rcv from fwd: 1/0/0
Total NOCACHE/WRONGVIF/WHOLEPKT sent to clients: 1/0/0
Immediate/Timed stat updates sent to clients: 0/0
Reg ACK rcv/Reg NACK rcv/Reg pkt sent: 0/0/0
Next stats poll: 00:01:10

Forwarding Counts: Pkt count/Byte count, Other Counts: Wrong If
pkts
Fwd msg counts: WRONGVIF/WHOLEPKT rcv
Client msg counts: WRONGVIF/WHOLEPKT/Imm Stat/Timed Stat sent
Reg pkt counts: Reg ACK rcv/Reg NACK rcv/Reg pkt sent

(10.10.1.52, 224.0.1.3), Forwarding: 2/19456, Other: 0
  Fwd msg: 0/0, Client msg: 0/0/0/0, Reg: 0/0/0
```

The following is a sample output for this command displaying the IPv4 multicast routing table in an abbreviated form:

Figure 21-5: Example output from the **show ip mroute summary** command

```
awplus# show ip mroute summary

IP Multicast Routing Table
Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder
installed
Timers: Uptime/Stat Expiry
Interface State: Interface (TTL)

(10.10.1.52, 224.0.1.3), 00:01:32/00:03:20, PIM-SM, Flags: TF
```

# show ip mvif

**Overview** Use this command to display the contents of the IPv4 Multicast Routing Information Base (MRIB) VIF table.

**Syntax** `show ip mvif [<interface>]`

| Parameter   | Description                                 |
|-------------|---|
| <interface> | The interface to display information about. |

**Mode** User Exec and Privileged Exec

**Example** `awplus# show ip mvif vlan2`

**Output** Figure 21-6: Example output from the **show ip mvif** command

| Interface | Vif<br>Idx | Owner<br>Module | TTL | Local<br>Address | Remote<br>Address | Uptime   |
|-----------|------------|-----------------|-----|------------------|-------------------|----------|
| vlan2     | 0          | PIM-SM          | 1   | 192.168.1.53     | 0.0.0.0           | 00:04:26 |
| Register  | 1          |                 | 1   | 192.168.1.53     | 0.0.0.0           | 00:04:26 |
| vlan3     | 2          | PIM-SM          | 1   | 192.168.10.53    | 0.0.0.0           | 00:04:25 |

Figure 21-7: Example output from the **show ip mvif** command with the interface parameter **vlan2** specified

| Interface | Vif<br>Idx | Owner<br>Module | TTL | Local<br>Address | Remote<br>Address | Uptime   |
|-----------|------------|-----------------|-----|------------------|-------------------|----------|
| vlan2     | 0          | PIM-SM          | 1   | 192.168.1.53     | 0.0.0.0           | 00:05:17 |

# show ip rpf

**Overview** Use this command to display Reverse Path Forwarding (RPF) information for the specified IPv4 source address.

**Syntax** `show ip rpf <source-addr>`

| Parameter                              | Description  |
|--|--|
| <code>&lt;ipv4-source- addr&gt;</code> | Source IPv4 address, in dotted decimal notation in the format A.B.C.D. |

**Mode** User Exec and Privileged Exec

**Example** `awplus# show ip rpf 10.10.10.50`

# show ipv6 mroute

**Overview** Use this command to display the contents of the IPv6 multicast routing (mroute) table.

**Syntax** `show ipv6 mroute [<ipv6-group-addr>] [<ipv6-source-addr>]  
[{count|summary}]`

| Parameter          | Description   |
|--------------------|---|
| <ipv6-group-addr>  | Group IPv6 address, in hexadecimal notation in the format X.X::X.X.                       |
| <ipv6-source-addr> | Source IPv6 address, in hexadecimal notation in the format X.X::X.X.                      |
| count              | Display the route and packet count from the IPv6 multicast routing (mroute) table.        |
| summary            | Display the contents of the IPv6 multicast routing (mroute) table in an abbreviated form. |

**Mode** User Exec and Privileged Exec

**Examples**

```
awplus# show ipv6 mroute
awplus# show ipv6 mroute count
awplus# show ipv6 mroute summary
awplus# show ipv6 mroute 2001::2 ff08::1 count
awplus# show ipv6 mroute 2001::2 ff08::1
awplus# show ipv6 mroute 2001::2 summary
```

**Output** The following is a sample output of this command displaying the IPv6 multicast routing table for a single static IPv6 Multicast route:

Figure 21-8: Example output from the **show ipv6 mroute** command

```
awplus#show ipv6 mroute
IPv6 Multicast Routing Table
Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder
installed
Timers: Uptime/Stat Expiry
Interface State: Interface
(2001::2, ff08::1), uptime 03:18:38
Owner IMI, Flags: F
Incoming interface: vlan2
Outgoing interface list:
vlan3
```

The following is a sample output of this command displaying the IPv6 multicast routing count table for a single static IPv6 Multicast route:

Figure 21-9: Example output from the **show ipv6 mroute count** command

```
awplus#show ipv6 mroute count

IPv6 Multicast Statistics
Total 1 routes using 152 bytes memory
Route limit/Route threshold: 1024/1024
Total NOCACHE/WRONGmif/WHOLEPKT rcv from fwd: 6/0/0
Total NOCACHE/WRONGmif/WHOLEPKT sent to clients: 6/0/0
Immediate/Timed stat updates sent to clients: 0/0
Reg ACK rcv/Reg NACK rcv/Reg pkt sent: 0/0/0
Next stats poll: 00:01:14

Forwarding Counts: Pkt count/Byte count, Other Counts: Wrong If
pkts
Fwd msg counts: WRONGmif/WHOLEPKT rcv
Client msg counts: WRONGmif/WHOLEPKT/Imm Stat/Timed Stat sent
Reg pkt counts: Reg ACK rcv/Reg NACK rcv/Reg pkt sent

(2001::2, ff08::1), Forwarding: 0/0, Other: 0
  Fwd msg: 0/0, Client msg: 0/0/0/0, Reg: 0/0/0
```

The following is a sample output of this command displaying the IPv6 multicast routing summary table for a single static IPv6 Multicast route:

Figure 21-10: Example output from the **show ipv6 mroute summary** command

```
awplus#show ipv6 mroute summary

IPv6 Multicast Routing Table
Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder
installed
Timers: Uptime/Stat Expiry
Interface State: Interface

(2001::2, ff08::1), 03:20:28/-, IMI, Flags: F
```

# show ipv6 multicast forwarding

**Overview** Use this command to view the status of multicast forwarding slow-path-packet setting.

**Syntax** `show ipv6 multicast forwarding`

**Mode** User Exec

**Example** To show the status of the multicast forwarding, slow-path-packet setting, use the following command:

```
awplus# show ipv6 multicast forwarding
```

**Output** Figure 21-11: Example output from the **show ipv6 multicast forwarding** command:

```
ipv6 multicast forwarding is disabled
```

**Related Commands** [ipv6 multicast forward-slow-path-packet](#)

# show ipv6 mif

**Overview** Use this command to display the contents of the IPv6 Multicast Routing Information Base (MRIB) MIF table.

**Syntax** `show ipv6 mif [<interface>]`

| Parameter   | Description                                 |
|-------------|---|
| <interface> | The interface to display information about. |

**Mode** User Exec and Privileged Exec

**Example** `awplus# show ipv6 mif`  
`awplus# show ipv6 mif vlan2`

**Output** Figure 21-12: Example output from the **show ipv6 mif** command

```
awplus#show ipv6 mif
```

| Interface | Mif | Owner                 | Uptime   |
|-----------|-----|-----------------------|----------|
|           | Idx | Module                |          |
| vlan3     | 0   | MLD/MLD Proxy-Service | 03:28:48 |
| vlan2     | 1   | MLD/MLD Proxy-Service | 03:28:48 |
| vlan1     | 2   | MLD/MLD Proxy-Service | 03:28:48 |

Figure 21-13: Example output from the **show ipv6 mif** command with the interface parameter **vlan2** specified

| Interface | Mif | Owner    | TTL     | Remote  | Uptime   |
|-----------|-----|----------|---------|---------|----------|
|           | Idx | Module   | Address |         |          |
| vlan2     | 0   | PIM-SMv6 | 1       | 0.0.0.0 | 00:05:17 |



# 22

# IGMP and IGMP Snooping Commands

## Introduction

**Overview** The Internet Group Management Protocol (IGMP) module includes the IGMP Proxy service and IGMP Snooping functionality. Some of the following commands may have commonalities and restrictions. These are described under the Usage section for each command.

- Command List**
- [“clear ip igmp”](#) on page 815
  - [“clear ip igmp group”](#) on page 816
  - [“clear ip igmp interface”](#) on page 817
  - [“debug igmp”](#) on page 818
  - [“ip igmp”](#) on page 819
  - [“ip igmp access-group”](#) on page 820
  - [“ip igmp flood specific-query”](#) on page 821
  - [“ip igmp immediate-leave”](#) on page 822
  - [“ip igmp last-member-query-count”](#) on page 823
  - [“ip igmp last-member-query-interval”](#) on page 824
  - [“ip igmp limit”](#) on page 825
  - [“ip igmp mroute-proxy”](#) on page 826
  - [“ip igmp proxy-service”](#) on page 827
  - [“ip igmp querier-timeout”](#) on page 828
  - [“ip igmp query-holdtime”](#) on page 829
  - [“ip igmp query-interval”](#) on page 831
  - [“ip igmp query-max-response-time”](#) on page 833
  - [“ip igmp ra-option \(Router Alert\)”](#) on page 835
  - [“ip igmp robustness-variable”](#) on page 836

- ["ip igmp snooping"](#) on page 837
- ["ip igmp snooping fast-leave"](#) on page 838
- ["ip igmp snooping mrouter"](#) on page 839
- ["ip igmp snooping querier"](#) on page 840
- ["ip igmp snooping report-suppression"](#) on page 841
- ["ip igmp snooping routermode"](#) on page 842
- ["ip igmp snooping tcn query solicit"](#) on page 844
- ["ip igmp source-address-check"](#) on page 846
- ["ip igmp ssm"](#) on page 847
- ["ip igmp ssm-map enable"](#) on page 848
- ["ip igmp ssm-map static"](#) on page 849
- ["ip igmp static-group"](#) on page 851
- ["ip igmp startup-query-count"](#) on page 853
- ["ip igmp startup-query-interval"](#) on page 854
- ["ip igmp trusted"](#) on page 855
- ["ip igmp version"](#) on page 856
- ["show debugging igmp"](#) on page 857
- ["show ip igmp groups"](#) on page 858
- ["show ip igmp interface"](#) on page 860
- ["show ip igmp proxy"](#) on page 864
- ["show ip igmp snooping mrouter"](#) on page 865
- ["show ip igmp snooping routermode"](#) on page 866
- ["show ip igmp snooping statistics"](#) on page 867
- ["undebg igmp"](#) on page 868

# clear ip igmp

**Overview** Use this command to clear all IGMP group membership records on all VLAN interfaces.

**Syntax** `clear ip igmp`

**Mode** Privileged Exec

**Usage** This command applies to VLAN interfaces configured for IGMP, IGMP Snooping, or IGMP Proxy.

**Example** `awplus# clear ip igmp`

**Validation  
Commands** `show ip igmp interface`  
`show running-config`

**Related  
Commands** `clear ip igmp group`  
`clear ip igmp interface`

# clear ip igmp group

**Overview** Use this command to clear IGMP group membership records for a specific group on either all VLAN interfaces, a single VLAN interface, or for a range of VLAN interfaces.

**Syntax** `clear ip igmp group *`  
`clear ip igmp group <ip-address> <interface>`

| Parameter    | Description   |
|--------------|---|
| *            | Clears all groups on all VLAN interfaces. This is an alias to the clear ip igmp command.                            |
| <ip-address> | Specifies the group whose membership records will be cleared from all VLAN interfaces, entered in the form A.B.C.D. |
| <interface>  | Specifies the name of the VLAN interface; all groups learned on this VLAN interface are deleted.                    |

**Mode** Privileged Exec

**Usage** This command applies to groups learned by IGMP, IGMP Snooping, or IGMP Proxy. In addition to the group a VLAN interface can be specified. Specifying this will mean that only entries with the group learned on the interface will be deleted.

**Examples** `awplus# clear ip igmp group *`  
`awplus# clear ip igmp group 224.1.1.1 vlan1`

**Validation Commands** `show ip igmp interface`  
`show running-config`

**Related Commands** `clear ip igmp`  
`clear ip igmp interface`

# clear ip igmp interface

**Overview** Use this command to clear IGMP group membership records on a particular VLAN interface.

**Syntax** `clear ip igmp interface <interface>`

| Parameter   | Description  |
|-------------|--|
| <interface> | Specifies the name of the VLAN interface. All groups learned on this VLAN interface are deleted. |

**Mode** Privileged Exec

**Usage** This command applies to interfaces configured for IGMP, IGMP Snooping, or IGMP Proxy.

**Example** `awplus# clear ip igmp interface vlan1`

**Validation  
Commands** `show ip igmp interface`  
`show running-config`

**Related  
Commands** `clear ip igmp`  
`clear ip igmp group`

# debug igmp

**Overview** Use this command to enable debugging of either all IGMP or a specific component of IGMP.

Use the **no** variant of this command to disable all IGMP debugging, or debugging of a specific component of IGMP.

**Syntax** `debug igmp {all|decode|encode|events|fsm|tib}`  
`no debug igmp {all|decode|encode|events|fsm|tib}`

| Parameter | Description                                   |
|-----------|---|
| all       | Enable or disable all debug options for IGMP  |
| decode    | Debug of IGMP packets that have been received |
| encode    | Debug of IGMP packets that have been sent     |
| events    | Debug IGMP events                             |
| fsm       | Debug IGMP Finite State Machine (FSM)         |
| tib       | Debug IGMP Tree Information Base (TIB)        |

**Modes** Privileged Exec and Global Configuration

**Usage** This command applies to interfaces configured for IGMP, IGMP Snooping, or IGMP Proxy.

**Example** `awplus# configure terminal`  
`awplus(config)# debug igmp all`

**Related Commands** [show debugging igmp](#)  
[undebug igmp](#)

## ip igmp

**Overview** Use this command to enable IGMP on an interface. The command configures the device as an IGMP querier.

Use the **no** variant of this command to return all IGMP related configuration to the default on this interface.

**Syntax** `ip igmp`  
`no ip igmp`

**Default** Disabled

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command can only be configured on VLAN interfaces, and will have no effect on IGMP Proxy or IGMP Snooping configuration.

**NOTE:** *An IP address must be assigned to the VLAN first, before this command will work.*

**Example** `awplus# configure terminal`  
`awplus(config)# interface vlan2`  
`awplus(config-if)# ip igmp`

**Validation  
Commands** `show ip igmp interface`  
`show running-config`

# ip igmp access-group

**Overview** This command adds an access control list to a VLAN interface configured for IGMP, IGMP Snooping, or IGMP Proxy. The access control list is used to control and filter the multicast groups learned on the VLAN interface.

The **no** variant of this command disables the access control filtering on the interface.

**Syntax** `ip igmp access-group {<access-list-number>|<access-list-name>}`  
`no ip igmp access-group`

| Parameter                               | Description  |
|---|--|
| <code>&lt;access-list-number&gt;</code> | Standard IP access-list number, in the range <1-99>. |
| <code>&lt;access-list-name&gt;</code>   | Standard IP access-list name.                        |

**Default** By default there are no access lists configured on any interface.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to VLAN interfaces configured for IGMP, IGMP Snooping, or IGMP Proxy.

This command applies to VLAN interfaces configured for IGMP or IGMP Snooping.

**Example** In the following example, hosts serviced by VLAN interface vlan2 can only join the group 225.2.2.2:

```
awplus# configure terminal
awplus(config)# access-list 1 permit 225.2.2.2 0.0.0.0
awplus(config)# interface vlan2
awplus(config-if)# ip igmp access-group 1
```



# ip igmp flood specific-query

**Overview** Use this command if you want IGMP to flood specific queries to all VLAN member ports, instead of only sending the queries to multicast group member ports.

Use the **no** variant of this command if you want IGMP to only send the queries to multicast group member ports.

**Syntax** `ip igmp flood specific-query`  
`no ip igmp flood specific-query`

**Default** By default, specific queries are flooded to all VLAN member ports.

**Mode** Global Configuration

**Usage** In an L2 switched network running IGMP, it is considered more robust to flood all specific queries. In most cases, the benefit of flooding specific queries to all VLAN member ports outweighs the disadvantages.

However, sometimes this is not the case. For example, if hosts with very low CPU capability receive specific queries for multicast groups they are not members of, their performance may degrade unacceptably. In this situation, it is desirable for IGMP to send specific queries to known member ports only. This minimises the performance degradation of such hosts. In those circumstances, use this command to turn off flooding of specific queries.

**Example** To cause IGMP to flood specific queries only to multicast group member ports, use the commands:

```
awplus# configure terminal
awplus(config)# no ip igmp flood specific-query
```

**Related Commands** [show ip igmp interface](#)

# ip igmp immediate-leave

**Overview** In IGMP version 2, use this command to minimize the leave latency of IGMP memberships for specified multicast groups. The specified access list number or name defines the multicast groups in which the immediate leave feature is enabled.

Use the **no** variant of this command to disable this feature.

**Syntax** `ip igmp immediate-leave group-list`  
`{<access-list-number>|<access-list-number-expanded>|<access-list-name>}`  
`no ip igmp immediate-leave`

| Parameter  | Description  |
|--|--|
| <code>&lt;access-list-number&gt;</code>          | Access-list number, in the range <1-99>.                       |
| <code>&lt;access-list-number-expanded&gt;</code> | Access-list number (expanded range), in the range <1300-1999>. |
| <code>&lt;access-list-name&gt;</code>            | Standard IP access-list name.                                  |

**Default** Disabled by default.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to interfaces configured for IGMP, IGMP Snooping, or IGMP Proxy.

**Example** The following example shows how to enable the immediate-leave feature on the VLAN interface vlan2 for a specific range of multicast groups:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp immediate-leave group-list 34
awplus(config-if)# exit
awplus(config)# access-list 34 permit 225.192.20.0 0.0.0.255
```

**Related Commands** [ip igmp last-member-query-interval](#)

# ip igmp last-member-query-count

**Overview** Use this command to set the last-member query-count value for an interface.  
Use the **no** variant of this command to return to the default on an interface.

**Syntax** `ip igmp last-member-query-count <2-7>`  
`no ip igmp last-member-query-count`

| Parameter | Description                    |
|-----------|--------------------------------|
| <2-7>     | Last member query count value. |

**Default** The default last member query count value is 2.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to interfaces configured for IGMP, IGMP Snooping, or IGMP Proxy.

**Example** `awplus# configure terminal`  
`awplus(config)# interface vlan2`  
`awplus(config-if)# ip igmp last-member-query-count 3`

**Validation  
Commands** `show ip igmp interface`  
`show running-config`

**Related  
Commands** `ip igmp last-member-query-interval`  
`ip igmp startup-query-count`

# ip igmp last-member-query-interval

**Overview** Use this command to configure the frequency at which the router sends IGMP group specific host query messages.

Use the **no** variant of this command to set this frequency to the default.

**Syntax** `ip igmp last-member-query-interval <interval>`  
`no ip igmp last-member-query-interval`

| Parameter  | Description  |
|------------|--|
| <interval> | The frequency in milliseconds, in the range <1000-25500>, at which IGMP group-specific host query messages are sent. |

**Default** 1000 milliseconds

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to interfaces configured for IGMP, IGMP Snooping, or IGMP Proxy.

**Example** The following example changes the IGMP group-specific host query message interval to 2 seconds (2000 milliseconds) for VLAN interface vlan1:

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# ip igmp last-member-query-interval 2000
```

**Validation  
Commands** `show ip igmp interface`  
`show running-config`

**Related  
Commands** `ip igmp immediate-leave`  
`ip igmp last-member-query-count`

# ip igmp limit

**Overview** Use this command to configure the limit on the maximum number of group membership entries for the device as a whole or for the specified interface (if in interface mode). Once the specified number of group memberships is reached, all further membership reports will be ignored. Optionally, you can configure an access-list to stop certain addresses from being subject to the limit.

Use the **no** variant of this command to unset the limit and any specified exception access-list.

**Syntax** `ip igmp limit <limit-value> [except  
{<access-list-number>|<access-list-number-extended>|  
<access-list-name>}]`  
`no ip igmp limit`

| Parameter                     | Description   |
|-------------------------------|---|
| <limit-value>                 | Maximum number of group membership entries, from 2 to 512.      |
| <access-list-number>          | Access-list number, in the range 1 to 99.                       |
| <access-list-number-extended> | Access-list number (expanded range), in the range 1300 to 1999. |
| <access-list-name>            | IP access-list name.  |

**Default** The default limit, which is reset by the **no** variant of this command, is 512.

**Mode** Global Configuration and Interface Configuration for a VLAN interface.

**Usage** This command applies to interfaces configured for IGMP, IGMP Snooping, or IGMP Proxy.

**Examples** The following example configures an IGMP limit of 100 group membership entries on VLAN interface vlan2:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp limit 100
```

The following example configures an IGMP limit of 100 group membership entries across all interfaces on which IGMP is enabled, and excludes group 224.1.1.1 from this limitation:

```
awplus# configure terminal
awplus(config)# access-list 1 permit 224.1.1.1 0.0.0.0
awplus(config)# ip igmp limit 100 except 1
```

## ip igmp mroute-proxy

**Overview** Use this command to enable IGMP mroute proxy on this downstream interface and associate it with the upstream proxy service interface.

Use the **no** variant of this command to remove the association with the proxy-service interface.

**Syntax** `ip igmp mroute-proxy <interface>`  
`no ip igmp mroute-proxy`

| Parameter                      | Description                     |
|--------------------------------|---------------------------------|
| <code>&lt;interface&gt;</code> | The name of the VLAN interface. |

**Mode** Interface Configuration for a VLAN interface.

**Usage** You must also enable the IGMP proxy service on the upstream interface, using the [ip igmp proxy-service](#) command. You can associate one or more downstream mroute proxy interfaces on the device with a single upstream proxy service interface. This downstream mroute proxy interface listens for IGMP reports, and forwards them to the upstream IGMP proxy service interface.

IGMP Proxy does not work with other multicast routing protocols, such as PIM-SM or PIM-DM. This command applies to interfaces configured for IGMP Proxy.

**Example** The following example configures the VLAN interface `vlan2` as the upstream proxy-service interface for the downstream `vlan3` interface.

```
awplus# configure terminal
awplus(config)# interface vlan3
awplus(config-if)# ip igmp mroute-proxy vlan2
```

**Related Commands** [ip igmp proxy-service](#)

## ip igmp proxy-service

**Overview** Use this command to enable the VLAN interface to be the upstream IGMP proxy-service interface for the device. All associated downstream IGMP mroute proxy interfaces on this device will have their memberships consolidated on this proxy service interface, according to IGMP host-side functionality.

Use the **no** variant of this command to remove the designation of the VLAN interface as an upstream proxy-service interface.

**Syntax** `ip igmp proxy-service`  
`no ip igmp proxy-service`

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command is used with the [ip igmp mroute-proxy](#) command to enable forwarding of IGMP reports to a proxy service interface for all forwarding entries for this interface. You must also enable the downstream IGMP mroute proxy interfaces on this device using the command [ip igmp mroute-proxy](#).

IGMP Proxy does not work with other multicast routing protocols, such as PIM-SM or PIM-DM.

**Example** The following example designates the VLAN interface `vlan1` as the upstream proxy-service interface.

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# ip igmp proxy-service
```

**Related Commands** [ip igmp mroute-proxy](#)

# ip igmp querier-timeout

**Overview** Use this command to configure the timeout period before the device takes over as the querier for the VLAN interface after the previous querier has stopped querying. Use the **no** variant of this command to restore the default.

**Syntax** `ip igmp querier-timeout <timeout>`  
`no ip igmp querier-timeout`

| Parameter | Description   |
|-----------|---|
| <timeout> | IGMP querier timeout interval value in seconds, in the range <1-65535>. |

**Default** The default timeout interval is 255 seconds.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to VLAN interfaces configured for IGMP. The timeout value should not be less than the current active querier's general query interval.

**Example** The following example configures the device to wait 130 seconds from the time it received the last query before it takes over as the querier for the VLAN interface vlan20:

```
awplus# configure terminal
awplus(config)# interface vlan20
awplus(config-if)# ip igmp querier-timeout 130
```

**Validation Commands** `show ip igmp interface`  
`show running-config`

**Related Commands** `ip igmp query-interval`



# ip igmp query-holdtime

**Overview** This command sets the time that an IGMP Querier waits after receiving a query solicitation before it sends an IGMP Query. IGMP General Query messages will not be sent during the hold time interval.

Use the **no** variant of this command to return to the default query hold time period.

**Syntax** `ip igmp query-holdtime <interval>`  
`no ip igmp query-holdtime`

| Parameter  | Description  |
|------------|--|
| <interval> | Query interval value in milliseconds, in the range <100-5000>. |

**Default** By default the delay before sending IGMP General Query messages is 500 milliseconds.

**Mode** Interface Configuration for a VLAN interface.

**Usage** Use this command to configure a value for the IGMP query hold time in the current network. IGMP Queries can be generated after receiving Query Solicitation (QS) packets and there is a possibility of a DoS (Denial of Service) attack if a stream of Query Solicitation (QS) packets are sent to the IGMP Querier, eliciting a rapid stream of IGMP Queries. This command applies to interfaces on which the device is acting as an IGMP Querier.

Use the [ip igmp query-interval](#) command when a delay for IGMP general query messages is required and IGMP general query messages are required. The **ip igmp query-holdtime** command stops IGMP query messages during the configured holdtime interval, so the rate of IGMP Queries that can be sent out of an interface can be restricted.

See the [IGMP Feature Overview and Configuration Guide](#) for introductory information about the Query Solicitation feature.

**NOTE:**

*This command will function on your device in the stand-alone mode. but is not supported when the device forms part of a VCS Stack.*

**Examples** To set the IGMP query holdtime to 900 ms for `vlan20`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan20
awplus(config-if)# ip igmp query-holdtime 900
```

To reset the IGMP query holdtime to the default (500 ms) for `vlan10`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no ip igmp query-holdtime
```

**Validation  
Commands**    `show ip igmp interface`  
                  `show running-config`

**Related  
Commands**    `ip igmp query-interval`  
                  `ip igmp snooping tcn query solicit`

# ip igmp query-interval

**Overview** Use this command to configure the period for sending IGMP General Query messages.

The IGMP query interval specifies the time between IGMP General Query messages being sent.

Use the **no** variant of this command to return to the default query interval period.

**NOTE:** The IGMP query interval must be greater than IGMP query maximum response time.

**Syntax** `ip igmp query-interval <interval>`  
`no ip igmp query-interval`

| Parameter  | Description  |
|------------|--|
| <interval> | Query interval value in seconds, in the range <2-18000>. |

**Default** The default IGMP query interval is 125 seconds.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to interfaces configured for IGMP. Note that the IGMP query interval is automatically set to a greater value than the IGMP query max response time.

For example, if you set the IGMP query max response time to 2 seconds using the [ip igmp query-max-response-time](#) command, and the IGMP query interval is currently less than 3 seconds, then the IGMP query interval period will be automatically reconfigured to be 3 seconds, so it is greater than the IGMP query maximum response time.

Use the **ip igmp query-interval** command when a non-default interval for IGMP General Query messages is required.

The [ip igmp query-holdtime](#) command can occasionally delay the sending of IGMP Queries.

**Examples** The following example changes the period between IGMP host-query messages to 3 minutes (180 seconds) for VLAN interface vlan20:

```
awplus# configure terminal
awplus(config)# interface vlan20
awplus(config-if)# ip igmp query-interval 180
```

The following example resets the period between sending IGMP host-query messages to the default (125 seconds) for VLAN interface vlan20:

```
awplus# configure terminal
awplus(config)# interface vlan20
awplus(config-if)# no ip igmp query-interval
```

**Validation  
Commands**    `show ip igmp interface`  
                  `show running-config`

**Related  
Commands**    `ip igmp query-holdtime`  
                  `ip igmp query-max-response-time`  
                  `ip igmp startup-query-interval`

# ip igmp query-max-response-time

**Overview** Use this command to configure the maximum response time advertised in IGMP Queries.

Use the **no** variant of this command to restore the default.

**NOTE:** *The IGMP query maximum response time must be less than the IGMP query interval.*

**Syntax** `ip igmp query-max-response-time <response-time>`  
`no ip igmp query-max-response-time`

| Parameter                          | Description  |
|------------------------------------|--|
| <code>&lt;response-time&gt;</code> | Response time value in seconds, in the range <1-3180>. |

**Default** The default IGMP query maximum response time is 10 seconds.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to interfaces configured for IGMP. Note that the IGMP query interval is automatically set to a greater value than the IGMP query maximum response time.

For example, if you set the IGMP query interval to 3 seconds using the [ip igmp query-interval](#) command, and the current IGMP query interval is less than 3 seconds, then the IGMP query maximum response time will be automatically reconfigured to be 2 seconds, so it is less than the IGMP query interval time.

To get the network to converge faster, use the **ip igmp query-max-response-time** command and set a low response time value, such as one or two seconds, so that the clients will respond immediately with a report as a response to the IGMP Queries.

**Examples** The following example configures a maximum response time of 8 seconds for VLAN interface vlan2:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp query-max-response-time 8
```

The following example restores the default maximum response time of 10 seconds for VLAN interface vlan2:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ip igmp query-max-response-time
```

**Validation**    `show ip igmp interface`  
**Commands**    `show running-config`

**Related**    `ip igmp query-interval`  
**Commands**

## ip igmp ra-option (Router Alert)

**Overview** Use this command to enable strict Router Alert (RA) option validation. With strict RA option enabled, IGMP packets without RA options are ignored.

**Syntax** `ip igmp ra-option`  
`no ip igmp ra-option`

**Default** The default state of RA validation is unset.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to interfaces configured for IGMP and IGMP Snooping.

**Example** `awplus# configure terminal`  
`awplus(config)# interface vlan20`  
`awplus(config-if)# ip igmp ra-option`

# ip igmp robustness-variable

**Overview** Use this command to change the robustness variable value on a VLAN interface.  
Use the **no** variant of this command to return to the default on an interface.

**Syntax** `ip igmp robustness-variable <1-7>`  
`no ip igmp robustness-variable`

| Parameter | Description                    |
|-----------|--------------------------------|
| <1-7>     | The robustness variable value. |

**Default** The default robustness variable value is 2.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to interfaces configured for IGMP and IGMP Snooping.

**Examples**

```
awplus# configure terminal
awplus(config)# interface vlan20
awplus(config-if)# ip igmp robustness-variable 3
awplus# configure terminal
awplus(config)# interface vlan20
awplus(config-if)# no ip igmp robustness-variable 3
```

**Validation  
Commands** `show ip igmp interface`  
`show running-config`



# ip igmp snooping

**Overview** Use this command to enable IGMP Snooping. When this command is used in the Global Configuration mode, IGMP Snooping is enabled at the device level. When this command is used in Interface Configuration mode, IGMP Snooping is enabled for the specified VLANs.

Use the **no** variant of this command to either globally disable IGMP Snooping, or disable IGMP Snooping on a specified interface.

**NOTE:** *IGMP snooping cannot be disabled on an interface if IGMP snooping has already been disabled globally. IGMP snooping can be disabled on both an interface and globally if disabled on the interface first and then disabled globally.*

**Syntax** `ip igmp snooping`  
`no ip igmp snooping`

**Default** By default, IGMP Snooping is enabled both globally and on all VLANs.

**Mode** Global Configuration and Interface Configuration for a VLAN interface.

**Usage** For IGMP snooping to operate on particular VLAN interfaces, it must be enabled both globally by using this command in Global Configuration mode, and on individual VLAN interfaces by using this command in Interface Configuration mode (both are enabled by default.)

Both IGMP snooping and MLD snooping must be enabled globally on the device for IGMP snooping to operate. MLD snooping is also enabled by default. To enable it if it has been disabled, use the [ipv6 mld snooping](#) command in Global Configuration mode.

**Examples**

```
awplus# configure terminal
awplus(config)# ip igmp snooping
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp snooping
```

**Related Commands** [ipv6 mld snooping](#)  
[show ip igmp interface](#)  
[show running-config](#)

## ip igmp snooping fast-leave

**Overview** Use this command to enable IGMP Snooping fast-leave processing. Fast-leave processing is analogous to immediate-leave processing. The IGMP group-membership entry is removed as soon as an IGMP leave group message is received, without sending out a group-specific query.

Use the **no** variant of this command to disable fast-leave processing.

**Syntax** `ip igmp snooping fast-leave`  
`no ip igmp snooping fast-leave`

**Default** IGMP Snooping fast-leave processing is disabled.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This IGMP Snooping command can only be configured on VLAN interfaces.

**Example** This example shows how to enable fast-leave processing on the VLAN interface `vlan2`:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp snooping fast-leave
```

**Validation  
Commands** `show ip igmp interface`  
`show running-config`

# ip igmp snooping mrouter

**Overview** Use this command to statically configure the specified port as a multicast router port for IGMP Snooping for an interface. This command applies to interfaces configured for IGMP Snooping.

Use the **no** variant of this command to remove the static configuration of the port as a multicast router port.

**Syntax** `ip igmp snooping mrouter interface <port>`  
`no ip igmp snooping mrouter interface <port>`

| Parameter | Description  |
|-----------|--|
| <port>    | The port may be a device port (e.g. <code>port1.0.4</code> ), a static channel group (e.g. <code>sa3</code> ), or a dynamic (LACP) channel group (e.g. <code>po4</code> ). |

**Mode** Interface Configuration for a VLAN interface.

**Example** This example shows the switch port interface `port1.0.2` statically configured to be a multicast router interface for the VLAN interface `vlan2`:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp snooping mrouter interface port1.0.2
```

**Related Commands** [show ip igmp snooping mrouter](#)

# ip igmp snooping querier

**Overview** Use this command to enable IGMP querier operation when no multicast routing protocol is configured. When enabled, the IGMP Snooping querier sends out periodic IGMP queries for all interfaces. This command applies to interfaces configured for IGMP Snooping.

Use the **no** variant of this command to disable IGMP querier configuration.

**Syntax** `ip igmp snooping querier`  
`no ip igmp snooping querier`

**Mode** Interface Configuration for a VLAN interface.

**Usage** The IGMP Snooping querier uses the 0.0.0.0 Source IP address because it only masquerades as a proxy IGMP querier for faster network convergence.

It does not start, or automatically cease, the IGMP Querier operation if it detects query message(s) from a multicast router.

If an IP address is assigned to a VLAN, which has IGMP querier enabled on it, then the IGMP Snooping querier uses the VLAN's IP address as the Source IP Address in IGMP queries.

The IGMP Snooping Querier will not stop sending IGMP Queries if there is another IGMP Snooping Querier in the network with a lower Source IP Address.

**NOTE:** Do not enable the IGMP Snooping Querier feature on a Layer 2 device when there is an operational IGMP Querier in the network.

**Example** `awplus# configure terminal`  
`awplus(config)# interface vlan2`  
`awplus(config-if)# ip igmp snooping querier`

**Validation  
Commands** `show ip igmp interface`  
`show running-config`

# ip igmp snooping report-suppression

**Overview** Use this command to enable report suppression for IGMP versions 1 and 2. This command applies to interfaces configured for IGMP Snooping.

Report suppression stops reports being sent to an upstream multicast router port when there are already downstream ports for this group on this interface.

Use the **no** variant of this command to disable report suppression.

**Syntax** `ip igmp snooping report-suppression`  
`no ip igmp snooping report-suppression`

**Default** Report suppression does not apply to IGMPv3, and is turned on by default for IGMPv1 and IGMPv2 reports.

**Mode** Interface Configuration for a VLAN interface.

**Example** This example shows how to enable report suppression for IGMPv2 reports for the VLAN interface vlan2:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp version 2
awplus(config-if)# ip igmp snooping report-suppression
```

**Validation Commands** `show ip igmp interface`  
`show running-config`

## ip igmp snooping routermode

**Overview** Use this command to set the destination IP addresses as router multicast addresses.

Use the **no** variant of this command to set it to the default. You can also remove a specified IP address from a custom list of multicast addresses.

**Syntax** `ip igmp snooping routermode  
{all|default|ip|multicasterouter|address <ip-address>}  
no ip igmp snooping routermode [address <ip-address>]`

| Parameter               | Description   |
|-------------------------|---|
| all                     | All reserved multicast addresses (224.0.0.x). Packets from all possible addresses in range 224.0.0.x are treated as coming from routers.  |
| default                 | Default set of reserved multicast addresses. Packets from 224.0.0.1, 224.0.0.2, 224.0.0.4, 224.0.0.5, 224.0.0.6, 224.0.0.9, 224.0.0.13, 224.0.0.15 and 224.0.0.24 are treated as coming from routers. |
| ip                      | Custom reserved multicast addresses. Packets from custom IP address in the 224.0.0.x range are treated as coming from routers.  |
| multicasterouter        | Packets from DVMRP (224.0.0.4) and PIM (224.0.0.13) multicast addresses are treated as coming from routers.   |
| address<br><ip-address> | Packets from the specified multicast address are treated as coming from routers. The address must be in the 224.0.0.x range.  |

**Default** The default routermode is **default** (not **all**) and shows the following reserved multicast addresses:

```
Router mode.....Def
Reserved multicast address
    224.0.0.1
    224.0.0.2
    224.0.0.4
    224.0.0.5
    224.0.0.6
    224.0.0.9
    224.0.0.13
    224.0.0.15
    224.0.0.24
```

**Mode** Global Configuration

**Examples** To set **ip igmp snooping routermode** for all default reserved addresses enter:

```
awplus(config)# ip igmp snooping routermode default
```

To remove the multicast address 224.0.0.5 from the custom list of multicast addresses enter:

```
awplus(config)# no ip igmp snooping routermode address  
224.0.0.5
```

**Related commands** [ip igmp trusted](#)  
[show ip igmp snooping routermode](#)

# ip igmp snooping tcn query solicit

**Overview** Use this command to enable IGMP (Internet Group Management Protocol) Snooping TCN (Topology Change Notification) Query Solicitation feature. When this command is used in the Global Configuration mode, Query Solicitation is enabled.

Use the **no** variant of this command to disable IGMP Snooping TCN Query Solicitation. When the no variant of this command is used in Interface Configuration mode, this overrides the Global Configuration mode setting and Query Solicitation is disabled.

**Syntax** `ip igmp snooping tcn query solicit`  
`no ip igmp snooping tcn query solicit`

**Default** IGMP Snooping TCN Query Solicitation is disabled by default on the device, unless the device is the Master Node in an EPSR ring, or is the Root Bridge in a Spanning Tree.

When the device is the Master Node in an EPSR ring, or the device is the Root Bridge in a Spanning Tree, then IGMP Snooping TCN Query Solicitation is enabled by default and cannot be disabled using the Global Configuration mode command. However, Query Solicitation can be disabled for specified VLANs using this command from the Interface Configuration mode. Select the VLAN you want to disable in Interface Configuration mode then issue the no variant of this command to disable the specified VLAN without disabling this feature for other VLANs.

**Mode** Global Configuration and Interface Configuration for a VLAN interface.

**Usage** Once enabled, if the device is not an IGMP Querier, on detecting a topology change, the device generates IGMP Query Solicit messages that are sent to all the ports of the vlan configured for IGMP Snooping on the device.

On a device that is not the Master Node in an EPSR ring or the Root Bridge in a Spanning Tree, Query Solicitation can be disabled using the **no** variant of this command after being enabled.

If the device that detects a topology change is an IGMP Querier then the device will generate an IGMP Query message.

Note that the **no** variant of this command when issued in Global Configuration mode has no effect on a device that is the Master Node in an EPSR ring or on a device that is a Root Bridge in a Spanning Tree. Query Solicitation is not disabled for the device these instances. However, Query Solicitation can be disabled on a per-vlan basis from the Interface Configuration mode.

See the below state table that shows when Query Solicit messages are sent in these instances:



| Command issued from Global Configuration | Device is STP Root Bridge or the EPSR Master Node | Command issued from Interface Configuration | IGMP Query Solicit message sent on VLAN |
|--|---|---|---|
| No                                       | Yes   | Yes   | Yes                                     |
| Yes                                      | Yes   | No  | No                                      |
| Yes                                      | Yes   | Yes   | Yes                                     |

See the [IGMP Feature Overview and Configuration Guide](#) for introductory information about the Query Solicitation feature.

**NOTE:**

*This command will function on your device in the stand-alone mode, but is not supported when the device forms part of a VCS Stack.*

**Examples** This example shows how to enable IGMP Snooping TCN Query Solicitation on a device:

```
awplus# configure terminal
awplus(config)# ip igmp snooping tcn query solicit
```

This example shows how to disable IGMP Snooping TCN Query Solicitation on a device:

```
awplus# configure terminal
awplus(config)# no ip igmp snooping tcn query solicit
```

This example shows how to enable IGMP Snooping TCN Query Solicitation for the VLAN interface vlan2:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp snooping tcn query solicit
```

This example shows how to disable IGMP Snooping TCN Query Solicitation for the VLAN interface vlan2:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ip igmp snooping tcn query solicit
```

**Validation Commands** [show ip igmp interface](#)  
[show running-config](#)

**Related Commands** [ip igmp query-holdtime](#)

# ip igmp source-address-check

**Overview** This command enables the checking of the Source Address for an IGMP Report, rejecting any IGMP Reports originating on devices outside of the local subnet.

Use the **no** variant of this command to disable the checking of the Source Address for an IGMP Report, which allows IGMP Reports from devices outside of the local subnet.

**Syntax** `ip igmp source-address-check`  
`no ip igmp source-address-check`

**Default** Source address checking for IGMP Reports is enabled by default.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This is a security feature, and should be enabled unless IGMP Reports from outside the local subnet are expected, for example, if Multicast VLAN Registration is active in the network.

The no variant of this command is required to disable the IGMP Report source address checking feature in networks that use Multicast VLAN Registration to allow IGMP Reports from devices outside of the local subnet.

**Examples** To deny IGMP Reports from outside the current subnet for the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp source-address-check
```

To allow IGMP Reports from outside the current subnet for the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ip igmp source-address-check
```

**Validation  
Commands** `show ip igmp interface`  
`show running-config`

## ip igmp ssm

**Overview** Use this command to define a non-default Source Specific Multicast (SSM) range of IP multicast addresses in IGMP. Incoming IGMPv1 and IGMPv2 join requests are ignored if the multicast IP address is in the SSM range and no SSM mapping is configured for these addresses. By default, the SSM range is 232/8. To define the SSM range to be other than the default, use one of the access-list parameter options.

Use the **no** variant of this command to change the SSM range in IGMP back to the default.

**Syntax** `ip igmp ssm range {<access-list-number>|<access-list-name>}`  
`no ip igmp ssm`

| Parameter            | Description                               |
|----------------------|---|
| <access-list-number> | Access-list number, in the range 1 to 99. |
| <access-list-name>   | Standard IP access-list name.             |

**Default** By default the SSM range is 232/8.

**Mode** Global Configuration

**Examples** To configure a non-default SSM range to be used in IGMP enter the commands:

```
awplus# configure terminal
awplus(config)# access-list 10 permit 224.1.1.0 0.0.0.255
awplus(config)# ip igmp ssm range 10
```

To return to the default configuration enter the commands:

```
awplus# configure terminal
awplus(config)# no ip igmp ssm
```

# ip igmp ssm-map enable

**Overview** Use this command to enable Source Specific Multicast (SSM) mapping on the device.

Use the **no** variant of this command to disable SSM mapping.

**Syntax** `ip igmp ssm-map enable`  
`no ip igmp ssm-map enable`

**Mode** Global Configuration

**Usage** This command applies to VLAN interfaces configured for IGMP.

**Example** To enable SSM on the device enter the commands:

```
awplus# configure terminal
awplus(config)# ip igmp ssm-map enable
```

**Related Commands** [ip igmp ssm-map static](#)

# ip igmp ssm-map static

**Overview** Use this command to specify the static mode of defining Source Specific Multicast (SSM) mapping. SSM statically assigns sources to IGMPv1 and IGMPv2 groups to translate such (\*,G) groups' memberships to (S,G) memberships for use with PIM-SSM.

Use the **no** variant of this command to remove the SSM map association.

**Syntax**

```
ip igmp ssm-map static  
{<access-list-number>|<access-list-number-extended>|  
<access-list-name>} <ip-address>  
  
no ip igmp ssm-map static  
{<access-list-number>|<access-list-number-extended>|  
<access-list-name>} <ip-address>
```

| Parameter                     | Description  |
|-------------------------------|--|
| <access-list-number>          | Access-list number, in the range 1 to 99.                                |
| <access-list-number-extended> | Access-list number (expanded range), in the range 1300 to 1999.          |
| <access-list-name>            | Standard IP access-list name.  |
| <ip-address>                  | Source address to use for static map group, entered in the form A.B.C.D. |

**Mode** Global Configuration

**Usage** This command applies to VLAN interfaces configured for IGMP. You can use Standard numbered and Standard named ACLs plus Expanded Numbered ACLs.

**Examples** This example shows how to configure an SSM static mapping for group-address 224.1.1.1, using a standard numbered ACL shown as 10:

```
awplus# configure terminal  
awplus(config)# access-list 10 permit 224.1.1.1 0.0.0.0  
awplus(config)# ip igmp ssm-map static 10 1.2.3.4
```

This example shows how to configure an SSM static mapping for group-address 224.1.1.1, using an expanded numbered ACL shown as 1301:

```
awplus# configure terminal  
awplus(config)# access-list 1301 permit 224.1.1.1 0.0.0.0  
awplus(config)# ip igmp ssm-map static 1301 1.2.3.4
```

This example shows how to configure an SSM static mapping for group-address 224.1.1.1, using a standard named ACL shown as sales:

```
awplus# configure terminal
awplus(config)# access-list sales permit 224.1.1.1 0.0.0.0
awplus(config)# ip igmp ssm-map static sales 1.2.3.4
```

**Related** [ip igmp ssm-map enable](#)  
**Commands**

## ip igmp static-group

**Overview** Use this command to statically configure multicast group membership entries on a VLAN interface, or to statically forward a multicast channel out a particular port or port range.

To statically add only a group membership, do not specify any parameters.

To statically add a (\*,g) entry to forward a channel out of a port, specify only the multicast group address and the switch port range.

To statically add an (s,g) entry to forward a channel out of a port, specify the multicast group address, the source IP address, and the switch port range.

To use Source Specific Multicast mapping to determine the source IP address of the multicast server use the **ssm-map** parameter instead of specifying the source IP address.

Use the **no** variant of this command to delete static group membership entries.

**Syntax**

```
ip igmp static-group <ip-address> [source  
{<ip-source-addr>|ssm-map}] [interface <port>]  
  
no ip igmp static-group <ip-address> [source  
{<ip-source-addr>|ssm-map}] [interface <port>]
```

| Parameter        | Description  |
|------------------|--|
| <ip-address>     | Standard IP Multicast group address, entered in the form A.B.C.D, to be configured as a static group member.   |
| source           | Optional.  |
| <ip-source-addr> | Standard IP source address, entered in the form A.B.C.D, to be configured as a static source from where multicast packets originate.   |
| ssm-map          | This parameter uses Source Specific Multicast (SSM) Mapping to determine the source IP address associated with the specified IP Multicast group address. SSM mappings are configured using the <a href="#">ip igmp ssm-map static</a> command. |
| interface        | Use this parameter to specify a specific switch port or switch port range to statically forward the multicast group out of. If not used, static configuration is applied on all ports in the VLAN.   |
| <port>           | The port or port range to statically forward the group out of. The port may be a switch port (e.g. port1.0.4), a static channel group (e.g. sa2), or a dynamic (LACP) channel group (e.g. po2).  |

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to IGMP operation on a specific interface to statically add group and/or source records, or to IGMP Snooping on a VLAN interface to statically add group and/or source records.

**Example** The following example show how to statically add group and source records for IGMP on the VLAN interface vlan3:

```
awplus# configure terminal
awplus(config)# interface vlan3
awplus(config-if)# ip igmp
awplus(config-if)# ip igmp static-group 226.1.2.4 source
10.2.3.4
```



# ip igmp startup-query-count

**Overview** Use this command to configure the IGMP startup query count for an interface. The IGMP startup query count is the number of IGMP General Query messages sent by a querier at startup. The default IGMP startup query count is 2.

Use the **no** variant of this command to return an interface's configured IGMP startup query count to the default.

**Syntax** `ip igmp startup-query-count <startup-query-count>`  
`no ip igmp startup-query-count`

| Parameter                                | Description  |
|--|--|
| <code>&lt;startup-query-count&gt;</code> | Specify the IGMP startup query count for a VLAN interface in the range <2-10> where 2 is the default IGMP query count. |

**Default** The default IGMP startup query count is 2.

**Mode** Interface Configuration for a VLAN interface.

**Examples** The following example shows how to configure the IGMP startup query count to 4 for the VLAN interface `vlan3`:

```
awplus# configure terminal
awplus(config)# interface vlan3
awplus(config-if)# ip igmp startup-query-count 4
```

The following example shows how to remove the IGMP startup query count for the VLAN interface `vlan3`:

```
awplus# configure terminal
awplus(config)# interface vlan3
awplus(config-if)# no ip igmp startup-query-count
```

**Related Commands** [ip igmp last-member-query-count](#)  
[ip igmp startup-query-interval](#)

# ip igmp startup-query-interval

**Overview** Use this command to configure the IGMP startup query interval for an interface. The IGMP startup query interval is the amount of time in seconds between successive IGMP General Query messages sent by a querier during startup. The default IGMP startup query interval is one quarter of the IGMP query interval value.

Use the **no** variant of this command to return an interface's configured IGMP startup query interval to the default.

**Syntax** `ip igmp startup-query-interval <startup-query-interval>`  
`no ip igmp startup-query-interval`

| Parameter                                   | Description   |
|---|---|
| <code>&lt;startup-query-interval&gt;</code> | Specify the IGMP startup query interval for a VLAN interface in Interface Configuration mode in the range of <2-1800> seconds to be one quarter of the IGMP query interval value. |

**Default** The default IGMP startup query interval is one quarter of the IGMP query interval value.

**NOTE:** *The IGMP startup query interval must be one quarter of the IGMP query interval.*

**Mode** Interface Configuration for a VLAN interface.

**Examples** The following example shows how to configure the IGMP startup query interval to 15 seconds for the VLAN interface `vlan2` to be one quarter of the IGMP query interval value of 60 seconds:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ip igmp startup-query-interval 15
awplus(config-if)# ip igmp query-interval 60
```

The following example shows how to remove the IGMP startup query interval for the VLAN interface `vlan2`:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ip igmp startup-query-interval
```

**Related Commands** [ip igmp last-member-query-interval](#)  
[ip igmp query-interval](#)  
[ip igmp startup-query-count](#)

# ip igmp trusted

**Overview** Use this command to allow IGMP to process packets received on certain trusted ports only.

Use the **no** variant of this command to stop IGMP from processing specified packets if the packets are received on the specified ports or aggregator.

**Syntax** `ip igmp trusted {all|query|report|routermode}`  
`no ip igmp trusted {all|query|report|routermode}`

| Parameter  | Description  |
|------------|--|
| all        | Specifies whether or not the interface is allowed to receive all IGMP and other routermode packets |
| query      | Specifies whether or not the interface is allowed to receive IGMP queries                          |
| report     | Specifies whether or not the interface is allowed to receive IGMP membership reports               |
| routermode | Specifies whether or not the interface is allowed to receive routermode packets                    |

**Default** By default, all ports and aggregators are trusted interfaces, so IGMP is allowed to process all IGMP query, report, and router mode packets arriving on all interfaces.

**Mode** Interface mode for one or more switch ports or aggregators

**Usage** Because all ports are trusted by default, use this command in its **no** variant to stop IGMP processing packets on ports you do not trust.

For example, you can use this command to make sure that only ports attached to approved IGMP routers are treated as router ports.

**Example** To stop ports port1.0.3-port1.0.6 from being treated as router ports by IGMP, use the commands:

```
awplus(config)# interface port1.0.3-port1.0.6  
awplus(config-if)# no ip igmp trusted routermode
```

**Related Commands** [ip igmp snooping routermode](#)

# ip igmp version

**Overview** Use this command to set the current IGMP version (IGMP version 1, 2 or 3) on an interface.

Use the **no** variant of this command to return to the default version.

**Syntax** `ip igmp version <1-3>`  
`no ip igmp version`

| Parameter | Description                  |
|-----------|------------------------------|
| <1-3>     | IGMP protocol version number |

**Default** The default IGMP protocol version number is 3.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to VLAN interfaces configured for IGMP.

**Example** `awplus# configure terminal`  
`awplus(config)# interface vlan5`  
`awplus(config-if)# ip igmp version 2`

**Validation  
Commands** `show ip igmp interface`

# show debugging igmp

**Overview** Use this command to display the IGMP debugging options set.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show debugging igmp

**Mode** User Exec and Privileged Exec

**Example** To display the IGMP debugging options set, enter the command:

```
awplus# show debugging igmp
```

**Output** Figure 22-1: Example output from the **show debugging igmp** command

```
IGMP Debugging status:
IGMP Decoder debugging is on
IGMP Encoder debugging is on
IGMP Events debugging is on
IGMP FSM debugging is on
IGMP Tree-Info-Base (TIB) debugging is on
```

**Related  
Commands** [debug igmp](#)

# show ip igmp groups

**Overview** Use this command to display the multicast groups with receivers directly connected to the router, and learned through IGMP.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip igmp groups [<ip-address>|<interface> detail]`

| Parameter    | Description  |
|--------------|--|
| <ip-address> | Address of the multicast group, entered in the form A.B.C.D. |
| <interface>  | Interface name for which to display local information.       |

**Mode** User Exec and Privileged Exec

**Example** The following command displays local-membership information for all ports in all interfaces:

```
awplus# show ip igmp groups
```

**Output** Figure 22-2: Example output from the **show ip igmp groups** command

| IGMP Connected Group Membership |            |          |          |               |
|---------------------------------|------------|----------|----------|---------------|
| Group Address                   | Interface  | Uptime   | Expires  | Last Reporter |
| 224.0.1.1                       | port1.0.1  | 00:00:09 | 00:04:17 | 10.10.0.82    |
| 224.0.1.24                      | port1.0.2  | 00:00:06 | 00:04:14 | 10.10.0.84    |
| 224.0.1.40                      | port1.0.3  | 00:00:09 | 00:04:15 | 10.10.0.91    |
| 224.0.1.60                      | port1.0.3  | 00:00:05 | 00:04:15 | 10.10.0.7     |
| 224.100.100.100                 | port1.0.1  | 00:00:11 | 00:04:13 | 10.10.0.91    |
| 228.5.16.8                      | port1.0.3  | 00:00:11 | 00:04:16 | 10.10.0.91    |
| 228.81.16.8                     | port1.0.7  | 00:00:05 | 00:04:15 | 10.10.0.91    |
| 228.249.13.8                    | port1.0.3  | 00:00:08 | 00:04:17 | 10.10.0.91    |
| 235.80.68.83                    | port1.0.11 | 00:00:12 | 00:04:15 | 10.10.0.40    |
| 239.255.255.250                 | port1.0.3  | 00:00:12 | 00:04:15 | 10.10.0.228   |
| 239.255.255.254                 | port1.0.12 | 00:00:08 | 00:04:13 | 10.10.0.84    |

**Table 1:** Parameters in the output of the **show ip igmp groups** command

| Parameter     | Description                                |
|---------------|--|
| Group Address | Address of the multicast group.            |
| Interface     | Port through which the group is reachable. |

**Table 1:** Parameters in the output of the **show ip igmp groups** command (cont.)

| Parameter     | Description  |
|---------------|--|
| Uptime        | The time in weeks, days, hours, minutes, and seconds that this multicast group has been known to the device. |
| Expires       | Time (in hours, minutes, and seconds) until the entry expires.   |
| Last Reporter | Last host to report being a member of the multicast group.   |

# show ip igmp interface

**Overview** Use this command to display the state of IGMP, IGMP Proxy service, and IGMP Snooping for a specified VLAN, or all VLANs. IGMP is shown as Active or Disabled in the show output.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show ip igmp interface [<interface>]

| Parameter   | Description                     |
|-------------|---------------------------------|
| <interface> | The name of the VLAN interface. |

**Mode** User Exec and Privileged Exec

**Examples** The following output shows IGMP interface status for **vlan2** (with IGMP Snooping enabled):

```
awplus#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
awplus(config)#interface vlan2
awplus(config-if)#ip igmp snooping
awplus(config-if)#exit
awplus(config)#exit
awplus#show ip igmp interface vlan2
Interface vlan2 (Index 202)
  IGMP Disabled, Inactive, Version 3 (default)
  IGMP interface has 0 group-record states
  IGMP activity: 0 joins, 0 leaves
  IGMP robustness variable is 2
  IGMP last member query count is 2
  IGMP query interval is 125 seconds
  IGMP query holdtime is 500 milliseconds
  IGMP querier timeout is 255 seconds
  IGMP max query response time is 10 seconds
  Last member query response interval is 1000 milliseconds
  Group Membership interval is 260 seconds
  Strict IGMPv3 ToS checking is disabled on this interface
  Source Address checking is enabled
IGMP Snooping is globally enabled
  IGMP Snooping query solicitation is globally disabled
    Num. query-solicit packets: 57 sent, 0 recvd
IGMP Snooping is enabled on this interface
  IGMP Snooping fast-leave is not enabled
  IGMP Snooping querier is not enabled
  IGMP Snooping report suppression is enabled
awplus#
```



The following output shows IGMP interface status for **vlan2** (with IGMP Snooping disabled):

```
awplus#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
awplus(config)#interface vlan2
awplus(config-if)#no ip igmp snooping
awplus(config-if)#exit
awplus(config)#exit
awplus#show ip igmp interface vlan2
Interface vlan2 (Index 202)
  IGMP Disabled, Inactive, Version 3 (default)
  IGMP interface has 0 group-record states
  IGMP activity: 0 joins, 0 leaves
  IGMP robustness variable is 2
  IGMP last member query count is 2
  IGMP query interval is 125 seconds
  IGMP query holdtime is 500 milliseconds
  IGMP querier timeout is 255 seconds
  IGMP max query response time is 10 seconds
  Last member query response interval is 1000 milliseconds
  Group Membership interval is 260 seconds
  Strict IGMPv3 ToS checking is disabled on this interface
  Source Address checking is enabled
  IGMP Snooping is globally enabled
  IGMP Snooping query solicitation is globally disabled
    Num. query-solicit packets: 57 sent, 0 recvd
  IGMP Snooping is not enabled on this interface
  IGMP Snooping fast-leave is not enabled
  IGMP Snooping querier is not enabled
  IGMP Snooping report suppression is enabled
awplus#
```

The following command displays the IGMP interface status and Query Solicitation for **vlan3**:

```
awplus#show ip igmp interface vlan3
Interface vlan3 (Index 203)
  IGMP Enabled, Active, Querier, Version 3 (default)
  Internet address is 192.168.9.1
  IGMP interface has 256 group-record states
  IGMP activity: 51840 joins, 0 leaves
  IGMP robustness variable is 2
  IGMP last member query count is 2
  IGMP query interval is 125 seconds
  IGMP query holdtime is 500 milliseconds
  IGMP querier timeout is 250 seconds
  IGMP max query response time is 1 seconds
  Last member query response interval is 1000 milliseconds
  Group Membership interval is 251 seconds
  Strict IGMPv3 ToS checking is disabled on this interface
  IGMP Snooping is globally enabled
  IGMP Snooping query solicitation is globally enabled
    Num. query-solicit packets: 1 sent, 10 recvd
  IGMP Snooping is enabled on this interface
  IGMP Snooping fast-leave is not enabled
  IGMP Snooping querier is not enabled
  IGMP Snooping report suppression is enabled
awplus#
```

**NOTE:** Query Solicitation status information is highlighted in **bold** in the above output.

Use the **show ip igmp interface** command to validate that Query Solicitation is enabled and to show the number of query-solicit message packets sent and received on a VLAN.

**Related  
Commands**

clear ip igmp  
clear ip igmp group  
clear ip igmp interface  
ip igmp  
ip igmp last-member-query-count  
ip igmp last-member-query-interval  
ip igmp querier-timeout  
ip igmp query-holdtime  
ip igmp query-interval  
ip igmp query-max-response-time  
ip igmp robustness-variable  
ip igmp snooping  
ip igmp snooping fast-leave  
ip igmp snooping querier  
ip igmp snooping report-suppression  
ip igmp snooping tcn query solicit  
ip igmp version

# show ip igmp proxy

**Overview** Use this command to display the state of IGMP Proxy services for a specified interface or for all interfaces.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax**

```
show ip igmp proxy
show ip igmp proxy groups [detail]
show ip igmp proxy groups <multicast-group> [detail]
show ip igmp proxy groups <vlan> [detail]
show ip igmp proxy groups <vlan> <multicast-group> [detail]
```

| Parameter         | Description  |
|-------------------|--|
| groups            | Specify IGMP proxy group membership information.                           |
| detail            | Specify detailed IGMPv3 source information.                                |
| <vlan>            | Specify the name of a single VLAN interface, for example <b>vlan1</b> .    |
| <multicast-group> | Specify the IPv4 address in of the multicast group, in the format A.B.C.D. |

**Mode** User Exec and Privileged Exec

**Example** To display the state of IGMP Proxy services for all interfaces, enter the command:

```
awplus# show ip igmp proxy
```

To display the state of IGMP Proxy services for VLAN interface **vlan1**, enter the command:

```
awplus# show ip igmp proxy groups vlan1
```

To display the detailed state of IGMP Proxy services for VLAN interface **vlan1**, enter the command:

```
awplus# show ip igmp proxy groups vlan1 detail
```

**Related Commands** [ip igmp proxy-service](#)

# show ip igmp snooping mrouter

**Overview** Use this command to display the multicast router ports, both static and dynamic, in a VLAN.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip igmp snooping mrouter [interface <interface>]`

| Parameter   | Description                     |
|-------------|---------------------------------|
| interface   | A specific interface.           |
| <interface> | The name of the VLAN interface. |

**Mode** User Exec and Privileged Exec

**Example** To show all multicast router interfaces, use the command:

```
awplus# show ip igmp snooping mrouter
```

To show the multicast router interfaces in `vlan1`, use the command:

```
awplus# show ip igmp snooping mrouter interface vlan1
```

**Output** Figure 22-3: Example output from the `show ip igmp snooping mrouter` command

| VLAN | Interface | Static/Dynamic        |
|------|-----------|-----------------------|
| 1    | port1.0.5 | Statically configured |
| 200  | port1.0.2 | Statically configured |

Figure 22-4: Example output from the `show ip igmp snooping mrouter interface vlan1` command

| VLAN | Interface | Static/Dynamic        |
|------|-----------|-----------------------|
| 1    | port1.0.5 | Statically configured |

**Related Commands** [ip igmp snooping mrouter](#)

# show ip igmp snooping routermode

**Overview** Use this command to display the current routermode and the list of IP addresses set as router multicast addresses from the [ip igmp snooping routermode](#) command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip igmp snooping routermode`

**Mode** User Exec and Privileged Exec

**Example** To show the routermode and the list of router multicast addresses, use the command:

```
awplus# show ip igmp snooping routermode
```

**Output** Figure 22-5: Example output from the **show ip igmp snooping router mode** command

```
Router mode.....Def
Reserved multicast address

      224.0.0.1

      224.0.0.2

      224.0.0.4

      224.0.0.5

      224.0.0.6

      224.0.0.9

      224.0.0.13

      224.0.0.15

      224.0.0.24
```

**Related Commands** [ip igmp snooping routermode](#)

# show ip igmp snooping statistics

**Overview** Use this command to display IGMP Snooping statistics data.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip igmp snooping statistics interface <interface-range> [group [<ip-address>]]`

| Parameter    | Description   |
|--------------|---|
| <ip-address> | Optionally specify the address of the multicast group, entered in the form A.B.C.D. |
| <interface>  | Specify the name of the VLAN interface or interface range.                          |

**Mode** User Exec and Privileged Exec

**Example** To display IGMP statistical information for **vlan1** and **vlan2**, use the command:

```
awplus# show ip igmp snooping statistics interface vlan1-vlan2
```

**Output** Figure 22-6: Example output from the **show ip igmp snooping statistics** command

```
IGMP Snooping statistics for vlan1
Interface:      port1.0.3
Group:          224.1.1.1
Uptime:         00:00:09
Group mode:     Exclude (Expires: 00:04:10)
Last reporter:  10.4.4.5
Source list is empty
IGMP Snooping statistics for vlan2
Interface:      port1.0.4
Group:          224.1.1.2
Uptime:         00:00:19
Group mode:     Exclude (Expires: 00:05:10)
Last reporter:  10.4.4.6
Source list is empty
```

# undebbug igmp

**Overview** This command applies the functionality of the no [debug igmp](#) command.



# 23

# MLD and MLD Snooping Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of configuration, clear, and show commands related to MLD and MLD Snooping.

The Multicast Listener Discovery (MLD) module includes the MLD Proxy service and MLD Snooping functionality. Some of the following commands may have commonalities and restrictions; these are described under the Usage section for each command.

**NOTE:** MLD and MLD Snooping commands only apply to switch ports, not ETH interfaces.

IPv6 must be enabled on an interface with the `ipv6 enable` command, IPv6 forwarding must be enabled globally for routing IPv6 with the `ipv6 forwarding` command, and IPv6 multicasting must be enabled globally with the `ipv6 multicast-routing` command before using PIM-SMv6 commands.

The IPv6 Multicast addresses shown can be derived from IPv6 unicast prefixes as per RFC 3306. The IPv6 unicast prefix reserved for documentation is 2001:0db8::/32 as per RFC 3849. Using the base /32 prefix the IPv6 multicast prefix for 2001:0db8::/32 is ff3x:20:2001:0db8::/64. Where an RP address is 2001:0db8::1 the embedded RP multicast prefix is ff7x:120:2001:0db8::/96. For ASM (Any-Source Multicast) the IPv6 multicast addresses allocated for documentation purposes are ff0x::0db8:0:0/96 as per RFC 6676. This is a /96 prefix so that it can be used with group IDs as per RFC 3307. These addresses should not be used for practical networks (other than for testing purposes), nor should they appear in any public network.

The IPv6 addresses shown use the address space 2001:0db8::/32, defined in RFC 3849 for documentation purposes. These addresses should not be used for practical networks (other than for testing purposes) nor should they appear on any public network.

- Command List**
- “`clear ipv6 mld`” on page 871
  - “`clear ipv6 mld group`” on page 872
  - “`clear ipv6 mld interface`” on page 873

- [“debug mld”](#) on page 874
- [“ipv6 mld”](#) on page 877
- [“ipv6 mld access-group”](#) on page 878
- [“ipv6 mld immediate-leave”](#) on page 879
- [“ipv6 mld last-member-query-count”](#) on page 880
- [“ipv6 mld last-member-query-interval”](#) on page 881
- [“ipv6 mld limit”](#) on page 882
- [“ipv6 mld querier-timeout”](#) on page 884
- [“ipv6 mld query-interval”](#) on page 885
- [“ipv6 mld query-max-response-time”](#) on page 886
- [“ipv6 mld robustness-variable”](#) on page 887
- [“ipv6 mld snooping”](#) on page 888
- [“ipv6 mld snooping fast-leave”](#) on page 890
- [“ipv6 mld snooping mrouter”](#) on page 891
- [“ipv6 mld snooping querier”](#) on page 893
- [“ipv6 mld snooping report-suppression”](#) on page 894
- [“ipv6 mld static-group”](#) on page 896
- [“ipv6 mld version”](#) on page 898
- [“show debugging mld”](#) on page 899
- [“show ipv6 mld groups”](#) on page 900
- [“show ipv6 mld interface”](#) on page 901
- [“show ipv6 mld snooping mrouter”](#) on page 902
- [“show ipv6 mld snooping statistics”](#) on page 903

# clear ipv6 mld

**Overview** Use this command to clear all MLD local memberships on all interfaces.

**Syntax** `clear ipv6 mld`

**Mode** Privileged Exec

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols and learned by MLD Snooping.

**Example** `awplus# clear ipv6 mld`

**Related  
Commands** [clear ipv6 mld group](#)  
[clear ipv6 mld interface](#)

# clear ipv6 mld group

**Overview** Use this command to clear MLD specific local-membership(s) on all interfaces, for a particular group.

**Syntax** `clear ipv6 mld group {*|<ipv6-address>}`

| Parameter      | Description  |
|----------------|--|
| *              | Clears all groups on all interfaces. This is an alias to the <a href="#">clear ipv6 mld</a> command.   |
| <ipv6-address> | Specify the group address for which MLD local-memberships are to be cleared from all interfaces.<br>Specify the IPv6 multicast group address in the format in the format X:X::X:X. |

**Mode** Privileged Exec

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols and learned by MLD Snooping.

**Example** `awplus# clear ipv6 mld group *`

**Related Commands** [clear ipv6 mld](#)  
[clear ipv6 mld interface](#)

# clear ipv6 mld interface

**Overview** Use this command to clear MLD interface entries.

**Syntax** `clear ipv6 mld interface <interface>`

| Parameter   | Description  |
|-------------|--|
| <interface> | Specifies name of the interface; all groups learned from this interface are deleted. |

**Mode** Privileged Exec

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols and learned by MLD Snooping.

**Example** `awplus# clear ipv6 mld interface vlan2`

**Related Commands** [clear ipv6 mld](#)  
[clear ipv6 mld group](#)

# debug mld

**Overview** Use this command to enable all MLD debugging modes, or a specific MLD debugging mode.

Use the **no** variant of this command to disable all MLD debugging modes, or a specific MLD debugging mode.

**Syntax** `debug mld {all|decode|encode|events|fsm|tib}`  
`no debug mld {all|decode|encode|events|fsm|tib}`

| Parameter | Description                            |
|-----------|--|
| all       | Debug all MLD.                         |
| decode    | Debug MLD decoding.                    |
| encode    | Debug MLD encoding.                    |
| events    | Debug MLD events.                      |
| fsm       | Debug MLD Finite State Machine (FSM).  |
| tib       | Debug MLD Tree Information Base (TIB). |

**Mode** Privileged Exec and Global Configuration

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols and learned by MLD Snooping.

**Examples**

```
awplus# configure terminal
awplus(config)# debug mld all
awplus# configure terminal
awplus(config)# debug mld decode
awplus# configure terminal
awplus(config)# debug mld encode
awplus# configure terminal
awplus(config)# debug mld events
```

## Output

```
Warning: Console logging enabled
awplus#05:15:00 awplus NSM[1406]: [MLD-DECODE] Dec V2 Grp Rec: Grp ff08::1 on
port2.0.1
05:15:00 awplus NSM[1406]: [MLD-DECODE] Dec V2 Grp Rec: G-Rec not found! on
port2.0.1 for ff08::1
05:15:00 awplus NSM[1406]: [MLD-FSM] Process Event: I=port2.0.1, G=ff08::1, State:
Include, Event: Change To Include
05:15:00 awplus NSM[1406]: [MLD-FSM] State Change: Include(1)->Include(1)
05:15:00 awplus NSM[1406]: [MLD-ENCODE] Send Grp - Src Report: HST-IF vlan1: No
Router Ports found
05:15:00 awplus NSM[1406]: [MLD-DECODE] Socket Read: Ignoring MLD Message on L3
socketsince Snooping is enabled on vlan1
05:15:01 awplus NSM[1406]: [MLD-DECODE] Dec V2 Grp Rec: Grp ff08::1 on port2.0.1
05:15:01 awplus NSM[1406]: [MLD-ENCODE] MLD Enc Hdr: MLD Listener Query Checksum
=8511, MsgLen=60
05:15:01 awplus NSM[1406]: [MLD-ENCODE] Send Group - Source Query: Sent G-S Query
on port2.0.1
05:15:01 awplus NSM[1406]: [MLD-FSM] State Change: Include(1)->Exclude(2)
05:15:01 awplus NSM[1406]: [MLD-TIB] Source Rec Del: S=2002::3 Intf=vlan1
05:15:01 awplus NSM[1406]: [MLD-ENCODE] Send Group Report: HST-IF vlan1: No Router
Ports found
05:15:01 awplus NSM[1406]: [MLD-DECODE] Socket Read: Ignoring MLD Message on L3
socketsince Snooping is enabled on vlan1
05:15:01 awplus NSM[1406]: [MLD-EVENTS] Grp - Src Report Rexmit: Exipry for Grp
ff08::1 on vlan1
05:15:01 awplus NSM[1406]: [MLD-EVENTS] Grp - Src Report Rexmit: Group-Source
Report Rexmit failed(-16)
05:15:02 awplus NSM[1406]: [MLD-EVENTS] Grp - Src Query Rexmit: Exipry for Grp
ff08::1 on port2.0.1
05:15:02 awplus NSM[1406]: [MLD-ENCODE] MLD Enc Hdr: MLD Listener Query
Checksum=8511, MsgLen=60
05:15:02 awplus NSM[1406]: [MLD-ENCODE] Send Group - Source Query: Sent G-S Query
on port2.0.1
05:15:02 awplus NSM[1406]: [MLD-EVENTS] Grp Report Rexmit: Exipry for Grp ff08::
1 on vlan1
05:15:02 awplus NSM[1406]: [MLD-ENCODE] Send Group Report: HST-IF vlan1: No Router
Ports found
05:15:02 awplus NSM[1406]: [MLD-EVENTS] Grp - Src Report Rexmit: Exipry for Grp
```

```
ff08::1 on vlan1
05:15:02 awplus NSM[1406]: [MLD-TIB] Source Rec Del: S=2002::3 Intf=vlan1
05:15:03 awplus NSM[1406]: [MLD-EVENTS] Src - Rec Liveness Timer: Exipry for Src
  2002::3 on port2.0.1
005:15:03 awplus NSM[1406]: [MLD-FSM] Process Event: I=port2.0.1, G=ff08::1,
State: Exclude, Event: Source Tmr Expry
05:15:03 awplus NSM[1406]: [MLD-FSM] State Change: Exclude(2)->Exclude(2)
05:15:03 awplus NSM[1406]: [MLD-FSM] Host Process Event: I=vlan1, G=ff08::1,
05:15:06 awplus appmond[1244]: monitoring imi memory usage (max:51200000 kB)
05:15:06 awplus appmond[1244]: monitoring rmond memory usage (max:51200000 kB)
05:15:06 awplus appmond[1244]: monitoring lldpd memory usage (max:51200000 kB)
05:15:06 awplus NSM[1406]: [MLD-EVENTS] Querier Timer: Exipry on port2.0.1, Send
ing General Query 05:15:06 awplus NSM[1406]: [MLD-ENCODE] MLD Enc Hdr: MLD Listener
Query Checksum
=14706, MsgLen=28
05:15:06 awplus NSM[1406]: [MLD-ENCODE] Send Gen Query: Sent General Query on
port2.0.1, ret=90
05:15:06 awplus NSM[1406]: [MLD-EVENTS] Querier Timer: Exipry on port2.0.1,
Sending General Query
05:15:06 awplus NSM[1406]: [MLD-ENCODE] MLD Enc Hdr: MLD Listener Query Checksum
=14706, MsgLen=28
05:15:06 awplus NSM[1406]: [MLD-ENCODE] Send Gen Query: Sent General Query on
port2.0.1, ret=90
05:15:06 awplus NSM[1406]: [MLD-EVENTS] Querier Timer: Exipry on port2.0.1,
Sending General Query
05:15:06 awplus NSM[1406]: [MLD-ENCODE] MLD Enc Hdr: MLD Listener Query Checksum
=14706, MsgLen=28
05:15:06 awplus NSM[1406]: [MLD-ENCODE] Send Gen Query: Sent General Query on po
rt2.0.1, ret=90
```

**Related** [show debugging mld](#)  
**Commands**



## ipv6 mld

**Overview** Use this command to enable the MLD protocol operation on an interface. This command enables MLD protocol operation in stand-alone mode, and can be used to learn local-membership information prior to enabling a multicast routing protocol on the interface.

Use the **no** variant of this command to return all MLD related configuration to the default (including MLD Snooping).

**NOTE:** *There is a 100 MLD interface limit when applying MLD commands to multiple VLANs. Only the first 100 VLANs have the required multicast structures added to the interfaces that allow multicast routing.*

*There is a 100 MLD interface limit when applying MLD commands to multiple VLANs. Only the first 100 VLANs have the required multicast structures added to the interfaces that allow multicast routing.*

*The device has a 512 MLD group limit for (\*, G) and (S,G) entries.*

**Syntax** `ipv6 mld`  
`no ipv6 mld`

**Default** MLD is disabled by default.

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** MLD requires memory for storing data structures, as well as the hardware tables to implement hardware routing. As the number of ports, VLANs, static and dynamic groups increases then more memory is consumed. You can track the memory used for MLD with the command:

```
awplus# show memory pools nsm | grep MLD
```

Static and dynamic groups (LACP), ports and VLANs are not limited for MLD. For VLANs, this allows you to configure MLD across more VLANs with fewer ports per VLAN, or fewer VLANs with more ports per VLAN. For LACPs, you can configure MLD across more LACP groups with fewer ports per LACP, or fewer LACP groups with more ports per LACP.

**Example**

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan1
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld
```

# ipv6 mld access-group

**Overview** Use this command to control the multicast local-membership groups learned on an interface.

Use the **no** variant of this command to disable this access control.

**Syntax** `ipv6 mld access-group <IPv6-access-list-name>`  
`no ipv6 mld access-group`

| Parameter                                  | Description   |
|--|---|
| <code>&lt;IPv6-access-list-name&gt;</code> | Specify a Standard or an Extended software IPv6 access-list name. See <a href="#">IPv6 Software Access Control List (ACL) Commands</a> for supported IPv6 ACLs. |

**Default** No access list is configured by default.

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Examples** In the following example, the VLAN interface `vlan2` will only accept MLD joins for groups in the range `ff1e:0db8:0001::/64`:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# ipv6 access-list standard group1 permit
ff1e:0db8:0001::/64
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld access-group group1
```

In the following example, the VLAN interfaces `vlan2-vlan4` will only accept MLD joins for groups in the range `ff1e:0db8:0001::/64`:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# ipv6 access-list standard group1 permit
ff1e:0db8:0001::/64
awplus(config)# interface vlan2-vlan4
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld access-group group1
```

# ipv6 mld immediate-leave

**Overview** Use this command to minimize the leave latency of MLD memberships.  
Use the **no** variant of this command to disable this feature.

**Syntax** `ipv6 mld immediate-leave group-list <IPv6-access-list-name>`  
`no ipv6 mld immediate-leave`

| Parameter                                  | Description  |
|--|--|
| <code>&lt;IPv6-access-list-name&gt;</code> | Specify a Standard or an Extended software IPv6 access-list name that defines multicast groups in which the immediate leave feature is enabled.<br>See <a href="#">IPv6 Software Access Control List (ACL) Commands</a> for supported IPv6 ACLs. |

**Default** Disabled

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Example** The following example shows how to enable the immediate-leave feature on an interface for a specific range of multicast groups. In this example, the router assumes that the group access-list consists of groups that have only one node membership at a time per interface:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld immediate-leave v6grp
awplus(config-if)# exit
```

**Related Commands** [ipv6 mld last-member-query-interval](#)

# ipv6 mld last-member-query-count

**Overview** Use this command to set the last-member query-count value.  
Use the **no** variant of this command to return to the default on an interface.

**Syntax** `ipv6 mld last-member-query-count <value>`  
`no ipv6 mld last-member-query-count`

| Parameter | Description                                |
|-----------|--|
| <value>   | Count value. Valid values are from 2 to 7. |

**Default** The default last-member query-count value is 2.

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Example**

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld last-member-query-count 3
```

# ipv6 mld last-member-query-interval

**Overview** Use this command to configure the interval at which the router sends MLD group-specific host query messages.

Use the **no** variant of this command to set this frequency to the default.

**Syntax** `ipv6 mld last-member-query-interval <milliseconds>`  
`no ipv6 mld last-member-query-interval`

| Parameter                         | Description   |
|-----------------------------------|---|
| <code>&lt;milliseconds&gt;</code> | The time delay between successive query messages (in milliseconds). Valid values are from 1000 to 25500 milliseconds. |

**Default** 1000 milliseconds

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Example** The following example changes the MLD group-specific host query message interval to 2 seconds:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld last-member-query-interval 2000
```

**Related Commands** [ipv6 mld immediate-leave](#)

# ipv6 mld limit

**Overview** Use this command to configure a limit on the maximum number of group memberships that may be learned. The limit may be set for the device as a whole, or for a specific interface.

Once the specified group membership limit is reached, all further local-memberships will be ignored.

Optionally, an exception access-list can be configured to specify the group-address(es) that are exempted from being subject to the limit.

Use the **no** variant of this command to unset the limit and any specified exception access-list.

**Syntax** `ipv6 mld limit <limitvalue> [except <IPv6-access-list-name>]`  
`no ipv6 mld limit`

| Parameter               | Description   |
|-------------------------|---|
| <limitvalue>            | <2-512> Maximum number of group membership states.  |
| <IPv6-access-list-name> | Specify a Standard or an Extended software IPv6 access-list name that defines multicast groups, which are exempted from being subject to the configured limit.<br>See <a href="#">IPv6 Software Access Control List (ACL) Commands</a> for supported IPv6 ACLs. |

**Default** The default limit, which is reset by the **no** variant of this command, is the same as maximum number of group membership entries that can be learned with the **ipv6 mld limit** command.

The default limit of group membership entries that can be learned is 512 entries.

**Mode** Global Configuration and Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols and learned by MLD Snooping.

**Examples** The following example configures an MLD limit of 100 group-memberships across all VLAN interfaces on which MLD is enabled, and excludes groups in the range `ff1e:0db8:0001::/64` from this limitation:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# ipv6 access-list standard v6grp permit
ff1e:0db8:0001::/64
awplus(config)# ipv6 mld limit 100 except v6grp
```

The following example configures an MLD limit of 100 group-membership states on the VLAN interface `vlan2`:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld limit 100
```

The following example configures an MLD limit of 100 group-membership states on the VLAN interfaces `vlan2-vlan4`:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan2-vlan4
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld limit 100
```

# ipv6 mld querier-timeout

**Overview** Use this command to configure the timeout period before the router takes over as the querier for the interface after the previous querier has stopped querying.

Use the **no** variant of this command to restore the default.

**Syntax** `ipv6 mld querier-timeout <seconds>`  
`no ipv6 mld querier-timeout`

| Parameter | Description  |
|-----------|--|
| <seconds> | Number of seconds that the router waits after the previous querier has stopped querying before it takes over as the querier. Valid values are from 2 to 65535 seconds. |

**Default** 255 seconds

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols.

**Example** The following example configures the router to wait 120 seconds from the time it received the last query before it takes over as the querier for the interface:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld querier-timeout 120
```

**Related Commands** [ipv6 mld query-interval](#)



# ipv6 mld query-interval

**Overview** Use this command to configure the frequency of sending MLD host query messages.

Use the **no** variant of this command to return to the default frequency.

**Syntax** `ipv6 mld query-interval <seconds>`  
`no ipv6 mld query-interval`

| Parameter | Description   |
|-----------|---|
| <seconds> | Variable that specifies the time delay between successive MLD host query messages (in seconds). Valid values are from 1 to 18000 seconds. |

**Default** The default query interval is 125 seconds.

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols.

**Example** The following example changes the frequency of sending MLD host-query messages to 2 minutes:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld query-interval 120
```

**Related Commands** [ipv6 mld querier-timeout](#)

# ipv6 mld query-max-response-time

**Overview** Use this command to configure the maximum response time advertised in MLD queries.

Use the **no** variant of with this command to restore the default.

**Syntax** `ipv6 mld query-max-response-time <seconds>`  
`no ipv6 mld query-max-response-time`

| Parameter | Description   |
|-----------|---|
| <seconds> | Maximum response time (in seconds) advertised in MLD queries. Valid values are from 1 to 240 seconds. |

**Default** 10 seconds

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols.

**Example** The following example configures a maximum response time of 8 seconds:

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld query-max-response-time 8
```

# ipv6 mld robustness-variable

**Overview** Use this command to change the robustness variable value on an interface.  
Use the **no** variant of this command to return to the default on an interface.

**Syntax** `ipv6 mld robustness-variable <value>`  
`no ipv6 mld robustness-variable`

| Parameter | Description                   |
|-----------|-------------------------------|
| <value>   | Valid values are from 1 to 7. |

**Default** The default robustness variable value is 2.

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols.

**Example** `awplus# configure terminal`  
`awplus(config)# ipv6 forwarding`  
`awplus(config)# ipv6 multicast-routing`  
`awplus(config)# interface vlan2`  
`awplus(config-if)# ipv6 enable`  
`awplus(config-if)# ipv6 mld robustness-variable 3`

# ipv6 mld snooping

**Overview** Use this command to enable MLD Snooping. When this command is issued in the Global Configuration mode, MLD Snooping is enabled globally for the device. When this command is issued in Interface mode for a VLAN then MLD Snooping is enabled for the specified VLAN. Note that MLD Snooping is enabled on the VLAN only if it is enabled globally and on the VLAN.

Use the **no** variant of this command to globally disable MLD Snooping in Global Configuration mode, or for the specified VLAN interface in Interface mode.

**NOTE:** *There is a 100 MLD interface limit when applying MLD commands to multiple VLANs. Only the first 100 VLANs have the required multicast structures added to the interfaces that allow multicast routing.*

*There is a 100 MLD interface limit when applying MLD commands to multiple VLANs. Only the first 100 VLANs have the required multicast structures added to the interfaces that allow multicast routing.*

*The device has a 512 MLD group limit for (\*, G) and (S,G) entries.*

**Syntax** `ipv6 mld snooping`  
`no ipv6 mld snooping`

**Default** By default, MLD Snooping is enabled both globally and on all VLANs.

**Mode** Global Configuration and Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** For MLD Snooping to operate on particular VLAN interfaces, it must be enabled both globally by using this command in Global Configuration mode, and on individual VLAN interfaces by using this command in Interface Configuration mode (both are enabled by default).

MLD requires memory for storing data structures, as well as the hardware tables to implement hardware routing. As the number of ports, VLANs, static and dynamic groups increases then more memory is consumed. You can track the memory used for MLD with the command:

```
awplus# show memory pools nsm | grep MLD
```

Static and dynamic groups (LACP), ports and VLANs are not limited for MLD. For VLANs, this allows you to configure MLD across more VLANs with fewer ports per VLAN, or fewer VLANs with more ports per VLAN. For LACPs, you can configure MLD across more LACP groups with fewer ports per LACP, or fewer LACP groups with more ports per LACP.

**Examples** To configure MLD Snooping on the VLAN interface `vlan2`, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 mld snooping
```

To configure MLD Snooping on the VLAN interfaces `vlan2-vlan4`, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# ipv6 mld snooping
```

To disable MLD Snooping for the VLAN interface `vlan2`, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config)# no ipv6 mld snooping
```

To disable MLD Snooping for the VLAN interfaces `vlan2-vlan4`, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config)# no ipv6 mld snooping
```

To configure MLD Snooping globally for the device, enter the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 mld snooping
```

To disable MLD Snooping globally for the device, enter the following commands:

```
awplus# configure terminal
awplus(config)# no ipv6 mld snooping
```

# ipv6 mld snooping fast-leave

**Overview** Use this command to enable MLD Snooping fast-leave processing. Fast-leave processing is analogous to immediate-leave processing; the MLD group-membership is removed as soon as an MLD leave group message is received, without sending out a group-specific query.

Use the **no** variant of this command to disable fast-leave processing.

**Syntax** `ipv6 mld snooping fast-leave`  
`no ipv6 mld snooping fast-leave`

**Default** MLD Snooping fast-leave processing is disabled.

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** This MLD Snooping command can only be configured on VLAN interfaces.

**Examples** This example shows how to enable fast-leave processing on the VLAN interface `vlan2`.

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 mld snooping fast-leave
```

This example shows how to enable fast-leave processing on the VLAN interface `vlan2-vlan4`.

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# ipv6 mld snooping fast-leave
```

# ipv6 mld snooping mrouter

**Overview** Use this command to statically configure the specified port as a Multicast Router interface for MLD Snooping within the specified VLAN.

See detailed usage notes below to configure static multicast router ports when using static IPv6 multicast routes with EPSR, and the destination VLAN is an EPSR data VLAN.

Use the **no** variant of this command to remove the static configuration of the interface as a Multicast Router interface.

**Syntax** `ipv6 mld snooping mrouter interface <port>`  
`no ipv6 mld snooping mrouter interface <port>`

| Parameter | Description                   |
|-----------|-------------------------------|
| <port>    | Specify the name of the port. |

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** This MLD Snooping command statically configures a switch port as a Multicast Router interface.

Note that if static IPv6 multicast routing is being used with EPSR and the destination VLAN is an EPSR data VLAN, then multicast router (mrouter) ports must be statically configured. This minimizes disruption for multicast traffic in the event of ring failure or restoration.

When configuring the EPSR data VLAN, statically configure mrouter ports so that the multicast router can be reached in either direction around the EPSR ring.

For example, if port1.0.1 and port1.0.6 are ports on an EPSR data VLAN vlan101, which is the destination for a static IPv6 multicast route, then configure both ports as multicast router (mrouter) ports as shown in the example commands listed below:

**Output** Figure 23-1: Example **ipv6 mld snooping mrouter** commands when static IPv6 multicast routing is being used and the destination VLAN is an EPSR data VLAN:

```
awplus>enable  
  
awplus#configure terminal  
  
awplus(config)#interface vlan101  
  
awplus(config-if)#ipv6 mld snooping mrouter interface port1.0.1  
  
awplus(config-if)#ipv6 mld snooping mrouter interface port1.0.6
```

**Examples** This example shows how to specify the next-hop interface to the multicast router for VLAN interface `vlan2`:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 mld snooping mrouter interface
port1.0.5
```

This example shows how to specify the next-hop interface to the multicast router for VLAN interfaces `vlan2-vlan4`:

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# ipv6 mld snooping mrouter interface
port1.0.5
```

**Related Commands** [ipv6 multicast route](#)



# ipv6 mld snooping querier

**Overview** Use this command to enable MLD querier operation on a subnet (VLAN) when no multicast routing protocol is configured in the subnet (VLAN). When enabled, the MLD Snooping querier sends out periodic MLD queries for all interfaces on that VLAN.

Use the **no** variant of this command to disable MLD querier configuration.

**Syntax** `ipv6 mld snooping querier`  
`no ipv6 mld snooping querier`

**Mode** Interface Configuration for a specified VLAN interface.

**Usage** This command can only be configured on a single VLAN interface - not on multiple VLANs.

The MLD Snooping querier uses the 0.0.0.0 Source IP address because it only masquerades as an MLD querier for faster network convergence.

The MLD Snooping querier does not start, or automatically cease, the MLD Querier operation if it detects query message(s) from a multicast router. It restarts as an MLD Snooping querier if no queries are seen within the other querier interval.

Do not enable MLD Snooping querier if you have already enabled MLD on your device.

Do not enable MLD Snooping querier on your device and then enable MLD afterwards.

**Example** `awplus# configure terminal`  
`awplus(config)# interface vlan2`  
`awplus(config-if)# ipv6 mld snooping querier`

# ipv6 mld snooping report-suppression

**Overview** Use this command to enable report suppression from hosts for Multicast Listener Discovery version 1 (MLDv1) on a VLAN in Interface Configuration mode.

Use the **no** variant of this command to disable report suppression on a VLAN in Interface Configuration mode.

**Syntax** `ipv6 mld snooping report-suppression`  
`no ipv6 mld snooping report-suppression`

**Default** Report suppression does not apply to MLDv2, and is turned on by default for MLDv1 reports.

**Mode** Interface Configuration for a specified VLAN interface or a range of VLAN interfaces.

**Usage** This MLD Snooping command can only be configured on VLAN interfaces.

MLDv1 Snooping maybe configured to suppress reports from hosts. When a querier sends a query, only the first report for particular set of group(s) from a host will be forwarded to the querier by the MLD Snooping device. Similar reports (to the same set of groups) from other hosts, which would not change group memberships in the querier, will be suppressed by the MLD Snooping device to prevent 'flooding' of query responses.

**Examples** This example shows how to enable report suppression for MLD reports on VLAN interface `vlan2`:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 mld snooping report-suppression
```

This example shows how to disable report suppression for MLD reports on VLAN interface `vlan2`:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 mld snooping report-suppression
```

This example shows how to enable report suppression for MLD reports on VLAN interfaces `vlan2-vlan4`:

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# ipv6 mld snooping report-suppression
```

This example shows how to disable report suppression for MLD reports on VLAN interfaces `vlan2-vlan4`:

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# no ipv6 mld snooping report-suppression
```

# ipv6 mld static-group

**Overview** Use this command to statically configure IPv6 group membership entries on an interface. To statically add only a group membership, do not specify any parameters.

Use the **no** variant of this command to delete static group membership entries.

**Syntax** `ipv6 mld static-group <ipv6-group-address> [source <ipv6-source-address>] [interface <port>]`  
`no ipv6 mld static-group <ipv6-group-address> [source <ipv6-source-address>] [interface <port>]`

| Parameter                                | Description   |
|--|---|
| <code>&lt;ipv6-group-address&gt;</code>  | Specify a standard IPv6 Multicast group address to be configured as a static group member.<br>The IPv6 address uses the format X:X::X:X.  |
| <code>&lt;ipv6-source-address&gt;</code> | Optional. Specify a standard IPv6 source address to be configured as a static source from where multicast packets originate.<br>The IPv6 address uses the format X:X::X:X.  |
| <code>&lt;port&gt;</code>                | Optional. Physical interface. This parameter specifies a physical port. If this parameter is used, the static configuration is applied to just to that physical interface. If this parameter is not used, the static configuration is applied on all ports in the VLAN. |

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to MLD Snooping on a VLAN interface to statically add groups and/or source records.

**Examples** To add a static group record, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 mld static-group ff1e::10
```

To add a static group and source record, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 mld static-group ff1e::10 source
fe80::2fd:6cff:felc:b
```

To add a static group record on a specific port on vlan2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 mld static-group ff1e::10 interface
port1.0.4
```

# ipv6 mld version

**Overview** Use this command to set the current MLD protocol version on an interface.  
Use the **no** variant of this command to return to the default version on an interface.

**Syntax** `ipv6 mld version <version>`  
`no ipv6 mld version`

| Parameter | Description  |
|-----------|--|
| <version> | MLD protocol version number. Valid version numbers are 1 and 2 |

**Default** The default MLD protocol version number is 2.

**Mode** Interface Configuration for a VLAN interface.

**Usage** This command applies to interfaces configured for MLD Layer-3 multicast protocols, MLD Snooping. Note this command is intended for use where there is another querier (when there is another device with MLD enabled) on the same link that can only operate with MLD version 1. Otherwise, the default MLD version 2 is recommended for performance.

**Example**

```
awplus# configure terminal
awplus(config)# ipv6 forwarding
awplus(config)# ipv6 multicast-routing
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 mld version 1
```

# show debugging mld

**Overview** Use this command to display the MLD debugging modes enabled with the [debug mld](#) command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the “[Getting Started with AlliedWare Plus](#)” [Feature Overview and Configuration Guide](#).

**Syntax** show debugging mld

**Mode** Privileged Exec

**Example** awplus# show debugging mld

## Output

```
show debugging mld
MLD Debugging status:
  MLD Decoder debugging is on
  MLD Encoder debugging is on
  MLD Events debugging is on
  MLD FSM debugging is on
  MLD Tree-Info-Base (TIB) debugging is on
```

**Related Commands** [debug mld](#)

# show ipv6 mld groups

**Overview** Use this command to display the multicast groups that have receivers directly connected to the router and learned through MLD.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 mld groups [<ipv6-address>|<interface>] [detail]`

| Parameter      | Description  |
|----------------|--|
| <ipv6-address> | Optional. Specify Address of the multicast group in format X:X::X:X.         |
| <interface>    | Optional. Specify the Interface name for which to display local information. |

**Mode** User Exec and Privileged Exec

**Examples** The following command displays local-membership information for all interfaces:

```
awplus# show ipv6 mld groups
```

**Output** Figure 23-2: Example output for **show ipv6 mld groups**

|                                |                         |                    |          |          |
|--------------------------------|-------------------------|--------------------|----------|----------|
| awplus#show ipv6 mld groups    |                         |                    |          |          |
| MLD Connected Group Membership |                         |                    |          |          |
| Group Address                  |                         | Interface          | Uptime   | Expires  |
|                                | Last Reporter           |                    |          |          |
| ff08::1                        |                         | vlan10 (port1.0.1) | 00:07:27 | 00:03:10 |
|                                | fe80::200:1ff:fe20:b5ac |                    |          |          |

The following command displays local-membership information for all interfaces:

```
awplus# show ipv6 mld groups detail
```



# show ipv6 mld interface

**Overview** Use this command to display the state of MLD and MLD Snooping for a specified interface, or all interfaces.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 mld interface [<interface>]`

| Parameter   | Description     |
|-------------|-----------------|
| <interface> | Interface name. |

**Mode** User Exec and Privileged Exec

**Example** The following command displays MLD interface status on all interfaces enabled for MLD:

```
awplus# show ipv6 mld interface
```

## Output

```
awplus#show ipv6 mld interface

Interface vlan1 (Index 301)
  MLD Enabled, Active, Querier, Version 2 (default)
  Internet address is fe80::215:77ff:fec9:7468
  MLD interface has 0 group-record states
  MLD activity: 0 joins, 0 leaves
  MLD robustness variable is 2
  MLD last member query count is 2
  MLD query interval is 125 seconds
  MLD querier timeout is 255 seconds
  MLD max query response time is 10 seconds
  Last member query response interval is 1000 milliseconds
  Group Membership interval is 260 seconds
  MLD Snooping is globally enabled
  MLD Snooping is enabled on this interface
  MLD Snooping fast-leave is not enabled
  MLD Snooping querier is enabled
  MLD Snooping report suppression is enabled
```

# show ipv6 mld snooping mrrouter

**Overview** Use this command to display the multicast router interfaces, both configured and learned, in a VLAN. If you do not specify a VLAN interface then all the VLAN interfaces are displayed.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 mld snooping mrrouter [<interface>]`

| Parameter   | Description  |
|-------------|--|
| <interface> | Optional. Specify the name of the VLAN interface. Note: If you do not specify a single VLAN interface, then all VLAN interfaces are shown. |

**Mode** User Exec and Privileged Exec

**Examples** The following command displays the multicast router interfaces in `vlan2`:

```
awplus# show ipv6 mld snooping mrrouter vlan2
```

## Output

```
awplus#show ipv6 mld snooping mrrouter vlan2
VLAN      Interface      Static/Dynamic
2         port1.0.2      Dynamically Learned
2         port1.0.3      Dynamically Learned
```

The following command displays the multicast router interfaces for all VLAN interfaces:

```
awplus# show ipv6 mld snooping mrrouter
```

## Output

```
awplus#show ipv6 mld snooping mrrouter
VLAN      Interface      Static/Dynamic
2         port1.0.2      Dynamically Learned
2         port1.0.3      Dynamically Learned
3         port1.0.4      Statically Assigned
3         port1.0.5      Statically Assigned
```

# show ipv6 mld snooping statistics

**Overview** Use this command to display MLD Snooping statistics data.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 mld snooping statistics interface <interface>`

| Parameter   | Description                     |
|-------------|---------------------------------|
| <interface> | The name of the VLAN interface. |

**Mode** User Exec and Privileged Exec

**Example** The following command displays MLDv2 statistical information for `vlan1`:

```
awplus# show ipv6 mld snooping statistics interface vlan1
```

## Output

```
awplus#show ipv6 mld snooping statistics interface vlan1
MLD Snooping statistics for vlan1
Interface:      port1.0.1
Group:          ff08::1
Uptime:         00:02:18
Group mode:     Include ()
Last reporter:  fe80::eecd:6dff:fe6b:4783
Group source list: (R - Remote, M - SSM Mapping, S - Static )
  Source Address      Uptime      v2 Exp      Fwd  Flags
  2001:db8::1         00:02:18    00:02:02    Yes  R
  2001:db8::3         00:02:18    00:02:02    Yes  R
```

# Part 5: Access and Security

# 24

# IPv4 Hardware Access Control List (ACL) Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of IPv4 Hardware Access Control List (ACL) commands. It contains detailed command information and command examples about IPv4 hardware ACLs, which are applied directly to interfaces using the `access-group` command

To apply ACLs to an LACP channel group, apply it to all the individual switch ports in the channel group. To apply ACLs to a static channel group, apply it to the static channel group itself.

- Text in parenthesis in command names indicates usage not keyword entry. For example, **access-list hardware (named)** indicates named IPv4 hardware ACLs entered as `access-list hardware <name>` where *<name>* is a placeholder not a keyword.
- Parenthesis surrounding ACL filters indicates the type of ACL filter not the keyword entry in the CLI, such as **(access-list standard numbered filter)** represents command entry in the format shown in the syntax  
[<sequence-number>] {deny|permit} {<source>|host  
<host-address>|any}.
- Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Sub-modes** Many of the ACL commands operate from sub-modes that are specific to particular ACL types. The following table shows the CLI prompts at which ACL commands are entered.

Table 24-1: IPv4 Hardware Access List Commands and Prompts

| Command Name                                       | Command Mode    | Prompt  |
|--|-----------------|---------|
| <code>show interface access-group</code>           | Privileged Exec | awplus# |
| <code>show access-list (IPv4 Hardware ACLs)</code> | Privileged Exec | awplus# |
| <code>show interface access-group</code>           | Privileged Exec | awplus# |

Table 24-1: IPv4 Hardware Access List Commands and Prompts (cont.)

| Command Name                              | Command Mode                    | Prompt                      |
|---|---------------------------------|-----------------------------|
| access-group                              | Global Configuration            | awplus (config) #           |
| access-list (hardware IP numbered)        | Global Configuration            | awplus (config) #           |
| access-list (hardware MAC numbered)       | Global Configuration            | awplus (config) #           |
| access-list hardware (named)              | Global Configuration            | awplus (config) #           |
| access-group                              | Interface Configuration         | awplus (config-if) #        |
| (access-list hardware ICMP filter)        | IPv4 Hardware ACL Configuration | awplus (config-ip-hw-acl) # |
| (access-list hardware IP protocol filter) | IPv4 Hardware ACL Configuration | awplus (config-ip-hw-acl) # |
| (access-list hardware MAC filter)         | IPv4 Hardware ACL Configuration | awplus (config-ip-hw-acl) # |
| (access-list hardware TCP UDP filter)     | IPv4 Hardware ACL Configuration | awplus (config-ip-hw-acl) # |
| commit (IPv4)                             | IPv4 Hardware ACL Configuration | awplus (config-ip-hw-acl) # |

**References** For descriptions of ACLs, and further information about rules when applying them, see the [ACL Feature Overview and Configuration Guide](#).

For more information on link aggregation see the following references:

- the [Link Aggregation Feature Overview and Configuration Guide](#).
- [Link Aggregation Commands](#)

- Command List**
- “access-group” on page 907
  - “access-list (hardware IP numbered)” on page 909
  - “access-list (hardware MAC numbered)” on page 918
  - “access-list hardware (named)” on page 921
  - “(access-list hardware ICMP filter)” on page 923
  - “(access-list hardware IP protocol filter)” on page 926
  - “(access-list hardware MAC filter)” on page 931
  - “(access-list hardware TCP UDP filter)” on page 934
  - “commit (IPv4)” on page 937
  - “show access-list (IPv4 Hardware ACLs)” on page 938
  - “show interface access-group” on page 940

# access-group

**Overview** This command adds or removes a hardware-based access-list to or from a switch port interface. The number of hardware numbered and named access-lists that can be added to a switch port interface is determined by the available memory in hardware-based packet classification tables.

This command works in Interface Configuration mode to apply hardware access-lists to selected switch port interfaces.

The **no** variant of this command removes the selected access-list from an interface.

**Syntax**

```
access-group  
[<3000-3699>|<4000-4699>|<hardware-access-list-name>]  
  
no access-group  
[<3000-3699>|<4000-4699>|<hardware-access-list-name>]
```

| Parameter                   | Description                    |
|-----------------------------|--------------------------------|
| <3000-3699>                 | Hardware IP access-list.       |
| <4000-4699>                 | Hardware MAC access-list.      |
| <hardware-access-list-name> | The hardware access-list name. |

**Mode** Interface Configuration for a switch port interface

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicitly match a filter is permitted.

**Usage** First create an IP access-list that applies the appropriate permit/deny requirements with the [access-list \(hardware IP numbered\)](#) command, the [access-list \(hardware MAC numbered\)](#) command or the [access-list hardware \(named\)](#) command. Then use this command to apply this hardware access-list to a specific port or port range. Note that this command will apply the access-list only to incoming data packets.

To apply ACLs to an LACP aggregated link, apply it to all the individual switch ports in the aggregated group. To apply ACLs to a static channel group, apply it to the static channel group itself. An ACL can even be applied to a static aggregated link that spans more than one switch instance ([Link Aggregation Commands](#)).

Note that you cannot apply software numbered ACLs to switch port interfaces with the access-group command. This command will only apply hardware ACLs.

**NOTE:** Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** To add the numbered hardware access-list 3005 to switch port interface port1.0.1, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# access-group 3005
```

To add the named hardware access-list hw-acl to switch port interface port1.0.2, enter the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# access-group hw-acl
```

To apply an ACL to static channel group 2 containing switch port1.0.5 and port1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.5-1.0.6
awplus(config-if)# static-channel-group 2
awplus(config)# interface sa2
awplus(config-if)# access-group 3000
```

**Related Commands**

- [access-list hardware \(named\)](#)
- [access-list \(hardware IP numbered\)](#)
- [access-list \(hardware MAC numbered\)](#)
- [show interface access-group](#)



## access-list (hardware IP numbered)

**Overview** This command creates an access-list for use with hardware classification, such as QoS. The access-list will match on either TCP or UDP type packets that have the specified source and destination IP addresses and Layer 4 port values or ranges. The parameter **any** may be specified if an address does not matter and the port values are optional.

The **no** variant of this command removes the previously specified IP hardware access-list.

**Syntax [ip]** `access-list <3000-3699>  
{deny|permit|copy-to-cpu|copy-to-mirror|send-to-mirror|  
send-to-cpu} ip <source> <destination> [vlan  
<1-4094>]`

**Syntax [icmp]** `access-list <3000-3699>  
{deny|permit|copy-to-cpu|copy-to-mirror|send-to-mirror|  
send-to-cpu} icmp <source> <destination>  
[icmp-type <type-number>]  
no access-list <3000-3699>`

**Table 25:** Parameters in the **access-list (hardware IP numbered)** command - ip|icmp

| Parameter      | Description  |
|----------------|--|
| <3000-3699>    | Hardware IP access-list number.  |
| deny           | Access-list rejects packets that match the source and destination filtering specified with this command. |
| permit         | Access-list permits packets that match the source and destination filtering specified with this command. |
| copy-to-cpu    | Specify packets to copy to the CPU.  |
| copy-to-mirror | Specify packets to copy to the mirror port.  |
| send-to-mirror | Specify packets to send to the mirror port.  |
| send-to-cpu    | Specify packets to send to the CPU.  |
| icmp           | ICMP packet.   |
| ip             | IP packet.   |

**Table 25:** Parameters in the **access-list (hardware IP numbered)** command -  
ip|icmp (cont.)

| Parameter   | Description  |
|---|--|
| <code>&lt;source&gt;</code>                           | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:                           |
| <code>any</code>                                      | Matches any source IP address.   |
| <code>host&lt;ip-addr&gt;</code>                      | Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.   |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.  |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> . |
| <code>&lt;destination&gt;</code>                      | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination:            |
| <code>any</code>                                      | Matches any destination IP address.  |
| <code>host &lt;ip-addr&gt;</code>                     | Matches a single destination host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.  |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.   |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> . |
| <code>icmp-type</code>                                | Matches only a specified type of ICMP messages. This is valid only when the filtering is set to match ICMP packets.  |

**Table 25:** Parameters in the **access-list (hardware IP numbered)** command - ip|icmp (cont.)

| Parameter     | Description   |
|---------------|---|
| <type-number> | The ICMP type, as defined in RFC792 and RFC950. Specify one of the following integers to create a filter for the ICMP message type: |
| 0             | Echo replies.   |
| 3             | Destination unreachable messages.   |
| 4             | Source quench messages.   |
| 5             | Redirect (change route) messages.   |
| 8             | Echo requests.  |
| 11            | Time exceeded messages.   |
| 12            | Parameter problem messages.   |
| 13            | Timestamp requests.   |
| 14            | Timestamp replies.  |
| 15            | Information requests.   |
| 16            | Information replies.  |
| 17            | Address mask requests.  |
| 18            | Address mask replies.   |

### Syntax [tcp|udp]

```
access-list <3000-3699>
{copy-to-cpu|copy-to-mirror|send-to-mirror|deny|permit|send-to-
-cpu} {tcp|udp} <source> {eq <sourceport>|lt
<sourceport>|gt
<sourceport>|ne
<sourceport>|
[range <start-range> <end-range>} <destination> [eq
<destport>|lt <destport>|gt <destport>|ne <destport>]} [range
<start-range> <end-range>]
no access-list <3000-3699>
```

**Table 26:** Parameters in the **access-list (hardware IP numbered)** command - tcp|udp

| Parameter      | Description   |
|----------------|---|
| <3000-3699>    | Hardware IP access-list.  |
| copy-to-cpu    | Specify packets to copy to the CPU.   |
| copy-to-mirror | Specify packets to copy to the mirror port.   |
| send-to-mirror | Specify packets to send to the mirror port.   |
| deny           | The access-list rejects packets that match the type, source, and destination filtering specified with this command. |

**Table 26:** Parameters in the **access-list (hardware IP numbered)** command - tcp|udp (cont.)

| Parameter     | Description   |
|---------------|---|
| permit        | The access-list permits packets that match the type, source, and destination filtering specified with this command.   |
| send-to-cpu   | Specify packets to send to the CPU.   |
| tcp           | The access-list matches only TCP packets.   |
| udp           | The access-list matches only UDP packets.   |
| <source>      | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:                            |
|               | any Matches any source IP address.  |
|               | host<ip-addr> Matches a single source host with the IP address given by <ip-addr> in dotted decimal notation.   |
|               | <ip-addr>/<prefix> An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.                              |
|               | <ip-addr><br><reverse-mask> Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.1 0.0.0.255 is the same as entering 192.168.1.1/24. |
| <destination> | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination:             |
|               | any Matches any destination IP address.   |
|               | host<ip-addr> Matches a single destination host with the IP address given by <ip-addr> in dotted decimal notation.  |
|               | <ip-addr>/<prefix> An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.                         |
|               | <ip-addr><br><reverse-mask> Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.1 0.0.0.255 is the same as entering 192.168.1.1/24. |

**Table 26:** Parameters in the **access-list (hardware IP numbered)** command - tcp|udp (cont.)

| Parameter     | Description  |
|---------------|--|
| <sourceport>  | The source (TCP or UDP) port number, specified as an integer between 0 and 65535.                      |
| range         | Range of port numbers.   |
| <start-range> | Port number at start of range <0-65535>.   |
| <end-range>   | Port number at end of range <0-65535>.   |
| <destport>    | The destination (TCP or UDP) port number, specified as an integer between 0 and 65535.                 |
| eq            | Matches port numbers that are equal to the port number specified immediately after this parameter.     |
| lt            | Matches port numbers that are less than the port number specified immediately after this parameter.    |
| gt            | Matches port numbers that are greater than the port number specified immediately after this parameter. |
| ne            | Matches port numbers that are not equal to the port number specified immediately after this parameter. |

**Syntax [proto]** access-list <3000-3699>  
{copy-to-cpu|copy-to-mirror|send-to-mirror|deny|permit|send-to-cpu} proto <ip-protocol> <source> <destination>  
no access-list <3000-3699>

**Table 27:** Parameters in the **access-list (hardware IP numbered)** command - proto

| Parameter      | Description  |
|----------------|--|
| <3000-3699>    | Hardware IP access-list.   |
| copy-to-cpu    | Specify packets to copy to the CPU.  |
| copy-to-mirror | Specify packets to copy to the mirror port.  |
| send-to-mirror | Specify packets to send to the mirror port   |
| deny           | Access-list rejects packets that match the source and destination filtering specified with this command. |
| permit         | Access-list permits packets that match the source and destination filtering specified with this command. |
| send-to-cpu    | Specify packets to send to the CPU.  |

**Table 27:** Parameters in the **access-list (hardware IP numbered)** command - proto (cont.)

| Parameter   | Description   |
|---|---|
| <code>&lt;source&gt;</code>                           | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:  |
| <code>any</code>                                      | Matches any source IP address.  |
| <code>host&lt;ip-addr&gt;</code>                      | Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.  |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.   |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> .  |
| <code>&lt;destination&gt;</code>                      | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination:   |
| <code>any</code>                                      | Matches any destination IP address.   |
| <code>host&lt;ip-addr&gt;</code>                      | Matches a single destination host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.   |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.  |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> .  |
| <code>proto<br/>&lt;ip-protocol&gt;</code>            | <code>&lt;1-255&gt;</code><br>Specify IP protocol number, as defined by IANA (Internet Assigned Numbers Authority)<br><a href="http://www.iana.org/assignments/protocol-numbers">www.iana.org/assignments/protocol-numbers</a><br>See below for a list of IP protocol numbers and their descriptions. |

Table 24-1: IP protocol number and description

| Protocol Number | Protocol Description [RFC]                             |
|-----------------|--|
| 1               | Internet Control Message [RFC792]                      |
| 2               | Internet Group Management [RFC1112]                    |
| 3               | Gateway-to-Gateway [RFC823]                            |
| 4               | IP in IP [RFC2003]                                     |
| 5               | Stream [RFC1190] [RFC1819]                             |
| 6               | TCP (Transmission Control Protocol) [RFC793]           |
| 8               | EGP (Exterior Gateway Protocol) [RFC888]               |
| 9               | IGP (Interior Gateway Protocol) [IANA]                 |
| 11              | Network Voice Protocol [RFC741]                        |
| 17              | UDP (User Datagram Protocol) [RFC768]                  |
| 20              | Host monitoring [RFC869]                               |
| 27              | RDP (Reliable Data Protocol) [RFC908]                  |
| 28              | IRTP (Internet Reliable Transaction Protocol) [RFC938] |
| 29              | ISO-TP4 (ISO Transport Protocol Class 4) [RFC905]      |
| 30              | Bulk Data Transfer Protocol [RFC969]                   |
| 33              | DCCP (Datagram Congestion Control Protocol) [RFC4340]  |
| 48              | DSR (Dynamic Source Routing Protocol) [RFC4728]        |
| 50              | ESP (Encap Security Payload) [RFC2406]                 |
| 51              | AH (Authentication Header) [RFC2402]                   |
| 54              | NARP (NBMA Address Resolution Protocol) [RFC1735]      |
| 58              | ICMP for IPv6 [RFC1883]                                |
| 59              | No Next Header for IPv6 [RFC1883]                      |
| 60              | Destination Options for IPv6 [RFC1883]                 |
| 88              | EIGRP (Enhanced Interior Gateway Routing Protocol)     |
| 89              | OSPFv2 [RFC1583]                                       |
| 97              | Ethernet-within-IP Encapsulation / RFC3378             |
| 98              | Encapsulation Header / RFC1241                         |
| 108             | IP Payload Compression Protocol / RFC2393              |
| 112             | Virtual Router Redundancy Protocol / RFC3768           |
| 134             | RSVP-E2E-IGNORE / RFC3175                              |
| 135             | Mobility Header / RFC3775                              |
| 136             | UDPLite / RFC3828                                      |

Table 24-1: IP protocol number and description (cont.)

| Protocol Number | Protocol Description [RFC]                    |
|-----------------|---|
| 137             | MPLS-in-IP / RFC4023                          |
| 138             | MANET Protocols / RFC-ietf-manet-iana-07.txt  |
| 139-252         | Unassigned / IANA                             |
| 253             | Use for experimentation and testing / RFC3692 |
| 254             | Use for experimentation and testing / RFC3692 |
| 255             | Reserved / IANA                               |

**Mode** Global Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicitly match a filter is permitted.

**Usage** This command creates an access-list for use with hardware classification, such as when applying QoS. This command can be used to match ICMP packets, IP protocols, or TCP/ UDP packets.

For ICMP packets, the <3000-3699> range IP hardware access-list will match any ICMP packet that has the specified source and destination IP addresses and ICMP type.

You may apply the **any** parameter if the source or destination IP address is not important. The ICMP type is an optional parameter.

**NOTE:** Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** Follow the below example commands to configure access-lists for ICMP, IP protocol and TCP.

**ICMP Example** To create an access-list that will permit ICMP packets with a source address of 192.168.1.0/24 with any destination address and an ICMP type of 5 enter the below commands:

```
awplus# configure terminal
awplus(config)# access-list 3000 permit icmp 192.168.1.0/24 any
icmp-type 5
```

To destroy the access-list with an access-list identity of 3000 enter the below commands:

```
awplus# configure terminal
awplus(config)# no access-list 3000
```

**IP Example** To create an access-list that will permit any type of IP packet with a source address of 192.168.1.1 and any destination address, enter the commands:

```
awplus# configure terminal
awplus(config)# access-list 3000 permit ip 192.168.1.1/32 any
```



To create an access-list that will deny all IGMP packets (IP protocol 2) from the 192.168.0.0 network, enter the commands:

```
awplus# configure terminal
awplus(config)# access-list 3000 deny proto 2 192.168.0.0/16
any
```

**TCP Example** To create an access-list that will permit TCP packets with a destination address of 192.168.1.1, a destination port of 80 and any source address and source port, enter the commands:

```
awplus# configure terminal
awplus(config)# access-list 3000 permit tcp any 192.168.1.1/32
eq 80
```

**copy-to-mirror Example** To create an access-list that will copy-to-mirror TCP packets with a destination address of 192.168.1.1, a destination port of 80 and any source address and source port for use with the [mirror interface](#) command, enter the commands:

```
awplus# configure terminal
awplus(config)# access-list 3000 copy-to-mirror tcp any
192.168.1.1/32 eq 80
```

**Related Commands**

- [access-group](#)
- [mirror interface](#)
- [show running-config](#)
- [show access-list \(IPv4 Hardware ACLs\)](#)

## access-list (hardware MAC numbered)

**Overview** This command creates an access-list for use with hardware classification, such as QOS. The access-list will match on packets that have the specified source and destination MAC addresses. The parameter **any** may be specified if an address does not matter.

Optionally, the **vlan** and **inner-vlan** parameters can be matched for tagged (802.1q) packets.

The **no** variant of this command removes the specified MAC hardware filter access-list.

**Syntax**

```
access-list <4000-4699>
{copy-to-cpu|copy-to-mirror|deny|permit|send-to-cpu}
{<source-mac-address> <source-mac-mask>|any}
{<destination-mac-address> <destination-mac-mask>|any}
[vlan <1-4094> [inner-vlan <1-4094>]]
no access-list <4000-4699>
```

| Parameter                 | Description  |
|---------------------------|--|
| <4000-4699>               | Hardware MAC access-list.  |
| copy-to-cpu               | Specify packets to copy to the CPU.  |
| copy-to-mirror            | Specify packets to copy to the mirror port.  |
| deny                      | Access-list rejects packets that match the source and destination filtering.   |
| permit                    | Access-list permits packets that match the source and destination filtering.   |
| send-to-cpu               | Specify packets to send to the CPU.  |
| <source-mac-address>      | The source MAC address of the packets.<br>Enter this in the format <HHHH.HHHH.HHHH><br>where each <i>H</i> is a hexadecimal number that represents a 4 bit binary number.  |
| <source-mac-mask>         | The mask that will be applied to the source MAC addresses.<br>Enter this in the format <HHHH.HHHH.HHHH><br>where each <i>H</i> is a hexadecimal number that represents a 4 bit binary number. For a mask, each value will be either 0 or F. Where Hex FF = Ignore, and Hex 00 = Match. |
| any                       | Any source MAC address.  |
| <destination-mac-address> | The destination MAC address of the packets.<br>Enter this in the format <HHHH.HHHH.HHHH><br>where each <i>H</i> is a hexadecimal number that represents a 4 bit binary number.   |

| Parameter                                 | Description  |
|---|--|
| <code>&lt;destination-mac-mask&gt;</code> | The mask that will be applied to the destination MAC addresses.<br>Enter this in the format <code>&lt;HHHH.HHHH.HHHH&gt;</code> where each H is a hexadecimal number that represents a 4 bit binary number. For a mask, each value will be either 0 or F. Where Hex FF = Ignore, and Hex 00 = Match. |
| <code>any</code>                          | Any destination MAC address.   |
| <code>vlan</code>                         | Specifies that the ACL will match on the ID in the packet's VLAN tag.  |
| <code>&lt;1-4094&gt;</code>               | The VLAN VID.  |
| <code>inner-vlan</code>                   | This parameter is used within double-tagged VLANs. It is the inner VLAN tag (VID); sometimes referred to as the C-TAG (Customer VLAN TAG), where the vlan VID tag is referred to as the S-TAG (Service VLAN TAG).  |
| <code>&lt;1-4094&gt;</code>               | The inner VLAN VID.  |

**Mode** Global Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicitly match a filter is permitted.

**Usage** This command creates an access-list for use with hardware classification, such as when applying QoS. The `<4000-4699>` range MAC hardware access-list will match on packets that have the specified source and destination MAC addresses. You may apply the **any** parameter if the source or destination MAC host address is not important.

**NOTE:** Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** To create an access-list that will permit packets with a MAC address of `0000.00ab.1234` and any destination address enter the commands:

```
awplus# configure terminal
awplus(config)# access-list 4000 permit 0000.00ab.1234
0000.0000.0000 any
```

To create an access-list that will permit packets with an initial MAC address component of `0000.00ab` and any destination address, enter the commands:

```
awplus# configure terminal
awplus(config)# access-list 4001 permit 0000.00ab.1234
0000.0000.FFFF any
```

To create an access-list that will copy-to-mirror packets with an initial MAC address component of 0000.00ab and any destination address for use with the [mirror interface](#) command, enter the commands:

```
awplus# configure terminal
awplus(config)# access-list 4001 copy-to-mirror 0000.00ab.1234
0000.0000.FFFF any
```

To destroy the access-list with an access-list identity of 4000 enter the commands:

```
awplus# configure terminal
awplus(config)# no access-list 4000
```

**Related  
Commands**

[access-group](#)  
[mirror interface](#)  
[show running-config](#)  
[show access-list \(IPv4 Hardware ACLs\)](#)

## access-list hardware (named)

**Overview** This command creates a named hardware access-list and puts you into IPv4 Hardware ACL Configuration mode, where you can add filters to the ACL. Once you have configured the ACL, you can apply it to a switch port.

The **no** variant of this command removes the specified named hardware ACL.

**Syntax** `access-list hardware <hardware-access-list-name>`  
`no access-list hardware <hardware-access-list-name>`

| Parameter                                      | Description  |
|--|--|
| <code>&lt;hardware-access-list-name&gt;</code> | Specify the hardware ACL name to then define ACL filters for in the subsequent IPv4 Hardware ACL Configuration mode. |

**Mode** Global Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicitly match a filter is permitted.

**Usage** Use this command to name a hardware ACL and enter the IPv4 Hardware ACL Configuration mode. If the named hardware ACL does not exist, it will be created after entry. If the named hardware ACL does exist, then you can enter IPv4 Hardware ACL Configuration mode for that existing ACL.

Entering this command with the hardware ACL name moves you to the (config-ip- hw-acl) prompt for the IPv4 Hardware ACL Configuration mode so you can enter ACL filters with sequence numbers. From this prompt, configure the filters for the ACL. See the [ACL Feature Overview and Configuration Guide](#) for complete examples of configured sequenced numbered ACLs.

**NOTE:** Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** To create the hardware access-list named ACL-1 and enter the IPv4 Hardware ACL Configuration mode to specify the ACL filter entry, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware ACL-1
awplus(config-ip-hw-acl)#
```

To remove the hardware access-list named ACL-1, use the commands:

```
awplus# configure terminal
awplus(config)# no access-list hardware ACL-1
```

**Related  
Commands**

- [access-group](#)
- [\(access-list hardware ICMP filter\)](#)
- [\(access-list hardware IP protocol filter\)](#)
- [\(access-list hardware TCP UDP filter\)](#)
- [\(access-list standard named filter\)](#)
- [show access-list \(IPv4 Hardware ACLs\)](#)

## (access-list hardware ICMP filter)

**Overview** Use this ACL filter to add a new ICMP filter entry to the current hardware access-list. The filter will match on any ICMP packet that has the specified source and destination IP addresses and ICMP type. The parameter **any** may be specified if an address does not matter and the ICMP type is an optional parameter. If a sequence number is specified, the new filter is inserted at the specified location. Otherwise, the new filter is added at the end of the access-list.

The **no** variant of this command removes an ICMP filter entry from the current hardware access-list. You can specify the ICMP filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its ICMP filter profile without specifying its sequence number.

Note that the sequence number can be found by running the command, the [show access-list \(IPv4 Hardware ACLs\)](#) command.

**Syntax [icmp]** [*<sequence-number>*]  
{deny|permit|send-to-cpu|copy-to-cpu|copy-to-mirror} icmp  
<source> <destination> [icmp <icmp-value>]  
  
no {deny|permit|send-to-cpu|copy-to-cpu|copy-to-mirror} icmp  
<source> <destination> [icmp <icmp-value>]  
  
no <sequence-number>

| Parameter         | Description  |
|-------------------|--|
| <sequence-number> | <1-65535><br>The sequence number for the filter entry of the selected access control list.               |
| deny              | Access-list rejects packets that match the source and destination filtering specified with this command. |
| permit            | Access-list permits packets that match the source and destination filtering specified with this command. |
| send-to-cpu       | Specify packets to send to the CPU.  |
| copy-to-cpu       | Specify packets to copy to the CPU.  |
| copy-to-mirror    | Specify packets to copy to the mirror port.  |
| icmp              | ICMP packet type.  |

| Parameter   | Description   |
|---|---|
| <code>&lt;source&gt;</code>                           | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:                |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.                                     |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.10.0.0.255 is the same as entering 192.168.1.1/24.                  |
| <code>host&lt;ip-addr&gt;</code>                      | Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.  |
| <code>any</code>                                      | Matches any source IP address.  |
| <code>&lt;destination&gt;</code>                      | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination: |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.                                |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.10.0.0.255 is the same as entering 192.168.1.1/24.                  |
| <code>host&lt;ip-addr&gt;</code>                      | Matches a single destination host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.   |
| <code>any</code>                                      | Matches any destination IP address.   |
| <code>icmp-type</code>                                | The ICMP type.  |
| <code>&lt;icmp-value&gt;</code>                       | The value of the ICMP type.   |

**Mode** IPv4 Hardware ACL Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicitly match a filter is permitted.

**Usage** First create a named hardware access-list that applies the appropriate permit/deny requirements. Then use the [access-group](#) command to apply this access-list to a specific port or range. Note that this command will apply the access-list only to **incoming** data packets.



An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number.

**NOTE:** You must reach the prompt `awplus(config-ip-hw-acl)#` by running the `access-list hardware (named)` command, and entering an appropriate access-list name.

Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** To add an access-list filter entry with a sequence number of 100 to the access-list named `my-list` that will permit ICMP packets with a source address of `192.168.1.0/24`, any destination address and an icmp type of 5, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware my-list
awplus(config-ip-hw-acl)# 100 permit icmp 192.168.1.0/24 any
icmp-type 5
```

To remove an access-list filter entry with a sequence number of 100 in the access-list named `my-list`, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware my-list
awplus(config-ip-hw-acl)# no 100
```

**Related Commands**

- `access-list hardware (named)`
- `show running-config`
- `show access-list (IPv4 Hardware ACLs)`

## (access-list hardware IP protocol filter)

**Overview** Use this ACL filter to add an IP protocol type filter entry to the current hardware access-list. The filter will match on any IP packet that has the specified source and destination IP addresses and IP protocol type, or has the optionally specified source and destination MAC addresses. The parameter **any** may be specified if an address does not matter. If a sequence number is specified, the new filter is inserted at the specified location. Otherwise, the new filter is added at the end of the access-list.

The **no** variant of this command removes an IP protocol type filter entry from the current hardware access-list. You can specify the IP protocol type filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its IP protocol type filter profile without specifying its sequence number.

Note that the sequence number can be found by running the [show access-list \(IPv4 Hardware ACLs\)](#) command.

**Syntax**

```
[any|ip|proto] [<sequence-number>]
{deny|permit|send-to-cpu|copy-to-cpu|copy-to-mirror}
{any|ip|proto <ip-protocol>}
{<source>|dhcpsnooping|any} {<destination>|any}
[mac {<mac-source-address> <mac-source-mask>|any}
{<mac-destination-address> <mac-destination-mask>|any}]

no {deny|permit|send-to-cpu|copy-to-cpu|copy-to-mirror}
{any|ip|proto <ip-protocol>}
{<source>|dhcpsnooping} {<destination>|any}
[mac {<mac-source-address> <mac-source-mask>|any}
{<mac-destination-address> <mac-destination-mask>|any}]

no <sequence-number>
```

| Parameter         | Description  |
|-------------------|--|
| <sequence-number> | <1-65535><br>The sequence number for the filter entry of the selected access control list. |
| deny              | Access-list rejects packets of the type specified.   |
| permit            | Access-list allows packets of the type specified   |
| send to cpu       | Specify packets to send to the CPU.  |
| copy to cpu       | Specify packets to copy to the CPU.  |
| copy to mirror    | Specify packets to copy to the mirror port.  |
| ip                | IP packets.  |
| any               | Any packet.  |

| Parameter                        | Description   |   |
|----------------------------------|---|---|
| proto <i>&lt;ip-protocol&gt;</i> | <i>&lt;1-255&gt;</i><br>Specify IP protocol number, as defined by IANA (Internet Assigned Numbers Authority)<br><a href="http://www.iana.org/assignments/protocol-numbers">www.iana.org/assignments/protocol-numbers</a><br>See below for a list of IP protocol numbers and their descriptions. |   |
| dhcpsnooping                     | The source address learned from the DHCP Snooping binding database.   |   |
| <i>&lt;source&gt;</i>            | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:  |   |
|                                  | any   | Matches any source IP address.  |
|                                  | host <i>&lt;ip-addr&gt;</i>   | Matches a single source host with the IP address given by <i>&lt;ip-addr&gt;</i> in dotted decimal notation.  |
|                                  | <i>&lt;ip-addr&gt;/&lt;prefix&gt;</i>   | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.                     |
|                                  | <i>&lt;ip-addr&gt;&lt;reverse-mask&gt;</i>  | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.1 0.0.0.255 is the same as entering 192.168.1.1/24. |
| <i>&lt;destination&gt;</i>       | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination:   |   |
|                                  | any   | Matches any destination IP address.   |
|                                  | host <i>&lt;ip-addr&gt;</i>   | Matches a single destination host with the IP address given by <i>&lt;ip-addr&gt;</i> in dotted decimal notation.   |
|                                  | <i>&lt;ip-addr&gt;/&lt;prefix&gt;</i>   | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.                |
|                                  | <i>&lt;ip-addr&gt;&lt;reverse-mask&gt;</i>  | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.1 0.0.0.255 is the same as entering 192.168.1.1/24. |

| Parameter                 | Description  |
|---------------------------|--|
| mac                       | Signifies a MAC and based hardware access-list.  |
| <mac-source-address>      | The source host's MAC address, entered in HHHH.HHHH.HHHH format.   |
| <mac-source-mask>         | The source host's MAC wildcard mask entered in HHHH.HHHH.HHHH format.<br>where Hex FF = Ignore, and Hex 00 = Match.  |
| any                       | Matches any source MAC address.  |
| <mac-destination-address> | The destination host's MAC address, entered in HHHH.HHHH.HHHH format.  |
| <mac-destination-mask>    | The destination host's wildcard mask entered in HHHH.HHHH.HHHH format.<br>where Hex FF = Ignore, and Hex 00 = Match. |
| any                       | Matches any destination MAC address.   |

Table 24-2: IP protocol number and description

| Protocol Number | Protocol Description [RFC]                             |
|-----------------|--|
| 1               | Internet Control Message [RFC792]                      |
| 2               | Internet Group Management [RFC1112]                    |
| 3               | Gateway-to-Gateway [RFC823]                            |
| 4               | IP in IP [RFC2003]                                     |
| 5               | Stream [RFC1190] [RFC1819]                             |
| 6               | TCP (Transmission Control Protocol) [RFC793]           |
| 8               | EGP (Exterior Gateway Protocol) [RFC888]               |
| 9               | IGP (Interior Gateway Protocol) [IANA]                 |
| 11              | Network Voice Protocol [RFC741]                        |
| 17              | UDP (User Datagram Protocol) [RFC768]                  |
| 20              | Host monitoring [RFC869]                               |
| 27              | RDP (Reliable Data Protocol) [RFC908]                  |
| 28              | IRTP (Internet Reliable Transaction Protocol) [RFC938] |
| 29              | ISO-TP4 (ISO Transport Protocol Class 4) [RFC905]      |
| 30              | Bulk Data Transfer Protocol [RFC969]                   |
| 33              | DCCP (Datagram Congestion Control Protocol) [RFC4340]  |
| 48              | DSR (Dynamic Source Routing Protocol) [RFC4728]        |
| 50              | ESP (Encap Security Payload) [RFC2406]                 |
| 51              | AH (Authentication Header) [RFC2402]                   |

Table 24-2: IP protocol number and description (cont.)

| Protocol Number | Protocol Description [RFC]                         |
|-----------------|--|
| 54              | NARP (NBMA Address Resolution Protocol) [RFC1735]  |
| 58              | ICMP for IPv6 [RFC1883]                            |
| 59              | No Next Header for IPv6 [RFC1883]                  |
| 60              | Destination Options for IPv6 [RFC1883]             |
| 88              | EIGRP (Enhanced Interior Gateway Routing Protocol) |
| 89              | OSPFv2 [RFC1583]                                   |
| 97              | Ethernet-within-IP Encapsulation / RFC3378         |
| 98              | Encapsulation Header / RFC1241                     |
| 108             | IP Payload Compression Protocol / RFC2393          |
| 112             | Virtual Router Redundancy Protocol / RFC3768       |
| 134             | RSVP-E2E-IGNORE / RFC3175                          |
| 135             | Mobility Header / RFC3775                          |
| 136             | UDPLite / RFC3828                                  |
| 137             | MPLS-in-IP / RFC4023                               |
| 138             | MANET Protocols / RFC-ietf-manet-iana-07.txt       |
| 139-252         | Unassigned / IANA                                  |
| 253             | Use for experimentation and testing / RFC3692      |
| 254             | Use for experimentation and testing / RFC3692      |
| 255             | Reserved / IANA                                    |

**Mode** IPv4 Hardware ACL Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicitly match a filter is permitted.

**Usage** First create a named hardware access-list that applies the appropriate permit/deny requirements. Then use the [access-group](#) command to apply this access-list to a specific port or range. Note that this command will apply the access-list only to **incoming** data packets.

An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number.

**NOTE:** The access control list being configured is selected by running the [access-list hardware \(named\)](#) command. with the required access control list number, or name, but with no further parameters selected.

Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** To add an access-list filter entry to the access-list named `my-list` that will permit any type of IP packet with a source address of `192.168.1.1` and any destination address, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware my-list
awplus(config-ip-hw-acl)# permit ip 192.168.1.1/32 any
```

To add an access-list filter entry to the access-list named `my-list` that will permit any type of IP packet with a source address of `192.168.1.1` and a MAC source address of `ffee.ddcc.bbbaa` with any IP and MAC destination address, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware my-list
awplus(config-ip-hw-acl)# permit ip 192.168.1.1/32 any mac
ffee.ddcc.bbbaa any
```

To add an access-list filter entry to the access-list named `my-list` a filter that will deny all IGMP packets (protocol 2) from the `192.168.0.0` network with sequence number 50 in access-list, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware my-list
awplus(config-ip-hw-acl)# 50 deny proto 2 192.168.0.0/16 any
```

**Related Commands**

- [access-list hardware \(named\)](#)
- [show running-config](#)
- [show access-list \(IPv4 Hardware ACLs\)](#)

## (access-list hardware MAC filter)

**Overview** Use this ACL filter to add a MAC filter entry to the current hardware access-list. The filter will match on any IP packet that has the specified source and destination MAC addresses. The parameter **any** may be specified if an address does not matter. If a sequence number is specified, the new filter is inserted at the specified location. Otherwise, the new filter is added at the end of the access-list.

The **no** variant of this command removes a MAC filter entry from the current hardware access-list. You can specify the MAC filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its MAC filter profile without specifying its sequence number.

Note that the sequence number can be found by running the [show access-list \(IPv4 Hardware ACLs\)](#) command.

**Syntax [mac]** [`<sequence-number>`]  
{deny|permit|send-to-cpu|copy-to-cpu|copy-to-mirror}  
mac {<source-mac-address> <source-mac-mask>|any}  
{<destination-mac-address> <destination-mac-mask>|any}  
[{vlan <1-4094>|inner-vlan <1-4094>}]  
  
no {deny|permit|send-to-cpu|copy-to-cpu|copy-to-mirror}  
mac {<source-mac-address> <source-mac-mask>|any}  
{<destination-mac-address> <destination-mac-mask>|any}  
[{vlan <1-4094>|inner-vlan <1-4094>}]  
  
no <sequence-number>

| Parameter            | Description   |
|----------------------|---|
| <sequence-number>    | <1-65535><br>The sequence number for the filter entry of the selected access control list.  |
| deny                 | Specify packets to reject.  |
| permit               | Specify packets to accept.  |
| send-to-cpu          | Specify packets to send to the CPU.   |
| copy-to-cpu          | Specify packets to copy to the CPU.   |
| copy-to-mirror       | Specify packets to copy to the CPU.   |
| mac                  | MAC address.  |
| <source-mac-address> | The source MAC address of the packets.<br>Enter this in the format <HHHH.HHHH.HHHH> where each H is a hexadecimal number that represents a 4 bit binary number. |

| Parameter                                    | Description   |
|--|---|
| <code>&lt;source-mac-mask&gt;</code>         | The mask that will be applied to the source MAC addresses.<br>Enter this in the format <code>&lt;HHHH.HHHH.HHHH&gt;</code> where each H is a hexadecimal number that represents a 4 bit binary number. For a mask, each value will be either 0 or F.<br>Where Hex FF = Ignore, and Hex 00 = Match.      |
| any  | Any source MAC host.  |
| <code>&lt;destination-mac-address&gt;</code> | The destination MAC address of the packets.<br>Enter this in the format <code>&lt;HHHH.HHHH.HHHH&gt;</code> where each H is a hexadecimal number that represents a 4 bit binary number.   |
| <code>&lt;destination-mac-mask&gt;</code>    | The mask that will be applied to the destination MAC addresses.<br>Enter this in the format <code>&lt;HHHH.HHHH.HHHH&gt;</code> where each H is a hexadecimal number that represents a 4 bit binary number. For a mask, each value will be either 0 or F.<br>Where Hex FF = Ignore, and Hex 00 = Match. |
| any  | Any destination MAC host.   |

**Mode** IPv4 Hardware ACL Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicitly match a filter is permitted.

**Usage** First create a named hardware access-list that applies the appropriate permit/deny requirements. Then use the [access-group](#) command to apply this access-list to a specific port or range. Note that this command will apply the access-list only to **incoming** data packets.

An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number

**NOTE:** The access control list being configured is selected by running the [access-list hardware \(named\)](#) command. with the required access control list number, or name, but with no further parameters selected.

Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** To add an access-list filter entry to the access-list named `my-list` that will permit packets with a source MAC address of `0000.00ab.1234` and any destination MAC address, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware my-list
awplus(config-ip-hw-acl)# permit mac 0000.00ab.1234
0000.0000.0000 any
```



To remove an access-list filter entry that permit packets with a source MAC address of 0000.00ab.1234 and any destination MAC address, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware my-list
awplus(config-ip-hw-acl)# no permit mac 0000.00ab.1234
0000.0000.0000 any
```

**Related  
Commands**

[access-group](#)  
[access-list hardware \(named\)](#)  
[show running-config](#)

## (access-list hardware TCP UDP filter)

**Overview** Use this ACL filter to add a TCP or UDP filter entry to the current hardware access-list. The filter will match on any TCP or UDP type packet that has the specified source and destination IP addresses. The parameter **any** may be specified if an address does not matter. If a sequence number is specified, the new filter is inserted at the specified location. Otherwise, the new filter is added at the end of the access-list.

The **no** variant of this command removes a TCP or UDP filter entry from the current hardware access-list. You can specify the TCP or UDP filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its TCP or UDP filter profile without specifying its sequence number.

Note that the sequence number can be found by running the [show access-list \(IPv4 Hardware ACLs\)](#) command.

**Syntax [tcp|udp]** [*<sequence-number>*]  
{deny|permit|send-to-cpu|copy-to-cpu|copy-to-mirror} {tcp|udp}  
[<source> {eq <sourceport>|gt <sourceport>|lt <sourceport>|  
ne <sourceport>|range <start-range> <end-range>}]  
[<destination> {eq <destport>|gt <destport>|lt <destport>|  
ne <destport>|range <start-range> <end-range>}]  
  
no {deny|permit|send-to-cpu|copy-to-cpu|copy-to-mirror}  
{tcp|udp} [<source>  
{eq <sourceport>|gt <sourceport>|lt <sourceport>|  
ne <sourceport>|range <start-range> <end-range>}]  
[<destination> {eq <destport>|gt <destport>|lt <destport>|  
ne <destport>|range <start-range> <end-range>}]  
  
no <sequence-number>

| Parameter         | Description  |
|-------------------|--|
| <sequence-number> | <1-65535><br>The sequence number for the filter entry of the selected access control list.               |
| deny              | Access-list rejects packets that match the source and destination filtering specified with this command. |
| permit            | Access-list permits packets that match the source and destination filtering specified with this command. |
| send-to-cpu       | Specify packets to send to the CPU.  |
| copy-to-cpu       | Specify packets to copy to the CPU.  |
| copy-to-mirror    | Specify packets to copy to the mirror port.  |
| tcp               | TCP packets.   |
| udp               | UDP packets.   |

| Parameter   | Description   |                  |                                     |                                  |   |  |  |   |  |
|---|---|------------------|-------------------------------------|----------------------------------|---|--|--|---|--|
| <code>&lt;source&gt;</code>                           | <p>The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:</p> <table> <tr> <td><code>any</code></td><td>Matches any source IP address.</td></tr> <tr> <td><code>host&lt;ip-addr&gt;</code></td><td>Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.</td></tr> <tr> <td><code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code></td><td>An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.</td></tr> <tr> <td><code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code></td><td>Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code>.</td></tr> </table>                               | <code>any</code> | Matches any source IP address.      | <code>host&lt;ip-addr&gt;</code> | Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.      | <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code> | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.      | <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> . |
| <code>any</code>                                      | Matches any source IP address.  |                  |                                     |                                  |   |  |  |   |  |
| <code>host&lt;ip-addr&gt;</code>                      | Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.  |                  |                                     |                                  |   |  |  |   |  |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.   |                  |                                     |                                  |   |  |  |   |  |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> .  |                  |                                     |                                  |   |  |  |   |  |
| <code>&lt;sourceport&gt;</code>                       | The source TCP or UDP port number, specified as an integer between 0 and 65535.   |                  |                                     |                                  |   |  |  |   |  |
| <code>&lt;destination&gt;</code>                      | <p>The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination:</p> <table> <tr> <td><code>any</code></td><td>Matches any destination IP address.</td></tr> <tr> <td><code>host&lt;ip-addr&gt;</code></td><td>Matches a single destination host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.</td></tr> <tr> <td><code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code></td><td>An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.</td></tr> <tr> <td><code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code></td><td>Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code>.</td></tr> </table> | <code>any</code> | Matches any destination IP address. | <code>host&lt;ip-addr&gt;</code> | Matches a single destination host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation. | <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code> | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet. | <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> . |
| <code>any</code>                                      | Matches any destination IP address.   |                  |                                     |                                  |   |  |  |   |  |
| <code>host&lt;ip-addr&gt;</code>                      | Matches a single destination host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.   |                  |                                     |                                  |   |  |  |   |  |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.  |                  |                                     |                                  |   |  |  |   |  |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.1 0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> .  |                  |                                     |                                  |   |  |  |   |  |
| <code>eq</code>                                       | Equal to.   |                  |                                     |                                  |   |  |  |   |  |
| <code>lt</code>                                       | Less than.  |                  |                                     |                                  |   |  |  |   |  |
| <code>gt</code>                                       | Greater than.   |                  |                                     |                                  |   |  |  |   |  |
| <code>ne</code>                                       | Not equal to.   |                  |                                     |                                  |   |  |  |   |  |

| Parameter     | Description  |
|---------------|--|
| <destport>    | The destination TCP or UDP port number, specified as an integer between 0 and 65535. |
| range         | Specify the range of port numbers between 0 and 65535.                               |
| <start-range> | The source or destination port number at the start of the range <0-65535>.           |
| <end-range>   | The source or destination port number at the end of the range <0-65535>.             |

**Mode** IPv4 Hardware ACL Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicitly match a filter is permitted.

**Usage** First create a named hardware access-list that applies the appropriate permit/deny requirements. Then use the [access-group](#) command to apply this access-list to a specific port or range. Note that this command will apply the access-list only to **incoming** data packets.

An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number.

**NOTE:** The access control list being configured is selected by running the [access-list hardware \(named\)](#) command, with the required access control list number, or name, but with no further parameters selected.

Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Example** To add an access-list filter entry to access-list named `my-hw-list` that will permit TCP packets with a destination address of `192.168.1.1`, a destination port of `80`, and any source address, and source port, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware my-hw-list
awplus(config-ip-hw-acl)# permit tcp any 192.168.1.1/32 eq 80
```

**Related Commands**

- [access-list hardware \(named\)](#)
- [show running-config](#)
- [show access-list \(IPv4 Hardware ACLs\)](#)

## commit (IPv4)

**Overview** Use this command to commit the IPv4 ACL filter configuration entered at the console to the hardware immediately without exiting the IPv4 Hardware ACL Configuration mode.

This command forces the associated hardware and software IPv4 ACLs to synchronize.

**Syntax** `commit`

**Mode** IPv4 Hardware ACL Configuration

**Usage** Normally, when an IPv4 hardware ACL is edited, the new configuration state of the IPv4 ACL is not written to hardware until you exit IPv4 Hardware ACL Configuration mode. By entering this command you can ensure that the current state of a hardware access-list that is being edited is written to hardware immediately.

Scripts typically do not include the `exit` command to exit configuration modes, potentially leading to IPv4 ACL filters in hardware not being correctly updated. Using this **commit** command in a configuration script after specifying an IPv4 hardware ACL filter ensures that it is updated in the hardware immediately.

**Example** To update the hardware with the IPv4 ACL filter configuration, use the command:

```
awplus# configure terminal
awplus(config)# access-list hardware my-hw-list
awplus(config-ip-hw-acl)# commit
```

**Related Commands** [access-list hardware \(named\)](#)

# show access-list (IPv4 Hardware ACLs)

**Overview** Use this command to display the specified access-list, or all access-lists if none have been specified. Note that only defined access-lists are displayed. An error message is displayed for an undefined access-list.

**Syntax** `show access-list`  
`[<1-99>|<100-199>|<1300-1999>|<2000-2699>|<3000-3699>|<4000-4499>|<access-list-name>]`

| Parameter          | Description  |
|--------------------|--|
| <1-99>             | IP standard access-list.                             |
| <100-199>          | IP extended access-list.                             |
| <1300-1999>        | IP standard access-list (standard - expanded range). |
| <2000-2699>        | IP extended access-list (extended - expanded range). |
| <3000-3699>        | Hardware IP access-list.                             |
| <4000-4499>        | Hardware MAC access-list.                            |
| <access-list-name> | IP named access-list.                                |

**Mode** User Exec and Privileged Exec

**Examples** To show all access-lists configured on the switch:

```
awplus# show access-list
```

```
Standard IP access list 1
  deny 172.16.2.0, wildcard bits 0.0.0.255
Standard IP access list 20
  deny 192.168.10.0, wildcard bits 0.0.0.255
  deny 192.168.12.0, wildcard bits 0.0.0.255
Hardware IP access list 3001
  permit ip 192.168.20.0 255.255.255.0 any
Hardware IP access list 3020
  permit tcp any 192.0.2.0/24
awplus#show access-list 20
```

To show the access-list with an ID of 20:

```
awplus# show access-list 20
```

```
Standard IP access-list 20
  deny 192.168.10.0, wildcard bits 0.0.0.255
  deny 192.168.12.0, wildcard bits 0.0.0.255
```

Note the below error message if you attempt to show an undefined access-list:

```
awplus# show access-list 2
```

```
% Can't find access-list 2
```

**Related  
Commands**

[access-list extended \(named\)](#)  
[access-list \(hardware MAC numbered\)](#)  
[access-list hardware \(named\)](#)

# show interface access-group

**Overview** Use this command to display the access groups attached to a port. If an access group is specified, then the output only includes the ports that the specified access group is attached to. If no access group is specified then this command displays all access groups that are attached to the ports that are specified with <port-list>.

Note that **access group** is the term given for an access-list when it is applied to an interface.

**NOTE:** This command will function on your switch in stand-alone mode. but is not supported when the device forms part of a VCStack.

**Syntax** `show interface <port-list> access-group  
[<3000-3699>|<4000-4699>]`

| Parameter    | Description   |
|--------------|---|
| <port-list>  | Specify the ports to display information. A port-list can be either: <ul style="list-style-type: none"><li>• a switch port (e.g. port1.0.6) a static channel group (e.g. sa2) or a dynamic (LACP) channel group (e.g. po2)</li><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-1.0.6 or port1.0.1-port1.0.6 or po1-po2</li><li>• a comma-separated list of ports and port ranges, e.g. port1.0.1,port1.0.3-1.0.6. Do not mix switch ports, static channel groups, and LACP channel groups in the same list.</li></ul> |
| access group | Select the access group whose details you want to show.   |
| <3000-3699>  | Specifies the Hardware IP access-list.  |
| <4000-4699>  | Specifies the Hardware MAC access-list.   |

**Mode** User Exec and Privileged Exec

**Example** To show all access-lists attached to port1.0.1, use the command:

```
awplus# show interface port1.0.1 access-group
```

**Output** Figure 24-1: Example output from the show interface access-group command

```
Interface port1.0.1
  access-group 3000
  access-group 3002
  access-group 3001
```

**Related Commands** [access-group](#)



# 25

# IPv4 Software Access Control List (ACL) Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for the IPv4 Software Access Control List (ACL) commands, and contains detailed command information and command examples about IPv4 software ACLs as applied to Routing and Multicasting, which are not applied to interfaces.

For information about ACLs, see the [ACL Feature Overview and Configuration Guide](#).

To apply ACLs to an LACP channel group, apply it to all the individual switch ports in the channel group. To apply ACLs to a static channel group, apply it to the static channel group itself. For more information on link aggregation see the following references:

- the [Link Aggregation Feature Overview\\_and\\_Configuration Guide](#).
- [Link Aggregation Commands](#)

**NOTE:** Text in parenthesis in command names indicates usage not keyword entry. For example, **access-list hardware (named)** indicates named IPv4 hardware ACLs entered as `access-list hardware <name>` where <name> is a placeholder not a keyword.

Parenthesis surrounding ACL filters indicates the type of ACL filter not the keyword entry in the CLI, such as **(access-list standard numbered filter)** represents command entry in the format shown in the syntax `[<sequence-number>] {deny|permit} {<source>|host <host-address>|any}`.

Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Sub-modes** Many of the ACL commands operate from sub-modes that are specific to particular ACL types. The following table shows the CLI prompts at which ACL commands are entered.

Table 25-1: IPv4 Software Access List Commands and Prompts

| Command Name                              | Command Mode                    | Prompt                       |
|---|---------------------------------|------------------------------|
| show ip access-list                       | Privileged Exec                 | awplus#                      |
| access-group                              | Global Configuration            | awplus (config) #            |
| access-list (extended named)              | Global Configuration            | awplus (config) #            |
| access-list (extended numbered)           | Global Configuration            | awplus (config) #            |
| access-list (standard named)              | Global Configuration            | awplus (config) #            |
| access-list (standard numbered)           | Global Configuration            | awplus (config) #            |
| maximum-access-list                       | Global Configuration            | awplus (config) #            |
| dos                                       | Interface Configuration         | awplus (config-if) #         |
| (access-list extended ICMP filter)        | IPv4 Extended ACL Configuration | awplus (config-ip-ext-acl) # |
| (access-list extended IPfilter)           | IPv4 Extended ACL Configuration | awplus (config-ip-ext-acl) # |
| (access-list extended IP protocol filter) | IPv4 Extended ACL Configuration | awplus (config-ip-ext-acl) # |
| (access-list extended TCP UDP filter)     | IPv4 Extended ACL Configuration | awplus (config-ip-ext-acl) # |
| (access-list standard named filter)       | IPv4 Standard ACL Configuration | awplus (config-ip-std-acl) # |
| (access-list standard numbered filter)    | IPv4 Standard ACL Configuration | awplus (config-ip-std-acl) # |

- Command List**
- “[access-list extended \(named\)](#)” on page 944
  - “[access-list \(extended numbered\)](#)” on page 952
  - “[\(access-list extended ICMP filter\)](#)” on page 954
  - “[\(access-list extended IP filter\)](#)” on page 956
  - “[\(access-list extended IP protocol filter\)](#)” on page 959
  - “[\(access-list extended TCP UDP filter\)](#)” on page 963
  - “[access-list standard \(named\)](#)” on page 966
  - “[access-list \(standard numbered\)](#)” on page 968
  - “[\(access-list standard named filter\)](#)” on page 970
  - “[\(access-list standard numbered filter\)](#)” on page 972
  - “[clear ip prefix-list](#)” on page 974
  - “[dos](#)” on page 975
  - “[maximum-access-list](#)” on page 978

- [“show access-list \(IPv4 Software ACLs\)”](#) on page 979
- [“show dos interface”](#) on page 981
- [“show ip access-list”](#) on page 984
- [“vty access-class \(numbered\)”](#) on page 985

## access-list extended (named)

**Overview** This command configures an extended named access-list that permits or denies packets from specific source and destination IP addresses. You can either create an extended named ACL together with an ACL filter entry in the Global Configuration mode, or you can use the IPv4 Extended ACL Configuration mode for sequenced ACL filter entry after entering a list name.

The **no** variant of this command removes a specified extended named access-list.

**Syntax [list-name]** `access-list extended <list-name>`  
`no access-list extended <list-name>`

| Parameter   | Description                             |
|-------------|---|
| <list-name> | A user-defined name for the access-list |

**Syntax [icmp]** `access-list extended <list-name>{deny|permit} icmp <source> <destination> [icmp-type <type-number>] [log]`  
`no access-list extended <list-name>{deny|permit} icmp <source> <destination> [icmp-type <type-number>] [log]`

Table 25-2: Parameters in the access-list extended (named) command - icmp

| Parameter   | Description   |
|-------------|---|
| <list-name> | A user-defined name for the access-list.  |
| deny        | The access-list rejects packets that match the type, source, and destination filtering specified with this command. |
| permit      | The access-list permits packets that match the type, source, and destination filtering specified with this command. |
| icmp        | The access-list matches only ICMP packets.  |
| icmp-type   | Matches only a specified type of ICMP messages. This is valid only when the filtering is set to match ICMP packets. |

Table 25-2: Parameters in the access-list extended (named) command - icmp

| Parameter                                       | Description   |
|---|---|
| <i>&lt;source&gt;</i>                           | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:                |
| <i>any</i>                                      | Matches any source IP address.  |
| <i>host&lt;ip-addr&gt;</i>                      | Matches a single source host with the IP address given by <i>&lt;ip-addr&gt;</i> in dotted decimal notation.  |
| <i>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</i>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.                                     |
| <i>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</i> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.10.0.0.255 is the same as entering 192.168.1.1/24.                  |
| <i>&lt;destination&gt;</i>                      | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination: |
| <i>any</i>                                      | Matches any destination IP address.   |
| <i>host&lt;ip-addr&gt;</i>                      | Matches a single destination host with the IP address given by <i>&lt;ip-addr&gt;</i> in dotted decimal notation.   |
| <i>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</i>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.                                |
| <i>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</i> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.10.0.0.255 is the same as entering 192.168.1.1/24.                  |

Table 25-2: Parameters in the access-list extended (named) command - icmp

| Parameter     | Description   |
|---------------|---|
| <type-number> | The ICMP type, as defined in RFC792 and RFC950. Specify one of the following integers to create a filter for the ICMP message type: |
| 0             | Echo replies.   |
| 3             | Destination unreachable messages.   |
| 4             | Source quench messages.   |
| 5             | Redirect (change route) messages.   |
| 8             | Echo requests.  |
| 11            | Time exceeded messages.   |
| 12            | Parameter problem messages.   |
| 13            | Timestamp requests.   |
| 14            | Timestamp replies.  |
| 15            | Information requests.   |
| 16            | Information replies.  |
| 17            | Address mask requests.  |
| 18            | Address mask replies.   |
| log           | Logs the results.   |

### Syntax [tcp|udp]

```
access-list extended <list-name> {deny|permit} {tcp|udp}
<source> [eq <sourceport>|lt <sourceport>|gt <sourceport>|ne
<sourceport>] <destination> [eq <destport>|lt <destport>|gt
<destport>|ne <destport>] [log]
```

```
no access-list extended <list-name> {deny|permit} {tcp|udp}
<source> [eq <sourceport>|lt <sourceport>|gt <sourceport>|ne
<sourceport>] <destination> [eq <destport> |lt <destport>|gt
<destport>|ne <destport>] [log]
```

Table 25-3: Parameters in the access-list extended (named) command - tcp|udp

| Parameter   | Description   |
|-------------|---|
| <list-name> | A user-defined name for the access-list.  |
| deny        | The access-list rejects packets that match the type, source, and destination filtering specified with this command. |
| permit      | The access-list permits packets that match the type, source, and destination filtering specified with this command. |
| tcp         | The access-list matches only TCP packets.   |
| udp         | The access-list matches only UDP packets.   |

Table 25-3: Parameters in the access-list extended (named) command - tcp|udp

| Parameter   | Description   |
|---|---|
| <code>&lt;source&gt;</code>                           | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:                            |
| <code>any</code>                                      | Matches any source IP address.  |
| <code>host&lt;ip-addr&gt;</code>                      | Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.  |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.   |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.10.0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> . |
| <code>&lt;destination&gt;</code>                      | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination:             |
| <code>any</code>                                      | Matches any destination IP address.   |
| <code>host&lt;ip-addr&gt;</code>                      | Matches a single destination host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.   |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.  |
| <code>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</code> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering <code>192.168.1.10.0.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> . |
| <code>&lt;sourceport&gt;</code>                       | The source port number, specified as an integer between 0 and 65535.  |
| <code>&lt;destport&gt;</code>                         | The destination port number, specified as an integer between 0 and 65535.   |
| <code>eq</code>                                       | Matches port numbers equal to the port number specified immediately after this parameter.   |
| <code>lt</code>                                       | Matches port numbers less than the port number specified immediately after this parameter.  |
| <code>gt</code>                                       | Matches port numbers greater than the port number specified immediately after this parameter.   |

Table 25-3: Parameters in the access-list extended (named) command - tcp|udp

| Parameter | Description   |
|-----------|---|
| ne        | Matches port numbers not equal to the port number specified immediately after this parameter. |
| log       | Log the results.  |

**Syntax**  
**[proto|any|ip]**

```
access-list extended <list-name> {deny|permit} {proto
<ip-protocol>|any|ip} {<source>} {<destination>} [log]
no access-list extended <list-name>{deny|permit} {proto
<ip-protocol>|any|ip}{<source>}{<destination>} [log]
```

Table 25-4: Parameters in the access-list extended (named) command -  
proto|ip|any

| Parameter   | Description   |
|-------------|---|
| <list-name> | A user-defined name for the access-list.  |
| deny        | The access-list rejects packets that match the type, source, and destination filtering specified with this command.   |
| permit      | The access-list permits packets that match the type, source, and destination filtering specified with this command.   |
| proto       | Matches only a specified type of IP Protocol.   |
| any         | The access-list matches any type of IP packet.  |
| ip          | The access-list matches only IP packets.  |
| <source>    | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:                        |
|             | any Matches any source IP address.  |
|             | host<ip-addr> Matches a single source host with the IP address given by <ip-addr> in dotted decimal notation.   |
|             | <ip-addr>/<prefix> An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.                          |
|             | <ip-addr><reverse-mask> Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.1 0.0.0.255 is the same as entering 192.168.1.1/24. |



Table 25-4: Parameters in the access-list extended (named) command -  
proto|ip|any (cont.)

| Parameter                   | Description   |
|-----------------------------|---|
| <destination>               | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination:   |
| any                         | Matches any destination IP address.   |
| host<ip-addr>               | Matches a single destination host with the IP address given by <ip-addr> in dotted decimal notation.  |
| <ip-addr>/<br><prefix>      | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.  |
| <ip-addr><br><reverse-mask> | Alternatively, you can enter a reverse mask in dotted decimal format. For example, entering 192.168.1.1 0.0.0.255 is the same as entering 192.168.1.1/24.   |
| log                         | Logs the results.   |
| <ip-protocol>               | The IP protocol number, as defined by IANA (Internet Assigned Numbers Authority)<br><a href="http://www.iana.org/assignments/protocol-numbers">www.iana.org/assignments/protocol-numbers</a><br>See below for a list of IP protocol numbers and their descriptions. |

Table 25-5: IP protocol number and description

| Protocol Number | Protocol Description [RFC]                             |
|-----------------|--|
| 1               | Internet Control Message [RFC792]                      |
| 2               | Internet Group Management [RFC1112]                    |
| 3               | Gateway-to-Gateway [RFC823]                            |
| 4               | IP in IP [RFC2003]                                     |
| 5               | Stream [RFC1190] [RFC1819]                             |
| 6               | TCP (Transmission Control Protocol) [RFC793]           |
| 8               | EGP (Exterior Gateway Protocol) [RFC888]               |
| 9               | IGP (Interior Gateway Protocol) [IANA]                 |
| 11              | Network Voice Protocol [RFC741]                        |
| 17              | UDP (User Datagram Protocol) [RFC768]                  |
| 20              | Host monitoring [RFC869]                               |
| 27              | RDP (Reliable Data Protocol) [RFC908]                  |
| 28              | IRTP (Internet Reliable Transaction Protocol) [RFC938] |

Table 25-5: IP protocol number and description (cont.)

| Protocol Number | Protocol Description [RFC]                            |
|-----------------|---|
| 29              | ISO-TP4 (ISO Transport Protocol Class 4) [RFC905]     |
| 30              | Bulk Data Transfer Protocol [RFC969]                  |
| 33              | DCCP (Datagram Congestion Control Protocol) [RFC4340] |
| 48              | DSR (Dynamic Source Routing Protocol) [RFC4728]       |
| 50              | ESP (Encap Security Payload) [RFC2406]                |
| 51              | AH (Authentication Header) [RFC2402]                  |
| 54              | NARP (NBMA Address Resolution Protocol) [RFC1735]     |
| 58              | ICMP for IPv6 [RFC1883]                               |
| 59              | No Next Header for IPv6 [RFC1883]                     |
| 60              | Destination Options for IPv6 [RFC1883]                |
| 88              | EIGRP (Enhanced Interior Gateway Routing Protocol)    |
| 89              | OSPFv2 [RFC1583]                                      |
| 97              | Ethernet-within-IP Encapsulation / RFC3378            |
| 98              | Encapsulation Header / RFC1241                        |
| 108             | IP Payload Compression Protocol / RFC2393             |
| 112             | Virtual Router Redundancy Protocol / RFC3768          |
| 134             | RSVP-E2E-IGNORE / RFC3175                             |
| 135             | Mobility Header / RFC3775                             |
| 136             | UDPLite / RFC3828                                     |
| 137             | MPLS-in-IP / RFC4023                                  |
| 138             | MANET Protocols / RFC-ietf-manet-iana-07.txt          |
| 139-252         | Unassigned / IANA                                     |
| 253             | Use for experimentation and testing / RFC3692         |
| 254             | Use for experimentation and testing / RFC3692         |
| 255             | Reserved / IANA                                       |

**Mode** Global Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** Use this command when configuring access-lists for filtering IP software packets. You can either create access-lists from within this command, or you can enter **access-list extended** followed by only the name. Entering only the name moves you to the IPv4 Extended ACL Configuration mode for the selected access-list.

From there you can configure your access-lists by using the commands ([access-list extended ICMP filter](#)), ([access-list extended IP filter](#)), and ([access-list extended IP protocol filter](#)).

Note that packets must match both the source and the destination details.

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Examples** You can enter the extended named ACL in the Global Configuration mode together with the ACL filter entry on the same line, as shown below:

```
awplus# configure terminal
awplus(config)# access-list extended TK deny tcp 2.2.2.3/24 eq
14 3.3.3.4/24 eq 12 log
```

Alternatively, you can enter the extended named ACL in Global Configuration mode before specifying the ACL filter entry in the IPv4 Extended ACL Configuration mode, as shown below:

```
awplus# configure terminal
awplus(config)# access-list extended TK
awplus(config-ip-ext-acl)# deny tcp 2.2.2.3/24 eq 14 3.3.3.4/24
eq 12 log
```

# access-list (extended numbered)

**Overview** This command configures an extended numbered access-list that permits or denies packets from specific source and destination IP addresses. You can either create an extended numbered ACL together with an ACL filter entry in the Global Configuration mode, or you can use the IPv4 Extended ACL Configuration mode for sequenced ACL filter entry after entering a list number.

The **no** variant of this command removes a specified extended named access-list.

**Syntax [list-number]**

```
access-list {<100-199>|<2000-2699>}  
no access-list {<100-199>|<2000-2699>}
```

| Parameter   | Description                               |
|-------------|---|
| <100-199>   | IP extended access-list.                  |
| <2000-2699> | IP extended access-list (expanded range). |

**Syntax [deny|permit]**

```
access-list {<100-199>|<2000-2699>} {deny|permit} ip <source>  
<destination>  
no access-list {<100-199>|<2000-2699>} {deny|permit} ip <source>  
<destination>
```

| Parameter                   | Description  |
|-----------------------------|--|
| <100-199>                   | IP extended access-list.   |
| <2000-2699>                 | IP extended access-list (expanded range).  |
| deny                        | Access-list rejects packets that match the source and destination filtering specified with this command.   |
| permit                      | Access-list permits packets that match the source and destination filtering specified with this command.   |
| <source>                    | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:   |
| any                         | Matches any source IP address.   |
| host<ip-addr>               | Matches a single source host with the IP address given by <ip-addr> in dotted decimal notation.  |
| <ip-addr><br><reverse-mask> | An IPv4 address, followed by a reverse mask in dotted decimal format. For example, entering 192.168.1.10.0.0.255 is the same as entering 192.168.1.1/24. This matches any source IP address within the specified subnet. |

| Parameter                   | Description   |
|-----------------------------|---|
| <destination>               | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination:   |
| any                         | Matches any destination IP address.   |
| host<ip-addr>               | Matches a single destination host with the IP address given by <ip-addr> in dotted decimal notation.  |
| <ip-addr><br><reverse-mask> | An IPv4 address, followed by a reverse mask in dotted decimal format. For example, entering 192.168.1.10.0.0.255 is the same as entering 192.168.1.1/24. This matches any destination IP address within the specified subnet. |

**Mode** Global Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** Use this command when configuring access-list for filtering IP software packets.

You can either create access-lists from within this command, or you can enter **access-list** followed by only the number. Entering only the number moves you to the IPv4 Extended ACL Configuration mode for the selected access-list. From there you can configure your access-lists by using the commands [\(access-list extended ICMP filter\)](#), [\(access-list extended IP filter\)](#), and [\(access-list extended IP protocol filter\)](#).

Note that packets must match both the source and the destination details.

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Examples** You can enter the extended ACL in the Global Configuration mode together with the ACL filter entry on the same line, as shown below:

```
awplus# configure terminal
awplus(config)# access-list 101 deny ip 172.16.10.0 0.0.0.255
any
```

Alternatively, you can enter the extended ACL in Global Configuration mode before specifying the ACL filter entry in the IPv4 Extended ACL Configuration mode, as shown below:

```
awplus# configure terminal
awplus(config)# access-list 101
awplus(config-ip-ext-acl)# deny ip 172.16.10.0 0.0.0.255 any
```

## (access-list extended ICMP filter)

**Overview** Use this ACL filter to add a new ICMP filter entry to the current extended access-list. If the sequence number is specified, the new filter is inserted at the specified location. Otherwise, the new filter is added at the end of the access-list.

The **no** variant of this command removes an ICMP filter entry from the current extended access-list. You can specify the ICMP filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its ICMP filter profile without specifying its sequence number.

Note that the sequence number can be found by running the [show access-list \(IPv4 Software ACLs\)](#) command.

**Syntax [icmp]** [`<sequence-number>`] {deny|permit} icmp `<source>` `<destination>`  
[icmp-type `<icmp-value>`] [log]

`no` {deny|permit} icmp `<source>` `<destination>`[icmp-type  
`<icmp-value>`] [log]

`no` `<sequence-number>`

| Parameter                            | Description  |
|--------------------------------------|--|
| <code>&lt;sequence-number&gt;</code> | <code>&lt;1-65535&gt;</code><br>The sequence number for the filter entry of the selected access control list.  |
| deny                                 | Access-list rejects packets that match the source and destination filtering specified with this command.   |
| permit                               | Access-list permits packets that match the source and destination filtering specified with this command.   |
| icmp                                 | ICMP packet type.  |
| <code>&lt;source&gt;</code>          | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:                             |
|                                      | <code>&lt;ip-addr&gt;/&lt;prefix&gt;</code> An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.      |
|                                      | any Matches any source IP address.   |
| <code>&lt;destination&gt;</code>     | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination:              |
|                                      | <code>&lt;ip-addr&gt;/&lt;prefix&gt;</code> An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet. |
|                                      | any Matches any destination IP address.  |

| Parameter    | Description                 |
|--------------|-----------------------------|
| icmp-type    | The ICMP type.              |
| <icmp-value> | The value of the ICMP type. |
| log          | Log the results.            |

**Mode** IPv4 Extended ACL Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number.

**NOTE:** The access control list being configured is selected by running the *access-list (extended numbered)* command or the *access-list extended (named)* command, with the required access control list number, or name - but with no further parameters selected.

Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Examples** To add a new entry in access-list called `my-list` that will reject ICMP packets from 10.0.0.1 to 192.168.1.1, use the commands:

```
awplus# configure terminal
awplus(config)# access-list extended my-list
awplus(config-ip-ext-acl)# deny icmp 10.0.0.1/32 192.168.1.1/32
```

Use the following commands to add a new filter at sequence number 5 position of the access-list called `my-list`. The filter will accept the ICMP type 8 packets from 10.1.1.0/24 network, to 192.168.1.0 network:

```
awplus# configure terminal
awplus(config)# access-list extended my-list
awplus(config-ip-ext-acl)# 5 permit icmp 10.1.1.0/24
192.168.1.0/24 icmp-type 8
```

## (access-list extended IP filter)

**Overview** Use this ACL filter to add a new IP filter entry to the current extended access-list. If the sequence number is specified, the new filter is inserted at the specified location. Otherwise, the new filter is added at the end of the access-list.

The **no** variant of this command removes an IP filter entry from the current extended access-list. You can specify the IP filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its IP filter profile without specifying its sequence number.

Note that the sequence number can be found by running the [show access-list \(IPv4 Software ACLs\)](#) command.

**Syntax [ip]** [`<sequence-number>`] {deny|permit} ip `<source>` `<destination>`  
`no` {deny|permit} ip `<source>` `<destination>`  
`no` `<sequence-number>`

| Parameter   | Description   |     |                                |                                   |  |   |   |
|---|---|-----|--------------------------------|-----------------------------------|--|---|---|
| <code>&lt;sequence-number&gt;</code>                              | <code>&lt;1-65535&gt;</code><br>The sequence number for the filter entry of the selected access control list.   |     |                                |                                   |  |   |   |
| deny  | Access-list rejects packets that match the source and destination filtering specified with this command.  |     |                                |                                   |  |   |   |
| permit  | Access-list permits packets that match the source and destination filtering specified with this command.  |     |                                |                                   |  |   |   |
| <code>&lt;source&gt;</code>                                       | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source: <table><tr><td>any</td><td>Matches any source IP address.</td></tr><tr><td>host<code>&lt;ip-addr&gt;</code></td><td>Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.</td></tr><tr><td><code>&lt;ip-addr&gt;</code><br/><code>&lt;reverse-mask&gt;</code></td><td>Alternatively, enter an IPv4 address followed by a reverse mask in dotted decimal format. For example, enter 192.168.1.1 0.0.0.255.</td></tr></table> | any | Matches any source IP address. | host <code>&lt;ip-addr&gt;</code> | Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation. | <code>&lt;ip-addr&gt;</code><br><code>&lt;reverse-mask&gt;</code> | Alternatively, enter an IPv4 address followed by a reverse mask in dotted decimal format. For example, enter 192.168.1.1 0.0.0.255. |
| any   | Matches any source IP address.  |     |                                |                                   |  |   |   |
| host <code>&lt;ip-addr&gt;</code>                                 | Matches a single source host with the IP address given by <code>&lt;ip-addr&gt;</code> in dotted decimal notation.  |     |                                |                                   |  |   |   |
| <code>&lt;ip-addr&gt;</code><br><code>&lt;reverse-mask&gt;</code> | Alternatively, enter an IPv4 address followed by a reverse mask in dotted decimal format. For example, enter 192.168.1.1 0.0.0.255.   |     |                                |                                   |  |   |   |



| Parameter                   | Description   |
|-----------------------------|---|
| <destination>               | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination: |
| any                         | Matches any destination IP address.   |
| host<ip-addr>               | Matches a single destination host with the IP address given by <ip-addr> in dotted decimal notation.  |
| <ip-addr><br><reverse-mask> | Alternatively, enter an IPv4 address followed by a reverse mask in dotted decimal format. For example, enter 192.168.1.1 0.0.0.255.                                       |

**Mode** Extended ACL Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number.

**NOTE:** The access control list being configured is selected by running the *access-list (extended numbered)* command or the *access-list extended (named)* command, with the required access control list number, or name - but with no further parameters selected.

Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Example 1 [list-number]** First use the following commands to enter the IPv4 Extended ACL Configuration mode and define a numbered extended access-list 101:

```
awplus# configure terminal
awplus(config)# access-list 101
awplus(config-ip-ext-acl)#
```

Then use the following commands to add a new entry to the numbered extended access-list 101 that will reject packets from 10.0.0.1 to 192.168.1.1:

```
awplus(config-ip-ext-acl)# deny ip host 10.0.0.1 host
192.168.1.1
awplus(config-ip-ext-acl)# 20 permit ip any any
```

**Example 2 [list-name]** First use the following commands to enter the IPv4 Extended ACL Configuration mode and define a named access-list called my-acl:

```
awplus# configure terminal
awplus(config)# access-list extended my-acl
awplus(config-ip-ext-acl)#
```

Then use the following commands to add a new entry to the named access-list `my-acl` that will reject packets from `10.0.0.1` to `192.168.1.1`:

```
awplus(config-ip-ext-acl)# deny ip host 10.0.0.1 host  
192.168.1.1
```

```
awplus(config-ip-ext-acl)# 20 permit ip any any
```

**Example 3** Use the following commands to remove the access-list filter entry with sequence  
**[list-number]** number 20 from extended numbered access-list 101.

```
awplus# configure terminal  
awplus(config)# access-list 101  
awplus(config-ip-ext-acl)# no 20
```

**Example 4** Use the following commands to remove the access-list filter entry with sequence  
**[list-name]** number 20 from extended named access-list `my-acl`:

```
awplus# configure terminal  
awplus(config)# access-list extended my-acl  
awplus(config-ip-ext-acl)# no 20
```

## (access-list extended IP protocol filter)

**Overview** Use this ACL filter to add a new IP protocol type filter entry to the current extended access-list. If the sequence number is specified, the new filter is inserted at the specified location. Otherwise, the new filter is added at the end of the access-list.

The **no** variant of this command removes an IP protocol filter entry from the current extended access-list. You can specify the IP filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its IP filter profile without specifying its sequence number.

Note that the sequence number can be found by running the [show access-list \(IPv4 Software ACLs\)](#) command.

**Syntax [proto]** [`<sequence-number>`] {deny|permit} proto `<ip-protocol>` `<source>` `<destination>` [log]  
  
no {deny|permit} proto `<ip-protocol>` `<source>` `<destination>` [log]  
  
no `<sequence-number>`

| Parameter                                 | Description   |
|---|---|
| <code>&lt;sequence-number&gt;</code>      | <code>&lt;1-65535&gt;</code><br>The sequence number for the filter entry of the selected access control list.   |
| deny                                      | Access-list rejects packets that match the source and destination filtering specified with this command.  |
| permit                                    | Access-list permits packets that match the source and destination filtering specified with this command.  |
| proto<br><code>&lt;ip-protocol&gt;</code> | <code>&lt;1-255&gt;</code><br>Specify IP protocol number, as defined by IANA (Internet Assigned Numbers Authority)<br><a href="http://www.iana.org/assignments/protocol-numbers">www.iana.org/assignments/protocol-numbers</a><br>See below for a list of IP protocol numbers and their descriptions. |
| <code>&lt;source&gt;</code>               | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source:  |
|   | <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code><br>An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.   |
|   | any<br>Matches any source IP address.   |

| Parameter  | Description   |
|--|---|
| <code>&lt;destination&gt;</code>                 | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination: |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code> | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.                                |
| <code>any</code>                                 | Matches any destination IP address.   |
| <code>log</code>                                 | Log the results.  |

Table 25-6: IP protocol number and description

| Protocol Number | Protocol Description [RFC]                             |
|-----------------|--|
| 1               | Internet Control Message [RFC792]                      |
| 2               | Internet Group Management [RFC1112]                    |
| 3               | Gateway-to-Gateway [RFC823]                            |
| 4               | IP in IP [RFC2003]                                     |
| 5               | Stream [RFC1190] [RFC1819]                             |
| 6               | TCP (Transmission Control Protocol) [RFC793]           |
| 8               | EGP (Exterior Gateway Protocol) [RFC888]               |
| 9               | IGP (Interior Gateway Protocol) [IANA]                 |
| 11              | Network Voice Protocol [RFC741]                        |
| 17              | UDP (User Datagram Protocol) [RFC768]                  |
| 20              | Host monitoring [RFC869]                               |
| 27              | RDP (Reliable Data Protocol) [RFC908]                  |
| 28              | IRTP (Internet Reliable Transaction Protocol) [RFC938] |
| 29              | ISO-TP4 (ISO Transport Protocol Class 4) [RFC905]      |
| 30              | Bulk Data Transfer Protocol [RFC969]                   |
| 33              | DCCP (Datagram Congestion Control Protocol) [RFC4340]  |
| 48              | DSR (Dynamic Source Routing Protocol) [RFC4728]        |
| 50              | ESP (Encap Security Payload) [RFC2406]                 |
| 51              | AH (Authentication Header) [RFC2402]                   |
| 54              | NARP (NBMA Address Resolution Protocol) [RFC1735]      |
| 58              | ICMP for IPv6 [RFC1883]                                |
| 59              | No Next Header for IPv6 [RFC1883]                      |

Table 25-6: IP protocol number and description (cont.)

| Protocol Number | Protocol Description [RFC]                         |
|-----------------|--|
| 60              | Destination Options for IPv6 [RFC1883]             |
| 88              | EIGRP (Enhanced Interior Gateway Routing Protocol) |
| 89              | OSPFv2 [RFC1583]                                   |
| 97              | Ethernet-within-IP Encapsulation / RFC3378         |
| 98              | Encapsulation Header / RFC1241                     |
| 108             | IP Payload Compression Protocol / RFC2393          |
| 112             | Virtual Router Redundancy Protocol / RFC3768       |
| 134             | RSVP-E2E-IGNORE / RFC3175                          |
| 135             | Mobility Header / RFC3775                          |
| 136             | UDPLite / RFC3828                                  |
| 137             | MPLS-in-IP / RFC4023                               |
| 138             | MANET Protocols / RFC-ietf-manet-iana-07.txt       |
| 139-252         | Unassigned / IANA                                  |
| 253             | Use for experimentation and testing / RFC3692      |
| 254             | Use for experimentation and testing / RFC3692      |
| 255             | Reserved / IANA                                    |

**Mode** IPv4 Extended ACL Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number.

**NOTE:** The access control list being configured is selected by running the *access-list (extended numbered)* command or the *access-list extended (named)* command, with the required access control list number, or name - but with no further parameters selected.

Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Example 1 [creating a list]** Use the following commands to add a new access-list filter entry to the access-list named `my-list` that will reject IP packets from source address `10.10.1.1/32` to destination address `192.68.1.1/32`:

```
awplus# configure terminal
awplus(config)# access-list extended my-list
awplus(config-ip-ext-acl)# deny ip 10.10.1.1/32 192.168.1.1/32
```

**Example 2** Use the following commands to add a new access-list filter entry at sequence  
**[adding to a list]** position 5 in the access-list named `my-list` that will accept packets from source  
address `10.10.1.1/24` to destination address `192.68.1.1/24`:

```
awplus# configure terminal
awplus(config)# access-list extended my-list
awplus(config-ip-ext-acl)# 5 permit ip 10.10.1.1/24
192.168.1.1/ 24
```

## (access-list extended TCP UDP filter)

**Overview** Use this ACL filter to add a new TCP or UDP filter entry to the current extended access-list. If the sequence number is specified, the new filter is inserted at the specified location. Otherwise, the new filter is added at the end of the access-list.

The **no** variant of this command removes a TCP or UDP filter entry from the current extended access-list. You can specify the TCP or UDP filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its TCP or UDP filter profile without specifying its sequence number.

Note that the sequence number can be found by running the [show access-list \(IPv4 Software ACLs\)](#) command.

**Syntax [tcp|udp]** [*<sequence-number>*] {deny|permit} {tcp|udp} *<source>* {eq *<sourceport>* |lt *<sourceport>*|gt *<sourceport>*|ne *<sourceport>*} *<destination>* [eq *<destport>*|lt *<destport>*|gt *<destport>*|ne *<destport>*] [log]

no [*<sequence-number>*] {deny|permit} {tcp|udp} *<source>* {eq *<sourceport>* |lt *<sourceport>*|gt *<sourceport>*|ne *<sourceport>*} *<destination>* [eq *<destport>*|lt *<destport>*|gt *<destport>*|ne *<destport>*] [log]

no *<sequence-number>*

| Parameter                             | Description   |                                       |   |     |                                |
|---------------------------------------|---|---------------------------------------|---|-----|--------------------------------|
| <i>&lt;sequence-number&gt;</i>        | <1-65535><br>The sequence number for the filter entry of the selected access control list.  |                                       |   |     |                                |
| deny                                  | Access-list rejects packets that match the source and destination filtering specified with this command.  |                                       |   |     |                                |
| permit                                | Access-list permits packets that match the source and destination filtering specified with this command.  |                                       |   |     |                                |
| tcp                                   | The access-list matches only TCP packets.   |                                       |   |     |                                |
| udp                                   | The access-list matches only UDP packets.   |                                       |   |     |                                |
| <i>&lt;source&gt;</i>                 | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source: <table><tr><td><i>&lt;ip-addr&gt;/&lt;prefix&gt;</i></td><td>An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.</td></tr><tr><td>any</td><td>Matches any source IP address.</td></tr></table> | <i>&lt;ip-addr&gt;/&lt;prefix&gt;</i> | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet. | any | Matches any source IP address. |
| <i>&lt;ip-addr&gt;/&lt;prefix&gt;</i> | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.   |                                       |   |     |                                |
| any                                   | Matches any source IP address.  |                                       |   |     |                                |
| <i>&lt;sourceport&gt;</i>             | The source port number, specified as an integer between 0 and 65535.  |                                       |   |     |                                |

| Parameter  | Description   |
|--|---|
| <code>&lt;destination&gt;</code>                 | The destination address of the packets. You can specify a single host, a subnet, or all destinations. The following are the valid formats for specifying the destination: |
| <code>&lt;ip-addr&gt;/<br/>&lt;prefix&gt;</code> | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.                                |
| <code>any</code>                                 | Matches any destination IP address.   |
| <code>&lt;destport&gt;</code>                    | The destination port number, specified as an integer between 0 and 65535.   |
| <code>eq</code>                                  | Matches port numbers equal to the port number specified immediately after this parameter.   |
| <code>lt</code>                                  | Matches port numbers less than the port number specified immediately after this parameter.  |
| <code>gt</code>                                  | Matches port numbers greater than the port number specified immediately after this parameter.   |
| <code>ne</code>                                  | Matches port numbers not equal to the port number specified immediately after this parameter.   |
| <code>log</code>                                 | Log the results.  |

**Mode** IPv4 Extended ACL Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number.

**NOTE:** The access control list being configured is selected by running the [access-list \(extended numbered\)](#) command or the [access-list extended \(named\)](#) command, with the required access control list number, or name - but with no further parameters selected.

Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Example 1 [creating a list]** To add a new entry to the access-list named `my-list` that will reject TCP packets from `10.0.0.1` on TCP port 10 to `192.168.1.1` on TCP port 20, use the commands:

```
awplus# configure terminal
awplus(config)# access-list extended my-list
awplus(config-ip-ext-acl)# deny tcp 10.0.0.1/32 eq 10
192.168.1.1/32 eq 20
```



**Example 2** To insert a new entry with sequence number 5 of the access-list named `my-list`  
**[adding to a list]** that will accept UDP packets from `10.1.1.0/24` network to `192.168.1.0/24` network on UDP port 80, use the commands:

```
awplus# configure terminal
awplus(config)# access-list extended my-list
awplus(config-ip-ext-acl)# 5 permit udp 10.1.1.0/24
192.168.1.0/24 eq 80
```

## access-list standard (named)

**Overview** This command configures a standard named access-list that permits or denies packets from a specific source IP address. You can either create a standard named ACL together with an ACL filter entry in the Global Configuration mode, or you can use the IPv4 Standard ACL Configuration mode for sequenced ACL filter entry after first entering an access-list name.

The **no** variant of this command removes a specified standard named access-list.

**Syntax**  
**[list-name]** access-list standard <standard-access-list-name>  
no access-list standard <standard-access-list-name>

| Parameter                   | Description                                  |
|-----------------------------|--|
| <standard-access-list-name> | Specify a name for the standard access-list. |

**Syntax**  
**[deny|permit]** access-list standard <standard-access-list-name> {deny|permit} <source>  
no access-list standard <standard-access-list-name> {deny|permit} <source>

| Parameter                   | Description  |                    |   |     |                                |
|-----------------------------|--|--------------------|---|-----|--------------------------------|
| <standard-access-list-name> | Specify a name for the standard access-list.   |                    |   |     |                                |
| deny                        | The access-list rejects packets that match the source filtering specified with this command.   |                    |   |     |                                |
| permit                      | The access-list permits packets that match the source filtering specified with this command.   |                    |   |     |                                |
| <source>                    | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source: <table><tr><td>&lt;ip-addr&gt;/&lt;prefix&gt;</td><td>An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.</td></tr><tr><td>any</td><td>Matches any source IP address.</td></tr></table> | <ip-addr>/<prefix> | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet. | any | Matches any source IP address. |
| <ip-addr>/<prefix>          | An IPv4 address, followed by a forward slash, then the prefix length. This matches any source IP address within the specified subnet.  |                    |   |     |                                |
| any                         | Matches any source IP address.   |                    |   |     |                                |

**Mode** Global Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** Use this command when configuring a standard named access-list for filtering IP software packets.

You can either create access-lists from within this command, or you can enter **access-list standard** followed by only the name. Entering only the name moves you to the IPv4 Standard ACL Configuration mode for the selected access-list. From there you can configure your access-lists by using the command ([access-list standard named filter](#)).

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Examples** To define a standard access-list named `my-list` and deny any packets from any source, use the commands:

```
awplus# configure terminal
awplus(config)# access-list standard my-list deny any
```

Alternatively, to define a standard access-list named `my-list` and enter the IPv4 Standard ACL Configuration mode to deny any packets from any source, use the commands:

```
awplus# configure terminal
awplus(config)# access-list standard my-list
awplus(config-ip-std-acl)# 5 deny any
```

**Related Commands** ([access-list standard named filter](#))  
[show running-config](#)  
[show ip access-list](#)

## access-list (standard numbered)

**Overview** This command configures a standard numbered access-list that permits or denies packets from a specific source IP address. You can either create a standard numbered ACL together with an ACL filter entry in the Global Configuration mode, or you can use the IPv4 Standard ACL Configuration mode for sequenced ACL filter entry after first entering an access-list number.

The **no** variant of this command removes a specified standard numbered access-list.

**Syntax [list-number]**

```
access-list {<1-99>|<1300-1999>}  
no access-list {<1-99>|<1300-1999>}
```

| Parameter   | Description                               |
|-------------|---|
| <1-99>      | IP standard access-list.                  |
| <1300-1999> | IP standard access-list (expanded range). |

**Syntax [deny|permit]**

```
access-list {<1-99>|<1300-1999>} {deny|permit} <source>  
no access-list {<1-99>|<1300-1999>} {deny|permit} <source>
```

| Parameter                   | Description   |                             |  |     |                                |
|-----------------------------|---|-----------------------------|--|-----|--------------------------------|
| <1-99>                      | IP standard access-list.  |                             |  |     |                                |
| <1300-1999>                 | IP standard access-list (expanded range).   |                             |  |     |                                |
| deny                        | Access-list rejects packets from the specified source.  |                             |  |     |                                |
| permit                      | Access-list accepts packets from the specified source.  |                             |  |     |                                |
| <source>                    | The source address of the packets. You can specify a single host, a subnet, or all sources. The following are the valid formats for specifying the source: <table><tr><td>&lt;ip-addr&gt;<br/>&lt;reverse-mask&gt;</td><td>Enter an IPv4 address followed by a reverse mask in dotted decimal format. For example, entering 192.168.1.1 0.0.0.255 is the same as entering 192.168.1.1/24.</td></tr><tr><td>any</td><td>Matches any source IP address.</td></tr></table> | <ip-addr><br><reverse-mask> | Enter an IPv4 address followed by a reverse mask in dotted decimal format. For example, entering 192.168.1.1 0.0.0.255 is the same as entering 192.168.1.1/24. | any | Matches any source IP address. |
| <ip-addr><br><reverse-mask> | Enter an IPv4 address followed by a reverse mask in dotted decimal format. For example, entering 192.168.1.1 0.0.0.255 is the same as entering 192.168.1.1/24.  |                             |  |     |                                |
| any                         | Matches any source IP address.  |                             |  |     |                                |

**Mode** Global Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** Use this command when configuring a standard numbered access-list for filtering IP software packets.

You can either create access-lists from within this command, or you can enter **access-list** followed by only the number. Entering only the number moves you to the IPv4 Standard ACL Configuration mode for the selected access-list. From there you can configure your access-lists by using the command ([access-list standard numbered filter](#)).

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Examples** To create ACL number 67 that will deny packets from subnet 172.16.10.0, use the commands:

```
awplus# configure terminal
awplus(config)# access-list 67 deny 172.16.10.0 0.0.0.255
```

Alternatively, to enter the IPv4 Standard ACL Configuration mode to create the ACL filter and deny packets from subnet 172.16.10.0 for the standard numbered access-list 67, use the commands:

```
awplus# configure terminal
awplus(config)# access-list 67
awplus(config-ip-std-acl)# deny 172.16.10.0 0.0.0.255
```

**Related Commands** ([access-list standard named filter](#))  
[show running-config](#)  
[show ip access-list](#)

## (access-list standard named filter)

**Overview** This ACL filter adds a source IP address filter entry to a current named standard access-list. If the sequence number is specified, the new filter entry is inserted at the specified location. Otherwise, the new entry is added at the end of the access-list.

The **no** variant of this command removes a source IP address filter entry from the current named standard access-list. You can specify the source IP address filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its source IP address filter profile without specifying its sequence number.

Note that the sequence number can be found by running the [show access-list \(IPv4 Software ACLs\)](#) command.

**Syntax** [`<sequence-number>`] {deny|permit} {<source> [exact-match]|any}  
no {deny|permit} {<source> [exact-match]|any}  
no <sequence-number>

| Parameter          | Description  |                    |  |           |                                    |
|--------------------|--|--------------------|--|-----------|------------------------------------|
| <sequence-number>  | <1-65535><br>The sequence number for the filter entry of the selected access control list.   |                    |  |           |                                    |
| deny               | Access-list rejects packets of the source filtering specified.   |                    |  |           |                                    |
| permit             | Access-list allows packets of the source filtering specified   |                    |  |           |                                    |
| <source>           | The source address of the packets. You can specify either a subnet or all sources. The following are the valid formats for specifying the source: <table><tr><td>&lt;ip-addr&gt;/&lt;prefix&gt;</td><td>An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.</td></tr><tr><td>&lt;ip-addr&gt;</td><td>An IPv4 address in a.b.c.d format.</td></tr></table> | <ip-addr>/<prefix> | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet. | <ip-addr> | An IPv4 address in a.b.c.d format. |
| <ip-addr>/<prefix> | An IPv4 address, followed by a forward slash, then the prefix length. This matches any destination IP address within the specified subnet.   |                    |  |           |                                    |
| <ip-addr>          | An IPv4 address in a.b.c.d format.   |                    |  |           |                                    |
| exact-match        | Specify an exact IP prefix to match on.  |                    |  |           |                                    |
| any                | Matches any source IP address.   |                    |  |           |                                    |

**Mode** IPv4 Standard ACL Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number.

**NOTE:** *The access control list being configured is selected by running the [access-list standard \(named\)](#) command with the required access control list name, but with no further parameters selected.*

*Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.*

**Examples** Use the following commands to add a new filter entry to access-list `my-list` that will reject IP address `10.1.1.1`:

```
awplus# configure terminal
awplus(config)# access-list standard my-list
awplus(config-ip-std-acl)# deny 10.1.1.1/32
```

Use the following commands to insert a new filter entry into access-list `my-list` at sequence position number 15 that will accept IP network `10.1.2.0`:

```
awplus# configure terminal
awplus(config)# access-list standard my-list
awplus(config-ip-std-acl)# 15 permit 10.1.2.0/24
```

**Related Commands** [access-list standard \(named\)](#)  
[show running-config](#)  
[show ip access-list](#)

## (access-list standard numbered filter)

**Overview** This ACL filter adds a source IP address filter entry to a current standard numbered access-list. If a sequence number is specified, the new filter entry is inserted at the specified location. Otherwise, the new filter entry is added at the end of the access-list.

The **no** variant of this command removes a source IP address filter entry from the current standard numbered access-list. You can specify the source IP address filter entry for removal by entering either its sequence number (e.g. `no 10`), or by entering its source IP address filter profile without specifying its sequence number.

Note that the sequence number can be found by running the [show access-list \(IPv4 Software ACLs\)](#) command.

**Syntax** [`<sequence-number>`] {deny|permit} {`<source>`|host  
`<host-address>`|any}  
  
no {deny|permit} {`<source>`|host `<host-address>`|any}  
  
no `<sequence-number>`

| Parameter   | Description   |   |   |                              |                                    |
|---|---|---|---|------------------------------|------------------------------------|
| <code>&lt;sequence-number&gt;</code>                              | <code>&lt;1-65535&gt;</code><br>The sequence number for the filter entry of the selected access control list.   |   |   |                              |                                    |
| deny  | Access-list rejects packets of the type specified.  |   |   |                              |                                    |
| permit  | Access-list allows packets of the type specified  |   |   |                              |                                    |
| <code>&lt;source&gt;</code>                                       | The source address of the packets. You can specify either a subnet or all sources. The following are the valid formats for specifying the source: <table><tr><td><code>&lt;ip-addr&gt;</code><br/><code>&lt;reverse-mask&gt;</code></td><td>Enter a reverse mask for the source address in dotted decimal format. For example, entering <code>192.168.1.10.0.0.255</code> is the same as entering <code>192.168.1.1/24</code>.</td></tr><tr><td><code>&lt;ip-addr&gt;</code></td><td>An IPv4 address in a.b.c.d format.</td></tr></table> | <code>&lt;ip-addr&gt;</code><br><code>&lt;reverse-mask&gt;</code> | Enter a reverse mask for the source address in dotted decimal format. For example, entering <code>192.168.1.10.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> . | <code>&lt;ip-addr&gt;</code> | An IPv4 address in a.b.c.d format. |
| <code>&lt;ip-addr&gt;</code><br><code>&lt;reverse-mask&gt;</code> | Enter a reverse mask for the source address in dotted decimal format. For example, entering <code>192.168.1.10.0.0.255</code> is the same as entering <code>192.168.1.1/24</code> .   |   |   |                              |                                    |
| <code>&lt;ip-addr&gt;</code>                                      | An IPv4 address in a.b.c.d format.  |   |   |                              |                                    |
| host  | A single source host.   |   |   |                              |                                    |
| <code>&lt;host-address&gt;</code>                                 | Single source host address.   |   |   |                              |                                    |
| any   | Matches any source IP address.  |   |   |                              |                                    |

**Mode** IPv4 Standard ACL Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.



**Usage** An ACL can be configured with multiple ACL filters using sequence numbers. If the sequence number is omitted, the next available multiple of 10 will be used as the sequence number for the new filter. A new ACL filter can be inserted into the middle of an existing list by specifying the appropriate sequence number.

**NOTE:** The access control list being configured is selected by running the [access-list \(standard numbered\)](#) command with the required access control list number but with no further parameters selected.

Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Example** To add a new entry accepting the IP network 10.1.1.0/24 at the sequence number 15 position, use the commands:

```
awplus# configure terminal
awplus(config)# access-list 99
awplus(config-ip-std-acl)# 15 permit 10.1.2.0 0.0.0.255
```

**Related Commands** [access-list \(standard numbered\)](#)  
[show running-config](#)  
[show ip access-list](#)

# clear ip prefix-list

**Overview** Use this command to reset the hit count to zero in the prefix-list entries.

**Syntax** `clear ip prefix-list [<list-name>] [<ip-address>/<mask>]`

| Parameter           | Description                  |
|---------------------|------------------------------|
| <list-name>         | The name of the prefix-list. |
| <ip-address>/<mask> | The IP prefix and length.    |

**Mode** Privileged Exec

**Example** To clear a prefix-list named List1:

```
awplus# clear ip prefix-list List1
```

# dos

**Overview** Use this command to configure Denial-of-Service (DoS) features for a port. Six different DoS attacks can be detected: IP Options, Land, Ping-of-Death, Smurf, Synflood and Teardrop.

When the attack is detected, three different actions are available:

- Shutdown the port for one minute
- Cause an SNMP trap.
- Send traffic to the mirror port

**Syntax** `dos {ipoptions|land|ping-of-death|smurf broadcast  
<ip-address>|synflood|teardrop} action {shutdown|trap|mirror}`

| Parameter     | Description                  |
|---------------|------------------------------|
| dos           | Denial-Of-Service.           |
| ipoptions     | IP Options attack.           |
| land          | Land attack.                 |
| ping-of-death | Large ping attack.           |
| smurf         | Ping to broadcast address.   |
| broadcast     | Broadcast.                   |
| <ip-address>  | Local IP Broadcast Address.  |
| synflood      | SYN flood attack.            |
| teardrop      | IP fragmentation attack.     |
| action        | Action.                      |
| shutdown      | Shutdown port.               |
| trap          | Trap to SNMP.                |
| mirror        | Send packets to mirror port. |

**Mode** Interface Configuration for a switch port interface.

**Default** DoS attack detection is not configured by default on any switch port interface.

**Usage** See the below table for more information about the DoS attacks recognized by this command:

| Type of DoS attack | Description  |
|--------------------|--|
| ipoptions          | This type of attack occurs when an attacker sends packets containing bad IP options to a victim node. There are many different types of IP options attacks and this software does not try to distinguish between them. Rather, if this defense is activated, the number of ingress IP packets containing IP options is counted. If the number exceeds 20 packets per second, the switch considers this a possible IP options attack. This defense does not require the CPU to monitor packets, so does not put extra load on the switch's CPU.   |
| land               | This type of attack occurs when the Source IP and Destination IP address are the same. This can cause a target host to be confused. Since packets with the same source and destination addresses should never occur, these packets are dropped when this attack is enabled.<br>This defense does not require the CPU to monitor packets, so does not put extra load on the switch's CPU.   |
| ping-of-death      | This type of attack results from a fragmented packet which, when reassembled, would exceed the maximum size of a valid IP datagram. To detect this attack, the final fragment of ICMP packets has to be sent to the CPU for inspection. This defense can therefore load the CPU.<br>Note that the extra CPU load will not affect normal traffic switching between ports, but other protocols such as IGMP and STP may be affected. This defense is not recommended where a large number of fragmented packets are expected.  |
| smurf              | This type of attack is an ICMP ping packet to a broadcast address. Although routers should not forward packets to local broadcast addresses anymore (see RFC2644), the Smurf attack can still be explicitly discarded with this command. In order for the Smurf attack to work, the broadcast IP address is required. Any ICMP Ping packet with this destination address is considered an attack.<br>This defense does not require the CPU to monitor packets, so does not put extra load on the switch's CPU.   |
| synflood           | In this type of attack, an attacker, seeking to overwhelm a victim with TCP connection requests, sends a large number of TCP SYN packets with bogus source addresses to the victim. The victim responds with SYN ACK packets, but since the original source addresses are bogus, the victim node does not receive any replies. If the attacker sends enough requests in a short enough period, the victim may freeze operations once the requests exceed the capacity of its connections queue.<br>To defend against this form of attack, a switch port monitors the number of ingress TCP-SYN packets it receives. An attack is recorded if a port receives more 60 TCP-SYN packets per second. |
| teardrop           | In this DoS attack, an attacker sends a packet in several fragments with a bogus offset value, used to reconstruct the packet, in one of the fragments to a victim. This results in the victim being unable to reassemble the packet, possibly causing it to freeze operations.  |

**Examples** To configure **smurf** DoS detection on port1.0.1, and shutdown the interface if an attack is detected, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# dos smurf broadcast 192.168.1.0 action
shutdown
```

To configure **land** DoS detection on port1.0.1, and shutdown the interface if an attack is detected, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# dos land action shutdown
```

To configure **ipoptions** DoS detection on port1.0.1, and shutdown the interface if an attack is detected, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# dos ipoptions action shutdown
```

To configure **ping-of-death** DoS detection on port1.0.1, and shutdown the interface if an attack is detected, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# dos ping-of-death action shutdown
```

To configure **synflood** DoS detection on port1.0.1, and shutdown the interface if an attack is detected, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# dos synflood action shutdown
```

To configure **teardrop** DoS detection on port1.0.1, and shutdown the interface if an attack is detected, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# dos teardrop action shutdown
```

**Related  
Commands** [show dos interface](#)

# maximum-access-list

**Overview** Sets the maximum number of filters that can be added to any access-list. These are access-lists within the ranges <1-199>, <1300-1999> and <2000-2699> and named standard and extended access-lists.

The **no** variant of this command removes the limit on the number of filters that can be added to a software access-list

**Syntax** `maximum-access-list <1-4294967294>`  
`no maximum-access-list`

| Parameter      | Description   |
|----------------|---------------|
| <1-4294967294> | Filter range. |

**Mode** Global Configuration

**Example** To set the maximum number of software filters to 200:

```
awplus# configure terminal
awplus(config)# maximum-access-list 200
```

# show access-list (IPv4 Software ACLs)

**Overview** Use this command to display the specified access-list, or all access-lists if none have been specified. Note that only defined access-lists are displayed. An error message is displayed for an undefined access-list

**Syntax** `show access-list`  
`[<1-99>|<100-199>|<1300-1999>|<2000-2699>|<3000-3699>|`  
`<4000-4499>|<access-list-name>]`

| Parameter          | Description  |
|--------------------|--|
| <1-99>             | IP standard access-list.                             |
| <100-199>          | IP extended access-list.                             |
| <1300-1999>        | IP standard access-list (standard - expanded range). |
| <2000-2699>        | IP extended access-list (extended - expanded range). |
| <3000-3699>        | Hardware IP access-list.                             |
| <4000-4499>        | Hardware MAC access-list.                            |
| <access-list-name> | IP named access-list.                                |

**Mode** User Exec and Privileged Exec

**Examples** To show all access-lists configured on the switch:

```
awplus# show access-list
```

```
Standard IP access list 1
  deny 172.16.2.0, wildcard bits 0.0.0.255
Standard IP access list 20
  deny 192.168.10.0, wildcard bits 0.0.0.255
  deny 192.168.12.0, wildcard bits 0.0.0.255
Hardware IP access list 3001
  permit ip 192.168.20.0 255.255.255.0 any
Hardware IP access list 3020
  permit tcp any 192.0.2.0/24
awplus#show access-list 20
```

To show the access-list with an ID of 20:

```
awplus# show access-list 20
```

```
Standard IP access-list 20
  deny 192.168.10.0, wildcard bits 0.0.0.255
  deny 192.168.12.0, wildcard bits 0.0.0.255
```

Note the following error message is displayed if you attempt to show an undefined access-list:

```
awplus# show access-list 2
```

```
% Can't find access-list 2
```

**Related  
Commands**

[access-list standard \(named\)](#)

[access-list \(standard numbered\)](#)

[access-list \(extended numbered\)](#)



# show dos interface

**Overview** Use this command to display the Denial-of-Service (DoS) features configured on a switch port interface from the [dos](#) command. See the [dos](#) command for descriptions of DoS attack types.

**Syntax** `show dos interface {<port-list>}`

| Parameter                      | Description   |
|--------------------------------|---|
| <code>&lt;port-list&gt;</code> | Specify the switch port or port list to display DoS configuration options set with the <a href="#">dos</a> command. |

**Mode** Privileged Exec

**Output** Figure 25-1: Example output from the **show dos interface** command prior to a DoS attack

```
awplus#configure terminal
Enter configuration commands, one per line. End with CTNLT/Z.
awplus(config)#interface port1.0.1
awplus(config-if)#dos synflood action shutdown
awplus(config-if)#exit
awplus(config)#exit
awplus#show dos interface port1.0.1

DoS settings  for interface port1.0.1
-----
Port status      : Enabled
ipoptions        : Disabled
land             : Disabled
ping-of-death    : Disabled
smurf            : Disabled
synflood         : Enabled
  Action         : Shutdown port
  Attacks detected : 0
teardrop         : Disabled
awplus#
```

Figure 25-2: Example output from the **show dos interface** command after a **synflood** DoS attack

```
awplus#show dos interface port1.0.1

DoS settings for interface port1.0.1
-----
Port status           : Enabled
ipoptions             : Disabled
land                  : Disabled
ping-of-death         : Disabled
smurf                 : Disabled
synflood              : Enabled
    Action             : Shutdown port
    Attacks detected   : 1
teardrop              : Disabled
awplus#
```

**Table 26:** Parameters in the **show dos interface** command output:

| Type of DoS attack | Description   |
|--------------------|---|
| Port status        | Displays <b>Enabled</b> when the port is configured as being administratively up after issuing the <b>no shutdown</b> command. Displays <b>Disabled</b> when the port is configured as being administratively down with the <b>shutdown</b> command.  |
| ipoptions          | Displays <b>Enabled</b> when the <b>ipoptions</b> parameter is configured with the <b>dos</b> command, plus the action ( <b>Shutdown port</b> , <b>Mirror port</b> , or <b>Trap port</b> ) and the number of instances of any <b>ipoptions</b> DoS attacks that have occurred on the interface. Displays <b>Disabled</b> when the <b>ipoptions</b> parameter is not configured with the <b>dos</b> command.             |
| land               | Displays <b>Enabled</b> when the <b>land</b> parameter is configured with the <b>dos</b> command, plus the action ( <b>Shutdown port</b> , <b>Mirror port</b> , or <b>Trap port</b> ) and the number of instances of any <b>land</b> DoS attacks that have occurred on the interface. Displays <b>Disabled</b> when the <b>land</b> parameter is not configured with the <b>dos</b> command.                            |
| ping-of-death      | Displays <b>Enabled</b> when the <b>ping-of-death</b> parameter is configured with the <b>dos</b> command, plus the action ( <b>Shutdown port</b> , <b>Mirror port</b> , or <b>Trap port</b> ) and the number of instances of any <b>ping-of-death</b> DoS attacks that have occurred on the interface. Displays <b>Disabled</b> when the <b>ping-of-death</b> parameter is not configured with the <b>dos</b> command. |

**Table 26:** Parameters in the **show dos interface** command output: (cont.)

| Type of DoS attack | Description   |
|--------------------|---|
| smurf              | Displays Enabled when the <b>smurf</b> parameter is configured with the <b>dos</b> command, plus the action (Shutdown port, Mirror port, or Trap port) and the number of instances of any <b>smurf</b> DoS attacks that have occurred on the interface. Displays Disabled when the <b>smurf</b> parameter is not configured with the <b>dos</b> command.          |
| synflood           | Displays Enabled when the <b>synflood</b> parameter is configured with the <b>dos</b> command, plus the action (Shutdown port, Mirror port, or Trap port) and the number of instances of any <b>synflood</b> DoS attacks that have occurred on the interface. Displays Disabled when the <b>synflood</b> parameter is not configured with the <b>dos</b> command. |
| teardrop           | Displays Enabled when the <b>teardrop</b> parameter is configured with the <b>dos</b> command, plus the action (Shutdown port, Mirror port, or Trap port) and the number of instances of any <b>teardrop</b> DoS attacks that have occurred on the interface. Displays Disabled when the <b>teardrop</b> parameter is not configured with the <b>dos</b> command. |

**Related  
Commands**

**dos**

# show ip access-list

**Overview** Use this command to display IP access-lists.

**Syntax** `show ip access-list`  
`[<1-99>|<100-199>|<1300-1999>|<2000-2699>|<access-list-name>]`

| Parameter          | Description                               |
|--------------------|---|
| <1-99>             | IP standard access-list.                  |
| <100-199>          | IP extended access-list.                  |
| <1300-1999>        | IP standard access-list (expanded range). |
| <2000-2699>        | IP extended access-list (expanded range). |
| <access-list-name> | IP named access-list.                     |

**Mode** User Exec and Privileged Exec

**Example** `awplus# show ip access-list`

**Output** Figure 25-3: Example output from the **show ip access-list** command

```
Standard IP access-list 1
  permit 172.168.6.0, wildcard bits 0.0.0.255
  permit 192.168.6.0, wildcard bits 0.0.0.255
```

## vtty access-class (numbered)

**Overview** For IPv4, use this command to set a standard numbered software access list to be the management ACL. This is then applied to all available VTY lines for controlling remote access by Telnet and SSH. This command allows or denies packets containing the IP addresses included in the ACL to create a connection to your device.

ACLs that are attached using this command have an implicit deny-all filter as the final entry in the ACL. So a typical configuration would be to permit a specific address, or range of addresses, and rely on the deny-all filter to block all other access.

Use the **no** variant of this command to remove the access list.

**Syntax** `vtty access-class {<1-99>|<1300-1999>}`  
`no vty access-class [<1-99>|<1300-1999>]`

| Parameter   | Description                                       |
|-------------|---|
| <1-99>      | IPv4 standard access-list number                  |
| <1300-1999> | IPv4 standard access-list number (expanded range) |

**Mode** Global Configuration

**Examples** To set access-list 4 to be the management ACL, use the following commands:

```
awplus# configure terminal
awplus(config)# vty access-class 4
```

To remove access-list 4 from the management ACL, use the following commands:

```
awplus# configure terminal
awplus(config)# no vty access-class 4
```

**Output** Figure 25-4: Example output from the **show running-config** command

```
awplus#show running-config|grep access-class
vtty access-class 4
```

**Related Commands** [show running-config](#)  
[vtty ipv6 access-class \(named\)](#)

# 26

# IPv6 Hardware Access Control List (ACL) Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for the IPv6 Hardware Access Control List (ACL) commands, and contains detailed command information and command examples about IPv6 hardware ACLs, which are applied directly to interfaces using the [ipv6 traffic-filter](#) command.

For information about ACLs, see the [ACL Feature Overview and Configuration Guide](#).

To apply ACLs to an LACP channel group, apply it to all the individual switch ports in the channel group. To apply ACLs to a static channel group, apply it to the static channel group itself. For more information on link aggregation see the following references:

- the [Link Aggregation Feature Overview and Configuration Guide](#).
- [Link Aggregation Commands](#)

Note that text in parenthesis in command names indicates usage not keyword entry. For example, **ipv6-access-list (named)** indicates named IPv6 ACLs entered as `ipv6-access-list <name>` where *<name>* is a placeholder not a keyword.

Note also that parenthesis surrounding ACL filters indicates the type of ACL filter not the keyword entry in the CLI, such as **(ipv6 access-list standard IPv6 filter)** represents command entry in the format shown in the syntax `[<sequence-number>] {deny|permit} {<IPv6-source-address/prefix-length>|any}`.

**NOTE:** Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Sub-modes** Many of the ACL commands operate from sub-modes that are specific to particular ACL types. The following table shows the CLI prompts at which ACL commands are entered.

Table 26-1: IPv6 Hardware Access List Commands and Prompts

| Command Name                               | Command Mode                    | Prompt                        |
|--|---------------------------------|-------------------------------|
| show ipv6 access-list (IPv6 Hardware ACLs) | Privileged Exec                 | awplus#                       |
| ipv6 access-list (named)                   | Global Configuration            | awplus (config) #             |
| (ipv6 access-list named ICMP filter)       | Global Configuration            | awplus (config) #             |
| ipv6 traffic-filter                        | Interface Configuration         | awplus (config-if) #          |
| commit (IPv6)                              | IPv6 Hardware ACL Configuration | awplus (config-ipv6-hw-acl) # |
| (ipv6 access-list named ICMP filter)       | IPv6 Hardware ACL Configuration | awplus (config-ipv6-hw-acl) # |
| (ipv6 access-list named protocol filter)   | IPv6 Hardware ACL Configuration | awplus (config-ipv6-hw-acl) # |
| (ipv6 access-list named TCP UDP filter)    | IPv6 Hardware ACL Configuration | awplus (config-ipv6-hw-acl) # |

- Command List**
- “commit (IPv6)” on page 988
  - “ipv6 access-list (named)” on page 989
  - “(ipv6 access-list named ICMP filter)” on page 991
  - “(ipv6 access-list named protocol filter)” on page 994
  - “(ipv6 access-list named TCP UDP filter)” on page 998
  - “ipv6 traffic-filter” on page 1001
  - “show ipv6 access-list (IPv6 Hardware ACLs)” on page 1002

## commit (IPv6)

**Overview** Use this command to commit the IPv6 ACL filter configuration entered at the console to the hardware immediately without exiting the IPv6 Hardware ACL Configuration mode.

This command forces the associated hardware and software IPv6 ACLs to synchronize.

**Syntax** `commit`

**Mode** IPv6 Hardware ACL Configuration

**Usage** Normally, when an IPv6 hardware ACL is edited, the new configuration state of the IPv6 ACL is not written to hardware until you exit IPv6 Hardware ACL Configuration mode. By entering this command you can ensure that the current state of a hardware access-list that is being edited is written to hardware immediately.

Scripts typically do not include the `exit` command to exit configuration modes, potentially leading to IPv6 ACL filters in hardware not being correctly updated. Using this **commit** command in a configuration script after specifying an IPv6 hardware ACL filter ensures that it is updated in the hardware.

**Example** To update the hardware with the IPv6 ACL filter configuration, use the command:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-ipv6-acl
awplus(config-ipv6-hw-acl)# commit
```

**Related Commands** [ipv6 access-list \(named\)](#)



## ipv6 access-list (named)

**Overview** Use this command to either create a new IPv6 hardware access-list, or to select an existing IPv6 hardware access-list in order to apply a filter entry to it.

Use the **no** variant of this command to delete an existing IPv6 hardware access-list.

**NOTE:** Before you can delete an access-list, you must first remove it from any interface it is assigned to.

**Syntax** `ipv6 access-list <ipv6-access-list-name>`  
`no ipv6 access-list <ipv6-access-list-name>`

| Parameter                                  | Description                       |
|--|-----------------------------------|
| <code>&lt;ipv6-access-list-name&gt;</code> | Specify an IPv6 access-list name. |

**Mode** Global Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicitly match a filter is permitted.

**Usage** Use IPv6 hardware named access-lists to control the transmission of IPv6 packets on an interface, and restrict the content of routing updates. The switch stops checking the IPv6 hardware named access-list when a match is encountered.

For backwards compatibility you can either create IPv6 hardware named access-lists from within this command, or you can enter `ipv6 access-list` followed by only the IPv6 hardware named access-list name. This latter (and preferred) method moves you to the `(config-ipv6-hw-acl)` prompt for the selected IPv6 hardware named access-list number, and from here you can configure the filters for this selected IPv6 hardware named access-list.

**NOTE:** Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** To create an IPv6 access-list named `my-ipv6-acl`, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-ipv6-acl
awplus(config-ipv6-hw-acl)#
```

To delete the IPv6 access-list named `my-ipv6-acl`, use the commands:

```
awplus# configure terminal
awplus(config)# no ipv6 access-list my-ipv6-acl
```

**Validation Commands** `show ipv6 access-list (IPv6 Hardware ACLs)`

**Related  
Commands**

- (ipv6 access-list named ICMP filter)
- (ipv6 access-list named protocol filter)
- (ipv6 access-list named TCP UDP filter)
- ipv6 traffic-filter
- show ipv6 access-list (IPv6 Hardware ACLs)

## (ipv6 access-list named ICMP filter)

**Overview** Use this ACL filter to add a filter entry for an IPv6 source and destination address and prefix, with ICMP (Internet Control Message Protocol) packets, to the current named IPv6 access-list. If a sequence number is specified, the new entry is inserted at the specified location. Otherwise, the new entry is added at the end of the access-list.

Note that specifying the **send-to-cpu** parameter could result in EPSR healthcheck messages and other control packets being dropped.

As an optional parameter **vlan** can be matched for tagged (802.1q) packet.

The **no** variant of this command removes a filter entry for an IPv6 source and destination address and prefix, with ICMP (Internet Control Message Protocol) packets, from the current named IPv6 access-list. You can specify the filter entry for removal by entering either its sequence number, or its filter entry profile.

**NOTE:** Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Syntax [ip|icmp]** [*<sequence-number>*]  
{deny|permit|send-to-cpu|send-to-mirror|copy-to-cpu|  
copy-to-mirror} {ipv6|icmp}  
{<ipv6-source-address/prefix-length>|  
<ipv6-source-address> <ipv6-source-wildcard>|  
host <ipv6-source-host>|any}  
{<ipv6-destination-address/prefix-length>|  
<ipv6-destination-address> <ipv6-destination-wildcard>|  
host <ipv6-destination-host-address>|any}  
[<icmp-type>] [vlan <1-4094>]

no [*<sequence-number>*]  
{deny|permit|send-to-cpu|send-to-mirror|copy-to-cpu|  
copy-to-mirror} {ip|icmp}  
{<ipv6-source-address/prefix-length>|  
<ipv6-source-address> <ipv6-source-wildcard>|  
host <ipv6-source-host>|any}  
{<ipv6-destination-address/prefix-length>|  
<ipv6-destination-address> <ipv6-destination-wildcard>|  
host <ipv6-destination-host-address>|any}  
[<icmp-type>] [vlan <1-4094>]

no [*<sequence-number>*]

| Parameter         | Description  |
|-------------------|--|
| <sequence-number> | <1-65535>The sequence number for the filter entry of the selected access control list. |
| deny              | Specifies the packets to reject.   |
| permit            | Specifies the packets to permit.   |

| Parameter                                    | Description  |
|--|--|
| send-to-cpu                                  | Specifies the packets to send to the CPU. Specifying this parameter could result in EPSR healthcheck messages and other control packets being dropped.         |
| send-to-mirror                               | Specifies the packets to send to mirror port.  |
| copy-to-cpu                                  | Specifies the packets to copy to the CPU.  |
| copy-to-mirror                               | Specifies the packets to copy to the mirror port.  |
| ipv6   | IPv6 packet, defined by the following parameters.  |
| icmp   | ICMP packet, defined by the following parameters.  |
| <ipv6-source-address/<br>prefix-length>      | Specifies a source address and prefix length. The IPv6 address prefix uses the format X:X::/prefix-length. The prefix-length is usually set between 0 and 64.  |
| <ipv6-source-address>                        | Specifies the IPv6 source address. The IPv6 address uses the format X:X::X:X.  |
| <ipv6-source-wildcard>                       | Specifies source wildcard bits in IPv6 format X:X::X:X.<br>Note that binary 1 represents a don't care condition, and binary 0 represents a match.              |
| host <ipv6-source-host>                      | Specifies a single source host address. The IPv6 address uses the format X:X::X:X.   |
| any  | Specifies any Source host.   |
| <ipv6-destination-<br>address/prefix-length> | Specifies a destination address and prefix length. The IPv6 address uses the format X:X::X:X/Prefix-Length. The prefix-length is usually set between 0 and 64. |
| <ipv6-destination-<br>address>               | Specifies a destination address. The IPv6 address uses the format X:X::X:X.  |
| <ipv6-destination-<br>wildcard>              | Specify destination wildcard bits in IPv6 format X:X::X:X.   |
| host <ipv6-destination-<br>host-address>     | Specify a single destination host address. The IPv6 address uses the format X:X::X:X.  |
| any  | Specifies any destination host.  |
| <icmp-type>                                  | Optional. Specify to filter by ICMP message type number. Valid values are from 0 to 255.   |

| Parameter | Description  |
|-----------|--|
| vlan      | This parameter can be used in either single or double-tagged VLAN networks. It is the conventional VLAN tag (VID). In a double-tagged network it is sometimes referred to as the STAG. |
| <1-4094>  | The VLAN VID.  |

**Mode** IPv6 Hardware ACL Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicate match a filter is permitted.

**Examples** To specify a hardware IPv6 access-list named `my-acl1` and add an ACL filter entry that blocks all ICMP6 echo requests, enter the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-acl1
awplus(config-ipv6-hw-acl)# deny icmp any any icmp-type 128
```

To specify a hardware IPv6 access-list named `my-acl2` and add an ACL filter entry that blocks all ICMP6 echo requests on the default VLAN (`vlan1`), enter the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-acl2
awplus(config-ipv6-hw-acl)# deny icmp any any icmp-type 128
vlan 1
```

To remove an ACL filter entry that blocks all ICMP6 echo requests from the hardware IPv6 access-list named `my-acl1`, enter the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-acl1
awplus(config-ipv6-hw-acl)# no deny icmp any any icmp-type 128
```

**Related Commands**

- [ipv6 access-list \(named\)](#)
- [\(ipv6 access-list named protocol filter\)](#)
- [\(ipv6 access-list named TCP UDP filter\)](#)
- [ipv6 traffic-filter](#)
- [show ipv6 access-list \(IPv6 Hardware ACLs\)](#)

## (ipv6 access-list named protocol filter)

**Overview** Use this ACL filter to add a filter entry for an IPv6 source and destination address and prefix, with an IP protocol type specified, to the current named IPv6 access-list. If a sequence number is specified, the new entry is inserted at the specified location. Otherwise, the new entry is added at the end of the access-list.

Note that specifying the **send-to-cpu** parameter could result in EPSR healthcheck messages and other control packets being dropped.

The **no** variant of this command removes a filter entry for an IPv6 source and destination address and prefix, with an IP protocol type specified, from the current named IPv6 access-list. You can specify the filter entry for removal by entering either its sequence number, or its filter entry profile.

**Syntax**

```
[<sequence-number>
{deny|permit|send-to-cpu|send-to-mirror|copy-to-cpu|
copy-to-mirror} {ipv6|proto <ip-protocol>}
{<ipv6-source-prefix/prefix-length>|
<ipv6-source-address> <ipv6-source-wildcard>|
host <ipv6-source-host>|any}
{<ipv6-destination-prefix/prefix-length>|
<ipv6-destination-address> <ipv6-destination-wildcard>|
host <ipv6-destination-host>|any}

no [<sequence-number>]
{deny|permit|send-to-cpu|send-to-mirror|copy-to-cpu|
copy-to-mirror} {ipv6|proto <ip-protocol>}
{<ipv6-source-prefix/prefix-length>|
<ipv6-source-address> <ipv6-source-wildcard>|
host <ipv6-source-host>|any}
{<ipv6-destination-prefix/prefix-length>|
<ipv6-destination-address> <ipv6-destination-wildcard>|
host <ipv6-destination-host>|any}

no [<sequence-number>]
```

| Parameter         | Description  |
|-------------------|--|
| <sequence-number> | <1-65535><br>The sequence number for the filter entry of the selected access control list.   |
| deny              | Specifies packets to reject.   |
| permit            | Specifies packets to permit.   |
| send-to-cpu       | Specifies packets to send to the CPU. Specifying this parameter could result in EPSR healthcheck messages and other control packets being dropped. |
| send-to-mirror    | Specifies packets to send to mirror port.  |
| copy-to-cpu       | Specifies packets to copy to the CPU.  |
| copy-to-mirror    | Specifies packets to copy to the mirror port.  |

| Parameter                              | Description  |
|--|--|
| ipv6                                   | Specifies IPv6 packet.   |
| proto <ip-protocol>                    | <1-255><br>Specify IP protocol number, as defined by IANA (Internet Assigned Numbers Authority <a href="http://www.iana.org/assignments/protocol-numbers">www.iana.org/assignments/protocol-numbers</a> )<br>See below for a list of IP protocol numbers and their descriptions. |
| <ipv6-source-prefix/<br>prefix-length> | Specify source address and mask.<br>The IPv6 address uses the format X:X::X/Prefix-Length. The prefix-length is usually set between 0 and 64.  |
| <ipv6-source-address>                  | Specifies the source address.<br>The IPv6 address uses the format X:X::X.  |
| <ipv6-source-wildcard>                 | Specifies the source wildcard bits, in IPv6 format X:X::X:X.   |
| host <ipv6-source-host>                | Specifies a single source host.<br>The IPv6 address uses the format X:X::X:X.  |
| any                                    | Specifies any source host.<br>An abbreviation for the IPv6 prefix ::/0   |
| <ipv6-dest-prefix/prefix-length>       | Specifies a destination address and mask.<br>The IPv6 address prefix uses the format X:X::/prefix-length. The prefix-length is usually set between 0 and 64.   |
| <ipv6-destination-address>             | Specify destination address.<br>The IPv6 address uses the format X:X::X:X.   |
| <ipv6-destination-wildcard>            | Specify destination wildcard bits in IPv6 format X:X::X:X  |
| host <ipv6-destination-host>           | Specify a single destination host address.<br>The IPv6 address uses the format X:X::X:X.   |
| any                                    | Specifies any destination host. An abbreviation for the IPv6 prefix ::/0   |
| vlan                                   | This parameter can be used in either single or double-tagged VLAN networks. It is the conventional VLAN tag (VID). In a double-tagged network it is sometimes referred to as the STAG.   |
| <1-4094>                               | The VLAN VID.  |

Table 26-2: IP protocol number and description

| Protocol Number | Protocol Description [RFC]                   |
|-----------------|--|
| 1               | Internet Control Message [RFC792]            |
| 2               | Internet Group Management [RFC1112]          |
| 3               | Gateway-to-Gateway [RFC823]                  |
| 4               | IP in IP [RFC2003]                           |
| 5               | Stream [RFC1190] [RFC1819]                   |
| 6               | TCP (Transmission Control Protocol) [RFC793] |
| 8               | EGP (Exterior Gateway Protocol) [RFC888]     |

Table 26-2: IP protocol number and description (cont.)

| Protocol Number | Protocol Description [RFC]                             |
|-----------------|--|
| 9               | IGP (Interior Gateway Protocol) [IANA]                 |
| 11              | Network Voice Protocol [RFC741]                        |
| 17              | UDP (User Datagram Protocol) [RFC768]                  |
| 20              | Host monitoring [RFC869]                               |
| 27              | RDP (Reliable Data Protocol) [RFC908]                  |
| 28              | IRTP (Internet Reliable Transaction Protocol) [RFC938] |
| 29              | ISO-TP4 (ISO Transport Protocol Class 4) [RFC905]      |
| 30              | Bulk Data Transfer Protocol [RFC969]                   |
| 33              | DCCP (Datagram Congestion Control Protocol) [RFC4340]  |
| 48              | DSR (Dynamic Source Routing Protocol) [RFC4728]        |
| 50              | ESP (Encap Security Payload) [RFC2406]                 |
| 51              | AH (Authentication Header) [RFC2402]                   |
| 54              | NARP (NBMA Address Resolution Protocol) [RFC1735]      |
| 58              | ICMP for IPv6 [RFC1883]                                |
| 59              | No Next Header for IPv6 [RFC1883]                      |
| 60              | Destination Options for IPv6 [RFC1883]                 |
| 88              | EIGRP (Enhanced Interior Gateway Routing Protocol)     |
| 89              | OSPFv2 [RFC1583]                                       |
| 97              | Ethernet-within-IP Encapsulation / RFC3378             |
| 98              | Encapsulation Header / RFC1241                         |
| 108             | IP Payload Compression Protocol / RFC2393              |
| 112             | Virtual Router Redundancy Protocol / RFC3768           |
| 134             | RSVP-E2E-IGNORE / RFC3175                              |
| 135             | Mobility Header / RFC3775                              |
| 136             | UDPLite / RFC3828                                      |
| 137             | MPLS-in-IP / RFC4023                                   |
| 138             | MANET Protocols / RFC-ietf-manet-iana-07.txt           |
| 139-252         | Unassigned / IANA                                      |
| 253             | Use for experimentation and testing / RFC3692          |
| 254             | Use for experimentation and testing / RFC3692          |
| 255             | Reserved / IANA  |

**Mode** IPv6 Hardware ACL Configuration



**Default** Any traffic on an interface controlled by a hardware ACL that does not explicate match a filter is permitted.

**Usage** This command adds a hardware classification filter (for use with features such as QoS), to a current standard IPv6 access-list. The filter will match on any IP protocol type packet that has the specified source and destination IPv6 addresses and the specified IP protocol type. The parameter *any* may be specified if an address does not matter,

**NOTE:** Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** To add an ACL filter entry to block IP traffic from network 2001:0db8::0/64 to the hardware IPv6 access-list named *my-acl*, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-acl
awplus(config-ipv6-hw-acl)# deny ipv6 2001:0db8::0/64
```

To remove an ACL filter entry that blocks all IPv6 traffic from network 2001:0db8::0/64 from the hardware IPv6 access-list named *my-acl*, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-acl
awplus(config-ipv6-hw-acl)# no deny ipv6 2001:0db8::0/64
```

**Related Commands**

- [ipv6 access-list \(named\)](#)
- [\(ipv6 access-list named ICMP filter\)](#)
- [\(ipv6 access-list named TCP UDP filter\)](#)
- [ipv6 traffic-filter](#)
- [show ipv6 access-list \(IPv6 Hardware ACLs\)](#)

## (ipv6 access-list named TCP UDP filter)

**Overview** Use this ACL filter to add a filter entry for an IPv6 source and destination address and prefix, with TCP (Transmission Control Protocol) or UDP (User Datagram Protocol) source and destination ports specified, to the current named IPv6 access-list. If a sequence number is specified, the new entry is inserted at the specified location. Otherwise, the new entry is added at the end of the access-list.

Note that specifying the **send-to-cpu** parameter could result in EPSR healthcheck messages and other control packets being dropped.

The **no** variant of this command removes a filter entry for an IPv6 source and destination address and prefix, with TCP or UDP source and destination ports specified, from the current named IPv6 access-list. You can specify the filter entry for removal by entering either its sequence number, or its filter entry profile.

**Syntax**

```
[<sequence-number>]
{deny|permit|send-to-cpu|send-to-mirror|copy-to-cpu|
copy-to-mirror} {tcp|udp} {<ipv6-source-prefix/prefix-length>|
<ipv6-source-address> <ipv6-source-wildcard>|
host <ipv6-source-host>|any}
{eq <sourceport>|lt <sourceport>|gt <sourceport>|
ne <sourceport>|range <start-range> <end-range>}}
{<ipv6-destination-prefix/prefix-length>|
<ipv6-destination-address> <ipv6-destination-wildcard>|
host <ipv6-destination-host>|any}
{[eq <destport>|lt <destport>|gt <destport>|
ne <destport>|range <start-range> <end-range>]}

no {deny|permit|send-to-cpu|send-to-mirror|copy-to-cpu|
copy-to-mirror} {tcp|udp} {<ipv6-source-prefix/prefix-length>|
<ipv6-source-address> <ipv6-source-wildcard>|
host <ipv6-source-host>|any}
{eq <sourceport>|lt <sourceport>|gt <sourceport>|
ne <sourceport>|range <start-range> <end-range>}}
{<ipv6-destination-prefix/prefix-length>|
<ipv6-destination-address> <ipv6-destination-wildcard>|
host <ipv6-destination-host>|any}
{eq <destport>|lt <destport>|gt <destport>|
ne <destport>|range <start-range> <end-range>}}

no <sequence-number>
```

| Parameter         | Description  |
|-------------------|--|
| <sequence-number> | <1-65535>The sequence number for the filter entry of the selected access control list. |
| deny              | Specify packets to reject.   |
| permit            | Specifies the packets to permit.   |

| Parameter                              | Description   |
|--|---|
| send-to-cpu                            | Specifies the packets to send to the CPU. Specifying this parameter could result in EPSR healthcheck messages and other control packets being dropped.  |
| send-to-mirror                         | Specifies the packets to send to mirror port.   |
| copy-to-cpu                            | Specifies the packets to copy to the CPU.   |
| copy-to-mirror                         | Specifies the packets to copy to the mirror port.   |
| tcp                                    | Specifies a TCP packet.   |
| udp                                    | Specifies a UDP packet.   |
| <ipv6-source-prefix/<br>prefix-length> | Specifies the source address with mask. The IPv6 address prefix uses the format X:X::/prefix-length. The prefix-length is usually set between 0 and 64. |
| <ipv6-source-address>                  | Specifies the source address. The IPv6 address uses the format X:X::X:X.  |
| <ipv6-source-wildcard>                 | Specifies the source wildcard bits in IPv6 format X:X::X:X.   |
| host <ipv6-source-host>                | Specifies the a single source host. The IPv6 address uses the format X:X::X:X.  |
| any                                    | Specifies any Source host. An abbreviation for the IPv6 prefix ::/0.  |
| eq                                     | Equal to.   |
| lt                                     | Less than.  |
| gt                                     | Greater than.   |
| ne                                     | Not equal to.   |
| <sourceport>                           | The source port number, specified as an integer between 0 and 65535.  |
| <destport>                             | The destination port number, specified as an integer between 0 and 65535.   |
| range                                  | Range of port numbers. Match only packets within range.   |
| <start-range>                          | The port number at the start of the range <0-65535>.  |
| <end-range>                            | The port number at the end of the range <0-65535>.  |
| <ipv6-dest-prefix/<br>prefix-length>   | Specify destination address with mask. The IPv6 address prefix uses the format X:X::/prefix-length. The prefix-length is usually set between 0 and 64.  |
| <ipv6-destination-<br>address>         | Specify destination address. The IPv6 address uses the format X:X::X:X.   |

| Parameter                       | Description   |
|---------------------------------|---|
| <ipv6-destination-wildcard>     | Specify destination wildcard bits in IPv6 format X:X::X:X.                            |
| host<br><ipv6-destination-host> | Specify a single destination host address. The IPv6 address uses the format X:X::X:X. |
| any                             | Specifies any destination host. An abbreviation for the IPv6 prefix ::0.              |

**Mode** IPv6 Hardware ACL Configuration

**Default** Any traffic on an interface controlled by a hardware ACL that does not explicate match a filter is permitted.

**Usage** The filter entry will match on any TCP or UDP packet that has the specified source and destination IPv6 addresses and TCP or UDP type. The parameter `any` may be specified if an address does not matter.

**NOTE:** Hardware ACLs will **permit** access unless **explicitly denied** by an ACL action.

**Examples** To add an ACL filter entry that blocks all SSH traffic from network 2001:0db8::0/64 to the hardware IPv6 access-list named `my-acl`, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-acl
awplus(config-ipv6-hw-acl)# deny tcp 2001:0db8::0/64 any eq 22
```

To add an ACL filter entry that blocks all SSH traffic from network 2001:0db8::0/64 on the default VLAN (`vlan1`) to the hardware IPv6 access-list named `my-acl`, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-acl
awplus(config-ipv6-hw-acl)# deny tcp 2001:0db8::0/64 any eq 22
vlan 1
```

To remove an ACL filter entry that blocks all SSH traffic from network 2001:0db8::0/64 from the hardware IPv6 access-list named `my-acl`, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list my-acl
awplus(config-ipv6-hw-acl)# no deny tcp 2001:0db8::0/64 any eq 22
```

**Related Commands**

- [ipv6 access-list \(named\)](#)
- [\(ipv6 access-list named ICMP filter\)](#)
- [\(ipv6 access-list named protocol filter\)](#)
- [ipv6 traffic-filter](#)
- [show ipv6 access-list \(IPv6 Hardware ACLs\)](#)

# ipv6 traffic-filter

**Overview** This command adds an IPv6 hardware-based access-list to an interface. The number of access-lists that can be added is determined by the amount of available space in the hardware-based packet classification tables.

Use the **no** variant of this command to remove an IPv6 hardware-based access-list from an interface.

**Syntax** `ipv6 traffic-filter <ipv6-access-list-name>`  
`no ipv6 traffic-filter <ipv6-access-list-name>`

| Parameter                                  | Description                     |
|--|---------------------------------|
| <code>&lt;ipv6-access-list-name&gt;</code> | Hardware IPv6 access-list name. |

**Mode** Interface Configuration (to apply an IPv6 hardware ACL to a specific switch port).

**Usage** This command adds an IPv6 hardware-based access-list to an interface. The number of access-lists that can be added is determined by the amount of available space in the hardware-based packet classification tables.

To apply the access-list to all ports on the switch, execute the command in the Global Configuration mode. To apply the access-list to a Layer 2 interface or Layer 2 interface range, apply the command in the Interface Configuration mode. See the examples for each mode below.

**Examples** To add access-list `acl1` as a traffic-filter to interface `port1.0.1`, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# ipv6 traffic-filter acl1
```

To remove access-list `acl1` as a traffic-filter from interface `port1.0.1`, enter the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no ipv6 traffic-filter acl1
```

**Related Commands**

- [ipv6 access-list \(named\)](#)
- [\(ipv6 access-list named ICMP filter\)](#)
- [\(ipv6 access-list named protocol filter\)](#)
- [\(ipv6 access-list named TCP UDP filter\)](#)
- [ipv6 traffic-filter](#)
- [show ipv6 access-list \(IPv6 Hardware ACLs\)](#)

# show ipv6 access-list (IPv6 Hardware ACLs)

**Overview** Use this command to display all configured hardware IPv6 access-lists or the IPv6 access-list specified by name. Omitting the optional access-list name parameter will display all IPv6 ACLs.

Use the **show ipv6 access-list standard** command to display the IPv6 access-list specified by name as defined from the [ipv6 access-list \(named\)](#) command.

**Syntax** `show ipv6 access-list [<access-list-name>]`  
`show ipv6 access-list standard [<access-list-name>]`

| Parameter          | Description                     |
|--------------------|---------------------------------|
| standard           | Named standard access-list.     |
| <access-list-name> | Hardware IPv6 access-list name. |

**Mode** User Exec and Privileged Exec

**Examples** To show the standard named ipv6 access-list `acl_name` use the following command:

```
awplus# show ipv6 access-list standard acl_name
```

**Output** Figure 26-1: Example output from the **show ipv6 access-list standard** command

```
Named Standard IPv6 access-list acl_name
deny any
```

To show all configured ipv6 access-lists use the command:

```
awplus# show ipv6 access-list
```

**Output** Figure 26-2: Example output from the **show ipv6 access-list** command

```
IPv6 access-list deny_icmp
deny icmp any any vlan 1

IPv6 access-list deny_ssh
deny tcp abcd::0/64 any eq 22
```

**Related Commands**

- [ipv6 access-list \(named\)](#)
- [\(ipv6 access-list named ICMP filter\)](#)
- [\(ipv6 access-list named protocol filter\)](#)
- [\(ipv6 access-list named TCP UDP filter\)](#)
- [ipv6 traffic-filter](#)

# 27

# IPv6 Software Access Control List (ACL) Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for the IPv6 Software Access Control List (ACL) commands, and contains detailed command information and command examples about IPv6 software ACLs as applied to Routing and Multicasting, which are not applied to interfaces.

For information about ACLs, see the [ACL Feature Overview and Configuration Guide](#).

To apply ACLs to an LACP channel group, apply it to all the individual switch ports in the channel group. To apply ACLs to a static channel group, apply it to the static channel group itself. For more information on link aggregation see the following references:

- the [Link Aggregation Feature Overview and Configuration Guide](#).
- [Link Aggregation Commands](#)

Note that text in parenthesis in command names indicates usage not keyword entry. For example, **ipv6-access-list (named)** indicates named IPv6 ACLs entered as `ipv6-access-list <name>` where *<name>* is a placeholder not a keyword.

Note also that parenthesis surrounding ACL filters indicates the type of ACL filter not the keyword entry in the CLI. For example, **(ipv6 access-list standard IPv6 filter)** represents command entry in the format:

[<sequence-number>] {deny|permit} {<IPv6-source-address/prefix-length>|any}.

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Sub-modes** Many of the ACL commands operate from sub-modes that are specific to particular ACL types. The following table shows the CLI prompts at which ACL commands are entered.

Table 27-1: IPv6 Software Access List Commands and Prompts

| Command Name                                   | Command Mode                    | Prompt                         |
|--|---------------------------------|--------------------------------|
| show ipv6 access-list (IPv6 Software ACLs)     | Privileged Exec                 | awplus#                        |
| ipv6 access-list extended (named)              | Global Configuration            | awplus (config) #              |
| ipv6 access-list standard (named)              | Global Configuration            | awplus (config) #              |
| (ipv6 access-list extended IP protocol filter) | IPv6 Extended ACL Configuration | awplus (config-ipv6-ext-acl) # |
| (ipv6 access-list extended TCP UDP filter)     | IPv6 Extended ACL Configuration | awplus (config-ipv6-ext-acl) # |
| (ipv6 access-list standard filter)             | IPv6 Standard ACL Configuration | awplus (config-ipv6-std-acl) # |

- Command List**
- “[ipv6 access-list extended \(named\)](#)” on page 1005
  - “[ipv6 access-list extended proto](#)” on page 1009
  - “[\(ipv6 access-list extended IP protocol filter\)](#)” on page 1012
  - “[\(ipv6 access-list extended TCP UDP filter\)](#)” on page 1015
  - “[ipv6 access-list standard \(named\)](#)” on page 1017
  - “[\(ipv6 access-list standard filter\)](#)” on page 1019
  - “[show ipv6 access-list \(IPv6 Software ACLs\)](#)” on page 1021
  - “[vty ipv6 access-class \(named\)](#)” on page 1023



# ipv6 access-list extended (named)

**Overview** Use this command when configuring an IPv6 extended access-list for filtering frames that permit or deny IP, ICMP, TCP, UDP packets or ICMP packets with a specific value based on the source or destination.

The **no** variant of this command removes a specified IPv6 extended access-list.

**Syntax**  
**[list-name]** ipv6 access-list extended <list-name>  
no ipv6 access-list extended <list-name>

| Parameter   | Description   |
|-------------|---|
| <list-name> | A user-defined name for the IPv6 software extended access-list. |

**Syntax**  
**[any|icmp|ip]** ipv6 access-list extended <list-name> {deny|permit}  
{any|icmp|ip} {<ipv6-source-address/prefix-length>|any}  
{<ipv6-destination-address/prefix-length>|any} [<icmp-type  
<icmp-type>] [log]

no ipv6 access-list extended <list-name> {deny|permit}  
{any|icmp|ip} {<ipv6-source-address/prefix-length>|any}  
{<ipv6-destination-address/prefix-length>|any} [<icmp-type  
<icmp-type>] [log]

**Syntax [tcp|udp]** ipv6 access-list extended <list-name> {deny|permit} {tcp|udp}  
{<ipv6-source-address/prefix-length>|any} {eq <sourceport>|lt  
<sourceport>|gt <sourceport>|ne  
<sourceport>}{<ipv6-destination-address/prefix-length>|any}  
{eq <destport>|lt <destport>|gt <destport>|ne <destport>} [log]  
no ipv6 access-list extended <list-name> {deny|permit}  
{tcp|udp} {<ipv6-source-address/prefix-length>|any} {eq  
<sourceport>|lt <sourceport>|gt <sourceport>|ne  
<sourceport>}{<ipv6-destination-addr/prefix-length>|any} {eq  
<destport>|lt<destport>|gt <destport>|ne <destport>} [log]

| Parameter   | Description  |
|-------------|--|
| <list-name> | A user-defined name for the IPv6 software extended access-list.  |
| deny        | The IPv6 software extended access-list rejects packets that match the type, source, and destination filtering specified with this command. |
| permit      | The IPv6 software extended access-list permits packets that match the type, source, and destination filtering specified with this command. |

| Parameter   | Description  |
|---|--|
| any   | For ICMP IP<br>The IPv6 software extended access-list matches any type of packet.  |
| ip  | For ICMP IP<br>The IPv6 software extended access-list matches only IP packets.   |
| icmp  | For ICMP IP<br>The IPv6 software extended access-list matches only ICMP packets.   |
| tcp   | For TCP/UDP<br>The IPv6 software extended access-list matches only TCP packets.  |
| udp   | For TCP/UDP<br>The IPv6 software extended access-list matches only UDP packets.  |
| <i>&lt;ipv6-source-address/prefix-length&gt;</i>      | Specifies a source address and prefix length. The IPv6 address prefix uses the format X:X::/prefix-length. The prefix-length is usually set between 0 and 64.  |
| <i>&lt;ipv6-destination-address/prefix-length&gt;</i> | Specifies a destination address and prefix length. The IPv6 address uses the format X:X::X:X/Prefix-Length. The prefix-length is usually set between 0 and 64. |
| any   | Matches any IPv6 address.  |
| <i>&lt;sourceport&gt;</i>                             | For TCP/UDP<br>The source port number, specified as an integer between 0 and 65535.  |
| <i>&lt;destport&gt;</i>                               | For TCP/UDP<br>The destination port number, specified as an integer between 0 and 65535.   |
| icmp-type   | For ICMP IP<br>Matches only a specified type of ICMP messages. This is valid only when the filtering is set to match ICMP packets.                             |
| eq  | For TCP/UDP<br>Matches port numbers equal to the port number specified immediately after this parameter.   |
| lt  | For TCP/UDP<br>Matches port numbers less than the port number specified immediately after this parameter.  |
| gt  | For TCP/UDP<br>Matches port numbers greater than the port number specified immediately after this parameter.   |
| ne  | For TCP/UDP<br>Matches port numbers not equal to the port number specified immediately after this parameter.   |

| Parameter                      | Description  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
|--------------------------------|--|---|---------------|---|-----------------------------------|---|-------------------------|---|-----------------------------------|---|----------------|----|-------------------------|----|-----------------------------|----|---------------------|----|--------------------|----|-----------------------|----|----------------------|----|------------------------|----|-----------------------|
| <code>&lt;icmp-type&gt;</code> | For ICMP IP<br>The ICMP type, as defined in RFC792 and RFC950. Specify one of the following integers to create a filter for the ICMP message type: <table border="1"> <tr><td>0</td><td>Echo replies.</td></tr> <tr><td>3</td><td>Destination unreachable messages.</td></tr> <tr><td>4</td><td>Source quench messages.</td></tr> <tr><td>5</td><td>Redirect (change route) messages.</td></tr> <tr><td>8</td><td>Echo requests.</td></tr> <tr><td>11</td><td>Time exceeded messages.</td></tr> <tr><td>12</td><td>Parameter problem messages.</td></tr> <tr><td>13</td><td>Timestamp requests.</td></tr> <tr><td>14</td><td>Timestamp replies.</td></tr> <tr><td>15</td><td>Information requests.</td></tr> <tr><td>16</td><td>Information replies.</td></tr> <tr><td>17</td><td>Address mask requests.</td></tr> <tr><td>18</td><td>Address mask replies.</td></tr> </table> | 0 | Echo replies. | 3 | Destination unreachable messages. | 4 | Source quench messages. | 5 | Redirect (change route) messages. | 8 | Echo requests. | 11 | Time exceeded messages. | 12 | Parameter problem messages. | 13 | Timestamp requests. | 14 | Timestamp replies. | 15 | Information requests. | 16 | Information replies. | 17 | Address mask requests. | 18 | Address mask replies. |
| 0                              | Echo replies.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 3                              | Destination unreachable messages.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 4                              | Source quench messages.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 5                              | Redirect (change route) messages.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 8                              | Echo requests.   |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 11                             | Time exceeded messages.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 12                             | Parameter problem messages.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 13                             | Timestamp requests.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 14                             | Timestamp replies.   |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 15                             | Information requests.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 16                             | Information replies.   |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 17                             | Address mask requests.   |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| 18                             | Address mask replies.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |
| <code>log</code>               | Logs the results.  |   |               |   |                                   |   |                         |   |                                   |   |                |    |                         |    |                             |    |                     |    |                    |    |                       |    |                      |    |                        |    |                       |

**Mode** Global Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** Use IPv6 extended access-lists to control the transmission of IPv6 packets on an interface, and restrict the content of routing updates. The switch stops checking the IPv6 extended access-list when a match is encountered.

For backwards compatibility you can either create IPv6 extended access-lists from within this command, or you can enter `ipv6 access-list extended` followed by only the IPv6 extended access-list name. This latter (and preferred) method moves you to the `(config-ipv6-ext-acl)` prompt for the selected IPv6 extended access-list number, and from here you can configure the filters for this selected access-list.

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Example 1 [creating a list]** To add a new filter to the access-list named `my-list` that will reject incoming ICMP packets from 2001:0db8::0/64 to 2001:0db8::f/64, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list extended my-list
awplus(config-ipv6-ext-acl)# icmp 2001:0db8::0/64
2001:0db8::f/64
```

**Example 2 [adding to a list]** To insert a new filter at sequence number 5 of the access-list named `my-list` that will accept ICMP type 8 packets from the 2001:0db8::0/64 network to the 2001:0db8::f/64 network, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list extended my-list
awplus(config-ipv6-ext-acl)# 5 icmp 2001:0db8::0/64
2001:0db8::f/64
```

**Example 3 [list with filter]** To create the access-list named TK to deny TCP protocols, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list extended TK deny tcp any eq 14
any lt 12 log
```

**Related  
Commands**

[ipv6 access-list extended proto](#)  
[\(ipv6 access-list extended IP protocol filter\)](#)  
[\(ipv6 access-list extended TCP UDP filter\)](#)  
[show ipv6 access-list \(IPv6 Software ACLs\)](#)  
[show running-config](#)

## ipv6 access-list extended proto

**Overview** Use this command when configuring an IPv6 extended access-list for filtering frames that permit or deny packets with a specific value based on the IP protocol number specified.

The **no** variant of this command removes a specified IPv6 extended access-list with an IP protocol number.

**Syntax**

```
ipv6 access-list extended <list-name> {deny|permit} proto  
<ip-protocol> {<ipv6-source-address/prefix>|any}  
{<ipv6-destination-address/prefix>|any} [log]  
  
no ipv6 access-list extended <list-name> {deny|permit} proto  
<ip-protocol>{<ipv6-source-address/prefix>|any}  
{<ipv6-destination-address/prefix>|any} [log]
```

| Parameter                         | Description  |
|-----------------------------------|--|
| <list-name>                       | A user-defined name for the IPv6 software extended access- list.   |
| deny                              | Specifies the packets to reject.   |
| permit                            | Specifies the packets to accept.   |
| proto                             | The IP Protocol type specified by its protocol number in the range 1 to 255.   |
| <ip-protocol>                     | The IP protocol number, as defined by IANA (Internet Assigned Numbers Authority<br><a href="http://www.iana.org/assignments/protocol-numbers">www.iana.org/assignments/protocol-numbers</a> )<br>See below for a list of IP protocol numbers and their descriptions. |
| <ipv6-source-address/prefix>      | IPv6 source address, or local address.<br>The IPv6 address uses the format X:X::X:Prefix-Length. The prefix-length is usually set between 0 and 64.  |
| any                               | Any source address or local address.   |
| <ipv6-destination-address/prefix> | IPv6 destination address, or local address.<br>The IPv6 address uses the format X:X::X:Prefix-Length. The prefix-length is usually set between 0 and 64.   |
| any                               | Any destination address or remote address.   |
| log                               | Log the results.   |

Table 27-2: IP protocol number and description

| Protocol Number | Protocol Description [RFC]          |
|-----------------|-------------------------------------|
| 1               | Internet Control Message [RFC792]   |
| 2               | Internet Group Management [RFC1112] |

Table 27-2: IP protocol number and description (cont.)

| Protocol Number | Protocol Description [RFC]                             |
|-----------------|--|
| 3               | Gateway-to-Gateway [RFC823]                            |
| 4               | IP in IP [RFC2003]                                     |
| 5               | Stream [RFC1190] [RFC1819]                             |
| 6               | TCP (Transmission Control Protocol) [RFC793]           |
| 8               | EGP (Exterior Gateway Protocol) [RFC888]               |
| 9               | IGP (Interior Gateway Protocol) [IANA]                 |
| 11              | Network Voice Protocol [RFC741]                        |
| 17              | UDP (User Datagram Protocol) [RFC768]                  |
| 20              | Host monitoring [RFC869]                               |
| 27              | RDP (Reliable Data Protocol) [RFC908]                  |
| 28              | IRTP (Internet Reliable Transaction Protocol) [RFC938] |
| 29              | ISO-TP4 (ISO Transport Protocol Class 4) [RFC905]      |
| 30              | Bulk Data Transfer Protocol [RFC969]                   |
| 33              | DCCP (Datagram Congestion Control Protocol) [RFC4340]  |
| 48              | DSR (Dynamic Source Routing Protocol) [RFC4728]        |
| 50              | ESP (Encap Security Payload) [RFC2406]                 |
| 51              | AH (Authentication Header) [RFC2402]                   |
| 54              | NARP (NBMA Address Resolution Protocol) [RFC1735]      |
| 58              | ICMP for IPv6 [RFC1883]                                |
| 59              | No Next Header for IPv6 [RFC1883]                      |
| 60              | Destination Options for IPv6 [RFC1883]                 |
| 88              | EIGRP (Enhanced Interior Gateway Routing Protocol)     |
| 89              | OSPFIGP [RFC1583]                                      |
| 97              | Ethernet-within-IP Encapsulation / RFC3378             |
| 98              | Encapsulation Header / RFC1241                         |
| 108             | IP Payload Compression Protocol / RFC2393              |
| 112             | Virtual Router Redundancy Protocol / RFC3768           |
| 134             | RSVP-E2E-IGNORE / RFC3175                              |
| 135             | Mobility Header / RFC3775                              |
| 136             | UDPLite / RFC3828                                      |
| 137             | MPLS-in-IP / RFC4023                                   |
| 138             | MANET Protocols / RFC-ietf-manet-iana-07.txt           |

Table 27-2: IP protocol number and description (cont.)

| Protocol Number | Protocol Description [RFC]                    |
|-----------------|---|
| 139-252         | Unassigned / IANA                             |
| 253             | Use for experimentation and testing / RFC3692 |
| 254             | Use for experimentation and testing / RFC3692 |
| 255             | Reserved / IANA                               |

**Mode** Global Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** Use IPv6 extended access-lists to control the transmission of IPv6 packets on an interface, and restrict the content of routing updates. The switch stops checking the IPv6 extended access-list when a match is encountered.

The filter entry will match on any IP protocol type packet that has the specified source and destination IPv6 addresses and the specified IP protocol type. The parameter *any* may be specified if an address does not matter.

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Examples** To create the IPv6 access-list named ACL-1 to deny IP protocol 9 packets from 2001:0db8:1::1/128 to 2001:0db8:f::1/128, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list extended ACL-1 deny proto 9
2001:0db8:1::1/128 2001:0db8:f::1/128
```

To remove the IPv6 access-list named ACL-1 to deny IP protocol 9 packets from 2001:0db8:1::1/128 to 2001:0db8:f::1/128, use the commands:

```
awplus# configure terminal
awplus(config)# no ipv6 access-list extended ACL-1 deny proto
10 2001:0db8:1::1/128 2001:0db8:f::1/128
```

**Related Commands**

- [ipv6 access-list extended \(named\)](#)
- [\(ipv6 access-list extended IP protocol filter\)](#)
- [show ipv6 access-list \(IPv6 Software ACLs\)](#)
- [show running-config](#)

## (ipv6 access-list extended IP protocol filter)

**Overview** Use this ACL filter to add a filter entry for an IPv6 source and destination address and prefix, with or without an IP protocol specified, to the current extended IPv6 access-list. If a sequence is specified, the new entry is inserted at the specified location. Otherwise, the new entry is added at the end of the access-list.

The **no** variant of this command removes a filter entry for an IPv6 source and destination address and prefix, with or without an IP protocol filter entry, from the current extended IPv6 access-list. You can specify the ACL filter entry by entering either its sequence number, or its filter entry profile.

**Syntax [ip|proto]** [*<sequence-number>*] {deny|permit} {ip|any|proto *<ip-protocol>*} {*<ipv6-source-address/prefix>*|any} {*<ipv6-destination-address/prefix>*|any} [log]

no {deny|permit} {ip|any|proto *<ip-protocol>*} {*<ipv6-source-address/prefix>*|any} {*<ipv6-destination-address/prefix>*|any} [log]

no [*<sequence-number>*]

| Parameter                                      | Description  |
|--|--|
| <i>&lt;sequence-number&gt;</i>                 | <1-65535><br>The sequence number for the filter entry of the selected access control list.   |
| deny   | Specifies the packets to reject.   |
| permit   | Specifies the packets to accept.   |
| ip   | IP packet.   |
| any  | Any packet.  |
| proto <i>&lt;ip-protocol&gt;</i>               | <1-255><br>Specify IP protocol number, as defined by IANA (Internet Assigned Numbers Authority <a href="http://www.iana.org/assignments/protocol-numbers">www.iana.org/assignments/protocol-numbers</a> )<br>See below for a list of IP protocol numbers and their descriptions. |
| <i>&lt;ipv6-source-address/prefix&gt;</i>      | IPv6 source address, or local address.<br>The IPv6 address uses the format X:X::X:X/Prefix-Length. The prefix-length is usually set between 0 and 64.  |
| any  | Any source address or local address.   |
| <i>&lt;ipv6-destination-address/prefix&gt;</i> | IPv6 destination address, or local address.<br>The IPv6 address uses the format X:X::X:X/Prefix-Length. The prefix-length is usually set between 0 and 64.   |
| any  | Any destination address or remote address.   |
| log  | Log the results.   |



Table 27-3: IP protocol number and description

| Protocol Number | Protocol Description [RFC]                             |
|-----------------|--|
| 1               | Internet Control Message [RFC792]                      |
| 2               | Internet Group Management [RFC1112]                    |
| 3               | Gateway-to-Gateway [RFC823]                            |
| 4               | IP in IP [RFC2003]                                     |
| 5               | Stream [RFC1190] [RFC1819]                             |
| 6               | TCP (Transmission Control Protocol) [RFC793]           |
| 8               | EGP (Exterior Gateway Protocol) [RFC888]               |
| 9               | IGP (Interior Gateway Protocol) [IANA]                 |
| 11              | Network Voice Protocol [RFC741]                        |
| 17              | UDP (User Datagram Protocol) [RFC768]                  |
| 20              | Host monitoring [RFC869]                               |
| 27              | RDP (Reliable Data Protocol) [RFC908]                  |
| 28              | IRTP (Internet Reliable Transaction Protocol) [RFC938] |
| 29              | ISO-TP4 (ISO Transport Protocol Class 4) [RFC905]      |
| 30              | Bulk Data Transfer Protocol [RFC969]                   |
| 33              | DCCP (Datagram Congestion Control Protocol) [RFC4340]  |
| 48              | DSR (Dynamic Source Routing Protocol) [RFC4728]        |
| 50              | ESP (Encap Security Payload) [RFC2406]                 |
| 51              | AH (Authentication Header) [RFC2402]                   |
| 54              | NARP (NBMA Address Resolution Protocol) [RFC1735]      |
| 58              | ICMP for IPv6 [RFC1883]                                |
| 59              | No Next Header for IPv6 [RFC1883]                      |
| 60              | Destination Options for IPv6 [RFC1883]                 |
| 88              | EIGRP (Enhanced Interior Gateway Routing Protocol)     |
| 89              | OSPFIGP [RFC1583]                                      |
| 97              | Ethernet-within-IP Encapsulation / RFC3378             |
| 98              | Encapsulation Header / RFC1241                         |
| 108             | IP Payload Compression Protocol / RFC2393              |
| 112             | Virtual Router Redundancy Protocol / RFC3768           |
| 134             | RSVP-E2E-IGNORE / RFC3175                              |
| 135             | Mobility Header / RFC3775                              |
| 136             | UDPLite / RFC3828                                      |

Table 27-3: IP protocol number and description (cont.)

| Protocol Number | Protocol Description [RFC]                    |
|-----------------|---|
| 137             | MPLS-in-IP / RFC4023                          |
| 138             | MANET Protocols / RFC-ietf-manet-iana-07.txt  |
| 139-252         | Unassigned / IANA                             |
| 253             | Use for experimentation and testing / RFC3692 |
| 254             | Use for experimentation and testing / RFC3692 |
| 255             | Reserved / IANA                               |

**Mode** IPv6 Extended ACL Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** The filter entry will match on any IP protocol type packet that has the specified source and destination IPv6 addresses and the specified IP protocol type. The parameter *any* may be specified if an address does not matter.

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Examples** To add a new ACL filter entry to the extended IPv6 access-list named *my-list* with sequence number 5 rejecting the IPv6 packet from 2001:db8:1:1 to 2001:db8:f:1, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list extended my-list
awplus(config-ipv6-ext-acl)# 5 deny ip 2001:db8:1::1/128
2001:db8:f::1/128
```

To remove the ACL filter entry to the extended IPv6 access-list named *my-list* with sequence number 5, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list extended my-list
awplus(config-ipv6-ext-acl)# no 5
```

**Related Commands**

- [ipv6 access-list extended \(named\)](#)
- [show ipv6 access-list \(IPv6 Software ACLs\)](#)
- [show running-config](#)

## (ipv6 access-list extended TCP UDP filter)

**Overview** Use this ACL filter to add a filter entry for an IPv6 source and destination address and prefix, with a TCP (Transmission Control Protocol) or UDP (User Datagram Protocol) source and destination port specified, to the current extended IPv6 access-list. If a sequence number is specified, the new entry is inserted at the specified location. Otherwise, the new entry is added at the end of the access-list.

The **no** variant of this command removes a filter entry for an IPv6 source and destination address and prefix, with a TCP or UDP source and destination port specified, from the current extended IPv6 access-list. You can specify the filter entry for removal by entering either its sequence number, or its filter entry profile.

**Syntax [tcp|udp]** [*<sequence-number>*] {deny|permit} {tcp|udp} {<ipv6-source-address/prefix>|any} {eq <sourceport>|lt <sourceport>|gt <sourceport>|ne <sourceport>} {<IPv6-destination-address/prefix>|any} {eq <destport>|lt <destport>|gt <destport>|ne <destport>} [log]

no {deny|permit} {tcp|udp} {<ipv6-source-address/prefix>|any} {eq <sourceport>|lt <sourceport>|gt <sourceport>|ne <sourceport>}} {<IPv6-destination-address/prefix>|any} {eq <destport>|lt <destport>|gt <destport>|ne <destport>} [log]

no <sequence-number>

| Parameter                    | Description   |
|------------------------------|---|
| <sequence-number>            | <1-65535><br>The sequence number for the filter entry of the selected access control list.  |
| deny                         | Specifies the packets to reject.  |
| permit                       | Specifies the packets to accept.  |
| tcp                          | TCP packet.   |
| udp                          | UDP packet.   |
| <ipv6-source-address/prefix> | IPv6 source address, or local address.<br>The IPv6 address uses the format X:X::X:Prefix-Length. The prefix-length is usually set between 0 and 64. |
| any                          | Any source address or local address.  |
| eq                           | Equal to.   |
| lt                           | Less than.  |
| gt                           | Greater than.   |
| ne                           | Not equal to.   |
| <sourceport>                 | The source port number, specified as an integer between 0 and 65535.  |

| Parameter                         | Description   |
|-----------------------------------|---|
| <ipv6-destination-address/prefix> | IPv6 destination address, or local address. The IPv6 address uses the format X::X:X/Prefix-Length. The prefix-length is usually set between 0 and 64. |
| <destport>                        | The destination port number, specified as an integer between 0 and 65535.   |
| log                               | Log the results.  |

**Mode** IPv6 Extended ACL Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** The filter entry will match on any packet that has the specified source and destination IPv6 addresses and the specified TCP or UDP source and destination port. The parameter *any* may be specified if an address does not matter.

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Examples** To add a new filter entry with sequence number 5 to the access-list named *my-list* to reject TCP packets from 2001:0db8::0/64 port 10 to 2001:0db8::f/64 port 20, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list extended my-list
awplus(config-ipv6-ext-acl)# 5 deny tcp 2001:0db8::0/64 eq 10
2001:0db8::f/64 eq 20
```

To add a new filter entry with sequence number 5 to the extended IPv6 access-list named *my-list* to reject UDP packets from 2001:0db8::0/64 port 10 to 2001:0db8::f/64 port 20, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list extended my-list
awplus(config-ipv6-ext-acl)# 5 deny udp 2001:0db8::0/64 eq 10
2001:0db8::f/64 eq 20
```

To remove the filter entry with sequence number 5 to the extended IPv6 access-list named *my-list*, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list extended my-list
awplus(config-ipv6-ext-acl)# no 5
```

**Related Commands** [ipv6 access-list extended \(named\)](#)  
[show ipv6 access-list \(IPv6 Software ACLs\)](#)  
[show running-config](#)

## ipv6 access-list standard (named)

**Overview** This command configures an IPv6 standard access-list for filtering frames that permit or deny IPv6 packets from a specific source IPv6 address.

The **no** variant of this command removes a specified IPv6 standard access-list.

**Syntax**  
**[list-name]** `ipv6 access-list standard <ipv6-acl-list-name>`  
`no ipv6 access-list standard <ipv6-acl-list-name>`

| Parameter                               | Description   |
|---|---|
| <code>&lt;ipv6-acl-list-name&gt;</code> | A user-defined name for the IPv6 software standard access-list. |

**Syntax [deny|permit]** `ipv6 access-list standard <ipv6-acl-list-name> [{deny|permit} {<ipv6-source-address/prefix-length>|any} [exact-match]]`  
`no ipv6 access-list standard <ipv6-acl-list-name> [{deny|permit} {<ipv6-source-address/prefix-length>|any} [exact-match]]`

| Parameter  | Description   |
|--|---|
| <code>&lt;ipv6-acl-list-name&gt;</code>                | A user-defined name for the IPv6 software standard access-list.   |
| <code>deny</code>                                      | The IPv6 software standard access-list rejects packets that match the type, source, and destination filtering specified with this command.                    |
| <code>permit</code>                                    | The IPv6 software standard access-list permits packets that match the type, source, and destination filtering specified with this command.                    |
| <code>&lt;ipv6-source-address/prefix-length&gt;</code> | Specifies a source address and prefix length. The IPv6 address prefix uses the format X:X::/prefix-length. The prefix-length is usually set between 0 and 64. |
| <code>any</code>                                       | Matches any source IPv6 address.  |
| <code>exact-match</code>                               | Exact match of the prefixes.  |

**Mode** Global Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** Use IPv6 standard access-lists to control the transmission of IPv6 packets on an interface, and restrict the content of routing updates. The switch stops checking the IPv6 standard access-list when a match is encountered.

For backwards compatibility you can either create IPv6 standard access-lists from within this command, or you can enter `ipv6 access-list standard` followed by only the IPv6 standard access-list name. This latter (and preferred) method moves you to the `(config-ipv6-std-acl)` prompt for the selected IPv6 standard access-list, and from here you can configure the filters for this selected IPv6 standard access-list.

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Example** To enter the IPv6 Standard ACL Configuration mode for the access-list named `my-list`, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list standard my-list
awplus(config-ipv6-std-acl)#
```

**Related Commands** [\(ipv6 access-list standard filter\)](#)  
[show ipv6 access-list \(IPv6 Software ACLs\)](#)  
[show running-config](#)

## (ipv6 access-list standard filter)

**Overview** Use this ACL filter to add a filter entry for an IPv6 source address and prefix length to the current standard IPv6 access-list. If a sequence number is specified, the new entry is inserted at the specified location. Otherwise, the new entry is added at the end of the access-list.

The **no** variant of this command removes a filter entry for an IPv6 source address and prefix from the current standard IPv6 access-list. You can specify the filter entry for removal by entering either its sequence number, or its filter entry profile.

**Syntax [icmp]** [`<sequence-number>`] {deny|permit}  
{`<ipv6-source-address/prefix-length>`|any}  
no {deny|permit} {`<ipv6-source-address/prefix-length>`|any}  
no `<sequence-number>`

| Parameter  | Description   |
|--|---|
| <code>&lt;sequence-number&gt;</code>                   | <code>&lt;1-65535&gt;</code><br>The sequence number for the filter entry of the selected access control list. |
| deny   | Specifies the packets to reject.  |
| permit   | Specifies the packets to accept.  |
| <code>&lt;ipv6-source-address/prefix-length&gt;</code> | IPv6 source address and prefix-length in the form X:X::X:X/P.   |
| any  | Any IPv6 source host address.   |

**Mode** IPv6 Standard ACL Configuration

**Default** Any traffic controlled by a software ACL that does not explicitly match a filter is denied.

**Usage** The filter entry will match on any IPv6 packet that has the specified IPv6 source address and prefix length. The parameter `any` may be specified if an address does not matter.

**NOTE:** Software ACLs will **deny** access unless **explicitly permitted** by an ACL action.

**Examples** To add an ACL filter entry with sequence number 5 that will deny any IPv6 packets to the standard IPv6 access-list named `my-list`, enter the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list standard my-list
awplus(config-ipv6-std-acl)# 5 deny any
```

To remove the ACL filter entry that will deny any IPv6 packets from the standard IPv6 access-list named `my-list`, enter the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list standard my-list
awplus(config-ipv6-std-acl)# no deny any
```

Alternately, to remove the ACL filter entry with sequence number 5 to the standard IPv6 access-list named `my-list`, enter the commands:

```
awplus# configure terminal
awplus(config)# ipv6 access-list standard my-list
awplus(config-ipv6-std-acl)# no 5
```

**Related  
Commands**

[ipv6 access-list standard \(named\)](#)  
[show ipv6 access-list \(IPv6 Software ACLs\)](#)  
[show running-config](#)



# show ipv6 access-list (IPv6 Software ACLs)

**Overview** Use this command to display all configured IPv6 access-lists or the IPv6 access-list specified by name.

**Syntax** show ipv6 access-list [<access-list-name>]  
show ipv6 access-list standard [<access-list-name>]  
show ipv6 access-list extended [<access-list-name>]

| Parameter          | Description   |
|--------------------|---|
| <access-list-name> | Only display information about an IPv6 access-list with the specified name. |
| standard           | Only display information about standard access-lists.                       |
| extended           | Only display information about extended access-lists.                       |

**Mode** User Exec and Privileged Exec

**Example** To show all configured IPv6 access-lists, use the following command:

```
awplus# show ipv6 access-list
```

**Output** Figure 27-1: Example output from **show ipv6 access-list**

```
IPv6 access-list deny_icmp
deny icmp any any vlan 1

IPv6 access-list deny_ssh
deny tcp abcd::0/64 any eq 22
```

**Example** To show the IPv6 access-list named **deny\_icmp**, use the following command:

```
awplus# show ipv6 access-list deny_icmp
```

**Output** Figure 27-2: Example output from **show ipv6 access-list** for a named ACL

```
IPv6 access-list deny_icmp
deny icmp any any vlan 1
```

**Related  
Commands**

- [ipv6 access-list extended \(named\)](#)
- [\(ipv6 access-list extended IP protocol filter\)](#)
- [ipv6 access-list standard \(named\)](#)
- [\(ipv6 access-list extended TCP UDP filter\)](#)
- [\(ipv6 access-list standard filter\)](#)

## vty ipv6 access-class (named)

**Overview** For IPv6, use this command to set a standard named software access list to be the management ACL. This is then applied to all available VTY lines for controlling remote access by Telnet and SSH. This command allows or denies packets containing the IPv6 addresses included in the ACL to create a connection to your device.

ACLs that are attached using this command have an implicit 'deny-all' filter as the final entry in the ACL. A typical configuration is to permit a specific address, or range of addresses, and rely on the 'deny-all' filter to block all other access.

Use the **no** variant of this command to remove the access list.

**Syntax** `vty ipv6 access-class <access-name>`  
`no vty ipv6 access-class [<access-name>]`

| Parameter                        | Description  |
|----------------------------------|--|
| <code>&lt;access-name&gt;</code> | Specify an IPv6 standard software access-list name |

**Mode** Global Configuration

**Examples** To set the named standard access-list named **access-ctrl** to be the IPv6 management ACL, use the following commands:

```
awplus# configure terminal
awplus(config)# vty ipv6 access-class access-ctrl
```

To remove **access-ctrl** from the management ACL, use the following commands:

```
awplus# configure terminal
awplus(config)# no vty ipv6 access-class access-ctrl
```

**Output** Figure 27-3: Example output from the **show running-config** command

```
awplus#showrunning-config|grep access-class
vty ipv6 access-class access-ctrl
```

**Related Commands** [show running-config](#)  
[vty access-class \(numbered\)](#)

## Introduction

**Overview** This chapter provides an alphabetical reference for Quality of Service commands. QoS uses ACLs. For more information about ACLs, see the [ACL Feature Overview and Configuration Guide](#).

- Command List**
- ["class"](#) on page 1026
  - ["class-map"](#) on page 1027
  - ["clear mls qos interface policer-counters"](#) on page 1028
  - ["default-action"](#) on page 1029
  - ["description \(QoS policy-map\)"](#) on page 1030
  - ["egress-rate-limit"](#) on page 1031
  - ["match access-group"](#) on page 1032
  - ["match cos"](#) on page 1034
  - ["match dscp"](#) on page 1035
  - ["match eth-format protocol"](#) on page 1036
  - ["match inner-cos"](#) on page 1039
  - ["match inner-vlan"](#) on page 1040
  - ["match ip-precedence"](#) on page 1041
  - ["match mac-type"](#) on page 1042
  - ["match tcp-flags"](#) on page 1043
  - ["match vlan"](#) on page 1044
  - ["mls qos cos"](#) on page 1045
  - ["mls qos enable"](#) on page 1046
  - ["mls qos map cos-queue to"](#) on page 1047

- [“mls qos map premark-dscp to”](#) on page 1048
- [“no police”](#) on page 1050
- [“police single-rate action”](#) on page 1051
- [“police twin-rate action”](#) on page 1053
- [“policy-map”](#) on page 1055
- [“priority-queue”](#) on page 1056
- [“remark-map”](#) on page 1057
- [“remark new-cos”](#) on page 1059
- [“service-policy input”](#) on page 1061
- [“set ip next-hop \(PBR\)”](#) on page 1062
- [“show class-map”](#) on page 1064
- [“show mls qos”](#) on page 1065
- [“show mls qos interface”](#) on page 1066
- [“show mls qos interface policer-counters”](#) on page 1069
- [“show mls qos interface queue-counters”](#) on page 1071
- [“show mls qos interface storm-status”](#) on page 1073
- [“show mls qos maps cos-queue”](#) on page 1074
- [“show mls qos maps premark-dscp”](#) on page 1075
- [“show platform classifier statistics utilization brief”](#) on page 1076
- [“show policy-map”](#) on page 1077
- [“storm-action”](#) on page 1078
- [“storm-downtime”](#) on page 1079
- [“storm-protection”](#) on page 1080
- [“storm-rate”](#) on page 1081
- [“storm-window”](#) on page 1082
- [“trust dscp”](#) on page 1083
- [“wrr-queue disable queues”](#) on page 1084
- [“wrr-queue egress-rate-limit queues”](#) on page 1085
- [“wrr-queue weight queues”](#) on page 1086

# class

**Overview** Use this command to associate an existing class-map to a policy or policy-map (traffic classification), and to enter Policy Map Class Configuration mode to configure the class-map.

Use the **no** variant of this command to delete an existing class-map.

If your class-map does not exist, you can create it by using the [class-map](#) command.

**Syntax** `class {<name>|default}`  
`no class <name>`

| Parameter | Description                               |
|-----------|---|
| <name>    | Name of the (already existing) class-map. |
| default   | Specify the default class-map.            |

**Mode** Policy Map Configuration

**Example** The following example creates the policy-map `pmap1` (using the `policy-map` command), then associates this to an already existing class-map named `cmap1`, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap1
awplus(config-pmap)# class cmap1
awplus(config-pmap-c)#
```

**Related  
Commands** [class-map](#)  
[policy-map](#)

# class-map

**Overview** Use this command to create a class-map.  
Use the **no** variant of this command to delete the named class-map.

**Syntax** `class-map <name>`  
`no class-map <name>`

| Parameter | Description                          |
|-----------|--------------------------------------|
| <name>    | Name of the class-map to be created. |

**Mode** Global Configuration

**Example** This example creates a class-map called `cmap1`, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)#
```

# clear mls qos interface policer-counters

**Overview** Resets an interface's policer counters to zero. You can either clear a specific class-map, or you can clear all class-maps by not specifying a class map.

**Syntax** `clear mls qos interface <port> policer-counters [class-map <class-map>]`

| Parameter   | Description  |
|-------------|--|
| <port>      | The port may be a switch port (e.g. <code>port1.0.4</code> ), a static channel group (e.g. <code>sa3</code> ), or a dynamic (LACP) channel group (e.g. <code>po4</code> ). |
| class-map   | Select a class-map.  |
| <class-map> | Class-map name.  |

**Mode** Privileged Exec

**Example** To reset the policy counters to zero for all class-maps for `port1.0.1`, use the command:

```
awplus# clear mls qos interface port1.0.1 policer-counters
```

**Related Commands** [show mls qos interface policer-counters](#)



# default-action

**Overview** Sets the action for the default class-map belonging to a particular policy-map. The action for a non-default class-map depends on the action of any ACL that is applied to the policy-map.

The default action can therefore be thought of as specifying the action that will be applied to any data that does not meet the criteria specified by the applied matching commands.

Use the **no** variant of this command to reset to the default action of 'permit'.

**Syntax**

```
default-action  
[permit|deny|send-to-cpu|copy-to-cpu|copy-to-mirror|  
send-to-mirror]  
no default-action
```

| Parameter      | Description                                 |
|----------------|---|
| permit         | Packets to permit.                          |
| deny           | Packets to deny.                            |
| send-to-cpu    | Specify packets to send to the CPU.         |
| copy-to-cpu    | Specify packets to copy to the CPU.         |
| copy-to-mirror | Specify packets to copy to the mirror port. |
| send-to-mirror | Specify packets to send to the mirror port. |

**Default** The default is 'permit'.

**Mode** Policy Map Configuration

**Examples** To set the action for the default class-map to `deny`, use the command:

```
awplus(config-pmap)# default-action deny
```

To set the action for the default class-map to `copy-to-mirror` for use with the [mirror interface](#) command, use the command:

```
awplus(config-pmap)# default-action copy-to-mirror
```

**Related Commands** [mirror interface](#)

## description (QoS policy-map)

**Overview** Adds a textual description of the policy-map. This can be up to 80 characters long. Use the **no** variant of this command to remove the current description from the policy-map.

**Syntax** `description <line>`  
`no description`

| Parameter                 | Description                               |
|---------------------------|---|
| <code>&lt;line&gt;</code> | Up to 80 character long line description. |

**Mode** Policy Map Configuration

**Example** To add the description, VOIP traffic, use the command:  
`awplus(config-pmap)# description VOIP traffic`

# egress-rate-limit

**Overview** Use this command to limit the amount of traffic that can be transmitted per second from this port.

Use the **no** variant of this command to disable the limiting of traffic egressing on the interface.

**Syntax** `egress-rate-limit <bandwidth>`  
`no egress-rate-limit`

| Parameter                      | Description   |
|--------------------------------|---|
| <code>&lt;bandwidth&gt;</code> | Bandwidth <1-10000000 units per second> (usable units: k, m, g). The egress rate limit can be configured in multiples of 64kbps. If you configure a value that is not an exact multiple of 64kbps, then the value will be rounded up to the nearest higher exact multiple of 64kbps. The minimum is 64 Kb. The default unit is Kb ( <b>k</b> ), but Mb ( <b>m</b> ) or Gb ( <b>g</b> ) can also be specified. The command syntax is not case sensitive, so a value such as 20m or 20M will be interpreted as 20 megabits. |

**Mode** Interface Configuration

**Examples** To enable egress rate limiting on a port, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# egress-rate-limit 64k
% Egress rate limit has been set to 64 Kb
```

To disable egress rate limiting on a port, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no egress-rate-limit
```

# match access-group

**Overview** Use this command to define match criterion for a class-map.

**Syntax** `match access-group {<hw-IP-ACL>|<hw-MAC-ACL>|<hw-named-ACL>}`  
`no match access-group`  
`{<hw-IP-ACL>|<hw-MAC-ACL>|<hw-named-ACL>}`

| Parameter      | Description   |
|----------------|---|
| <hw-IP-ACL>    | Specify a hardware IP ACL number in the range <3000-3699>.  |
| <hw-MAC-ACL>   | Specify a hardware MAC ACL number in the range <4000-4699>. |
| <hw-named-ACL> | Specify the hardware named ACL.                             |

**Mode** Class Map Configuration

**Usage** First create an access-list that applies the appropriate permit/deny requirements. Then use the **match access-group** command to apply this access-list for matching to a class-map. Note that this command will apply the access-list matching only to *incoming* data packets.

**Examples** To configure a class-map named `cmap1` with one match criterion: `access-list 3001`, which allows IP traffic from any source to any destination, use the commands:

```
awplus# configure terminal
awplus(config)# access-list 3001 permit ip any any
awplus(config)# class-map cmap1
awplus(config-cmap)# match access-group 3001
```

To configure a class-map named `cmap2` with one match criterion: `access-list 3001`, which allows MAC traffic from any source to any destination, use the commands:

```
awplus# configure terminal
awplus(config)# access-list 4001 permit any any
awplus(config)# class-map cmap2
awplus(config-cmap)# match access-group 4001
```

To configure a class-map named `cmap3` with one match criterion: `access-list hw_acl`, which allows IP traffic from any source to any destination, use the commands:

```
awplus# configure terminal
awplus(config)# access-list hardware hw_acl
awplus(config-ip-hw-acl)# permit ip any any
awplus(config)# class-map cmap3
awplus(config-cmap)# match access-group hw_acl
```

**Related  
Commands**   [class-map](#)

# match cos

**Overview** Use this command to define a COS to match against incoming packets.  
Use the **no** variant of this command to remove CoS.

**Syntax** `match cos <0-7>`  
`no match cos`

| Parameter | Description            |
|-----------|------------------------|
| <0-7>     | Specify the CoS value. |

**Mode** Class Map Configuration

**Examples** To set the class-map's CoS to 4, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# match cos 4
```

To remove CoS from a class-map, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# no match cos
```

# match dscp

**Overview** Use this command to define the DSCP to match against incoming packets.  
Use the **no** variant of this command to remove a previously defined DSCP.

**Syntax** `match dscp <0-63>`  
`no match dscp`

| Parameter | Description   |
|-----------|---|
| <0-63>    | Specify DSCP value (only one value can be specified). |

**Mode** Class Map Configuration

**Usage** Use the **match dscp** command to define the match criterion after creating a class-map.

**Examples** To configure a class-map named `cmap1` with criterion that matches DSCP 56, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# match dscp 56
```

To remove a previously defined DSCP from a class-map named `cmap1`, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# no match dscp
```

**Related  
Commands** [class-map](#)

# match eth-format protocol

**Overview** This command sets the Ethernet format and the protocol for a class-map to match on.

Select one Layer 2 format and one Layer 3 protocol when you issue this command.

Use the **no** variant of this command to remove the configured Ethernet format and protocol from a class-map.

**Syntax** `match eth-format <layer-two-format> protocol  
<layer-three-protocol>  
no match eth-format protocol`

| Parameter               | Description  |
|-------------------------|--|
| <layer-two-formats>     |  |
| 802dot2-tagged          | 802.2 Tagged Packets (enter the parameter name).   |
| 802dot2-untagged        | 802.2 Untagged Packets (enter the parameter name).   |
| ethii-tagged            | EthII Tagged Packets (enter the parameter name).   |
| ethii-untagged          | EthII Untagged Packets (enter the parameter name).   |
| ethii-any               | EthII Tagged or Untagged Packets (enter the parameter name).   |
| netwareraw-tagged       | Netware Raw Tagged Packets (enter the parameter name).   |
| netwareraw-untagged     | Netware Raw Untagged Packets (enter the parameter name).   |
| snap-tagged             | SNAP Tagged Packets (enter the parameter name).  |
| snap-untagged           | SNAP Untagged Packets (enter the parameter name).  |
| <layer-three-protocols> |  |
| <word>                  | A Valid Protocol Number in hexadecimal.  |
| any                     | Note that the parameter "any" is only valid when used with the netwarerawtagged and netwarerawuntagged protocol options. |
| sna-path-control        | Protocol Number 04 (enter the parameter name or its number).   |
| proway-lan              | Protocol Number 0E (enter the parameter name or its number).   |
| eia-rs Protocol         | Number 4E (enter the parameter name or its number).  |
| proway Protocol         | Number 8E (enter the parameter name or its number).  |
| ipx-802dot2             | Protocol Number E0 (enter the parameter name or its number).   |



| Parameter         | Description  |
|-------------------|--|
| netbeui           | Protocol Number F0 (enter the parameter name or its number).   |
| iso-clns-is       | Protocol Number FE (enter the parameter name or its number).   |
| xdot75-internet   | Protocol Number 0801 (enter the parameter name or its number). |
| nbs-internet      | Protocol Number 0802 (enter the parameter name or its number). |
| ecma-internet     | Protocol Number 0803 (enter the parameter name or its number). |
| chaosnet          | Protocol Number 0804 (enter the parameter name or its number). |
| xdot25-level-3    | Protocol Number 0805 (enter the parameter name or its number). |
| arp Protocol      | Number 0806 (enter the parameter name or its number).          |
| xns-compatible    | Protocol Number 0807 (enter the parameter name or its number). |
| banyan-systems    | Protocol Number 0BAD (enter the parameter name or its number). |
| bbn-simnet        | Protocol Number 5208 (enter the parameter name or its number). |
| dec-mop-dump-ld   | Protocol Number 6001 (enter the parameter name or its number). |
| dec-mop-rem-cdons | Protocol Number 6002 (enter the parameter name or its number). |
| dec-decnet        | Protocol Number 6003 (enter the parameter name or its number). |
| dec-lat           | Protocol Number 6004 (enter the parameter name or its number). |
| dec-diagnostic    | Protocol Number 6005 (enter the parameter name or its number). |
| dec-customer      | Protocol Number 6006 (enter the parameter name or its number). |
| dec-lavc          | Protocol Number 6007 (enter the parameter name or its number). |
| rarp              | Protocol Number 8035 (enter the parameter name or its number). |
| dec-lanbridge     | Protocol Number 8038 (enter the parameter name or its number). |
| dec-encryption    | Protocol Number 803D (enter the parameter name or its number). |

| Parameter        | Description  |
|------------------|--|
| appletalk        | Protocol Number 809B (enter the parameter name or its number). |
| ibm-sna          | Protocol Number 80D5 (enter the parameter name or its number). |
| appletalk-aarp   | Protocol Number 80F3 (enter the parameter name or its number). |
| snmp             | Protocol Number 814CV.   |
| ethertalk-2      | Protocol Number 809B (enter the parameter name or its number). |
| ethertalk-2-aarp | Protocol Number 80F3 (enter the parameter name or its number). |
| ipx-snap         | Protocol Number 8137 (enter the parameter name or its number). |
| ipx-802dot3      | Protocol Number FFFF (enter the parameter name or its number). |
| ip               | Protocol Number 0800 (enter the parameter name or its number). |
| ipx              | Protocol Number 8137 (enter the parameter name or its number). |
| ipv6             | Protocol Number 86DD (enter the parameter name or its number). |

**Mode** Class Map Configuration

**Examples** To set the eth-format to ethii-tagged and the protocol to 0800 (IP) for class-map cmap1, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# match eth-format ethii-tagged protocol
0800
awplus#
awplus(config-cmap)# match eth-format ethii-tagged protocol ip
```

To remove the eth-format and the protocol from the class-map cmap1, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# no match eth-format protocol
```

# match inner-cos

**Overview** Sets the Inner CoS for a class-map to match on.  
Use the **no** variant of this command to remove CoS.

**Syntax** `match inner-cos <0-7>`  
`no match inner-cos`

| Parameter | Description                  |
|-----------|------------------------------|
| <0-7>     | Specify the Inner CoS value. |

**Mode** Class Map Configuration

**Examples** To set the class-map's inner-cos to 4, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# match inner-cos 4
```

To remove CoS from the class-map, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# no match inner-cos
```

# match inner-vlan

**Overview** Use this command to define the inner VLAN ID as match criteria.  
Use the **no** variant of this command to disable the VLAN ID used as match criteria.

**Syntax** `match inner-vlan <1-4094>`  
`no match inner-vlan`

| Parameter                   | Description      |
|-----------------------------|------------------|
| <code>&lt;1-4094&gt;</code> | The VLAN number. |

**Mode** Class Map Configuration

**Usage** This command is used in double-tagged networks to match on a VLAN ID belonging to the client network. For more information on VLAN double-tagged networks, see the [VLAN Feature Overview and Configuration Guide](#).

**Examples** To configure a class-map named `cmap1` to match traffic from inner VLAN 3, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# match inner-vlan 3
```

To disable the configured VLAN ID as a match criteria for the class-map named `cmap1`, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# no match inner-vlan
```

# match ip-precedence

**Overview** Use this command to identify IP precedence values as match criteria.

Use the **no** variant of this command to remove IP precedence values from a class-map.

**Syntax** `match ip-precedence <0-7>`  
`no match ip-precedence`

| Parameter | Description                         |
|-----------|-------------------------------------|
| <0-7>     | The precedence value to be matched. |

**Mode** Class Map Configuration

**Example** To configure a class-map named `cmap1` to match all IPv4 packets with a precedence value of 5, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# match ip-precedence 5
```

# match mac-type

**Overview** Use this command to set the MAC type for a class-map to match on.  
Use **no** variant of this command to remove the MAC type match entry.

**Syntax** `match mac-type {l2broadcast|l2multicast|l2unicast}`  
`no match mac-type`

| Parameter   | Description                |
|-------------|----------------------------|
| l2broadcast | Layer 2 Broadcast traffic. |
| l2multicast | Layer 2 Multicast traffic. |
| l2unicast   | Layer 2 Unicast traffic.   |

**Mode** Class Map Configuration

**Examples** To set the class-map's MAC type to Layer 2 multicast, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# match mac-type l2multicast
```

To remove the class-map's MAC type entry, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# no match mac-type
```

# match tcp-flags

**Overview** Sets one or more TCP flags (control bits) for a class-map to match on.

Use the **no** variant of this command to remove one or more TCP flags for a class-map to match on.

**Syntax** `match tcp-flags {[ack][fin][psh][rst][syn][urg]}`  
`no match tcp-flags {[ack][fin][rst][syn][urg]}`

| Parameter | Description  |
|-----------|--------------|
| ack       | Acknowledge. |
| fin       | Finish.      |
| psh       | Push         |
| rst       | Reset.       |
| syn       | Synchronize. |
| urg       | Urgent.      |

**Mode** Class Map Configuration

**Examples** To set the class-map's TCP flags to `ack` and `syn`, use the commands:

```
awplus# configure terminal
awplus(config)# class-map
awplus(config-cmap)# match tcp-flags ack syn
```

To remove the TCP flags `ack` and `rst`, use the commands:

```
awplus# configure terminal
awplus(config)# class-map
awplus(config-cmap)# no match tcp-flags ack rst
```

# match vlan

**Overview** Use this command to define the VLAN ID as match criteria.  
Use the **no** variant of this command to disable the VLAN ID used as match criteria.

**Syntax** `match vlan <1-4094>`  
`no match vlan`

| Parameter | Description      |
|-----------|------------------|
| <1-4094>  | The VLAN number. |

**Mode** Class Map Configuration

**Examples** To configure a class-map named `cmap1` to include traffic from VLAN 3, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# match vlan 3
```

To disable the configured VLAN ID as a match criteria for the class-map named `cmap1`, use the commands:

```
awplus# configure terminal
awplus(config)# class-map cmap1
awplus(config-cmap)# no match vlan
```



# mls qos cos

**Overview** This command assigns a CoS (Class of Service) user-priority value to untagged frames entering a specified interface. By default, all untagged frames are assigned a CoS value of 0.

Use the **no** variant of this command to return the interface to the default CoS setting for untagged frames entering the interface.

**Syntax** `mls qos cos <0-7>`  
`no mls qos cos`

| Parameter | Description                                |
|-----------|--|
| <0-7>     | The Class of Service, user-priority value. |

**Default** By default, all untagged frames are assigned a CoS value of 0. Note that for tagged frames, the default behavior is not to alter the CoS value.

**Mode** Interface Configuration

**Example** To assign a CoS user priority value of 2 to all untagged packets entering ports 1.0.1 to 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1-port1.0.6
awplus(config-if)# mls qos cos 2
```

# mls qos enable

**Overview** Use this command to globally enable QoS on the switch or stack.

Use the **no** variant of this command to globally disable QoS and remove all QoS configuration. The **no** variant of this command removes all class-maps, policy-maps, and policers that have been created. Running the **no mls qos** command will therefore remove all pre-existing QoS configurations on the switch.

**Mode** Global Configuration

**Syntax** `mls qos enable`  
`no mls qos`

**Example** To enable QoS on the switch, use the commands:

```
awplus# configure terminal
awplus(config)# mls qos enable
```

# mls qos map cos-queue to

**Overview** Use this command to set the default CoS to egress queue mapping. This is the default queue mapping for packets that do not get assigned an egress queue via any other QoS functionality.

Use the **no** variant of this command to reset the cos-queue map back to its default setting. The default mappings for this command are:

|                |   |   |   |   |   |   |   |   |
|----------------|---|---|---|---|---|---|---|---|
| CoS Priority : | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| -----          |   |   |   |   |   |   |   |   |
| CoS QUEUE:     | 2 | 0 | 1 | 3 | 4 | 5 | 6 | 7 |

**Syntax** `mls qos map cos-queue <cos-priority> to <queue-number>`  
`no mls qos map cos-queue`

| Parameter      | Description   |
|----------------|---|
| <cos-priority> | CoS priority value. Can take a value between 0 and 7. |
| <queue-number> | Queue number. Can take a value between 0 and 7.       |

**Mode** Global Configuration

**Examples** To map CoS 2 to queue 0, use the command:

```
awplus# configure terminal
awplus(config)# mls qos map cos-queue 2 to 0
```

To set the cos-queue map back to its defaults, use the command:

```
awplus# configure terminal
awplus(config)# no mls qos map cos-queue
```

**Related Commands** [show mls qos interface](#)

# mls qos map premark-dscp to

**Overview** This command configures the premark-dscp map. It is used when traffic is classified by a class-map that has [trust dscp](#) configured. Based on a lookup DSCP, the map determines new QoS settings for the traffic.

The **no** variant of this command resets the premark-dscp map to its defaults. If no DSCP is specified then all DSCP entries will be reset to their defaults.

**Syntax** `mls qos map premark-dscp <0-63> to  
{[new-dscp <0-63>] [new-cos <0-7>]  
[new-bandwidth-class {green|yellow|red}]}`  
`no mls qos map premark-dscp [<0-63>]`

| Parameter           | Description   |
|---------------------|---|
| premark-dscp <0-63> | The DSCP value on ingress.  |
| new-dscp <0-63>     | The DSCP value that the packet will have on egress.<br>If unspecified, this value will remain the DSCP ingress value. |
| new-cos <0-7>       | The CoS value that the packet will have on egress.<br>If unspecified, this value will retain its value on ingress.    |
| new-bandwidth-class | Modify Egress Bandwidth-class.<br>If unspecified, this value will be set to green.                                    |
| green               | Egress Bandwidth-class green (marked down Bandwidth-class).   |
| yellow              | Egress Bandwidth-class yellow (marked down Bandwidth-class).  |
| red                 | Egress Bandwidth-class red (marked down Bandwidth-class).   |

**Mode** Global Configuration

**Usage** With the [trust dscp](#) command set, this command (**mls qos map premark-dscp**) enables you to make the following changes:

- remap the DSCP (leaving the other settings unchanged)
- remap any or all of CoS, output queue, or bandwidth class values (leaving the DSCP unchanged)

**NOTE:**

*If you attempt to remap both the DSCP and another setting, only the DSCP remap will take effect.*

**Example** To set the entry for DSCP 1 to use a new DSCP of 2, a new CoS of 3, and a new bandwidth class of yellow, use the command:

```
awplus# configure terminal
awplus(config)# mls qos map premark-dscp 1 to new-dscp 2 new-cos
3 new-bandwidth-class yellow
```

**Example** To reset the entry for DSCP 1 use the command:

```
awplus# configure terminal
awplus(config)# no mls qos map premark-dscp 1
```

**Related  
Commands** [show mls qos maps premark-dscp](#)  
[trust dscp](#)

# no police

**Overview** Use this command to disable any policer previously configured on the class-map.

**Syntax** no police

**Mode** Policy Map Class Configuration

**Usage** This command disables any policer previously configured on the class-map.

**Example** To disable policing on a class-map use the command:

```
awplus# configure terminal
awplus(config)# policy-map name
awplus(config-pmap)# class classname
awplus(config-pmap-c)# no police
```

# police single-rate action

**Overview** Configures a single-rate policer for a class-map.

**Syntax** `police single-rate <cir> <cbs> <ebs> action  
{drop-red|remark-transmit}`

| Parameter | Description  |
|-----------|--|
| <cir>     | Specify the Committed Information Rate (CIR) (1-40000000 kbps).  |
| <cbs>     | Specify the Committed Burst Size (CBS) (0-16777216 bytes).   |
| <ebs>     | Specify a Excess Burst Size (EBS) (0-16777216 bytes).  |
| action    | Specify the action if the rate is exceeded.  |
|           | drop-red Drop the red packets.   |
|           | remark-transmit Modify the packets using the remark map, then transmit. You can configure the remark map using the <a href="#">remark-map</a> command. |

**Mode** Policy Map Class Configuration

**Usage** You can use a policer to meter the traffic classified by the class-map and assign it to one of three bandwidth classes.

The bandwidth classes are green (conforming), yellow (partially-conforming), and red (non-conforming). A single-rate policer is based on three values. These are the average rate, minimum burst and maximum burst.

| Color  | Definition   |
|--------|--|
| green  | The traffic rate is less than the average rate and minimum burst.    |
| yellow | The traffic rate is between the minimum burst and the maximum burst. |
| red    | The traffic rate exceeds the average rate and the maximum burst.     |

Using an action of drop-red means that any packets classed as red are discarded.

**NOTE:** This command will not take effect when applied to a class-map that attaches to a channel group whose ports span processor instances.

Note that the [remark-map](#) does not only apply to red traffic. If a remark-map is configured on the same class-map as the policer, then the remark-map will apply to green- colored and yellow-colored traffic irrespective of the value configured on the **action** parameter of the policer. So, even if **action** is configured to **drop-red**, the remark-map will be applied to green and yellow traffic. So, the **action** parameter only applies to red- colored traffic. If **action** is set to **drop-red**, then red

traffic is dropped; if **action** is set to **remark-transmit**, then the red traffic has the action of the remark map applied to it, and is then transmitted.

**Example** To configure a single rate meter measuring traffic of 10 Mbps that drops a sustained burst of traffic over this rate, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map name
awplus(config-pmap)# class classname
awplus(config-pmap-c)# police single-rate 10000 1875000 1875000
action drop-red
```

**Related  
Commands** [no police](#)  
[police twin-rate action](#)  
[remark-map](#)



# police twin-rate action

**Overview** Configures a twin-rate policer for a class-map.

**Syntax** `police twin-rate <cir> <pir> <cbs> <pbs> action  
{drop-red|remark-transmit}`

| Parameter       | Description  |
|-----------------|--|
| <cir>           | Specify the Committed Information Rate (CIR) (1-40000000 kbps).  |
| <pir>           | Specify the Peak Information Rate (PIR) (1-40000000 kbps).   |
| <cbs>           | Specify the Committed Burst Size (CBS) (0-16777216 bytes).   |
| <pbs>           | Specify the Peak Burst Size (PBS) (0-16777216 bytes).  |
| action          | Specify the action if rate is exceeded.  |
| drop-red        | Drop the red packets.  |
| remark-transmit | Modify the packets using the remark map, then transmit. You can configure the remark map using the <a href="#">remark-map</a> command. |

**Mode** Policy Map Class Configuration

**Usage** A policer can be used to meter the traffic classified by the class-map and as a result will be given one of three bandwidth classes. These are green (conforming), yellow (partially-conforming), and red (non-conforming).

A twin-rate policer is based on four values. These are the minimum rate, minimum burst size, maximum rate, and maximum burst size.

| Bandwidth Class | Definition   |
|-----------------|--|
| green           | The sum of the number of existing (buffered) bytes plus those arriving at the port per unit time results in a value that is less than that set for the CBS.            |
| yellow          | The sum of the number of existing (buffered) bytes plus those arriving at the port per unit time results in a value that is between those set for the CBS and the PBS. |
| red             | The sum of the number of existing (buffered) bytes plus those arriving at the port per unit time, result in a value that exceeds that set for the PBS.                 |

Using an action of drop-red means that any packets classed as red will be discarded.

Using an action of remark-transmit means that the packet will be remarked with the values configured in the policed-dscp map. The index into this map is determined by the DSCP in the packet.

Note that the [remark-map](#) does not only apply to red traffic. If a remark-map is configured on the same class-map as the policer, then the remark-map will apply to green- colored and yellow-colored traffic irrespective of the value configured on the **action** parameter of the policer. So, even if **action** is configured to **drop-red**, the remark-map will be applied to green and yellow traffic. So, the **action** parameter only applies to red- colored traffic. If **action** is set to **drop-red**, then red traffic is dropped; if **action** is set to **remark-transmit**, then the red traffic has the action of the remark map applied to it, and is then transmitted.

**Example** To configure a twin rate meter measuring a minimum rate of 10 Mbps and a maximum rate of 20 Mbps that uses the premark map to remark any non-conforming traffic, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map name
awplus(config-pmap)# class classname
awplus(config-pmap-c)# police twin-rate 10000 20000 1875000
3750000 action remark-transmit
```

**Related  
Commands**    [no police](#)  
                  [police single-rate action](#)

# policy-map

**Overview** Use this command to create a policy-map and to enter Policy Map Configuration mode to configure the specified policy-map.

Use the **no** variant of this command to delete an existing policy-map.

**Syntax** `policy-map <name>`  
`no policy-map <name>`

| Parameter | Description             |
|-----------|-------------------------|
| <name>    | Name of the policy-map. |

**Mode** Global Configuration

**Example** To create a policy-map called pmap1, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap1
awplus(config-pmap)#
```

**Related  
Commands** [class-map](#)

# priority-queue

**Overview** Configures strict priority based scheduling on the specified egress queues. You must specify at least one queue.

**Syntax** `priority-queue [0] [1] [2] [3] [4] [5] [6] [7]`

| Parameter         | Description  |
|-------------------|--|
| [0] [1] . . . [7] | Specify the queues that will use strict priority scheduling. With strict priority scheduling, the switch will completely empty the highest numbered queue first, then start processing the next lowest numbered queue. |

**Mode** Interface Configuration.

**Usage** By default, the queues on all ports are set for priority queuing. You can change the queue emptying sequence to weighted round robin, by using the [wrr-queue weight queues](#) command. You can then use the [priority-queue](#) command to reset the selected queues to priority queuing.

Note that the emptying sequence for priority queuing is always highest queue number to lowest queue number.

**Example** To apply priority based scheduling to egress queues 1 and 2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# priority-queue 1 2
```

**Related Commands** [show mls qos interface](#)  
[show mls qos interface queue-counters](#)  
[wrr-queue weight queues](#)

# remark-map

**Overview** Use this command to configure the remark map. If a re-mark map is applied to a class, and a policer is also applied to the same class, then:

- green and yellow traffic will all be acted upon by the remark-map, and
- red traffic will be either dropped or acted upon by the remark-map, depending on whether the policer **action** is set to **drop-red** or **remark-transmit**.

The **no** variant of this command resets the remark map to its defaults. Specifying the bandwidth class is optional. If no bandwidth class is specified, then all bandwidth classes are reset to their defaults.

**Syntax** `remark-map [bandwidth-class {green|yellow|red}] to {[new-dscp <0-63>] [new-bandwidth-class {green|yellow|red}]}`

`no remark-map [bandwidth-class {green|yellow|red}] to {[new-dscp <0-63>] [new-bandwidth-class {green|yellow|red}]}`

| Parameter           | Description                                       |
|---------------------|---|
| bandwidth-class     | Specify the bandwidth class of packets to remark. |
| green               | Remark green packets.                             |
| yellow              | Remark yellow packets.                            |
| red                 | Remark red packets.                               |
| new-dscp            | Specify the new DSCP value.                       |
| <0-63>              | The DSCP value.                                   |
| new-bandwidth-class | Specify the new bandwidth class.                  |
| green               | Remark the packet green.                          |
| yellow              | Remark the packet yellow.                         |
| red                 | Remark the packet red.                            |

**Mode** Policy Map Class Configuration

**Examples** To remark the policed green traffic to a new DSCP of 2 and a new bandwidth class of yellow, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap1
awplus(config-pmap)# class cmap1
awplus(config-pmap-c)# remark-map bandwidth-class green to
new-dscp 2 new-bandwidth-class yellow
```

To remark the policed green traffic to a new DSCP of 2, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap1
awplus(config-pmap)# class cmap1
awplus(config-pmap-c)# remark-map bandwidth-class green to
new-dscp 2
```

To reset the DSCP for all bandwidth classes, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap1
awplus(config-pmap)# class cmap1
awplus(config-pmap-c)# no remark-map to new-dscp
```

**Related  
Commands**   [police single-rate action](#)  
[police twin-rate action](#)

# remark new-cos

- Overview** This command enables you to configure and remark either or both of:
- the CoS flag in the data packet
  - the input into the CoS to queue map, thus changing the destination egress queue.

**Syntax** `remark new-cos <0-7> [internal|external|both]`  
`no remark new-cos [internal|external|both]`

| Parameter | Description  |
|-----------|--|
| <0-7>     | The new value for the CoS flag and/or the input into the CoS to queue map.                           |
| external  | Remarks the CoS flag in the packet.  |
| internal  | Remarks the new-CoS input into the CoS to queue map.   |
| both      | Remarks (with the same value) both the CoS flag in the packet and the input to the CoS to queue map. |

**Mode** Policy Map Class Configuration

**Usage** The default CoS to Queue mappings are shown in the following table:

|                 |   |   |   |   |   |   |   |   |
|-----------------|---|---|---|---|---|---|---|---|
| CoS Value       | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| Egress Queue No | 2 | 0 | 1 | 3 | 4 | 5 | 6 | 7 |

The relationship between this command and the CoS to queue map is shown in the following figure.

Figure 28-1: Remarking and the CoS to Q map

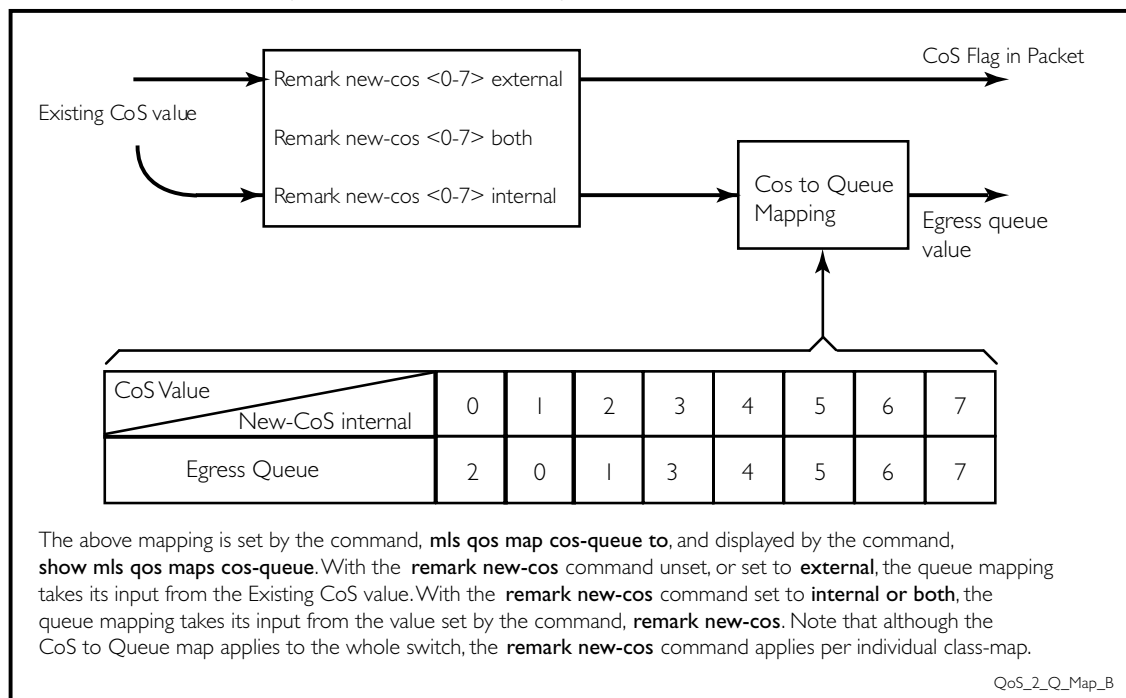


Table 28-1: CoS to egress queue remarking function

| Input  | Command                         | Output   |
|--|---------------------------------|--|
| CoS field = 1  | Remark new-cos (not configured) | CoS value = 1<br>Packet sent to egress queue 0 |
| CoS field = 1  | Remark new-cos 2 external       | CoS value = 2<br>Packet sent to egress queue 0 |
| CoS set to 1   | Remark new-cos 2 internal       | CoS value = 1<br>Packet sent to egress queue 1 |
| CoS set to 1   | Remark new-cos 2 both           | CoS value = 2<br>Packet sent to egress queue 1 |
| Note: This table assumes that the CoS to Queue map is set to its default values. |                                 |  |

**Example** For policy-map `pmap3` and class-map `cmap1`, set the CoS value to 2 and also set the input to the CoS to queue map so that the traffic is assigned to egress queue 1:

```
awplus# configure terminal
awplus(config)# policy-map pmap3
awplus(config-pmap)# class cmap1
awplus(config-pmap-c)# remark new-cos 2 both
```

**Related Commands** [mls qos map cos-queue to](#)  
[show mls qos maps cos-queue](#)



# service-policy input

**Overview** Use this command to apply a policy-map to the input of an interface.  
Use the **no** variant of this command to remove a policy-map and interface association.

**Syntax** `service-policy input <policy-map>`  
`no service-policy input <policy-map>`

| Parameter                       | Description  |
|---------------------------------|--|
| <code>&lt;policy-map&gt;</code> | Policy map name that will be applied to the input. |

**Mode** Interface Configuration

**Usage** This command can be applied to switch ports or static channel groups, but not to dynamic (LACP) channel groups.

**Example** To apply a policy-map named `pmap1` to interface `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# service-policy input pmap1
```

# set ip next-hop (PBR)

**Overview** Use this command to configure policy-based routing. When this command is set, all packets that match a selected class-map will be forwarded to the specified next hop.

The **no** variant of this command removes the next-hop address (in the context of its policy-map and class-map) from the configuration.

**Syntax** `set ip next-hop <ip-addr>`  
`no set ip next-hop`

| Parameter | Description                                 |
|-----------|---|
| <ip-addr> | The IP address of the next hop destination. |

**Mode** Policy Map Class Configuration

**Usage** In typical deployments of policy-based routing, some traffic types require conventional routing (i.e. via the routes in the IP routing table) while other traffic types require policy-based routing.

Where the traffic to be policy-routed is a subset of the traffic that is to be conventionally routed, then the configuration is reasonably simple. To configure this, make a policy-map that contains one or more class-maps that match the traffic to be policy routed. Then configure their next-hop with this command (**set ip next-hop**). The remaining traffic will be conventionally routed according to the rules set for the default class-map, providing that this is not subject to the **set ip next-hop**.

The situation becomes more complex if the traffic requiring conventional routing is a subset of the traffic to be policy-routed. To configure this, make a policy-map that contains one, or more, class-maps that match the requirement for *conventional* routing. Do not configure these class-maps with a **set ip next-hop** command. Then identify the remaining class-maps that require policy-based routing and apply the **set ip next-hop** command to them. Note that this remaining traffic could be just the default class-map, if *all* other traffic types were to be policy-routed.

Also note that the order in which the class-maps are configured in the policy-map is important, because traffic is matched against the class-maps in the order that they were assigned to the policy-map.

**Example** To forward packets to 192.168.1.1 if they match the class-map called cmap1, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap1
awplus(config-pmap)# class cmap1
awplus(config-pmap-c)# set ip next-hop 192.168.1.1
```

**Related  
commands** [class-map](#)

# show class-map

**Overview** Use this command to display the QoS class-maps' criteria for classifying traffic.

**Syntax** `show class-map [<class-map-name>]`

| Parameter        | Description            |
|------------------|------------------------|
| <class-map-name> | Name of the class-map. |

**Mode** User Exec and Privileged Exec

**Example** To display a QoS class-map's match criteria for classifying traffic, use the command:

```
awplus# show class-map cmap1
```

**Output** Figure 28-2: Example output from the **show class-map** command

```
CLASS-MAP-NAME: cmap1
  Set IP DSCP: 56
  Match IP DSCP: 7
```

**Related  
Commands** [class-map](#)

# show mls qos

**Overview** Use this command to display whether QoS is enabled or disabled on the switch.

**Syntax** `show mls qos`

**Mode** User Exec and Privileged Exec

**Example** To display whether QoS is enabled or disabled, use the command:

```
awplus# show mls qos
```

**Output** Figure 28-3: Example output from the **show mls qos** command

```
awplus#show mls qos
Enable
```

**Related  
Commands** [mls qos enable](#)

# show mls qos interface

**Overview** Displays the current settings for the interface. This includes its default CoS and queue, scheduling used for each queue, and any policies/maps that are attached.

**Syntax** `show mls qos interface [<port>]`

| Parameter | Description  |
|-----------|--------------|
| <port>    | Switch port. |

**Mode** User Exec and Privileged Exec

**Example** To display current CoS and queue settings for interface `port1.0.1`, use the command:

```
awplus# show mls qos interface port1.0.1
```

**Output** Figure 28-4: Example output from the **show mls qos interface** command

```
Default CoS: 7
Default Queue: 7
Number of egress queues: 8
Queue Set: 1
Egress Queue: 0
  Status: Enabled
  Scheduler: Strict Priority
  Queue Limit: 12%
  Egress Rate Limit: 0 Kb
Egress Queue: 1
  Status: Enabled
  Scheduler: Strict Priority
  Queue Limit: 12%
  Egress Rate Limit: 0 Kb
```

|                    |                 |
|--------------------|-----------------|
| Egress Queue:      | 2               |
| Status:            | Enabled         |
| Scheduler:         | Strict Priority |
| Queue Limit:       | 12%             |
| Egress Rate Limit: | 0 Kb            |
| Egress Queue:      | 3               |
| Status:            | Enabled         |
| Scheduler:         | Wrr Group 2     |
| Weight:            | 10              |
| Queue Limit:       | 12%             |
| Egress Rate Limit: | 0 Kb            |
| Egress Queue:      | 4               |
| Status:            | Enabled         |
| Scheduler:         | Wrr Group 1     |
| Weight:            | 10              |
| Queue Limit:       | 12%             |
| Egress Rate Limit: | 0 Kb            |
| Egress Queue:      | 5               |
| Status:            | Enabled         |
| Scheduler:         | Strict Priority |
| Queue Limit:       | 12%             |
| Egress Rate Limit: | 0 Kb            |
| Egress Queue:      | 6               |
| Status:            | Enabled         |
| Scheduler:         | Strict Priority |
| Queue Limit:       | 12%             |
| Egress Rate Limit: | 0 Kb            |
| Egress Queue:      | 7               |
| Status:            | Enabled         |
| Scheduler:         | Strict Priority |
| Queue Limit:       | 12%             |
| Egress Rate Limit: | 0 Kb            |

Table 28-2: Parameters in the output of the **show mls qos interface** command

| Parameter               | Description  |
|-------------------------|--|
| Default CoS             | The default CoS priority that will be applied to all packets arriving on this interface. |
| Default Queue           | The default queue that will be applied to all packets arriving on this interface.        |
| Number of egress queues | The total number of egress queues available on this interface.                           |
| Egress Queue X          | Number of this egress queue.   |
| Status                  | Queue can either be enabled or disabled.   |
| Scheduler               | The scheduling mode being used for servicing the transmission of packets on this port.   |

Table 28-2: Parameters in the output of the **show mls qos interface** command

| Parameter         | Description  |
|-------------------|--|
| Queue Limit       | The percentage of the port's buffers that have been allocated to this queue.   |
| Egress Rate Limit | The amount of traffic that can be transmitted via this queue per second. 0 Kb means there is currently no rate-limiting enabled. |



# show mls qos interface policer-counters

**Overview** This command displays an interface's policer counters. This can either be for a specific class-map or for all class-maps attached to the interface. If no class-map is specified then all class-map policer counters attached to the interface are displayed.

**Syntax** `show mls qos interface <port> policer-counters [class-map <class-map>]`

| Parameter   | Description         |
|-------------|---------------------|
| <port>      | Switch port.        |
| class-map   | Select a class-map. |
| <class-map> | Class-map name.     |

**Mode** User Exec and Privileged Exec

**Usage** Note that:

- The hardware does not record distinct counters for the number of Green or Yellow bytes, so the field marked Green/Yellow is the summation of bytes that have been marked Green or Yellow by the meter.
- The counters are based on metering performed on the specified class-map. Therefore, the 'Dropped Bytes' counter is the number of bytes dropped due to metering. This is different from packets dropped via a 'deny' action in the ACL. If a policer is configured to perform re-marking, bytes can be marked Red but are not dropped, and is shown with a value of 0 for the Dropped field and a non-0 value for the 'Red Bytes' field.

**Example** To show the counters for all class-maps attached to `port1.0.1`, use the command:

```
awplus# show mls qos interface port1.0.1 policer-counters
```

**Output** Figure 28-5: Example output from **show mls qos interface policer-counters**

```
awplus#show mls qos int port1.0.1 policer-counters
Interface:                port1.0.1
  Class-map:               default
    Green/Yellow Bytes:    0
    Red Bytes:             0
    Dropped Bytes:        0
    Non-dropped Bytes:    0
  Class-map:               cmap1
    Green/Yellow Bytes:    1629056
    Red Bytes:             7003200
    Dropped Bytes:        0
    Non-dropped Bytes:    8632256
```

This output shows a policer configured with remarking through 'action remark-transmit', so although bytes are marked as Red, none are dropped. Therefore, the 'Non-dropped Bytes' field shows a summation of Green/Yellow and Red bytes.

# show mls qos interface queue-counters

**Overview** This command displays an interface's egress queue counters. This can either be for a specific queue or for all queues on the interface. If no queue is specified all queue counters on the interface will be displayed.

The counters show the number of frames currently in the queue and the maximum number of frames allowed in the queue, for individual egress queues and the port's queue (which will be a sum of all egress queues).

**Syntax** `show mls qos interface <port> queue-counters [queue <0-7>]`

| Parameter | Description  |
|-----------|--------------|
| <port>    | Switch port. |
| <0-7>     | Queue.       |

**Mode** User Exec and Privileged Exec

**Example** To show the counters for all queues on port1.0.1, use the command:

```
awplus# show mls qos interface port1.0.1 queue-counters
```

**Output** Figure 28-6: Example output from the **show mls qos interface queue-counters** command

|                                     |      |
|-------------------------------------|------|
| Interface port1.0.4 Queue Counters: |      |
| Port queue length                   | 1169 |
| Egress Queue length:                |      |
| Queue 0                             | 0    |
| Queue 1                             | 0    |
| Queue 2                             | 1169 |
| Queue 3                             | 0    |
| Queue 4                             | 0    |
| Queue 5                             | 0    |
| Queue 6                             | 0    |
| Queue 7                             | 0    |

Table 28-3: Parameters in the output of the **show mls qos interface queue-counters** command

| Parameter | Description                           |
|-----------|---------------------------------------|
| Interface | Port we are showing the counters for. |

Table 28-3: Parameters in the output of the **show mls qos interface queue-counters** command (cont.)

| Parameter           | Description  |
|---------------------|--|
| Port queue length   | Number of frames in the port's queue. This will be the sum of all egress queues on the port. |
| Egress Queue length | Number of frames in a specific egress queue.   |

# show mls qos interface storm-status

**Overview** Show the current configuration and status of the QoS Storm Protection (QSP) on the given port.

**Syntax** `show mls qos interface <port> storm-status`

| Parameter | Description  |
|-----------|--------------|
| <port>    | Switch port. |

**Mode** User Exec and Privileged Exec

**Example** To see the QSP status on port1.0.1, use command:

```
awplus# show mls qos interface port1.0.1 storm-status
```

**Output** Figure 28-7: Example output from the **show mls qos interface storm-status** command

|                      |             |
|----------------------|-------------|
| Interface:           | port1.0.1   |
| Storm-Protection:    | Enabled     |
| Port-status:         | Enabled     |
| Storm Action:        | vlandisable |
| Storm Window:        | 5000 ms     |
| Storm Downtime:      | 0 s         |
| Timeout Remaining:   | 0 s         |
| Last read data-rate: | 0 kbps      |
| Storm Rate:          | 1000 kbps   |

**Related Commands**

- [storm-action](#)
- [storm-downtime](#)
- [storm-protection](#)
- [storm-rate](#)
- [storm-window](#)

# show mls qos maps cos-queue

**Overview** Show the current configuration of the cos-queue map.

**Syntax** `show mls qos maps cos-queue`

**Mode** User Exec and Privileged Exec

**Example** To display the current configuration of the cos-queue map, use the command:

```
awplus# show mls qos maps cos-queue
```

**Output** Figure 28-8: Example output from the **show mls qos maps cos-queue** command

```
COS-TO-QUEUE-MAP:
  COS :          0 1 2 3 4 5 6 7
  -----
  QUEUE:          0 7 1 3 4 5 6 7
```

**Related Commands** [mls qos map cos-queue to](#)

# show mls qos maps premark-dscp

**Overview** This command displays the premark-dscp map. This map is used when the [trust dscp](#) command has been specified for a policy-map's class-map to replace the DSCP, CoS and/or bandwidth class of a packet matching the class-map based on a lookup DSCP value.

**Syntax** `show mls qos maps premark-dscp [<0-63>]`

| Parameter | Description       |
|-----------|-------------------|
| <0-63>    | DSCP table entry. |

**Mode** User Exec and Privileged Exec

**Example** To display the premark-dscp map for DSCP 1, use the command:

```
awplus# show mls qos maps premark-dscp 1
```

**Output** Figure 28-9: Example output from the **show mls qos maps premark-dscp** command

```
PREMARK-DSCP-MAP:

DSCP 1
Bandwidth Class
-----
New DSCP           2
New CoS            0
New Bandwidth Class green
```

**Related Commands** [mls qos map premark-dscp to trust dscp](#)

# show platform classifier statistics utilization brief

**Overview** This command displays the number of used entries available for various platform functions, and the percentage that number of entries represents of the total available.

**Syntax** `show platform classifier statistics utilization brief`

**Mode** Privileged Exec

**Example** To display the platform classifier utilization statistics, use the following command:  
`awplus# show platform classifier statistics utilization brief`

**Output** Figure 28-10: Output from the **show platform classifier statistics utilization brief** command

```
awplus#show platform classifier statistics utilization brief

[Instance 0]
Number of Entries:
Policy Type      Group ID      Used / Total
-----
ACL              1476395009    0 / 118 ( 0%)
Web Auth         Inactive       0 / 0 ( 0%)
QoS              0 / 128 ( 0%)
```

**Related Commands** [show platform](#)



# show policy-map

**Overview** Displays the policy-maps configured on the switch. The output also shows whether or not they are connected to a port (attached / detached) and shows their associated class-maps.

**Syntax** `show policy-map [<name>]`

| Parameter | Description                        |
|-----------|------------------------------------|
| <name>    | The name of a specific policy-map. |

**Mode** User Exec and Privileged Exec

**Example** To display a listing of the policy-maps configured on the switch, use the command:

```
awplus# show policy-map
```

**Output** Figure 28-11: Example output from the **show policy-map** command

```
POLICY-MAP-NAME: general-traffic
State: attached
  Default class-map action: permit
  CLASS-MAP-NAME: default
  CLASS-MAP-NAME: database-traffic
```

**Related Commands** [service-policy input](#)

# storm-action

**Overview** Sets the action to be taken when triggered by QoS Storm Protection (QSP). There are three available options:

- **portdisable** will disable the port in software.
- **vlandisable** will disable the port from the VLAN matched by the class-map in class-map.
- **linkdown** will physically bring the port down. The **vlandisable** requires the match vlan class-map to be present in the class-map.

The **no** variant of this command will negate the action set by the **storm-action** command.

**Syntax** `storm-action {portdisable|vlandisable|linkdown}`  
`no storm-action`

| Parameter   | Description                   |
|-------------|-------------------------------|
| portdisable | Disable the port in software. |
| vlandisable | Disable the VLAN.             |
| linkdown    | Shutdown the port physically. |

**Mode** Policy Map Class Configuration

**Examples** To apply the storm protection of **vlandisable** to the policy-map named **pmap2**, and the class-map named **cmap1**, use the following commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap2
awplus(config-pmap)# class cmap1
awplus(config-pmap-c# storm-action vlandisable
```

To negate the storm protection set on the policy-map named **pmap2**, and the class-map named **cmap1**, use the following commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap2
awplus(config-pmap)# class cmap1
awplus(config-pmap-c# no storm-action
```

**Related Commands**

- [storm-downtime](#)
- [storm-protection](#)
- [storm-rate](#)
- [storm-window](#)

# storm-downtime

**Overview** Sets the time to re-enable a port that has been disabled by QoS Storm Protection (QSP). The time is given in seconds, from a minimum of one second to maximum of 86400 seconds (i.e. one day).

The **no** variant of this command resets the time to the default value of 10 seconds.

**Syntax** `storm-downtime <1-86400>`  
`no storm-downtime`

| Parameter                    | Description |
|------------------------------|-------------|
| <code>&lt;1-86400&gt;</code> | Seconds.    |

**Default** 10 seconds

**Mode** Policy Map Class Configuration

**Examples** To re-enable the port in 1 minute, use the following commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap2
awplus(config-pmap)# class cmap1
awplus(config-pmap-c)# storm-downtime 60
```

To re-set the port to the default (10 seconds), use the following commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap2
awplus(config-pmap)# class cmap1
awplus(config-pmap-c)# no storm-downtime
```

**Related Commands** [storm-action](#)  
[storm-protection](#)  
[storm-rate](#)  
[storm-window](#)

# storm-protection

**Overview** Use this command to enable Policy Based Storm Protection (such as QSP - QoS Storm Protection). Storm protection is activated as soon as a port is enabled. However, it will only be functional after [storm-rate](#) and [storm-window](#) have been set.

The **no** variant of this command disables Policy Based Storm Protection.

**Syntax** `storm-protection`  
`no storm-protection`

**Default** By default, storm protection is disabled.

**Mode** Policy Map Class Configuration

**Examples** To enable QSP on cmap2 in pmap2, use the following commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap2
awplus(config-pmap)# class cmap2
awplus(config-pmap-c)# storm-protection
```

To disable QSP on cmap2 in pmap2, use the following commands:

```
awplus# policy-map pmap2
awplus(config-pmap)# class cmap2
awplus(config-pmap-c)# no storm-protection
```

**Related  
Commands** [storm-action](#)  
[storm-downtime](#)  
[storm-rate](#)  
[storm-window](#)

# storm-rate

**Overview** Sets the data rate that triggers the storm-action. The rate is in kbps and the range is from 1kbps to 40Gbps.

Note that this setting is made in conjunction with the [storm-window](#) command.

Use the **no** variant of this command to negate the **storm-rate** command.

**Syntax** `storm-rate <1-40000000>`  
`no storm-rate`

| Parameter                       | Description                  |
|---------------------------------|------------------------------|
| <code>&lt;1-40000000&gt;</code> | The range of the storm-rate. |

**Default** No default

**Mode** Policy Map Class Configuration

**Usage** This setting is made in conjunction with the [storm-window](#) command.

**Examples** To limit the data rate to 100Mbps, use the following commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap2
awplus(config-pmap)# class cmap2
awplus(config-pmap-c)# storm-rate 100000
```

To negate the limit set previously, use the following commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap2
awplus(config-pmap)# class cmap2
awplus(config-pmap-c)# no storm-rate
```

**Related Commands** [storm-action](#)  
[storm-downtime](#)  
[storm-protection](#)  
[storm-window](#)

# storm-window

**Overview** Sets the window size of QoS Storm Protection (QSP). This sets the time to poll the data-rate every given milliseconds. Minimum window size is 100 ms and the maximum size is 60 sec.

Use the **no** variant of this command to negate the **storm-window** command.

**Syntax** `storm-window <100-60000>`  
`no storm-window`

| Parameter                      | Description                                |
|--------------------------------|--|
| <code>&lt;100-60000&gt;</code> | The window size, measured in milliseconds. |

**Default** No default

**Mode** Policy Map Class Configuration

**Usage** This command should be set in conjunction with the [storm-rate](#) command.

**Examples** To set the QSP window size to 5000 ms, use the following commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap2
awplus(config-pmap)# class cmap2
awplus(config-pmap-c)# storm-window 5000
```

To negate the QSP window size set previously, use the following commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap2
awplus(config-pmap)# class cmap2
awplus(config-pmap-c)# no storm-window
```

**Related  
Commands** [storm-action](#)  
[storm-downtime](#)  
[storm-protection](#)  
[storm-rate](#)

# trust dscp

**Overview** This command enables the premark-dscp map to replace the bandwidth-class, CoS, DSCP, and queue of classified traffic based on a lookup DSCP value.

With the **no** variant of this command, no premark-dscp mapping function will be applied for the selected class-map. QoS components of the packet existing either at ingress, or applied by the class-map, will pass unchanged.

**Syntax** `trust dscp`  
`no trust`

**Mode** Policy-Map Configuration. Because policy-maps are applied to ports, you can think of **trust dscp** as a per-port setting.

**Examples** To enable the premark-dscp map lookup for policy-map pmap1, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap1
awplus(config-pmap)# trust dscp
```

To disable the premark-dscp map lookup for policy-map pmap1, use the commands:

```
awplus# configure terminal
awplus(config)# policy-map pmap1
awplus(config-pmap)# no trust
```

**Related Commands** [mls qos map premark-dscp to](#)

# wrr-queue disable queues

**Overview** Use this command to disable an egress queue from transmitting traffic.  
The **no** variant of this command enables an egress queue to transmit traffic.

**Syntax** `wrr-queue disable queues [0] [1] [2] [3] [4] [5] [6] [7]`  
`no wrr-queue disable queues [0] [1] [2] [3] [4] [5] [6] [7]`

| Parameter       | Description                                 |
|-----------------|---|
| [0] [2] ... [7] | Selects one or more queues numbered 0 to 7. |

**Mode** Interface Configuration

**Examples** To disable queue 1 from transmitting traffic, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# wrr-queue disable queues 1
```

To enable queue 1 to transmit traffic, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no wrr-queue disable queues 1
```

**Related Commands** [show mls qos interface](#)



# wrr-queue egress-rate-limit queues

**Overview** Sets a limit on the amount of traffic that can be transmitted per second from these queues. The default unit is in Kb, but Mb or Gb can also be specified. The minimum is 651Kb.

**Syntax** `wrr-queue egress-rate-limit <bandwidth> queues  
{0} [1] [2] [3] [4] [5] [6] [7]`  
`no wrr-queue egress-rate-limit <bandwidth> queues  
{0} [1] [2] [3] [4] [5] [6] [7]`

| Parameter       | Description   |
|-----------------|---|
| <bandwidth>     | Bandwidth <1-40000000 kbits> (usable units: k, m, g).   |
| {0} [1] ... [7] | Selects one or more queues to apply the bandwidth limit to as specified in the preceding <bandwidth> parameter. |

**Mode** Interface Configuration

**Example** To limit the egress rate of queues 0, 1 and 2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# wrr-queue egress-rate-limit 500M queues 0 1
2
```

**Related Commands** [show mls qos interface](#)

# wrr-queue weight queues

**Overview** This command configures weighted round-robin based scheduling on the specified egress queues on switch port interfaces only. The weights are specified as ratios relative to each other.

**Syntax** `wrr-queue weight <1-15> queues [0] [1] [2] [3] [4] [5] [6] [7]`

| Parameter       | Description  |
|-----------------|--|
| <1-15>          | Weight (the higher the number the greater will be the queue servicing).              |
| [0] [1] ... [7] | Enter egress queue numbers 0-7, to assign the specified queues the specified weight. |

**Mode** Interface Configuration for switch port interfaces only (not for static aggregated interfaces).

**Usage** Only apply weighted round-robin based scheduling to switch port interfaces (for example, `awplus(config)#interface port1.0.2`).

You cannot apply weighted round-robin based scheduling to static aggregated interfaces (for example, `awplus(config)#interface sa2`). Attempting to apply weighted round-robin based scheduling on aggregated interfaces will display the console error shown below:

```
awplus# configure terminal
awplus(config)# interface sa2
awplus(config-if)# wrr-queue weight
% Invalid input detected at ^ marker
```

**Example** To apply a WRR weight of 6 to queues 0 and 1 on port1.0.1, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# wrr-queue weight 6 queues 0 1
```

**Related Commands** [priority-queue](#)  
[show mls qos interface](#)

# 29

# 802.1X Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure 802.1X port access control.

- Command List**
- ["dot1x accounting"](#) on page 1089
  - ["dot1x authentication"](#) on page 1090
  - ["debug dot1x"](#) on page 1091
  - ["dot1x control-direction"](#) on page 1092
  - ["dot1x eap"](#) on page 1094
  - ["dot1x eapol-version"](#) on page 1095
  - ["dot1x initialize interface"](#) on page 1097
  - ["dot1x initialize supplicant"](#) on page 1098
  - ["dot1x keytransmit"](#) on page 1099
  - ["dot1x max-auth-fail"](#) on page 1100
  - ["dot1x max-reauth-req"](#) on page 1102
  - ["dot1x port-control"](#) on page 1104
  - ["dot1x timeout tx-period"](#) on page 1106
  - ["show debugging dot1x"](#) on page 1108
  - ["show dot1x"](#) on page 1109
  - ["show dot1x diagnostics"](#) on page 1112
  - ["show dot1x interface"](#) on page 1114
  - ["show dot1x sessionstatistics"](#) on page 1119
  - ["show dot1x statistics interface"](#) on page 1120
  - ["show dot1x supplicant"](#) on page 1121

- [“show dot1x supplicant interface”](#) on page 1123
- [“undebbug dot1x”](#) on page 1126

# dot1x accounting

**Overview** This command overrides the **default** RADIUS accounting method for IEEE 802.1X-based authentication on an interface by allowing you to apply a user-defined named method list.

Use the **no** variant of this command to remove the named list from the interface and apply the **default** method list.

**Syntax** `dot1x accounting {default|<list-name>}`  
`no dot1x accounting`

| Parameter   | Description                              |
|-------------|--|
| default     | Apply the default accounting method list |
| <list-name> | Apply the user-defined named list        |

**Default** The **default** method list is applied to an interface by default.

**Mode** Interface Mode

**Example** To apply the named list 'vlan10\_acct' on the `vlan10` interface, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# dot1x accounting vlan10_acct
```

To remove the named list from the `vlan10` interface and set the authentication method back to **default**, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no dot1x accounting
```

**Related Commands** [aaa accounting dot1x](#)

# dot1x authentication

**Overview** This command overrides the **default** 802.1X-based authentication method on an interface by allowing you to apply a user-defined named list.

Use the **no** variant of this command to remove the named list from the interface and apply the **default** method.

**Syntax** `dot1x authentication {default|<list-name>}`  
`no dot1x authentication`

| Parameter                | Description                                  |
|--------------------------|--|
| <i>default</i>           | Apply the default authentication method list |
| <i>&lt;list-name&gt;</i> | Apply the user-defined named list            |

**Default** The **default** method list is applied to an interface by default.

**Mode** Interface Mode

**Example** To apply the named list 'vlan10\_auth' on the `vlan10` interface, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# dot1x authentication vlan10_auth
```

To remove the named list from the `vlan10` interface and set the authentication method back to **default**, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no dot1x authentication
```

**Related Commands** [aaa authentication dot1x](#)

# debug dot1x

**Overview** Use this command to enable 802.1X IEEE Port-Based Network Access Control troubleshooting functions.

Use the **no** variant of this command to disable this function.

**Syntax** `debug dot1x [all|auth-web|event|nsm|packet|timer]`  
`no debug all dot1x`  
`no debug dot1x [all|auth-web|event|nsm|packet|timer]`

| Parameter | Description  |
|-----------|--|
| all       | Used with the <b>no</b> variant of this command exclusively; turns off all debugging for 802.1X. |
| auth-web  | Specifies debugging for 802.1X auth-web information.   |
| events    | Specifies debugging for 802.1X events.   |
| nsm       | Specifies debugging for NSM messages.  |
| packet    | Specifies debugging for 802.1X packets.  |
| timer     | Specifies debugging for 802.1X timers.   |

**Mode** Privileged Exec and Global Configuration

**Usage** This command turns on a mode where trace-level information is output during authentication conversations. Be aware that this is a very verbose output.? It is mostly useful to capture this as part of escalating an issue to ATI support.

**Examples** Use this command without any parameters to turn on normal 802.1X debug information.

```
awplus# debug dot1x
awplus# show debugging dot1x
```

```
802.1X debugging status:
 802.1X events debugging is
 802.1X timer debugging is on
 802.1X packets debugging is on
 802.1X NSM debugging is on
```

**Related Commands** [show debugging dot1x](#)  
[undebug dot1x](#)

# dot1x control-direction

- Overview** This command sets the direction of the filter for the unauthorized interface.
- If the optional **in** parameter is specified with this command then packets entering the specified port are discarded. The **in** parameter discards the ingress packets received from the supplicant.
- If the optional **both** parameter is specified with this command then packets entering (ingress) and leaving (egress) the specified port are discarded. The **both** parameter discards the packets received from the supplicant and sent to the supplicant.
- The **no** variant of this command sets the direction of the filter to **both**. The port will then discard both ingress and egress traffic.

**Syntax** dot1x control-direction {in|both}  
no dot1x control-direction

| Parameter | Description  |
|-----------|--|
| in        | Discard received packets from the supplicant (ingress packets).  |
| both      | Discard received packets from the supplicant (ingress packets) and transmitted packets to the supplicant (egress packets). |

- Default** The authentication port direction is set to **both** by default.
- Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To set the port direction to the default (**both**) for port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no dot1x control-direction
```

To set the port direction to **in** for port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x control-direction in
```

To set the port direction to **in** for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# dot1x control-direction in
```



To set the port direction to the default (**both**) for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no dot1x control-direction
```

**Related  
Commands**

[auth profile \(Global Configuration\)](#)

[show dot1x](#)

[show dot1x interface](#)

[show auth interface](#)

# dot1x eap

**Overview** This command selects the transmit mode for the EAP packet. If the authentication feature is not enabled then EAP transmit mode is not enabled. The default setting discards EAP packets.

**Syntax** `dot1x eap {discard|forward|forward-untagged-vlan|forward-vlan}`

| Parameter             | Description                                   |
|-----------------------|---|
| discard               | Discard.                                      |
| forward               | Forward to all ports on the switch.           |
| forward-untagged-vlan | Forward to ports with the same untagged VLAN. |
| forward-vlan          | Forward to ports with the same VLAN.          |

**Default** The transmit mode is set to `discard` EAP packets by default.

**Mode** Global Configuration

**Examples** To set the transmit mode of EAP packet to `forward` to forward EAP packets to all ports on the switch, use the commands:

```
awplus# configure terminal
awplus(config)# dot1x eap forward
```

To set the transmit mode of EAP packet to `discard` to discard EAP packets, use the commands:

```
awplus# configure terminal
awplus(config)# dot1x eap discard
```

To set the transmit mode of EAP packet to `forward-untagged-vlan` to forward EAP packets to ports with the same untagged vlan, use the commands:

```
awplus# configure terminal
awplus(config)# dot1x eap forward-untagged-vlan
```

To set the transmit mode of EAP packet to `forward-vlan` to forward EAP packets to ports with the same vlan, use the commands:

```
awplus# configure terminal
awplus(config)# dot1x eap forward-vlan
```

# dot1x eapol-version

**Overview** This command sets the EAPOL protocol version for EAP packets when 802.1X port authentication is applied.

Use the **no** variant of this command to set the EAPOL protocol version to 1.

The default EAPOL protocol version is version 1.

**Syntax** dot1x eapol-version {1|2}  
no dot1x eapol-version

| Parameter | Description    |
|-----------|----------------|
| 1         | EAPOL version. |
| 2         | EAPOL version. |

**Default** The EAP version for 802.1X authentication is set to 1 by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To set the EAPOL protocol version to 2 for port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x eapol-version 2
```

To set the EAPOL protocol version to the default version (1) for interface port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no dot1x eapol-version
```

To set the EAPOL protocol version to 2 for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# dot1x eapol-version 2
```

To set the EAPOL protocol version to the default version (1) for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no dot1x eapol-version
```

**Validation** auth profile (Global Configuration)  
**Commands** show dot1x  
show dot1x interface

# dot1x initialize interface

**Overview** This command removes authorization for a connected **interface** with the specified `<interface-list>`. The connection will attempt to re-authorize when the specified **port** attempts to make use of the network connection.

**NOTE:** *Reauthentication could be a long time after the use of this command because the reauthorization attempt is not triggered by this command. The attempt is triggered by the first packet from the interface trying to access the network resources.*

**Syntax** `dot1x initialize interface <interface-list>`

| Parameter                           | Description   |
|-------------------------------------|---|
| <code>&lt;interface-list&gt;</code> | <p>The interfaces or ports to configure. An interface-list can be:</p> <ul style="list-style-type: none"><li>• an interface (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.6</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1,port1.0.2-1.0.4</code>. Do not mix interface types in a list</li></ul> <p>The specified interfaces must exist.</p> |

**Mode** Privileged Exec

**Examples** To initialize 802.1X port authentication on the interface `port1.0.2`, use the command:

```
awplus# dot1x initialize interface port1.0.2
```

To unauthorize switch `port1.0.1` and attempt reauthentication on switch `port1.0.1`, use the command:

```
awplus# dot1x initialize interface port1.0.1
```

To unauthorize all switch ports for a 24-port device and attempt reauthentication, use the command:

```
awplus# dot1x initialize interface port1.0.1-port1.0.24
```

**Validation Commands** `show dot1x`  
`show dot1x interface`

**Related Commands** `dot1x initialize supplicant`

# dot1x initialize supplicant

**Overview** This command removes authorization for a connected supplicant with the specified **MAC address** or **username**. The connection will attempt to re-authorize when the specified supplicant attempts to make use of the network connection.

**NOTE:** Reauthentication could be a long time after the use of this command because the reauthorization attempt is not triggered by this command. The attempt is triggered by the first packet from the supplicant trying to access the network resources.

**Syntax** dot1x initialize supplicant {<macadd>|username}

| Parameter  | Description                                      |
|------------|--|
| dot1x      | IEEE 802.1X Port-Based Access Control.           |
| initialize | Initialize the port to attempt reauthentication. |
| supplicant | Specify the supplicant to initialize.            |
| <macadd>   | MAC (hardware address of the supplicant.         |
| username   | The name of the supplicant entry.                |

**Mode** Privileged Exec

**Example** To initialize the supplicant authentication, use the commands

```
awplus# configure terminal
awplus(config)# dot1x initialize supplicant 0090.99ab.a020
awplus(config)# dot1x initialize supplicant guest
```

**Validation Commands** [show dot1x](#)  
[show dot1x supplicant](#)

**Related Commands** [dot1x initialize interface](#)

# dot1x keytransmit

**Overview** This command enables key transmission on the interface specified previously in Interface mode.

The **no** variant of this command disables key transmission on the interface specified.

**Syntax** dot1x keytransmit  
no dot1x keytransmit

**Default** Key transmission for port authentication is enabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port.

**Usage** Use this command to enable key transmission over an Extensible Authentication Protocol (EAP) packet between the authenticator and supplicant. Use the **no** variant of this command to disable key transmission.

**Examples** To enable the key transmit feature on interface `port1.0.2`, after it has been disabled by negation, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x keytransmit
```

To disable the key transmit feature from the default startup configuration on interface `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no dot1x keytransmit
```

**Validation Commands** `show dot1x`  
`show dot1x interface`

# dot1x max-auth-fail

**Overview** Use this command to configure the maximum number of login attempts for a supplicant (client device) using the **auth-fail vlan** feature, when using 802.1X port authentication on an interface.

The **no** variant of this command resets the maximum login attempts for a supplicant (client device) using the auth-fail vlan feature, to the default configuration of 3 login attempts.

**Syntax** dot1x max-auth-fail <0-10>  
no dot1x max-auth-fail

| Parameter | Description  |
|-----------|--|
| <0-10>    | Specify the maximum number of login attempts for supplicants on an interface using 802.1X port authentication. |

**Default** The default maximum number of login attempts for a supplicant on an interface using 802.1X port authentication is three (3) login attempts.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** This command sets the maximum number of login attempts for supplicants on an interface. The supplicant is moved to the auth-fail VLAN from the Guest VLAN after the number of failed login attempts using 802.1X authentication is equal to the number set with this command.

See the [Authentication Feature Overview and Configuration Guide](#) for information about:

- the auth-fail VLAN feature, and
- restrictions regarding combinations of authentication enhancements working together

**Examples** To configure the maximum number of login attempts for a supplicant on interface port1.0.2 to a single (1) login attempt, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x max-auth-fail 1
```

To configure the maximum number of login attempts for a supplicant on interface port1.0.2 to the default number of three (3) login attempts, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no dot1x max-auth-fail
```



To configure the maximum number of login attempts for a supplicant on authentication profile 'student' to a single (1) login attempt, use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# dot1x max-auth-fail 1
```

To configure the maximum number of login attempts for a supplicant on authentication profile 'student' to the default number of three (3) login attempts, use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no dot1x max-auth-fail
```

**Validation  
Commands**    [show running-config](#)  
                  [show dot1x interface](#)

**Related  
Commands**    [auth auth-fail vlan](#)  
                  [auth profile \(Global Configuration\)](#)  
                  [dot1x max-reauth-req](#)

# dot1x max-reauth-req

**Overview** This command sets the number of reauthentication attempts before an interface is unauthorized.

The **no** variant of this command resets the reauthentication delay to the default.

**Syntax** `dot1x max-reauth-req <1-10>`  
`no dot1x max-reauth-req`

| Parameter | Description   |
|-----------|---|
| <1-10>    | Specify the maximum number of reauthentication attempts for supplicants on an interface using 802.1X port authentication. |

**Default** The default maximum reauthentication attempts for interfaces using 802.1X port authentication is two (2) reauthentication attempts, before an interface is unauthorized.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** Use this command to set the maximum reauthentication attempts after failure.

**Examples** To configure the maximum number of reauthentication attempts for interface `port1.0.2` to a single (1) reauthentication request, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x max-reauth-req 1
```

To configure the maximum number of reauthentication attempts for interface `port1.0.2` to the default maximum number of two (2) reauthentication attempts, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no dot1x max-reauth-req
```

To configure the maximum number of reauthentication attempts for authentication profile 'student' to a single (1) reauthentication request, use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# dot1x max-reauth-req 1
```

To configure the maximum number of reauthentication attempts for authentication profile 'student' to the default maximum number of two (2) reauthentication attempts, use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no dot1x max-reauth-req
```

**Validation  
Commands**    [show running-config](#)

**Related  
Commands**    [auth profile \(Global Configuration\)](#)  
                  [dot1x max-auth-fail](#)  
                  [show dot1x interface](#)

# dot1x port-control

**Overview** This command enables 802.1X port authentication on the interface specified, and sets the control of the authentication port.

The **no** variant of this command disables the port authentication on the interface specified.

**Syntax** `dot1x port-control {force-unauthorized|force-authorized|auto}`  
`no dot1x port-control`

| Parameter          | Description   |
|--------------------|---|
| force-unauthorized | Force the port state to unauthorized. Specify this to force a port to always be in an unauthorized state. |
| force-authorized   | Force the port state to authorized. Specify this to force a port to always be in an authorized state.     |
| auto               | Allow the port client to negotiate authentication. Specify this to enable authentication on the port.     |

**Default** 802.1X port control is disabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** Use this command to force a port state.

When **port-control** is set to **auto**, the 802.1X authentication feature is executed on the interface, but only if the **aaa authentication dot1x** command has been issued.

**Examples** To enable port authentication on the interface `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x port-control auto
```

To enable port authentication force authorized on the interface `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x port-control force-authorized
```

To disable port authentication on the interface `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no dot1x port-control
```

To enable port authentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# dot1x port-control auto
```

To enable port authentication force authorized on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# dot1x port-control
force-authorized
```

To disable port authentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no dot1x port-control
```

**Validation  
Commands**    [show dot1x interface](#)

**Related  
Commands**    [aaa authentication dot1x](#)  
              [auth profile \(Global Configuration\)](#)

# dot1x timeout tx-period

**Overview** This command sets the transmit timeout for the authentication request on the specified interface.

The **no** variant of this command resets the transmit timeout period to the default (30 seconds).

**Syntax** `dot1x timeout tx-period <1-65535>`  
`no dot1x timeout tx-period`

| Parameter | Description |
|-----------|-------------|
| <1-65535> | Seconds.    |

**Default** The default transmit period for port authentication is 30 seconds.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** Use this command to set the interval between successive attempts to request an ID.

**Examples** To set the transmit timeout period to 5 seconds on interface `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x timeout tx-period 5
```

To reset transmit timeout period to the default (30 seconds) on interface `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no dot1x timeout tx-period
```

To set the transmit timeout period to 5 seconds on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# dot1x timeout tx-period 5
```

To reset transmit timeout period to the default (30 seconds) on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no dot1x timeout tx-period
```

**Validation**    auth profile (Global Configuration)  
**Commands**    show dot1x  
                  show dot1x interface

# show debugging dot1x

**Overview** Use this command to display the 802.1X debugging option set.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show debugging dot1x

**Mode** User Exec and Privileged Exec

**Usage** This is a sample output from the show debugging dot1x command.

```
awplus# debug dot1x
awplus# show debugging dot1x
```

```
802.1X debugging status:
 802.1X events debugging is on
 802.1X timer debugging is on
 802.1X packets debugging is on
 802.1X NSM debugging is on
```

**Related  
Commands** [debug dot1x](#)



# show dot1x

**Overview** This command shows authentication information for dot1x (802.1X) port authentication.

If you specify the optional **all** parameter then this command also displays all authentication information for each port available on the switch.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show dot1x [all]

| Parameter | Description  |
|-----------|--|
| all       | Displays all authentication information for each port available on the switch. |

**Mode** Privileged Exec

**Example** awplus# show dot1x all

**Table 1:** Example output from the **show dot1x** command

```
awplus# show dot1x all
802.1X Port-Based Authentication Enabled
RADIUS server address: 150.87.18.89:1812
Next radius message id: 5
RADIUS client address: not configured
Authentication info for interface port1.0.6
portEnabled: true - portControl: Auto
portStatus: Authorized
reAuthenticate: disabled
reAuthPeriod: 3600
PAE: quietPeriod: 60 - maxReauthReq: 2 - txPeriod: 30
PAE: connectTimeout: 30
BE: suppTimeout: 30 - serverTimeout: 30
CD: adminControlledDirections: in
KT: keyTxEnabled: false
critical: disabled
guestVlan: disabled
dynamicVlanCreation: single-dynamic-vlan
assignFailActionRule: deny
hostMode: multi-supPLICANT
maxSupPLICANT: 1024
```

**Table 1:** Example output from the **show dot1x** command (cont.)

```
dot1x: enabled
protocolVersion: 1
authMac: enabled
method: PAP
reauthRelearning: disabled
authWeb: enabled
method: PAP
lockCount: 3
packetForwarding: disabled
twoStepAuthentication:
    configured: enabled
    actual: enabled
SupplicantMac: none
supplicantMac: none
Supplicant name: manager
Supplicant address: 00d0.59ab.7037
    authenticationMethod: 802.1X Authentication
    portStatus: Authorized - currentId: 1
    abort:F fail:F start:F timeout:F success:T
    PAE: state: Authenticated - portMode: Auto
    PAE: reAuthCount: 0 - rxRespId: 0
    PAE: quietPeriod: 60 - maxReauthReq: 2 - txPeriod: 30
    BE: state: Idle - reqCount: 0 - idFromServer: 0
    CD: adminControlledDirections: in - operControlledDirections: in
    CD: bridgeDetected: false
    KR: rxKey: false
    KT: keyAvailable: false - keyTxEnabled: false
    criticalState: off
    dynamicVlanId: 2
802.1X statistics for interface port1.0.6
    EAPOL Frames Rx: 5 - EAPOL Frames Tx: 16
    EAPOL Start Frames Rx: 0 - EAPOL Logoff Frames Rx: 0
    EAP Rsp/Id Frames Rx: 3 - EAP Response Frames Rx: 2
    EAP Req/Id Frames Tx: 8 - EAP Request Frames Tx: 2
    Invalid EAPOL Frames Rx: 0 - EAP Length Error Frames Rx: 0
    EAPOL Last Frame Version Rx: 1 - EAPOL Last Frame Src: 00d0.59ab.7037
Authentication session statistics for interface port1.0.6
    session user name: manager
    session authentication method: Remote server
    session time: 19440 secs
    session terminate cause: Not terminated yet
Authentication Diagnostics for interface port1.0.6
    Supplicant address: 00d0.59ab.7037
    authEnterConnecting: 2
    authEaplogoffWhileConnecting: 1
    authEnterAuthenticating: 2
    authSuccessWhileAuthenticating: 1
    authTimeoutWhileAuthenticating: 1
    authFailWhileAuthenticating: 0
    authEapstartWhileAuthenticating: 0
```

**Table 1:** Example output from the **show dot1x** command (cont.)

```
authEaplogoggWhileAuthenticating: 0
authReauthsWhileAuthenticated: 0
authEapstartWhileAuthenticated: 0
authEaplogoffWhileAuthenticated: 0
BackendResponses: 2
BackendAccessChallenges: 1
BackendOtherrequestToSupplicant: 3
BackendAuthSuccess: 1
BackendAuthFails: 0
```

# show dot1x diagnostics

**Overview** This command shows 802.1X authentication diagnostics for the specified interface (optional), which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

If no interface is specified then authentication diagnostics are shown for all interfaces.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show dot1x diagnostics [interface <interface-list>]`

| Parameter        | Description  |
|------------------|--|
| interface        | Specify a port to show.  |
| <interface-list> | The interfaces or ports to configure. An interface-list can be: <ul style="list-style-type: none"><li>• an interface (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.4</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1, port1.0.2-1.0.4</code>. Do not mix interface types in a list</li></ul> The specified interfaces must exist. |

**Mode** Privileged Exec

**Example** See the sample output below showing 802.1X authentication diagnostics for `port1.0.5`:

```
awplus# show dot1x diagnostics interface port1.0.5
```

**Output** Figure 29-1: Example output from the **show dot1x diagnostics** command

```
Authentication Diagnostics for interface port1.0.5
  Supplicant address: 00d0.59ab.7037
    authEnterConnecting: 2
    authEaplogoffWhileConnecting: 1
    authEnterAuthenticating: 2
    authSuccessWhileAuthenticating: 1
    authTimeoutWhileAuthenticating: 1
    authFailWhileAuthenticating: 0
    authEapstartWhileAuthenticating: 0
    authEaplogoggWhileAuthenticating: 0
    authReauthsWhileAuthenticated: 0
    authEapstartWhileAuthenticated: 0
    authEaplogoffWhileAuthenticated: 0
  BackendResponses: 2
  BackendAccessChallenges: 1
  BackendOtherrequestToSupplicant: 3
  BackendAuthSuccess: 1
```

# show dot1x interface

**Overview** This command shows the status of 802.1X port-based authentication on the specified interface, which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

Use the optional **diagnostics** parameter to show authentication diagnostics for the specified interfaces. Use the optional **sessionstatistics** parameter to show authentication session statistics for the specified interfaces. Use the optional **statistics** parameter to show authentication diagnostics for the specified interfaces. Use the optional **supplicant** parameter to show the supplicant state for the specified interfaces.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show dot1x interface <interface-list>  
[diagnostics|sessionstatistics|statistics|supplicant [brief]]`

| Parameter         | Description   |
|-------------------|---|
| <interface-list>  | The interfaces or ports to configure. An interface-list can be: <ul style="list-style-type: none"><li>• an interface (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.4</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1,port1.0.3-1.0.5</code>. Do not mix interface types in a list</li></ul> The specified interfaces must exist. |
| diagnostics       | Diagnostics.  |
| sessionstatistics | Session Statistics.   |
| statistics        | Statistics.   |
| supplicant        | Supplicant.   |
| brief             | Brief summary of supplicant state.  |

**Mode** Privileged Exec

**Examples** See the sample output below showing 802.1X authentication status for `port1.0.6`:

```
awplus# show dot1x interface port1.0.6
```

**Table 2:** Example output from the **show dot1x interface** command for a port

```
awplus#show dot1x interface port1.0.6Authentication info for
interface port1.0.6
  portEnabled: true - portControl: Auto
  portStatus: Authorized
  reAuthenticate: disabled
  reAuthPeriod: 3600
  PAE: quietPeriod: 60 - maxReauthReq: 2 - txPeriod: 30
  PAE: connectTimeout: 30
  BE: suppTimeout: 30 - serverTimeout: 30
  CD: adminControlledDirections: in
  KT: keyTxEnabled: false
  critical: disabled
  guestVlan: disabled
  dynamicVlanCreation: single-dynamic-vlan
    assignFailActionRule: deny
  hostMode: multi-supPLICANT
    maxSupPLICANT:1024
dot1x: enabled
protocolVersion: 1
authMac: enabled
method: PAP
reauthRelearning: disabled
authWeb: enabled
method: PAP
lockCount: 3
packetForwarding: disabled
  twoStepAuthentication:
    configured: enabled
    actual: enabled
supPLICANTMac: none
```

See the sample output below showing 802.1X authentication sessionstatistics for port1.0.6:

```
awplus# show dot1x interface port1.0.6 sessionstatistics
```

```
awplus#show dot1x interface port1.0.6
sessionstatistics
Authentication session statistics for interface
port1.0.6
  session user name: manager
    session authentication method: Remote server
    session time: 19440 secs
    session terminat cause: Not terminated yet
```

See sample output below showing 802.1X authentication diagnostics for port1.0.6:

```
awplus# show dot1x interface port1.0.6 diagnostics
```

```
awplus#show dot1x interface port1.0.6 diagnostics
Authentication Diagnostics for interface port1.0.6
  Supplicant address: 00d0.59ab.7037
    authEnterConnecting: 2
    authEaplogoffWhileConnecting: 1
    authEnterAuthenticating: 2
    authSuccessWhileAuthenticating: 1
    authTimeoutWhileAuthenticating: 1
    authFailWhileAuthenticating: 0
    authEapstartWhileAuthenticating: 0
    authEaplogoggWhileAuthenticating: 0
    authReauthsWhileAuthenticated: 0
    authEapstartWhileAuthenticated: 0
    authEaplogoffWhileAuthenticated: 0
  BackendResponses: 2
  BackendAccessChallenges: 1
  BackendOtherrequestToSupplicant: 3
  BackendAuthSuccess: 1
```

See sample output below showing the supplicant on the interface port1.0.6:

```
awplus# show dot1x interface port1.0.6 supplicant
```

```
awplus#show dot1x interface port1.0.6 supplicant
authenticationMethod: dot1x
  totalSupplicantNum: 1
  authorizedSupplicantNum: 1
    macBasedAuthenticationSupplicantNum: 0
    dot1xAuthenticationSupplicantNum: 1
    webBasedAuthenticationSupplicantNum: 0
  Supplicant name: manager
  Supplicant address: 00d0.59ab.7037
    authenticationMethod: dot1x
    portStatus: Authorized - currentId: 4
    abort:F fail:F start:F timeout:F success:T
    PAE: state: Authenticated - portMode: Auto
    PAE: reAuthCount: 0 - rxRespId: 0
    PAE: quietPeriod: 60 - maxReauthReq: 2 - txPeriod: 30
    BE: state: Idle - reqCount: 0 - idFromServer: 3
    BE: suppTimeout: 30 - serverTimeout: 30
    CD: adminControlledDirections: in -
  operControlledDirections: in
    CD: bridgeDetected: false
    KR: rxKey: false
    KT: keyAvailable: false - keyTxEnabled: false
```

See sample output below showing 802.1X (dot1x) authentication statistics for port1.0.6:

```
awplus# show dot1x statistics interface port1.0.6
```



```
awplus#show dot1x statistics interface port1.0.6802.1X statistics
for interface port1.0.6
  EAPOL Frames Rx: 5 - EAPOL Frames Tx: 16
  EAPOL Start Frames Rx: 0 - EAPOL Logoff Frames Rx: 0
  EAP Rsp/Id Frames Rx: 3 - EAP Response Frames Rx: 2
  EAP Req/Id Frames Tx: 8 - EAP Request Frames Tx: 2
  Invalid EAPOL Frames Rx: 0 - EAP Length Error Frames Rx: 0
  EAPOL Last Frame Version Rx: 1 - EAPOL Last Frame
Src:00d0.59ab.7037
```

Table 29-1: Parameters in the output of **show dot1x interface**

| Parameter      | Description   |
|----------------|---|
| portEnabled    | Interface operational status (Up-true/down-false).                |
| portControl    | Current control status of the port for 802.1X control.            |
| portStatus     | 802.1X status of the port (authorized/unauthorized).              |
| reAuthenticate | Reauthentication enabled/disabled status on port.                 |
| reAuthPeriod   | Value holds meaning only if reauthentication is enabled.          |
| abort          | Indicates that authentication should be aborted when set to true. |
| fail           | Indicates failed authentication attempt when set to false.        |
| start          | Indicates authentication should be started when set to true.      |
| timeout        | Indicates authentication attempt timed out when set to true.      |
| success        | Indicates authentication successful when set to true.             |
| state          | Current 802.1X operational state of interface.                    |
| mode           | Configured 802.1X mode.   |
| reAuthCount    | Reauthentication count.   |
| quietperiod    | Time between reauthentication attempts.                           |
| reAuthMax      | Maximum reauthentication attempts.                                |
| BE             | Backend authentication state machine variables and constants.     |
| state          | State of the state machine.                                       |
| reqCount       | Count of requests sent to server.                                 |

Table 29-1: Parameters in the output of **show dot1x interface** (cont.)

| Parameter                     | Description  |
|-------------------------------|--|
| suppTimeout                   | Supplicant timeout.  |
| serverTimeout                 | Server timeout.  |
| maxReq                        | Maximum requests to be sent.   |
| CD                            | Controlled Directions State machine.   |
| adminControlledDir<br>ections | Administrative value (Both/In).  |
| operControlledDir<br>ections  | Operational Value (Both/In).   |
| KR                            | Key receive state machine.   |
| rxKey                         | True when EAPOL-Key message is received by supplicant or authenticator. false when key is transmitted. |
| KT                            | Ket Transmit State machine.  |
| keyAvailable                  | False when key has been transmitted by authenticator, true when new key is available for key exchange. |
| keyTxEnabled                  | Key transmission enabled/disabled status.  |

**Related  
Commands**

- [show auth diagnostics](#)
- [show dot1x sessionstatistics](#)
- [show dot1x statistics interface](#)
- [show dot1x supplicant interface](#)

# show dot1x sessionstatistics

**Overview** This command shows authentication session statistics for the specified interface, which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show dot1x sessionstatistics [interface <interface-list>]

| Parameter        | Description  |
|------------------|--|
| interface        | Specify a port to show.  |
| <interface-list> | <p>The interfaces or ports to configure. An interface-list can be:</p> <ul style="list-style-type: none"><li>• an interface (e.g. vlan2), a switch port (e.g. port1.0.6), a static channel group (e.g. sa2) or a dynamic (LACP) channel group (e.g. po2)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. vlan2-8, or port1.0.1-1.0.4, or sa1-2, or po1-2</li><li>• a comma-separated list of the above; e.g. port1.0.1,port1.0.4-1.0.6. Do not mix interface types in a list</li></ul> <p>The specified interfaces must exist.</p> |

**Mode** Privileged Exec

**Example** See sample output below showing 802.1X (dot1x) authentication session statistics for port1.0.6:

```
awplus# show dot1x sessionstatistics interface port1.0.6
```

```
Authentication session statistics for interface
port1.0.6
  session user name: manager
    session authentication method: Remote server
    session time: 19440 secs
    session terminat cause: Not terminated yet
```

# show dot1x statistics interface

**Overview** This command shows the authentication statistics for the specified interface, which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show dot1x statistics interface <interface-list>

| Parameter        | Description   |
|------------------|---|
| <interface-list> | <p>The interfaces or ports to configure. An interface-list can be:</p> <ul style="list-style-type: none"><li>• an interface (e.g. vlan2), a switch port (e.g. port1.0.6), a static channel group (e.g. sa2) or a dynamic (LACP) channel group (e.g. po2)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. vlan2-8, or port1.0.1-1.0.4, or sa1-2, or po1-2</li><li>• a comma-separated list of the above; e.g. port1.0.1, port1.0.4-1.0.6. Do not mix interface types in a list</li></ul> <p>The specified interfaces must exist.</p> |

**Mode** Privileged Exec

**Example** See sample output below showing 802.1X authentication statistics for port1.0.6:

```
awplus# show dot1x statistics interface port1.0.6
```

```
802.1X statistics for interface port1.0.6
EAPOL Frames Rx: 5 - EAPOL Frames Tx: 16
EAPOL Start Frames Rx: 0 - EAPOL Logoff Frames Rx: 0
EAP Rsp/Id Frames Rx: 3 - EAP Response Frames Rx: 2
EAP Req/Id Frames Tx: 8 - EAP Request Frames Tx: 2
Invalid EAPOL Frames Rx: 0 - EAP Length Error Frames Rx: 0
EAPOL Last Frame Version Rx: 1 - EAPOL Last Frame
Src:00d0.59ab.7037
```

# show dot1x supplicant

**Overview** This command shows the supplicant state of the authentication mode set for the switch.

This command shows a summary when the optional **brief** parameter is used.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show dot1x supplicant [<macadd>] [brief]

| Parameter | Description                               |
|-----------|---|
| <macadd>  | MAC (hardware) address of the Supplicant. |
| brief     | Brief summary of the Supplicant state.    |

**Mode** Privileged Exec

**Example** See sample output below showing the 802.1X authenticated supplicant on the switch:

```
awplus# show dot1x supplicant
```

```
authenticationMethod: dot1x
totalSupplicantNum: 1
authorizedSupplicantNum: 1
macBasedAuthenticationSupplicantNum: 0
dot1xAuthenticationSupplicantNum: 1
webBasedAuthenticationSupplicantNum: 0
Supplicant name: manager
Supplicant address: 00d0.59ab.7037
  authenticationMethod: dot1x
    Two-Step Authentication:
      firstAuthentication: Pass - Method: mac
      secondAuthentication: Pass - Method: dot1x
portStatus: Authorized - currentId: 4
abort:F fail:F start:F timeout:F success:T
PAE: state: Authenticated - portMode: Auto
PAE: reAuthCount: 0 - rxRespId: 0
PAE: quietPeriod: 60 - maxReauthReq: 2 - txPeriod: 30
BE: state: Idle - reqCount: 0 - idFromServer: 3
BE: suppTimeout: 30 - serverTimeout: 30
CD: adminControlledDirections: in - operControlledDirections: in
CD: bridgeDetected: false
KR: rxKey: false
KT: keyAvailable: false - keyTxEnabled: false
```

See sample output below showing the supplicant on the switch using the `brief` parameter:

```
awplus# show dot1x supplicant 00d0.59ab.7037 brief
```

```
Interface port1.0.6
 authenticationMethod: dot1x
 totalSupplicantNum: 1
 authorizedSupplicantNum: 1
   macBasedAuthenticationSupplicantNum: 0
   dot1xAuthenticationSupplicantNum: 1
   webBasedAuthenticationSupplicantNum: 0
```

| Interface | VID | Mode | MAC Address    | Status        | IP Address    | Username |
|-----------|-----|------|----------------|---------------|---------------|----------|
| port1.0.6 |     |      |                |               |               |          |
| 2         | D   |      | 00d0.59ab.7037 | Authenticated | 192.168.2.201 | manager  |

See sample output below showing the supplicant on the switch using the `brief` parameter:

```
awplus# show dot1x supplicant brief
```

For example, if two-step authentication is configured with 802.1X authentication as the first method and web authentication as the second method then the output is as follows:

```
Interface port1.0.6 authenticationMethod: dot1x/web
 Two-Step Authentication
   firstMethod: dot1x
   secondMethod: web
 totalSupplicantNum: 1
 authorizedSupplicantNum: 1
   macBasedAuthenticationSupplicantNum: 0
   dot1xAuthenticationSupplicantNum: 0
   webBasedAuthenticationSupplicantNum: 1
   otherAuthenticationSupplicantNum: 0
```

| Interface | VID | Mode | MAC Address    | Status        | IP Address    | Username |
|-----------|-----|------|----------------|---------------|---------------|----------|
| port1.0.6 |     |      |                |               |               |          |
| 5         | W   |      | 0008.0d5e.c216 | Authenticated | 192.168.1.200 | web      |

**Related Commands** [show dot1x supplicant interface](#)

# show dot1x supplicant interface

**Overview** This command shows the supplicant state of the authentication mode set for the interface, which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

This command shows a summary when the optional **brief** parameter is used.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show dot1x supplicant interface <interface-list> [brief]`

| Parameter                           | Description   |
|-------------------------------------|---|
| <code>&lt;interface-list&gt;</code> | The interfaces or ports to configure. An interface-list can be: <ul style="list-style-type: none"><li>• an interface (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.4</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1,port1.0.4-1.0.6</code>. Do not mix interface types in a list</li></ul> The specified interfaces must exist. |
| <code>brief</code>                  | Brief summary of the Supplicant state.  |

**Mode** Privileged Exec

**Examples** See sample output below showing the supplicant on the interface `port1.0.6`:

```
awplus# show dot1x interface port1.0.6
```

```
Interface port1.0.6 authenticationMethod: dot1x
    totalSupplicantNum: 1
    authorizedSupplicantNum: 1
        macBasedAuthenticationSupplicantNum: 0
        dot1xAuthenticationSupplicantNum: 1
        webBasedAuthenticationSupplicantNum: 0
        otherAuthenticationSupplicantNum: 0

    Supplicant name: VCSPCVLAN10
    Supplicant address: 0000.cd07.7b60
        authenticationMethod: 802.1X
    Two-Step Authentication:
        firstAuthentication: Pass - Method: mac
        secondAuthentication: Pass - Method: dot1x
    portStatus: Authorized - currentId: 3
    abort:F fail:F start:F timeout:F success:T
    PAE: state: Authenticated - portMode: Auto
    PAE: reAuthCount: 0 - rxRespId: 0
    PAE: quietPeriod: 60 - maxReauthReq: 2
    BE: state: Idle - reqCount: 0 - idFromServer: 2
    CD: adminControlledDirections:in -
    operControlledDirections:in
    CD: bridgeDetected: false
    KR: rxKey: false
    KT: keyAvailable: false - keyTxEnabled: false
```

See sample output below showing the supplicant on the switch using the `brief` parameter:

```
awplus# show dot1x supplicant interface brief
```

```
Interface port1.0.6
    authenticationMethod: dot1x
Two-Step Authentication:
    firstMethod: mac
    secondMethod: dot1x
totalSupplicantNum: 1
authorizedSupplicantNum: 1
macBasedAuthenticationSupplicantNum: 0
dot1xAuthenticationSupplicantNum: 1
webBasedAuthenticationSupplicantNum: 0

Interface  VID  Mode MAC Address      Status      IP Address      Username
=====  ===  ====  =====
port1.0.6
  2    D    00d0.59ab.7037  Authenticated  192.168.2.201  manager
```

See the sample output below for static channel group (static aggregator) interface `sa1`:

```
awplus# show dot1x interface sa1 supplicant brief
```



```
awplus#show dot1x interface sa1 supplicant brief
```

```
Interface sa1
```

```
authenticationMethod: dot1x
```

```
Two-Step Authentication:
```

```
firstMethod: mac
```

```
secondMethod: dot1x
```

```
totalSupplicantNum: 1
```

```
authorizedSupplicantNum: 1
```

```
macBasedAuthenticationSupplicantNum: 0
```

```
dot1xAuthenticationSupplicantNum: 1
```

```
webBasedAuthenticationSupplicantNum: 0
```

```
otherAuthenticationSupplicantNum: 0
```

| Interface | VID   | Mode  | MAC Address    | Status        | IP Address | Username |
|-----------|-------|-------|----------------|---------------|------------|----------|
| =====     | ===== | ===== | =====          | =====         | =====      | =====    |
| sa1       | 1     | D     | 00d0.59ab.7037 | Authenticated | --         | test1    |

**Related** [show dot1x supplicant](#)  
**Commands**

# undebug dot1x

**Overview** This command applies the functionality of the **no** variant of the [debug dot1x](#) command.

# 30

# Authentication Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for authentication commands.

- Command List**
- [“auth auth-fail vlan”](#) on page 1130
  - [“auth critical”](#) on page 1132
  - [“auth dynamic-vlan-creation”](#) on page 1133
  - [“auth guest-vlan”](#) on page 1136
  - [“auth guest-vlan forward”](#) on page 1139
  - [“auth host-mode”](#) on page 1141
  - [“auth log”](#) on page 1143
  - [“auth max-supPLICant”](#) on page 1145
  - [“auth profile \(Global Configuration\)”](#) on page 1147
  - [“auth profile \(Interface Configuration\)”](#) on page 1148
  - [“auth reauthentication”](#) on page 1149
  - [“auth roaming disconnected”](#) on page 1150
  - [“auth roaming enable”](#) on page 1152
  - [“auth supplicant-ip”](#) on page 1154
  - [“auth supplicant-mac”](#) on page 1157
  - [“auth timeout connect-timeout”](#) on page 1160
  - [“auth timeout quiet-period”](#) on page 1162
  - [“auth timeout reauth-period”](#) on page 1163
  - [“auth timeout server-timeout”](#) on page 1165
  - [“auth timeout supp-timeout”](#) on page 1167
  - [“auth two-step enable”](#) on page 1169

- [“auth-mac accounting”](#) on page 1172
- [“auth-mac authentication”](#) on page 1173
- [“auth-mac enable”](#) on page 1174
- [“auth-mac method”](#) on page 1176
- [“auth-mac password”](#) on page 1178
- [“auth-mac reauth-relearning”](#) on page 1179
- [“auth-mac username”](#) on page 1180
- [“auth-web accounting”](#) on page 1181
- [“auth-web authentication”](#) on page 1182
- [“auth-web enable”](#) on page 1183
- [“auth-web forward”](#) on page 1185
- [“auth-web max-auth-fail”](#) on page 1188
- [“auth-web method”](#) on page 1190
- [“auth-web-server blocking-mode”](#) on page 1191
- [“auth-web-server dhcp ipaddress”](#) on page 1192
- [“auth-web-server dhcp lease”](#) on page 1193
- [“auth-web-server dhcp-wpad-option”](#) on page 1194
- [“auth-web-server gateway \(deleted\)”](#) on page 1195
- [“auth-web-server host-name”](#) on page 1196
- [“auth-web-server http-redirect \(deleted\)”](#) on page 1197
- [“auth-web-server intercept-port”](#) on page 1198
- [“auth-web-server ipaddress”](#) on page 1199
- [“auth-web-server page language”](#) on page 1200
- [“auth-web-server login-url”](#) on page 1201
- [“auth-web-server mode \(deleted\)”](#) on page 1202
- [“auth-web-server page logo”](#) on page 1203
- [“auth-web-server page sub-title”](#) on page 1204
- [“auth-web-server page success-message”](#) on page 1205
- [“auth-web-server page title”](#) on page 1206
- [“auth-web-server page welcome-message”](#) on page 1207
- [“auth-web-server ping-poll enable”](#) on page 1208
- [“auth-web-server ping-poll failcount”](#) on page 1209
- [“auth-web-server ping-poll interval”](#) on page 1210
- [“auth-web-server ping-poll reauth-timer-refresh”](#) on page 1211
- [“auth-web-server ping-poll timeout”](#) on page 1212

- ["auth-web-server port"](#) on page 1213
- ["auth-web-server redirect-delay-time"](#) on page 1214
- ["auth-web-server redirect-url"](#) on page 1215
- ["auth-web-server session-keep"](#) on page 1216
- ["auth-web-server ssl"](#) on page 1217
- ["auth-web-server sslport \(deleted\)"](#) on page 1218
- ["auth-web-server ssl intercept-port"](#) on page 1219
- ["copy proxy-autoconfig-file"](#) on page 1220
- ["copy web-auth-https-file"](#) on page 1221
- ["description \(Authentication Profile\)"](#) on page 1222
- ["erase proxy-autoconfig-file"](#) on page 1223
- ["erase web-auth-https-file"](#) on page 1224
- ["platform l3-vlan-hashing-algorithm"](#) on page 1225
- ["platform mac-vlan-hashing-algorithm"](#) on page 1226
- ["show auth"](#) on page 1227
- ["show auth diagnostics"](#) on page 1229
- ["show auth interface"](#) on page 1231
- ["show auth sessionstatistics"](#) on page 1234
- ["show auth statistics interface"](#) on page 1235
- ["show auth supplicant"](#) on page 1236
- ["show auth supplicant interface"](#) on page 1239
- ["show auth two-step supplicant brief"](#) on page 1240
- ["show auth-web-server"](#) on page 1241
- ["show auth-web-server page"](#) on page 1242
- ["show proxy-autoconfig-file"](#) on page 1243

## auth auth-fail vlan

**Overview** Use this command to enable the **auth-fail vlan** feature on the specified vlan interface. This feature assigns supplicants (client devices) to the specified VLAN if they fail port authentication.

Use the **no** variant of this command to disable the auth-fail vlan feature for a specified VLAN interface.

**Syntax** `auth auth-fail vlan <1-4094>`  
`no auth auth-fail vlan`

| Parameter | Description  |
|-----------|--|
| <1-4094>  | Assigns the VLAN ID to any supplicants that have failed port authentication. |

**Default** The auth-fail vlan feature is disabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** Use the auth-fail vlan feature when using Web-Authentication instead of the Guest VLAN feature, when you need to separate networks where one supplicant (client device) requires authentication and another supplicant does not require authentication from the same interface.

This is because the DHCP lease time using the Web-Authentication feature is shorter, and the auth-fail vlan feature enables assignment to a different VLAN if a supplicant fails authentication.

To enable the auth-fail vlan feature with Web Authentication, you need to set the Web Authentication Server virtual IP address by using the [auth-web-server ipaddress](#) command or the [auth-web-server dhcp ipaddress](#) command.

When using 802.1X port authentication, use a [dot1x max-auth-fail](#) command to set the maximum number of login attempts. Three login attempts are allowed by default for 802.1X port authentication before supplicants trying to authenticate are moved from the Guest VLAN to the auth-fail VLAN. See the [dot1x max-auth-fail](#) on page 1100 for command information.

See the [Authentication Feature Overview and Configuration Guide](#) for information about:

- the auth-fail VLAN feature, which allows the Network Administrator to separate the supplicants who attempted authentication, but failed, from the supplicants who did not attempt authentication, and
- restrictions regarding combinations of authentication enhancements working together

Use appropriate ACLs (Access Control Lists) on interfaces for extra security if a supplicant allocated to the designated auth-fail vlan can access the same network

as a supplicant on the Guest VLAN. For more information about ACL concepts, and configuring ACLs see the [ACL Feature Overview and Configuration Guide](#). For more information about ACL commands see:

**Examples** To enable the auth-fail vlan feature for port1.0.2 and assign VLAN 100, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth auth-fail vlan 100
```

To disable the auth-fail vlan feature for port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth auth-fail vlan
```

To enable the auth-fail vlan feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth auth-fail vlan 100
```

To disable the auth-fail vlan feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth auth-fail vlan
```

**Related Commands**

- [auth profile \(Global Configuration\)](#)
- [dot1x max-auth-fail](#)
- [show dot1x](#)
- [show dot1x interface](#)
- [show running-config](#)

# auth critical

**Overview** This command enables the critical port feature on the interface. When the critical port feature is enabled on an interface, and all the RADIUS servers are unavailable, then the interface becomes authorized.

The **no** variant of this command disables critical port feature on the interface.

**Syntax** `auth critical`  
`no auth critical`

**Default** The critical port of port authentication is disabled.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To enable the critical port feature on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth critical
```

To disable the critical port feature on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth critical
```

To enable the critical port feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth critical
```

To disable the critical port feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth critical
```

**Related Commands** [auth profile \(Global Configuration\)](#)  
[show auth-web-server](#)  
[show dot1x](#)  
[show dot1x interface](#)  
[show running-config](#)



# auth dynamic-vlan-creation

**Overview** This command enables and disables the Dynamic VLAN assignment feature.

The Dynamic VLAN assignment feature allows a supplicant (client device) to be placed into a specific VLAN based on information returned from the RADIUS server during authentication, on a given interface.

Use the **no** variant of this command to disable the Dynamic VLAN assignment feature.

**Syntax** `auth dynamic-vlan-creation [rule {deny|permit}] [type {multi|single}]`  
`no auth dynamic-vlan-creation`

| Parameter | Description  |
|-----------|--|
| rule      | VLAN assignment rule.  |
| deny      | Deny a differently assigned VLAN ID. This is the default rule.   |
| permit    | Permit a differently assigned VLAN ID.   |
| type      | Specifies whether multiple different VLANs can be assigned to supplicants (client devices) attached to the port, or whether only a single VLAN can be assigned to supplicants on the port. |
| multi     | Multiple Dynamic VLAN.   |
| single    | Single Dynamic VLAN.   |

**Default** By default, the Dynamic VLAN assignment feature is disabled.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** If the Dynamic VLAN assignment feature is enabled (disabled by default), VLAN assignment is dynamic. If the Dynamic VLAN assignment feature is disabled then RADIUS attributes are ignored and configured VLANs are assigned to ports. Dynamic VLANs may be associated with authenticated MAC addresses if the **type** parameter is applied with the **rule** parameter.

The **rule** parameter deals with the case where there are multiple supplicants attached to a port, and the type parameter has been set to **single-vlan**. The parameter specifies how the switch should act if different VLAN IDs end up being assigned to different supplicants. The keyword value **deny** means that once a given VID has been assigned to the first supplicant, then if any subsequent supplicant is assigned a different VID, that supplicant is rejected. The keyword value **permit** means that once a given VID has been assigned to the first supplicant, then if any subsequent supplicant is assigned a different VID, that supplicant is accepted, but it is actually assigned the same VID as the first supplicant.

If you issue an **auth dynamic-vlan-creation** command without a **rule** parameter then a second supplicant with a different VLAN ID is rejected. It is not assigned to the first supplicant's VLAN. Issuing an **auth dynamic-vlan-creation** command without a **rule** parameter has the same effect as issuing an **auth dynamic-vlan-creation rule deny** command rejecting supplicants with differing VLAN IDs.

The **type** parameter specifies whether multiple different VLANs can be assigned to supplicants attached to the port, or whether only a single VLAN can be assigned to supplicants on the port. The **type** parameter can select the port base VLAN or the MAC base VLAN from the RADIUS VLAN ID. This can be used when the host-mode is set to multi-supplicant. For **single**-host ports, the VLAN ID will be assigned to the port. It is not supported with the Guest VLAN feature. Display the ID assigned using a **show vlan** command. For **multi**-host ports, the VLAN ID will be assigned to the MAC address of the authenticated supplicant. The VLAN ID assigned for the MAC Base VLAN is displayed using the **show platform table vlan** command.

To configure Dynamic Vlan with Web Authentication, you need to set Web Authentication Server virtual IP address by using the [auth-web-server ipaddress](#) command or the [auth-web-server dhcp ipaddress](#) command. You also need to create a hardware access-list that can be applied to the switch port interface.

You need to configure an IPv4 address for the VLAN interface on which Web Authentication is running.

**Examples** To enable the Dynamic VLAN assignment feature on interface `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport access vlan 10
awplus(config-if)# auth-web enable
awplus(config-if)# auth dynamic-vlan-creation
awplus(config-if)# interface vlan10
awplus(config-if)# ip address 10.1.1.1/24
```

To enable the Dynamic VLAN assignment feature with Web Authentication on interface `port1.0.2` when Web Authentication is needed, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server ipaddress 1.2.3.4
awplus(config)# access-list hardware acl-web send-to-cpu ip any 1.2.3.4
awplus(config)# interface port1.0.2
awplus(config-if)# auth-web enable
awplus(config-if)# auth dynamic-vlan-creation
awplus(config-if)# access-group acl-web
awplus(config-if)# interface vlan1
awplus(config-if)# ip address 10.1.1.1/24
```

To disable the Dynamic VLAN assignment feature on interface `port1.0.2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth dynamic-vlan-creation
```

To enable the Dynamic VLAN assignment feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth dynamic-vlan-creation
```

To disable the Dynamic VLAN assignment feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth dynamic-vlan-creation
```

**Validation  
Commands**

```
show dot1x
show dot1x interface
show running-config
```

**Related  
Commands**

```
auth profile (Global Configuration)
auth host-mode
```

## auth guest-vlan

**Overview** This command enables and configures the Guest VLAN feature on the interface specified by associating a Guest VLAN with an interface. This command does not start authentication. The supplicant's (client device's) traffic is associated with the native VLAN of the interface if its not already associated with another VLAN. The **routing** option enables routing from the Guest VLAN to another VLAN, so the switch can lease DHCP addresses and accept access to a limited network.

The **no** variant of this command disables the guest VLAN feature on the interface specified.

**Syntax** `auth guest-vlan <1-4094> [routing]`  
`no auth guest-vlan [routing]`

| Parameter | Description   |
|-----------|---|
| <1-4094>  | VLAN ID (VID).                                      |
| routing   | Enables routing from the Guest VLAN to other VLANs. |

**Default** The Guest VLAN authentication feature is disabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** The Guest VLAN feature may be used by supplicants (client devices) that have not attempted authentication, or have failed the authentication process. Note that if a port is in multi-supplicant mode with per-port dynamic VLAN configuration, after the first successful authentication, subsequent hosts cannot use the guest VLAN due to the change in VLAN ID. This may be avoided by using per-user dynamic VLAN assignment.

When using the Guest VLAN feature with the multi-host mode, a number of supplicants can communicate via a guest VLAN before authentication. A supplicant's traffic is associated with the native VLAN of the specified switch port. The supplicant must belong to a VLAN before traffic from the supplicant can be associated.

Note that you must enable 802.1X on the port and define a VLAN using the [vlan](#) command before you can configure it as a guest VLAN.

Roaming Authentication cannot be enabled if DHCP snooping is enabled ([service dhcp-snooping](#) command), and vice versa.

The Guest VLAN feature in previous releases had some limitations that have been removed. Until this release the Guest VLAN feature could not lease the IP address to the supplicant using DHCP Server or DHCP Relay features unless Web-Authentication was also applied. When using NAP authentication, the supplicant should have been able to log on to a domain controller to gain certification, but the Guest VLAN would not accept access to another VLAN.

The Guest VLAN routing mode in this release overcomes these issues. With the Guest VLAN routing mode, the switch can lease DHCP addresses and accept access to a limited network.

Note that Guest VLAN can use only untagged ports.

See the [Authentication Feature Overview and Configuration Guide](#) for information about:

- Guest VLAN, and
- restrictions regarding combinations of authentication enhancements working together

**Examples** To define vlan100 and assign the guest VLAN feature to vlan100 on interface port1.0.2, and enable routing from the guest VLAN to other VLANs, use the following commands:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# vlan 100
awplus(config-vlan)# exit
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x port-control auto
awplus(config-if)# auth guest-vlan 100 routing
```

To disable the guest VLAN feature on port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth guest-vlan
```

To define vlan100 and assign the guest VLAN feature to vlan100 on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# vlan 100
awplus(config-vlan)# exit
awplus(config)# auth profile student
awplus(config-auth-profile)# auth guest-vlan 100
```

To disable the guest VLAN feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth guest-vlan
```

**Related Commands** [auth profile \(Global Configuration\)](#)

auth guest-vlan forward  
dot1x port-control  
show dot1x  
show dot1x interface  
show running-config

# auth guest-vlan forward

**Overview** Use this command to enable packet forwarding from the Guest VLAN to a destination IP address or subnet. If this command is configured, the device can lease DHCP addresses and accept access to a limited part of your network. Also, when using NAP authentication, the supplicant can log on to a domain controller to gain certification.

Use the **no** variant of this command to disable packet forwarding from the Guest VLAN to a destination IP address or subnet.

**Syntax** `auth guest-vlan forward {<ip-address>|<ip-address/mask>}  
[dns|tcp <1-65535>|udp <1-65535>]  
  
no auth guest-vlan forward {<ip-address>|<ip-address/mask>}  
[dns|tcp <1-65535>|udp <1-65535>]`

| Parameter                             | Description  |
|---------------------------------------|--|
| <ip-address><br><ip-address/<br>mask> | The IP address or subnet to which the guest VLAN can forward packets, in dotted decimal notation |
| dns                                   | Enable forwarding of DNS packets   |
| tcp <1-65535>                         | Enable forwarding of packets for the specified TCP port number                                   |
| udp <1-65535>                         | Enable forwarding of packets for the specified UDP port number                                   |

**Default** Forwarding is disabled by default.

**Mode** Interface Configuration mode for a specified switch port, or Authentication Profile mode

**Usage** Before using this command, you must configure the guest VLAN with the [auth guest-vlan](#) command.

**Example** To enable packet forwarding from the guest VLAN to the destination IP address on interface port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth guest-vlan forward 10.0.0.1
```

To enable forwarding of DNS packets from the guest VLAN to the destination IP address on interface port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth guest-vlan forward 10.0.0.1 dns
```

To disable forwarding of DNS packets from the guest VLAN to the destination IP address on port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth guest-vlan forward 10.0.0.1 dns
```

To enable the tcp forwarding port 137 on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth guest-vlan forward 10.0.0.1
tcp 137
```

To disable the tcp forwarding port 137 authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth guest-vlan forward
10.0.0.1 tcp 137
```

**Related  
Commands**

[auth guest-vlan](#)  
[auth profile \(Global Configuration\)](#)  
[show running-config](#)



# auth host-mode

**Overview** This command selects host mode on the interface. Multi-host is an extension to IEEE802.1X.

Use the **no** variant of this command to set host mode to the default setting (single host).

**Syntax** `auth host-mode {single-host|multi-host|multi-supPLICant}`  
`no auth host-mode`

| Parameter        | Description   |
|------------------|---|
| single-host      | Single host mode. In this mode, only one host may be authorized with the port. If other hosts out the interface attempt to authenticate, the authenticator blocks the attempt.  |
| multi-host       | Multi host mode. In this mode, multiple hosts may be authorized with the port; however only one host must be successfully authenticated at the Authentication Server for all hosts to be authorized with the port. Upon one host being successfully authenticated (state Authenticated), the other hosts will be automatically authorized at the port (state ForceAuthorized). If no host is successfully authenticated, then all hosts are not authorized with the port. |
| multi-supPLICant | Multi supplicant (client device) mode. In this mode, multiple hosts may be authorized with the port, but each host must be individually authenticated with the Authentication Server to be authorized with the port. Supplicants which are not authenticated are not authorized with the port, while supplicants which are successfully authenticated are authorized with the port.   |

**Default** The default host mode for port authentication is for a single host.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** Ports residing in the unauthorized state for host(s) or supplicant(s), change to an authorized state when the host or supplicant has successfully authenticated with the Authentication Server.

When multi-host mode is used or auth critical feature is used, all hosts do not need to be authenticated.

**Examples** To set the host mode to multi-supPLICANT on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth host-mode multi-supPLICANT
```

To set the host mode to default (single host) on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth host-mode
```

To set the host mode to multi-supPLICANT on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth host-mode multi-supPLICANT
```

To set the host mode to default (single host) on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth host-mode
```

**Related Commands**

- [auth profile \(Global Configuration\)](#)
- [show dot1x](#)
- [show dot1x interface](#)
- [show running-config](#)

# auth log

**Overview** Use this command to configure the types of authentication feature log messages that are output to the log file.

Use the **no** variant of this command to remove either specified types or all types of authentication feature log messages that are output to the log file.

**Syntax**

```
auth log {dot1x|auth-mac|auth-web}  
{success|failure|logoff|all}  
  
no auth log {dot1x|auth-mac|auth-web}  
{success|failure|logoff|all}
```

| Parameter | Description   |
|-----------|---|
| dot1x     | Specify only 802.1X-Authentication log messages are output to the log file.   |
| auth-mac  | Specify only MAC-Authentication log messages are output to the log file.  |
| auth-web  | Specify only Web-Authentication log messages are output to the log file.  |
| success   | Specify only successful authentication log messages are output to the log file.   |
| failure   | Specify only authentication failure log messages are output to the log file.  |
| logoff    | Specify only authentication log-off messages are output to the log file. Note that link down, age out and expired ping polling messages will be included.   |
| all       | Specify all types of authentication log messages are output to the log file. Note that this is the default behavior for the authentication logging feature. |

**Default** All types of authentication log messages are output to the log file by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To configure the logging of MAC authentication failures to the log file for supplicants (client devices) connected to interface `port1.0.2`, use the following commands:

```
awplus# configure terminal  
awplus(config)# interface port1.0.2  
awplus(config-if)# auth log auth-mac failure
```

To disable the logging of all types of authentication log messages to the log file for supplicants (client devices) connected to interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth log all
```

To configure the logging of web authentication failures to the log file for supplicants (client devices) connected to authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth log auth-web failure
```

To disable the logging of all types of authentication log messages to the log file for supplicants (client devices) connected to authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth log all
```

**Related  
Commands**    [auth profile \(Global Configuration\)](#)  
[show running-config](#)

# auth max-suppliant

**Overview** This command sets the maximum number of supplicants (client devices) that can be authenticated on the selected port. Once this value is exceeded, further supplicants will not be authenticated.

The **no** variant of this command resets the maximum supplicant number to the default.

**Syntax** `auth max-suppliant <2-1024>`  
`no auth max-suppliant`

| Parameter | Description   |
|-----------|---------------|
| <2-1024>  | Limit number. |

**Default** The max supplicant of port authentication is 1024.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To set the maximum number of supplicants to 10 on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth max-suppliant 10
```

To reset the maximum number of supplicant to default on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth max-suppliant
```

To set the maximum number of supplicants to 10 on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth max-suppliant 10
```

To reset the maximum number of supplicant to default on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth max-suppliant
```

**Related  
Commands**

- auth profile (Global Configuration)
- show dot1x
- show dot1x interface
- show running-config

# auth profile (Global Configuration)

**Overview** Use this command to enter port authentication profile mode and configure a port authentication profile.

If the specified profile does not exist a new authentication profile is created with the name provided.

Use the **no** variant of this command to delete the specified port authentication profile.

**Syntax** `auth profile <profile-name>`  
`no auth profile <profile-name>`

| Parameter                    | Description                                 |
|------------------------------|---|
| <code>&lt;varname&gt;</code> | Name of the profile to create or configure. |

**Default** No port authentication profiles are created by default.

**Mode** Global Configuration

**Usage** A port authentication profile is a configuration object that aggregates multiple port authentication commands. These profiles are attached or detached from an interface using the [auth profile \(Interface Configuration\)](#) command.

**Example** To create a new authentication profile 'student', use the following commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)#
```

To delete an authentication profile 'student', use the following commands:

```
awplus# configure terminal
awplus(config)# no auth profile student
```

**Related Commands** [auth profile \(Interface Configuration\)](#)  
[description \(Authentication Profile\)](#)

# auth profile (Interface Configuration)

**Overview** Use this command to attach a port authentication profile to the current interface.  
Use the **no** variant of this command to detach a port authentication profile from the current interface.

**Syntax** `auth profile <profile-name>`  
`no auth profile <profile-name>`

| Parameter                         | Description   |
|-----------------------------------|---|
| <code>&lt;profile-name&gt;</code> | The name of the profile to attach to the current interface. |

**Default** No profile is attached by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port.

**Usage** This command attaches a authentication profile, created using the [auth profile \(Global Configuration\)](#) command, to a static channel, a dynamic (LACP) channel group, or a switch port.

You can only attach one profile to an interface at a time, use the **no** variant of the command to detach a profile before attempting to attach another one.

**Example** To attach the authentication profile 'student' to port1.0.1, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# auth profile student
```

To detach the authentication profile 'student' from port1.0.1, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no auth profile student
```

**Related Commands** [auth profile \(Global Configuration\)](#)



# auth reauthentication

**Overview** This command enables re-authentication on the interface specified in the Interface mode, which may be a static channel group (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

Use the **no** variant of this command to disables reauthentication on the interface.

**Syntax** `auth reauthentication`  
`no auth reauthentication`

**Default** Reauthentication of port authentication is disabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To enable reauthentication on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth reauthentication
```

To disable reauthentication on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth reauthentication
```

To enable reauthentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth reauthentication
```

To disable reauthentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth reauthentication
```

**Related Commands** [auth profile \(Global Configuration\)](#)  
[show dot1x](#)  
[show dot1x interface](#)  
[show running-config](#)

# auth roaming disconnected

**Overview** This command allows a supplicant to move to another authenticating interface without reauthentication, even if the link is down for the interface that the supplicant is currently connected to.

You must enter the [auth roaming enable](#) command on both interfaces before using this command.

The **no** variant of this command disables roaming authentication on interfaces that are link-down, and forces a supplicant to be reauthenticated when moving between interfaces.

See the [Authentication Feature Overview and Configuration Guide](#) for further information about this feature.

**Syntax** `auth roaming disconnected`  
`no auth roaming disconnected`

**Default** By default, the authentication status for a roaming supplicant is deleted when an interface goes down, so supplicants must reauthenticate.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** Note that 802.1X port authentication, MAC-authentication, or Web-authentication must be configured before using this feature. The port that the supplicant is moving to must have the same authentication configuration as the port the supplicant is moving from.

Roaming Authentication cannot be enabled if DHCP snooping is enabled ([service dhcp-snooping](#) command), and vice versa.

**Examples** To allow supplicants to move from port1.0.2 without reauthentication even when the link is down, when using 802.1X authentication, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# dot1x port-control auto
awplus(config-if)# auth roaming enable
awplus(config-if)# auth roaming disconnected
```

To require supplicants to reauthenticate when moving from port1.0.2 if the link is down, when using 802.1X authentication, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth roaming disconnected
```

To allow supplicants using authentication profile 'student' to move between ports without reauthentication even when the link is down, use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth roaming disconnected
```

To require supplicants using authentication profile 'student' to reauthenticate when moving between ports if the link is down, use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth roaming disconnected
```

**Related  
Commands**

[auth profile \(Global Configuration\)](#)

[auth-mac enable](#)

[auth roaming enable](#)

[auth-web enable](#)

[dot1x port-control](#)

[show auth interface](#)

[show dot1x interface](#)

[show running-config](#)

# auth roaming enable

**Overview** This command allows a supplicant to move to another authenticating interface without reauthentication, providing the link is up for the interface that the supplicant is currently connected to.

The **no** variant of this command disables roaming authentication on an interface, and forces a supplicant to be reauthenticated when moving between interfaces.

See the [Authentication Feature Overview and Configuration Guide](#) for further information about this feature.

**Syntax** `auth roaming enable`  
`no auth roaming enable`

**Default** Roaming authentication is disabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** Note that 802.1X port authentication, MAC-authentication, or Web-authentication must be configured before using this feature. The port that the supplicant is moving to must have the same authentication configuration as the port the supplicant is moving from.

This command only enables roaming authentication for links that are up. If you want roaming authentication on links that are down, you must also use the command [auth roaming disconnected](#).

Roaming Authentication cannot be enabled if DHCP snooping is enabled ([service dhcp-snooping](#) command), and vice versa.

**Examples** To enable roaming authentication for port1.0.4, when using 802.1X authentication, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# dot1x port-control auto
awplus(config-if)# auth roaming enable
```

To disable roaming authentication for port1.0.4, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.4
awplus(config-if)# no auth roaming enable
```

To enable roaming authentication for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth roaming enable
```

To disable roaming authentication for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth roaming enable
```

**Related  
Commands**

[auth profile \(Global Configuration\)](#)

[auth-mac enable](#)

[auth roaming disconnected](#)

[auth-web enable](#)

[dot1x port-control](#)

[show auth interface](#)

[show dot1x interface](#)

[show running-config](#)

# auth supplicant-ip

**Overview** This command adds a supplicant (client device) IP address on a given interface and provides parameters for its configuration.

Use the **no** variant of this command to delete the supplicant IP address and reset other parameters to their default values. The IP address can be determined before authentication for only auth-web client.

**Syntax**

```
auth supplicant-ip <ip-addr> [max-reauth-req <1-10>]
[port-control {auto|force-authorized|force-unauthorized}]
[quiet-period <1-65535>] [reauth-period <1-4294967295>]
[supp-timeout <1-65535>] [server-timeout <1-65535>]
[reauthentication]

no auth supplicant-ip <ip-addr> [reauthentication]
```

| Parameter          | Description  |
|--------------------|--|
| <ip-addr>          | IP address of the supplicant entry in A.B.C.D/P format.                            |
| max-reauth-req     | The number of reauthentication attempts before becoming unauthorized.              |
| <1-10>             | Count of reauthentication attempts (default 2).                                    |
| port-control       | Port control commands.   |
| auto               | A port control parameter that allows port clients to negotiate authentication.     |
| force-authorized   | A port control parameter that forces the port state to authorized.                 |
| force-unauthorized | A port control parameter that forces the port state to unauthorized.               |
| quiet-period       | Quiet period during which the port remains in the HELD state (default 60 seconds). |
| <1-65535>          | Seconds for quiet period.  |
| reauth-period      | Seconds between reauthorization attempts (default 3600 seconds).                   |
| <1-4294967295>     | Seconds for reauthorization attempts (reauth-period).                              |
| supp-timeout       | Supplicant response timeout.   |
| <1-65535>          | Seconds for supplicant response timeout (default 30 seconds).                      |
| server-timeout     | The period, in seconds, before the authentication server response times out.       |
| <1-65535>          | The server-timeout period, in seconds, default 3600 seconds.                       |
| reauthentication   | Enable reauthentication on a port.   |

**Default** No supplicant IP address for port authentication exists by default until first created with the **auth supplicant-ip** command. The defaults for parameters applied are as shown in the table above.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, a switch port, or Auth Profile.

**Examples** To add the supplicant IP address 192.168.10.0/24 to force authorized port control for interface port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth supplicant-ip 192.168.10.0/24
port-control force-authorized
```

To delete the supplicant IP address 192.168.10.0/24 for interface port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth supplicant-ip 192.168.10.0/24
```

To disable reauthentication for the supplicant(s) IP address 192.168.10.0/24 for interface port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth supplicant-ip 192.168.10.0/24
reauthentication
```

To add the supplicant IP address 192.168.10.0/24 to force authorized port control for auth profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth supplicant-ip
192.168.10.0/24 port-control force-authorized
```

To delete the supplicant IP address 192.168.10.0/24 for auth profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth supplicant-ip
192.168.10.0/24
```

To disable reauthentication for the supplicant IP address 192.168.10.0/24, for auth profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-if)# no auth supplicant-ip 192.168.10.0/24
reauthentication
```

**Validation  
Commands**    show auth  
                 show dot1x  
                 show dot1x interface  
                 show running-config



# auth supplicant-mac

**Overview** This command adds a supplicant (client device) MAC address or MAC mask on a given interface with the parameters as specified in the table below.

Use the **no** variant of this command to delete the supplicant MAC address and reset other parameters to their default values.

**Syntax**

```
auth supplicant-mac <mac-addr> [mask <mac-addr-mask>]
[max-reauth-req <1-10>] [port-control
{auto|force-authorized|force-unauthorized|skip-second-auth}]
[quiet-period <1-65535>] [reauth-period <1-4294967295>]
[supp-timeout <1-65535>] [server-timeout <1-65535>]
[reauthentication]

no auth supplicant-mac <mac-addr> [reauthentication]
```

| Parameter          | Description   |
|--------------------|---|
| <mac-addr>         | MAC (hardware) address of the supplicant entry in HHHH.HHHH.HHHH MAC address hexadecimal format.  |
| mask               | A mask applied to MAC addresses in order to select only those addresses containing a specific string.   |
| <mac-addr-mask>    | The mask comprises a string of three (period separated) bytes, where each byte comprises four hexadecimal characters that will generally be either 1 or 0. When the mask is applied to a specific MAC address, a match is only required for characters that correspond to a 1 in the mask. Characters that correspond to a 0 in the mask are effectively ignored.<br>In the examples section below, the mask ffff.ff00.0000 is applied for the MAC address 0000.5E00.0000. The applied mask will then match only those MAC addresses that begin with 0000.5E (in this case the OUI component). The remaining portion of the addresses (in this case the NIC component) will be ignored. |
| port-control       | Port control commands.  |
| auto               | Allow port client to negotiate authentication.  |
| force-authorized   | Force port state to authorized.   |
| force-unauthorized | Force port state to unauthorized.   |
| skip-second-auth   | Skip the second authentication.   |
| quiet-period       | Quiet period in the HELD state (default 60 seconds).  |
| <1-65535>          | Seconds for quiet period.   |
| reauth-period      | Seconds between reauthorization attempts (default 3600 seconds).  |
| <1-4294967295>     | Seconds for reauthorization attempts (reauth-period).   |

| Parameter        | Description   |
|------------------|---|
| supp-timeout     | Supplicant response timeout (default 30 seconds).                         |
| <1-65535>        | Seconds for supplicant response timeout.                                  |
| server-timeout   | Authentication server response timeout (default 30 seconds).              |
| <1-65535>        | Seconds for authentication server response timeout.                       |
| reauthentication | Enable reauthentication on a port.  |
| max-reauth-req   | No of reauthentication attempts before becoming unauthorized (default 2). |
| <1-10>           | Count of reauthentication attempts.                                       |

**Default** No supplicant MAC address for port authentication exists by default until first created with the **auth supplicant-mac** command. The defaults for parameters are shown in the table above.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To add the supplicant MAC address 0000.5E00.5343 to force authorized port control for port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth supplicant-mac 0000.5E00.5343
port-control force-authorized
```

To apply the mask ffff.ff00.0000 in order to add any supplicant whose MAC address begins with 000.5E, and then to force authorized port control for port 1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth supplicant-mac 0000.5E00.0000 mask
ffff.ff00.0000 port-control force-authorized
```

To delete the supplicant MAC address 0000.5E00.5343 for port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth supplicant-mac 0000.5E00.5343
```

To reset reauthentication to disabled for the supplicant MAC address 0000.5E00.5343 for port1.0.2, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth supplicant-mac 0000.5E00.5343
reauthentication
```

To add the supplicant MAC address 0000.5E00.5343 to force authorized port control for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth supplicant-mac
0000.5E00.5343 port-control force-authorized
```

To delete the supplicant MAC address 0000.5E00.5343 for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth supplicant-mac
0000.5E00.5343
```

To disable reauthentication for the supplicant MAC address 0000.5E00.5343 for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth supplicant-mac
0000.5E00.5343 reauthentication
```

**Related  
Commands**

[show auth](#)  
[show dot1x](#)  
[show dot1x interface](#)  
[show running-config](#)

# auth timeout connect-timeout

**Overview** This command sets the connect-timeout period for the interface.

Use the **no** variant of this command to reset the connect-timeout period to the default.

**Syntax** `auth timeout connect-timeout <1-65535>`  
`no auth timeout connect-timeout`

| Parameter                    | Description  |
|------------------------------|--|
| <code>&lt;1-65535&gt;</code> | Specifies the connect-timeout period (in seconds). |

**Default** The connect-timeout default is 30 seconds.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** This command is used for MAC- and Web-Authentication. If the connect-timeout has lapsed and the supplicant has the state **connecting**, then the supplicant is deleted. When [auth-web-server session-keep](#) or [auth two-step enable](#) is enabled, we recommend you configure a longer connect-timeout period.

**Examples** To set the connect-timeout period to 3600 seconds for port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth timeout connect-timeout 3600
```

To reset the connect-timeout period to the default (30 seconds) for port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth timeout connect-timeout
```

To set the connect-timeout period to 3600 seconds for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth timeout connect-timeout 3600
```

To reset the connect-timeout period to the default (30 seconds) for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth timeout connect-timeout
```

**Related  
Commands**

- [auth profile \(Global Configuration\)](#)
- [show dot1x](#)
- [show dot1x interface](#)

# auth timeout quiet-period

**Overview** This command sets a time period for which another authentication request is not accepted on a given interface, after an authentication request has failed.

Use the **no** variant of this command to reset the quiet period to the default.

**Syntax** `auth timeout quiet-period <1-65535>`  
`no auth timeout quiet-period`

| Parameter | Description                              |
|-----------|--|
| <1-65535> | Specifies the quiet period (in seconds). |

**Default** The quiet period for port authentication is 60 seconds.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To set the quiet period to 10 seconds for interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth timeout quiet-period 10
```

To reset the quiet period to the default (60 seconds) for interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth timeout quiet-period
```

To set the quiet period to 10 seconds for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth timeout quiet-period 10
```

To reset the quiet period to the default (60 seconds) for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth timeout quiet-period
```

**Related Commands** [auth profile \(Global Configuration\)](#)

# auth timeout reauth-period

**Overview** This command sets the timer for reauthentication on a given interface. The re-authentication for the supplicant (client device) is executed at this timeout. The timeout is only applied if the **auth reauthentication** command is applied.

Use the **no** variant of this command to reset the **reauth-period** parameter to the default (3600 seconds).

**Syntax** `auth timeout reauth-period <1-4294967295>`  
`no auth timeout reauth-period`

| Parameter      | Description                                       |
|----------------|---|
| <1-4294967295> | The reauthentication timeout period (in seconds). |

**Default** The default reauthentication period for port authentication is 3600 seconds, when reauthentication is enabled on the port.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To set the reauthentication period to 1 day for interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth timeout reauth-period 86400
```

To reset the reauthentication period to the default (3600 seconds) for interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth timeout reauth-period
```

To set the reauthentication period to 1 day for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth timeout reauth-period 86400
```

To reset the reauthentication period to the default (3600 seconds) for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth timeout reauth-period
```

**Related  
Commands**

- auth profile (Global Configuration)
- auth reauthentication
- show dot1x
- show dot1x interface
- show running-config



# auth timeout server-timeout

**Overview** This command sets the timeout for the waiting response from the RADIUS server on a given interface.

The **no** variant of this command resets the server-timeout to the default (30 seconds).

**Syntax** `auth timeout server-timeout <1-65535>`  
`no auth timeout server-timeout`

| Parameter | Description                         |
|-----------|-------------------------------------|
| <1-65535> | Server timeout period (in seconds). |

**Default** The server timeout for port authentication is 30 seconds.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To set the server timeout to 120 seconds for interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth timeout server-timeout 120
```

To set the server timeout to the default (30 seconds) for interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth timeout server-timeout
```

To set the server timeout to 120 seconds for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth timeout server-timeout 120
```

To set the server timeout to the default (30 seconds) for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth timeout server-timeout
```

**Related  
Commands**

- auth profile (Global Configuration)
- show dot1x
- show dot1x interface
- show running-config

# auth timeout supp-timeout

**Overview** This command sets the timeout of the waiting response from the supplicant (client device) on a given interface.

The **no** variant of this command resets the supplicant timeout to the default (30 seconds).

**Syntax** `auth timeout supp-timeout <1-65535>`  
`no auth timeout supp-timeout`

| Parameter | Description                          |
|-----------|--------------------------------------|
| <1-65535> | The sup-timeout period (in seconds). |

**Default** The supplicant timeout for port authentication is 30 seconds.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To set the server timeout to 2 seconds for interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth timeout supp-timeout 2
```

To reset the server timeout to the default (30 seconds) for interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth timeout supp-timeout
```

To set the server timeout to 2 seconds for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth timeout supp-timeout 2
```

To reset the server timeout to the default (30 seconds) for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth timeout supp-timeout
```

**Related  
Commands**

- auth profile (Global Configuration)
- show dot1x
- show dot1x interface
- show running-config

# auth two-step enable

**Overview** This command enables a two-step authentication feature on an interface. When this feature is enabled, the supplicant is authorized in a two-step process. If authentication succeeds, the supplicant becomes authenticated. This command will apply the two-step authentication method based on 802.1X-, MAC- or Web-Authentication.

The **no** variant of this command disables the two-step authentication feature.

**Syntax** `auth two-step enable`  
`no auth two-step enable`

**Default** Two step authentication is disabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** The single step authentication methods (either user or device authentication) have a potential security risk:

- an unauthorized user can access the network with an authorized device, or
- an authorized user can access the network with an unauthorized device.

Two-step authentication solves this problem by authenticating both the user and the device. The supplicant will only become authenticated if both these steps are successful. If the first authentication step fails, then the second step is not started.

**Examples** To enable the two step authentication feature, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth two-step enable
```

To disable the two step authentication feature, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth two-step enable
```

To enable MAC-Authentication followed by 802.1X-Authentication, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport mode access
awplus(config-if)# auth-mac enable
awplus(config-if)# dot1x port-control auto
awplus(config-if)# auth dynamic-vlan-creation
awplus(config-if)# auth two-step enable
```

To enable MAC-Authentication followed by Web-Authentication, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport mode access
awplus(config-if)# auth-mac enable
awplus(config-if)# auth-web enable
awplus(config-if)# auth dynamic-vlan-creation
awplus(config-if)# auth two-step enable
```

To enable 802.1X-Authentication followed by Web-Authentication, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport mode access
awplus(config-if)# auth-web enable
awplus(config-if)# dot1x port-control auto
awplus(config-if)# auth dynamic-vlan-creation
awplus(config-if)# auth two-step enable
```

To enable the two step authentication feature for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth two-step enable
```

To disable the two step authentication feature for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth two-step enable
```

**Validation  
Commands**

[show startup-config](#)  
[show auth supplicant](#)  
[show dot1x supplicant](#)

**Related Commands**

- auth profile (Global Configuration)
- show auth two-step supplicant brief
- show auth
- show auth interface
- show auth supplicant
- show dot1x
- show dot1x interface
- show dot1x supplicant

# auth-mac accounting

**Overview** This command overrides the **default** RADIUS accounting method for MAC-based authentication on an interface by allowing you to apply a user-defined named list.

Use the **no** variant of this command to remove the named list from the interface and apply the **default** method.

**Syntax** `auth-mac accounting {default|<list-name>}`  
`no auth-mac accounting`

| Parameter   | Description                              |
|-------------|--|
| default     | Apply the default accounting method list |
| <list-name> | Apply the user-defined named list        |

**Default** The **default** method list is applied to an interface by default.

**Mode** Interface Mode

**Example** To apply the named list 'vlan10\_acct' on the `vlan10` interface, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# auth-mac accounting vlan10_acct
```

To remove the named list from the `vlan10` interface and set the accounting method back to **default**, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no auth-mac accounting
```

**Related Commands** [aaa accounting auth-mac](#)



# auth-mac authentication

**Overview** This command overrides the **default** MAC-based authentication method on an interface by allowing you to apply a user-defined named list.

Use the **no** variant of this command to remove the named list from the interface and apply the **default** method.

**Syntax** `auth-mac authentication {default|<list-name>}`  
`no auth-mac authentication`

| Parameter   | Description                                  |
|-------------|--|
| default     | Apply the default authentication method list |
| <list-name> | Apply a user-defined named list              |

**Default** The **default** method list is applied to an interface by default.

**Mode** Interface Mode

**Example** To apply the named list 'vlan10\_auth' on the `vlan10` interface, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# auth-mac authentication vlan10_auth
```

To remove the named list from the `vlan10` interface and set the authentication method back to **default**, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no auth-mac authentication
```

**Related Commands** [aaa authentication auth-mac](#)

# auth-mac enable

**Overview** This command enables MAC-based authentication on the interface specified in the Interface command mode.

Use the **no** variant of this command to disable MAC-based authentication on an interface.

**Syntax** `auth-mac enable`  
`no auth-mac enable`

**Default** MAC-Authentication is disabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** Enabling **spanning-tree edgeport** on ports after enabling MAC-based authentication avoids unnecessary re-authentication when the port state changes, which does not happen when spanning tree edgeport is enabled. Note that re-authentication is correct behavior without **spanning-tree edgeport** enabled.

Applying **switchport mode access** on ports is also good practice to set the ports to access mode with ingress filtering turned on, whenever ports for MAC-Authentication are in a VLAN.

**Examples** To enable MAC-Authentication on interface `port1.0.2` and enable spanning tree edgeport to avoid unnecessary re-authentication, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth-mac enable
awplus(config-if)# spanning-tree edgeport
awplus(config-if)# switchport mode access
```

To disable MAC-Authentication on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth-mac enable
```

To enable MAC authentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth-mac enable
```

To disable MAC authentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth-mac enable
```

**Related  
Commands**

- [auth profile \(Global Configuration\)](#)
- [show auth](#)
- [show auth interface](#)
- [show running-config](#)

# auth-mac method

**Overview** This command sets the type of authentication method for MAC-Authentication that is used with RADIUS on the interface specified in the Interface command mode.

The **no** variant of this command resets the authentication method used to the default method (PAP) as the RADIUS authentication method used by the MAC-Authentication.

**Syntax** `auth-mac method [eap-md5|pap]`  
`no auth-mac method`

| Parameter | Description                              |
|-----------|--|
| eap-md5   | Enable EAP-MD5 of authentication method. |
| pap       | Enable PAP of authentication method.     |

**Default** The MAC-Authentication method is PAP.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To set the MAC-Authentication method to `pap` on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth-mac method pap
```

To set the MAC-Authentication method to the default on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth-mac method
```

To enable MAC authentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth-mac enable
```

To disable MAC authentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth-mac enable
```

**Related  
Commands**

- [auth profile \(Global Configuration\)](#)
- [show auth](#)
- [show auth interface](#)
- [show running-config](#)

# auth-mac password

**Overview** This command changes the password for MAC-based authentication.  
Use the **no** variant of this command to return the password to its default.

**Syntax** `auth-mac [encrypted] password <password>`  
`no auth-mac password`

| Parameter                     | Description  |
|-------------------------------|--|
| <code>auth-mac</code>         | MAC-based authentication   |
| <code>encrypted</code>        | Specify an encrypted password  |
| <code>password</code>         | Configure the password   |
| <code>&lt;password&gt;</code> | The new password. Passwords can be up to 64 characters in length and can contain any printable characters except <ul style="list-style-type: none"><li>• ?</li><li>• " (double quotes)</li><li>• space</li></ul> |

**Default** By default, the password is the MAC address of the supplicant

**Mode** Global Configuration

**Usage** Changing the password increases the security of MAC-based authentication, because the default password is easy for an attacker to discover. This is particularly important if:

- some MAC-based supplicants on the network are intelligent devices, such as computers, and/or
- you are using two-step authentication (see the “Ensuring Authentication Methods Require Different Usernames and Passwords” section of the [Authentication Feature Overview\\_and Configuration Guide](#)).

**Examples** To change the password to verySecurePassword, use the commands:

```
awplus# configure terminal
awplus(config)# auth-mac password verySecurePassword
```

**Validation Command** `show running-config`

**Related Commands** `auth two-step enable`  
`show auth`

# auth-mac reauth-relearning

**Overview** This command sets the MAC address learning of the supplicant (client device) to re-learning for re-authentication on the interface specified in the Interface command mode.

Use the **no** variant of this command to disable the auth-mac re-learning option.

**Syntax** `auth-mac reauth-relearning`  
`no auth-mac reauth-relearning`

**Default** Re-learning for port authentication is disabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To enable the re-authentication re-learning feature on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth-mac reauth-relearning
```

To disable the re-authentication re-learning feature on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth-mac reauth-relearning
```

To enable the re-authentication re-learning feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth-mac reauth-relearning
```

To disable the re-authentication re-learning feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth-mac reauth-relearning
```

**Related Commands** [auth profile \(Global Configuration\)](#)  
[show auth](#)  
[show auth interface](#)  
[show running-config](#)

# auth-mac username

**Overview** Use this command to specify the format of the MAC address in the username and password field when a request for MAC-based authorization is sent to a RADIUS server.

**Syntax** `auth-mac username {ietf|unformatted} {lower-case|upper-case}`

| Parameter   | Description  |
|-------------|--|
| ietf        | The MAC address includes a hyphen between each 2 bytes. (Example: xx-xx-xx-xx-xx-xx) |
| unformatted | The MAC address does not include hyphens. (Example: xxxxxxxxxxxx)                    |
| lower-case  | The MAC address uses lower-case characters (a-f)                                     |
| upper-case  | The MAC address uses upper-case characters (A-F)                                     |

**Default** `auth-mac username ietf lower-case`

**Mode** Global Configuration

**Usage** This command is provided to allow other vendors', AlliedWare, and AlliedWare Plus switches to share the same format on the RADIUS server.

**Example** To configure the format of the MAC address in the username and password field to be changed to IETF and upper-case, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-mac username ietf upper-case
```

**Related Commands** [auth-mac username](#)  
[show running-config](#)



# auth-web accounting

**Overview** This command overrides the **default** RADIUS accounting method for Web-based authentication on an interface by allowing you to apply a user-defined named list.

Use the **no** variant of this command to remove the named list from the interface and apply the **default** method.

**Syntax** `auth-web accounting {default|<list-name>}`  
`no auth-web accounting`

| Parameter   | Description                              |
|-------------|--|
| default     | Apply the default accounting method list |
| <list-name> | Apply a named accounting method list     |

**Default** The **default** method list is applied to an interface by default.

**Mode** Interface Mode

**Example** To apply the named list `vlan10_acct` on the `vlan10` interface, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# auth-web accounting vlan10_acct
```

To remove the named list from the `vlan10` interface and set the accounting method back to **default**, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no auth-web accounting
```

**Related Commands** [aaa accounting auth-web](#)

# auth-web authentication

**Overview** This command overrides the **default** Web-based authentication method on an interface by allowing you to apply a user-defined named list.

Use the **no** variant of this command to remove the named list from the interface and apply the **default** method.

**Syntax** `auth-web authentication {default|<list-name>}`  
`no auth-web authentication`

| Parameter   | Description                                  |
|-------------|--|
| default     | Apply the default authentication method list |
| <list-name> | Apply the user-defined named list            |

**Default** The **default** method list is applied to an interface by default.

**Mode** Interface Mode

**Example** To apply the named list 'vlan10\_auth' on the `vlan10` interface, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# auth-web authentication vlan10_auth
```

To remove the named list from the `vlan10` interface and set the authentication method back to **default**, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no auth-web authentication
```

**Related Commands** [aaa authentication auth-web](#)

# auth-web enable

**Overview** This command enables Web-based authentication in Interface mode on the interface specified.

Use the **no** variant of this command to apply its default.

**Syntax** `auth-web enable`  
`no auth-web enable`

**Default** Web-Authentication is disabled by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** Web-based authentication cannot be enabled if DHCP snooping is enabled by using the [service dhcp-snooping](#) command, and vice versa. You need to configure an IPv4 address for the VLAN interface on which Web Authentication is running.

**Examples** To enable Web-Authentication on static-channel-group 2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# static-channel-group 2
awplus(config-if)# exit
awplus(config)# interface sa2
awplus(config-if)# auth-web enable
```

To disable Web-Authentication on static-channel-group 2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# static-channel-group 2
awplus(config-if)# exit
awplus(config)# interface sa2
awplus(config-if)# no auth-web enable
```

To enable Web authentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth-web enable
```

To disable Web authentication on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth-web enable
```

**Related  
Commands**

[auth profile \(Global Configuration\)](#)

[show auth](#)

[show auth interface](#)

[show running-config](#)

# auth-web forward

**Overview** This command enables the Web-authentication packet forwarding feature on the interface specified. This command also enables ARP forwarding, and adds forwarded packets to the **tcp** or **udp** port number specified.

The **no** variant of this command disables the specified packet forwarding feature on the interface.

**Syntax** `auth-web forward [<ip-address>|<ip-address/prefix-length>]  
{dns|tcp <1-65535>|udp <1-65535>}`

Or

`auth-web forward {arp|dhcp|dns|tcp <1-65535>|udp <1-65535>}`

The **no** variant of this command are:

`no auth-web forward [<ip-address>|<ip-address/prefix-length>]  
{dns|tcp <1-65535>|udp <1-65535>}`

Or

`no auth-web forward {arp|dhcp|dns|tcp <1-65535>|udp <1-65535>}`

| Parameter                                      | Description  |
|--|--|
| <ip-address><br><ip-address/<br>prefix-length> | The IP address or subnet on which the Web-authentication is to be enabled. |
| arp  | Enable forwarding of ARP.  |
| dhcp   | Enable forwarding of DHCP (67/udp).  |
| dns  | Enable forwarding of DNS (53/udp).   |
| tcp  | Enable forwarding of TCP specified port number.                            |
| <1-65535>                                      | TCP Port number.   |
| udp  | Enable forwarding of UDP specified port number.                            |
| <1-65535>                                      | UDP Port number.   |

**Default** Packet forwarding for port authentication is enabled by default for "arp", "dhcp" and "dns".

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Usage** For more information about the <ip-address> parameter, and an example, see the "auth- web forward" section in the [Alliedware Plus Technical Tips and Tricks](#).

**Examples** To enable the ARP forwarding feature on interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth-web forward arp
```

To add the TCP forwarding port 137 on interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth-web forward tcp 137
```

To add the DNS Server IP address 192.168.1.10 on interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# switchport mode access
awplus(config-if)# auth-web enable
awplus(config-if)# auth dynamic-vlan-creation
awplus(config-if)# auth-web forward 192.168.1.10 dns
```

To disable the ARP forwarding feature on interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth-web forward arp
```

To delete the TCP forwarding port 137 on interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth-web forward tcp 137
```

To delete the all of TCP forwarding on interface port1.0.2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth-web forward tcp
```

To enable the arp forwarding feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth-web forward arp
```

To add the tcp forwarding port 137 on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth-web forward tcp 137
```

To disable the ARP forwarding feature on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth-web forward arp
```

To delete the tcp forwarding port 137 on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth-web forward tcp 137
```

To delete all tcp forwarding on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth-web forward tcp
```

**Related  
Commands**

[auth profile \(Global Configuration\)](#)

[show auth](#)

[show auth interface](#)

# auth-web max-auth-fail

**Overview** This command sets the number of authentication failures allowed before rejecting further authentication requests. When the supplicant (client device) fails more than the specified number of times, then login requests are refused during the quiet period.

The **no** variant of this command resets the maximum number of authentication failures to the default.

**Syntax** `auth-web max-auth-fail <0-10>`  
`no auth-web max-auth-fail`

| Parameter | Description   |
|-----------|---|
| <0-10>    | The maximum number of authentication requests allowed before failing. |

**Default** The maximum number of authentication failures is set to 3.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Examples** To set the lock count to 5 on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth-web max-auth-fail 5
```

To set the lock count to the default on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no auth-web max-auth-fail
```

To set the lock count to 5 on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth-web max-auth-fail 5
```

To set the lock count to the default on authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth-web max-auth-fail
```



**Related  
Commands**

- auth profile (Global Configuration)
- auth timeout quiet-period
- show auth
- show auth interface
- show running-config

# auth-web method

**Overview** This command sets the Web-authentication access method that is used with RADIUS on the interface specified.

The **no** variant of this command sets the authentication method to PAP for the interface specified when Web-Authentication is also used with the RADIUS authentication method.

**Syntax** `auth-web method {eap-md5|pap}`  
`no auth-web method`

| Parameter | Description                                  |
|-----------|--|
| eap-md5   | Enable EAP-MD5 as the authentication method. |
| pap       | Enable PAP as the authentication method.     |

**Default** The Web-Authentication method is set to PAP by default.

**Mode** Interface Configuration for a static channel, a dynamic (LACP) channel group, or a switch port; or Authentication Profile mode.

**Example** To set the Web-Authentication method to eap-md5 on interface `port1.0.2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# auth-web method eap-md5
```

To set the web authentication method to eap-md5 for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# auth-web method eap-md5
```

To reset the web authentication method to the default (PAP) for authentication profile 'student', use the commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no auth-web method
```

**Related Commands** [auth profile \(Global Configuration\)](#)  
[show auth](#)  
[show auth interface](#)  
[show running-config](#)

# auth-web-server blocking-mode

**Overview** Use this command to enable blocking mode for the Web-Authentication server. The blocking mode displays an authentication success or failure screen immediately from the response result from a RADIUS server.

Use the **no** variant of this command to disable blocking mode for the Web-Authentication server.

**Syntax** `auth-web-server blocking-mode`  
`no auth-web-server blocking-mode`

**Default** By default, blocking mode is disabled for the Web-Authentication server.

**Mode** Global Configuration

**Example** To enable blocking mode for the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server blocking-mode
```

To disable blocking mode for the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server blocking-mode
```

**Related Commands** [auth-web-server redirect-delay-time](#)  
[show auth-web-server](#)  
[show running-config](#)

# auth-web-server dhcp ipaddress

**Overview** Use this command to assign an IP address and enable the DHCP service on the Web-Authentication server for supplicants (client devices).

Use the **no** variant of this command to remove an IP address and disable the DHCP service on the Web-Authentication server for supplicants.

**Syntax** `auth-web-server dhcp ipaddress <ip-address/prefix-length>`  
`no auth-web-server dhcp ipaddress`

| Parameter                                       | Description  |
|---|--|
| <code>&lt;ip-addr/<br/>prefix-length&gt;</code> | The IPv4 address and prefix length assigned for the DHCP service on the Web-Authentication server for supplicants. |

**Default** No IP address for the Web-Authentication server is set by default.

**Mode** Global Configuration

**Usage** See the [Authentication Feature Overview and Configuration Guide](#) for information about:

- using DHCP with web authentication, and
- restrictions regarding combinations of authentication enhancements working together

You cannot use the IPv4 address assigned to the device's interface as the Web-Authentication server address.

**Examples** To assign the IP address 10.0.0.1 to the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server dhcp ipaddress 10.0.0.1/8
```

To remove an IP address on the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server dhcp ipaddress
```

**Validation Commands** [show running-config](#)

**Related Commands** [show auth-web-server](#)  
[auth-web-server dhcp lease](#)

# auth-web-server dhcp lease

**Overview** Use this command to set the DHCP lease time for supplicants (client devices) using the DHCP service on the Web-Authentication server.

Use the **no** variant of this command to reset to the default DHCP lease time for supplicants using the DHCP service on the Web-Authentication server.

**Syntax** `auth-web-server dhcp lease <20-60>`  
`no auth-web-server dhcp lease`

| Parameter | Description   |
|-----------|---|
| <20-60>   | DHCP lease time for supplicants using the DHCP service on the Web-Authentication server in seconds. |

**Default** The default DHCP lease time for supplicants using the DHCP service on the Web-Authentication server is set to 30 seconds.

**Mode** Global Configuration

**Usage** See the [Authentication Feature Overview and Configuration Guide](#) for information about:

- using DHCP with web authentication, and
- restrictions regarding combinations of authentication enhancements working together

**Examples** To set the DHCP lease time to 1 minute for supplicants using the DHCP service on the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server dhcp lease 60
```

To reset the DHCP lease time to the default setting (30 seconds) for supplicants using the DHCP service on the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server dhcp lease
```

**Validation Commands** `show running-config`

**Related Commands** `show auth-web-server`  
`auth-web-server dhcp ipaddress`

# auth-web-server dhcp-wpad-option

**Overview** This command sets the DHCP WPAD (Web Proxy Auto-Discovery) option for the Web-Authentication temporary DHCP service.

For more information and examples, see the “Web Auth Proxy” section in the [AlliedWare Plus Technical Tips and Tricks](#).

Use the **no** variant of this command to disable the DHCP WPAD function.

**Syntax** `auth-web-server dhcp wpad-option <url>`  
`no auth-web-server dhcp wpad-option`

| Parameter | Description                               |
|-----------|---|
| <url>     | URL to the server which gets a .pac file. |

**Default** The Web-Authentication server DHCP WPAD option is not set.

**Mode** Global Configuration

**Usage** If the supplicant is configured to use WPAD, the supplicant’s web browser will use TCP port 80 as usual. Therefore, the packet can be intercepted by Web-Authentication as normal, and the Web-Authentication Login page can be sent. However, after authentication, the browser does not know where to get the WPAD file and so cannot access external web pages. The WPAD file is usually named proxy.pac file and tells the browser what web proxy to use.

Use this command to tell the supplicant where it can get this file from. The switch itself can be specified as the source for this file, and it can deliver it to the supplicant on request.

**Example** To specify that the proxy.pac file is found on the server at 192.168.1.100, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server dhcp wpad-option
http://192.168.1.100/proxy/proxy.pac
```

**Related Commands** [show auth-web-server](#)

## auth-web-server gateway (deleted)

**Overview** This command has been deleted from Software Version 5.4.4-2.3 and later, because it is no longer necessary to register the gateway information when the supplicant is authorized.

# auth-web-server host-name

**Overview** This command assigns a hostname to the web authentication server.

Use the **no** variant of this command to remove the hostname from the web authentication server.

**Syntax** `auth-web-server host-name <hostname>`  
`no auth-web-server host-name`

| Parameter                     | Description                |
|-------------------------------|----------------------------|
| <code>&lt;hostname&gt;</code> | URL string of the hostname |

**Default** The web authentication server has no hostname.

**Mode** Global Configuration

**Usage** When the web authentication server uses HTTPS protocol, the web browser will validate the certificate. If the certificate is invalid, the web page gives a warning message before displaying server content. However, the web page will not give warning message if the server has a hostname same as the one stored in the installed certificate.

**Examples** To set the auth.example.com as the hostname of the web authentication server, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server host-name auth.example.com
```

To remove hostname auth.example.com from the web authentication server, use the commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server host-name
```

**Related Commands** [aaa authentication auth-web](#)  
[auth-web enable](#)



## auth-web-server http-redirect (deleted)

**Overview** This command has been deleted in Software Version 5.4.4-2.3 and later, because the HTTP redirect feature is now always enabled and cannot be disabled.

# auth-web-server intercept-port

**Overview** This command specifies any additional TCP port numbers that the Web-Authentication server is to intercept.

Use the **no** variant of this command to stop intercepting the TCP port numbers.

**Syntax** `auth-web-server intercept-port {<1-65535>|any}`  
`no auth-web-server intercept-port {<1-65535>|any}`

| Parameter | Description               |
|-----------|---------------------------|
| <1-65535> | TCP port number.          |
| any       | Intercept all TCP packets |

**Default** No additional TCP port numbers are intercepted by default.

**Mode** Global Configuration

**Usage** If this command is not specified, AlliedWare Plus Web-Authentication intercepts the supplicant's initial TCP port 80 connection to a web page and sends it the Web-Authentication Login page. However, if the supplicant is configured to use a web proxy, then it will usually be using TCP port 8080 (or another user configured port number). In this case Web-Authentication cannot intercept the connection.

To overcome this limitation you can use this command to tell the switch which additional port it should intercept, and then send the Web-Authentication Login page to the supplicant.

When the web authentication switch is in a guest network, the switch does not know the proxy server's port number in the supplicant's proxy setting. To overcome this limitation, you can use the **any** option in this command to intercept all TCP packets.

When you use this command in conjunction with a proxy server configured in the web browser, you must add the proxy server's network as a 'No Proxy' network. You can specify 'No Proxy' networks in the proxy settings in your web browser. For more information, see the "Web Auth Proxy" section in the [Alliedware Plus Technical Tips and Tricks](#).

**Example** To additionally intercept port number 3128, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server intercept-port 3128
```

**Related Commands** [show auth-web-server](#)

# auth-web-server ipaddress

**Overview** This command sets the IP address for the Web-Authentication server.

Use the **no** variant of this command to delete the IP address for the Web-Authentication server.

You cannot use the IPv4 address assigned to the device's interface as the Web-Authentication server address.

**Syntax** `auth-web-server ipaddress <ip-address>`  
`no auth-web-server ipaddress`

| Parameter                       | Description  |
|---------------------------------|--|
| <code>&lt;ip-address&gt;</code> | Web-Authentication server dotted decimal IP address in A.B.C.D format. |

**Default** The Web-Authentication server address on the system is not set by default.

**Mode** Global Configuration

**Examples** To set the IP address 10.0.0.1 to the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server ipaddress 10.0.0.1
```

To delete the IP address from the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server ipaddress
```

**Validation Commands** `show auth`  
`show auth-web-server`  
`show running-config`

# auth-web-server page language

**Overview** Use this command to set the presentation language of Web authentication pages. Titles and subtitles of Web authentication pages will be set accordingly. Note that presently only English or Japanese are offered.

Use the **no** variant of this command to set the presentation language of Web authentication pages to its default (English).

**Syntax** `auth-web-server page language {english|japanese}`  
`no auth-web-server page language`

| Parameter | Description   |
|-----------|---|
| english   | Web authentication pages are presented in English.  |
| japanese  | Web authentication pages are presented in Japanese. |

**Default** Web authentication pages are presented in English by default.

**Mode** Global Configuration

**Examples** To set Japanese as the presentation language of Web authentication pages, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server page language japanese
```

To set English as the presentation language of Web authentication pages, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server page language english
```

To unset the presentation language of Web authentication pages and use English as the default presentation language, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server page language
```

**Related Commands** [auth-web-server page title](#)  
[auth-web-server page sub-title](#)  
[show auth-web-server page](#)

# auth-web-server login-url

**Overview** This command sets the web-authentication login page URL.  
Use the **no** variant of this command to delete the set URL.

**Syntax** `auth-web-server login-url <URL>`  
`no auth-web-server login-url`

| Parameter | Description        |
|-----------|--------------------|
| <URL>     | Set login page URL |

**Default** The built-in login page is set by default.

**Mode** Global Configuration

**Examples** To set `http://example.com/login.html` as the login page, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server login-url
http://example.com/login.html
```

To unset the login page URL, use the commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server login-url
```

**Related Commands** [show running-config](#)

# auth-web-server mode (deleted)

**Overview** This command has been deleted in Software Version 5.4.4-2.3 and later, because it is no longer necessary to configure an intercept mode.

# auth-web-server page logo

**Overview** This command sets the type of logo that will be displayed on the web authentication page.

Use the **no** variant of this command to set the logo type to **auto**.

**Syntax** `auth-web-server page logo {auto|default|hidden}`  
`no auth-web-server page logo`

| Parameter | Description  |
|-----------|--|
| auto      | Display the custom logo if installed; otherwise display the default logo |
| default   | Display the default logo   |
| hidden    | Hide the logo  |

**Default** Logo type is **auto** by default.

**Mode** Global Configuration

**Examples** To display the default logo with ignoring installed custom logo, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server page logo default
```

To set back to the default logo type **auto**, use the commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server page logo
```

**Validation Commands** `show auth-web-server page`

# auth-web-server page sub-title

**Overview** This command sets the custom sub-title on the web authentication page.  
Use the **no** variant of this command to reset the sub-title to its default.

**Syntax** `auth-web-server page sub-title {hidden|text <sub-title>}`  
`no auth-web-server page sub-title`

| Parameter   | Description                  |
|-------------|------------------------------|
| hidden      | Hide the sub-title           |
| <sub-title> | Text string of the sub-title |

**Default** "Allied-Telesis" is displayed by default.

**Mode** Global Configuration

**Examples** To set the custom sub-title, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server page sub-title text Web
Authentication
```

To hide the sub-title, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server page sub-title hidden
```

To change back to the default title, use the commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server page sub-title
```

**Validation  
Commands** [show auth-web-server page](#)



# auth-web-server page success-message

**Overview** This command sets the success message on the web-authentication page.  
Use the **no** variant of this command to remove the success message.

**Syntax** `auth-web-server page success-message text <success-message>`  
`no auth-web-server page success-message`

| Parameter                            | Description                        |
|--------------------------------------|------------------------------------|
| <code>&lt;success-message&gt;</code> | Text string of the success message |

**Default** No success message is set by default.

**Mode** Global Configuration

**Examples** To set the success message on the web-authentication page, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server page success-message text Your
success message
```

To unset the success message on the web-authentication page, use the commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server page success-message
```

**Validation Commands** [show auth-web-server page](#)

# auth-web-server page title

**Overview** This command sets the custom title on the web authentication page.  
Use the **no** variant of this command to remove the custom title.

**Syntax** `auth-web-server page title {hidden|text <title>}`  
`no auth-web-server page title`

| Parameter | Description              |
|-----------|--------------------------|
| hidden    | Hide the title           |
| <title>   | Text string of the title |

**Default** "Web Access Authentication Gateway" is displayed by default.

**Mode** Global Configuration

**Examples** To set the custom title on the web authentication page, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server page title text Login
```

To hide the title on the web authentication page, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server page title hidden
```

To unset the custom title on the web authentication page, use the commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server page title
```

**Validation  
Commands** [show auth-web-server page](#)

# auth-web-server page welcome-message

**Overview** This command sets the welcome message on the web-authentication page.  
Use the **no** variant of this command to remove the welcome message.

**Syntax** `auth-web-server page welcome-message text <welcome-message>`  
`no auth-web-server page welcome-message`

| Parameter                            | Description                        |
|--------------------------------------|------------------------------------|
| <code>&lt;welcome-message&gt;</code> | Text string of the welcome message |

**Default** No welcome message is set by default.

**Mode** Global Configuration

**Examples** To set the welcome message on the web-authentication page, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server page welcome-message text Your
welcome message
```

To remove the welcome message on the web-authentication page, use the commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server page welcome-message
```

**Validation Commands** [show auth-web-server page](#)

# auth-web-server ping-poll enable

**Overview** This command enables the ping polling to the supplicant (client device) that is authenticated by Web-Authentication.

The **no** variant of this command disables the ping polling to the supplicant that is authenticated by Web-Authentication.

**Syntax** `auth-web-server ping-poll enable`  
`no auth-web-server ping-poll enable`

**Default** The ping polling feature for Web-Authentication is disabled by default.

**Mode** Global Configuration

**Examples** To enable the ping polling feature for Web-Authentication, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server ping-poll enable
```

To disable the ping polling feature for Web-Authentication, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server ping-poll enable
```

**Validation  
Commands** `show auth`  
`show auth-web-server`  
`show running-config`

# auth-web-server ping-poll failcount

**Overview** This command sets a fail count for the ping polling feature when used with Web-Authentication. The **failcount** parameter specifies the number of unanswered pings. A supplicant (client device) is logged off when the number of unanswered pings are greater than the failcount set with this command.

Use the **no** variant of this command to resets the fail count for the ping polling feature to the default (5 pings).

**Syntax** `auth-web-server ping-poll failcount <1-100>`  
`no auth-web-server ping-poll failcount`

| Parameter | Description |
|-----------|-------------|
| <1-100>   | Count.      |

**Default** The default failcount for ping polling is 5 pings.

**Mode** Global Configuration

**Examples** To set the failcount of ping polling to 10 pings, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server ping-poll failcount 10
```

To set the failcount of ping polling to default, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server ping-poll failcount
```

**Validation Commands** `show auth`  
`show auth-web-server`  
`show running-config`

# auth-web-server ping-poll interval

**Overview** This command is used to change the ping poll interval. The interval specifies the time period between pings when the supplicant (client device) is reachable.

Use the **no** variant of this command to reset to the default period for ping polling (30 seconds).

**Syntax** `auth-web-server ping-poll interval <1-65535>`  
`no auth-web-server ping-poll interval`

| Parameter | Description |
|-----------|-------------|
| <1-65535> | Seconds.    |

**Default** The interval for ping polling is 30 seconds by default.

**Mode** Global Configuration

**Examples** To set the interval of ping polling to 60 seconds, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server ping-poll interval 60
```

To set the interval of ping polling to the default (30 seconds), use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server ping-poll interval
```

**Validation  
Commands** `show auth`  
`show auth-web-server`  
`show running-config`

# auth-web-server ping-poll reauth-timer-refresh

**Overview** This command modifies the **reauth-timer-refresh** parameter for the Web-Authentication feature. The **reauth-timer-refresh** parameter specifies whether a re-authentication timer is reset and when the response from a supplicant (a client device) is received.

Use the **no** variant of this command to reset the **reauth-timer-refresh** parameter to the default setting (disabled).

**Syntax** `auth-web-server ping-poll reauth-timer-refresh`  
`no auth-web-server ping-poll reauth-timer-refresh`

**Default** The `reauth-timer-refresh` parameter is disabled by default.

**Mode** Global Configuration

**Examples** To enable the `reauth-timer-refresh` timer, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server ping-poll reauth-timer-refresh
```

To disable the `reauth-timer-refresh` timer, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server ping-poll
reauth-timer-refresh
```

**Validation  
Commands** `show auth`  
`show auth-web-server`  
`show running-config`

# auth-web-server ping-poll timeout

**Overview** This command modifies the ping poll **timeout** parameter for the Web-Authentication feature. The **timeout** parameter specifies the time in seconds to wait for a response to a ping packet.

Use the **no** variant of this command to reset the timeout of ping polling to the default (1 second).

**Syntax** `auth-web-server ping-poll timeout <1-30>`  
`no auth-web-server ping-poll timeout`

| Parameter | Description |
|-----------|-------------|
| <1-30>    | Seconds.    |

**Default** The default timeout for ping polling is 1 second.

**Mode** Global Configuration

**Examples** To set the timeout of ping polling to 2 seconds, use the command:

```
awplus# configure terminal
awplus(config)# auth-web-server ping-poll timeout 2
```

To set the timeout of ping polling to the default (1 second), use the command:

```
awplus# configure terminal
awplus(config)# no auth-web-server ping-poll timeout
```

**Validation  
Commands** `show auth`  
`show auth-web-server`  
`show running-config`



# auth-web-server port

**Overview** This command sets the HTTP port number for the Web-Authentication server.  
Use the **no** variant of this command to reset the HTTP port number to the default (80).

**Syntax** `auth-web-server port <port-number>`  
`no auth-web-server port`

| Parameter                        | Description   |
|----------------------------------|---|
| <code>&lt;port-number&gt;</code> | Set the local Web-Authentication server port within the TCP port number range 1 to 65535. |

**Default** The Web-Authentication server HTTP port number is set to 80 by default.

**Mode** Global Configuration

**Examples** To set the HTTP port number 8080 for the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server port 8080
```

To reset to the default HTTP port number 80 for the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server port
```

**Validation Commands** `show auth`  
`show auth-web-server`  
`show running-config`

# auth-web-server redirect-delay-time

**Overview** Use this command to set the delay time in seconds before redirecting the supplicant to a specified URL when the supplicant is authorized.

Use the variant **no** to reset the delay time set previously.

**Syntax** `auth-web-server redirect-delay-time <5-60>`  
`no auth-web-server redirect-delay-time`

| Parameter                        | Description  |
|----------------------------------|--|
| <code>redirect-delay-time</code> | Set the delay time before jumping to a specified URL after the supplicant is authorized. |
| <code>&lt;5-60&gt;</code>        | The time in seconds.   |

**Default** The default redirect delay time is 5 seconds.

**Mode** Global Configuration

**Examples** To set the delay time to 60 seconds for the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server redirect-delay-time 60
```

To reset the delay time, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server redirect-delay-time
```

**Related Commands**

- [auth-web-server blocking-mode](#)
- [auth-web-server redirect-url](#)
- [show auth-web-server](#)
- [show running-config](#)

# auth-web-server redirect-url

**Overview** This command sets a URL for supplicant (client device) authentication. When a supplicant is authorized it will be automatically redirected to the specified URL. Note that if the http redirect feature is used then this command is ignored.

Use the **no** variant of this command to delete the URL string set previously.

**Syntax** `auth-web-server redirect-url <url>`  
`no auth-web-server redirect-url`

| Parameter                | Description                           |
|--------------------------|---------------------------------------|
| <code>&lt;url&gt;</code> | URL (hostname or dotted IP notation). |

**Default** The redirect URL for the Web-Authentication server feature is not set by default (null).

**Mode** Global Configuration

**Examples** To enable and set redirect a URL string `www.alliedtelesis.com` for the Web-Authentication server, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server redirect-url
http://www.alliedtelesis.com
```

To delete a redirect URL string, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server redirect-url
```

**Validation Commands** `show auth`  
`show auth-web-server`  
`show running-config`

**Related Commands** `auth-web-server http-redirect` (deleted)  
`auth-web-server redirect-delay-time`

# auth-web-server session-keep

**Overview** This command enables the session-keep feature to jump to the original URL after being authorized by Web-Authentication.

Use the **no** variant of this command to disable the session keep feature.

**Syntax** `auth-web-server session-keep`  
`no auth-web-server session-keep`

**Default** The session-keep feature is disabled by default.

**Mode** Global Configuration

**Usage** This function doesn't ensure to keep session information in all cases. Authenticated supplicant may be redirected to unexpected page when session-keep is enabled. This issue occurred by supplicant sending HTTP packets automatically after authentication page is displayed and the URL is written.

**Examples** To enable the session-keep feature, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server session-keep
```

To disable the session-keep feature, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server session-keep
```

**Validation Commands** `show auth`  
`show auth-web-server`  
`show running-config`

# auth-web-server ssl

**Overview** This command enables HTTPS functionality for the Web-Authentication server feature.

Use the **no** variant of this command to disable HTTPS functionality for the Web-Authentication server.

**Syntax** `auth-web-server ssl`  
`no auth-web-server ssl`

**Default** HTTPS functionality for the Web-Authentication server feature is disabled by default.

**Mode** Global Configuration

**Examples** To enable HTTPS functionality for the Web-Authentication server feature, use the following commands:

```
awplus# configure terminal
awplus(config)# auth-web-server ssl
```

To disable HTTPS functionality for the Web-Authentication server feature, use the following commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server ssl
```

**Validation  
Commands** `show auth`  
`show auth-web-server`  
`show running-config`

# auth-web-server sslport (deleted)

**Overview** This command has been deleted in Software Version 5.4.4-2.3 and later, because it is no longer necessary to set the port number. The default port number 443 is used.

# auth-web-server ssl intercept-port

**Overview** Use this command to register HTTPS intercept port numbers when the HTTPS server uses custom port number (not TCP port number 443).

Note that you need to use the **auth-web-server intercept-port** command to register HTTP intercept port numbers.

Use the **no** variant of this command to delete registered port number.

**Syntax** `auth-web-server ssl intercept-port <1-65535>`  
`no auth-web-server ssl intercept-port <1-65535>`

| Parameter | Description                                       |
|-----------|---|
| <1-65535> | TCP port number in the range from 1 through 65535 |

**Default** 443/TCP is registered by default.

**Mode** Global Configuration

**Examples** To register HTTPS port number 3128, use the commands:

```
awplus# configure terminal
awplus(config)# auth-web-server ssl intercept-port 3128
```

To delete HTTPS port number 3128, use the commands:

```
awplus# configure terminal
awplus(config)# no auth-web-server ssl intercept-port 3128
```

**Validation Commands** [show auth-web-server](#)

**Related Commands** [auth-web-server intercept-port](#)

# copy proxy-autoconfig-file

**Overview** Use this command to download the proxy auto configuration (PAC) file to your switch. The Web-Authentication supplicant can get the downloaded file from the system web server.

**Syntax** `copy <filename> proxy-autoconfig-file`

| Parameter  | Description              |
|------------|--------------------------|
| <filename> | The URL of the PAC file. |

**Mode** Privileged Exec

**Example** To download the PAC file to this device, use the command:

```
awplus# copy tftp://server/proxy.pac proxy-autoconfig-file
```

**Related Commands** [show proxy-autoconfig-file](#)  
[erase proxy-autoconfig-file](#)



# copy web-auth-https-file

**Overview** Use this command to download the SSL server certificate for web-based authentication. The file must be in PEM (Privacy Enhanced Mail) format, and contain the private key and the server certificate.

**Syntax** `copy <filename> web-auth-https-file`

| Parameter  | Description                             |
|------------|---|
| <filename> | The URL of the server certificate file. |

**Mode** Privileged Exec

**Example** To download the server certificate file `verisign_cert.pem` from the TFTP server directory `server`, use the command:

```
awplus# copy tftp://server/verisign_cert.pem  
web-auth-https-file
```

**Related  
Commands** [auth-web-server ssl](#)  
[erase web-auth-https-file](#)  
[show auth-web-server](#)

# description (Authentication Profile)

**Overview** Use this command to add a description to an authentication profile in Authentication Profile mode.

Use the **no** variant of this command to remove the current description.

**Syntax** `description <description>`

| Parameter                        | Description  |
|----------------------------------|--|
| <code>&lt;description&gt;</code> | Text describing the selected authentication profile. |

**Default** No description configured by default.

**Mode** Authentication Profile

**Example** To add a description to the authentication profile 'student', use the following commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# description student room setting
```

To remove a description from the authentication profile 'student', use the following commands:

```
awplus# configure terminal
awplus(config)# auth profile student
awplus(config-auth-profile)# no description
```

**Related Commands** [auth profile \(Global Configuration\)](#)

# erase proxy-autoconfig-file

**Overview** Use this command to remove the proxy auto configuration file.

**Syntax** `erase proxy-autoconfig-file`

**Mode** Privileged Exec

**Example** To remove the proxy auto configuration file, use the command:

```
awplus# erase proxy-autoconfig-file
```

**Related  
Commands** [show proxy-autoconfig-file](#)  
[copy proxy-autoconfig-file](#)

# erase web-auth-https-file

**Overview** Use this command to remove the SSL server certificate for web-based authentication.

**Syntax** `erase web-auth-https-file`

**Mode** Privileged Exec

**Example** To remove the SSL server certificate file for web-based authentication use the command:

```
awplus# erase web-auth-https-file
```

**Related  
Commands**

- [auth-web-server ssl](#)
- [copy web-auth-https-file](#)
- [show auth-web-server](#)

# platform l3-vlan-hashing-algorithm

**Overview** This command enables you to change the L3 VLAN hash-key-generating algorithm.

The **no** variant of this command returns the hash-key algorithm to the default of `crc32l`.

**Syntax** `platform l3-vlan-hashing-algorithm`  
`{crc16l|crc16u|crc32l|crc32u}`  
`no platform l3-vlan-hashing-algorithm`

| Parameter           | Description   |
|---------------------|---|
| <code>crc16l</code> | The algorithm that will apply to the lower bits of CRC-16 |
| <code>crc16u</code> | The algorithm that will apply to the upper bits of CRC-16 |
| <code>crc32l</code> | The algorithm that will apply to the lower bits of CRC-32 |
| <code>crc32u</code> | The algorithm that will apply to the upper bits of CRC-32 |

**Default** The hash-key algorithm is `crc32l` by default.

**Mode** Global configuration

**Usage** Occasionally, when using the Multiple Dynamic VLAN feature, a supplicant cannot be authenticated because a collision occurs within the VLAN L3 table. This can happen when more than four different IP addresses produce the same hash-key.

A work-around when this situation occurs, can sometimes be applied by changing the hashing algorithm from its default of `crc32l`. Several different algorithms may need to be tried to rectify the problem.

You must restart the switch for this command to take effect.

Note that this command is intended for technical support staff, or advanced end users.

**Example** To change the hash-key generating algorithm applying to the lower bits of CRC-16, use the command:

```
awplus# configure terminal
awplus(config)# platform l3-vlan-hashing-algorithm crc16l
```

**Related Commands** [platform mac-vlan-hashing-algorithm](#)  
[show platform](#)

# platform mac-vlan-hashing-algorithm

**Overview** This command enables you to change the MAC VLAN hash-key-generating algorithm.

**Syntax** `platform mac-vlan-hashing-algorithm`  
`{crc16l|crc16u|crc32l|crc32u}`  
`no platform mac-vlan-hashing-algorithm`

| Parameter           | Description   |
|---------------------|---|
| <code>crc16l</code> | The algorithm that will apply to the lower bits of CRC-16 |
| <code>crc16u</code> | The algorithm that will apply to the upper bits of CRC-16 |
| <code>crc32l</code> | The algorithm that will apply to the lower bits of CRC-32 |
| <code>crc32u</code> | The algorithm that will apply to the upper bits of CRC-32 |

**Default** The hash-key algorithm is `crc32l` by default.

**Mode** Global configuration

**Usage** Occasionally, when using the Multiple Dynamic VLAN feature, a supplicant cannot be authenticated because a collision occurs within the VLAN MAC table. This can happen when more than four different MAC addresses produce the same hash-key.

A work-around when this situation occurs, can sometimes be applied by changing the hashing algorithm from its default of `crc32l`. Several different algorithms may need to be tried to rectify the problem.

You must restart the switch for this command to take effect.

Note that this command is intended for technical support staff, or advanced end users.

**Example** To change the hash-key generating algorithm applying to the lower bits of CRC-16, use the command:

```
awplus# configure terminal
awplus(config)# platform mac-vlan-hashing-algorithm crc16l
```

**Related Commands** [platform l3-vlan-hashing-algorithm](#)  
[show platform](#)

# show auth

**Overview** This command shows the configuration state of authentication.

**Syntax** show auth [all]

| Parameter | Description   |
|-----------|---|
| all       | Display all authentication information for each authenticated interface. This can be a static channel (or static aggregator), or a dynamic (or LACP) channel group, or a switch port. |

**Mode** Privileged Exec

**Example** To display all authentication information, enter the command:

```
awplus# show auth all
```

**Output** Figure 30-1: Example output from the **show auth** command

```
awplus# show auth all
802.1X Port-Based Authentication Enabled
MAC-based Port Authentication Disabled
WEB-based Port Authentication Enabled
  RADIUS server address (auth): 150.87.17.192:1812
  Last radius message id: 4
Authentication Info for interface port1.0.1 portEnabled: true - portControl: Auto
portStatus: Authorized
reAuthenticate: disabled
reAuthPeriod: 3600
PAE: quietPeriod: 60 - maxReauthReq: 2 - txPeriod: 30
BE: suppTimeout: 30 - serverTimeout: 30
CD: adminControlledDirections: in
KT: keyTxEnabled: false
critical: disabled
guestVlan: disabled
authFailVlan: disabled
dynamicVlanCreation: disabled
hostMode: single-host
dot1x: enabled
  protocolVersion: 1
authMac: disabled
authWeb: enabled
  method: PAP
  maxAuthFail: 3
packetForwarding:
  10.0.0.1 80/tcp
  dns
  dhcp
```

```
twoStepAuthentication:
  configured: enabled
  actual: enabled
supplicantMac: none
Supplicant name: oha
Supplicant address: 000d.6013.5398
  authenticationMethod: WEB-based Authentication
Two-Step Authentication:
  firstAuthentication: Pass - Method: dot1x
  secondAuthentication: Pass - Method: web
portStatus: Authorized - currentId: 3
abort:F fail:F start:F timeout:F success:T
PAE: state: Authenticated - portMode: Auto
PAE: reAuthCount: 0 - rxRespId: 0
PAE: quietPeriod: 60 - maxReauthReq: 2
BE: state: Idle - reqCount: 0 - idFromServer: 2
CD: adminControlledDirections: in - operControlledDirections: in
CD: bridgeDetected: false
KR: rxKey: false
KT: keyAvailable: false - keyTxEnabled: false
```

**Related** [show dot1x](#)  
**Commands**



# show auth diagnostics

**Overview** This command shows authentication diagnostics, optionally for the specified interface, which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

If no interface is specified then authentication diagnostics are shown for all interfaces.

**Syntax** `show auth diagnostics [interface <interface-list>]`

| Parameter                           | Description   |
|-------------------------------------|---|
| <code>interface</code>              | Specify ports to show.  |
| <code>&lt;interface-list&gt;</code> | <p>The interfaces or ports to configure. An interface-list can be:</p> <ul style="list-style-type: none"><li>• an interface (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.4</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1,port1.0.4-1.0.6</code>. Do not mix interface types in a list</li></ul> <p>The specified interfaces must exist.</p> |

**Mode** Privileged Exec

**Example** To display authentication diagnostics for `port1.0.6`, enter the command:

```
awplus# show auth diagnostics interface port1.0.6
```

**Output** Figure 30-2: Example output from the **show auth diagnostics** command

```
Authentication Diagnostics
for interface port1.0.6
  Supplicant address: 00d0.59ab.7037
    authEnterConnecting: 2
    authEaplogoffWhileConnecting: 1
    authEnterAuthenticating: 2
    authSuccessWhileAuthenticating: 1
    authTimeoutWhileAuthenticating: 1
    authFailWhileAuthenticating: 0
    authEapstartWhileAuthenticating: 0
    authEaplogoggWhileAuthenticating: 0
    authReauthsWhileAuthenticated: 0
    authEapstartWhileAuthenticated: 0
    authEaplogoffWhileAuthenticated: 0
    BackendResponses: 2
    BackendAccessChallenges: 1
    BackendOtherrequestToSupplicant: 3
    BackendAuthSuccess: 1
```

**Related  
Commands** [show dot1x interface](#)

# show auth interface

**Overview** This command shows the status of port authentication on the specified interface, which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

Use the optional **diagnostics** parameter to show authentication diagnostics for the specified interface. Use the optional **sessionstatistics** parameter to show authentication session statistics for the specified interface. Use the optional **statistics** parameter to show authentication diagnostics for the specified interface. Use the optional **supplicant** (client device) parameter to show the supplicant state for the specified interface.

**Syntax** `show auth interface <interface-list>  
[diagnostics|sessionstatistics|statistics|supplicant [brief]]`

| Parameter         | Description   |
|-------------------|---|
| <interface-list>  | The interfaces or ports to configure. An interface-list can be: <ul style="list-style-type: none"><li>• an interface (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.4</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1,port1.0.4-1.0.6</code>. Do not mix interface types in a list</li></ul> The specified interfaces must exist. |
| diagnostics       | Diagnostics.  |
| sessionstatistics | Session statistics.   |
| statistics        | Statistics.   |
| supplicant        | Supplicant (client device).   |
| brief             | Brief summary of supplicant state.  |

**Mode** Privileged Exec

**Example** To display the Web based authentication status for `port1.0.6`, enter the command:

```
awplus# show auth interface port1.0.6
```

If web-based authentication is not configured, the output will be

```
% Port-Control not configured on port1.0.6
```

To display the Web based authentication status for port1.0.1, enter the command:

```
awplus# show auth interface port1.0.1
```

```
awplus# show auth interface port1.0.1
Authentication Info for interface port1.0.1
portEnabled: true - portControl: Auto
portStatus: Authorized
reAuthenticate: disabled
reAuthPeriod: 3600
PAE: quietPeriod: 60 - maxReauthReq: 2 - txPeriod: 30
BE: suppTimeout: 30 - serverTimeout: 30
CD: adminControlledDirections: in
KT: keyTxEnabled: false
critical: disabled
guestVlan: disabled
guestVlanForwarding:
    none
authFailVlan: disabled
dynamicVlanCreation: disabled
hostMode: single-host
dot1x: enabled
    protocolVersion: 1
authMac: disabled
authWeb: enabled
    method: PAP
    maxAuthFail: 3
    packetForwarding:
        10.0.0.1 80/tcp
        dns
        dhcp
twoStepAuthentication:
    configured: enabled
    actual: enabled
supplicantMac: none
```

To display Web-Authentication diagnostics for port1.0.6, enter the command:

```
awplus# show auth interface port1.0.6 diagnostics
```

Authentication Diagnostics for interface port1.0.6

```
Supplicant address: 00d0.59ab.7037
authEnterConnecting: 2
authEaplogoffWhileConnecting: 1
    authEnterAuthenticating: 2
    authSuccessWhileAuthenticating: 1
    authTimeoutWhileAuthenticating: 1
    authFailWhileAuthenticating: 0
    authEapstartWhileAuthenticating: 0
    authEaplogoggWhileAuthenticating: 0
    authReauthsWhileAuthenticated: 0
    authEapstartWhileAuthenticated: 0
    authEaplogoffWhileAuthenticated: 0
BackendResponses: 2
BackendAccessChallenges: 1
BackendOtherrequestToSupplicant: 3
BackendAuthSuccess: 1
```

To display Web-Authentication session statistics for port1.0.6, enter the command:

```
awplus# show auth interface port1.0.6 sessionstatistics
```

Authentication session statistics for interface port1.0.6

```
session user name: manager
session authentication method: Remote server
session time: 19440 secs
session terminat cause: Not terminated yet
```

To display Web-Authentication statistics for port1.0.6, enter the command:

```
awplus# show auth statistics interface port1.0.6
```

To display the Web-Authenticated supplicant on interface port1.0.6, enter the command:

```
awplus# show auth interface port1.0.6 supplicant
```

**Related  
Commands**

[show auth diagnostics](#)

[show dot1x sessionstatistics](#)

[show dot1x statistics interface](#)

[show dot1x supplicant interface](#)

# show auth sessionstatistics

**Overview** This command shows authentication session statistics for the specified interface, which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

**Syntax** `show auth sessionstatistics [interface <interface-list>]`

| Parameter        | Description   |
|------------------|---|
| interface        | Specify ports to show.  |
| <interface-list> | <p>The interfaces or ports to configure. An interface-list can be:</p> <ul style="list-style-type: none"><li>• an interface (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.4</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1,port1.0.4-1.0.6</code>. Do not mix interface types in a list</li></ul> <p>The specified interfaces must exist.</p> |

**Mode** Privileged Exec

**Example** To display authentication statistics for `port1.0.6`, enter the command:

```
awplus# show auth sessionstatistics interface port1.0.6
```

**Output** Figure 30-3: Example output from the **show auth sessionstatistics** command

```
Authentication session
statistics for interface port1.0.6
  session user name: manager
    session authentication method: Remote server
    session time: 19440 secs
    session terminat cause: Not terminated yet
```

# show auth statistics interface

**Overview** This command shows the authentication statistics for the specified interface, which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port.

**Syntax** `show auth statistics interface <interface-list>`

| Parameter                           | Description   |
|-------------------------------------|---|
| <code>&lt;interface-list&gt;</code> | <p>The interfaces or ports to configure. An interface-list can be:</p> <ul style="list-style-type: none"><li>• an interface (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.4</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1,port1.0.4-1.0.6</code>. Do not mix interface types in a list</li></ul> <p>The specified interfaces must exist.</p> |

**Mode** Privileged Exec

**Example** To display Web-Authentication statistics for `port1.0.4`, enter the command:

```
awplus# show auth statistics interface port1.0.4
```

**Related Commands** [show dot1x interface](#)

# show auth supplicant

**Overview** This command shows the supplicant (client device) state when authentication is configured for the switch. Use the optional **brief** parameter to show a summary of the supplicant state.

**Syntax** show auth supplicant [<macadd>] [brief]

| Parameter | Description   |
|-----------|---|
| <macadd>  | Mac (hardware) address of the supplicant. Entry format is HHHH.HHHH.HHHH (hexadecimal). |
| brief     | Brief summary of the supplicant state.  |

**Mode** Privileged Exec

**Examples** To display a summary of authenticated supplicant information on the device, enter the command:

```
awplus# show auth supplicant brief
```

To display authenticated supplicant information on the device, enter the command:

```
awplus# show auth supplicant
```

To display authenticated supplicant information for device with MAC address 0000.5E00.5301, enter the command:

```
awplus# show auth supplicant 0000.5E00.5301
```

**Output** Figure 30-4: Example output from **show auth supplicant brief**

|   |      |      |                |               |               |          |
|---|------|------|----------------|---------------|---------------|----------|
| awplus#show auth supplicant brief                             |      |      |                |               |               |          |
| Interface port2.0.3   |      |      |                |               |               |          |
| authenticationMethod: dot1x/mac/web                           |      |      |                |               |               |          |
| Two-Step Authentication                                       |      |      |                |               |               |          |
| firstMethod: mac  |      |      |                |               |               |          |
| secondMethod: dot1x/web                                       |      |      |                |               |               |          |
| totalSupplicantNum: 1   |      |      |                |               |               |          |
| authorizedSupplicantNum: 1                                    |      |      |                |               |               |          |
| macBasedAuthenticationSupplicantNum: 0                        |      |      |                |               |               |          |
| dot1xAuthenticationSupplicantNum: 0                           |      |      |                |               |               |          |
| webBasedAuthenticationSupplicantNum: 1                        |      |      |                |               |               |          |
| otherAuthenticationSupplicantNum: 0RADIUS Group Configuration |      |      |                |               |               |          |
| Interface   | VID  | Mode | MAC Address    | Status        | IP Address    | Username |
| =====   | ---- | ---- | =====          | =====         | =====         | =====    |
| port2.0.3   | 1    | W    | 001c.233e.e15a | Authenticated | 192.168.1.181 | test     |



Figure 30-5: Example output from **show auth supplicant**

```
awplus#show auth supplicant
Interface port2.0.3
  authenticationMethod: dot1x/mac/web
  Two-Step Authentication
    firstMethod: mac
    secondMethod: dot1x/web
  totalSupplicantNum: 1
  authorizedSupplicantNum: 1
    macBasedAuthenticationSupplicantNum: 0
    dot1xAuthenticationSupplicantNum: 0
    webBasedAuthenticationSupplicantNum: 1
    otherAuthenticationSupplicantNum: 0

Supplicant name: test
Supplicant address: 0000.5E00.5301
  authenticationMethod: WEB-based Authentication
  Two-Step Authentication:
    firstAuthentication: Pass - Method: mac
    secondAuthentication: Pass - Method: web
  portStatus: Authorized - currentId: 1
  abort:F fail:F start:F timeout:F success:T
  PAE: state: Authenticated - portMode: Auto
  PAE: reAuthCount: 0 - rxRespId: 0
  PAE: quietPeriod: 60 - maxReauthReq: 2
  BE: state: Idle - reqCount: 0 - idFromServer: 0
  CD: adminControlledDirections: in - operControlledDirections: in
  CD: bridgeDetected: false
  KR: rxKey: false
  KT: keyAvailable: false - keyTxEnabled: false
  RADIUS server group (auth): radius
  RADIUS server (auth): 192.168.1.40
```

Figure 30-6: Example output from **show auth supplicant 0000.5E00.5301**

```
awplus#show auth supplicant 0000.5E00.5301
Interface port2.0.3
  Supplicant name: test
  Supplicant address: 0000.5E00.5301
    authenticationMethod: WEB-based Authentication
    Two-Step Authentication:
      firstAuthentication: Pass - Method: mac
      secondAuthentication: Pass - Method: web
    portStatus: Authorized - currentId: 1
    abort:F fail:F start:F timeout:F success:T
    PAE: state: Authenticated - portMode: Auto
    PAE: reAuthCount: 0 - rxRespId: 0
    PAE: quietPeriod: 60 - maxReauthReq: 2
    BE: state: Idle - reqCount: 0 - idFromServer: 0
    CD: adminControlledDirections: in - operControlledDirections: in
    CD: bridgeDetected: false
    KR: rxKey: false
    KT: keyAvailable: false - keyTxEnabled: false
    RADIUS server group (auth): radius
    RADIUS server (auth): 192.168.1.40
```

**Related  
Commands**

aaa accounting auth-mac  
aaa accounting auth-web  
aaa accounting dot1x  
aaa authentication auth-mac  
aaa authentication auth-web  
aaa authentication dot1x

# show auth supplicant interface

**Overview** This command shows the supplicant (client device) state for the authentication mode set for the interface, which may be a static channel (or static aggregator) or a dynamic (or LACP) channel group or a switch port. Use the optional **brief** parameter to show a summary of the supplicant state.

**Syntax** `show auth-web supplicant interface <interface-list> [brief]`

| Parameter                           | Description  |
|-------------------------------------|--|
| <code>&lt;interface-list&gt;</code> | <p>The interfaces or ports to configure. An interface-list can be:</p> <ul style="list-style-type: none"><li>• an interface (e.g. <code>vlan2</code>), a switch port (e.g. <code>port1.0.6</code>), a static channel group (e.g. <code>sa2</code>) or a dynamic (LACP) channel group (e.g. <code>po2</code>)</li><li>• a continuous range of interfaces, ports, static channel groups or dynamic (LACP) channel groups separated by a hyphen; e.g. <code>vlan2-8</code>, or <code>port1.0.1-1.0.4</code>, or <code>sa1-2</code>, or <code>po1-2</code></li><li>• a comma-separated list of the above; e.g. <code>port1.0.1, port1.0.4-1.0.6</code>. Do not mix interface types in a list</li></ul> <p>The specified interfaces must exist.</p> |
| <code>brief</code>                  | Brief summary of the supplicant state.   |

**Mode** Privileged Exec

**Examples** To display the authenticated supplicant on the interface `port1.0.3`, enter the command:

```
awplus# show auth supplicant interface port1.0.3
```

To display brief summary output for the authenticated supplicant, enter the command:

```
awplus# show auth supplicant brief
```

# show auth two-step supplicant brief

**Overview** This command displays the supplicant state of the two-step authentication feature on the interface.

**Syntax** `show auth two-step supplicant [interface <ifrange>] brief`

| Parameter | Description  |
|-----------|--|
| interface | The interface selected for display.  |
| <ifrange> | The interface types which can be specified as <ifrange> <ul style="list-style-type: none"><li>• Switch port (e.g. port1.0.6)</li><li>• Static channel group (e.g. sa3)</li><li>• Dynamic (LACP) channel group (e.g. po4)</li></ul> |

**Mode** Privileged Exec

**Usage** Do not mix interface types in a list. The specified interfaces must exist.

**Example** To display the supplicant state of the two-step authentication feature, enter the command:

```
awplus# show two-step supplicant interface port1.0.6 brief
```

**Output** Figure 30-7: Example output from **show auth two-step supplicant brief**

|  |     |      |                 |               |           |            |
|--|-----|------|-----------------|---------------|-----------|------------|
| interface port1.0.6                    |     |      |                 |               |           |            |
| authenticationMethod: dot1x/mac        |     |      |                 |               |           |            |
| Two-Step Authentication:               |     |      |                 |               |           |            |
| firstMethod:mac                        |     |      |                 |               |           |            |
| secondMethod:dot1x                     |     |      |                 |               |           |            |
| totalSupplicantNum: 1                  |     |      |                 |               |           |            |
| authorizedSupplicantNum: 1             |     |      |                 |               |           |            |
| macBasedAuthenticationSupplicantNum: 0 |     |      |                 |               |           |            |
| dot1xAuthenticationSupplicantNum: 1    |     |      |                 |               |           |            |
| webBasedAuthenticationSupplicantNum: 0 |     |      |                 |               |           |            |
| otherAuthenticationSupplicantNum: 0    |     |      |                 |               |           |            |
| Interface                              | VID | Mode | MAC Address     | Status        | FirstStep | SecondStep |
| =====                                  | === | ==== | =====           | =====         | =====     | =====      |
| port1.0.6                              | 1   | D    | 000b..db67.00f7 | Authenticated | Pass      | Pass       |

**Related Commands** [auth two-step enable](#)

# show auth-web-server

**Overview** This command shows the Web-Authentication server configuration and status on the switch.

**Syntax** `show auth-web-server`

**Mode** Privileged Exec

**Example** To display Web-Authentication server configuration and status, enter the command:

```
awplus# show auth-web-server
```

**Output** Figure 30-8: Example output from the **show auth-web-server** command

```
Web authentication server
  Server status: enabled
  Server mode: none
  Server address: 192.168.1.1/24
    DHCP server enabled
    DHCP lease time: 20
    DHCP WPAD Option URL: http://192.168.1.1/proxy.pac
  HTTP Port No: 80
  Security: disabled
  Certification: default
  SSL Port No: 443
  Redirect URL: --
  Redirect Delay Time: 5
  HTTP Redirect: enabled
  Session keep: disabled
  PingPolling: disabled
  PingInterval: 30
  Timeout: 1
  FailCount: 5
  ReauthTimerReFresh: disabled
```

**Related Commands**

- [auth-web-server gateway \(deleted\)](#)
- [auth-web-server http-redirect \(deleted\)](#)
- [auth-web-server ipaddress](#)
- [auth-web-server port](#)
- [auth-web-server redirect-delay-time](#)
- [auth-web-server redirect-url](#)
- [auth-web-server session-keep](#)
- [auth-web-server ssl](#)
- [auth-web-server sslport \(deleted\)](#)

# show auth-web-server page

**Overview** This command displays the web-authentication page configuration and status.

**Syntax** show auth-web-server page

**Mode** Privileged Exec

**Examples** To show the web-authentication page information, use the command:

```
awplus# show auth-web-server page
```

Figure 30-9: Example output from the **show auth-web-server page** command

```
awplus#show auth-web-server page
Web authentication page
  Logo: auto
  Title: default
  Sub-Title: Web Authentication
  Welcome message: Your welcome message
  Success message: Your success message
```

**Related Commands**

- [auth-web forward](#)
- [auth-web-server page logo](#)
- [auth-web-server page sub-title](#)
- [auth-web-server page success-message](#)
- [auth-web-server page title](#)
- [auth-web-server page welcome-message](#)

# show proxy-autoconfig-file

**Overview** This command displays the contents of the proxy auto configuration (PAC) file.

**Syntax** show proxy-autoconfig-file

**Mode** Privileged Exec

**Example** To display the contents of the proxy auto configuration (PAC) file, enter the command:

```
awplus# show auth proxy-autoconfig-file
```

**Output** Figure 30-10: Example output from the **show proxy-autoconfig-file**

```
function FindProxyForURL(url,host)
{
    if (isPlainHostName(host) ||
        isInNet(host, "192.168.1.0", "255.255.255.0")) {
        return "DIRECT";
    }
    else {
        return "PROXY 192.168.110.1:8080";
    }
}
```

**Related Commands** [copy proxy-autoconfig-file](#)  
[erase proxy-autoconfig-file](#)

# 31

# AAA Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for AAA commands for Authentication, Authorization and Accounting. For more information, see the [AAA Feature Overview and Configuration Guide](#).

- Command List**
- “aaa accounting auth-mac” on page 1246
  - “aaa accounting auth-web” on page 1248
  - “aaa accounting commands” on page 1250
  - “aaa accounting dot1x” on page 1252
  - “aaa accounting login” on page 1254
  - “aaa accounting update” on page 1257
  - “aaa authentication auth-mac” on page 1259
  - “aaa authentication auth-web” on page 1261
  - “aaa authentication dot1x” on page 1263
  - “aaa authentication enable default group tacacs+” on page 1265
  - “aaa authentication enable default local” on page 1267
  - “aaa authentication login” on page 1268
  - “aaa group server” on page 1270
  - “aaa local authentication attempts lockout-time” on page 1272
  - “aaa local authentication attempts max-fail” on page 1273
  - “aaa login fail-delay” on page 1274
  - “accounting login” on page 1275
  - “clear aaa local user lockout” on page 1276
  - “debug aaa” on page 1277



- ["login authentication"](#) on page 1278
- ["show aaa local user locked"](#) on page 1279
- ["show aaa server group"](#) on page 1280
- ["show debugging aaa"](#) on page 1281
- ["show radius server group"](#) on page 1282
- ["undebug aaa"](#) on page 1284

# aaa accounting auth-mac

**Overview** This command configures an accounting method list for MAC-based authentication. An accounting method list specifies what type of accounting messages are sent and which RADIUS servers the accounting messages are sent to. Use this command to configure either the default method list, which is automatically applied to interfaces with MAC-based authentication enabled, or a named method list, which can be applied to an interface with the [auth-mac accounting](#) command.

Use the **no** variant of this command to disable either the default or a named accounting method list for MAC-based authentication. Once all method lists are disabled, AAA accounting for MAC-based authentication is disabled globally.

**Syntax** `aaa accounting auth-mac {default|<list-name>} {start-stop|stop-only|none} group {<group-name>|radius}`  
`no aaa accounting auth-mac {default|<list-name>}`

| Parameter    | Description   |
|--------------|---|
| default      | Configure the default accounting method list  |
| <list-name>  | Configure a named accounting method list  |
| start-stop   | Sends a start accounting message at the beginning of the session and a stop accounting message at the end of the session. |
| stop-only    | Only sends a stop accounting message at the end of the session.   |
| none         | No accounting record sent.  |
| group        | Use a server group  |
| <group-name> | Server group name.  |
| radius       | Use all RADIUS servers.   |

**Default** RADIUS accounting for MAC-based Authentication is disabled by default

**Mode** Global Configuration

**Usage** This command can be used to configure either the default accounting method list or a named accounting method list:

- **default:** the default accounting method list which is automatically applied to all interfaces with MAC-based authentication enabled.
- **<list-name>:** a user named list which can be applied to an interface using the [auth-mac accounting](#) command.

There are two ways to define servers where RADIUS accounting messages are sent:

- **group radius:** use all RADIUS servers configured by [radius-server host](#) command

- **group** <group-name>: use the specified RADIUS server group configured with the [aaa group server](#) command

The accounting event to send to the RADIUS server is configured with the following options:

- **start-stop**: sends a **start** accounting message at the beginning of a session and a **stop** accounting message at the end of the session.
- **stop-only**: sends a **stop** accounting message at the end of a session.
- **none**: disables accounting.

**Examples** To enable the default RADIUS accounting for MAC-based authentication, and use all available RADIUS servers, use the commands:

```
awplus# configure terminal
awplus(config)# aaa accounting auth-mac default start-stop
group radius
```

To disable RADIUS accounting for MAC-based Authentication, use the commands:

```
awplus# configure terminal
awplus(config)# no aaa accounting auth-mac default
```

To enable a named RADIUS accounting method list 'vlan10\_acct' for MAC-based authentication, with the RADIUS server group 'rad\_group\_vlan10', use the commands:

```
awplus# configure terminal
awplus(config)# aaa accounting auth-mac vlan10_acct start-stop
group rad_group_vlan10
```

To disable a named RADIUS accounting method list 'vlan10\_acct' for MAC-based authentication, use the commands:

```
awplus# configure terminal
awplus(config)# no aaa accounting auth-mac vlan10_acct
```

**Related Commands**

- [aaa authentication auth-mac](#)
- [aaa group server](#)
- [auth-mac accounting](#)
- [auth-mac enable](#)
- [radius-server host](#)
- [show aaa server group](#)

# aaa accounting auth-web

**Overview** This command configures an accounting method list for Web-based authentication. An accounting method list specifies what type of accounting messages are sent and which RADIUS servers the accounting messages are sent to. Use this command to configure either the default method list, which is automatically applied to interfaces with Web-based authentication enabled, or a named method list, which can be applied to an interface with the [auth-web accounting](#) command.

Use the **no** variant of this command to disable either the default or a named accounting method list for Web-based authentication. Once all method lists are disabled, AAA accounting for Web-based authentication is disabled globally.

**Syntax** `aaa accounting auth-web {default|<list-name>}  
{start-stop|stop-only|none} group {<group-name>|radius}  
no aaa accounting auth-web {default|<list-name>}`

| Parameter    | Description   |
|--------------|---|
| default      | Configure the default accounting method list  |
| <list-name>  | Configure a named accounting method list  |
| start-stop   | Sends a start accounting message at the beginning of the session and a stop accounting message at the end of the session. |
| stop-only    | Only sends a stop accounting message at the end of the session.   |
| none         | No accounting record sent.  |
| group        | Use a server group  |
| <group-name> | Server group name.  |
| radius       | Use all RADIUS servers.   |

**Default** RADIUS accounting for Web-based authentication is disabled by default.

**Mode** Global Configuration

**Usage** This command can be used to configure either the default accounting method list or a named accounting method list:

- **default:** the default accounting method list which is automatically applied to all interfaces with Web-based authentication enabled.
- **<list-name>:** a user named list which can be applied to an interface using the [auth-web accounting](#) command.

There are two ways to define servers where RADIUS accounting messages are sent:

- **group radius:** use all RADIUS servers configured by [radius-server host](#) command

- **group** <group-name>: use the specified RADIUS server group configured with the [aaa group server](#) command

Configure the accounting event to be sent to the RADIUS server with the following options:

- **start-stop**: sends a start accounting message at the beginning of a session and a stop accounting message at the end of the session.
- **stop-only**: sends a stop accounting message at the end of a session.
- **none**: disables accounting.

**Examples** To enable the default RADIUS accounting method for Web-based authentication, and use all available RADIUS servers, use the commands:

```
awplus# configure terminal
awplus(config)# aaa accounting auth-web default start-stop
group radius
```

To disable the default RADIUS accounting method for Web-based authentication, use the commands:

```
awplus# configure terminal
awplus(config)# no aaa accounting auth-web default
```

To enable a named RADIUS accounting method list 'vlan10\_acct' for Web-based authentication, with the RADIUS server group 'rad\_group\_vlan10', use the commands:

```
awplus# configure terminal
awplus(config)# aaa accounting auth-web vlan10_acct start-stop
group rad_group_vlan10
```

To disable a named RADIUS accounting method list 'vlan10\_acct' for Web-based authentication, use the commands:

```
awplus# configure terminal
awplus(config)# no aaa accounting auth-web vlan10_acct
```

**Related Commands**

- [aaa authentication auth-web](#)
- [aaa group server](#)
- [auth-web accounting](#)
- [auth-web enable](#)
- [radius-server host](#)
- [show aaa server group](#)

# aaa accounting commands

**Overview** This command configures and enables TACACS+ accounting on commands entered at a specified privilege level. Once enabled for a privilege level, accounting messages for commands entered at that privilege level will be sent to a TACACS+ server.

In order to account for all commands entered on a device, configure command accounting for each privilege level separately.

The command accounting message includes, the command as entered, the date and time the command finished executing, and the user-name of the user who executed the command.

Use the **no** variant of this command to disable command accounting for a specified privilege level.

**Syntax** `aaa accounting commands <1-15> default stop-only group tacacs+`  
`no aaa accounting commands <1-15> default`

| Parameter | Description  |
|-----------|--|
| <1-15>    | The privilege level being configured, in the range 1 to 15.  |
| default   | Use the default method list, this means the command is applied globally to all user exec sessions.                 |
| stop-only | Send accounting message when the commands have stopped executing.  |
| group     | Specify the server group where accounting messages are sent. Only the tacacs+ group is available for this command. |
| tacacs+   | Use all TACACS+ servers configured by the <a href="#">tacacs-server host</a> command.                              |

**Default** TACACS+ command accounting is disabled by default.

**Mode** Global Configuration

**Usage** This command only supports a **default** method list, this means that it is applied to every console and vty line.

The **stop-only** parameter indicates that the command accounting messages are sent to the TACACS+ server when the commands have stopped executing.

The **group tacacs+** parameters signifies that the command accounting messages are sent to the TACACS+ servers configured by the [tacacs-server host](#) command.

Note that up to four TACACS+ servers can be configured for accounting. The servers are checked for reachability in the order they are configured with only the first reachable server being used. If no server is found, the accounting message is dropped.

Command accounting cannot coexist with triggers. An error message is displayed if you attempt to enable command accounting while a trigger is configured. Likewise, an error message is displayed if you attempt to configure a trigger while command accounting is configured.

**Examples** To configure command accounting for privilege levels 1, 7, and 15, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa accounting commands 1 default stop-only
group tacacs+
awplus(config)# aaa accounting commands 7 default stop-only
group tacacs+
awplus(config)# aaa accounting commands 15 default stop-only
group tacacs+
```

To disable command accounting for privilege levels 1, 7, and 15, use the following commands:

```
awplus# configure terminal
awplus(config)# no aaa accounting commands 1 default
awplus(config)# no aaa accounting commands 7 default
awplus(config)# no aaa accounting commands 15 default
```

**Related Commands**

- [aaa authentication login](#)
- [aaa accounting login](#)
- [accounting login](#)
- [tacacs-server host](#)

# aaa accounting dot1x

**Overview** This command configures an accounting method list for IEEE 802.1X-based authentication. An accounting method list specifies what type of accounting messages are sent and which RADIUS servers the accounting messages are sent to. Use this command to configure either the default method list, which is automatically applied to interfaces with IEEE 802.1X-based authentication enabled, or a named method list, which can be applied to an interface with the [dot1x accounting](#) command.

Use the **no** variant of this command to disable either the default or a named accounting method list for 802.1X-based authentication. Once all method lists are disabled, AAA accounting for 802.1x-based authentication is disabled globally.

**Syntax** `aaa accounting dot1x {default|<list-name>}  
{start-stop|stop-only|none} group {<group-name>|radius}  
no aaa accounting dot1x {default|<list-name>}`

| Parameter    | Description   |
|--------------|---|
| default      | Configure the default accounting method list  |
| <list-name>  | Configure a named accounting method list  |
| start-stop   | Sends a start accounting message at the beginning of the session and a stop accounting message at the end of the session. |
| stop-only    | Only sends a stop accounting message at the end of the session.   |
| none         | No accounting record sent.  |
| group        | Use a server group  |
| <group-name> | Server group name.  |
| radius       | Use all RADIUS servers.   |

**Default** RADIUS accounting for 802.1X-based authentication is disabled by default (there is no default server set by default).

**Mode** Global Configuration

**Usage** This command can be used to configure either the default accounting method list or a named accounting method list:

- **default:** the default accounting method list which is automatically applied to all interfaces with 802.1X-based authentication enabled.
- **<list-name>:** a user named list which can be applied to an interface using the [dot1x accounting](#) command.

There are two ways to define servers where RADIUS accounting messages will be sent:



- **group radius:** use all RADIUS servers configured by [radius-server host](#) command.
- **group <group-name>:** use the specified RADIUS server group configured with the [aaa group server](#) command.

The accounting event to send to the RADIUS server is configured by the following options:

- **start-stop:** sends a **start** accounting message at the beginning of a session and a **stop** accounting message at the end of the session.
- **stop-only:** sends a **stop** accounting message at the end of a session.
- **none:** disables accounting.

**Examples** To enable RADIUS accounting for 802.1X-based authentication, and use all available RADIUS Servers, use the commands:

```
awplus# configure terminal
awplus(config)# aaa accounting dot1x default start-stop group
radius
```

To disable RADIUS accounting for 802.1X-based authentication, use the commands:

```
awplus# configure terminal
awplus(config)# no aaa accounting dot1x default
```

To enable a named RADIUS accounting method list 'vlan10\_acct' for 802.1X-based authentication, with the RADIUS server group 'rad\_group\_vlan10', use the commands:

```
awplus# configure terminal
awplus(config)# aaa accounting dot1x vlan10_acct start-stop
group rad_group_vlan10
```

To disable a named RADIUS accounting method list 'vlan10\_acct' for 802.1X-based authentication, use the commands:

```
awplus# configure terminal
awplus(config)# no aaa accounting dot1x vlan10_acct
```

**Related  
Commands**

[aaa accounting update](#)  
[aaa authentication dot1x](#)  
[aaa group server](#)  
[dot1x accounting](#)  
[dot1x port-control](#)  
[radius-server host](#)  
[show aaa server group](#)

# aaa accounting login

**Overview** This command configures RADIUS and TACACS+ accounting for login shell sessions. The specified method list name can be used by the **accounting login** command in the Line Configuration mode. If the **default** parameter is specified, then this creates a default method list that is applied to every console and vty line, unless another accounting method list is applied on that line.

Note that unlimited RADIUS servers and up to four TACACS+ servers can be configured and consulted for accounting. The first server configured is regarded as the primary server and if the primary server fails then the backup servers are consulted in turn. A backup server is consulted if the primary server fails, i.e. is unreachable.

Use the **no** variant of this command to remove an accounting method list for login shell sessions configured by an **aaa accounting login** command. If the method list being deleted is already applied to a console or vty line, accounting on that line will be disabled. If the default method list name is removed by this command, it will disable accounting on every line that has the default accounting configuration.

**Syntax**

```
aaa accounting login  
{default|<list-name>} {start-stop|stop-only|none} {group  
{radius|tacacs+|<group-name>}}  
  
no aaa accounting login {default|<list-name>}
```

| Parameter    | Description   |
|--------------|---|
| default      | Default accounting method list.   |
| <list-name>  | Named accounting method list.   |
| start-stop   | Start and stop records to be sent.  |
| stop-only    | Stop records to be sent.  |
| none         | No accounting record to be sent.  |
| group        | Specify the servers or server group where accounting packets are sent.                                |
| radius       | Use all RADIUS servers configured by the <a href="#">radius-server host</a> command.                  |
| tacacs+      | Use all TACACS+ servers configured by the <a href="#">tacacs-server host</a> command.                 |
| <group-name> | Use the specified RADIUS server group, as configured by the <a href="#">aaa group server</a> command. |

**Default** Accounting for login shell sessions is disabled by default.

**Mode** Global Configuration

**Usage** This command enables you to define a named accounting method list. The items that you define in the accounting options are:

- the types of accounting packets that will be sent
- the set of servers to which the accounting packets will be sent

You can define a default method list with the name **default** and any number of other named method lists. The name of any method list that you define can then be used as the *<list-name>* parameter in the [accounting login](#) command.

If the method list name already exists, the command will replace the existing configuration with the new one.

There are two ways to define servers where RADIUS accounting messages are sent:

- **group radius** : use all RADIUS servers configured by [radius-server host](#) command
- **group <group-name>** : use the specified RADIUS server group configured with the [aaa group server](#) command

There is one way to define servers where TACACS+ accounting messages are sent:

- **group tacacs+** : use all TACACS+ servers configured by [tacacs-server host](#) command

The accounting event to send to the RADIUS or TACACS+ server is configured with the following options:

- **start-stop** : sends a **start** accounting message at the beginning of a session and a **stop** accounting message at the end of the session.
- **stop-only** : sends a **stop** accounting message at the end of a session.
- **none** : disables accounting.

**Examples** To configure RADIUS accounting for login shell sessions, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa accounting login default start-stop group
radius
```

To configure TACACS+ accounting for login shell sessions, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa accounting login default start-stop group
tacacs+
```

To reset the configuration of the default accounting list, use the following commands:

```
awplus# configure terminal
awplus(config)# no aaa accounting login default
```

**Related  
Commands**

- [aaa accounting commands](#)
- [aaa authentication login](#)
- [aaa accounting login](#)
- [aaa accounting update](#)
- [accounting login](#)
- [radius-server host](#)
- [tacacs-server host](#)

# aaa accounting update

**Overview** This command enables periodic accounting reporting to either the RADIUS or TACACS+ accounting server(s) wherever login accounting has been configured.

Note that unlimited RADIUS servers and up to four TACACS+ servers can be configured and consulted for accounting. The first server configured is regarded as the primary server and if the primary server fails then the backup servers are consulted in turn. A backup server is consulted if the primary server fails, i.e. is unreachable.

Use the **no** variant of this command to disable periodic accounting reporting to the accounting server(s).

**Syntax** `aaa accounting update [periodic <1-65535>]`  
`no aaa accounting update`

| Parameter                    | Description  |
|------------------------------|--|
| <code>periodic</code>        | Send accounting records periodically.  |
| <code>&lt;1-65535&gt;</code> | The interval to send accounting updates (in minutes). The default is 30 minutes. |

**Default** Periodic accounting update is disabled by default.

**Mode** Global Configuration

**Usage** Use this command to enable the device to send periodic AAA login accounting reports to the accounting server. When periodic accounting report is enabled, interim accounting records are sent according to the interval specified by the **periodic** parameter. The accounting updates are start messages.

If the **no** variant of this command is used to disable periodic accounting reporting, any interval specified by the **periodic** parameter is reset to the default of 30 minutes when accounting reporting is reenabled, unless this interval is specified.

**Examples** To configure the switch to send period accounting updates every 30 minutes, the default period, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa accounting update
```

To configure the switch to send period accounting updates every 10 minutes, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa accounting update periodic 10
```

To disable periodic accounting update wherever accounting has been configured, use the following commands:

```
awplus# configure terminal
```

```
awplus(config)# no aaa accounting update
```

**Related  
Commands**

[aaa accounting auth-mac](#)

[aaa accounting auth-web](#)

[aaa accounting dot1x](#)

[aaa accounting login](#)

# aaa authentication auth-mac

**Overview** This command enables MAC-based authentication globally and allows you to enable either the default authentication method list (in this case, a list of RADIUS servers), which is automatically applied to every interface running MAC-based authentication, or a user named authentication method list, which is applied to an interface with the [auth-mac authentication](#) command.

Use the **no** variant of this command to disable either the default or a named method list for MAC-based authentication. Once all method lists are disabled MAC-based authentication is disabled globally.

**Syntax** `aaa authentication auth-mac {default|<list-name>} group {<group-name>|radius}`  
`no aaa authentication auth-mac {default|<list-name>}`

| Parameter    | Description                                      |
|--------------|--|
| default      | Configure the default authentication method list |
| <list-name>  | Configure a named authentication method list     |
| group        | Use a server group                               |
| <group-name> | Server group name.                               |
| radius       | Use all RADIUS servers.                          |

**Default** MAC-based Port Authentication is disabled by default.

**Mode** Global Configuration

**Usage** This command can be used to configure either the default authentication method list or a named authentication method list:

- **default:** the default authentication method list which is automatically applied to all interfaces with Web-based authentication enabled.
- **<list-name>:** a user named list which can be applied to an interface using the [auth-web authentication](#) command.

There are two ways to define servers where RADIUS accounting messages are sent:

- **group radius:** use all RADIUS servers configured by [radius-server host](#) command
- **group <group-name>:** use the specified RADIUS server group configured with the [aaa group server](#) command

All configured RADIUS Servers are automatically members of the server group **radius**. If a server is added to a named group **<group-name>**, it also remains a member of the group **radius**.

**Examples** To enable MAC-based authentication globally for all RADIUS servers, and use all available RADIUS servers, use the commands:

```
awplus# configure terminal
awplus(config)# aaa authentication auth-mac default group
radius
```

To disable MAC-based authentication, use the commands:

```
awplus# configure terminal
awplus(config)# no aaa authentication auth-mac default
```

To enable MAC-based authentication for named list 'vlan10\_auth', with RADIUS server group 'rad\_group\_vlan10, use the commands:

```
awplus# configure terminal
awplus(config)# aaa authentication auth-mac vlan10_auth group
rad_group_vlan10
```

To disable MAC-based authentication for named list 'vlan10\_auth', use the commands:

```
awplus# configure terminal
awplus(config)# no aaa authentication auth-mac vlan10_acct
```

**Related  
Commands**

- [aaa accounting auth-mac](#)
- [aaa group server](#)
- [auth-mac authentication](#)
- [auth-mac enable](#)
- [radius-server host](#)
- [show aaa server group](#)



# aaa authentication auth-web

**Overview** This command enables Web-based authentication globally and allows you to enable either the default authentication method list (in this case, a list of RADIUS servers), which is automatically applied to every interface running Web-based authentication, or a user named authentication method list, which is applied to an interface with the [auth-web authentication](#) command.

Use the **no** variant of this command to disable either the default or a named method list for Web-based authentication. Once all method lists are disabled Web-based authentication is disabled globally.

**Syntax** `aaa authentication auth-web {default|<list-name>} group {<group-name>|radius}`  
`no aaa authentication auth-web {default|<list-name>}`

| Parameter    | Description                                      |
|--------------|--|
| default      | Configure the default authentication method list |
| <list-name>  | Configure a named authentication method list     |
| group        | Use a server group                               |
| <group-name> | Server group name.                               |
| radius       | Use all RADIUS servers.                          |

**Default** Web-based authentication is disabled by default.

**Mode** Global Configuration

**Usage** This command can be used to configure either the default authentication method list or a named authentication method list:

- **default:** the default authentication method list which is automatically applied to all interfaces with Web-based authentication enabled.
- **<list-name>:** a user named list which can be applied to an interface using the [auth-web authentication](#) command.

There are two ways to define servers where RADIUS accounting messages are sent:

- **group radius:** use all RADIUS servers configured by [radius-server host](#) command
- **group <group-name>:** use the specified RADIUS server group configured with the [aaa group server](#) command

Note that you need to configure an IPv4 address for the VLAN interface on which Web authentication is running.

**Examples** To enable Web-based authentication globally for all RADIUS servers, and use all available RADIUS servers, use the commands:

```
awplus# configure terminal
awplus(config)# aaa authentication auth-web default group
radius
```

To disable Web-based authentication, use the commands:

```
awplus# configure terminal
awplus(config)# no aaa authentication auth-web default
```

To enable Web-based authentication for named list 'vlan10\_auth', with RADIUS server group 'rad\_group\_vlan10, use the commands:

```
awplus# configure terminal
awplus(config)# aaa authentication auth-web vlan10_auth group
rad_group_vlan10
```

To disable Web-based authentication for named list 'vlan10\_auth', use the commands:

```
awplus# configure terminal
awplus(config)# no aaa authentication vlan10_acct
```

**Related  
Commands**

- [aaa accounting auth-web](#)
- [aaa group server](#)
- [auth-web authentication](#)
- [auth-web enable](#)
- [radius-server host](#)

# aaa authentication dot1x

**Overview** This command enables IEEE 802.1X-based authentication globally and allows you to enable either the default authentication method list (in this case, a list of RADIUS servers), which is automatically applied to every interface running IEEE 802.1X-based authentication, or a user named authentication method list, which is applied to an interface with the [dot1x authentication](#) command.

Use the **no** variant of this command to disable either the default or a named method list for 802.1X-based authentication. Once all method lists are disabled 802.1x-based authentication is disabled globally.

**Syntax** `aaa authentication dot1x {default|<list-name>} group {<group-name>|radius}`  
`no aaa authentication dot1x {default|<list-name>}`

| Parameter    | Description                                      |
|--------------|--|
| default      | Configure the default authentication method list |
| <list-name>  | Configure a named authentication method list     |
| group        | Use a server group                               |
| <group-name> | Server group name.                               |
| radius       | Use all RADIUS servers.                          |

**Default** 802.1X-based Port Authentication is disabled by default.

**Mode** Global Configuration

**Usage** This command can be used to configure either the default authentication method list or a named authentication method list:

- **default:** the default authentication method list which is automatically applied to all interfaces with 802.1X-based authentication enabled.
- **<list-name>:** a user named list which can be applied to an interface using the [aaa authentication dot1x](#) command.

There are two ways to define servers where RADIUS accounting messages are sent:

- **group radius:** use all RADIUS servers configured by [radius-server host](#) command
- **group <group-name>:** use the specified RADIUS server group configured with the [aaa group server](#) command

**Examples** To enable 802.1X-based authentication globally with all RADIUS servers, and use all available RADIUS servers, use the command:

```
awplus# configure terminal
awplus(config)# aaa authentication dot1x default group radius
```

To disable 802.1X-based authentication, use the command:

```
awplus# configure terminal
awplus(config)# no aaa authentication dot1x default
```

To enable 802.1X-based authentication for named list 'vlan10\_auth', with RADIUS server group 'rad\_group\_vlan10, use the commands:

```
awplus# configure terminal
awplus(config)# aaa authentication dot1x vlan10_auth group
rad_group_vlan10
```

To disable 802.1X-based authentication for named list 'vlan10\_auth use the commands:

```
awplus# configure terminal
awplus(config)# no aaa authentication dot1x vlan10_acct
```

**Related  
Commands**

[aaa accounting dot1x](#)  
[aaa group server](#)  
[dot1x authentication](#)  
[dot1x port-control](#)  
[radius-server host](#)  
[show aaa server group](#)

# aaa authentication enable default group tacacs+

**Overview** This command enables AAA authentication to determine the privilege level a user can access for passwords authenticated against the TACACS+ server.

Use the **no** variant of this command to disable privilege level authentication.

**Syntax** `aaa authentication enable default group tacacs+ [local] [none]`  
`no aaa authentication enable default`

| Parameter | Description  |
|-----------|--|
| local     | Use the locally configured enable password ( <b>enable password</b> command) for authentication. |
| none      | No authentication.   |

**Default** Local privilege level authentication is enabled by default ([aaa authentication enable default local](#) command).

**Mode** Global Configuration

**Usage** A user is configured on a TACACS+ server with a maximum privilege level. When they enter the [enable \(Privileged Exec mode\)](#) command they are prompted for an enable password which is authenticated against the TACACS+ server. If the password is correct and the specified privilege level is equal to or less than the users maximum privilege level, then they are granted access to that level. If the user attempts to access a privilege level that is higher than their maximum configured privilege level, then the authentication session will fail and they will remain at their current privilege level.

**NOTE:** If both **local** and **none** are specified, you must always specify **local** first.

If the TACACS+ server goes offline, or is not reachable during enable password authentication, and command level authentication is configured as:

- **aaa authentication enable default group tacacs+**  
then the user is never granted access to Privileged Exec mode.
- **aaa authentication enable default group tacacs+ local**  
then the user is authenticated using the locally configured enable password, which if entered correctly grants the user access to Privileged Exec mode. If no enable password is locally configured (**enable password** command), then the enable authentication will fail until the TACACS+ server becomes available again.

- **aaa authentication enable default group tacacs+ none**

then the user is granted access to Privileged Exec mode with no authentication. This is true even if a locally configured enable password is configured.

- **aaa authentication enable default group tacacs+ local none**

then the user is authenticated using the locally configured enable password. If no enable password is locally configured, then the enable authentication will grant access to Privileged Exec mode with no authentication.

If the password for the user is not successfully authenticated by the server, then the user is again prompted for an enable password when they enter **enable** via the CLI.

**Examples** To enable a privilege level authentication method that will not allow the user to access Privileged Exec mode if the TACACS+ server goes offline, or is not reachable during enable password authentication, use the following commands:

```
awplus# configure terminal
```

```
awplus(config)# aaa authentication enable default group tacacs+
```

To enable a privilege level authentication method that will allow the user to access Privileged Exec mode if the TACACS+ server goes offline, or is not reachable during enable password authentication, and a locally configured enable password is configured, use the following commands:

```
awplus# configure terminal
```

```
awplus(config)# aaa authentication enable default group tacacs+  
local
```

To disable privilege level authentication, use the following commands:

```
awplus# configure terminal
```

```
awplus(config)# no aaa authentication enable default
```

**Related Commands**

- aaa authentication login
- aaa authentication enable default local
- enable (Privileged Exec mode)
- enable password
- enable secret
- tacacs-server host

# aaa authentication enable default local

**Overview** This command enables AAA authentication to determine the privilege level a user can access for passwords authenticated locally.

**Syntax** `aaa authentication enable default local`

**Default** Local privilege level authentication is enabled by default.

**Mode** Global Configuration

**Usage** The privilege level configured for a particular user in the local user database is the privilege threshold above which the user is prompted for an [enable \(Privileged Exec mode\)](#) command.

**Examples** To enable local privilege level authentication command, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa authentication enable default local
```

To disable privilege level authentication, use the following commands:

```
awplus# configure terminal
awplus(config)# no aaa authentication enable default
```

**Related Commands**

- [aaa authentication enable default group tacacs+](#)
- [aaa authentication login](#)
- [enable \(Privileged Exec mode\)](#)
- [enable password](#)
- [enable secret](#)
- [tacacs-server host](#)

# aaa authentication login

**Overview** Use this command to create an ordered list of methods to use to authenticate user login, or to replace an existing method list with the same name. Specify one or more of the options **local** or **group**, in the order you want them to be applied. If the **default** method list name is specified, it is applied to every console and VTY line immediately unless another method list is applied to that line by the [login authentication](#) command. To apply a non-default method list, you must also use the [login authentication](#) command.

Use the **no** variant of this command to remove an authentication method list for user login. The specified method list name is deleted from the configuration. If the method list name has been applied to any console or VTY line, user login authentication on that line will fail.

Note that the **no aaa authentication login default** command does not remove the default method list. This will return the default method list to its default state (**local** is the default).

**Syntax**

```
aaa authentication login {default|<list-name>} {[local] [group  
{radius|tacacs+|<group-name>}]}  
  
no aaa authentication login {default|<list-name>}
```

| Parameter    | Description   |
|--------------|---|
| default      | Set the default authentication server for user login.   |
| <list-name>  | Name of authentication server.  |
| local        | Use the local username database.  |
| group        | Use server group.   |
| radius       | Use all RADIUS servers configured by the <a href="#">radius-server host</a> command.                  |
| tacacs+      | Use all TACACS+ servers configured by the <a href="#">tacacs-server host</a> command.                 |
| <group-name> | Use the specified RADIUS server group, as configured by the <a href="#">aaa group server</a> command. |

**Default** If the default server is not configured using this command, user login authentication uses the local user database only.

If the **default** method list name is specified, it is applied to every console and VTY line immediately unless a named method list server is applied to that line by the **login authentication** command.

**local** is the default state for the default method list unless a named method list is applied to that line by the **login authentication** command. Reset to the default method list using the **no aaa authentication login default** command.

**Mode** Global Configuration



**Usage** When a user attempts to log in, the switch sends an authentication request to the first authentication server in the method list. If the first server in the list is reachable and it contains a username and password matching the authentication request, the user is authenticated and the login succeeds. If the authentication server denies the authentication request because of an incorrect username or password, the user login fails. If the first server in the method list is unreachable, the switch sends the request to the next server in the list, and so on.

For example, if the method list specifies **group tacacs+ local**, and a user attempts to log in with a password that does not match a user entry in the first TACACS+ server, if this TACACS+ server denies the authentication request, then the switch does not try any other TACACS+ servers not the local user database; the user login fails.

**Examples** To configure the default authentication method list for user login to first use all available RADIUS servers for user login authentication, and then use the local user database, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa authentication login default group radius
local
```

To configure a user login authentication method list called **USERS** to first use the RADIUS server group RAD\_GROUP1 for user login authentication, and then use the local user database, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa authentication login USERS group RAD_GROUP1
local
```

To configure a user login authentication method list called **USERS** to first use the TACACS+ servers for user login authentication, and then use the local user database, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa authentication login USERS group tacacs+
local
```

To return to the default method list (**local** is the default server), use the following commands:

```
awplus# configure terminal
awplus(config)# no aaa authentication login default
```

To delete an existing authentication method list **USERS** created for user login authentication, use the following commands:

```
awplus# configure terminal
awplus(config)# no aaa authentication login USERS
```

**Related Commands** [aaa accounting commands](#)  
[aaa authentication enable default group tacacs+ login authentication](#)

## aaa group server

**Overview** This command configures a RADIUS server group. A server group can be used to specify a subset of RADIUS servers in **aaa** commands. The group name **radius** is predefined, which includes all RADIUS servers configured by the **radius-server host** command.

RADIUS servers are added to a server group using the **server** command. Each RADIUS server should be configured using the **radius-server host** command.

Use the **no** variant of this command to remove an existing RADIUS server group.

**Syntax** `aaa group server radius <group-name>`  
`no aaa group server radius <group-name>`

| Parameter                       | Description        |
|---------------------------------|--------------------|
| <code>&lt;group-name&gt;</code> | Server group name. |

**Mode** Global Configuration

**Usage** Use this command to create an AAA group of RADIUS servers, and to enter Server Group Configuration mode, in which you can add servers to the group. Use a server group to specify a subset of RADIUS servers in AAA commands. Each RADIUS server must be configured by the **radius-server host** command. To add RADIUS servers to a server group, use the **server** command.

**Examples** To create a RADIUS server group named GROUP1 with hosts 192.168.1.1, 192.168.2.1 and 192.168.3.1, use the commands:

```
awplus(config)# aaa group server radius GROUP1
awplus(config-sg)# server 192.168.1.1 auth-port 1812 acct-port 1813
awplus(config-sg)# server 192.168.2.1 auth-port 1812 acct-port 1813
awplus(config-sg)# server 192.168.3.1 auth-port 1812 acct-port 1813
```

To remove a RADIUS server group named GROUP1 from the configuration, use the command:

```
awplus(config)# no aaa group server radius GROUP1
```

**Related  
Commands**

aaa accounting auth-mac  
aaa accounting auth-web  
aaa accounting dot1x  
aaa accounting login  
aaa authentication auth-mac  
aaa authentication auth-web  
aaa authentication dot1x  
aaa authentication login  
radius-server host  
server (Server Group)  
show radius server group

# aaa local authentication attempts lockout-time

**Overview** This command configures the duration of the user lockout period.

Use the **no** variant of this command to restore the duration of the user lockout period to its default of 300 seconds (5 minutes).

**Syntax** `aaa local authentication attempts lockout-time <lockout-time>`  
`no aaa local authentication attempts lockout-time`

| Parameter                         | Description   |
|-----------------------------------|---|
| <code>&lt;lockout-time&gt;</code> | <code>&lt;0-10000&gt;</code> . Time in seconds to lockout the user. |

**Mode** Global Configuration

**Default** The default for the lockout-time is 300 seconds (5 minutes).

**Usage** While locked out all attempts to login with the locked account will fail. The lockout can be manually cleared by another privileged account using the [clear aaa local user lockout](#) command.

**Examples** To configure the lockout period to 10 minutes (600 seconds), use the commands:

```
awplus# configure terminal
awplus(config)# aaa local authentication attempts lockout-time
600
```

To restore the default lockout period of 5 minutes (300 seconds), use the commands:

```
awplus# configure terminal
awplus(config)# no aaa local authentication attempts
lockout-time
```

**Related Commands** [aaa local authentication attempts max-fail](#)

# aaa local authentication attempts max-fail

**Overview** This command configures the maximum number of failed login attempts before a user account is locked out. Every time a login attempt fails the failed login counter is incremented.

Use the **no** variant of this command to restore the maximum number of failed login attempts to the default setting (five failed login attempts).

**Syntax** `aaa local authentication attempts max-fail <failed-logins>`  
`no aaa local authentication attempts max-fail`

| Parameter                          | Description   |
|------------------------------------|---|
| <code>&lt;failed-logins&gt;</code> | <code>&lt;1-32&gt;</code> . Number of login failures allowed before locking out a user. |

**Mode** Global Configuration

**Default** The default for the maximum number of failed login attempts is five failed login attempts.

**Usage** When the failed login counter reaches the limit configured by this command that user account is locked out for a specified duration configured by the [aaa local authentication attempts lockout-time](#) command.

When a successful login occurs the failed login counter is reset to 0. When a user account is locked out all attempts to login using that user account will fail.

**Examples** To configure the number of login failures that will lock out a user account to two login attempts, use the commands:

```
awplus# configure terminal
awplus(config)# aaa local authentication attempts max-fail 2
```

To restore the number of login failures that will lock out a user account to the default number of login attempts (five login attempts), use the commands:

```
awplus# configure terminal
awplus(config)# no aaa local authentication attempts max-fail
```

**Related Commands** [aaa local authentication attempts lockout-time](#)  
[clear aaa local user logout](#)

# aaa login fail-delay

**Overview** Use this command to configure the minimum time period between failed login attempts. This setting applies to login attempts via the console, SSH and Telnet.

Use the **no** variant of this command to reset the minimum time period to its default value.

**Syntax** `aaa login fail-delay [<1-10>]`  
`no aaa login fail-delay [<1-10>]`

| Parameter | Description   |
|-----------|---|
| <1-10>    | The minimum number of seconds required between login attempts |

**Default** 1 second

**Mode** Global configuration

**Example** To apply a delay of at least 5 seconds between login attempts, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa login fail-delay 5
```

**Related Commands** [aaa authentication login](#)

# accounting login

**Overview** This command applies a login accounting method list to console or VTY lines for user login. When login accounting is enabled using this command, logging events generate an accounting record to the accounting server.

The accounting method list must be configured first using this command. If an accounting method list is specified that has not been created by this command then accounting will be disabled on the specified lines.

The **no** variant of this command resets AAA Accounting applied to console or VTY lines for local or remote login. **default** login accounting is applied after issuing the **no accounting login** command. Accounting is disabled with **default**.

**Syntax** `accounting login {default|<list-name>}`  
`no accounting login`

| Parameter   | Description                     |
|-------------|---------------------------------|
| default     | Default accounting method list. |
| <list-name> | Named accounting method list.   |

**Default** By default login accounting is disabled in the **default** accounting server. No accounting will be performed until accounting is enabled using this command.

**Mode** Line Configuration

**Examples** To apply the accounting server `USERS` to all VTY lines, use the following commands:

```
awplus# configure terminal
awplus(config)# line vty 0 32
awplus(config-line)# accounting login USERS
```

**Related Commands** [aaa accounting commands](#)  
[aaa accounting login](#)

# clear aaa local user lockout

**Overview** Use this command to clear the lockout on a specific user account or all user accounts.

**Syntax** `clear aaa local user lockout {username <username>|all}`

| Parameter  | Description                           |
|------------|---------------------------------------|
| username   | Clear lockout for the specified user. |
| <username> | Specifies the user account.           |
| all        | Clear lockout for all user accounts.  |

**Mode** Privileged Exec

**Examples** To unlock the user account 'bob' use the following command:

```
awplus# clear aaa local user lockout username bob
```

To unlock all user accounts use the following command:

```
awplus# clear aaa local user lockout all
```

**Related Commands** [aaa local authentication attempts lockout-time](#)



# debug aaa

**Overview** This command enables AAA debugging.  
Use the **no** variant of this command to disable AAA debugging.

**Syntax** `debug aaa [accounting|all|authentication|authorization]`  
`no debug aaa [accounting|all|authentication|authorization]`

| Parameter      | Description                        |
|----------------|------------------------------------|
| accounting     | Accounting debugging.              |
| all            | All debugging options are enabled. |
| authentication | Authentication debugging.          |
| authorization  | Authorization debugging.           |

**Default** AAA debugging is disabled by default.

**Mode** Privileged Exec

**Examples** To enable authentication debugging for AAA, use the command:

```
awplus# debug aaa authentication
```

To disable authentication debugging for AAA, use the command:

```
awplus# no debug aaa authentication
```

**Related Commands** [show debugging aaa](#)  
[undebug aaa](#)

# login authentication

**Overview** Use this command to apply an AAA server for authenticating user login attempts from a console or remote logins on these console or VTY lines. The authentication method list must be specified by the **aaa authentication login** command. If the method list has not been configured by the **aaa authentication login** command, login authentication will fail on these lines.

Use the **no** variant of this command to reset AAA Authentication configuration to use the default method list for login authentication on these console or VTY lines.

**Command Syntax** login authentication {default|<list-name>}  
no login authentication

| Parameter   | Description  |
|-------------|--|
| default     | The default authentication method list. If the default method list has not been configured by the <a href="#">aaa authentication login</a> command, the local user database is used for user login authentication. |
| <list-name> | Named authentication server.   |

**Default** The default login authentication method list, as specified by the [aaa authentication login](#) command, is used to authenticate user login. If this has not been specified, the default is to use the local user database.

**Mode** Line Configuration

**Examples** To reset user authentication configuration on all VTY lines, use the following commands:

```
awplus# configure terminal
awplus(config)# line vty 0 32
awplus(config-line)# no login authentication
```

**Related Commands** [aaa authentication login](#)  
[line](#)

# show aaa local user locked

**Overview** This command displays the current number of failed attempts, last failure time and location against each user account attempting to log into the device.

Note that once the lockout count has been manually cleared by another privileged account using the [clear aaa local user lockout](#) command or a locked account successfully logs into the system after waiting for the lockout time, this command will display nothing for that particular account.

**Syntax** `show aaa local user locked`

**Mode** User Exec and Privileged Exec

**Example** To display the current failed attempts for local users, use the command:

```
awplus# show aaa local user locked
```

**Output** Figure 31-1: Example output from the **show aaa local user locked** command

|                                    |          |                |          |               |
|------------------------------------|----------|----------------|----------|---------------|
| awplus# show aaa local user locked |          |                |          |               |
| Login                              | Failures | Latest failure |          | From          |
| bob                                | 3        | 05/23/14       | 16:21:37 | ttyS0         |
| manager                            | 5        | 05/23/14       | 16:31:44 | 192.168.1.200 |

**Related Commands**

- [aaa local authentication attempts lockout-time](#)
- [aaa local authentication attempts max-fail](#)
- [clear aaa local user lockout](#)

# show aaa server group

**Overview** Use this command to list AAA users and any method lists applied to them.

**Syntax** show aaa server group

**Mode** Privileged Exec

**Example** To show the AAA configuration on a device, use the command:

```
awplus# aaa server group
```

**Output** Figure 31-2: Example output from **aaa server group**

|                              |       |             |                  |       |            |
|------------------------------|-------|-------------|------------------|-------|------------|
| awplus#show aaa server group |       |             |                  |       |            |
| User                         |       | List Name   | Method           |       | Acct-Event |
| =====                        | ===== | =====       | =====            | ===== | =====      |
| login                        | auth  | default     | -                | local | -          |
| -----                        | ----- | -----       | -----            | ----- | -----      |
| login                        | acct  | -           | -                | -     | -          |
| -----                        | ----- | -----       | -----            | ----- | -----      |
| dot1x                        | auth  | default     | radius           | group | -          |
| dot1x                        | auth  | vlan30_auth | rad_group_1      | group | -          |
| dot1x                        | auth  | vlan40_auth | rad_group_2      | group | -          |
| -----                        | ----- | -----       | -----            | ----- | -----      |
| dot1x                        | acct  | vlan30_acct | rad_group_4      | group | start-stop |
| dot1x                        | acct  | vlan40_acct | rad_group_5      | group | start-stop |
| -----                        | ----- | -----       | -----            | ----- | -----      |
| auth-mac                     | auth  | default     | radius           | group | -          |
| auth-mac                     | auth  | vlan10_auth | rad_group_vlan10 | group | -          |
| auth-mac                     | auth  | vlan20_auth | rad_group_vlan20 | group | -          |
| -----                        | ----- | -----       | -----            | ----- | -----      |
| auth-mac                     | acct  | vlan10_acct | rad_group_vlan10 | group | start-stop |
| auth-mac                     | acct  | vlan20_acct | rad_group_vlan20 | group | start-stop |
| -----                        | ----- | -----       | -----            | ----- | -----      |
| auth-web                     | auth  | default     | radius           | group | -          |
| -----                        | ----- | -----       | -----            | ----- | -----      |
| auth-web                     | acct  | default     | rad_group_3      | group | start-stop |
| -----                        | ----- | -----       | -----            | ----- | -----      |

**Related Commands**

- [aaa accounting auth-mac](#)
- [aaa accounting auth-web](#)
- [aaa accounting dot1x](#)
- [aaa accounting auth-mac](#)
- [aaa authentication auth-web](#)
- [aaa authentication dot1x](#)

# show debugging aaa

**Overview** This command displays the current debugging status for AAA (Authentication, Authorization, Accounting).

**Syntax** `show debugging aaa`

**Mode** User Exec and Privileged Exec

**Example** To display the current debugging status of AAA, use the command:

```
awplus# show debug aaa
```

**Output** Figure 31-3: Example output from the **show debug aaa** command

```
AAA debugging status:
Authentication debugging is on
Accounting debugging is off
```

# show radius server group

**Overview** Use this command to show the RADIUS server group configuration.

**Syntax** `show radius server group [<group-name>]`

| Parameter                       | Description               |
|---------------------------------|---------------------------|
| <code>&lt;group-name&gt;</code> | RADIUS server group name. |

**Default** Command name is set to something by default.

**Mode** Privileged Exec

**Usage** Use this command with the `<group-name>` parameter to display information for a specific RADIUS server group, or without the parameter to display information for all RADIUS server groups.

**Example** To display information for all RADIUS server groups, use the command:

```
awplus# show radius server group
```

To display a information for a RADIUS server group named 'rad\_group\_vlan10', use the command:

```
awplus# show radius server group rad_group_vlan10
```

**Output** Figure 31-4: Example output from **show radius server group**

```
awplus#show radius server group
RADIUS Group Configuration
  Group Name : radius?
    Server Host/   Auth  Acct  Auth  Acct
    IP Address     Port  Port  Status Status
    -----
    192.168.1.101  1812  1813  Active Active
    192.168.1.102  1812  1813  Active Active

  Group Name : rad_group_vlan10
    Server Host/   Auth  Acct  Auth  Acct
    IP Address     Port  Port  Status Status
    -----
    192.168.1.101  1812  1813  Active Active

  Group Name : rad_group_vlan20
    Server Host/   Auth  Acct  Auth  Acct
    IP Address     Port  Port  Status Status
    -----
    192.168.1.102  1812  1813  Active Active
```

Figure 31-5: Example output from **show radius server group rad\_group\_vlan10**

```
awplus#show radius server group rad_group_vlan10
RADIUS Group Configuration
  Group Name : rad_group_vlan10
    Server Host/   Auth  Acct  Auth  Acct
    IP Address     Port  Port  Status Status
    -----
    192.168.1.101  1812  1813  Active Active
```

**Related  
Commands**   [aaa group server](#)

# undebbug aaa

**Overview** This command applies the functionality of the **no debug aaa** command.



# 32

# RADIUS Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure the device to use RADIUS servers.

- Command List**
- [“auth radius send nas-identifier”](#) on page 1286
  - [“auth radius send service-type”](#) on page 1287
  - [“deadtime \(RADIUS server group\)”](#) on page 1288
  - [“debug radius”](#) on page 1289
  - [“ip radius source-interface”](#) on page 1290
  - [“radius-server deadtime”](#) on page 1291
  - [“radius-server host”](#) on page 1292
  - [“radius-server key”](#) on page 1295
  - [“radius-server retransmit”](#) on page 1296
  - [“radius-server timeout”](#) on page 1298
  - [“server \(Server Group\)”](#) on page 1300
  - [“show debugging radius”](#) on page 1302
  - [“show radius”](#) on page 1303
  - [“show radius statistics”](#) on page 1306
  - [“undebug radius”](#) on page 1307

# auth radius send nas-identifier

**Overview** Use this command to enable the device to include the NAS-Identifier(32) attribute in RADIUS authentication requests.

Use the **no** variant of this command to stop including the NAS-Identifier attribute.

**Syntax** `auth radius send nas-identifier [<name>|vlan-id]`  
`no auth radius send nas-identifier`

| Parameter | Description  |
|-----------|--|
| <name>    | Send this user-defined text as the NAS-Identifier. You can specify up to 253 characters.   |
| vlan-id   | Send the VLAN ID of the authentication port as the NAS-Identifier. This is the configured VLAN ID, not the dynamic VLAN ID or guest VLAN ID. |

**Mode** Global Configuration

**Example** To use a user-defined identifier of NASID100 as the NAS-Identifier attribute, use the commands:

```
awplus# configure terminal
awplus(config)# auth radius send nas-identifier NASID100
```

To use the VLAN ID as the NAS-Identifier attribute, use the commands:

```
awplus# configure terminal
awplus(config)# auth radius send nas-identifier vlan-id
```

To stop sending the NAS-Identifier attribute, use the commands:

```
awplus# configure terminal
awplus(config)# no auth radius send nas-identifier
```

**Related Commands** [auth radius send service-type](#)

# auth radius send service-type

**Overview** Use this command to enable the device to include the Service-Type(6) attribute in RADIUS authentication requests. The Service-Type attribute has a value of:

- Framed(2) for 802.1x
- Call-Check(10) for MAC authentication
- Unbound(5) for Web authentication.

Use the **no** variant of this command to stop including the Service-Type attribute.

**Syntax** `auth radius send service-type`  
`no auth radius send service-type`

**Mode** Global Configuration

**Example** To send the Service-Type attribute, use the commands:

```
awplus# configure terminal
awplus(config)# auth radius send service-type
```

**Related Commands** [auth radius send nas-identifier](#)

# deadtime (RADIUS server group)

**Overview** Use this command to configure the **deadtime** parameter for the RADIUS server group. This command overrides the global dead-time configured by the [radius-server deadtime](#) command. The configured deadtime is the time period in minutes to skip a RADIUS server for authentication or accounting requests if the server is “dead”. Note that a RADIUS server is considered “dead” if there is no response from the server within a defined time period.

Use the **no** variant of this command to reset the deadtime configured for the RADIUS server group. If the global deadtime for RADIUS server is configured the value will be used for the servers in the group. The global deadtime for the RADIUS server is set to 0 minutes by default.

**Syntax** `deadtime <0-1440>`  
`no deadtime`

| Parameter                   | Description                |
|-----------------------------|----------------------------|
| <code>&lt;0-1440&gt;</code> | Amount of time in minutes. |

**Default** The deadtime is set to 0 minutes by default.

**Mode** Server Group Configuration

**Usage** If the RADIUS server does not respond to a request packet, the packet is retransmitted the number of times configured for the **retransmit** parameter (after waiting for a **timeout** period to expire). The server is then marked “dead”, and the time is recorded. The **deadtime** parameter configures the amount of time to skip a dead server; if a server is dead, no request message is sent to the server for the **deadtime** period.

**Examples** To configure the deadtime for 5 minutes for the RADIUS server group “GROUP1”, use the command:

```
awplus(config)# aaa group server radius GROUP1
awplus(config-sg)# server 192.168.1.1
awplus(config-sg)# deadtime 5
```

To remove the deadtime configured for the RADIUS server group “GROUP1”, use the command:

```
awplus(config)# aaa group server radius GROUP1
awplus(config-sg)# no deadtime
```

**Related Commands** [aaa group server](#)  
[radius-server deadtime](#)

# debug radius

**Overview** This command enables RADIUS debugging. If no option is specified, all debugging options are enabled.

Use the **no** variant of this command to disable RADIUS debugging. If no option is specified, all debugging options are disabled.

**Syntax** debug radius [packet|event|all]  
no debug radius [packet|event|all]

| Parameter | Description  |
|-----------|--|
| packet    | Debugging for RADIUS packets is enabled or disabled. |
| event     | Debugging for RADIUS events is enabled or disabled.  |
| all       | Enable or disable all debugging options.             |

**Default** RADIUS debugging is disabled by default.

**Mode** Privileged Exec

**Examples** To enable debugging for RADIUS packets, use the command:

```
awplus# debug radius packet
```

To enable debugging for RADIUS events, use the command:

```
awplus# debug radius event
```

To disable debugging for RADIUS packets, use the command:

```
awplus# no debug radius packet
```

To disable debugging for RADIUS events, use the command:

```
awplus# no debug radius event
```

**Related Commands** [show debugging radius](#)  
[undebug radius](#)

# ip radius source-interface

**Overview** This command configures the source IP address of every outgoing RADIUS packet to use a specific IP address or the IP address of a specific interface. If the specified interface is down or there is no IP address on the interface, then the source IP address of outgoing RADIUS packets depends on the interface the packets leave.

Use the **no** variant of this command to remove the source interface configuration. The source IP address in outgoing RADIUS packets will be the IP address of the interface from which the packets are sent.

**Syntax** `ip radius source-interface {<interface>|<ip-address>}`  
`no ip radius source-interface`

| Parameter    | Description                                      |
|--------------|--|
| <interface>  | Interface name.                                  |
| <ip-address> | IP address in the dotted decimal format A.B.C.D. |

**Default** Source IP address of outgoing RADIUS packets depends on the interface the packets leave.

**Mode** Global Configuration

**Examples** To configure all outgoing RADIUS packets to use the IP address of the interface "vlan1" for the source IP address, use the following commands:

```
awplus# configure terminal
awplus(config)# ip radius source-interface vlan1
```

To configure the source IP address of all outgoing RADIUS packets to use 192.168.1.10, use the following commands:

```
awplus# configure terminal
awplus(config)# ip radius source-interface 192.168.1.10
```

To reset the source interface configuration for all outgoing RADIUS packets, use the following commands:

```
awplus# configure terminal
awplus(config)# no ip radius source-interface
```

**Related Commands** [radius-server host](#)  
[show radius statistics](#)

# radius-server deadtime

**Overview** Use this command to specify the global **deadtime** for all RADIUS servers. If a RADIUS server is considered dead, it is skipped for the specified deadtime. This command specifies for how many minutes a RADIUS server that is not responding to authentication requests is passed over by requests for RADIUS authentication.

Use the **no** variant of this command to reset the global deadtime to the default of 0 seconds, so that RADIUS servers are not skipped even if they are dead.

**Syntax** `radius-server deadtime <minutes>`  
`no radius-server deadtime`

| Parameter | Description  |
|-----------|--|
| <minutes> | RADIUS server deadtime in minutes in the range 0 to 1440 (24 hours). |

**Default** The default RADIUS deadtime configured on the system is 0 seconds.

**Mode** Global Configuration

**Usage** The RADIUS client considers a RADIUS server to be dead if it fails to respond to a request after it has been retransmitted as often as specified globally by the [radius-server retransmit](#) command or for the server by the [radius-server host](#) command. To improve RADIUS response times when some servers may be unavailable, set a **deadtime** to skip dead servers.

**Examples** To set the dead time of the RADIUS server to 60 minutes, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server deadtime 60
```

To disable the dead time of the RADIUS server, use the following commands:

```
awplus# configure terminal
awplus(config)# no radius-server deadtime
```

**Related Commands** [deadtime \(RADIUS server group\)](#)  
[radius-server host](#)  
[radius-server retransmit](#)  
[show radius statistics](#)

# radius-server host

**Overview** Use this command to specify a remote RADIUS server host for authentication or accounting, and to set server-specific parameters. The parameters specified with this command override the corresponding global parameters for RADIUS servers. This command specifies the IP address or host name of the remote RADIUS server host and assigns authentication and accounting destination UDP port numbers.

This command adds the RADIUS server address and sets parameters to the RADIUS server. The RADIUS server is added to the running configuration after you issue this command. If parameters are not set using this command then common system settings are applied.

Use the **no** variant of this command to remove the specified server host as a RADIUS authentication and/or accounting server and set the destination port to the default RADIUS server port number (1812).

**Syntax** `radius-server host {<host-name>|<ip-address>} [acct-port <0-65535>] [auth-port <0-65535>] [key <key-string>] [retransmit <0-100>] [timeout <1-1000>]`  
`no radius-server host {<host-name>|<ip-address>} [acct-port <0-65535>] [auth-port <0-65535>]`

| Parameter    | Description   |
|--------------|---|
| <host-name>  | Server host name. The DNS name of the RADIUS server host.   |
| <ip-address> | The IP address of the RADIUS server host.   |
| acct-port    | Accounting port. Specifies the UDP destination port for RADIUS accounting requests. If 0 is specified, the server is not used for accounting. The default UDP port for accounting is 1813.                      |
| <0-65535>    | UDP port number<br>(Accounting port number is set to 1813 by default)<br>Specifies the UDP destination port for RADIUS accounting requests. If 0 is specified, the host is not used for accounting.             |
| auth-port    | Authentication port. Specifies the UDP destination port for RADIUS authentication requests. If 0 is specified, the server is not used for authentication. The default UDP port for authentication is 1812.      |
| <0-65535>    | UDP port number<br>(Authentication port number is set to 1812 by default)<br>Specifies the UDP destination port for RADIUS authentication requests. If 0 is specified, the host is not used for authentication. |
| timeout      | Specifies the amount of time to wait for a response from the server. If this parameter is not specified the global value configured by the <b>radius-server timeout</b> command is used.                        |



| Parameter    | Description  |
|--------------|--|
| <1-1000>     | Time in seconds to wait for a server reply (timeout is set to 5 seconds by default)<br>The time interval (in seconds) to wait for the RADIUS server to reply before retransmitting a request or considering the server dead. This setting overrides the global value set by the <b>radius-server timeout</b> command.<br>If no timeout value is specified for this server, the global value is used.   |
| retransmit   | Specifies the number of retries before skip to the next server. If this parameter is not specified the global value configured by the <b>radius-server retransmit</b> command is used.   |
| <0-100>      | Maximum number of retries (maximum number of retries is set to 3 by default)<br>The maximum number of times to resend a RADIUS request to the server, if it does not respond within the timeout interval, before considering it dead and skipping to the next RADIUS server. This setting overrides the global setting of the <b>radius-server retransmit</b> command.<br>If no retransmit value is specified, the global value is used.   |
| key          | Set shared secret key with RADIUS servers  |
| <key-string> | Shared key string applied<br>Specifies the shared secret authentication or encryption key for all RADIUS communications between this device and the RADIUS server. This key must match the encryption used on the RADIUS daemon. All leading spaces are ignored, but spaces within and at the end of the string are used. If spaces are used in the string, do not enclose the string in quotation marks unless the quotation marks themselves are part of the key. This setting overrides the global setting of the <b>radius-server key c</b> command. If no key value is specified, the global value is used. |

**Default** The RADIUS client address is not configured (null) by default. No RADIUS server is configured.

**Mode** Global Configuration

**Usage** Multiple **radius-server host** commands can be used to specify multiple hosts. The software searches for hosts in the order they are specified. If no host-specific timeout, retransmit, or key values are specified, the global values apply to that host. If there are multiple RADIUS servers for this client, use this command multiple times—once to specify each server.

If you specify a host without specifying the auth port or the acct port, it will by default be configured for both authentication and accounting, using the default UDP ports. To set a host to be a RADIUS server for authentication requests only, set the **acct-port** parameter to 0; to set the host to be a RADIUS server for accounting requests only, set the **auth-port** parameter to 0.

A RADIUS server is identified by IP address, authentication port and accounting port. A single host can be configured multiple times with different authentication or accounting ports. All the RADIUS servers configured with this command are

included in the predefined RADIUS server group radius, which may be used by AAA authentication, authorization and accounting commands. The client transmits (and retransmits, according to the **retransmit** and **timeout** parameters) RADIUS authentication or accounting requests to the servers in the order you specify them, until it gets a response.

**Examples** To add the RADIUS server 10.0.0.20, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server host 10.0.0.20
```

To set the secret key to **allied** on the RADIUS server 10.0.0.20, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server host 10.0.0.20 key allied
```

To delete the RADIUS server 10.0.0.20, use the following commands:

```
awplus# configure terminal
awplus(config)# no radius-server host 10.0.0.20
```

To configure rad1.company.com for authentication only, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server host rad1.company.com acct-port 0
```

To remove the RADIUS server rad1.company.com configured for authentication only, use the following commands:

```
awplus# configure terminal
awplus(config)# no radius-server host rad1.company.com
acct-port 0
```

To configure rad2.company.com for accounting only, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server host rad2.company.com auth-port 0
```

To configure 192.168.1.1 with authentication port 1000, accounting port 1001 and retransmit count 5, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server host 192.168.1.1 auth-port 1000
acct-port 1001 retransmit 5
```

**Related  
Commands**

[aaa group server](#)  
[radius-server key](#)  
[radius-server retransmit](#)  
[radius-server timeout](#)  
[show radius statistics](#)

# radius-server key

**Overview** This command sets a global secret key for RADIUS authentication on the device. The shared secret text string is used for RADIUS authentication between the device and a RADIUS server.

Note that if no secret key is explicitly specified for a RADIUS server, the global secret key will be used for the shared secret for the server.

Use the **no** variant of this command to reset the secret key to the default (null).

**Syntax** `radius-server key <key>`  
`no radius-server key`

| Parameter                | Description  |
|--------------------------|--|
| <code>&lt;key&gt;</code> | Shared secret among radius server and 802.1X client. |

**Default** The RADIUS server secret key on the system is not set by default (null).

**Mode** Global Configuration

**Usage** Use this command to set the global secret key shared between this client and its RADIUS servers. If no secret key is specified for a particular RADIUS server using the **radius-server host c** command, this global key is used.

After enabling AAA authentication with the **aaa authentication login** command, set the authentication and encryption key using the **radius-server key** command so the key entered matches the key used on the RADIUS server.

**Examples** To set the global secret key to **allied** for RADIUS server, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server key allied
```

To set the global secret key to **secret** for RADIUS server, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server key secret
```

To delete the global secret key for RADIUS server, use the following commands:

```
awplus# configure terminal
awplus(config)# no radius-server key
```

**Related Commands** [radius-server host](#)  
[show radius statistics](#)

# radius-server retransmit

**Overview** This command sets the retransmit counter to use RADIUS authentication on the device. This command specifies how many times the device transmits each RADIUS request to the RADIUS server before giving up.

This command configures the **retransmit** parameter for RADIUS servers globally. If the **retransmit** parameter is not specified for a RADIUS server by the **radius-server host** command then the global configuration set by this command is used for the server instead.

Use the **no** variant of this command to reset the re-transmit counter to the default (3).

**Syntax** `radius-server retransmit <retries>`  
`no radius-server retransmit`

| Parameter | Description   |
|-----------|---|
| <retries> | RADIUS server retries in the range <0-100>. The number of times a request is resent to a RADIUS server that does not respond, before the server is considered dead and the next server is tried. If no retransmit value is specified for a particular RADIUS server using the <b>radius-server host</b> command, this global value is used. |

**Default** The default RADIUS retransmit count on the device is 3.

**Mode** Global Configuration

**Examples** To set the RADIUS **retransmit** count to 1, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server retransmit 1
```

To set the RADIUS **retransmit** count to the default (3), use the following commands:

```
awplus# configure terminal
awplus(config)# no radius-server retransmit
```

To configure the RADIUS **retransmit** count globally with 5, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server retransmit 5
```

To disable retransmission of requests to a RADIUS server, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server retransmit 0
```

**Related  
Commands**

- radius-server deadtime
- radius-server host
- show radius statistics

# radius-server timeout

**Overview** Use this command to specify the RADIUS global timeout value. This is how long the device waits for a reply to a RADIUS request before retransmitting the request, or considering the server to be dead. If no timeout is specified for the particular RADIUS server by the **radius-server host** command, it uses this global timeout value.

Note that this command configures the **timeout** parameter for RADIUS servers globally.

The **no** variant of this command resets the transmit timeout to the default (5 seconds).

**Syntax** `radius-server timeout <seconds>`  
`no radius-server timeout`

| Parameter                    | Description   |
|------------------------------|---|
| <code>&lt;seconds&gt;</code> | RADIUS server timeout in seconds in the range 1 to 1000. The global time in seconds to wait for a RADIUS server to reply to a request before retransmitting the request, or considering the server to be dead (depending on the <b>radius-server retransmit</b> command). |

**Default** The default RADIUS transmit timeout on the system is 5 seconds.

**Mode** Global Configuration

**Examples** To globally set the device to wait 20 seconds before retransmitting a RADIUS request to unresponsive RADIUS servers, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server timeout 20
```

To set the RADIUS **timeout** parameter to 1 second, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server timeout 1
```

To set the RADIUS **timeout** parameter to the default (5 seconds), use the following commands:

```
awplus# configure terminal
awplus(config)# no radius-server timeout
```

To configure the RADIUS server **timeout** period globally with 3 seconds, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server timeout 3
```

To reset the global **timeout** period for RADIUS servers to the default, use the following command:

```
awplus# configure terminal  
awplus(config)# no radius-server timeout
```

**Related  
Commands**

[radius-server deadtime](#)  
[radius-server host](#)  
[radius-server retransmit](#)  
[show radius statistics](#)

## server (Server Group)

**Overview** This command adds a RADIUS server to a server group in Server-Group Configuration mode. The RADIUS server should be configured by the [radius-server host](#) command.

The server is appended to the server list of the group and the order of configuration determines the precedence of servers. If the server exists in the server group already, it will be removed before added as a new server.

The server is identified by IP address and authentication and accounting UDP port numbers. So a RADIUS server can have multiple entries in a group with different authentication and/or accounting UDP ports. The **auth-port** specifies the UDP destination port for authentication requests to the server. To disable authentication for the server, set **auth-port** to 0. If the authentication port is missing, the default port number is 1812. The **acct-port** specifies the UDP destination port for accounting requests to the server. To disable accounting for the server, set **acct-port** to 0. If the accounting port is missing, the default port number is 1812.

Use the **no** variant of this command to remove a RADIUS server from the server group.

**Syntax** `server {<hostname>|<ip-address>} [auth-port <0-65535>] [acct-port <0-65535>]`  
`no server {<hostname>|<ip-address>} [auth-port <0-65535>] [acct-port <0-65535>]`

| Parameter    | Description  |
|--------------|--|
| <hostname>   | Server host name   |
| <ip-address> | Server IP address<br>The server is identified by IP address, authentication and accounting UDP port numbers. So a RADIUS server can have multiple entries in a group with different authentication and/or accounting UDP ports.  |
| auth-port    | Authentication port<br>The <b>auth-port</b> specifies the UDP destination port for authentication requests to the server. To disable authentication for the server, set <b>auth-port</b> to 0. If the authentication port is missing, the default port number is 1812. |
| <0-65535>    | UDP port number (default: 1812)  |
| acct-port    | Accounting port<br>The <b>acct-port</b> specifies the UDP destination port for accounting requests to the server. To disable accounting for the server, set <b>acct-port</b> to 0. If the accounting port is missing, the default port number is 1813.                 |
| <0-65535>    | UDP port number (default: 1813)  |



**Default** The default Authentication port number is 1812 and the default Accounting port number is 1813.

**Mode** Server Group Configuration

**Usage** The RADIUS server to be added must be configured by the **radius-server host** command. In order to add or remove a server, the **auth-port** and **acct-port** parameters in this command must be the same as the corresponding parameters in the **radius-server host** command.

**Examples** To create a RADIUS server group RAD\_AUTH1 for authentication, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa group server radius RAD_AUTH1
awplus(config-sg)# server 192.168.1.1 acct-port 0
awplus(config-sg)# server 192.168.2.1 auth-port 1000 acct-port 0
```

To create a RADIUS server group RAD\_ACCT1 for accounting, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa group server radius RAD_ACCT1
awplus(config-sg)# server 192.168.2.1 auth-port 0 acct-port 1001
awplus(config-sg)# server 192.168.3.1 auth-port 0
```

To remove server 192.168.3.1 from the existing server group **GROUP1**, use the following commands:

```
awplus# configure terminal
awplus(config)# aaa group server radius GROUP1
awplus(config-sg)# no server 192.168.3.1
```

**Related Commands**

- [aaa accounting auth-mac](#)
- [aaa accounting auth-web](#)
- [aaa accounting dot1x](#)
- [aaa accounting login](#)
- [aaa authentication auth-mac](#)
- [aaa authentication auth-web](#)
- [aaa authentication login](#)
- [aaa group server](#)
- [radius-server host](#)

# show debugging radius

**Overview** This command displays the current debugging status for the RADIUS servers.

**Syntax** `show debugging radius`

**Mode** User Exec and Privileged Exec

**Example** To display the current debugging status of RADIUS servers, use the command:

```
awplus# show debugging radius
```

**Output** Figure 32-1: Example output from the **show debugging radius** command

```
RADIUS debugging status:
RADIUS event debugging is off
RADIUS packet debugging is off
```

# show radius

**Overview** This command displays the current RADIUS server configuration and status.

**Syntax** show radius

**Mode** User Exec and Privileged Exec

**Example** To display the current status of RADIUS servers, use the command:

```
awplus# show radius
```

**Output** Figure 32-2: Example output from the **show radius** command showing RADIUS servers

```
RADIUS Global Configuration
Source Interface : not configured
Secret Key : secret
Timeout : 5 sec
Retransmit Count : 3
Deadtime : 20 min
Server Host : 192.168.1.10
Authentication Port : 1812
Accounting Port : 1813
Secret Key : secret
Timeout : 3 sec
Retransmit Count : 2
Server Host : 192.168.1.11
Authentication Port : 1812
Accounting Port : not configured

Server Name/   Auth   Acct   Auth   Acct
IP Address    Port   Port   Status Status
-----
192.168.1.10  1812   1813   Alive  Alive
192.168.1.11  1812   N/A    Alive  N/A
```

**Example** See the sample output below showing RADIUS client status and RADIUS configuration:

```
awplus# show radius
```

**Output** Figure 32-3: Example output from the **show radius** command showing RADIUS client status

```

RADIUS global interface name: awplus
  Secret key:
  Timeout: 5
  Retransmit count: 3
  Deadtime: 0

Server Address: 150.87.18.89
  Auth destination port: 1812
  Accounting port: 1813
  Secret key: swg
  Timeout: 5
  Retransmit count: 3
  Deadtime: 0
show radius local-server group

```

| Output Parameter    | Meaning  |
|---------------------|--|
| Source Interface    | The interface name or IP address to be used for the source address of all outgoing RADIUS packets. |
| Secret Key          | A shared secret key to a radius server.  |
| Timeout             | A time interval in seconds.  |
| Retransmit Count    | The number of retry count if a RADIUS server does not response.                                    |
| Deadtime            | A time interval in minutes to mark a RADIUS server as "dead".                                      |
| Interim-Update      | A time interval in minutes to send Interim-Update Accounting report.                               |
| Group Deadtime      | The deadtime configured for RADIUS servers within a server group.                                  |
| Server Host         | The RADIUS server hostname or IP address.  |
| Authentication Port | The destination UDP port for RADIUS authentication requests.                                       |
| Accounting Port     | The destination UDP port for RADIUS accounting requests.   |

| Output Parameter | Meaning  |
|------------------|--|
| Auth Status      | The status of the authentication port.<br>The status ("dead", "error", or "alive") of the RADIUS authentication server and, if dead, how long it has been dead for.                |
|                  | Alive      The server is alive.  |
|                  | Error      The server is not responding.   |
|                  | Dead      The server is detected as dead and it will not be used for deadtime period. The time displayed in the output shows the server is in dead status for that amount of time. |
|                  | Unknown    The server is never used or the status is unknown.  |
| Acct Status      | The status of the accounting port.<br>The status ("dead", "error", or "alive") of the RADIUS accounting server and, if dead, how long it has been dead for.                        |

# show radius statistics

**Overview** This command shows the RADIUS client statistics for the device.

**Syntax** `show radius statistics`

**Mode** User Exec and Privileged Exec

**Example** See the sample output below showing RADIUS client statistics and RADIUS configuration:

```
awplus# show radius statistics
```

**Output** Figure 32-4: Example output from the **show radius statistics** command:

```
RADIUS statistics for Server: 150.87.18.89
Access-Request Tx   : 5 - Retransmit   : 0
Access-Accept Rx    : 1 - Access-Reject Rx : 2
Access-Challenge Rx : 2
Unknown Type       : 0 - Bad Authenticator : 0
Malformed Access-Resp : 0 - Wrong Identifier : 0
Bad Attribute      : 0 - Packet Dropped   : 0
TimeOut           : 0 - Dead count       : 0
Pending Request    : 0
```

# undebbug radius

**Overview** This command applies the functionality of the **no debug radius** command.

# 33

# Local RADIUS Server Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure the local RADIUS server on the device. For more information, see the [Local RADIUS Server Feature Overview and Configuration Guide](#).

- Command List**
- [“attribute”](#) on page 1310
  - [“authentication”](#) on page 1313
  - [“clear radius local-server statistics”](#) on page 1314
  - [“copy fdb-radius-users \(to file\)”](#) on page 1315
  - [“copy local-radius-user-db \(from file\)”](#) on page 1317
  - [“copy local-radius-user-db \(to file\)”](#) on page 1318
  - [“crypto pki enroll local”](#) on page 1319
  - [“crypto pki enroll local local-radius-all-users”](#) on page 1320
  - [“crypto pki enroll local user”](#) on page 1321
  - [“crypto pki export local pem”](#) on page 1322
  - [“crypto pki export local pkcs12”](#) on page 1323
  - [“crypto pki trustpoint local”](#) on page 1324
  - [“debug crypto pki”](#) on page 1325
  - [“domain-style”](#) on page 1326
  - [“egress-vlan-id”](#) on page 1327
  - [“egress-vlan-name”](#) on page 1329
  - [“group”](#) on page 1331
  - [“nas”](#) on page 1332
  - [“radius-server local”](#) on page 1333



- [“server auth-port”](#) on page 1334
- [“server enable”](#) on page 1335
- [“show crypto pki certificates”](#) on page 1336
- [“show crypto pki certificates local-radius-all-users”](#) on page 1338
- [“show crypto pki certificates user”](#) on page 1340
- [“show crypto pki trustpoints”](#) on page 1342
- [“show radius local-server group”](#) on page 1343
- [“show radius local-server nas”](#) on page 1344
- [“show radius local-server statistics”](#) on page 1345
- [“show radius local-server user”](#) on page 1346
- [“user \(RADIUS server\)”](#) on page 1348
- [“vlan \(RADIUS server\)”](#) on page 1350

# attribute

**Overview** Use this command to define a RADIUS attribute for the local RADIUS server user group.

For a complete list of defined RADIUS attributes and values, see the [Local RADIUS Server Feature Overview and Configuration Guide](#).

When used with the **help** parameter the **attribute** command displays a list of standard and vendor specific valid RADIUS attributes that are supported by the local RADIUS server.

If an attribute name is specified with the **help** parameter, then the **attribute** command displays a list of predefined attribute names. Note that you can only use the defined RADIUS attribute names and not define your own.

When used with the **value** parameter the **attribute** command configures RADIUS attributes to the user group. If the specified attribute is already defined then it is replaced with the new value.

Use the **no** variant of this command to delete an attribute from the local RADIUS server user group.

**Syntax**

```
attribute [<attribute-name>|<attribute-id>] help
attribute {<attribute-name>|<attribute-id>} <value>
no attribute {<attribute-name>|<attribute-id>}
```

| Parameter        | Description  |
|------------------|--|
| <attribute-name> | RADIUS attribute name for standard attributes or Vendor-Specific attributes (see the <a href="#">Local RADIUS Server Feature Overview and Configuration Guide</a> for tables of attributes). |
| <attribute-id>   | RADIUS attribute numeric identifier for standard attributes.   |
| <value>          | RADIUS attribute value.  |
| help             | Display a list of available attribute types.   |

**Default** By default, no attributes are configured.

**Mode** RADIUS Server Group Configuration

**Usage** For the Standard attributes, the attribute may be specified using either the attribute name, or its numeric identifier. For example, the command:

```
awplus(config-radsrv-group)# attribute acct-terminate-cause
help
```

will produce the same results as the command:

```
awplus(config-radsrv-group)# attribute 49 help
```

In the same way, where the specific attribute has a pre-defined value, the parameter *<value>* may be substituted with the Value Name or with its numeric value, for example the command:

```
awplus(config-radsrv-group)# attribute acct-terminate-cause  
user-request
```

will produce the same results as the command:

```
awplus(config-radsrv-group)# attribute 49 1
```

or the command:

```
awplus(config-radsrv-group)# attribute acct-terminate-cause 1
```

**Examples** To check a list of all available defined RADIUS attribute names, use the following commands:

```
awplus# configure terminal  
awplus(config)# radius-server local  
awplus(config-radsrv)# group Admin  
awplus(config-radsrv-group)# attribute help
```

A list of Vendor-specific Attributes displays after the list of defined Standard Attributes.

To get help for valid RADIUS attribute values for the attribute Service-Type, use the following commands:

```
awplus# configure terminal  
awplus(config)# radius-server local  
awplus(config-radsrv)# group Admin  
awplus(config-radsrv-group)# attribute Service-Type help
```

This results in the following output:

```
Service-Type : integer (Integer number)  
  
Pre-defined values :  
  Administrative-User (6)  
  Authenticate-Only (8)  
  Authorize-Only (17)  
  Callback-Administrative (11)  
  Callback-Framed-User (4)  
  Callback-Login-User (3)  
  Callback-NAS-Prompt (9)  
  Call-Check (10)  
  Framed-User (2)  
  Login-User (1)  
  NAS-Prompt-User (7)  
  Outbound-User (5)
```

To define the attribute name 'Service-Type' with Administrative User (6) to the RADIUS User Group 'Admin', use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# group Admin
awplus(config-radsrv-group)# attribute Service-Type 6
```

To delete the attribute 'Service-Type' from the RADIUS User Group 'Admin', use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# group Admin
awplus(config-radsrv-group)# no attribute Service-Type
```

**Related  
Commands**

[egress-vlan-id](#)  
[egress-vlan-name](#)

# authentication

**Overview** Use this command to enable the specified authentication methods on the local RADIUS server.

Use the **no** variant of this command to disable specified authentication methods on the local RADIUS server.

**Syntax** `authentication {mac|eapmd5|eaptls|peap}`  
`no authentication {mac|eapmd5|eaptls|peap}`

| Parameter | Description                            |
|-----------|--|
| mac       | Enable MAC authentication method.      |
| eapmd5    | Enable EAP-MD5 authentication method.  |
| eaptls    | Enable EAP-TLS authentication method.  |
| peap      | Enable EAP-PEAP authentication method. |

**Default** All authentication methods are enabled by default.

**Mode** RADIUS Server Configuration

**Examples** The following commands enable EAP-MD5 authentication methods on the local RADIUS server.

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# authentication eapmd5
```

The following commands disable EAP-MD5 authentication methods on Local RADIUS server.

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# no authentication eapmd5
```

**Related Commands** [server enable](#)  
[show radius local-server statistics](#)

# clear radius local-server statistics

**Overview** Use this command to clear the statistics stored on the device for the local RADIUS server.

Use this command without any parameters to clear all types of local RADIUS server statistics.

**Syntax** `clear radius local-server statistics [nas|server|user]`

| Parameter | Description  |
|-----------|--|
| nas       | Clear the NAS (Network Access Server) statistics on the device. For example, clearing statistics stored for NAS server invalid passwords.    |
| server    | Clear the Local RADIUS Server statistics on the device. For example, clearing Local RADIUS Servers statistics for all failed login attempts. |
| user      | Clear the Local RADIUS Server user statistics. For example, clearing statistics stored for the number of successful user logins.             |

**Mode** Privileged Exec

**Usage** Refer to the sample output for the [show radius local-server statistics](#) for further information about the type of statistics each parameter option for this command clears. Both the **nas** and **server** parameters clear unknown username and invalid passwords statistics, while the **user** parameter clears the number of successful and failed logins for each local RADIUS server user.

**Examples** To clear the NAS (Network Access Server) statistics stored on the device, use the command:

```
awplus# clear radius local-server statistics nas
```

To clear the local RADIUS server statistics stored on the device, use the command:

```
awplus# clear radius local-server statistics server
```

To clear the local RADIUS server user statistics stored on the device, use the command:

```
awplus# clear radius local-server statistics user
```

**Related Commands** [show radius local-server statistics](#)

## copy fdb-radius-users (to file)

**Overview** Use this command to create a set of local RADIUS server users from MAC addresses in the local FDB. A local RADIUS server user created using this command can be used for MAC authentication.

**Syntax** `copy fdb-radius-users  
{local-radius-user-db|flash|nvs|usb|debug|tftp|scp|  
fserver|<url>} [interface <port>] [vlan <vid>] [group <name>]  
[export-vlan [<radius-group-name>]]`

| Parameter            | Description  |
|----------------------|--|
| local-radius-user-db | Copy the local RADIUS server users created to the local RADIUS server.   |
| flash                | Copy the local RADIUS server users created to Flash memory.  |
| nvs                  | Copy the local RADIUS server users created to NVS memory.  |
| usb                  | Copy the local RADIUS server users created to USB storage device.  |
| debug                | Copy the local RADIUS server users created to debug.   |
| tftp                 | Copy the local RADIUS server users created to the TFTP destination.  |
| scp                  | Copy the local RADIUS server users created to the SCP destination.   |
| fserver              | Copy the local RADIUS server users created to the remote file server.  |
| <url>                | Copy the local RADIUS server users created to the specified URL.   |
| interface <port>     | Copy only MAC addresses learned on a specified device port. Wildcards may be used when specifying an interface name. For example, when you specify interface port1.* then this command generates RADIUS server users for MAC addresses learned on stack 1. |
| vlan <vid>           | Copy only MAC addresses learned on a specified VLAN.   |
| group <name>         | Assign a group name to the local RADIUS server users created.  |
| export-vlan          | Export VLAN ID assigned to exported FDB entry.   |
| <radius-group-name>  | Prefix for Radius group name storing VLAN ID   |

**Mode** Privileged Exec

**Usage** The local RADIUS server users created are written to a specified destination file in local RADIUS user CSV (Comma Separated Values) format. The local RADIUS server

users can then be imported to a local RADIUS server using the [copy local-radius-user-db \(from file\)](#) command.

The name and password of the local RADIUS server users created use a MAC address, which can be used for MAC authentication.

This command does not copy a MAC address learned by the CPU or the management port.

This command can filter FDB entries by the interface name and the VLAN ID. When the interface name and the VLAN ID are specified, this command generates local RADIUS server users from only the MAC address learned on the specified interface and on the specified VLAN.

**Examples** To register the local RADIUS server users from the local FDB directly to the local RADIUS server, use the command:

```
awplus# copy fdb-radius-users local-radius-user-db
```

To register the local RADIUS server users from the interface `port1.0.1` to the local RADIUS server, use the command:

```
awplus# copy fdb-radius-users local-radius-user-db interface  
port1.0.1
```

To copy output generated as local RADIUS server user data from MAC addresses learned on `vlan10` on interface `port1.0.1` to the file `radius-user.csv`, use the command:

```
awplus# copy fdb-radius-users radius-user.csv interface  
port1.0.1 vlan10
```

To copy output generated as local RADIUS server user data from MAC addresses learned on `vlan10` on interface `port1.0.1` to a file on the remote file server, use the command:

```
awplus# copy fdb-radius-users fserver interface port1.0.1  
vlan10
```

**Related Commands** [copy local-radius-user-db \(to file\)](#)  
[copy local-radius-user-db \(from file\)](#)



# copy local-radius-user-db (from file)

**Overview** Use this command to copy the Local RADIUS server user data from a file. The file, including the RADIUS user data in the file, must be in the CSV (Comma Separated Values) format.

You can select **add** or **replace** as the copy method. The **add** parameter option copies the contents of specified file to the local RADIUS server user database. If the same user exists then the old user is removed before adding a new user. The **replace** parameter option deletes all contents of the local RADIUS server user database before copying the contents of specified file.

**Syntax** `copy <source-url> local-radius-user-db [add|replace]`

| Parameter    | Description   |
|--------------|---|
| <source-url> | URL of the source file.   |
| add          | Add file contents to local RADIUS server user database.               |
| replace      | Replace current local RADIUS server user database with file contents. |

**Default** When no copy method is specified with this command the **replace** option is applied.

**Mode** Privileged Exec

**Examples** To replace the current local RADIUS server user data to the contents of `http://datahost/ user.csv`, use the following command:

```
awplus# copy http://datahost/user.csv local-radius-user-db
```

To add the contents of `http://datahost/user.csv` to the current local RADIUS server user database, use the following command:

```
awplus# copy http://datahost/user.csv local-radius-user-db add
```

**Related commands** [copy fdb-radius-users \(to file\)](#)  
[copy local-radius-user-db \(to file\)](#)

## copy local-radius-user-db (to file)

**Overview** Use this command to copy the local RADIUS server user data to a file. The output file produced is CSV (Comma Separated Values) format.

**Syntax** `copy local-radius-user-db  
{flash|nvs|usb|tftp|scp|<destination-url>}`

| Parameter         | Description                  |
|-------------------|------------------------------|
| flash             | Copy to flash memory.        |
| nvs               | Copy to NVS memory.          |
| usb               | Copy to USB storage device.  |
| tftp              | Copy to TFTP destination.    |
| scp               | Copy to SCP destination.     |
| <destination-url> | URL of the Destination file. |

**Mode** Privileged Exec

**Example** Copy the current local RADIUS server user data to `http://datahost/user.csv`.

```
awplus# copy local-radius-user-db http://datahost/user.csv
```

**Related Commands** [copy fdb-radius-users \(to file\)](#)  
[copy local-radius-user-db \(from file\)](#)

# crypto pki enroll local

**Overview** Use this command to obtain a system certificate from the Local CA (Certificate Authority).  
Use the **no** variant of this command to delete system certificates created by a Local CA (Certificate Authority).

**Syntax** `crypto pki enroll local`  
`no crypto pki enroll local`

**Default** The system certificate is not available until this command is issued.

**Mode** Global Configuration

**Examples** The following command obtains the system certificate from the Local CA (Certificate Authority).

```
awplus# configure terminal
awplus(config)# crypto pki enroll local
```

The following command deletes the system certificate created by the Local CA (Certificate Authority).

```
awplus# configure terminal
awplus(config)# no crypto pki enroll local
```

**Related Commands** [crypto pki trustpoint local](#)  
[group](#)

# crypto pki enroll local local-radius-all-users

**Overview** Use this command to create certificates for all users registered in the local RADIUS server. These certificates are created by the Local Certificate Authority (CA) on the device.

**Syntax** `crypto pki enroll local local-radius-all-users`

**Default** By default, there are no certificates for users in the local RADIUS server.

**Mode** Global Configuration

**Example** The following command obtains the local RADIUS server certificates for the user from the Local CA (Certificate Authority).

```
awplus# configure terminal
awplus(config)# crypto pki enroll local local-radius-all-users
```

**Related Commands** [crypto pki trustpoint local](#)  
[show crypto pki certificates](#)

# crypto pki enroll local user

**Overview** Use this command to obtain a local user certificate from the Local CA (Certificate Authority).

Use the **no** variant of this command to delete user certificates created by the Local CA (Certificate Authority).

**Syntax** `crypto pki enroll local user <user-name>`  
`no crypto pki enroll local user <user-name>`

| Parameter                      | Description |
|--------------------------------|-------------|
| <code>&lt;user-name&gt;</code> | User name.  |

**Default** By default, there is no user certificate.

**Mode** Global Configuration

**Examples** The following command obtains Tom's certificate from the Local CA (Certificate Authority).

```
awplus# configure terminal
awplus(config)# crypto pki enroll local user Tom
```

The following command deletes Tom's certificates created by the Local CA (Certificate Authority):

```
awplus# configure terminal
awplus(config)# no crypto pki enroll local user Tom
```

**Related Commands** [crypto pki trustpoint local](#)  
[show crypto pki certificates](#)

# crypto pki export local pem

**Overview** Use this command to export the certificate associated with the Local CA to a PEM format file.

**Syntax** `crypto pki export local pem url <url>`

| Parameter | Description |
|-----------|-------------|
| <url>     | URL string. |

**Mode** Global Configuration

**Example** The following command exports the Local CA certificate to a PEM format file.

```
awplus# configure terminal
awplus(config)# crypto pki export local pem url
tftp://192.168.1.1/cacert.pem
```

**Related Commands** [crypto pki enroll local](#)

# crypto pki export local pkcs12

**Overview** Use this command to export a specified certificate to a PKCS12 format file.  
This command cannot be used for exporting certificates for the local system.

**Syntax** `crypto pki export local pkcs12 <user-name> <destination-url>`

| Parameter                            | Description             |
|--------------------------------------|-------------------------|
| <code>&lt;user-name&gt;</code>       | User name.              |
| <code>&lt;destination-url&gt;</code> | Destination URL string. |

**Mode** Global Configuration

**Examples** The following commands exports a certificate for a user named **client** to a PKCS12 format file.

```
awplus# configure terminal
awplus(config)# crypto pki export local pkcs12 client
tftp://192.168.1.1/cacert.pem
```

To export Tom's certificate to PKSC12 format file, use the commands:

```
awplus# configure terminal
awplus(config)# crypto pki export local pksc12 Tom
tftp://192.168.1.1/tom.pfx
```

**Related Commands** [crypto pki enroll local](#)

# crypto pki trustpoint local

**Overview** Use this command to declare the Local CA (Certificate Authority) as the trustpoint that the system uses. The ca-trustpoint configuration mode is available after this command is issued.

Use the **no** variant of this command to delete all information and certificates associated with Local CA as the trustpoint.

**Syntax** `crypto pki trustpoint local`  
`no crypto pki trustpoint local`

**Default** Local CA is not a trustpoint.

**Mode** Global Configuration

**Examples** Use the following commands to declare the Local CA as the trustpoint.

```
awplus# configure terminal
awplus(config)# crypto pki trustpoint local
```

Use the following commands to delete all information and certificates associated with the Local CA.

```
awplus# configure terminal
awplus(config)# no crypto pki trustpoint local
```

To create a client certificate for all users registered to the local RADIUS server, use the following commands:

```
awplus(config)# crypto pki trustpoint local
awplus(ca-trust-point)# exit
awplus(config)# crypto pki enroll local alternative
```

**Related Commands** [crypto pki enroll local](#)  
[show crypto pki trustpoints](#)



# debug crypto pki

**Overview** Use this command to enable Public Key Infrastructure (PKI) debugging. When PKI debugging is enabled, the PKI module starts generating diagnostic messages to the system log.

Use the **no** variant of this command to disable Public Key Infrastructure (PKI) debugging. When PKI debugging is disabled, the PKI module stops generating diagnostic messages to the system log.

**Syntax** `debug crypto pki`  
`no debug crypto pki`

**Default** PKI debugging is disabled by default

**Mode** Privileged Exec

**Examples** To enable the PKI debugging facility, use the command:

```
awplus# debug crypto pki
```

To disable the PKI debugging facility, use the command:

```
awplus# no debug crypto pki
```

# domain-style

**Overview** Use this command to enable a specified domain style on the local RADIUS server. The local RADIUS server decodes the domain portion of a username login string when this command is enabled.

Use the **no** variant of this command to disable the specified domain style on the local RADIUS server.

**Syntax** `domain-style {suffix-atsign|ntdomain}`

| Parameter                  | Description  |
|----------------------------|--|
| <code>suffix-atsign</code> | Enable at sign "@" delimited suffix style, i.e. "user@domain". |
| <code>ntdomain</code>      | Enable NT domain style, i.e. "domain\user".                    |

**Default** This feature is disabled by default.

**Mode** RADIUS Server Configuration

**Usage** When both domain styles are enabled, the first domain style configured has the highest priority. A username login string is matched against the first domain style enabled. Then, if the username login string is not decoded, it is matched against the second domain style enabled.

**Examples** To enable NT domain style on the local RADIUS server, use the commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# domain-style ntdomain
```

To disable NT domain style on the local RADIUS server, use the commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# no domain-style ntdomain
```

**Related Commands** [server enable](#)

## egress-vlan-id

**Overview** Use this command to configure the standard RADIUS attribute “Egress-VLANID (56)” for the local RADIUS Server user group.

Use the **no** variant of this command to remove the Egress-VLANID attribute from the local RADIUS server user group.

**Syntax** `egress-vlan-id <vid> [tagged|untagged]`  
`no egress-vlan-id`

| Parameter | Description   |
|-----------|---|
| <vid>     | The VLAN identifier to be used for the Egress VLANID attribute, in the range 1 to 4094.   |
| tagged    | Set frames on the VLAN as tagged. This sets the tag indication field to indicate that all frames on this VLAN are tagged.         |
| untagged  | Set all frames on the VLAN as untagged. This sets the tag indication field to indicate that all frames on this VLAN are untagged. |

**Default** By default, no Egress-VLANID attributes are configured.

**Mode** RADIUS Server Group Configuration

**Usage** When a Voice VLAN is configured for dynamic VLAN allocation ([switchport voice vlan](#) command), the RADIUS server must be configured to send the VLAN information when an IP phone is successfully authenticated. Use either the [egress-vlan-id](#) command or the [egress-vlan-name](#) command, and specify the **tagged** parameter.

**Examples** To set the “Egress-VLANID” attribute for the *NormalUsers* local RADIUS server user group to VLAN identifier 200, with tagged frames, use the commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# group NormalUsers
awplus(config-radsrv-group)# egress-vlan-id 200 tagged
```

To remove the “Egress-VLANID” attribute for the *NormalUsers* local RADIUS server user group, use the commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# group NormalUsers
awplus(config-radsrv-group)# no egress-vlan-id
```

**Related  
Commands**    [attribute](#)  
                  [egress-vlan-name](#)  
                  [switchport voice vlan](#)

## egress-vlan-name

**Overview** Use this command to configure the standard RADIUS attribute "Egress-VLAN-Name (58)" for the local RADIUS server user group.

Use the **no** variant of this command to remove the Egress-VLAN-Name attribute from the local RADIUS server user group.

**Syntax** `egress-vlan-name <vlan-name> [tagged|untagged]`  
`no egress-vlan-name`

| Parameter   | Description   |
|-------------|---|
| <vlan-name> | The VLAN name to be configured as the Egress-VLAN-Name attribute.   |
| tagged      | Set frames on the VLAN as tagged. This sets the tag indication field to indicate that all frames on this VLAN are tagged.         |
| untagged    | Set all frames on the VLAN as untagged. This sets the tag indication field to indicate that all frames on this VLAN are untagged. |

**Default** By default, no Egress-VLAN-Name attributes are configured.

**Mode** RADIUS Server Group Configuration

**Usage** When a Voice VLAN is configured for dynamic VLAN allocation ([switchport voice vlan](#) command), the RADIUS server must be configured to send the VLAN information when an IP phone is successfully authenticated. Use either the [egress-vlan-id](#) command or the [egress-vlan-name](#) command, and specify the **tagged** parameter.

**Examples** To configure the "Egress-VLAN-Name" attribute for the RADIUS server user group *NormalUsers* with the VLAN name *vlan2* and all frames on this VLAN tagged, use the commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# group NormalUsers
awplus(config-radsrv-group)# egress-vlan-name vlan2 tagged
```

To delete the "Egress-VLAN-Name" attribute for the *NormalUsers* group, use the commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# group NormalUsers
awplus(config-radsrv-group)# no egress-vlan-name
```

**Related  
Commands**    [attribute](#)  
                  [egress-vlan-id](#)  
                  [switchport voice vlan](#)

# group

**Overview** Use this command to create a local RADIUS server user group, and enter local RADIUS Server User Group Configuration mode.

Use the **no** variant of this command to delete the local RADIUS server user group.

**Syntax** `group <user-group-name>`  
`no group <user-group-name>`

| Parameter                            | Description             |
|--------------------------------------|-------------------------|
| <code>&lt;user-group-name&gt;</code> | User group name string. |

**Mode** RADIUS Server Configuration

**Examples** The following command creates the user group NormalUsers.

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# group NormalUsers
```

The following command deletes user group NormalUsers.

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# no group NormalUsers
```

**Related Commands** [user \(RADIUS server\)](#)  
[show radius local-server user](#)  
[vlan \(RADIUS server\)](#)

# nas

**Overview** This command adds a client device (the Network Access Server or the NAS) to the list of devices that are able to send authentication requests to the local RADIUS server. The NAS is identified by its IP address and a shared secret (also referred to as a shared key) must be defined that the NAS will use to establish its identity.

Use the **no** variant of this command to remove a NAS client from the list of devices that are allowed to send authentication requests to the local RADIUS server.

**Syntax** `nas <ip-address> key <nas-keystring>`  
`no nas <ip-address>`

| Parameter                          | Description            |
|------------------------------------|------------------------|
| <code>&lt;ip-address&gt;</code>    | RADIUS NAS IP address. |
| <code>&lt;nas-keystring&gt;</code> | NAS shared keystring.  |

**Mode** RADIUS Server Configuration

**Examples** The following commands add the NAS with an IP address of 192.168.1.2 to the list of clients that may send authentication requests to the local RADIUS server. Note the shared key that this NAS will use to establish its identify is NAS\_PASSWORD.

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# nas 192.168.1.2 key NAS_PASSWORD
```

The following commands remove the NAS with an IP address of 192.168.1.2 from the list of clients that are allowed to send authentication requests to the local RADIUS server:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# no nas 192.168.1.2
```

**Related Commands** [show radius local-server nas](#)



# radius-server local

**Overview** Use this command to navigate to the Local RADIUS server configuration mode (`config-radsrv`) from the Global Configuration mode (`config`).

**Syntax** `radius-server local`

**Mode** Global Configuration

**Example** Local RADIUS Server commands are available from `config-radsrv` configuration mode. To change mode from User Exec mode to the Local RADIUS Server mode (`config-radsrv`), use the commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)#
```

## Output

```
awplus(config)#radius-server local
Creating Local CA repository.....OK
Enrolling Local System to local trustpoint..OK
awplus(config-radsrv)#
```

**Related Commands**

- `server enable`
- `show radius local-server group`
- `show radius local-server nas`
- `show radius local-server statistics`
- `show radius local-server user`

# server auth-port

**Overview** Use this command to change the UDP port number for local RADIUS server authentication.

Use the **no** variant of this command to reset the RADIUS server authentication port back to the default.

**Syntax** `server auth-port <1-65535>`  
`no server auth-port`

| Parameter | Description      |
|-----------|------------------|
| <1-65535> | UDP port number. |

**Default** The default local RADIUS server UDP authentication port number is 1812.

**Mode** RADIUS Server Configuration

**Examples** The following commands set the RADIUS server authentication port to 10000.

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# server auth-port 10000
```

The following commands reset the RADIUS server authentication port back to the default UDP port of 1812.

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# no server auth-port
```

**Related Commands** [server enable](#)  
[show radius local-server statistics](#)

# server enable

**Overview** This command enables the local RADIUS server. The local RADIUS server feature is started immediately when this command is issued.

The **no** variant of this command disables local RADIUS server. When this command is issued, the local RADIUS server stops operating.

**Syntax** `server enable`  
`no server enable`

**Default** The local RADIUS server is disabled by default and must be enabled for use with this command.

**Mode** RADIUS Server Configuration

**Examples** To enable the local RADIUS server, use the following commands:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# server enable
```

To disable the local RADIUS server, use the command:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# no server enable
```

**Related Commands** [server auth-port](#)  
[show radius local-server statistics](#)

# show crypto pki certificates

**Overview** Use this command to display certificate information for Local CA and Local System certificates.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show crypto pki certificates [local-ca|local]`

| Parameter | Description               |
|-----------|---------------------------|
| local-ca  | Local CA certificate.     |
| local     | Local system certificate. |

**Mode** User Exec and Privileged Exec

**Examples** The following command displays Local CA (Certificate Authority) certificate information.

```
awplus# show crypto pki certificates local-ca
```

The following command displays Local System certificate information.

```
awplus# show crypto pki certificates local
```

The following command displays information for all Local CA and Local System certificates.

```
awplus# show crypto pki certificates
```

## Output

**Table 1:** Example output from the **show crypto pki certificates** command showing Local System and Local CA certificates

```
awplus#show crypto pki certificates
Certificate: Local System
  Data:
    Version: 3 (0x2)
    Serial Number: 4 (0x4)
    Signature Algorithm: sha1WithRSAEncryption
    Issuer: O=Allied-Telesis, CN=AlliedwarePlusCA
    Validity
      Not Before: Oct  8 07:50:55 2009 GMT
      Not After : Oct  6 07:50:55 2019 GMT
    Subject: O=Allied-Telesis, CN=Tom
Certificate: Local CA
  Data:
    Version: 3 (0x2)
    Serial Number: 0 (0x0)
    Signature Algorithm: sha1WithRSAEncryption
    Issuer: O=Allied-Telesis, CN=AlliedwarePlusCA
    Validity
      Not Before: Oct  8 07:55:55 2009 GMT
      Not After : Oct  6 07:55:55 2019 GMT
    Subject: O=Allied-Telesis, CN=Tom
```

**Table 2:** Parameters in the output of the **show crypto pki certificates** command

| Parameter           | Description                                   |
|---------------------|---|
| Certificate         | Certificate name.                             |
| Version             | Protocol version.                             |
| Serial Number       | Serial number of the certificate.             |
| Signature Algorithm | Algorithm used for the certificate signature. |
| Issuer              | Subject of issuer creating the certificate.   |
| Validity            | Validity period.                              |
| Subject             | Subject of the certificate.                   |

**Related Commands** [crypto pki enroll local](#)

# show crypto pki certificates local-radius-all-users

**Overview** Use this command to display certificate information for local RADIUS server users. For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show crypto pki certificates local-radius-all-users

**Mode** User Exec and Privileged Exec

**Example** The following command displays information of all local RADIUS server user certificates.

```
awplus# show crypto pki certificates local-radius-all-users
```

## Output

**Table 3:** Example output from the **show crypto pki certificates local-radius-all-users** command

|  |                                       |
|--|---------------------------------------|
| awplus#show crypto pki certificates local-radius-all-users |                                       |
| Certificate:   |                                       |
| Data:  |                                       |
| Version:   | 3 (0x2)                               |
| Serial Number:   | 2 (0x2)                               |
| Signature Algorithm:                                       | sha1WithRSAEncryption                 |
| Issuer:  | O=Allied-Telesis, CN=AlliedwarePlusCA |
| Validity   |                                       |
| Not Before:  | Oct 8 07:50:55 2009 GMT               |
| Not After :  | Oct 6 07:50:55 2019 GMT               |
| Subject:   | O=Allied-Telesis, CN=Tom              |

**Table 4:** Parameters in the output of the **show crypto pki certificates local-radius- all-users** command

| Parameter           | Description                                   |
|---------------------|---|
| Certificate         | Certificate name.                             |
| Version             | Protocol version.                             |
| Serial Number       | Serial number of the certificate.             |
| Signature Algorithm | Algorithm used for the certificate signature. |
| Issuer              | Subject of issuer creating the certificate.   |

**Table 4:** Parameters in the output of the **show crypto pki certificates local-radius- all-users** command (cont.)

| Parameter | Description                 |
|-----------|-----------------------------|
| Validity  | Validity period.            |
| Subject   | Subject of the certificate. |

**Related Commands** [crypto pki enroll local local-radius-all-users](#)

# show crypto pki certificates user

**Overview** Use this command to display certificate information for a specified local RADIUS server user.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show crypto pki certificates user [<user-name>]

| Parameter   | Description |
|-------------|-------------|
| <user-name> | User name.  |

**Mode** User Exec and Privileged Exec

**Example** The following command displays Tom’s certificate information.

```
awplus# show crypto pki certificates user Tom
```

## Output

**Table 5:** Example output from the **show crypto pki certificates user** command to show certificate information for user Tom

|   |
|---|
| awplus#show crypto pki certificates user Tom  |
| Certificate:                                  |
| Data:   |
| Version: 3 (0x2)                              |
| Serial Number: 2 (0x2)                        |
| Signature Algorithm: sha1WithRSAEncryption    |
| Issuer: O=Allied-Telesis, CN=AlliedwarePlusCA |
| Validity                                      |
| Not Before: Oct  8 07:50:55 2009 GMT          |
| Not After  : Oct  6 07:50:55 2019 GMT         |
| Subject: O=Allied-Telesis, CN=Tom             |

**Table 6:** Parameters in the output of the **show crypto pki certificates user** command

| Parameter     | Description                       |
|---------------|-----------------------------------|
| Certificate   | Certificate name.                 |
| Version       | Protocol version.                 |
| Serial Number | Serial number of the certificate. |



**Table 6:** Parameters in the output of the **show crypto pki certificates user** command (cont.)

| Parameter           | Description                                   |
|---------------------|---|
| Signature Algorithm | Algorithm used for the certificate signature. |
| Issuer              | Subject of issuer creating the certificate.   |
| Validity            | Validity period.                              |
| Subject             | Subject of the certificate.                   |

**Related Commands** [crypto pki enroll local user](#)

# show crypto pki trustpoints

**Overview** Use this command to display trustpoint information.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show crypto pki trustpoints`

**Mode** User Exec and Privileged Exec

**Example** The following command displays trustpoint information.

```
awplus# show crypto pki trustpoint
```

## Output

**Table 7:** Example output from the **show crypto pki trustpoints** command

|                       |
|-----------------------|
| Trustpoint local:     |
| Subject Name:         |
| CN = AlliedwarePlusCA |
| o = Allied-Telesis    |
| Serial Number:0C      |

**Table 8:** Parameters in the output of the **show crypto pki trustpoints** command

| Parameter     | Description                  |
|---------------|------------------------------|
| Subject Name  | CA certificate subject.      |
| Serial Number | Current serial number of CA. |

**Related Commands** [crypto pki enroll local](#)

# show radius local-server group

**Overview** Use this command to display information about the local RADIUS server user group.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show radius local-server group [<user-group-name>]`

| Parameter         | Description             |
|-------------------|-------------------------|
| <user-group-name> | User group name string. |

**Mode** User Exec and Privileged Exec

**Example** The following command displays Local RADIUS server user group information.

```
awplus# show radius local-server group
```

## Output

**Table 9:** Example output from the **show radius local-server group** command

|                  |               |
|------------------|---------------|
| Group-Name       | Vlan          |
| -----            |               |
| NetworkOperators | ManagementNet |
| NormalUsers      | CommonNet     |

**Table 10:** Parameters in the output of the **show radius local-server group** command

| Parameter  | Description                      |
|------------|----------------------------------|
| Group-Name | Group name.                      |
| Vlan       | VLAN name assigned to the group. |

**Related Commands** [group](#)

# show radius local-server nas

**Overview** Use this command to display information about NAS (Network Access Servers) registered to the local RADIUS server.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the “[Getting Started with AlliedWare Plus](#)” Feature Overview and Configuration Guide.

**Syntax** `show radius local-server nas [<ip-address>]`

| Parameter                       | Description                             |
|---------------------------------|---|
| <code>&lt;ip-address&gt;</code> | Specify NAS IP address for show output. |

**Mode** User Exec and Privileged Exec

**Example** The following command displays NAS information.

```
awplus# show radius local-server nas
```

## Output

**Table 11:** Example output from the **show radius local-server nas** command

| NAS-Address | Shared-Key                 |
|-------------|----------------------------|
| -----       |                            |
| 127.0.0.1   | awplus-local-radius-server |

**Table 12:** Parameters in the output of the **show radius local-server nas** command

| Parameter   | Description                            |
|-------------|--|
| NAS-Address | IP address of NAS.                     |
| Shared-Key  | Shared key used for RADIUS connection. |

**Related Commands** [nas](#)

# show radius local-server statistics

**Overview** Use this command to display statistics about the local RADIUS server.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show radius local-server statistics`

**Mode** User Exec and Privileged Exec

**Usage** Both unknown usernames and invalid passwords will display as failed logins in the show output.

**Example** The following command displays Local RADIUS server statistics.

```
awplus# show radius local-server statistics
```

## Output

**Table 13:** Example output from the **show radius local-server statistics** command

```
Server status : Run (administrative status is enable)
Enabled methods: MAC EAP-MD5 EAP-TLS EAP-PEAP

Successes :1 Unknown NAS :0
Failed Logins :0 Invalid packet from NAS :0
Internal Error :0 Unknown Error :0

NAS : 127.0.0.1
Successes :0 Shared key mismatch :0
Failed Logins :0 Unknown RADIUS message :0
Unknown EAP message :0 Unknown EAP auth type :0
Corrupted packet :0

NAS : 192.168.1.61
Successes :0 Shared key mismatch :0
Failed Logins :0 Unknown RADIUS message :0
Unknown EAP message :0 Unknown EAP auth type :0
Corrupted packet :0

Username Successes Failures
a 1 0
admin 0 0
```

**Related Commands**

- [clear radius local-server statistics](#)
- [radius-server local](#)
- [server enable](#)
- [server auth-port](#)

# show radius local-server user

**Overview** Use this command to display information about the local RADIUS server user.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show radius local-server user [<user-name>]`  
`show radius local-server user <user-name> format csv`

| Parameter   | Description   |
|-------------|---|
| <user-name> | RADIUS user name. If no user name is specified, information for all users is displayed. |
| format      | File format.  |
| csv         | Comma separated value format.   |

**Mode** User Exec and Privileged Exec

**Examples** The following command displays Local RADIUS server user information for user Tom.

```
awplus# show radius local-server user Tom
```

**Table 14:** Example output from the **show radius local-server user** command

| User-Name | Password | Group            | Vlan          |
|-----------|----------|------------------|---------------|
| Tom       | abcd     | NetworkOperators | ManagementNet |

The following command displays all Local RADIUS server information for all users.

```
awplus# show radius local-server user
```

The following command displays Local RADIUS server user information for Tom in CSV format.

```
awplus# show radius local-server user Tom format csv
```

**Table 15:** Example output from the **show radius local-server user csv** command

|   |
|---|
| true,"NetworkOperators","Tom",<br>"abcd",0,2099/01/<br>01,1,"","","ManagementNet",false,3600,false,0,"",false," |
|---|

**Table 16:** Parameters in the output from the **show radius local-server user** command

| Parameter | Description                      |
|-----------|----------------------------------|
| User-Name | User name.                       |
| Password  | User password.                   |
| Group     | Group name assigned to the user. |
| Vlan      | VLAN name assigned to the user.  |

**Related  
Commands**    [group](#)  
                  [user \(RADIUS server\)](#)

## user (RADIUS server)

**Overview** Use this command to register a user to the local RADIUS server.

Use the **no** variant of this command to delete a user from the local RADIUS server.

**Syntax** `user <radius-user-name> [encrypted] password <user-password>  
[group <user-group>]`

`no user <radius-user-name>`

| Parameter                             | Description   |
|---------------------------------------|---|
| <code>&lt;radius-user-name&gt;</code> | RADIUS user name. This can also be a MAC address in the IEEE standard format of HH-HH-HH-HH-HH-HH if you are configuring MAC authentication to use local RADIUS server.   |
| <code>encrypted</code>                | Specifies that the password is being entered in its encrypted form, so that it is not further encrypted. When creating a new user, enter the password in plaintext, and do not use the <b>encrypted</b> parameter. Use the <b>encrypted</b> parameter only when referring to a user that has previously been created. For instance, when adding an existing user from another RADIUS server, use the <b>encrypted</b> parameter, and enter the encrypted version of the password that appears in the output of <b>show</b> commands for the user. |
| <code>&lt;user-password&gt;</code>    | User password. This can also be a MAC address in the IEEE standard format of HH-HH-HH-HH-HH-HH if you are configuring MAC authentication to use local RADIUS server.  |
| <code>group</code>                    | Specify the group for the user.   |
| <code>&lt;user-group&gt;</code>       | User group name.  |

**Mode** RADIUS Server Configuration

**Usage** RADIUS user names cannot contain question mark (?), space ( ), or quote ( " ) characters. RADIUS user names containing the below characters cannot use certificate authentication:

`/ \ ' $ & ( ) * ; < > ` |`

Certificates cannot be created and exported for RADIUS user names that contain the above characters. We advise you to avoid using these characters in RADIUS user names if you need to use certificate authentication, because you will not be able to create and export certificates.

You also can use the IEEE standard format hexadecimal notation (HH-HH-HH-HH-HH-HH) to specify a supplicant MAC address to configure the user name and user password parameters to use local RADIUS server for MAC Authentication. See the [AAA Feature Overview and Configuration Guide](#) for a sample MAC configuration. See also the command **user 00-db-59-ab-70-37 password 00-db-59-ab-70-37** as shown in the command examples.



**Examples** The following commands add user Tom to the local RADIUS server and sets his password to QwerSD.

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# user Tom password QwerSD
```

The following commands add user Tom to the local RADIUS server user group NormalUsers and sets his password QwerSD.

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# user Tom password QwerSD group
NormalUsers
```

The following commands remove user Tom from the local RADIUS server:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# no user Tom
```

The following commands add the supplicant MAC address 00-d0-59-ab-70-37 to the local RADIUS server:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# user 00-db-59-ab-70-37 password
00-db-59-ab-70-37
```

The following commands remove the supplicant MAC address 00-d0-59-ab-70-37 from the local RADIUS server:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# no user 00-db-59-ab-70-37
```

**Related  
Commands** [group](#)  
[show radius local-server user](#)

## vlan (RADIUS server)

**Overview** Use this command to set the VLAN ID or name for the local RADIUS server user group. The VLAN information is used for authentication with the dynamic VLAN feature.

Use the **no** variant of this command to clear the VLAN ID or VLAN name for the local RADIUS server user group.

**Syntax** `vlan {<vid>|<vlan-name>}`  
`no vlan`

| Parameter   | Description |
|-------------|-------------|
| <vid>       | VLAN ID.    |
| <vlan-name> | VLAN name.  |

**Default** VLAN information is not set by default.

**Mode** RADIUS Server Group Configuration

**Examples** The following commands set VLAN ID 200 to the group named *NormalUsers*:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# group NormalUsers
awplus(config-radsrv-group)# vlan 200
```

The following commands remove VLAN ID 200 from the group named *NormalUsers*:

```
awplus# configure terminal
awplus(config)# radius-server local
awplus(config-radsrv)# group NormalUsers
awplus(config-radsrv-group)# no vlan
```

**Related Commands** [group](#)  
[show radius local-server user](#)

# 34

# TACACS+ Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure the device to use TACACS+ servers. For more information about TACACS+, see the [TACACS+ Feature Overview and Configuration Guide](#).

- Command List**
- [“show tacacs+”](#) on page 1352
  - [“tacacs-server host”](#) on page 1353
  - [“tacacs-server key”](#) on page 1355
  - [“tacacs-server timeout”](#) on page 1356

# show tacacs+

**Overview** This command displays the current TACACS+ server configuration and status.

**Syntax** show tacacs+

**Mode** User Exec and Privileged Exec

**Example** To display the current status of TACACS+ servers, use the command:

```
awplus# show tacacs+
```

**Output** Figure 34-1: Example output from the **show tacacs+** command

```
TACACS+ Global Configuration
  Timeout           : 5 sec

Server Host/      Server
IP Address        Status
-----
192.168.1.10      Alive
192.168.1.11      Unknown
```

**Table 1:** Parameters in the output of the **show tacacs+** command

| Output Parameter       | Meaning  |
|------------------------|--|
| Timeout                | A time interval in seconds.  |
| Server Host/IP Address | TACACS+ server hostname or IP address.   |
| Server Status          | The status of the authentication port.   |
|                        | Alive            The server is alive.  |
|                        | Dead            The server has timed out.  |
|                        | Error           The server is not responding or there is an error in the key string entered. |
|                        | Unknown        The server is never used or the status is unknown.                            |
|                        | Unreachable    The server is unreachable.  |
|                        | Unresolved     The server name can not be resolved.  |

# tacacs-server host

**Overview** Use this command to specify a remote TACACS+ server host for authentication, authorization and accounting, and to set the shared secret key to use with the TACACS+ server. The parameters specified with this command override the corresponding global parameters for TACACS+ servers.

Use the **no** variant of this command to remove the specified server host as a TACACS+ authentication and authorization server.

**Syntax** `tacacs-server host {<host-name>|<ip-address>} [key  
[8]<key-string>]`  
`no tacacs-server host {<host-name>|<ip-address>}`

| Parameter    | Description  |
|--------------|--|
| <host-name>  | Server host name. The DNS name of the TACACS+ server host.   |
| <ip-address> | The IP address of the TACACS+ server host, in dotted decimal notation A.B.C.D.   |
| key          | Set shared secret key with TACACS+ servers.  |
| 8            | Specifies that you are entering a password as a string that has already been encrypted instead of entering a plain text password. The running config displays the new password as an encrypted string even if password encryption is turned off.   |
| <key-string> | Shared key string applied, a value in the range 1 to 64 characters. Specifies the shared secret authentication or encryption key for all TACACS+ communications between this device and the TACACS+ server. This key must match the encryption used on the TACACS+ server. This setting overrides the global setting of the <a href="#">tacacs-server key</a> command. If no key value is specified, the global value is used. |

**Default** No TACACS+ server is configured by default.

**Mode** Global Configuration

**Usage** A TACACS+ server host cannot be configured multiple times like a RADIUS server.

As many as four TACACS+ servers can be configured and consulted for login authentication, enable password authentication and accounting. The first server configured is regarded as the primary server and if the primary server fails then the backup servers are consulted in turn. A backup server is consulted if the primary server fails, not if a login authentication attempt is rejected. The reasons a server would fail are:

- it is not network reachable
- it is not currently TACACS+ capable

- it cannot communicate with the switch properly due to the switch and the server having different secret keys

**Examples** To add the server `tac1.company.com` as the TACACS+ server host, use the following commands:

```
awplus# configure terminal
awplus(config)# tacacs-server host tac1.company.com
```

To set the secret key to `secret` on the TACACS+ server `192.168.1.1`, use the following commands:

```
awplus# configure terminal
awplus(config)# tacacs-server host 192.168.1.1 key secret
```

To remove the TACACS+ server `tac1.company.com`, use the following commands:

```
awplus# configure terminal
awplus(config)# no tacacs-server host tac1.company.com
```

**Related  
Commands**

- [aaa accounting commands](#)
- [aaa authentication login](#)
- [tacacs-server key](#)
- [tacacs-server timeout](#)
- [show tacacs+](#)

# tacacs-server key

**Overview** This command sets a global secret key for TACACS+ authentication, authorization and accounting. The shared secret text string is used for TACACS+ communications between the switch and all TACACS+ servers.

Note that if no secret key is explicitly specified for a TACACS+ server with the [tacacs-server host](#) command, the global secret key will be used for the shared secret for the server.

Use the **no** variant of this command to remove the global secret key.

**Syntax** `tacacs-server key [8] <key-string>`  
`no tacacs-server key`

| Parameter    | Description   |
|--------------|---|
| 8            | Specifies a string in an encrypted format instead of plain text. The running config will display the new password as an encrypted string even if password encryption is turned off.   |
| <key-string> | Shared key string applied, a value in the range 1 to 64 characters. Specifies the shared secret authentication or encryption key for all TACACS+ communications between this device and all TACACS+ servers. This key must match the encryption used on the TACACS+ server. |

**Mode** Global Configuration

**Usage** Use this command to set the global secret key shared between this client and its TACACS+ servers. If no secret key is specified for a particular TACACS+ server using the [tacacs-server host](#) command, this global key is used.

**Examples** To set the global secret key to `secret` for TACACS+ server, use the following commands:

```
awplus# configure terminal
awplus(config)# tacacs-server key secret
```

To delete the global secret key for TACACS+ server, use the following commands:

```
awplus# configure terminal
awplus(config)# no tacacs-server key
```

**Related Commands** [tacacs-server host](#)  
[show tacacs+](#)

# tacacs-server timeout

**Overview** Use this command to specify the TACACS+ global timeout value. The timeout value is how long the device waits for a reply to a TACACS+ request before considering the server to be dead.

Note that this command configures the **timeout** parameter for TACACS+ servers globally.

The **no** variant of this command resets the transmit timeout to the default (5 seconds).

**Syntax** `tacacs-server timeout <seconds>`  
`no tacacs-server timeout`

| Parameter | Description  |
|-----------|--|
| <seconds> | TACACS+ server timeout in seconds, in the range 1 to 1000. |

**Default** The default timeout value is 5 seconds.

**Mode** Global Configuration

**Examples** To set the timeout value to 3 seconds, use the following commands:

```
awplus# configure terminal
awplus(config)# tacacs-server timeout 3
```

To reset the timeout period for TACACS+ servers to the default, use the following commands:

```
awplus# configure terminal
awplus(config)# no tacacs-server timeout
```

**Related Commands** [tacacs-server host](#)  
[show tacacs+](#)



# 35

# DHCP Snooping Commands

## Introduction

**Overview** This chapter gives detailed information about the commands used to configure DHCP snooping. For detailed descriptions of related ACL commands, see [IPv4 Hardware Access Control List \(ACL\) Commands](#). For more information about DHCP snooping, see the [DHCP Snooping Feature Overview and Configuration Guide](#).

DHCP snooping can operate on static link aggregators (e.g. sa2) and dynamic link aggregators (e.g. po2), as well as on switch ports (e.g. port1.0.2).

- Command List**
- [“arp security”](#) on page 1359
  - [“arp security violation”](#) on page 1360
  - [“clear arp security statistics”](#) on page 1362
  - [“clear ip dhcp snooping binding”](#) on page 1363
  - [“clear ip dhcp snooping statistics”](#) on page 1364
  - [“debug arp security”](#) on page 1365
  - [“debug ip dhcp snooping”](#) on page 1366
  - [“ip dhcp snooping”](#) on page 1367
  - [“ip dhcp snooping agent-option”](#) on page 1368
  - [“ip dhcp snooping agent-option allow-untrusted”](#) on page 1369
  - [“ip dhcp snooping agent-option circuit-id vlantriplet”](#) on page 1370
  - [“ip dhcp snooping agent-option remote-id”](#) on page 1371
  - [“ip dhcp snooping binding”](#) on page 1372
  - [“ip dhcp snooping database”](#) on page 1373
  - [“ip dhcp snooping delete-by-client”](#) on page 1374
  - [“ip dhcp snooping delete-by-linkdown”](#) on page 1375
  - [“ip dhcp snooping max-bindings”](#) on page 1376

- [“ip dhcp snooping subscriber-id”](#) on page 1377
- [“ip dhcp snooping trust”](#) on page 1378
- [“ip dhcp snooping verify mac-address”](#) on page 1379
- [“ip dhcp snooping violation”](#) on page 1380
- [“ip source binding”](#) on page 1381
- [“service dhcp-snooping”](#) on page 1383
- [“show arp security”](#) on page 1385
- [“show arp security interface”](#) on page 1386
- [“show arp security statistics”](#) on page 1388
- [“show debugging arp security”](#) on page 1390
- [“show debugging ip dhcp snooping”](#) on page 1391
- [“show ip dhcp snooping”](#) on page 1392
- [“show ip dhcp snooping acl”](#) on page 1393
- [“show ip dhcp snooping agent-option”](#) on page 1396
- [“show ip dhcp snooping binding”](#) on page 1398
- [“show ip dhcp snooping interface”](#) on page 1400
- [“show ip dhcp snooping statistics”](#) on page 1402
- [“show ip source binding”](#) on page 1405

# arp security

**Overview** Use this command to enable ARP security on untrusted ports in the VLANs, so that the switch only responds to/forwards ARP packets if they have recognized IP and MAC source addresses.

Use the **no** variant of this command to disable ARP security on the VLANs.

**Syntax** `arp security`  
`no arp security`

**Default** Disabled

**Mode** Interface Configuration (VLANs)

**Usage** Enable ARP security to provide protection against ARP spoofing. DHCP snooping must also be enabled on the switch ([service dhcp-snooping](#) command), and on the VLANs ([ip dhcp snooping](#) command).

**Example** To enable ARP security on VLANs 2 to 4, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# arp security
```

**Related Commands** [arp security violation](#)  
[show arp security](#)  
[show arp security interface](#)  
[show arp security statistics](#)

# arp security violation

**Overview** Use this command to specify an additional action to perform if an ARP security violation is detected on the ports. ARP security must also be enabled ([arp security](#) command).

Use the **no** variant of this command to remove the specified action, or all actions. Traffic violating ARP security will be dropped, but no other action will be taken.

**Syntax** `arp security violation {log|trap|link-down} ...`  
`no arp security violation [log|trap|link-down] ...`

| Parameter | Description  |
|-----------|--|
| log       | Generate a log message. To display these messages, use the <a href="#">show log</a> command.   |
| trap      | Generate an SNMP notification (trap). To send SNMP notifications, SNMP must also be configured, and DHCP snooping notifications must be enabled using the <a href="#">snmp-server enable trap</a> command. Notifications are limited to one per second and to one per source MAC and violation reason. Additional violations within a second of a notification being sent will not result in further notifications. Default: disabled. |
| link-down | Shut down the port that received the packet. Default: disabled.  |

**Default** When the switch detects an ARP security violation, it drops the packet. By default, it does not perform any other violation actions.

**Mode** Interface Configuration (switch ports, static or dynamic aggregated links)

**Usage** When the switch detects an ARP security violation on an untrusted port in a VLAN that has ARP security enabled, it drops the packet. This command sets the switch to perform additional actions in response to ARP violations.

If a port has been shut down in response to a violation, to bring it back up again after any issues have been resolved, use the [shutdown](#) command.

**Example** To send SNMP notifications for ARP security violations on ports 1.0.1 to 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# snmp-server enable trap dhcpsnooping
awplus(config)# interface port1.0.1-port1.0.6
awplus(config-if)# arp security violation trap
```

**Related  
Commands**

- arp security
- show arp security interface
- show arp security statistics
- show log
- snmp-server enable trap

# clear arp security statistics

**Overview** Use this command to clear ARP security statistics for the specified ports, or for all ports.

**Syntax** `clear arp security statistics [interface <port-list>]`

| Parameter   | Description   |
|-------------|---|
| <port-list> | The ports to clear statistics for. If no ports are specified, statistics are cleared for all ports. The ports may be switch ports, or static or dynamic link aggregators. |

**Mode** Privileged Exec

**Example** To clear statistics for ARP security on interface port1.0.1, use the command:

```
awplus# clear arp security statistics interface port1.0.1
```

**Related Commands**

- [arp security violation](#)
- [show arp security](#)
- [show arp security statistics](#)

# clear ip dhcp snooping binding

**Overview** Use this command to remove one or more DHCP Snooping dynamic entries from the DHCP Snooping binding database. If no options are specified, all entries are removed from the database.

**CAUTION:** *If you remove entries from the database for current clients, they will lose IP connectivity until they request and receive a new DHCP lease. If you clear all entries, all clients connected to untrusted ports will lose connectivity.*

**Syntax** `clear ip dhcp snooping binding [<ipaddr>] [interface <port-list>] [vlan <vid-list>]`

| Parameter   | Description  |
|-------------|--|
| <ipaddr>    | Remove the entry for this client IP address.   |
| <port-list> | Remove all entries for these ports. The port list may contain switch ports, and static or dynamic link aggregators (channel groups). |
| <vid-list>  | Remove all entries associated with these VLANs.  |

**Mode** Privileged Exec

**Usage** This command removes dynamic entries from the database. Note that dynamic entries can also be deleted by using the **no** variant of the [ip dhcp snooping binding](#) command.

Dynamic entries can individually restored by using the [ip dhcp snooping binding](#) command.

To remove static entries, use the **no** variant of the [ip source binding](#) command.

**Example** To remove a dynamic lease entry from the DHCP snooping database for a client with the IP address 192.168.1.2, use the command:

```
awplus# clear ip dhcp snooping binding 192.168.1.2
```

**Related Commands** [ip dhcp snooping binding](#)  
[ip source binding](#)  
[show ip dhcp snooping binding](#)

# clear ip dhcp snooping statistics

**Overview** Use this command to clear DHCP snooping statistics for the specified ports, or for all ports.

**Syntax** `clear ip dhcp snooping statistics [interface <port-list>]`

| Parameter   | Description  |
|-------------|--|
| <port-list> | The ports to clear statistics for. If no ports are specified, statistics are cleared for all ports. The port list can contain switch ports, or static or dynamic link aggregators. |

**Mode** Privileged Exec

**Example** To clear statistics for the DHCP snooping on interface port1.0.1, use the command:

```
awplus# clear ip dhcp snooping statistics interface port1.0.1
```

**Related Commands**

- [clear arp security statistics](#)
- [show ip dhcp snooping](#)
- [show ip dhcp snooping statistics](#)



# debug arp security

**Overview** Use this command to enable ARP security debugging.  
Use the **no** variant of this command to disable debugging for ARP security.

**Syntax** debug arp security  
no debug arp security

**Default** Disabled

**Mode** Privileged Exec

**Example** To enable ARP security debugging, use the commands:

```
awplus# debug arp security
```

**Related Commands** [show debugging arp security](#)  
[show log](#)  
[terminal monitor](#)

# debug ip dhcp snooping

**Overview** Use this command to enable the specified types of debugging for DHCP snooping. Use the **no** variant of this command to disable the specified types of debugging.

**Syntax** `debug ip dhcp snooping {all|acl|db|packet [detail]}`  
`no debug ip dhcp snooping {all|acl|db|packet [detail]}`

| Parameter | Description  |
|-----------|--|
| all       | All DHCP snooping debug.   |
| acl       | DHCP snooping access list debug.   |
| db        | DHCP snooping binding database debug.  |
| packet    | DHCP snooping packet debug. For the <b>no</b> variant of this command, this option also disables detailed packet debug, if it was enabled. |
| detail    | Detailed packet debug.   |

**Default** Disabled

**Mode** Privileged Exec

**Example** To enable access list debugging for DHCP snooping, use the commands:

```
awplus# debug ip dhcp snooping acl
```

**Related Commands** [debug arp security](#)  
[show debugging ip dhcp snooping](#)  
[show log](#)  
[terminal monitor](#)

# ip dhcp snooping

**Overview** Use this command to enable DHCP snooping on one or more VLANs.  
Use the **no** variant of this command to disable DHCP snooping on the VLANs.

**Syntax** `ip dhcp snooping`  
`no ip dhcp snooping`

**Default** DHCP snooping is disabled on VLANs by default.

**Mode** Interface Configuration (VLANs)

**Usage** For DHCP snooping to operate on a VLAN, it must:

- be enabled on the particular VLAN by using this command
- be enabled globally on the switch by using the [service dhcp-snooping](#) command
- have at least one port connected to a DHCP server configured as a trusted port by using the [ip dhcp snooping trust](#) command

Any ACLs on a port that permit traffic matching DHCP snooping entries and block other traffic, will block all traffic if DHCP snooping is disabled on the port. If you disable DHCP snooping on particular VLANs using this command, you must also remove any DHCP snooping ACLs from the ports to maintain connectivity (no [access-group](#) command).

**Examples** To enable DHCP snooping on VLANs 2 to 4, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# ip dhcp snooping
```

To disable DHCP snooping on the switch, use the command:

```
awplus# configure terminal
awplus(config)# interface vlan2-vlan4
awplus(config-if)# no ip dhcp snooping
```

**Related Commands** [ip dhcp snooping trust](#)  
[service dhcp-snooping](#)  
[show ip dhcp snooping](#)

# ip dhcp snooping agent-option

**Overview** Use this command to enable DHCP Relay Agent Option 82 information insertion on the switch. When this is enabled, the switch:

- inserts DHCP Relay Agent Option 82 information into DHCP packets that it receives on untrusted ports
- removes DHCP Relay Agent Option 82 information from DHCP packets that it sends to untrusted ports.

Use the **no** variant of this command to disable DHCP Relay Agent Option 82 insertion.

**Syntax** `ip dhcp snooping agent-option`  
`no ip dhcp snooping agent-option`

**Default** DHCP Relay Agent Option 82 insertion is enabled by default when DHCP snooping is enabled.

**Mode** Global Configuration

**Usage** DHCP snooping must also be enabled on the switch ([service dhcp-snooping](#) command), and on the VLANs ([ip dhcp snooping](#) command).

If a subscriber ID is configured for the port ([ip dhcp snooping subscriber-id](#) command), the switch includes this in the DHCP Relay Agent Option 82 information it inserts into DHCP packets received on the port.

**Example** To disable DHCP Relay Agent Option 82 on the switch, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp snooping agent-option
```

**Related Commands** [ip dhcp snooping](#)  
[ip dhcp snooping agent-option allow-untrusted](#)  
[ip dhcp snooping subscriber-id](#)  
[service dhcp-snooping](#)  
[show ip dhcp snooping](#)

# ip dhcp snooping agent-option allow-untrusted

**Overview** Use this command to enable DHCP Relay Agent Option 82 information reception on untrusted ports. When this is enabled, the switch accepts incoming DHCP packets that contain DHCP Relay Agent Option 82 information on untrusted ports. Use the **no** variant of this command to disable DHCP Relay Agent Option 82 information reception on untrusted ports.

**Syntax** `ip dhcp snooping agent-option allow-untrusted`  
`no ip dhcp snooping agent-option allow-untrusted`

**Default** Disabled

**Mode** Global Configuration

**Usage** If the switch is connected via untrusted ports to edge switches that insert DHCP Relay Agent Option 82 information into DHCP packets, you may need to allow these DHCP packets through the untrusted ports, by using this command. When this is disabled (default), the switch treats incoming DHCP packets on untrusted ports that contain DHCP Relay Agent Option 82 information as DHCP snooping violations: it drops them and applies any violation action specified by the [ip dhcp snooping violation](#) command. The switch stores statistics for packets dropped; to display these statistics, use the [show ip dhcp snooping statistics](#) command.

**Example** To enable DHCP snooping Option 82 information reception on untrusted ports, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp snooping agent-option allow-untrusted
```

**Related Commands** [ip dhcp snooping agent-option](#)  
[ip dhcp snooping violation](#)  
[show ip dhcp snooping](#)  
[show ip dhcp snooping statistics](#)

# ip dhcp snooping agent-option circuit-id vlantriplet

**Overview** Use this command to specify the Circuit ID sub-option of the DHCP Relay Agent Option 82 field as the VLAN ID and port number. The Circuit ID specifies the switch port and VLAN ID that the client-originated DHCP packet was received on.

Use the **no** variant of this command to set the Circuit ID to the default, the VLAN ID and Ifindex (interface number).

**Syntax** `ip dhcp snooping agent-option circuit-id vlantriplet`  
`no ip dhcp snooping agent-option circuit-id`

**Default** By default, the Circuit ID is the VLAN ID and Ifindex (interface number).

**Mode** Interface Configuration for a VLAN interface.

**Usage** The Circuit ID sub-option is included in the DHCP Relay Agent Option 82 field of forwarded client DHCP packets:

- DHCP snooping Option 82 information insertion is enabled ([ip dhcp snooping agent-option](#) command; enabled by default), and
- DHCP snooping is enabled on the switch ([service dhcp-snooping](#)) and on the VLAN to which the port belongs ([ip dhcp snooping](#))

**Examples** To set the Circuit ID to `vlantriplet` for client DHCP packets received on `vlan1`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# ip dhcp snooping agent-option circuit-id
vlantriplet
```

To return the Circuit ID format to the default for `vlan1`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# no ip dhcp snooping agent-option circuit-id
```

**Related Commands** [ip dhcp snooping agent-option](#)  
[ip dhcp snooping agent-option remote-id](#)  
[show ip dhcp snooping](#)  
[show ip dhcp snooping agent-option](#)

# ip dhcp snooping agent-option remote-id

**Overview** Use this command to specify the Remote ID sub-option of the DHCP Relay Agent Option 82 field. The Remote ID identifies the device that inserted the Option 82 information. If a Remote ID is not specified, the Remote ID sub-option is set to the switch's MAC address.

Use the **no** variant of this command to set the Remote ID to the default, the switch's MAC address.

**Syntax** `ip dhcp snooping agent-option remote-id <remote-id>`  
`no ip dhcp snooping agent-option remote-id`

| Parameter                      | Description  |
|--------------------------------|--|
| <code>&lt;remote-id&gt;</code> | An alphanumeric (ASCII) string, 1 to 63 characters in length. If the Remote ID contains spaces, it must be enclosed in double quotes. Wildcards are not allowed. |

**Default** The Remote ID is set to the switch's MAC address by default.

**Mode** Interface Configuration for a VLAN interface.

**Usage** The Remote ID sub-option is included in the DHCP Relay Agent Option 82 field of forwarded client DHCP packets:

- DHCP snooping Option 82 information insertion is enabled ([ip dhcp snooping agent-option](#) command; enabled by default), and
- DHCP snooping is enabled on the switch ([service dhcp-snooping](#)) and on the VLAN to which the port belongs ([ip dhcp snooping](#))

**Examples** To set the Remote ID to `myid` for client DHCP packets received on `vlan1`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# ip dhcp snooping agent-option remote-id myid
```

To return the Remote ID format to the default for `vlan1`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# no ip dhcp snooping agent-option remote-id
```

**Related Commands** [ip dhcp snooping agent-option](#)  
[ip dhcp snooping agent-option circuit-id vlantriplet](#)  
[show ip dhcp snooping](#)  
[show ip dhcp snooping agent-option](#)

# ip dhcp snooping binding

**Overview** Use this command to manually add a dynamic-like entry (with an expiry time) to the DHCP snooping database. Once added to the database, this entry is treated as a dynamic entry, and is stored in the DHCP snooping database backup file. This command is not stored in the switch's running configuration.

Use the **no** variant of this command to delete a dynamic entry for an IP address from the DHCP snooping database, or to delete all dynamic entries from the database.

**CAUTION:** *If you remove entries from the database for current clients, they will lose IP connectivity until they request and receive a new DHCP lease. If you clear all entries, all clients connected to untrusted ports will lose connectivity.*

**Syntax** `ip dhcp snooping binding <ipaddr> [<macaddr>] vlan <vid>  
interface <port> expiry <expiry-time>  
no ip dhcp snooping binding [<ipaddr>]`

| Parameter     | Description  |
|---------------|--|
| <ipaddr>      | Client's IP address.   |
| <macaddr>     | Client's MAC address in HHHH.HHHH.HHHH format.   |
| <vid>         | The VLAN ID for the entry, in the range 1 to 4094.   |
| <port>        | The port the client is connected to. The port can be a switch port, or a static or dynamic link aggregation (channel group). |
| <expiry-time> | The expiry time for the entry, in the range 5 to 2147483647 seconds.   |

**Mode** Privileged Exec

**Usage** Note that dynamic entries can also be deleted from the DHCP snooping database by using the [clear ip dhcp snooping binding](#) command.

To add or remove static entries from the database, use the [ip source binding](#) command.

**Example** To restore an entry in the DHCP snooping database for a DHCP client with the IP address 192.168.1.2, MAC address 0001.0002.0003, on port1.0.6 of vlan6, and with an expiry time of 1 hour, use the commands:

```
awplus# ip dhcp snooping binding 192.168.1.2 0001.0002.0003  
vlan 6 interface port1.0.6 expiry 3600
```

**Related Commands** [clear ip dhcp snooping binding](#)  
[ip source binding](#)  
[show ip dhcp snooping binding](#)



# ip dhcp snooping database

**Overview** Use this command to set the location of the file to which the dynamic entries in the DHCP snooping database are written. This file provides a backup for the DHCP snooping database.

Use the **no** variant of this command to set the database location back to the default, **nvs**.

**Syntax** `ip dhcp snooping database {nvs|flash|usb}`  
`no ip dhcp snooping database`

| Parameter | Description   |
|-----------|---|
| nvs       | The switch checks the database and writes the file to non-volatile storage (NVS) on the switch at 2 second intervals if it has changed.     |
| flash     | The switch checks the database and writes the file to Flash memory on the switch at 60 second intervals if it has changed.                  |
| usb       | The switch checks the database and writes the file to a USB storage device installed in the switch at 2 second intervals if it has changed. |

**Default** NVS

**Mode** Global Configuration

**Usage** In a stack, the backup file is automatically synchronized across all stack members to the location configured. If the backup file is stored on a USB storage device on the stack master, it is only synchronized across stack members that also have USB storage devices installed.

If the location of the backup file is changed by using this command, a new file is created in the new location, and the old version of the file remains in the old location. This can be removed if necessary (hidden file: **.dhcp.dsn.gz**).

**Example** To set the location of the DHCP snooping database to non-volatile storage on the switch, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp snooping database nvs
```

**Related Commands** [show ip dhcp snooping](#)

# ip dhcp snooping delete-by-client

**Overview** Use this command to set the switch to remove a dynamic entry from the DHCP snooping database when it receives a valid DHCP release message with matching IP address, VLAN ID, and client hardware address on an untrusted port, and to discard release messages that do not match an entry in the database.

Use the **no** variant of this command to set the switch to forward DHCP release messages received on untrusted ports without removing any entries from the database.

**Syntax** `ip dhcp snooping delete-by-client`  
`no ip dhcp snooping delete-by-client`

**Default** Enabled: by default, DHCP lease entries are deleted from the DHCP snooping database when matching DHCP release messages are received.

**Mode** Global Configuration

**Usage** DHCP clients send a release message when they no longer wish to use the IP address they have been allocated by a DHCP server. Use this command to enable DHCP snooping to use the information in these messages to remove entries from its database immediately. Use the **no** variant of this command to ignore these release messages. Lease entries corresponding to ignored DHCP release messages eventually time out when the lease expires.

**Examples** To set the switch to delete DHCP snooping lease entries from the DHCP snooping database when a matching release message is received, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp snooping delete-by-client
```

To set the switch to forward and ignore the content of any DHCP release messages it receives, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp snooping delete-by-client
```

**Related Commands** [show ip dhcp snooping](#)

# ip dhcp snooping delete-by-linkdown

**Overview** Use this command to set the switch to remove a dynamic entry from the DHCP snooping database when its port goes down. If the port is part of an aggregated link, the entries in the database are only deleted if all the ports in the aggregated link are down.

Use the **no** variant of this command to set the switch not to delete entries when ports go down.

**Syntax** `ip dhcp snooping delete-by-linkdown`  
`no ip dhcp snooping delete-by-linkdown`

**Default** Disabled: by default DHCP Snooping bindings are not deleted when an interface goes down.

**Mode** Global Configuration

**Usage** If this command is enabled in a stack, and the master goes down and is replaced by a new master, entries in the DHCP snooping database for ports on the master are removed, unless they are part of link aggregators that are still up.

**Examples** To set the switch to delete DHCP snooping lease entries from the DHCP snooping database when links go down, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp snooping delete-by-linkdown
```

To set the switch not to delete DHCP snooping lease entries from the DHCP snooping database when links go down, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp snooping delete-by-linkdown
```

**Related Commands** [show ip dhcp snooping](#)

# ip dhcp snooping max-bindings

**Overview** Use this command to set the maximum number of DHCP lease entries that can be stored in the DHCP snooping database for each of the ports. Once this limit has been reached, no further DHCP lease allocations made to devices on the port are stored in the database.

Use the **no** variant of this command to reset the maximum to the default, 1.

**Syntax** `ip dhcp snooping max-bindings <0-520>`  
`no ip dhcp snooping max-bindings`

| Parameter | Description   |
|-----------|---|
| <0-520>   | The maximum number of bindings that will be stored for the port in the DHCP snooping binding database. If 0 is specified, no entries will be stored in the database for the port. |

**Default** The default for maximum bindings is 1.

**Mode** Interface Configuration (port)

**Usage** The maximum number of leases cannot be changed for a port while there are DHCP snooping Access Control Lists (ACL) associated with the port. Before using this command, remove any DHCP snooping ACLs associated with the ports. To display ACLs used for DHCP snooping, use the [show ip dhcp snooping acl](#) command.

In general, the default (1) will work well on an edge port with a single directly connected DHCP client. If the port is on an aggregation switch that is connected to an edge switch with multiple DHCP clients connected through it, then use this command to increase the number of lease entries for the port.

If there are multiple VLANs configured on the port, the limit is shared between all the VLANs on this port. For example, the default only allows one lease to be stored for one VLAN. To allow connectivity for the other VLANs, use this command to increase the number of lease entries for the port.

**Example** To set the maximum number of bindings to be stored in the DHCP snooping database to 10 per port for ports 1.0.1 to 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1-port1.0.6
awplus(config-if)# ip dhcp snooping max-bindings 10
```

**Related Commands** [access-group](#)  
[show ip dhcp snooping acl](#)  
[show ip dhcp snooping interface](#)

# ip dhcp snooping subscriber-id

**Overview** Use this command to set a Subscriber ID for the ports.  
Use the **no** variant of this command to remove Subscriber IDs from the ports.

**Syntax** `ip dhcp snooping subscriber-id [<sub-id>]`  
`no ip dhcp snooping subscriber-id`

| Parameter | Description  |
|-----------|--|
| <sub-id>  | The Subscriber ID; an alphanumeric (ASCII) string 1 to 50 characters in length. If the Subscriber ID contains spaces, it must be enclosed in double quotes. Wildcards are not allowed. |

**Default** No Subscriber ID.

**Mode** Interface Configuration (port)

**Usage** The Subscriber ID sub-option is included in the DHCP Relay Agent Option 82 field of client DHCP packets forwarded from a port if:

- a Subscriber ID is specified for the port using this command, and
- DHCP snooping Option 82 information insertion is enabled ([ip dhcp snooping agent-option](#) command; enabled by default), and
- DHCP snooping is enabled on the switch ([service dhcp-snooping](#)) and on the VLAN to which the port belongs ([ip dhcp snooping](#))

**Examples** To set the Subscriber ID for port 1.0.3 to **room\_534**, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.3
awplus(config-if)# ip dhcp snooping subscriber-id room_534
```

To remove the Subscriber ID from port 1.0.3, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.3
awplus(config-if)# no ip dhcp snooping subscriber-id
```

**Related Commands** [ip dhcp snooping agent-option](#)  
[show ip dhcp snooping interface](#)

# ip dhcp snooping trust

**Overview** Use this command to set the ports to be DHCP snooping trusted ports.  
Use the **no** variant of this command to return the ports to their default as untrusted ports.

**Syntax** `ip dhcp snooping trust`  
`no ip dhcp snooping trust`

**Default** All ports are untrusted by default.

**Mode** Interface Configuration (port)

**Usage** Typically, ports connecting the switch to trusted elements in the network (towards the core) are set as trusted ports, while ports connecting untrusted network elements are set as untrusted. Configure ports connected to DHCP servers as trusted ports.

**Example** To set switch ports 1.0.1 and 1.0.2 to be trusted ports, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1-port1.0.2
awplus(config-if)# ip dhcp snooping trust
```

**Related Commands** [show ip dhcp snooping interface](#)

# ip dhcp snooping verify mac-address

**Overview** Use this command to verify that the source MAC address and client hardware address match in DHCP packets received on untrusted ports.

Use the **no** variant of this command to disable MAC address verification.

**Syntax** `ip dhcp snooping verify mac-address`  
`no ip dhcp snooping verify mac-address`

**Default** Enabled—source MAC addresses are verified by default.

**Mode** Global Configuration

**Usage** When MAC address verification is enabled, the switch treats DHCP packets with source MAC address and client hardware address that do not match as DHCP snooping violations: it drops them and applies any other violation action specified by the [ip dhcp snooping violation](#) command. To bring the port back up again after any issues have been resolved, use the [shutdown](#) command.

**Example** To disable MAC address verification on the switch, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp snooping verify mac-address
```

**Related Commands** [ip dhcp snooping violation](#)  
[show ip dhcp snooping](#)  
[show ip dhcp snooping statistics](#)

# ip dhcp snooping violation

**Overview** Use this command to specify the action the switch will take when it detects a DHCP snooping violation by a DHCP packet on the ports.

Use the **no** variant of this command to disable the specified violation actions, or all violation actions.

**Syntax** `ip dhcp snooping violation {log|trap|link-down} ...`  
`no ip dhcp snooping violation [{log|trap|link-down} ...]`

| Parameter | Description  |
|-----------|--|
| log       | Generate a log message. To display these messages, use the <a href="#">show log</a> command.<br>Default: disabled.   |
| trap      | Generate an SNMP notification (trap). To send SNMP notifications, SNMP must also be configured, and DHCP snooping notifications must be enabled using the <a href="#">snmp-server enable trap</a> command. Notifications are limited to one per second and to one per source MAC and violation reason.<br>Default: disabled. |
| link-down | Set the port status to link-down.<br>Default: disabled.  |

**Default** By default, DHCP packets that violate DHCP snooping are dropped, but no other violation action is taken.

**Mode** Interface Configuration (port)

**Usage** If a port has been shut down in response to a violation, to bring it back up again after any issues have been resolved, use the [shutdown](#) command.

IP packets dropped by DHCP snooping filters do not result in other DHCP snooping violation actions.

**Example** To set the switch to send an SNMP notification and set the link status to link-down if it detects a DHCP snooping violation on switch ports 1.0.1 to 1.0.4, use the commands:

```
awplus# configure terminal
awplus(config)# snmp-server enable trap dhcpsnooping
awplus(config)# interface port1.0.1-port1.0.4
awplus(config-if)# ip dhcp snooping violation trap link-down
```

**Related Commands** [show ip dhcp snooping interface](#)  
[show log](#)  
[snmp-server enable trap](#)



# ip source binding

**Overview** Use this command to add or replace a static entry in the DHCP snooping database. Use the **no** variant of this command to delete the specified static entry or all static entries from the database.

**Syntax** `ip source binding <ipaddr> [<macaddr>] vlan <vid> interface <port>`  
`no ip source binding [<ipaddr>]`

| Parameter | Description  |
|-----------|--|
| <ipaddr>  | Client's IP address. If there is already an entry in the DHCP snooping database for this IP address, then this command replaces it with the new entry. |
| <macaddr> | Client's MAC address in HHHH.HHHH.HHHH format.   |
| <vid>     | The VLAN ID associated with the entry.   |
| <port>    | The port the client is connected to.   |

**Mode** Global Configuration

**Usage** This command removes static entries from the database. To remove dynamic entries, use the [clear ip dhcp snooping binding](#) command or the **no** variant of the [ip dhcp snooping binding](#) command.

**Examples** To add a static entry to the DHCP snooping database for a client with the IP address 192.168.1.2, MAC address 0001.0002.0003, on port1.0.6 of vlan6, use the command:

```
awplus# configure terminal
awplus(config)# ip source binding 192.168.1.2 0001.0002.0003
vlan 6 interface port1.0.6
```

To remove the static entry for IP address 192.168.1.2 from the database, use the commands:

```
awplus# configure terminal
awplus(config)# no ip source binding 192.168.1.2
```

To remove all static entries from the database, use the commands:

```
awplus# configure terminal
awplus(config)# no ip source binding
```

**Related  
Commands**

- [clear ip dhcp snooping binding](#)
- [ip dhcp snooping binding](#)
- [show ip dhcp snooping binding](#)
- [show ip source binding](#)

# service dhcp-snooping

**Overview** Use this command to enable the DHCP snooping service globally on the switch. This must be enabled before other DHCP snooping configuration commands can be entered.

Use the **no** variant of this command to disable the DHCP snooping service on the switch. This removes all DHCP snooping configuration from the running configuration, except for any DHCP snooping maximum bindings settings ([ip dhcp snooping max-bindings](#) command), and any DHCP snooping-based Access Control Lists (ACLs), which are retained when the service is disabled.

**Syntax** `service dhcp-snooping`  
`no service dhcp-snooping`

**Default** DHCP snooping is disabled on the switch by default.

**Mode** Global Configuration

**Usage** For DHCP snooping to operate on a VLAN, it must be enabled on the switch by using this command, and also enabled on the particular VLAN by using the [ip dhcp snooping](#) command.

For DHCP snooping to operate on a VLAN, it must:

- be enabled globally on the switch by using this command
- be enabled on the particular VLAN by using the [ip dhcp snooping](#) command
- have at least one port connected to a DHCP server configured as a trusted port by using the [ip dhcp snooping trust](#) command

If you disable the DHCP snooping service by using the **no** variant of this command, all DHCP snooping configuration (including ARP security, but excluding maximum bindings and ACLs) is removed from the running configuration, and the DHCP snooping database is deleted from active memory. If you re-enable the service, the switch repopulates the DHCP snooping database from the dynamic lease entries in the database backup file (in NVS by default—see the [ip dhcp snooping database](#) command). The lease expiry times are updated.

The DHCP snooping service cannot be enabled on a switch that is configured with any of the following features, or vice versa:

- web authentication ([auth-web enable](#) command)
- roaming authentication ([auth roaming enable](#) command, [auth roaming disconnected](#) command)
- guest VLAN authentication ([auth guest-vlan](#) command).
- DHCP relay agent option ([ip dhcp-relay agent-option](#) command)

Any ACLs on a port that permit traffic matching DHCP snooping entries and block other traffic, will block all traffic if DHCP snooping is disabled on the port. If you disable DHCP snooping on the switch using this command, you must also remove

any DHCP snooping ACLs from the ports to maintain connectivity (no [access-group](#) command).

**Examples** To enable DHCP snooping on the switch, use the command:

```
awplus# configure terminal
awplus(config)# service dhcp-snooping
```

To disable DHCP snooping on the switch, use the command:

```
awplus# configure terminal
awplus(config)# no service dhcp-snooping
```

**Related  
Commands**

[ip dhcp snooping](#)  
[ip dhcp snooping database](#)  
[ip dhcp snooping max-bindings](#)  
[show ip dhcp snooping](#)

# show arp security

**Overview** Use this command to display ARP security configuration.

**Syntax** show arp security

**Mode** User Exec and Privileged Exec

**Example** To display ARP security configuration on the switch use the command:

```
awplus# show arp security
```

**Table 1:** Example output from the **show arp security** command

```
awplus# show arp security

ARP Security Information:
  Total VLANs enabled ..... 2
  Total VLANs disabled ..... 11
  vlan1 ..... Disabled
  vlan2 ..... Disabled
  vlan3 ..... Disabled
  vlan4 ..... Disabled
  vlan5 ..... Disabled
  vlan100 ..... Disabled
  vlan101 ..... Disabled
  vlan102 ..... Disabled
  vlan103 ..... Disabled
  vlan104 ..... Disabled
  vlan105 ..... Enabled
  vlan1000 ..... Disabled
  vlan1001 ..... Enabled
```

**Table 2:** Parameters in the output from the **show arp security** command

| Parameter            | Description  |
|----------------------|--|
| Total VLANs enabled  | The number of VLANs that have ARP security enabled.  |
| Total VLANs disabled | The number of VLANs that have ARP security disabled. |

**Related Commands**

- [arp security](#)
- [show arp security interface](#)
- [show arp security statistics](#)

# show arp security interface

**Overview** Use this command to display ARP security configuration for the specified ports or all ports.

**Syntax** `show arp security interface [<port-list>]`

| Parameter   | Description  |
|-------------|--|
| <port-list> | The ports to display ARP security information about. The port list can include switch ports, and static or dynamic aggregated links. |

**Mode** User Exec and Privileged Exec

**Example** To display ARP security configuration for ports, use the command:

```
awplus# show arp security interface
```

**Table 3:** Example output from the **show arp security interface** command

|  |          |
|--|----------|
| awplus#show arp security interface                             |          |
| Arp Security Port Status and Configuration:                    |          |
| Port: Provisioned ports marked with brackets, e.g. (portx.y.z) |          |
| KEY: LG = Log  |          |
| TR = Trap  |          |
| LD = Link down   |          |
| Port   | Action   |
| -----  |          |
| port1.0.1  | -- -- -- |
| port1.0.2  | -- -- -- |
| port1.0.3  | LG TR LD |
| port1.0.4  | LG -- -- |
| port1.0.5  | LG -- -- |
| port1.0.6  | LG TR -- |
| port1.0.7  | LG -- LD |
| ...  |          |

**Table 4:** Parameters in the output from the **show arp security interface** command

| Parameter     | Description  |
|---------------|--|
| Action        | The action the switch takes when it detects an ARP security violation on the port. |
| Port          | The port. Parentheses indicate that ports are configured for provisioning.         |
| LG, Log       | Generate a log message   |
| TR, Trap      | Generate an SNMP notification (trap).  |
| LD, Link down | Shut down the link.  |

**Related  
Commands**

[arp security violation](#)  
[show arp security](#)  
[show arp security statistics](#)  
[show log](#)  
[snmp-server enable trap](#)

# show arp security statistics

**Overview** Use this command to display ARP security statistics for the specified ports or all ports.

**Syntax** `show arp security statistics [detail] [interface <port-list>]`

| Parameter             | Description                                 |
|-----------------------|---|
| detail                | Display detailed statistics.                |
| interface <port-list> | Display statistics for the specified ports. |

**Mode** User Exec and Privileged Exec

**Example** To display the brief statistics for the ARP security, use the command:

```
awplus# show arp security statistics
```

**Table 5:** Example output from the **show arp security statistics** command

|  |               |                |
|--|---------------|----------------|
| awplus# show arp security statistics   |               |                |
| DHCP Snooping ARP Security Statistics: |               |                |
| Interface                              | In<br>Packets | In<br>Discards |
| -----                                  |               |                |
| port1.0.3                              | 20            | 20             |
| port1.0.4                              | 30            | 30             |
| port1.0.12                             | 120           | 0              |

**Table 6:** Parameters in the output from the **show arp security statistics** command

| Parameter   | Description   |
|-------------|---|
| Interface   | A port name. Parentheses indicate that ports are configured for provisioning.             |
| In Packets  | The total number of incoming ARP packets that are processed by DHCP Snooping ARP Security |
| In Discards | The total number of ARP packets that are dropped by DHCP Snooping ARP Security.           |



**Table 7:** Example output from the **show arp security statistics detail** command

```
awplus#show arp security statistics detail

DHCP Snooping ARP Security Statistics:
Interface ..... port1.0.3
  In Packets ..... 20
  In Discards ..... 20
    No Lease ..... 20
    Bad Vlan ..... 0
    Bad Port ..... 0
    Source Ip Not Allocated .... 0
Interface ..... port1.0.4
  In Packets ..... 30
  In Discards ..... 30
    No Lease ..... 30
    Bad Vlan ..... 0
    Bad Port ..... 0
    Source Ip Not Allocated .... 0
Interface ..... port1.0.12
  In Packets ..... 120
  In Discards ..... 0
    No Lease ..... 0
    Bad Vlan ..... 0
    Bad Port ..... 0
    Source Ip Not Allocated .... 0
```

**Related  
Commands**

- [arp security](#)
- [arp security violation](#)
- [clear arp security statistics](#)
- [show arp security](#)
- [show arp security interface](#)
- [show log](#)

# show debugging arp security

**Overview** Use this command to display the ARP security debugging configuration.

**Syntax** show debugging arp security

**Mode** User and Privileged Exec

**Example** To display the debugging settings for ARP security on the switch, use the command:

```
awplus# show debugging arp security
```

**Table 8:** Example output from the **show debugging arp security** command

```
awplus# show debugging arp security

ARP Security debugging status:
  ARP Security debugging is off
```

**Related  
Commands** [arp security violation](#)  
[debug arp security](#)

# show debugging ip dhcp snooping

**Overview** Use this command to display the DHCP snooping debugging configuration.

**Syntax** show debugging ip dhcp snooping

**Mode** User Exec and Privileged Exec

**Example** To display the DHCP snooping debugging configuration, use the command:

```
awplus# show debugging ip dhcp snooping
```

**Table 9:** Example output from the **show debugging ip dhcp snooping** command

```
awplus# show debugging ip dhcp snooping

DHCP snooping debugging status:
  DHCP snooping debugging is off
  DHCP snooping all debugging is off
  DHCP snooping acl debugging is off
  DHCP snooping binding DB debugging is off
  DHCP snooping packet debugging is off
  DHCP snooping detailed packet debugging is off
```

**Related Commands** [debug ip dhcp snooping](#)  
[show log](#)

# show ip dhcp snooping

**Overview** Use this command to display DHCP snooping global configuration on the switch.

**Syntax** `show ip dhcp snooping`

**Mode** User Exec and Privileged Exec

**Example** To display global DHCP snooping configuration on the switch, use the command:

```
awplus# show ip dhcp snooping
```

**Table 10:** Example output from the **show ip dhcp snooping** command

```
DHCP Snooping Information:
  DHCP Snooping service ..... Enabled

Option 82 insertion ..... Enabled

Option 82 on untrusted ports ..... Not allowed
  Binding delete by client ..... Disabled
  Binding delete by link down ..... Disabled
  Verify MAC address ..... Disabled
  SNMP DHCP Snooping trap ..... Disabled

DHCP Snooping database:
  Database location ..... nvs   Number of entries in
  database ..... 2

DHCP Snooping VLANs:
  Total VLANs enabled ..... 1
  Total VLANs disabled ..... 9
  vlan1 ..... Enabled
  vlan2 ..... Disabled
  vlan3 ..... Disabled
  vlan4 ..... Disabled
  vlan5 ..... Disabled
  vlan100 ..... Disabled
  vlan101 ..... Disabled
  vlan105 ..... Disabled
  vlan1000 ..... Disabled
  vlan1001 ..... Disabled
```

**Related Commands**

- [service dhcp-snooping](#)
- [show arp security](#)
- [show ip dhcp snooping acl](#)
- [show ip dhcp snooping agent-option](#)
- [show ip dhcp snooping binding](#)
- [show ip dhcp snooping interface](#)

# show ip dhcp snooping acl

**Overview** Use this command to display information about the Access Control Lists (ACL) that are using the DHCP snooping database.

**Syntax** `show ip dhcp snooping acl`  
`show ip dhcp snooping acl [detail|hardware] [interface`  
`<interface-list>]`

| Parameter        | Description                                  |
|------------------|--|
| detail           | Detailed DHCP Snooping ACL information.      |
| hardware         | DHCP Snooping hardware ACL information.      |
| interface        | ACL Interface information.                   |
| <interface-list> | The interfaces to display information about. |

**Mode** User Exec and Privileged Exec

**Example** To display DHCP snooping ACL information, use the command:

```
awplus# show ip dhcp snooping acl
```

**Table 11:** Example output from the **show ip dhcp snooping acl** command

| awplus#show ip dhcp snooping acl     |          |                  |                  |                           |
|--------------------------------------|----------|------------------|------------------|---------------------------|
| DHCP Snooping Based Filters Summary: |          |                  |                  |                           |
| Interface                            | Bindings | Maximum Bindings | Template Filters | Attached Hardware Filters |
| port1.0.1                            | 1        | 520              | 0                | 0                         |
| port1.0.2                            | 1        | 3                | 2                | 6                         |
| port1.0.3                            | 1        | 2                | 4                | 8                         |
| port1.0.4                            | 1        | 2                | 7                | 14                        |
| port1.0.5                            | 0        | 2                | 6                | 12                        |
| port1.0.6                            | 0        | 1                | 0                | 0                         |
| port1.0.7                            | 0        | 1                | 0                | 0                         |
| port1.0.8                            | 0        | 1                | 0                | 0                         |
| port1.0.9                            | 0        | 1                | 0                | 0                         |
| port1.0.10                           | 0        | 1                | 0                | 0                         |
| port1.0.11                           | 0        | 1                | 0                | 0                         |
| port1.0.12                           | 0        | 1                | 0                | 0                         |
| (port2.0.1 )                         | 0        | 520              | 0                | 0                         |
| (port2.0.2 )                         | 0        | 1                | 0                | 0                         |

To display DHCP snooping hardware ACL information, use the command:

```
awplus# show ip dhcp snooping acl hardware
```

**Table 12:** Example output from the **show ip dhcp snooping acl hardware** command

```
awplus#show ip dhcp snooping acl hardware
```

DHCP Snooping Based Filters in Hardware:

| Interface | Access-list(/ClassMap) | Source IP   | Source MAC     |
|-----------|------------------------|-------------|----------------|
| port1.0.2 | dhcpsn1                | 10.10.10.10 | aaaa.bbbb.cccc |
| port1.0.2 | dhcpsn1                | 20.20.20.20 | 0000.aaaa.bbbb |
| port1.0.2 | dhcpsn1                | 0.0.0.0     | 0000.0000.0000 |
| port1.0.2 | dhcpsn1                | 0.0.0.0     | 0000.0000.0000 |
| port1.0.2 | dhcpsn1                | 0.0.0.0     | 0000.0000.0000 |
| port1.0.2 | dhcpsn1                | 0.0.0.0     | 0000.0000.0000 |
| port1.0.3 | dhcpsn2/cmap1          | 30.30.30.30 | aaaa.bbbb.dddd |
| port1.0.3 | dhcpsn2/cmap1          | 40.40.40.40 | 0000.aaaa.cccc |
| port1.0.3 | dhcpsn2/cmap1          | 50.50.50.50 | 0000.aaaa.dddd |
| port1.0.3 | dhcpsn2/cmap1          | 60.60.60.60 | 0000.aaaa.eeee |
| port1.0.3 | dhcpsn2/cmap1          | 0.0.0.0     | 0000.0000.0000 |
| port1.0.3 | dhcpsn2/cmap1          | 0.0.0.0     | 0000.0000.0000 |
| port1.0.3 | dhcpsn2/cmap1          | 0.0.0.0     | 0000.0000.0000 |
| port1.0.3 | dhcpsn2/cmap1          | 0.0.0.0     | 0000.0000.0000 |
| port1.0.4 | dhcpsn3/cmap2          | 70.70.70.70 |                |
| port1.0.4 | dhcpsn3/cmap2          | 80.80.80.80 |                |
| port1.0.4 | dhcpsn2/cmap1          | 70.70.70.70 |                |
| port1.0.4 | dhcpsn2/cmap1          | 80.80.80.80 |                |
| port1.0.4 | dhcpsn1                | 70.70.70.70 |                |
| port1.0.4 | dhcpsn1                | 80.80.80.80 |                |

To display detailed DHCP snooping ACL information for port 1.0.4, use the command:

```
awplus# show ip dhcp snooping acl detail interface port1.0.4
```

**Table 13:** Example output from the **show ip dhcp snooping acl detail interface** command

```
awplus#show ip dhcp snooping acl detail interface port1.0.4

DHCP Snooping Based Filters Information:

port1.0.4 : Maximum Bindings ..... 2
port1.0.4 : Template filters ..... 7
port1.0.4 : Attached hardware filters .. 14
port1.0.4 : Current bindings ..... 1, 1 free
port1.0.4   Client 1 ..... 120.120.120.120
port1.0.4 : Templates: cheese (via class-map: cmap2)
port1.0.4 : 10 permit ip dhcpsnooping 100.0.0.0/8
port1.0.4 : Template: dhcpsn2 (via class-map: cmap1)
port1.0.4 : 10 permit ip dhcpsnooping any
port1.0.4 : 20 permit ip dhcpsnooping 10.0.0.0/8
port1.0.4 : 30 permit ip dhcpsnooping 20.0.0.0/8
port1.0.4 : 40 permit ip dhcpsnooping 30.0.0.0/8
port1.0.4 : Template: dhcpsn1 (via access-group)
port1.0.4 : 10 permit ip dhcpsnooping any mac dhcpsnooping abcd.0000.0000 00
00.ffff.ffff
port1.0.4 : 20 permit ip dhcpsnooping any
```

**Related**    [access-list hardware \(named\)](#)  
**Commands**    [show access-list \(IPv4 Hardware ACLs\)](#)

# show ip dhcp snooping agent-option

**Overview** Use this command to display DHCP snooping Option 82 information for all interfaces, a specific interface or a range of interfaces.

**Syntax** `show ip dhcp snooping agent-option [interface <interface-list>]`

| Parameter        | Description                              |
|------------------|--|
| interface        | Specify the interface.                   |
| <interface-list> | The name of the interface or interfaces. |

**Mode** User Exec and Privileged Exec

**Examples** To display DHCP snooping Option 82 information for all interfaces, use the command:

```
awplus# show ip dhcp snooping agent-option
```

To display DHCP snooping Option 82 information for vlan1, use the command:

```
awplus# show ip dhcp snooping agent-option interface vlan1
```

To display DHCP snooping Option 82 information for port1.0.1, use the command:

```
awplus# show ip dhcp snooping agent-option interface port1.0.1
```



**Output** Figure 35-1: Example output from the **show ip dhcp snooping agent-option** command

```
awplus#show ip dhcp snooping agent-option

DHCP Snooping Option 82 Configuration:

Key:      C Id = Circuit Id Format
          R Id = Remote Id
          S Id = Subscriber Id

Option 82 insertion ..... Enabled
Option 82 on untrusted ports ..... Not allowed

-----

vlan1      C Id = vlanifindex
           R Id = Access-Island-01-M1
vlan2      C Id = vlantriplet
           R Id = Access-Island-01-M1
vlan3      C Id = vlantriplet
           R Id = Access-Island-01-M3
vlan4      C Id = vlantriplet
           R Id = 0000.cd28.074c
vlan5      C Id = vlantriplet
           R Id = 0000.cd28.074c
vlan6      C Id = vlantriplet
           R Id = 0000.cd28.074c
port1.0.1  S Id =
port1.0.2  S Id =
port1.0.3  S Id = phone_1
port1.0.4  S Id =
port1.0.5  S Id = PC_1
port1.0.6  S Id = phone_2
```

**Related Commands**

- [ip dhcp snooping agent-option](#)
- [ip dhcp snooping agent-option circuit-id vlantriplet](#)
- [ip dhcp snooping agent-option remote-id](#)
- [show ip dhcp snooping](#)
- [show ip dhcp snooping interface](#)

# show ip dhcp snooping binding

**Overview** Use this command to display all dynamic and static entries in the DHCP snooping binding database.

**Syntax** `show ip dhcp snooping binding`

**Mode** User Exec and Privileged Exec

**Example** To display entries in the DHCP snooping database, use the command:

```
awplus# show ip dhcp snooping binding
```

**Table 14:** Example output from the **show ip dhcp snooping binding** command

| awplus# show ip dhcp snooping binding   |                |                      |      |       |                  |      |
|---|----------------|----------------------|------|-------|------------------|------|
| DHCP Snooping Bindings:                 |                |                      |      |       |                  |      |
| Client<br>IP Address                    | MAC<br>Address | Server<br>IP Address | VLAN | Port  | Expires<br>(sec) | Type |
| 1.2.3.4                                 | aaaa.bbbb.cccc | --                   | 7    | 1.0.6 | Infinite         | Stat |
| 1.2.3.6                                 | any            | --                   | 4077 | 1.0.6 | Infinite         | Stat |
| 1.3.4.5                                 | any            | --                   | 1    | sa1   | Infinite         | Stat |
| 111.111.100.101                         | 0000.0000.0001 | 111.112.1.1          | 1    | 1.0.6 | 4076             | Dyna |
| 111.111.101.108                         | 0000.0000.0108 | 111.112.1.1          | 1    | 1.0.6 | 4084             | Dyna |
| 111.111.101.109                         | 0000.0000.0109 | 111.112.1.1          | 1    | 1.0.6 | 4085             | Dyna |
| 111.211.100.101                         | --             | --                   | 1    | 1.0.2 | 2147483325       | Dyna |
| 111.211.100.109                         | 00b0.0000.0009 | 111.112.111.111      | 1    | 1.0.2 | 21               | Dyna |
| 111.211.101.101                         | 00b0.0000.0101 | 111.112.111.111      | 1    | 1.0.2 | 214              | Dyna |
| Total number of bindings in database: 9 |                |                      |      |       |                  |      |

**Table 15:** Parameters in the output from the **show ip dhcp snooping binding** command

| Parameter        | Description                                  |
|------------------|--|
| Client IPAddress | The IP address of the DHCP client.           |
| MAC Address      | The MAC address of the DHCP client.          |
| Server IP        | The IP address of the DHCP server.           |
| VLAN             | The VLAN associated with this entry.         |
| Port             | The port the client is connected to.         |
| Expires (sec)    | The time in seconds until the lease expires. |

**Table 15:** Parameters in the output from the **show ip dhcp snooping binding** command (cont.)

| Parameter                            | Description   |
|--------------------------------------|---|
| Type                                 | The source of the entry: <ul style="list-style-type: none"><li>• Dyna: dynamically entered by snooping DHCP traffic, configured by the <a href="#">ip dhcp snooping binding</a> command, or loaded from the database backup file.</li><li>• Stat: added statically by the <a href="#">ip source binding</a> command</li></ul> |
| Total number of bindings in database | The total number of dynamic and static lease entries in the DHCP snooping database.   |

**Related Commands**

- [ip dhcp snooping binding](#)
- [ip dhcp snooping max-bindings](#)
- [show ip source binding](#)

# show ip dhcp snooping interface

**Overview** Use this command to display information about DHCP snooping configuration and leases for the specified ports, or all ports.

**Syntax** `show ip dhcp snooping interface [<port-list>]`

| Parameter   | Description  |
|-------------|--|
| <port-list> | The ports to display DHCP snooping configuration information for. If no ports are specified, information for all ports is displayed. |

**Mode** User Exec and Privileged Exec

**Example** To display DHCP snooping information for all ports, use the command:

```
awplus# show ip dhcp snooping interface
```

**Table 16:** Example output from the **show ip dhcp snooping interface** command

| awplus#show ip dhcp snooping interface                         |           |             |            |          |                    |  |
|--|-----------|-------------|------------|----------|--------------------|--|
| DHCP Snooping Port Status and Configuration:                   |           |             |            |          |                    |  |
| Port: Provisioned ports marked with brackets, e.g. (portx.y.z) |           |             |            |          |                    |  |
| Action: LG = Log   |           |             |            |          |                    |  |
| TR = Trap  |           |             |            |          |                    |  |
| LD = Link down   |           |             |            |          |                    |  |
| Port   | Status    | Full Leases | Max Leases | Action   | Subscriber-ID      |  |
| port1.0.1  | Untrusted | 1           | 1          | LG -- -- |                    |  |
| port1.0.2  | Untrusted | 0           | 50         | LG TR LD | Building 1 Level 1 |  |
| port1.0.3  | Untrusted | 0           | 50         | LG -- -- |                    |  |
| port1.0.4  | Untrusted | 0           | 50         | LG -- -- | Building 1 Level 2 |  |
| port1.0.5  | Untrusted | 0           | 50         | LG -- LD | Building 2 Level 1 |  |
| port1.0.6  | Untrusted | 0           | 1          | LG -- -- |                    |  |
| port1.0.7  | Untrusted | 0           | 1          | LG -- -- |                    |  |
| port1.0.8  | Untrusted | 0           | 1          | LG -- -- |                    |  |
| port1.0.9  | Untrusted | 0           | 1          | -- TR -- |                    |  |
| port1.0.10   | Untrusted | 0           | 1          | -- -- LD |                    |  |
| port1.0.11   | Trusted   | 0           | 1          | -- -- -- |                    |  |
| port1.0.12   | Trusted   | 0           | 1          | -- -- -- |                    |  |

**Table 17:** Parameters in the output from the **show ip dhcp snooping interface** command

| Parameter     | Description  |
|---------------|--|
| Port          | The port interface name.   |
| Status        | The port status: untrusted (default) or trusted.   |
| Full Leases   | The number of entries in the DHCP snooping database for the port.  |
| Max Leases    | The maximum number of entries that can be stored in the database for the port.   |
| Action        | The DHCP snooping violation actions for the port.  |
| Subscriber ID | The subscriber ID for the port. If the subscriber ID is longer than 34 characters, only the first 34 characters are displayed. To display the whole subscriber ID, use the <a href="#">show running-config dhcp</a> command. |

**Related Commands**

- [show ip dhcp snooping](#)
- [show ip dhcp snooping statistics](#)
- [show running-config dhcp](#)

# show ip dhcp snooping statistics

**Overview** Use this command to display DHCP snooping statistics.

**Syntax** `show ip dhcp snooping statistics [detail] [interface <interface-list>]`

| Parameter                     | Description  |
|-------------------------------|--|
| detail                        | Display detailed statistics.   |
| interface<br><interface-list> | Display statistics for the specified interfaces. The interface list can contain switch ports, static or dynamic link aggregators (channel groups), or VLANs. |

**Mode** User Exec and Privileged Exec

**Example** To show the current DHCP snooping statistics for all interfaces, use the command:

```
awplus# show ip dhcp snooping statistics
```

**Table 18:** Example output from the **show ip dhcp snooping statistics** command

|  |                     |                      |               |                |
|--|---------------------|----------------------|---------------|----------------|
| awplus# show ip dhcp snooping statistics |                     |                      |               |                |
| DHCP Snooping Statistics:                |                     |                      |               |                |
| Interface                                | In BOOTP<br>Packets | In BOOTP<br>Requests | In<br>Replies | In<br>Discards |
| -----                                    |                     |                      |               |                |
| vlan1                                    | 444                 | 386                  | 58            | 223            |
| port1.0.1                                | 386                 | 386                  | 0             | 223            |
| port1.0.2                                | 0                   | 0                    | 0             | 0              |
| port1.0.3                                | 0                   | 0                    | 0             | 0              |
| port1.0.4                                | 0                   | 0                    | 0             | 0              |
| port1.0.5                                | 0                   | 0                    | 0             | 0              |
| port1.0.6                                | 58                  | 0                    | 58            | 0              |

**Table 19:** Example output from the **show ip dhcp snooping statistics detail** command

```
awplus# show ip dhcp snooping statistics detail

DHCP Snooping Statistics:
Interface ..... port1.0.1, All counters 0
Interface ..... port1.0.2, All counters 0
Interface ..... port1.0.3, All counters 0
Interface ..... port1.0.4
  In Packets ..... 50
    In BOOTP Requests ..... 25
    In BOOTP Replies ..... 25
  In Discards ..... 1
    Invalid BOOTP Information ..... 0
    Invalid DHCP ACK ..... 0
    Invalid DHCP Release or Decline ..... 0
    Invalid IP/UDP Header ..... 0
    Max Bindings Exceeded ..... 1

  Option 82 Insert Error ..... 0

  Option 82 Received Invalid ..... 0

  Option 82 Received On Untrusted Port ..... 0

  Option 82 Transmit On Untrusted Port ..... 0
    Reply Received On Untrusted Port ..... 0
    Source MAC/CHADDR Mismatch ..... 0
    Static Entry Already Exists ..... 0
Interface ..... port1.0.5, All counters 0
Interface ..... port1.0.6, All counters 0
```

**Table 20:** Parameters in the output from the **show ip dhcp snooping statistics** command

| Parameter                 | Description  |
|---------------------------|--|
| Interface                 | The interface name.  |
| In Packets                | The total number of incoming packets that are processed by DHCP Snooping.                    |
| In BOOTP Requests         | The total number of incoming BOOTP Requests.   |
| In BOOTP Replies          | The total number of incoming BOOTP Replies.  |
| In Discards               | The total number of incoming packets that have been discarded.                               |
| Invalid BOOTP Information | Packet contained invalid BOOTP information, such as an invalid BOOTP.OPCode.                 |
| Invalid DHCP ACK          | A DHCP ACK message was discarded, for reasons such as missing Server Option or Lease Option. |

**Table 20:** Parameters in the output from the **show ip dhcp snooping statistics** command (cont.)

| Parameter                            | Description   |
|--------------------------------------|---|
| Invalid DHCP Release or Decline      | A DHCP Release or Decline message was discarded, for reasons such as mismatch between received interface and current binding information. |
| Invalid IP/UDP Header                | A problem was detected in the IP or UDP header of the packet.   |
| Max Bindings Exceeded                | Accepting the packet would cause the maximum number of bindings on a port to be exceeded.   |
| Option 82 Insert Error               | An error occurred while trying to insert DHCP Relay Agent Option 82 information.  |
| Option 82 Received Invalid           | The DHCP Relay Agent Option 82 information received did not match the information inserted by DHCP Snooping.                              |
| Option 82 Received On Untrusted Port | A packet containing DHCP Relay Agent Option 82 information was received on an untrusted port.   |
| Option 82 Transmit On Untrusted Port | A packet containing DHCP Relay Agent Option 82 information was to be sent on an untrusted port.   |
| Reply Received On Untrusted Port     | A BOOTP reply was received on an untrusted port.  |
| Source MAC/CHADDR Mismatch           | The L2 Source MAC address of the packet did not match the client hardware address field (BOOTP.CHADDR).                                   |
| Static Entry Already Exists          | An entry could not be added as a static entry already exists.   |

**Related Commands**

- [clear ip dhcp snooping statistics](#)
- [ip dhcp snooping](#)
- [ip dhcp snooping violation](#)



# show ip source binding

**Overview** Use this command to display static entries in the DHCP snooping database. These are the entries that have been added by using the [ip source binding](#) command.

**Syntax** `show ip source binding`

**Mode** User Exec and Privileged Exec

**Example** To display static entries in the DHCP snooping database information, use the command:

```
awplus# show ip source binding
```

**Table 21:** Example output from the **show ip source binding** command

|                                |                |      |           |          |        |  |
|--------------------------------|----------------|------|-----------|----------|--------|--|
| awplus# show ip source binding |                |      |           |          |        |  |
| IP Source Bindings:            |                |      |           |          |        |  |
| Client                         | MAC            |      |           | Expires  |        |  |
| IP Address                     | Address        | VLAN | Port      | (sec)    | Type   |  |
| -----                          |                |      |           |          |        |  |
| 1.1.1.1                        | 0000.1111.2222 | 1    | port1.0.1 | Infinite | Static |  |

**Table 22:** Parameters in the output from the **show ip source binding** command

| Parameter         | Description  |
|-------------------|--|
| Client IP Address | The IP address of the DHCP client.   |
| MAC Address       | The MAC address of the DHCP client.  |
| VLAN              | The VLAN ID the packet is received on.   |
| Port              | The Layer 2 port name the packet is received on.   |
| Expires (sec)     | Always infinite for static bindings, or when the leave time in the DHCP message was 0xffffffff (infinite). |
| Type              | DHCP Snooping binding type: Static   |

**Related Commands** [ip source binding](#)  
[show ip dhcp snooping binding](#)

# 36

# OpenFlow Commands

## Introduction

**Overview** This chapter provides an alphabetical reference of commands used to configure *OpenFlow*.

The table below lists the OpenFlow commands and their applicable modes.

Figure 36-1: OpenFlow commands and applicable modes

| Mode                         | Command                             |
|------------------------------|-------------------------------------|
| User Exec/Privileged<br>Exec | <code>show openflow config</code>   |
|                              | <code>show openflow coverage</code> |
|                              | <code>show openflow flows</code>    |
|                              | <code>show openflow rules</code>    |
|                              | <code>show openflow status</code>   |
| Global Configuration         | <code>openflow controller</code>    |
|                              | <code>openflow native vlan</code>   |
|                              | <code>openflow version</code>       |
| Port Interface               | <code>openflow</code>               |

- Command List**
- “`openflow`” on page 1408
  - “`openflow controller`” on page 1409
  - “`openflow native vlan`” on page 1410
  - “`openflow version`” on page 1411
  - “`show openflow config`” on page 1412
  - “`show openflow coverage`” on page 1414
  - “`show openflow flows`” on page 1416

- [“show openflow rules”](#) on page 1417
- [“show openflow status”](#) on page 1419

# openflow

**Overview** Use this command to specify a port as a data plane port. The ingress and egress traffic on the data plane port become controlled by the OpenFlow Controller. A data plane port number is assigned to the port automatically.

Use the **no** variant of this command to cancel the setting of a port as a data plane port. After entering the **no** variant of this command, you must restart the switch.

**Syntax** openflow  
no openflow

**Default** All the ports are non-data plane ports by default.

**Mode** Port Interface mode

**Example** To specify port1.0.3 as a data plane port:

```
awplus# configure terminal
awplus(config)# interface port1.0.3
awplus(config-if)# openflow
```

**Related Commands** [show openflow config](#)

# openflow controller

**Overview** Use this command to specify the IPv4 address of the OpenFlow controller and the TCP port number. An OpenFlow switch forwards packets on the data plane ports based on the flow entries sent by the OpenFlow controller specified by this command.

You can specify one or more OpenFlow controllers to the switch.

Use the **no** variant of this command to delete one or more OpenFlow controllers specified to the switch.

**Syntax** `openflow controller <protocol> <controller_ip_address>  
<1-65535>`

| Parameter                                  | Description  |
|--|--|
| <code>&lt;protocol&gt;</code>              | The protocol type to communicate with the OpenFlow controller. The option is only TCP. |
| <code>&lt;controller_ip_address&gt;</code> | The IPv4 address of the OpenFlow controller  |
| <code>&lt;1-65535&gt;</code>               | The port number of TCP   |

**Default** No OpenFlow controller is configured by default.

**Mode** Global Configuration

**Example** To set the OpenFlow controller with the IPv4 address 10.1.1.1 and the TCP port number 6653:

```
awplus# configure terminal
awplus(config)# openflow controller tcp 10.1.1.1 6653
```

**Related Commands** [show openflow config](#)

# openflow native vlan

**Overview** Use this command to specify a VLAN as a native VLAN for the data plane ports. You must create a VLAN using the vlan database command before specifying the VLAN as a native VLAN.

Use the **no** variant of this command to change the native VLAN for the data plane ports back to the default VLAN 1.

**Syntax** openflow native vlan <1-4090>  
no openflow native vlan

| Parameter | Description                   |
|-----------|-------------------------------|
| <vlan_id> | VLAN ID in the range <1-4090> |

**Default** The native VLAN for the data plane ports is VLAN 1 by default.

**Mode** Global Configuration

**Example** To specify VLAN 100 as a native VLAN for the data plane ports:

```
awplus# configure terminal
awplus(config)# openflow native vlan 100
```

To change the native VLAN for the data plane ports back to the VLAN 1:

```
awplus# configure terminal
awplus(config)# no openflow native vlan
```

**Related Commands** [show openflow config](#)

# openflow version

**Overview** Use this command to change the supported OpenFlow version numbers on the switch. You can specify a list of version numbers.

Use the **no** variant of this command to change the version number of the OpenFlow protocol back to the default version 1.3.

**Syntax** `openflow version <version-list>`  
`no openflow version <version-list>`

| Parameter                         | Description  |
|-----------------------------------|--|
| <code>&lt;version-list&gt;</code> | Specifies a list of version numbers separated by a space. The version numbers are 1.0 and 1.3. |

**Default** The OpenFlow version is set to 1.3 by default.

**Mode** Global Configuration

**Example** To change the OpenFlow protocol version to 1.0 and 1.3:

```
awplus(config)# openflow version 1.0 1.3
```

To change the OpenFlow protocol version to the default 1.3:

```
awplus(config)# no openflow version
```

**Related Commands** [show openflow config](#)

# show openflow config

**Overview** Use this command to display the OpenFlow configuration database on the switch.

**Syntax** show openflow config

**Mode** User Exec/Privileged Exec

**Example** To show the contents of the OpenFlow configuration database on the switch:

```
awplus# show openflow config
```

**Output** Figure 36-2: Example output from **show openflow config**

```
awplus# show openflow config
fdf075ee-7485-4588-9885-1f0333df89a2
  Bridge "br0"
    Controller "tcp:192.168.1.2:6653"
      is_connected: true
    fail_mode: secure
    Port "port1.0.4"
      Interface "port1.0.4"
        type: system
        options: {ifindex="5004", mtu="1500",
native_vlan="4090"}
    Port "port1.0.3"
      Interface "port1.0.3"
        type: system
        options: {ifindex="5003", mtu="1500",
native_vlan="4090"}
    Port "br0"
      Interface "br0"
        type: internal
    Port "port1.0.1"
      Interface "port1.0.1"
        type: system
        options: {ifindex="5001", mtu="1500",
native_vlan="4090"}
    Port "port1.0.2"
      Interface "port1.0.2"
        type: system
        options: {ifindex="5002", mtu="1500",
native_vlan="4090"}
```

Table 36-1: Parameters in the output from **show openflow config**

| Parameter    | Description                       |
|--------------|-----------------------------------|
| First line   | The switch ID                     |
| Bridge "br0" | The configuration of Bridge "br0" |



Table 36-1: Parameters in the output from **show openflow config** (cont.)

| Parameter    | Description   |
|--------------|---|
| Controller   | The IPv4 address of the OpenFlow controller and TCP port number   |
| fail_mode    | The fail mode. When the fail mode is "secure," OpenFlow on the switch does not set up flows when the OpenFlow controller fails. |
| is_connected | Whether or not the OpenFlow controller is connected   |
| Port         | The port information  |
| Interface    | The interface of the port.  |
| type:        | The type of the port  |
| options:     | The options for the port  |

**Related  
Commands**

- [openflow controller](#)
- [openflow native vlan](#)
- [show openflow status](#)

# show openflow coverage

**Overview** Use this command to display the OpenFlow counters from the Open vSwitch kernel module.

**Syntax** show openflow coverage

**Mode** User Exec/Privileged Exec

**Usage** The information displayed by this command is for troubleshooting. Contact Allied Telesis Technical Support for assistance.

**Example** To show OpenFlow counters:

```
awplus# show openflow coverage
```

**Output** Figure 36-3: Example output from **show openflow coverage**

```
awplus# show openflow coverage
Event coverage, avg rate over last: 5 seconds, last minute, last hour,
hash=86bbd699:netlink_sent          0.0/sec      0.000/sec      0.0000/sec
total: 14
netlink_recv_jumbo      0.0/sec      0.000/sec      0.0000/sec  total: 4
netlink_received        0.0/sec      0.000/sec      0.0000/sec  total: 49
nln_changed             0.0/sec      0.000/sec      0.0000/sec  total: 18
vconn_sent              0.0/sec      0.000/sec      0.4703/sec  total: 1801
vconn_received          0.0/sec      0.000/sec      0.4594/sec  total: 1768
vconn_open              0.4/sec      0.267/sec      0.2372/sec  total: 876
util_xalloc             370.2/sec    354.183/sec    416.7711/sec total: 1590959
unixctl_replied         0.0/sec      0.017/sec      0.0028/sec  total: 10
unixctl_received        0.0/sec      0.017/sec      0.0028/sec  total: 10
stream_open             0.4/sec      0.267/sec      0.2372/sec  total: 877
pstream_open            0.0/sec      0.000/sec      0.0000/sec  total: 6
rconn_sent              0.0/sec      0.000/sec      0.4219/sec  total: 1606
rconn_queued            0.0/sec      0.000/sec      0.4219/sec  total: 1606
poll_zero_timeout       0.0/sec      0.033/sec      0.0875/sec  total: 362
poll_create_node        60.6/sec     55.967/sec     68.2844/sec total: 256721
txn_success              0.2/sec      0.200/sec      0.1953/sec  total: 734
txn_incomplete          0.2/sec      0.267/sec      0.2622/sec  total: 994
txn_unchanged           0.0/sec      0.000/sec      0.0019/sec  total: 34
netdev_get_stats         1.2/sec      1.200/sec      1.1850/sec  total: 4411
netdev_sent             0.0/sec      0.000/sec      0.1219/sec  total: 475
netdev_received         0.0/sec      0.000/sec      0.2608/sec  total: 1005
hmap_expand             10.0/sec     9.433/sec      11.0714/sec total: 42476
hmap_pathological        0.0/sec      0.000/sec      0.0000/sec  total: 58
hindex_expand           0.0/sec      0.000/sec      0.0006/sec  total: 3
miniflow_malloc          0.0/sec      0.000/sec      0.2611/sec  total: 1008
flow_extract            0.0/sec      0.000/sec      0.0006/sec  total: 5
```

|                           |         |           |            |             |
|---------------------------|---------|-----------|------------|-------------|
| dpif_flow_del             | 0.0/sec | 0.000/sec | 0.1342/sec | total: 516  |
| dpif_flow_put             | 0.0/sec | 0.000/sec | 0.0014/sec | total: 5    |
| dpif_flow_flush           | 0.0/sec | 0.000/sec | 0.0000/sec | total: 2    |
| dpif_port_add             | 0.0/sec | 0.000/sec | 0.0000/sec | total: 25   |
| cmap_shrink               | 0.0/sec | 0.000/sec | 0.2939/sec | total: 1157 |
| cmap_expand               | 0.0/sec | 0.000/sec | 0.0006/sec | total: 3    |
| ttp_rev_flow_table        | 0.0/sec | 0.000/sec | 0.1050/sec | total: 410  |
| ttp_rev_port_toggled      | 0.0/sec | 0.000/sec | 0.0000/sec | total: 2    |
| ttp_rev_reconfigure       | 0.0/sec | 0.000/sec | 0.0006/sec | total: 20   |
| xlate_actions             | 0.0/sec | 0.000/sec | 0.3969/sec | total: 1530 |
| revalidate_missed_dp_flow | 0.0/sec | 0.000/sec | 0.1356/sec | total: 521  |
| handler_duplicate_upcall  | 0.0/sec | 0.000/sec | 0.1258/sec | total: 483  |
| ofproto_update_port       | 0.0/sec | 0.000/sec | 0.0000/sec | total: 29   |
| ofproto_rcv_openflow      | 0.0/sec | 0.000/sec | 0.4111/sec | total: 1573 |
| ofproto_queue_req         | 0.0/sec | 0.000/sec | 0.0003/sec | total: 1    |
| ofproto_packet_out        | 0.0/sec | 0.000/sec | 0.0006/sec | total: 4    |
| ofproto_flush             | 0.0/sec | 0.000/sec | 0.0000/sec | total: 1    |
| bridge_reconfigure        | 0.0/sec | 0.000/sec | 0.0000/sec | total: 19   |
| 72 events never hit       |         |           |            |             |

Table 36-2: Parameters in the output from

| Parameter                     | Description   |
|-------------------------------|---|
| Event coverage                | The name of a coverage event  |
| avg rate over last: 5 seconds | The rate at which the event occurred for the last 5 seconds   |
| last minute                   | The rate at which the event occurred for the last one minute  |
| last hour                     | The rate at which the event occurred for the last one hour  |
| hash                          | The name of the internal hash on the counter  |
| total:                        | The total occurrence of the event.  |
| events never hit              | The number of coverage events that have never occurred. When the value is 0, this information is not displayed. |

**Related Commands** [show openflow status](#)  
[show openflow flows](#)

# show openflow flows

**Overview** Use this command to display the entries of the flow table on the switch.

**Syntax** show openflow flows

**Mode** User Exec/Privileged Exec

**Example** To show the entries of the flow table on the switch:

```
awplus# show openflow flows
```

**Output** Figure 36-4: Example output from **show openflow flows**

```
awplus# show openflow flows
recirc_id(0),in_port(4),eth(src=00:23:45:67:89:ab,dst=00:de:f0:12:
34:56),eth_type(0x0800),ipv4(frag=no), packets:2, bytes:692,
used:2.436s,
actions:1recirc_id(0),in_port(1),eth(src=00:23:45:67:89:ab/00:01:0
0:00:00:00,dst=00:de:f0:12:34:56),eth_type(0x0800),ipv4(frag=no),
packets:2, bytes:692, used:2.435s,
actions:4recirc_id(0),in_port(1),eth(src=00:23:45:67:89:ab/00:01:0
0:00:00:00,dst=00:de:f0:12:34:56),eth_type(0x0806), packets:0,
bytes:0, used:never,
actions:4recirc_id(0),in_port(4),eth(src=00:23:45:67:89:ab,dst=00:
de:f0:12:34:56),eth_type(0x0806), packets:0, bytes:0, used:never,
actions:1
```

Table 36-3: Parameters in the output from **show openflow flows**

| Parameter | Description  |
|-----------|--|
| recirc_id | The recirc ID  |
| in_port   | The port number of the OpenFlow port                 |
| eth       | The source and destination MAC address of the packet |
| eth_type  | The Ethernet type                                    |
| ipv4      | The information in the IPv4 header                   |
| packets   | The number of matched packets                        |
| bytes     | The number of matched bytes                          |
| actions   | A set of actions for the packets that match the key  |

**Related Commands** [show openflow coverage](#)  
[show openflow rules](#)

# show openflow rules

**Overview** Use this command to display the software flow table and rules set by the OpenFlow controller.

**Syntax** show openflow rules

**Mode** User Exec/Privileged Exec

**Example** To show the contents of the flow table on the switch:

```
awplus# show openflow rules
```

**Output** Figure 36-5: Example output from **show openflow rules**

```
awplus# show openflow rules
duration=14s, n_packets=0, n_bytes=0,
priority=399,in_port=1,dl_src=ec:cd:6d:c4:21:bd,actions=dropdurati
on=14s, n_packets=0, n_bytes=0,
priority=399,in_port=2,dl_src=ec:cd:6d:c4:21:bd,actions=dropdurati
on=14s, n_packets=0, n_bytes=0,
priority=399,in_port=3,dl_src=ec:cd:6d:c4:21:bd,actions=dropdurati
on=14s, n_packets=0, n_bytes=0,
priority=399,in_port=4,dl_src=ec:cd:6d:c4:21:bd,actions=dropdurati
on=14s, n_packets=0, n_bytes=0,
priority=299,in_port=1,dl_dst=00:00:00:00:00:00/01:00:00:00:00:00,
actions=goto_table:2duration=14s, n_packets=0, n_bytes=0,
priority=298,in_port=1,actions=goto_table:3duration=14s,
n_packets=0, n_bytes=0,
priority=99,arp,actions=CONTROLLER:65535duration=14s, n_packets=0,
n_bytes=0,
priority=99,udp,tp_dst=67,actions=CONTROLLER:65535duration=14s,
n_packets=0, n_bytes=0, priority=0,actions=droptable_id=1,
duration=14s, n_packets=0, n_bytes=0,
priority=99,dl_dst=00:00:00:00:00:00/01:00:00:00:00:00,actions=got
o_table:2table_id=1, duration=14s, n_packets=0, n_bytes=0,
priority=0,actions=droptable_id=2, duration=14s, n_packets=0,
n_bytes=0, priority=98,in_port=1,actions=droptable_id=2,
duration=14s, n_packets=0, n_bytes=0,
priority=97,actions=output:1table_id=2, duration=14s, n_packets=0,
n_bytes=0, priority=0,actions=droptable_id=3, duration=14s,
n_packets=0, n_bytes=0, priority=0,actions=droptable_id=254,
duration=85668s, n_packets=0, n_bytes=0,
priority=2,recirc_id=0,actions=droptable_id=254, duration=85668s,
n_packets=736, n_bytes=144050,
priority=0,reg0=0x1,actions=controller(reason=no_match)table_id=25
4, duration=85668s, n_packets=19, n_bytes=5668,
priority=0,reg0=0x2,actions=drop
```

Table 36-4: Parameters in the output from **show openflow rules**

| Parameter | Description   |
|-----------|---|
| duration  | The duration of the flow entry in seconds   |
| n_packets | The number of packets that match the flow entry   |
| n_bytes   | The number of bytes that match the flow entry   |
| priority  | The priority of the flow entry  |
| in_port   | The OpenFlow port number on which the packets are received  |
| dl_src    | The source address  |
| dl_dst    | The destination address   |
| actions   | A set of actions applied to a packet. The actions are: "drop", "goto_table", "pop_vlan", or "push_vlan" |
| table_id  | The table ID of the flow entry  |

**Related  
Commands**    [show openflow flows](#)  
                  [show openflow coverage](#)

# show openflow status

**Overview** Use this command to display the status of each data plane port and the OpenFlow protocol messages queried d by the OpenFlow controller.

**Syntax** show openflow status

**Mode** User Exec/Privileged Exec

**Example** To show the status for each data plane port and OpenFlow protocol messages:

```
awplus# show openflow status
```

**Output** Figure 36-6: Example output from **show openflow status**

```
awplus#show openflow status
  OFPT_FEATURES_REPLY (OF1.3) (xid=0x2): dpid:0000eccd6dc421bd
n_tables:254, n_buffers:256
capabilities: FLOW_STATS TABLE_STATS PORT_STATS GROUP_STATS
QUEUE_STATS
OFPT_PORT_DESC reply (OF1.3) (xid=0x3):
  1(port1.0.1): addr:ec:cd:6d:c4:21:bd
    config:      0
    state:       0
    current:     1GB-FD
    supported:   1GB-FD
    speed: 1000 Mbps now, 1000 Mbps max
  2(port1.0.2): addr:ec:cd:6d:c4:21:bd
    config:      0
    state:       LINK_DOWN
    current:     AUTO_NEG
    supported:   1GB-FD
    speed: 0 Mbps now, 1000 Mbps max
  3(port1.0.3): addr:ec:cd:6d:c4:21:bd
    config:      0
    state:       0
    current:     1GB-FD
    supported:   1GB-FD
    speed: 1000 Mbps now, 1000 Mbps max
  4(port1.0.4): addr:ec:cd:6d:c4:21:bd
    config:      0
    state:       LINK_DOWN
    current:     AUTO_NEG
    supported:   1GB-FD
    speed: 0 Mbps now, 1000 Mbps max
  OFPT_GET_CONFIG_REPLY (OF1.3) (xid=0x5): frags=normal
miss_send_len=0
```

Table 36-5: Parameters in the output from **show openflow status**

| Parameter                                    | Description  |
|--|--|
| Parameter 2                                  | Description of parameter 2.  |
| OFPT_FEATURES_REPLY (OF1.3)<br>(xid=0x2):    | Indicates that the following information is from the OpenFlow version 1.3 Feature reply.   |
| dpid:  | The datapath ID  |
| n_tables                                     | The number of tables supported by the switch   |
| n_buffers                                    | The maximum number of packets that the switch can buffer when sending packets to the OpenFlow controller   |
| capabilities                                 | A list of the OpenFlow capabilities:: FLOW_STATS (flow statistics), TABLE_STATS (table statistics), PORT_STATS (port statistics), IP_REASM (IP fragments reassemble), QUEUE_STATS (queue statistics), and GROUP_STATS (group statistics) |
| OFPT_PORT_DESC replay (OF1.3)<br>(xid=0x3):  | Indicates that the following information is from the OpenFlow version 1.3 Port Description Reply.  |
| 1 (port1.0.1):<br>addr:ec:cd:6d:c4:<br>21:bd | The port number and Mac address.   |
| config:                                      | The port status: 0 (the port is up) or PORT_DOWN (the port is down.)   |
| state:                                       | The link status: 0 (the link is up) or LINK_DOWN (the link is down.)   |
| current:                                     | The current feature status.  |
| supported:                                   | A list of the supported features:: 1GB-FD, 10GB-FD, AUTO-NEG, etc.   |
| speed:                                       | The current port speed and maximum speed.  |
| OFPT_GET_CONFIG_REPLY (OF1.3)<br>(xid=0x5):  | Indicates that the switch responds to a configuration request by an OFPT_GET_CONFIG_REPLY message with the following information.  |
| frags:                                       | The action for the IP fragments: normal, dropped, or reassembled. Normal means that an attempt should be made to pass the fragments through the OpenFlow tables.   |
| miss_send_len=0:                             | The number of bytes of each packet that was sent to the OpenFlow controller when a flow table fails or reaches the controller  |



**Related  
Commands**    [show openflow flows](#)  
                  [show openflow rules](#)

# Part 6: Network Availability

# 37

# Virtual Chassis Stacking (VCStack™) Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for Virtual Chassis Stacking (VCStack™) commands.

For information on stacking, see [VCStack Feature Overview and Configuration Guide](#).

Also note the following stacking trigger commands that are documented in the Triggers chapter:

[type stack disabled-master](#) command

[type stack master-fail](#) command

[type stack member](#) command

[type stack link](#) command

In addition to the stacking commands shown in this chapter, stacking content also exists in the following commands:

[hostname](#) command

[reboot](#) command

[reload](#) command

[show cpu](#) command

[show cpu history](#) command

[show exception log](#) command

[show file systems](#) command

[show memory](#) command

[show memory history](#) command

[show process](#) command

[show system](#) command

**CAUTION:** Stack operation is only supported if **stack virtual-mac** is enabled. For more information refer to [stack virtual-mac](#) on page 1459

- Command List**
- ["clear counter stack"](#) on page 1425
  - ["debug stack"](#) on page 1426
  - ["reboot rolling"](#) on page 1427
  - ["reload rolling"](#) on page 1428
  - ["remote-command \(deleted\)"](#) on page 1429
  - ["remote-login"](#) on page 1430
  - ["show counter stack"](#) on page 1431
  - ["show debugging stack"](#) on page 1435
  - ["show running-config stack"](#) on page 1436
  - ["show provisioning \(stack\)"](#) on page 1437
  - ["show stack"](#) on page 1438
  - ["show stack detail"](#) on page 1440
  - ["show stack resiliencylink"](#) on page 1444
  - ["stack disabled-master-monitoring"](#) on page 1446
  - ["stack enable"](#) on page 1447
  - ["stack management subnet"](#) on page 1449
  - ["stack management vlan"](#) on page 1450
  - ["stack priority"](#) on page 1451
  - ["stack renumber"](#) on page 1452
  - ["stack renumber cascade"](#) on page 1453
  - ["stack resiliencylink"](#) on page 1455
  - ["stack software-auto-synchronize"](#) on page 1457
  - ["stack virtual-chassis-id"](#) on page 1458
  - ["stack virtual-mac"](#) on page 1459
  - ["switch provision \(stack\)"](#) on page 1460
  - ["switchport resiliencylink"](#) on page 1461
  - ["vlan mode stack-local-vlan"](#) on page 1462
  - ["undebg stack"](#) on page 1464

# clear counter stack

**Overview** This command clears all stack counters for all stack members.

**Syntax** `clear counter stack`

**Mode** Privileged Exec

**Example** To clear all stack counters:

```
awplus# clear counter stack
```

**Related  
Commands** [show counter stack](#)

# debug stack

**Overview** This command enables the stacking debugging facilities.

**Syntax** `debug stack [link|topology|trace]`  
`no debug stack [link|topology|trace]`

| Parameter | Description  |
|-----------|--|
| link      | Stacking neighbor discovery events on stack links. |
| topology  | Stacking topology discovery messages.              |
| trace     | Notable stacking events.                           |

**Default** Stack trace debugging is enabled.

**Mode** Privileged Exec and Global Configuration

**Usage** The command displays debug information about the stacked devices. If no parameter is specified, all the stack debugging information will be displayed, including link events, topology discovery messages and all notable stacking events. If link parameter is specified, only the link events debugging information will be displayed.

**Examples** To enable debugging, enter the following command on the stack master:

```
awplus# debug stack
```

To enable link debugging, enter the following command on the stack master:

```
awplus# debug stack link
```

To enable topology discovery debugging, enter the following command on the stack master:

```
awplus# debug stack topology
```

To enable stack trace debugging, enter the following command on the stack master:

```
awplus# debug stack trace
```

**Related Commands** [undebug stack](#)

# reboot rolling

**Overview** This command reboots a stack in a rolling sequence to minimize downtime.

The stack master is rebooted, causing the remaining stack members to failover and elect a new master. The rebooted unit remains separate from the remaining stack and boots up as a stand-alone unit. Once the rebooted unit has finished running its configuration and has brought its ports up, it reboots all the remaining stack members at once.

**Syntax** `reboot rolling`

**Mode** Privileged Exec

**Usage** If you are upgrading to a new software version, the new version must also support rolling reboot.

**NOTE:** When stacking is used with EPSR, the EPSR **failovertime** must be set to at least 5 seconds to avoid any broadcast storms during failover. Broadcast storms may occur if the switch cannot failover quickly enough before the EPSR **failovertime** expires. For further information about EPSR **failovertime**, see the [epsr](#) command.

**Examples** To rolling reboot the stack, use the following commands:

```
awplus# reboot rolling
```

```
Continue the rolling reboot of the stack? (y/n):
```

After running this command, the stack master will reboot immediately with the configuration file settings. The remaining stack members will then reboot once the master has finished re-configuring.

```
Continue the rolling reboot of the stack? (y/n):
```

```
awplus# y
```

**Related  
Commands** [boot system](#)  
[epsr](#)

# reload rolling

**Overview** This command performs the same function as the [reboot rolling](#) command.



# remote-command (deleted)

**Overview** This command has been deleted in Software Version 5.4.4-1.1 and later. Instead, please use the [remote-login](#) command and then run the command you need to run remotely.

# remote-login

**Overview** This command is used only on the master in order to log onto the CLI of another stack member. In most respects the result of this is similar to being logged into the stack master. Configuration commands are still applied to all stack members, but show commands, and commands that access the file system are executed locally.

The specific output obtained will vary greatly depending on the show command chosen.

**Syntax** `remote-login <stack-ID>`

| Parameter                     | Description                       |
|-------------------------------|-----------------------------------|
| <code>&lt;stack-ID&gt;</code> | Stack member number, from 1 to 8. |

**Mode** Privileged Exec

**Usage** Note that some commands such as **ping** or **telnet** are not available when the remote- login is used.

**Example** To log onto stack member 2, use the following command:

```
awplus# remote-login 2
```

To return to the command prompt on the master stack member, type **exit**.

# show counter stack

- Overview** Use this command to display stack related counter information.
- Syntax** `show counter stack`
- Default** All counters are reset when the stack member is rebooted.
- Mode** User Exec and Privileged Exec
- Usage** This displays the stacking counter information for every stack member.
- Examples** To display the stacking counter information about the whole stack, use the following command.

```
awplus# show counter stack
```

Table 37-1: Example output from the **show counter stack** command

|                                      |        |
|--------------------------------------|--------|
| Virtual Chassis Stacking counters    |        |
| Stack member 1:                      |        |
| Topology Event counters              |        |
| Units joined                         | .....1 |
| Units left                           | .....0 |
| Links up                             | .....1 |
| Links down                           | .....0 |
| ID conflict                          | .....0 |
| Master conflict                      | .....0 |
| Master failover                      | .....0 |
| Master elected                       | .....1 |
| Master discovered                    | .....0 |
| SW autoupgrades                      | .....0 |
| Stack Port 1 Topology Event counters |        |
| Link up                              | .....3 |
| Link down                            | .....2 |
| Nbr re-init                          | .....0 |
| Nbr incompatible                     | .....0 |
| Nbr 2way comms                       | .....1 |
| Nbr full comms                       | .....1 |
| Stack Port 2 Topology Event counters |        |
| Link up                              | .....0 |
| Link down                            | .....0 |
| Nbr re-init                          | .....0 |
| Nbr incompatible                     | .....0 |
| Nbr 2way comms                       | .....0 |
| Nbr full comms                       | .....0 |

Table 37-1: Example output from the **show counter stack** command (cont.)

|   |           |
|---|-----------|
| Topology Message counters   |           |
| Tx Total  | .....4    |
| Tx Hellos   | .....4    |
| Tx Topo DB  | .....0    |
| Tx Topo update  | .....0    |
| Tx Link event   | .....0    |
| Tx Reinitialise   | .....0    |
| Tx Port 1   | .....4    |
| Tx Port 2   | .....0    |
| Tx 1-hop transport  | .....4    |
| Tx Layer-2 transport  | .....0    |
| Rx Total  | .....1    |
| Rx Hellos   | .....1    |
| Rx Topo DB  | .....0    |
| Rx Topo update  | .....0    |
| Rx Link event   | .....0    |
| Rx Reinitialise   | .....0    |
| Rx Port 1   | .....1    |
| Rx Port 2   | .....0    |
| Rx 1-hop transport  | .....1    |
| Rx Layer-2 transport  | .....0    |
| Topology Error counters   |           |
| Version unsupported   | .....0    |
| Product unsupported   | .....0    |
| XEM unsupported   | .....0    |
| Too many units  | .....0    |
| Invalid messages  | .....0    |
| Resiliency Link counters  |           |
| Health status good  | .....1    |
| Health status bad   | .....0    |
| Tx  | .....0    |
| Tx Error  | .....0    |
| Rx  | .....3600 |
| Rx Error  | .....0    |
| Stack member 2:   |           |
| -- Output repeated for other stack members - details not shown -- |           |

Table 38: Parameters in the output of the **show counter stack** command

| Parameters              | Description   |
|-------------------------|---|
| Topology Event Counters |   |
| Units joined            | Number of times that the stack acquires a member.       |
| Units left              | Number of times that the stack loses a member.          |
| Links up                | Number of times that a stack link is up in the stack.   |
| Links down              | Number of times that a stack link is down in the stack. |

**Table 38:** Parameters in the output of the **show counter stack** command (cont.)

| Parameters                | Description   |
|---------------------------|---|
| ID conflict               | Number of times that stack-ID conflicts.                                  |
| Master conflict           | Number of times that stack master conflict occurs.                        |
| Master failover           | Number of times that stack master fails.                                  |
| Master elected            | Number of times that stack master is elected.                             |
| Master discovered         | Number of times that stack master is discovered.                          |
| SW autoupgrades           | Number of times that the software in the stack members are auto upgraded. |
| Stack port                |   |
| Link up                   | Number of times that this unit's physical stack link has come up.         |
| Link down                 | Number of times that this unit's physical stack link has come down.       |
| Nbr re-init               | Number of times that the neighbor is detected as having reinitialised.    |
| Nbr incompatible          | Number of times that the neighbor is detected as incompatible.            |
| Nbr 2way comms            | Number of times that the neighbor is in two way communication status.     |
| Nbr full comms            | Number of times that the neighbor is in full communication status.        |
| Topology message counters |   |
| Total                     | Total number of topology messages.  |
| Hellos                    | Number of hello messages.   |
| Topology DB               | Number of topology database messages.                                     |
| Topology update           | Number of topology database update messages.                              |
| Link event                | Number of link event messages.  |
| Reinitialise              | Number of reinitialise messages.  |
| 1-hop transport           | Number of 1-hop transport messages.                                       |
| Layer-2 transport         | Number of layer 2 transport messages.                                     |

**Table 38:** Parameters in the output of the **show counter stack** command (cont.)

| Parameters              | Description   |
|-------------------------|---|
| Link event              | Number of link event messages.  |
| Reinitialise            | Number of reinitialise messages.  |
| 1-hop transport         | Number of 1-hop transport messages.   |
| Layer-2 transport       | Number of Layer 2 transport messages.   |
| Topology error counters | Reasons why a neighboring unit could not join the stack.  |
| Version unsupported     | Number of stack software version unsupported errors.  |
| Product unsupported     | Number of product unsupported errors.   |
| XEM unsupported         | Number of XEM unsupported errors.   |
| Too many units          | Number of too many units errors.  |
| Invalid messages        | Number of invalid messages.   |
| Health status good      | The number of times that the resiliency link has successfully carried healthchecks following a failure at startup.  |
| Health status bad       | The number of times that the resiliency link healthcheck has timed out. A timeout occurs when a backup stack member detects a delay greater than two seconds between healthcheck messages received. |
| Rx                      | The total number of healthcheck messages that a stack member has received from the stack master.  |
| Rx Error                | The total number of invalid healthcheck messages that have been received from the master. This message is not applicable to the stack master.   |

**Related Commands** [show stack](#)  
[switch provision \(stack\)](#)

# show debugging stack

**Overview** This command shows which debugging modes are currently enabled for stacking.

**Syntax** `show debugging stack`

**Mode** User Exec and Privileged Exec

**Example** To display the stack debugging mode status, use the command:

```
awplus# show debugging stack
```

Figure 37-1: Example output from the **show debugging stack** command

```
Virtual Chassis Stacking debugging status:
VCS link debugging is on
VCS topology debugging is on
VCS trace debugging is on
```

**Related  
Commands** [debug stack](#)

# show running-config stack

**Overview** Use this command to display the running system information specific to the stack.

```
show running-config stack
```

**Mode** Privileged Exec and Global Configuration

**Example** To display the stacking running configuration information, use the command:

```
awplus# show running-config stack
```

**Output** Figure 37-2: Example output from the **show running-config stack** command

```
awplus#show running-config stack

stack virtual-mac
stack virtual-chassis-id 1982
stack management vlan 4000
stack management subnet 192.168.254.0
stack enable
stack 2 priority 20
```

**Related  
Commands** [show running-config](#)



# show provisioning (stack)

**Overview** Use this command to display the provisioning status of all installed or provisioned hardware. Provisioning is the preconfiguration necessary to accommodate future connection of hardware items such as a switch.

**Syntax** `show provisioning`

**Mode** User Exec and Privileged Exec

**Example** To show provisioning, use the following command:

```
awplus# show provisioning
```

**Output** Figure 37-3: Example output from the **show provisioning** command

```
Switch provisioning summary
information

ID  Board class Status
1.0 IX5-28      Hardware present
```

**Table 39:** Parameters in the output of the **show provisioning** command

| Parameter   | Description   |
|-------------|---|
| ID          | The unit bay-location of the hardware provision.  |
| Board class | The hardware type.  |
| Status      | The provisioned state: <ul style="list-style-type: none"><li>Hardware Present means that the hardware is currently installed in the stack.</li><li>Provisioned means that although the hardware is not currently installed, the stack is preconfigured ready to accept the hardware installation.</li></ul> |

# show stack

**Overview** Use this command to display summary information about current stack members.

**Syntax** `show stack`

**Mode** User Exec and Privileged Exec

**Usage** This command displays summary information about current stack members. See [show stack detail](#) to display detailed stack information.

**Example** To display summary information about the stack, use the command:

```
awplus# show stack
```

**Output** Figure 37-4: Example output from the **show stack** command

| Virtual Chassis Stacking summary information |            |                |                  |         |               |
|--|------------|----------------|------------------|---------|---------------|
| ID   | Pending ID | MAC address    | Priority         | Status  | Role          |
| 1  | -          | 0000.cd28.07e1 | 128              | Ready   | Active Master |
| 2  | -          | 0015.77c2.4d44 | 128              | Ready   | Backup Member |
| 3  | -          | 0015.77c9.7464 | 128              | Syncing | Backup Member |
| 4  | -          | -              | -                | -       | Provisioned   |
| Operational Status                           |            |                | Normal operation |         |               |
| Stack MAC address                            |            |                | 0000.cd28.07e1   |         |               |

**Table 40:** Parameters in the output from the **show stack** command

| Parameter   | Description               |
|-------------|---------------------------|
| ID          | Stack-ID.                 |
| MAC address | Stack member MAC address. |

**Table 40:** Parameters in the output from the **show stack** command (cont.)

| Parameter | Description  |
|-----------|--|
| Priority  | Stack member master election priority (between 0 and 255). Note that the lowest number has the highest priority.   |
| Role      | Stack member's role in the stack, this can be one of: <ul style="list-style-type: none"><li>• <b>Active Master</b></li><li>• <b>Disabled Master</b>— this is the temporary master when there is a communication break within the stack, but communication still exists across the resiliency link. In this state all switch ports within the stack are disabled by default, but a different configuration can be run by a "type stack disabled-master" trigger.</li><li>• <b>Backup Member</b>— a device other than the stack master.</li><li>• <b>Provisioned</b>— indicates that the stack position is provisionally configured, i.e. ready to accept a particular switch type into the stack.</li></ul> |

**Related Commands**

- [show stack detail](#)
- [show counter stack](#)
- [show stack resiliencylink](#)
- [stack disabled-master-monitoring](#)
- [stack resiliencylink](#)
- [stack software-auto-synchronize](#)

# show stack detail

**Overview** Use this command to display detailed information about current stack members.

**Syntax** show stack detail

**Mode** User Exec and Privileged Exec

**Usage** This command displays detailed information about current stack members. See [show stack](#) to display summary stack information only.

**Example** To display the detailed stacking information about the stack's overall status:

```
awplus# show stack detail
```

Figure 37-5: Example output from the **show stack detail** command

```
Virtual Chassis Stacking detailed information

Stack Status:
-----
Operational Status Normal operation
Management VLAN ID 4094
Management VLAN subnet address 192.168.255.0
Virtual Chassis ID 388 (0x184)
Virtual MAC address 0000.cd37.0184
Mixed mode Disabled
Disabled Master Monitoring Enabled

Stack member 1:
-----
ID 1
Pending ID -
MAC address 0000.cd28.070d
Last role change Wed May 7 22:31:58 2013
Product type IX5-28GPX
Role Active Master
Priority 1
Host name awplus
S/W version auto synchronizaion On
Resiliency link status Configured
Stack port 1.0.27 status learned neighbor 2
Stack port 1.0.28 status learned neighbor 3
```

```

Stack member 2:
-----
ID 2
Pending ID -
MAC address 0000.cd29.716d
Last role change Wed May 7 23:47:21 2013
Product type IX5-28GPX
Role Backup Member
Status Ready
Priority 2
Host name awplus-2
S/W version auto synchronization On
Resiliency link status Successful
Stack port 2.0.27 status learned neighbor 3
Stack port 2.0.28 status learned neighbor 1

Stack member 3:
-----
ID 3
Pending ID -
MAC address 0015.77c2.4d9d
Last role change Wed May 7 22:31:58 2013
Product type IX5-28GPX
Role Backup Member
Priority 3
Host name awplus-3
S/W version auto synchronizaion On
Resiliency link status Successful
Stack port 3.0.27 status learned neighbor 1
Stack port 3.0.28 status learned neighbor 2

```

**Table 41:** Parameters in the output from the **show stack detail** command

| Parameter                        | Description  |
|----------------------------------|--|
| S/W version auto synchronization | Whether the software-auto-synchronization feature is turned on or off. |
| Host name                        | The host name of the stack member.                                     |
| ID                               | Stack-ID.  |
| Last Role Change                 | The date and time the stack member last changed its role in the stack. |
| MAC address                      | Stack member MAC address.  |
| Management VLAN ID               | The VLAN ID currently used for stack management: the default is 4094.  |
| Management VLAN subnet address   | The current stacking management VLAN subnet address.                   |

**Table 41:** Parameters in the output from the **show stack detail** command (cont.)

| Parameter                  | Description  |
|----------------------------|--|
| Virtual Chassis ID         | The Virtual Chassis ID determines the last 12 bits of the Virtual MAC address: 0000.cd37.0xxx  |
| Virtual MAC Address        | The Virtual MAC address of the stack.  |
| Disabled Master Monitoring | The current Disabled Master Monitoring status. This can be: <ul style="list-style-type: none"> <li>• <b>Enabled</b></li> <li>• <b>Disabled</b></li> <li>• <b>Inactive</b></li> </ul>   |
| Operational Status         | The status of the stack. This can be: <ul style="list-style-type: none"> <li>• <b>Normal operation:</b><br/>If any other status is displayed, it may warrant further investigation.</li> <li>• <b>Stacking hardware disabled:</b><br/>Use the <b>stack enable</b> command to activate the stacking feature.</li> <li>• <b>Operating in failover mode:</b><br/>This stack member has become separated from the rest of the stack, or it failed to join the stack correctly.</li> <li>• <b>Standalone unit:</b><br/>Stacking is enabled, but no other stack members are present.</li> <li>• <b>Not all stack ports are up:</b><br/>One or more stacking ports may be down, or stacking discovery may not have detected the neighbor successfully.</li> </ul> |
| Stack Status               | The stack's overall status. Note that a warning is issued if the stack is not connected in a standard ring topology.   |
| Pending ID                 | The pending stack member ID. This can be changed by the <a href="#">stack renumber</a> command. If there is no pending ID, the “–” symbol will display.  |
| Stack port status          | The status of the stack port. This can be: <ul style="list-style-type: none"> <li>• <b>Down</b></li> <li>• <b>Neighbor incompatible</b></li> <li>• <b>Discovering neighbor</b></li> <li>• <b>Learned neighbor</b></li> </ul>   |
| Priority                   | Stack member master election priority (between 1 and 255)<br>Note that the lowest number has the highest priority.   |
| Product Type               | Stack member product type. For example, IX5- 28GPX.  |
| Provisioned                | Indicates that the stack position is provisionally configured, i.e. ready to accept a particular switch type into the stack.   |

**Table 41:** Parameters in the output from the **show stack detail** command (cont.)

| Parameter              | Description  |
|------------------------|--|
| Resiliency link status | <p>The current status of the resiliency link. The status can be one of:</p> <ul style="list-style-type: none"><li>• <b>Not configured</b> (Master or Member).</li><li>• <b>Configured</b> (Master only).</li><li>• <b>Successful:</b><br/>Successfully receiving healthchecks from the Active Master.</li><li>• <b>Failed</b> (Member only):<br/>Not receiving any healthchecks from the Active Master.</li><li>• <b>Stopped:</b><br/>The resiliency link is configured, but is inactive. This may occur in a Disabled Master stack, for example if the Disabled Master Monitoring feature is not used.</li></ul>        |
| Role                   | <p>Stack member's role in the stack, this can be one of:</p> <ul style="list-style-type: none"><li>• <b>Active Master.</b></li><li>• <b>Disabled Master</b>— The temporary master when there is a communication break within the stack, but communication still exists across the resiliency link. In this state all switch ports within the stack are disabled by default, but a different configuration can be run by a "<a href="#">type stack disabled-master</a>" trigger command.</li><li>• <b>Backup Member</b>— a device other than the stack master.</li><li>• <b>Discovering</b>— joining the stack.</li></ul> |
| Status                 | <p>Indicates how readily a stack member can take over as master if the current stack master were to fail.</p> <ul style="list-style-type: none"><li>• <b>Init</b> — the stack member is completing the startup initialization.</li><li>• <b>Syncing</b>— the stack member is synchronizing state information with the stack master following startup.</li><li>• <b>Ready</b>— the stack member is fully synchronized with the current master and is ready to take over immediately.</li></ul>  |

**Related Commands**

- [show stack](#)
- [show counter stack](#)
- [show stack resiliencylink](#)
- [stack disabled-master-monitoring](#)
- [stack resiliencylink](#)
- [stack software-auto-synchronize](#)

# show stack resiliencylink

**Overview** Use this command to display information about the current status of the resiliency-link across the members of the stack.

**Syntax** show stack resiliencylink

**Mode** User Exec and Privileged Exec

**Example** To display information about the current status of the resiliency-link across the stack members, use the command:

```
awplus# show stack resiliencylink
```

**Output** Figure 37-6: Example output from the **show stack resiliencylink** command

```
awplus(config)# show stack resiliencylink
Stack member 1:
-----
Status                Configured
Interface              vlan4093
Interface state        UP
Resiliency-link port(s) port1.2.11

Stack member 2:
-----
Status                Successful
Interface              vlan4093
Interface state        UP
Resiliency-link port(s) port2.2.11
```



**Table 42:** Parameters in the output of the **show stack resiliencylink** command

| Parameter               | Description   |
|-------------------------|---|
| Status                  | <p>The current status of the stack member's resiliency link. Can be one of:</p> <ul style="list-style-type: none"><li>• <b>Not configured</b> (Master or Member).</li><li>• <b>Configured</b> (Master only).</li><li>• <b>Successful:</b><br/>Successfully receiving healthchecks from the Active Master.</li><li>• <b>Failed</b> (Member only):<br/>Not receiving any healthchecks from the Active Master.</li><li>• <b>Stopped:</b><br/>The resiliency link is configured, but is inactive. This may occur in a Disabled Master stack, for example if the Disabled Master Monitoring feature is not used.</li></ul> |
| Interface               | The name of the VLAN interface that is connected to the resiliency link.  |
| Interface state         | The current status of the interface. Can be either up or down.  |
| Resiliency-link port(s) | The switch port(s) the resiliency link is connected to.   |

**Related Commands**

- [switch provision \(stack\)](#)
- [show stack](#)
- [stack resiliencylink](#)
- [switchport resiliencylink](#)

# stack disabled-master-monitoring

**Overview** This command enables the Disabled Master Monitoring (DMM) feature. If a stack member becomes a disabled master, the DMM feature will use the stack resiliency link to continue monitoring the health of the separated stack master.

Use the **no** variant of this command to disable the DMM feature.

**Syntax** `stack disabled-master-monitoring`  
`no stack disabled-master-monitoring`

**Default** By default, Disabled Master Monitoring is enabled. However, it only operates if there is a resiliency link.

**Mode** Global Configuration

**Usage** This command enables additional stack resiliency link functionality, which is used if a stack separation occurs. For DMM to operate, a resiliency link must also be configured ([stack resiliencylink](#) command). A stack separation could result in a stack member becoming a disabled master, which has the configuration as a normal stack master except that all its switchports are shutdown.

For more information about the disabled master state, see the [VCStack Feature Overview and Configuration Guide](#).

When the DMM feature is enabled, the disabled master will continue to monitor the health of the original stack master over the stack resiliency link connection. If the original stack master were to fail, when the DMM feature is enabled, then the disabled master will detect this and will automatically re-enable its switchports. This ensures that the stack will continue to pass network traffic, even if a catastrophic stack failure occurs.

For more information about the DMM feature when the stack member is a disabled master, see the [VCStack Feature Overview and Configuration Guide](#).

**Examples** To enable the DMM feature, use the following commands:

```
awplus# configure terminal
awplus(config)# stack disabled-master-monitoring
```

To disable the DMM feature, use the following commands:

```
awplus# configure terminal
awplus(config)# no stack disabled-master-monitoring
```

**Related Commands**

- [switch provision \(stack\)](#)
- [show stack](#)
- [stack resiliencylink](#)
- [type stack disabled-master](#)
- [type stack master-fail](#)

# stack enable

**Overview** This command is used on a stackable stand-alone switch to manually turn on the VcStack feature.

This command can also be run on a switch that has previously been removed from a stack (by using the **no** variant of this command) and return it to stacking operation.

The **no** variant of this command removes a selected stack member switch, as specified by the `<stack-ID>` selection in the command syntax, from the virtual chassis stack.

**Syntax** `stack enable`  
`no stack <stack-ID> enable`

| Parameter                     | Description                       |
|-------------------------------|-----------------------------------|
| <code>&lt;stack-ID&gt;</code> | Stack member number, from 1 to 8. |

**Default** The VcStack feature is enabled by default. The feature automatically starts when hardware is present.

**Mode** Global Configuration

**Usage** When `stack enable` is entered, the stack virtual-mac is automatically enabled. Using virtual-mac is required in order to minimize disruption on failover.

Running the **no** variant of this command will remove the selected stack member from the stack. At this point the removed member will act as a stand-alone master and will disable all of its ports. The switch can then only be accessed via its console port. If the command is run on the master then all current members of the stack will be disabled.

To return the switch to stack membership, first connect to the switch via its console port, then run the **stack enable** command. Then save the configuration and run the `reboot` command. This will reboot the switch and it will re-join the stack as an ordinary member.

If the switch was previously the stack master, you might want to return it to its original stack master status. To do this you must run the `reboot` command again. This time—because the switch is now a stack member—the command will reboot the whole stack and result in a new master election.

Note the following when using the **no stack <stack-ID> enable** command:

- If the specified `stack-ID` is not used by any current stack member, the command will be rejected.

**CAUTION:** *Disabling a stack member can significantly degrade the throughput capability of the stack.*

**Example** To turn on stacking on a stackable stand-alone unit, use the command:

```
awplus# configure terminal  
awplus(config)# stack enable
```

**Related  
Commands** [reboot](#)  
[license](#)

# stack management subnet

**Overview** This command configures the subnet address used by the stack management VLAN.

Use the **no** variant of this command to reset the stack's VLAN subnet management address back to the default address and mask (192.168.255.0/27).

**Syntax** `stack management subnet <ip-address>`  
`no stack management subnet`

| Parameter                       | Description   |
|---------------------------------|---|
| <code>&lt;ip-address&gt;</code> | The new subnet address for the stack management VLAN. |

**Default** The default stacking management VLAN subnet address is 192.168.255.0 with a subnet mask 255.255.255.224 or /27.

**Mode** Global Configuration

**Usage** This command configures the stack management VLAN subnet address.

The management VLAN will be used for high speed communication between stacked units via the stacking ports. Although this command enables you to change the IP address command, the subnet mask must always remain as shown.

The stack management IP subnet is solely used internally to the stacked devices, and cannot be reached external to the stack. You should only change the stack management VLAN subnet address if it causes a conflict within your network.

Note that several separate stacks can use the same default management VLAN subnet address even though their user ports may share the same external network. If the stack subnet address is changed, then the configuration for any new units must also be updated before they are inserted into the stack.

If the management VLAN subnet address is changed by this command, you can use the **no** variant of this command to reset it to its default.

**Example** To set the management VLAN subnet address to 192.168.255.144:

```
awplus# configure terminal
awplus(config)# stack management subnet 192.168.255.144
```

**Related Commands** [stack management vlan](#)

# stack management vlan

**Overview** Use this command to configure the stack management VLAN ID.

Use the **no** variant of this command to change the stack management VLAN ID back to the default (VLAN ID 4094).

**Syntax** `stack management vlan <2-4094>`  
`no stack management vlan`

| Parameter                   | Description               |
|-----------------------------|---------------------------|
| <code>&lt;2-4094&gt;</code> | Stack management VLAN ID. |

**Default** VLAN ID 4094

**Mode** Global Configuration

**Usage** The management VLAN is used for high speed communication between stacked units. This command enables you to change the ID of this VLAN.

The default stacking management VLAN ID is 4094, which is the last configurable VLAN ID in the switch.

The stack management VLAN is created and configured automatically so that the stack VLAN cannot be used in the stack's VLAN configuration commands (such as `awplus(config-vlan)# vlan <Stack management VLAN ID>`).

The management VLAN should only be changed if the default stack VLAN ID needs to be used in the stack's VLAN configuration.

If the management VLAN ID is changed by this command, you can use the **no** variant of this command to change it back to default value.

**CAUTION:** *If the management VLAN ID is changed by this command, you can use the no variant of this command to change it back to the default value.*

*When the command is entered, the updated management VLAN configuration will take effect once the stack is restarted.*

**Examples** To set the management VLAN to 4000, enter the following commands:

```
awplus# configure terminal
awplus(config)# stack management vlan 4000
```

To reset the management VLAN back to the default (4094), enter the following commands:

```
awplus# configure terminal
awplus(config)# no stack management vlan
```

**Related Commands** [stack management subnet](#)

# stack priority

**Overview** Use this command to change a specific stack member's master-election priority.

**Syntax** `stack <stack-ID> priority <0-255>`  
`no stack <stack-ID> priority`

| Parameter  | Description   |
|------------|---|
| <stack-ID> | Stack member number, from 1 to 8.   |
| priority   | The stack member's election priority value.   |
| <0-255>    | The stack member's new priority value. The lowest value is assigned the highest priority. The default is 128. |

**Mode** Global Configuration

**Usage** This command is used to change the value of a specific stack member's master-election priority. If the specified `stack-ID` is not used by any current stack member, the command will be rejected.

The election criteria selects the stack member with the lowest priority value to become the stack master. Where two stack members both have the same lowest priority value, then the stack member with the lowest MAC address will be elected as master.

**NOTE:** Assigning a new priority value will not immediately change the current stack master. In order to force a master re-election after the new priority value is assigned, use `reboot stack-member <master's ID>` to reboot the current stack master, a new stack master will then be elected based on the new priority values.

**Example** To change the priority of stack member 2 to be 3, use the command:

```
awplus# configure terminal
awplus(config)# stack 2 priority 3
```

**Validation Command** `show stack`

# stack renumber

**Overview** Use this command to renumber a specific stack member.

**Syntax** `stack <existing stack-ID> renumber <new stack-ID>`

| Parameter           | Description  |
|---------------------|--|
| <existing stack-ID> | We recommend that you use only numbers 1 to 2 for a 2 unit stack, or 1 to 4 for a four unit stack. |
| renumber            | Change the existing stack-ID.  |
| <new stack-ID>      | We recommend that you use only numbers 1 to 2 for a 2 unit stack, or 1 to 4 for a four unit stack. |

**Default** Every stack unit will initially try to use a stack-ID of 1.

**Mode** Global Configuration

**Usage** This command is used to change the ID of a specific stack member - primarily when exchanging stack members. The changes made by this command will not take effect until the switch is rebooted.

**NOTE:** *This command does not alter any of the stacks's existing configuration, apart from the stack-ID specified. For example, if stack member 2 were removed from the stack and a new stack unit is assigned the member 2 stack-ID, then the interface configuration that existed for the removed stack member 2 will be applied to the new stack member 2.*

The existing stack-ID must already be assigned to an existing stack member. To avoid duplicating IDs, a warning message will appear if you assign a new stack-ID that is currently assigned to another stack member. However, you can continue to renumber the stack-IDs and remove ID duplications. If you do not remove the duplications, then one of the devices will be forced to automatically renumber to an unused ID. Once you have removed any duplicate IDs, you can reboot the switch to implement your changes.

Note that the configured stack-ID is saved immediately on the renumbered member, and so is not reliant on using the copy running-config command for it to take effect.

**Example** To renumber stack 1 to stack 2, use the commands:

```
awplus# configure terminal
awplus(config)# stack 1 renumber 2
```

**Validation Command** `show stack`



# stack renumber cascade

**Overview** This command is used to renumber the members of a stack so that their IDs are ordered sequentially, relative to the member's physical position within the stack.

**CAUTION:** *Changing the stack numbering will upset the existing stack member configurations such as port settings. This command is intended for use when the stack is either initially commissioned, or has undergone a major reconfiguration. In this situation you run the stack renumber command (which will automatically reboot the switch), then configure the stack members to meet the new requirements.*

**Syntax** `stack <stack-ID> renumber cascade [<stack-ID>]`

| Parameter  | Description  |
|------------|--|
| <stack-ID> | The ID of the stack member to start renumbering from, from 1 to 8. |
| renumber   | Change the existing stack-ID.                                      |
| cascade    | Renumber the existing stack-ID in cascade order.                   |
| <stack-ID> | The new ID for the first member renumbered, from 1 to 8.           |

**Default** If no stack-ID is specified, the member will take the default ID of 1.

**Mode** Global Configuration

**Usage** This command is used to renumber the members of a stack so that their stack-IDs are ordered sequentially. This would normally be done either when the stack is initially configured or following a major reconfiguration.

The renumber will start on the specified stack member. If that stack-ID is not used by any of the existing stack member, the command will be rejected.

The starting stack member will be renumbered with the new stack-ID specified, or the default of member ID of 1. The stack-ID of the next physically will be the starting members ID + 1, for example member ID 2. This renumbering will continue in cascading order around the stack members.

The changes will take place immediately and reboot all stack members. For this reason a confirmation prompt follows this command entry, asking whether you are sure you want to renumber and reboot the entire stack.

**Example** `awplus(config)# stack 1 renumber cascade`

Any existing interface configuration  
may no longer be valid.

Are you sure you want to renumber and reboot the entire  
stack?(y/n): y

**Related  
Commands**    [show stack](#)  
                  [switch provision \(stack\)](#)  
                  [stack renumber](#)

# stack resiliencylink

**Overview** This command configures the resiliency link used by the stack. The interface used may be either an eth port or is a dedicated VLAN (resiliencylink VLAN) to which switch ports may become members. This VLAN is dedicated to the resiliency link function and must not be the stack management VLAN.

**Syntax** `stack resiliencylink <interface>`  
`no stack resiliencylink`

| Parameters  | Description  |
|-------------|--|
| <interface> | The name of the interface that is connected to the resiliency link.<br>This may be either the eth port or the resiliencylink VLAN. |

**Mode** Global Configuration

**Usage** The resiliency-link is only used when a backup member loses connectivity with the master via the stacking cables. Such a communication loss would occur if:

- a stacking link is removed or fails
- two or more stacking link cables are unplugged or fail
- the stack master itself fails due to a reboot or power failure

The resiliency-link allows the backup member to determine if the master is still present in the network by the reception of healthcheck messages sent by the master over the resiliency-link interface.

**CAUTION:** *The purpose of the resiliency link is to enable the backup master to check the status of the master under fault conditions. If the resiliency link is not configured, and the master loses communication with its other stack member, then the stack will assume the master is NOT present in the network, which could cause network conflicts if the master is still online. Note that this is different to stacking operation in releases prior to version 5.3.1.*

*Reply healthcheck messages are received if the master is still online, but the stack will now split into two different “stubs”. The stub containing the existing master will continue operating as normal. The members in the masterless stub will now use a “type stack disabled-master” trigger to run a configuration to form a second temporary stack. This utilizes the remaining stack members' resources without conflicting directly with the master's configuration. If no “type stack disabled-master” trigger was configured on the switches, then the masterless stub members will disable their switch ports.*

*If no healthcheck messages are received, then the master is assumed to be completely offline, and so the other stack members can safely take over the master's configuration.*

**CAUTION:** *The purpose of the resiliency link is to enable the stack members (particularly the backup master) to check the status of the master under fault conditions. If the resiliency link is not configured, and the master loses communication with its other*

*stack members, then the stack will assume the master is NOT present in the network, which could cause network conflicts if the master is still online. Note that this is a change to the stacking of releases prior to version 5.3.1.*

**Example** To set the resiliency link to be VLAN 4093.

First use the **stack resiliencylink** command to create the resiliency `vlan 4093`

```
awplus# configure terminal
awplus(config)# stack resiliencylink vlan4093
```

Next use the **switchport resiliencylink** command to assign the resiliencylink vlan to the interface port, in this case `port1.0.1`.

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# switchport resiliencylink
```

**Related  
Commands**

[show stack](#)  
[switch provision \(stack\)](#)  
[show stack resiliencylink](#)  
[stack disabled-master-monitoring](#)  
[switchport resiliencylink](#)

# stack software-auto-synchronize

**Overview** This command re-enables the software version auto-synchronization feature either on a specified stack member or all stack members.

Use the **no** variant of this command to turn the software version auto synchronization feature off.

**Syntax** `stack {all|<stack-ID>} software-auto-synchronize`  
`no stack {all|<stack-ID>} software-auto-synchronize`

| Parameter  | Description                       |
|------------|-----------------------------------|
| all        | All stack members.                |
| <stack-ID> | Stack member number, from 1 to 8. |

**Default** All the stack members have the stack software-auto-synchronize feature enabled by default.

**Mode** Global Configuration

**Usage** This command is used to enable the software version auto-synchronization feature for either a specific stack member or all stack members and candidates.

Note that if a device attempts to join a stack but is running a software release that is different to the other stack members, the software version auto-synchronization feature will copy the master's software release onto the new member. If the software version auto-synchronization feature is not enabled, then the device will be unable to join the stack.

Note that the software version auto-synchronization feature may also result in the stack member downgrading its software release if the master is running an older software version.

**Examples** To turn on the software-auto-synchronize feature on stack member 2, which was previously turned off, use the following commands:

```
awplus# configure terminal
awplus(config# stack 2 software-auto-synchronize
```

To turn on the software-auto-synchronize feature for all stack members, which were previously turned off, use the following commands:

```
awplus# configure terminal
awplus(config)# stack all software-auto-synchronize
```

**Validation Command** `show stack`

# stack virtual-chassis-id

**Overview** This command specifies the stack virtual chassis ID. The ID selected will determine which virtual MAC address the stack will use. The MAC address assigned to a stack must be unique within its network.

**NOTE:** *The command will not take effect until the switch has been rebooted.*

**Syntax** `stack virtual-chassis-id <id>`

| Parameter | Description  |
|-----------|--|
| <id>      | The value of the ID - enter a number in the range 0 to 4095. |

**Mode** Global Configuration

**Usage** The virtual-chassis-id entered will form the last 12 bits of a pre-selected MAC prefix component; that is, 0000.cd37.0xxx. If you enable the stack virtual MAC address feature (by using the stack virtual-mac command) without using the stack virtual- chassis-id command to select the virtual-chassis-id, then the stack will select a virtual- chassis-id from a number within the assigned range.

**Example** To set the stack virtual-chassis-id to 63 use the commands

```
awplus# configure terminal
awplus(config)# stack virtual-chassis-id 63
```

This will result in a virtual MAC address of: 0000.cd37.003f.

**Related Commands**

- [show running-config](#)
- [show stack](#)
- [switch provision \(stack\)](#)
- [stack virtual-mac](#)

# stack virtual-mac

**Overview** This command enables the stack virtual MAC address feature. For more information on this topic, see the [VCStack Feature Overview and Configuration Guide](#). With this command set, the value applied for the virtual MAC address is determined by the setting of the command [stack virtual-chassis-id](#) command.

**CAUTION:** *Stack operation is only supported ifstack virtual-macis enabled.*

*Before enabling the virtual MAC address feature, you should check that the stack's virtual-chassis-id is not already used by another stack in the network. Otherwise the duplicate MAC addresses will cause problems for the network traffic.*

**Syntax** `stack virtual-mac`  
`no stack virtual mac`

**Mode** Global Configuration

**Usage** Note that this command will not take effect until the switch has been rebooted.

**Example** `awplus# configure terminal`  
`awplus(config)# stack virtual mac`

**Related Commands** [show running-config](#)  
[show stack](#)  
[switch provision \(stack\)](#)  
[stack virtual-chassis-id](#)

# switch provision (stack)

**Overview** This command enables you to provide the configuration for a new stack member switch prior to physically connecting it to the stack. To run this command, the stack position must be vacant. The selected hardware type must be compatible existing stack hardware.

Use the **no** variant of this command to remove an existing switch provision.

**Syntax** `switch <stack-ID> provision IX5-28`  
`no switch <stack-ID> provision`

| Parameter  | Description   |
|------------|---|
| <stack-ID> | Stack member number, from 1 to 8.   |
| provision  | Provides settings within the stack configuration ready for a specific switch type to become a stack member. |
| IX5        | Provision a 28-port IX5 switch.   |

**Mode** Global Configuration

**Usage** Note that although the syntax appears to allow provisioning on up to 8 stackable switches, in practice a maximum of 4 are configurable. Normally the stack members would be numbered 1 to 4, and so the command could be run to provision any stack member within this range; and we advise this procedure. In effect, the syntax then becomes:

```
switch <1-4> provision IX5-28
```

However, you could number the stack units with any numbers between 1 and 8. For example you could number your four stack members 1, 2, 7 and 8. In this case you could provision any of the stack members within this range. We advise against numbering your stacks in this way.

**Examples** To provision an IX5-28 switch as stack member 3, use the following commands:

```
awplus# configure terminal
awplus(config)# switch 3 provision IX5-28
```

To remove the provision of the IX5-28 switch as stack member 3, use the following commands:

```
awplus# configure terminal
awplus(config)# no switch 3 provision
```



# switchport resiliencylink

**Overview** This command configures the switch port to be a member of the stack resiliency link VLAN. Note that this switchport will only be used for stack resiliency-link traffic and will not perform any other function, or carry any other traffic.

The **no** variant of this command removes the switchport from the resiliency link VLAN.

**Syntax** `switchport resiliencylink`  
`no switchport resiliencylink`

**Mode** Interface Configuration

**Usage** Note that a resiliency link cannot be part of a static or dynamic aggregator group.

**Examples** To set the resiliency link to be VLAN 4093:

First, use the **stack resiliencylink** command to create the resiliency-link vlan  
vlan4093

```
awplus# configure terminal
awplus(config)# stack resiliencylink vlan4093
```

Next, use the **switchport resiliencylink** command to assign the resiliency-link  
vlan to the port, in this case port1.0.1.

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# switchport resiliencylink
```

**Related  
Commands** [stack resiliencylink](#)  
[show stack resiliencylink](#)

# vlan mode stack-local-vlan

**Overview** This command enables you to create stack-local-VLANs and use ICMP to monitor and diagnose issues within specific members of the stack. When a VLAN is added using this method, all its traffic will be trapped to and processed by the CPU of the specific local stack member, rather than the CPU of the stack master.

**Syntax** `vlan <vid> mode stack-local-vlan <member-id>`  
`no vlan <vid>`

| Parameter             | Description   |
|-----------------------|---|
| <vid>                 | The VID of the VLAN to be created in the range 2-4094. We recommend that the first stack-local-vlan be assigned the number 4001 for the first stack member, then incremented by one for each stack member. For example, a stack of four members would be assigned the following VID numbers: <ul style="list-style-type: none"><li>• stack member one: VID 4001</li><li>• stack member two: VID 4002</li><li>• stack member three: VID 4003</li><li>• stack member four: VID 4004</li></ul> |
| mode stack-local-vlan | Specifies that the new VLAN will function as a stack-local-VLAN.  |
| <member-id>           | Specifies the new stack member ID. Enter a decimal number in the range 1-8.   |

**Default** By default, VLANs are automatically enabled as they are added.

**Mode** VLAN Configuration

**Usage** If IGMP snooping is operating on a stack-local-VLAN, the device will try to process some multicast traffic via that VLAN, if it is connected to a Microsoft Windows PC.

To avoid this, we recommend disabling IGMP snooping on stack-local-VLANs, by using the command **no ip igmp snooping**.

**Examples** To add a stack-local-VLAN with the VID of 4002 and assign it to stack member 2, use the following commands:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# vlan 4002 mode stack-local-vlan 2
awplus(config-vlan)# exit
awplus(config)# interface vlan4002
awplus(config-if)# no ip igmp snooping
```

To remove VLAN 4002, use the following commands:

```
awplus# configure terminal
awplus(config)# vlan database
awplus(config-vlan)# no vlan 4002
```

**Related  
Commands**

[ip igmp snooping](#)  
[mtu](#)  
[vlan database](#)

# undebbug stack

**Overview** This command applies the functionality of the **no debug stack** command.

# 38

# VRRP Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure the Virtual Router Redundancy Protocol (VRRP). For more information, see the [VRRP Feature Overview and Configuration Guide](#).

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

- Command List**
- [“advertisement-interval”](#) on page 1467
  - [“circuit-failover”](#) on page 1469
  - [“debug vrrp”](#) on page 1471
  - [“debug vrrp events”](#) on page 1472
  - [“debug vrrp packet”](#) on page 1473
  - [“disable \(VRRP\)”](#) on page 1474
  - [“enable \(VRRP\)”](#) on page 1475
  - [“preempt-mode”](#) on page 1476
  - [“priority”](#) on page 1478
  - [“router ipv6 vrrp \(interface\)”](#) on page 1480
  - [“router vrrp \(interface\)”](#) on page 1482
  - [“show debugging vrrp”](#) on page 1484
  - [“show running-config router ipv6 vrrp”](#) on page 1485
  - [“show running-config router vrrp”](#) on page 1486
  - [“show vrrp”](#) on page 1487
  - [“show vrrp counters”](#) on page 1489
  - [“show vrrp ipv6”](#) on page 1492

- [“show vrrp \(session\)”](#) on page 1493
- [“transition-mode”](#) on page 1495
- [“undebug vrrp”](#) on page 1497
- [“undebug vrrp events”](#) on page 1498
- [“undebug vrrp packet”](#) on page 1499
- [“virtual-ip”](#) on page 1500
- [“virtual-ipv6”](#) on page 1502
- [“vrrp vmac”](#) on page 1504

# advertisement-interval

**Overview** Use this command to configure the advertisement interval of the virtual router. This is the length of time, in seconds, between each advertisement sent from the master to its backup(s).

IPv6 VRRP advertisements are sent to the multicast address assigned to the VRRP group (ff02:0:0:0:0) and a backup virtual router has to join all multicast groups within this range. VRRP advertisements are sent to a multicast address (ff02::12) every second by default.

Use the **no** variant of this command to remove an advertisement interval of the virtual router, which has been set using the **advertisement-interval** command, and revert to the default advertisement interval of 1 second.

**Syntax** advertisement-interval [**<1-255>**|csec **<1-4095>**]  
no advertisement-interval

| Parameter             | Description   |
|-----------------------|---|
| <b>&lt;1-255&gt;</b>  | Specifies the advertisement interval in seconds.                    |
| csec                  | Use centiseconds instead of seconds for the advertisement interval. |
| <b>&lt;1-4095&gt;</b> | Specifies the advertisement interval in centiseconds.               |

**Default** The default advertisement interval is 1 second.

**Mode** Router Configuration

**Usage** Note when using VRRP with VCStacking, ensure the VRRP advertisement-interval is larger than the VCStacking failover time to avoid VCStacking failovers causing VRRP failovers.

See the [VRRP Feature Overview and Configuration Guide](#) for more information about:

- setting the advertisement-interval when configuring VRRP
- using seconds for VRRPv2 host compatibility whenever you use [transition-mode](#) to upgrade or transition from VRRPv2 to VRRPv3
- VRRPv3 IPv4 configuration details
- VRRPv3 IPv6 configuration details

**NOTE:**

*When using VRRPv3 with VCStacking, ensure that the VRRPv3 advertisement- interval is configured to a longer time than the VCStacking failover time.*

*If the VRRPv3 advertisement-interval is shorter than the VCStacking failover time, then a VRRPv3 failover will also occur whenever a VCStacking failover occurs. Use seconds not centiseconds to ensure interoperability with VRRPv2.*

**Examples** The example below shows you how to configure the advertisement interval to 6 seconds for the VRRP IPv4 session with VR ID 5 on interface vlan2:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# advertisement-interval 6
```

The example below shows you how to reset the advertisement interval to the default of 1 second for the VRRP IPv4 session with VR ID 5 on interface vlan2:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# no advertisement-interval
```

The example below shows you how to configure the advertisement interval to 6 seconds for the VRRPv3 IPv6 session with VR ID 5 on interface vlan2:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 5 vlan2
awplus(config-router)# advertisement-interval 6
```

**Related  
Commands** [router vrrp \(interface\)](#)  
[router ipv6 vrrp \(interface\)](#)



# circuit-failover

**Overview** Use this command to enable the VRRP circuit failover feature.

Circuit failover enables the device to take action if the uplink interface goes down, so that the VRRP backup, whose uplink interface is still active, takes over as VRRP master. See the [VRRP Feature Overview and Configuration Guide](#) for more information.

You can use the circuit failover feature to monitor up to 32 interfaces per VRRP instance.

Use the **no** variant of this command to disable this feature.

**Syntax** `circuit-failover <interface> <1-253>`  
`no circuit-failover [<interface> <1-253>]`

| Parameter                      | Description  |
|--------------------------------|--|
| <code>&lt;interface&gt;</code> | The interface of the router that is monitored. Interface must exist on the router, and is usually an upstream interface. Should the interface go down, then another router that is configured as a backup router in the group takes over as the master. You should configure the circuit failover on an interface other than the active VRRP interface - generally the uplink interface. |
| <code>&lt;1-253&gt;</code>     | Delta value. The value by which virtual routers decrement their priority value during a circuit failover event. Configure this value to be greater than the difference of priorities on the master and backup routers. In the case of failover, this priority delta value is subtracted from the current VR Master Router priority value.  |

**Mode** Router Configuration

**Examples** To configure circuit failover on an IPv4 VRRP instance, so that if interface VLAN3 goes down, then the priority of VRRP instance 1 is reduced by 30, use the commands:

```
awplus# configure terminal
awplus(config)# router vrrp 1 vlan2
awplus(config-router)# circuit-failover vlan3 30
```

To remove all configured circuit failovers for the VRRP IPv4 session with VR ID 1 on interface vlan2, use the commands:

```
awplus# configure terminal
awplus(config)# router vrrp 1 vlan2
awplus(config-router)# no circuit-failover
```

To configure circuit failover on a VRRPv3 IPv6 session with VR ID 1, so that when interface VLAN3 goes down, the priority of VRRP instance 1 is reduced by 30, use the commands:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 1 vlan2
awplus(config-router)# circuit-failover vlan3 30
```

To remove all configured circuit failovers for the VRRPv3 IPv6 session with VR ID 1 on interface vlan2, use the commands:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 1 vlan2
awplus(config-router)# no circuit-failover
```

**Related  
Commands**    [router vrrp \(interface\)](#)  
              [router ipv6 vrrp \(interface\)](#)

# debug vrrp

**Overview** Use this command to specify debugging options for VRRP. The **all** parameter turns on all the debugging options.

Use the **no** variant of this command to disable this function.

**Syntax** `debug vrrp [all]`  
`no debug vrrp [all]`

**Mode** Privileged Exec and Global Configuration

**Usage** See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 debugging details.

**Examples** The example below shows you how to enable all debugging for VRRP:

```
awplus# configure terminal
awplus(config)# debug vrrp all
```

The example below shows you how to disable all debugging for VRRP:

```
awplus# configure terminal
awplus(config)# no debug vrrp all
```

**Related Commands** [show debugging vrrp](#)  
[undebug vrrp](#)

# debug vrrp events

**Overview** Use this command to specify debugging options for VRRP event troubleshooting.  
Use the **no** variant of this command to disable this function.

**Syntax** `debug vrrp events`  
`no debug vrrp events`

**Mode** Privileged Exec and Global Configuration

**Usage** The **debug vrrp events** command enables the display of debug information related to VRRP internal events.  
See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 debugging details.

**Examples** The example below shows you how to enable events debugging for VRRP:

```
awplus# configure terminal
awplus(config)# debug vrrp events
```

The example below shows you how to disable events debugging for VRRP:

```
awplus# configure terminal
awplus(config)# no debug vrrp events
```

**Related Commands** [show debugging vrrp](#)  
[undebg vrrp events](#)

# debug vrrp packet

**Overview** Use this command to specify debugging options for VRRP packets.  
Use the **no** variant of this command to disable this function.

**Syntax** `debug vrrp packet [send|recv]`  
`no debug vrrp packet [send|recv]`

| Parameter | Description  |
|-----------|--|
| send      | Specifies the debug option set for sent packets.     |
| recv      | Specifies the debug option set for received packets. |

**Mode** Privileged Exec and Global Configuration

**Usage** The **debug vrrp packet** command enables the display of debug information related to the sending and receiving of packets.  
See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 debugging details.

**Examples** The example below shows you how to enable received and sent packet debugging for VRRP:

```
awplus# configure terminal
awplus(config)# debug vrrp packet
```

The example below shows you how to enable only received packet debugging for VRRP:

```
awplus# configure terminal
awplus(config)# debug vrrp packet recv
```

The example below shows you how to enable only sent packet debugging for VRRP:

```
awplus# configure terminal
awplus(config)# debug vrrp packet send
```

The example below shows you how to disable packet debugging for VRRP:

```
awplus# configure terminal
awplus(config)# no debug vrrp packet
```

**Related Commands** [show debugging vrrp](#)  
[undebug vrrp packet](#)

# disable (VRRP)

**Overview** Use this command to disable a VRRP IPv4 session or a VRRPv3 IPv6 session on the router to stop it participating in virtual routing. Note that when this command is configured then a backup router assumes the role of master router depending on its priority. See the [enable \(VRRP\)](#) command to enable a VRRP IPv4 session or a VRRPv3 IPv6 session on the router.

**Syntax** `disable`

**Mode** Router Configuration

**Usage** See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv4 and IPv6 configuration details.

**Examples** The example below shows you how to disable the VRRP session for VRRP VR ID 5 on vlan2:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# disable
```

The example below shows you how to disable the VRRPv3 session for VRRPv3 VR ID 3 on vlan1:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan1
awplus(config-router)# disable
```

**Related Commands**

- [enable \(VRRP\)](#)
- [router vrrp \(interface\)](#)
- [router ipv6 vrrp \(interface\)](#)
- [show vrrp](#)

# enable (VRRP)

**Overview** Use this command to enable the VRRP session on the router to make it participate in virtual routing. To make changes to the VRRP configuration, first disable the router from participating in virtual routing using the [disable \(VRRP\)](#) command.

**Syntax** enable

**Mode** Router Configuration

**Usage** You must configure the virtual IP address and define the interface for the VRRP session (using the [virtual-ip](#) or [virtual-ipv6](#) and the [router vrrp \(interface\)](#) or [router ipv6 vrrp \(interface\)](#) commands) before using this command.

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv4 and IPv6 configuration details.

**Examples** To enable the VRRP session for VRRP VR ID 5 on vlan2, use the commands:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# enable
```

To enable the VRRPv3 session for VRRPv3 VR ID 3 on vlan1, use the commands:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan1
awplus(config-router)# enable
```

**Related Commands**

- [disable \(VRRP\)](#)
- [router vrrp \(interface\)](#)
- [router ipv6 vrrp \(interface\)](#)
- [show vrrp](#)
- [virtual-ip](#)
- [virtual-ipv6](#)

# preempt-mode

**Overview** Use this command to configure preempt mode. If preempt-mode is set to **true**, then the highest priority backup will always be the master when the default master is unavailable.

If preempt-mode is set to **false**, then a higher priority backup will not preempt a lower priority backup who is acting as master.

**Syntax** `preempt-mode {true|false}`

| Parameter | Description             |
|-----------|-------------------------|
| true      | Preemption is enabled.  |
| false     | Preemption is disabled. |

**Default** The default is **true**.

**Mode** Router Configuration

**Usage** When the master router fails, the backup routers come online in priority order—highest to lowest. Preempt mode means that a higher priority back up router will take over the master role from a lower priority back up. Preempt mode on **true** allows a higher priority backup router to relieve a lower priority backup router.

By default, a preemptive scheme is enabled whereby a higher priority backup virtual router that becomes available take over for the backup virtual router that was elected to become the master virtual router.

This preemptive scheme can be disabled using the **preempt-mode false** command. If preemption is disabled, the backup virtual router that is currently elected as the master virtual router does not transition to backup virtual router again whenever the alternate backup router with a higher priority becomes available.

See the [VRRP Feature Overview and Configuration Guide](#) for more information about:

- VRRPv3 IPv4 configuration details
- VRRPv3 IPv6 configuration details
- preempt mode

**Examples** The example below shows you how to configure preempt-mode as true for VRRP VR ID 5 on vlan2:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# preempt-mode true
```



The example below shows you how to configure preempt-mode as false for VRRP VR ID 5 on vlan2:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# preempt-mode false
```

The example below shows you how to configure preempt-mode as true for VRRPv3 VR ID 3 on vlan1:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan1
awplus(config-router)# preempt-mode true
```

The example below shows you how to configure preempt-mode as false for VRRPv3 VR ID 3 on vlan1:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan1
awplus(config-router)# preempt-mode false
```

**Related  
Commands**

[circuit-failover](#)

[priority](#)

[router vrrp \(interface\)](#)

[router ipv6 vrrp \(interface\)](#)

# priority

**Overview** Use this command to configure the VRRP router priority within the virtual router. The highest priority router is Master (unless [preempt-mode](#) is false).

Use the **no** variant of this command to remove the VRRP router priority within the virtual router, which has been set using the **priority** command.

**Syntax** `priority <1-255>`  
`no priority`

| Parameter | Description   |
|-----------|---|
| <1-255>   | The priority. For the master router, use 255 for this parameter; otherwise use any number from the range <1-254>. |

**Default** Defaults for priority are: **master router**= 255; **backup**= 100.

**Mode** Router Configuration

**Usage** Priority determines the role that each VRRP router plays and what happens if the master virtual router fails. If a VRRP router owns the IP address of the virtual router and the IP address of the interface, then this VRRP router functions as the master virtual router.

Priority also determines whether a VRRP router functions as a backup virtual router and the order of ascendancy to becoming a master virtual router if the master virtual router fails. Configure the priority of each backup virtual router with a value of 1 through 254.

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv4 and IPv6 configuration details.

**Examples** The example below shows you how to configure 101 as the priority for VRRP VR ID 5 on vlan2:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# priority 101
```

The example below shows you how to remove the priority configured for VRRP VR ID 5 on vlan2:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# no priority
```

The example below shows you how to configure 101 as the priority for VRRPv3 VR ID 3 on vlan1:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan1
awplus(config-router)# priority 101
```

The example below shows you how to remove the configured priority for VRRPv3 VR ID 3 on vlan1:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan1
awplus(config-router)# no priority
```

**Related  
Commands**   [circuit-failover](#)  
[preempt-mode](#)

# router ipv6 vrrp (interface)

**Overview** Use this command to configure VRRPv3 for IPv6 and define the interface that will participate in virtual routing to send and receive advertisement messages. This command allows you to enter the Router Configuration mode.

Use the **no** variant of this command to remove the VRRPv3 for IPv6 configuration. Disable the VRRP session before using the **no** variant of this command.

**Syntax** `router ipv6 vrrp <vrid> <interface>`  
`no router ipv6 vrrp <vrid> <interface>`

| Parameter   | Description  |
|-------------|--|
| <vrid>      | <1-255> The ID of the virtual router VRRPv3 IPv6 session to create.  |
| <interface> | Specify the name of the interface that will participate in the virtual routing. The interface must exist on the router. The interface specified sends and receives VRRPv3 IPv6 advertisement messages. |

**Mode** Global Configuration

**Usage** Use the required <interface> placeholder to define the interface that will participate in virtual routing. This interface is used for two purposes - to send/receive advertisement messages and to forward on behalf of the virtual router when in master state.

You can configure up to 255 IPv4 and 255 IPv6 VRRP instances. However, configuring a high number of instances may adversely affect the device's performance, depending on the device CPU, the other protocols it is running, and whether you set the advertisement interval to less than 1 second.

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv6 configuration details.

**Examples** The example below shows you how to enable a VRRPv3 session with VR ID 3 on vlan2:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan2
awplus(config-router)# enable
awplus(config-router)#
```

The example below shows you how to disable a VRRPv3 session with VR ID 3 on vlan2:

```
awplus(config-router)# disable
awplus(config-router)# exit
awplus(config)# no router ipv6 vrrp 3 vlan2
awplus(config)#
```

**Related  
Commands**   advertisement-interval  
                  circuit-failover

# router vrrp (interface)

**Overview** Use this command to configure VRRP IPv4 and define the interface that will participate in virtual routing to send and receive advertisement messages. This command allows you to enter the Router Configuration mode.

Use the **no** variant of this command to remove the VRRP IPv4 configuration. Disable the VRRP session before using the **no** variant of this command.

**Syntax** `router vrrp <vrid> <interface>`  
`no router vrrp <vrid> <interface>`

| Parameter   | Description  |
|-------------|--|
| <vrid>      | <1-255> The ID of the virtual router VRRP IPv4 session to create.  |
| <interface> | Specify the name of the interface that will participate in the virtual routing. The interface must exist on the router. The interface specified sends and receives VRRP IPv4 advertisement messages. |

**Mode** Global Configuration

**Usage** Use the required <interface> placeholder to define the interface that will participate in virtual routing. This interface is used for two purposes - to send/receive advertisement messages and to forward on behalf of the virtual router when in master state.

You can configure up to 255 IPv4 and 255 IPv6 VRRP instances. However, configuring a high number of instances may adversely affect the device's performance, depending on the device CPU, the other protocols it is running, and whether you set the advertisement interval to less than 1 second.

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv4 configuration details.

**Examples** To enable a VRRP session with VR ID 5 on vlan1, use the commands:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan1
awplus(config-router)# enable
```

To disable a VRRP session with VR ID 5 on vlan1, use the commands:

```
awplus(config-router)# disable
awplus(config-router)# exit
awplus(config)# no router vrrp 5 vlan1
```

**Related  
Commands**

- advertisement-interval
- circuit-failover
- disable (VRRP)
- enable (VRRP)

# show debugging vrrp

**Overview** Use this command to display the set VRRP debugging option. Use the terminal monitor command to display output on the console otherwise debug output is in the log file.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 debugging details.

**Syntax** `show debugging vrrp`

**Mode** User Exec and Privileged Exec

**Example** The example below shows you how to display VRRP debugging:

```
awplus# show debugging vrrp
```

**Related Commands**

- [debug vrrp](#)
- [debug vrrp events](#)
- [debug vrrp packet](#)



# show running-config router ipv6 vrrp

**Overview** Use this command to show the running configuration for VRRPv3 IPv6.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv6 configuration details.

**Syntax** `show running-config router vrrp`

**Mode** Privileged Exec, Global Configuration, Line Configuration, and Interface Configuration.

**Example** The example below shows you how to display the running configuration for VRRPv3 IPv6:

```
awplus# show running-config router ipv6 vrrp
```

**Output** Figure 38-1: Example output from the **show running-config router ipv6 vrrp** command

```
!  
router ipv6 vrrp 3 vlan3  
  virtual-ip fe80::202:b3ff:fed5:983e master  
  circuit-failover vlan3 3  
  advertisement-interval 6  
  preempt-mode false  
!
```

# show running-config router vrrp

**Overview** Use this command to show the running configuration for VRRP IPv4.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv4 configuration details.

**Syntax** `show running-config router vrrp`

**Mode** Privileged Exec, Global Configuration, Line Configuration, and Interface Configuration.

**Example** The example below shows you how to display the running configuration for VRRP IPv4:

```
awplus# show running-config router vrrp
```

**Output** Figure 38-2: Example output from the **show running-config router vrrp** command

```
!  
router vrrp 2 vlan2  
  circuit-failover vlan2 2  
  advertisement-interval 4  
  preempt-mode true  
!
```

# show vrrp

**Overview** Use this command to display information about all VRRP IPv4 sessions. This command shows a summary when the optional **brief** parameter is used.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the “Getting Started with AlliedWare Plus” [Feature Overview and Configuration Guide](#).

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv4 configuration details.

**Syntax** `show vrrp [brief]`

| Parameter | Description                     |
|-----------|---------------------------------|
| brief     | Brief summary of VRRP sessions. |

**Mode** User Exec and Privileged Exec

**Example** To display information about all VRRP IPv4 sessions, enter the command:

```
awplus# show vrrp
```

To display brief summary output about VRRP IPv4 sessions, enter the command:

```
awplus# show vrrp brief
```

**Output** Figure 38-3: Example output from the **show vrrp** command

```
awplus#show vrrp
VMAC enabled
Address family IPv4
VRRP Id: 1 on interface: vlan2
State: AdminUp - Master
Virtual IP address: 192.168.1.2 (Not-owner)
Priority is 100
Advertisement interval: 100 centiseconds
Preempt mode: TRUE
Multicast membership on IPv4 interface vlan2: JOINED
Transition mode: FALSE
Accept mode: FALSE
Master address: 192.168.1.3
```

Figure 38-4: Example output from the **show vrrp brief** command

```
awplus#show vrrp brief
Interface      Grp  Prio Own  Pre  State      Master addr      Group addr
vlan10         1    200  N    P    Master     192.168.10.4     192.168.10.253
vlan10         2    150  N    P    Backup     192.168.10.4     192.168.10.254
vlan11         3    200  N    P    Master     192.168.11.4     192.168.11.253
vlan11         4    150  N    P    Backup     192.168.11.4     192.168.11.254
```

**Related  
Commands**    [enable \(VRRP\)](#)  
                  [disable \(VRRP\)](#)

# show vrrp counters

**Overview** This command displays VRRP SNMP counters on the console, as described in the VRRP MIB and RFC2787, for debugging use while you configure VRRP with commands in this chapter.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show vrrp counters

**Mode** User Exec and Privileged Exec

**Usage** The output has a section for global counters and a section of counters for each VRRP instance configured. See the descriptions of the counters below the sample output as per RFC2787.

**NOTE:** Note that the counters displayed with this commands are the same counters as described in RFC 2787 (Copyright (C) The Internet Society (2000). All Rights Reserved) except for the “Monitored Circuit Up” and “Monitored Circuit Down” counters, which are additions beyond the MIB.

**Example** To display information about VRRP SNMP counters on the console, enter the command:

```
awplus# show vrrp counters
```

Figure 38-5: Example output from the **show vrrp counters** command

```
awplus#show vrrp counters
VRRP Global Counters:
  Checksum Errors .... 230
  Version Errors ..... 0
  VRID Errors ..... 230

VRRP IPv4 counters for VR 10/vlan10:
  Master Transitions ..... 0
  Received Advertisements ... 0
  Internal Errors ..... 0
  TTL Errors ..... 0
  Received Priority 0 Pkt ... 0
  Sent Priority 0 Pkt ..... 0
  Received Invalid Type ..... 0
  Address List Errors ..... 0
  Packet Length Errors ..... 0
  Monitored Circuit Up ..... 0
  Monitored Circuit Down..... 0
```

```
VRRP IPv4 counters for VR 100/vlan100:
Master Transitions ..... 1
Received Advertisements ... 1614
Internal Errors ..... 0
TTL Errors ..... 0
Received Priority 0 Pkt ... 0
Sent Priority 0 Pkt ..... 0
Received Invalid Type ..... 0
Address List Errors ..... 0
Packet Length Errors ..... 0
Monitored Circuit Up ..... 0
Monitored Circuit Down..... 2
```

**Table 1:** Global counters with descriptions for the **show vrrp counters** command:

| Counter         | Description  |
|-----------------|--|
| Checksum Errors | The total number of VRRP packets received with an invalid VRRP checksum value.           |
| Version Errors  | The total number of VRRP packets received with an unknown or unsupported version number. |
| VRID Errors     | The total number of VRRP packets received with an invalid VRID for this virtual router.  |

**Table 2:** Per VR counters with descriptions for the **show vrrp counters** command:

| Counter                 | Description   |
|-------------------------|---|
| Master Transitions      | The total number of times that this virtual router's state has transitioned to MASTER.  |
| Received Advertisements | The total number of VRRP advertisements received by this virtual router.  |
| Internal Errors         | The total number of VRRP advertisement packets received for which the advertisement interval is different than the one configured for the local virtual router. |
| TTL Errors              | The total number of VRRP packets received by the virtual router with IP TTL (Time-To-Live) not equal to 255.  |
| Received Priority 0 Pkt | The total number of VRRP packets received by the virtual router with a priority of '0'.   |
| Sent Priority 0 Pkt     | The total number of VRRP packets sent by the virtual router with a priority of '0'.   |
| Received Invalid Type   | The number of VRRP packets received by the virtual router with an invalid value in the 'type' field.  |
| Address List Errors     | The total number of packets received for which the address list does not match the locally configured list for the virtual router.                              |

**Table 2:** Per VR counters with descriptions for the **show vrrp counters** command: (cont.)

| Counter                | Description  |
|------------------------|--|
| Packet Length Errors   | The total number of packets received with a packet length less than the length of the VRRP header. |
| Monitored Circuit Up   | The total number of times the monitored circuit has generated the UP event.                        |
| Monitored Circuit Down | The total number of times the monitored circuit has generated the down event.                      |

# show vrrp ipv6

**Overview** Use this command to display information about all configured VRRPv3 IPv6 sessions for all interfaces, or all VRRPv3 IPv6 sessions for a given interface with the optional parameter.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv6 configuration details.

**Syntax** `show vrrp ipv6 [<interface>]`

| Parameter   | Description  |
|-------------|--|
| <interface> | Specify the name of the interface that will participate in the virtual routing. The interface must exist on the router. The interface specified sends and receives VRRPv3 IPv6 advertisement messages. |

**Mode** User Exec and Privileged Exec

**Example** To display information about all VRRPv3 IPv6 sessions, enter the command:

```
awplus# show vrrp ipv6
```

**Output** Figure 38-6: Example output from the **show vrrp ipv6 vlan2** command

```
awplus#show vrrp ipv6 vlan2
VrId <1>
State is Master
Virtual IP is fe80::202:b3ff:fed5:983e (Owner)
Interface is vlan2
Priority is 255
Advertisement interval is 4 sec
Preempt mode is FALSE
```

**Related Commands** [enable \(VRRP\)](#)  
[disable \(VRRP\)](#)



# show vrrp (session)

**Overview** Use this command to display information for a particular VRRP session.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv4 configuration details.

**Syntax** `show vrrp <vrid> <interface>`

| Parameter   | Description   |
|-------------|---|
| <vrid>      | <1-255> The virtual router ID for which to display information. Session must already exist. |
| <interface> | The interface to display information about, for instance, <code>vlan2</code> .              |

**Mode** User Exec and Privileged Exec

**Usage** See the below sample output from the **show vrrp** command displaying information about VRRP session 1 configured on **vlan2**. Output shows that a Virtual IP address has been set.

```
awplus# show vrrp 1 vlan2
```

```
awplus#show vrrp 1 vlan2
Address family IPv4
VrId <1>
  Interface is vlan2
  State is Initialize
  Virtual IP address is 10.10.11.250 (Not IP owner)
  Priority is 100
  Advertisement interval is 1 sec
```

See the below sample output from the **show vrrp** command displaying information about VRRP session 1 configured on **vlan3**. Output shows a Virtual IP address has not been set.

```
awplus# show vrrp 1 vlan3
```

```
awplus#show vrrp 1 vlan3
Address family IPv4
VrId <1>
  Interface is vlan3
  State is Initialize
  Virtual IP address is unset
  Priority is 100
  Advertisement interval is 1 sec
  Preempt mode is TRUE
```

**Example** The following command shows information about VRRP session 5 for interface **vlan2**.

```
awplus# show vrrp 5 vlan2
```

# transition-mode

**Overview** Use this command to configure the IPv4 transition mode. Transition mode allows you to upgrade from VRRPv2 to VRRPv3 and gives interoperability between VRRPv2 and VRRPv3.

If transition-mode is set to **true**, then the IPv4 transition mode is enabled and VRRPv2 and VRRPv3 advertisements are sent allowing VRRPv2 and VRRPv3 interoperability. Received VRRPv2 advertisement packets are accepted and processed when transition-mode is true.

If transition-mode is set to **false**, then the IPv4 transition mode is disabled and only VRRPv3 advertisements are sent. Received VRRPv2 advertisement packets are dropped.

Note the [advertisement-interval](#) should not be configured to less than 1 second when using transition-mode. VRRPv2 can only use advertisements in whole second intervals.

**Syntax** `transition-mode {true|false}`

| Parameter | Description   |
|-----------|---|
| true      | Transition mode is enabled. This results in VRRPv2 and VRRPv3 IPv4 advertisements being sent. Transition mode is only available on VRRPv3 for interoperability with VRRPv2 while upgrading to VRRPv3. |
| false     | Transition mode is disabled. This stops VRRPv2 IPv4 advertisements being sent. Only VRRPv3 advertisements are sent when disabled. Disable transition-mode after upgrading from VRRPv2 to VRRPv3.      |

**Default** The default is **false**.

**Mode** Router Configuration

**Usage** See the [VRRP Feature Overview and Configuration Guide](#) for more information:

- VRRPv3 IPv4 configuration details
- VRRPv3 IPv6 configuration details
- further information about configuring transition mode to upgrade from VRRPv2 to VRRPv3

**Examples** The example below shows you how to configure IPv4 transition-mode as true for VRRP VR ID 5 on vlan2:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# transition-mode true
```

The example below shows you how to configure IPv4 transition-mode as false for VRRP VR ID 5 on vlan2:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# transition-mode false
```

**Related  
Commands** [router vrrp \(interface\)](#)

# undebg vrrp

**Overview** Use this command to disable all VRRP debugging.

**Syntax** `undebg vrrp all`

**Mode** Privileged Exec

**Example** The example below shows you how to disable all VRRP debugging:

```
awplus# undebg vrrp all
```

**Related  
Commands** [debug vrrp](#)

# undebug vrrp events

**Overview** Use this command to disable debugging options for VRRP event troubleshooting.

**Syntax** undebug vrrp events

**Mode** Privileged Exec

**Example** The example below shows you how to disable VRRP event debugging:

```
awplus# undebug vrrp events
```

**Related  
Commands** [debug vrrp events](#)

# undebbug vrrp packet

**Overview** Use this command to disable debugging options for VRRP packets.

**Syntax** `undebbug vrrp packet [send|recv]`

| Parameter | Description  |
|-----------|--|
| send      | Disable the debug option set for sent packets.     |
| recv      | Disable the debug option set for received packets. |

**Mode** Privileged Exec

**Examples** The example below shows you how to disable VRRP sent packet debugging:

```
awplus# undebbug vrrp packet send
```

The example below shows you how to disable VRRP received packet debugging:

```
awplus# undebbug vrrp packet recv
```

The example below shows you how to disable all VRRP packet debugging:

```
awplus# undebbug vrrp packet
```

**Related  
Commands** [debug vrrp packet](#)

# virtual-ip

**Overview** Use this command to set the virtual IP address for the VRRP session. This is the IP address of the virtual router that end hosts set as their default gateway.

Use the **no** variant of this command to disable this feature.

**Syntax** `virtual-ip <ip-address> [master|backup|owner]`  
`no virtual-ip`

| Parameter    | Description   |
|--------------|---|
| <ip-address> | The virtual IPv4 address of the virtual router, entered in dotted decimal format A.B.C.D.   |
| master       | Sets the default state of the VRRP router within the Virtual Router as <b>master</b> . For master, the router must own the Virtual IP address. Specify the <b>owner</b> option before using <b>master</b> option. |
| backup       | Sets the default state of the VRRP router within the Virtual Router as <b>backup</b> .  |
| owner        | Sets the IPv6 address of the VRRP router within the Virtual Router as the <b>owner</b> . Specify this before using the <b>master</b> option.  |

**Mode** Router Configuration

**Usage** The VRRP master and owner of the virtual IPv4 address for the VRRP session only responds to the packets destined to the virtual IPv6 address. The VRRP master that is not an owner of the virtual IPv4 address for the VRRP session does not respond to the packets destined to the virtual IPv4 address, but forwards packets with a VMAC as the destination address. See the [vrrp vmac](#) command to enable and disable this feature.

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv4 configuration details.

**Examples** The example below shows you how to set the virtual IP address for VRRP VR ID 5 and the router as the VRRP master:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# virtual-ip 192.0.2.30 master
```

The example below shows you how to set the virtual IPv4 address for VRRP VR ID 5 and the router as the VRRP backup:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# virtual-ip 192.0.2.30 backup
```



The example below shows you how to set the virtual IPv4 address for VRRP VR ID 5 and the router as owner of the virtual IPv4 address:

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# virtual-ip 192.0.2.30 owner
```

The example below shows you how to disable the virtual IPv4 address for VRRP VR ID 5

```
awplus# configure terminal
awplus(config)# router vrrp 5 vlan2
awplus(config-router)# no virtual-ip
```

**Related  
Commands**

[router vrrp \(interface\)](#)  
[enable \(VRRP\)](#)  
[vrrp vmac](#)

# virtual-ipv6

**Overview** Use this command to set the virtual IPv6 address for the VRRPv3 session. This is the IPv6 address of the virtual router that end hosts set as their default gateway.

Note that the primary IPv6 address specified is an IPv6 link-local address. See the Usage note below for further information.

Use the **no** variant of this command to disable this feature.

**Syntax** `virtual-ipv6 <ipv6-address> [master|backup]  
[primary|secondary]  
no virtual-ipv6`

| Parameter                         | Description  |
|-----------------------------------|--|
| <code>&lt;ipv6-address&gt;</code> | The IPv6 address of the virtual router, entered in hexadecimal, in the format X:X::X:X.  |
| <code>master</code>               | Sets <b>master</b> to be the default state of the VRRPv3 router within the Virtual Router. For <b>master</b> , we recommend using a Virtual IP address that is not owned by any of the VRRP routers in the same grouping (that share the same VRID). |
| <code>backup</code>               | Sets <b>backup</b> to be the default state of the VRRPv3 router within the Virtual Router.   |
| <code>primary</code>              | Sets the specified address as the primary IPv6 address. The primary address must be a link-local IPv6 address.   |
| <code>secondary</code>            | Sets the specified address as the secondary IPv6 address. Normally this would be a globally-routable IPv6 address. This enables you to specify a globally-routable address as the default gateway address for all the hosts on a VLAN.               |

**Mode** Router Configuration

**Usage** The virtual router will reply to ping, telnet, and SSH requests to the virtual IP address. The virtual router will reply even if it does not own the virtual IP address.

The AlliedWare Plus VRRPv3 implementation supports one IPv6 virtual link local address per virtual router ID. Note that in the command examples fe80::1 is an IPv6 link-local address. An IPv6 link-local address is used because IPv6 link-local addresses are used by IPv6 ND (Neighbor Discovery). A host's default route to a router points to the IPv6 link-local address, not a specific global IPv6 address for the router. For the host's traffic to switch over to a backup router, the IPv6 link-local address of the router is used by VRRPv3.

See the [VRRP Feature Overview and Configuration Guide](#) for more information about VRRPv3 IPv6 configuration details.

**Examples** The example below shows you how to set the virtual IPv6 address for VRRPv3 VR ID 3 and the router as the VRRPv3 master:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan1
awplus(config-router)# virtual-ipv6 fe80::1 master
```

The example below shows you how to set the virtual IPv6 address for VRRPv3 VR ID 3 and the router as the VRRPv3 backup:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan1
awplus(config-router)# virtual-ipv6 fe80::1 backup
```

The example below shows you disable the virtual IPv6 address for VRRPv3 VR ID 3:

```
awplus# configure terminal
awplus(config)# router ipv6 vrrp 3 vlan1
awplus(config-router)# no virtual-ipv6
```

**Related Commands**

- [router ipv6 vrrp \(interface\)](#)
- [enable \(VRRP\)](#)
- [vrrp vmac](#)

## vrrp vmac

**Overview** Use this command to enable or disable the VRRP Virtual MAC feature. This feature is used by VRRP to make the hosts use the virtual MAC address as the physical hardware address of their gateway.

A VRRP router master will use the virtual MAC address for any ARP responses associated with the virtual IP address, or any gratuitous ARPs sent on behalf of the virtual IP address.

All VRRP advertisements are sent using this virtual MAC address as the source MAC address.

The virtual MAC address has the form 00:00:5e:00:01:<VRID>, where VRID is the ID of the Virtual Router.

**Syntax** `vrrp vmac {enable|disable}`

**Mode** Global Configuration

**Examples** To enable Virtual MAC enter:

```
awplus# configure terminal
awplus(config)# vrrp vmac enable
```

To disable Virtual MAC enter:

```
awplus# configure terminal
awplus(config)# vrrp vmac disable
```

**Related  
Commands** [virtual-ip](#)  
[virtual-ipv6](#)

# 39

# Ethernet Protection Switched Ring (EPSRing™) Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure Ethernet Protection Switched Ring (EPSRing™). For more information, see the [EPSR Feature Overview and Configuration Guide](#).

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

- Command List**
- “[debug epsr](#)” on page 1507
  - “[epsr](#)” on page 1508
  - “[epsr configuration](#)” on page 1510
  - “[epsr datavlan](#)” on page 1511
  - “[epsr enhancedrecovery enable](#)” on page 1512
  - “[epsr mode master controlvlan primary port](#)” on page 1513
  - “[epsr mode transit controlvlan](#)” on page 1514
  - “[epsr priority](#)” on page 1515
  - “[epsr state](#)” on page 1516
  - “[epsr trap](#)” on page 1517
  - “[show debugging epsr](#)” on page 1518
  - “[show epsr](#)” on page 1519
  - “[show epsr common segments](#)” on page 1524
  - “[show epsr config-check](#)” on page 1525
  - “[show epsr <epsr-instance>](#)” on page 1526
  - “[show epsr <epsr-instance> counters](#)” on page 1527
  - “[show epsr counters](#)” on page 1528

- [“show epsr summary”](#) on page 1529
- [“undebbug epsr”](#) on page 1530

# debug epsr

**Overview** This command enables EPSR debugging.

The **no** variant of this command disables EPSR debugging.

**Syntax** `debug epsr {info|msg|pkt|state|timer|all}`  
`no debug epsr {info|msg|pkt|state|timer|all}`

| Parameter | Description  |
|-----------|--|
| info      | Send general EPSR information to the console.<br>Using this parameter with the <b>no debug epsr</b> command will explicitly exclude the above information from being sent to the console.                                |
| msg       | Send the decoded received and transmitted EPSR packets to the console.<br>Using this parameter with the <b>no debug epsr</b> command will explicitly exclude the above packets from being sent to the console.           |
| pkt       | Send the received and transmitted EPSR packets as raw ASCII text to the console.<br>Using this parameter with the <b>no debug epsr</b> command will explicitly exclude the above packets from being sent to the console. |
| state     | Send EPSR state transitions to the console.<br>Using this parameter with the <b>no debug epsr</b> command will explicitly exclude state transitions from being sent to the console.                                      |
| timer     | Send EPSR timer information to the console.<br>Using this parameter with the <b>no debug epsr</b> command will explicitly exclude timer information from being sent to the console.                                      |
| all       | Send all EPSR debugging information to the console.<br>Using this parameter with the <b>no debug epsr</b> command will explicitly exclude any debugging information from being sent to the console.                      |

**Mode** Privileged Exec and Global Configuration

**Examples** To enable state transition debugging, use the command:

```
awplus# debug epsr state
```

To disable EPSR packet debugging, use the command:

```
awplus# no debug epsr pkt
```

**Related Commands** [undebg epsr](#)

## epsr

**Overview** This command sets the timer values for an EPSR instance. These are only valid for master nodes.

**NOTE:** Running your switch as an EPSR master node requires a Premium License.

**Syntax** `epsr <epsr-instance> {hellotime <1-32767>|failovertime <2-65535> ringflaptime <0-65535>}`  
`no epsr <epsr-instance>`

**CAUTION:** Using the “no” variant of this command will remove the specified EPSR instance.

| Parameter              | Description  |
|------------------------|--|
| <epsr-instance>        | Name of the EPSR instance.   |
| hellotime <1-32767>    | The number of seconds between the transmission of health check messages.   |
| failovertime <2-65535> | The number of seconds that a master waits for a returning health check message before entering the failed state. <b>The failover time should be greater than twice the hellotime.</b> This is to force the master node to wait until it detects the absence of two sequential healthcheck messages before entering the failed state. |
| ringflaptime <0-65535> | The minimum number of seconds that a master must remain in the failed state.   |

**Mode** EPSR Configuration

**Examples** To set the hellotimer to 5 seconds for the EPSR instance called `blue`, use the command:

```
awplus(config-epsr)# epsr blue hellotime 5
```

**NOTE:** When stacking is used with EPSR, the EPSR **failovertime** should be at least 5 seconds.

To delete the EPSR instance called `blue`, use the command:

```
awplus(config-epsr)#
```



**Related  
Commands**

- [epsr mode master controlvlan primary port](#)
- [epsr mode transit controlvlan](#)
- [epsr configuration](#)
- [epsr datavlan](#)
- [epsr state](#)
- [epsr trap](#)
- [reboot rolling](#)
- [show epsr](#)

# epsr configuration

**Overview** Use this command to enter EPSR Configuration mode so that EPSR can be configured.

**Syntax** `epsr configuration`

**Mode** Global Configuration

**Example** To change to EPSR mode, use the command:

```
awplus(config)# epsr configuration
```

**Related Commands** [epsr mode master controlvlan primary port](#)  
[epsr](#)  
[show epsr](#)

# epsr datavlan

**Overview** This command adds a data VLAN or a range of VLAN identifiers to a specified EPSR instance.

The **no** variant of this command removes a data VLAN or data VLAN range from an EPSR instance.

**Syntax** `epsr <epsr-instance> datavlan {<vlanid>|<vlanid-range>}`  
`no epsr <epsr-instance> datavlan {<vlanid>|<vlanid-range>}`

| Parameter       | Description  |
|-----------------|--|
| <epsr-instance> | Name of the EPSR instance.   |
| datavlan        | Adds a data VLAN to be protected by the EPSR instance.   |
| <vlanid>        | The VLAN's VID - a number between 1 and 4094 excluding the number selected for the control VLAN. |
| <vlanid-range>  | Specify a range of VLAN identifiers using a hyphen to separate identifiers.                      |

**Mode** EPSR Configuration

**Usage** We recommend you

- set the EPSR control VLAN to vlan2, using the [epsr mode master controlvlan primary port](#) and [epsr mode transit controlvlan](#) commands, then
- set the EPSR data VLAN between to be a value between 3 and 4094, using the [epsr datavlan](#) command.

**Examples** To add `vlan3` to the EPSR instance called `blue`, use the command:

```
awplus(config-epsr)# epsr blue datavlan vlan3
```

To add `vlan2` and `vlan3` to the EPSR instance called `blue`, use the command:

```
awplus(config-epsr)# epsr blue datavlan vlan2-vlan3
```

To remove `vlan3` from the EPSR instance called `blue`, use the command:

```
awplus(config-epsr)# no epsr blue datavlan vlan3
```

To remove `vlan2` and `vlan3` from the EPSR instance called `blue`, use the command:

```
awplus(config-epsr)# no epsr blue datavlan vlan2-vlan3
```

**Related Commands** [epsr mode master controlvlan primary port](#)  
[epsr mode transit controlvlan](#)  
[show epsr](#)

# epsr enhancedrecovery enable

**Overview** This command enables EPSR's enhanced recovery mode. Enhanced recovery mode enables a ring to apply additional recovery procedures when a ring with more than one break partially mends. For more information, see the [EPSR Feature Overview and Configuration Guide](#).

The **no** variant of this command disables the enhanced recovery mode.

**Syntax** `epsr <epsr-instance> enhancedrecovery enable`  
`no epsr <epsr-instance> enhancedrecovery enable`

| Parameter                          | Description                |
|------------------------------------|----------------------------|
| <code>&lt;epsr-instance&gt;</code> | Name of the EPSR instance. |

**Default** Default is that enhanced recovery mode disabled.

**Mode** EPSR Configuration

**Example** To apply enhanced recovery on the EPSR instance called `blue`, use the command:  
`awplus(config-epsr)# epsr blue enhancedrecovery enable`

**Related Commands** [show epsr](#)

# epsr mode master controlvlan primary port

**Overview** This command creates a master EPSR instance.

**NOTE:** Running your switch as an EPSR master node requires a Premium License.

**Syntax** `epsr <epsr-instance> mode master controlvlan <2-4094>  
primaryport <port>`

| Parameter       | Description   |
|-----------------|---|
| <epsr-instance> | Name of the EPSR instance.  |
| mode            | Determines the node is acting as a master.  |
| master          | Sets switch to be the master node for the named EPSR ring.  |
| controlvlan     | The VLAN that will transmit EPSR control frames.  |
| <2-4094>        | VLAN id.  |
| primaryport     | Primary port for the EPSR instance.   |
| <port>          | The primary port. The port may be a switch port (e.g. port1.0.4) or a static channel group (e.g. sa2). It cannot be a dynamic (LACP) channel group. |

**NOTE:**

The software allows you to configure more than two ports or static channel groups to the control VLAN within a single switch or stacked node. However, we advise against this because in certain situations it can produce unpredictable results.

**Mode** EPSR Configuration

**Example** To create a master EPSR instance called `blue` with `vlan2` as the control VLAN and `port1.0.1` as the primary port, use the command:

```
awplus(config-epsr)# epsr blue mode master controlvlan vlan2  
primaryport port1.0.1
```

**Related Commands** [epsr mode transit controlvlan](#)  
[show epsr](#)

# epsr mode transit controlvlan

**Overview** This command creates a transit EPSR instance.

**Syntax** `epsr <epsr-instance> mode transit controlvlan <2-4094>`

| Parameter       | Description   |
|-----------------|---|
| <epsr-instance> | Name of the EPSR instance.                                  |
| mode            | Determines the node is acting as a transit node.            |
| transit         | Sets switch to be the transit node for the named EPSR ring. |
| controlvlan     | The VLAN that will transmit EPSR control frames.            |
| <2-4094>        | VLAN id.  |

**NOTE:** The software allows you to configure more than two ports or static channel groups to the control VLAN within a single switch or stacked node. However, we advise against this because in certain situations it can produce unpredictable results.

If the control VLAN contains more than two ports (or static channels) an algorithm selects the two ports or channels with the lowest number to be the ring ports. However if the switch has only one channel group is defined to the control vlan, EPSR will not operate on the secondary port.

EPSR does not support Dynamic link aggregation (LACP).

**Mode** EPSR Configuration

**Example** To create a transit EPSR instance called `blue` with `vlan2` as the control VLAN, use the command:

```
awplus(config-epsr)# epsr blue mode transit controlvlan vlan2
```

**Related Commands**

- [epsr mode master controlvlan primary port](#)
- [epsr mode transit controlvlan](#)
- [show epsr](#)

## epsr priority

**Overview** This command sets the priority of an EPSR instance on an EPSR node. Priority is used to prevent “superloops” forming under fault conditions with particular ring configurations. Setting a node to have a priority greater than one, also has the effect of turning on **superloop protection**.

The **no** variant of this command returns the priority of the EPSR instance back to its default value of 0, which also disables EPSR Superloop prevention.

**Syntax** `epsr <epsr-instance> priority <0-127>`  
`no <epsr-instance> priority`

| Parameter                          | Description   |
|------------------------------------|---|
| <code>&lt;epsr-instance&gt;</code> | Name of the EPSR instance.  |
| <code>priority</code>              | The priority of the ring instance selected by the <code>epsr-name</code> parameter.           |
| <code>&lt;0-127&gt;</code>         | The priority to be applied (0 is the lowest priority and represents no superloop protection). |

**Default** The default priority of an EPSR instance on an EPSR node is 0. The negated form of this command resets the priority of an EPSR instance on an EPSR node to the default value.

**Mode** EPSR Configuration

**Example** To set the priority of the EPSR instance called `blue` to the highest priority (127), use the command:

```
awplus(config-epsr)# epsr blue priority 127
```

To reset the priority of the EPSR instance called `blue` to the default (0), use the command:

```
awplus(config-epsr)# no epsr blue priority
```

**Related Commands** [epsr configuration](#)

## epsr state

**Overview** This command enables or disables an EPSR instance.

**Syntax** `epsr <epsr-instance> state {enabled|disabled}`

| Parameter                          | Description                        |
|------------------------------------|------------------------------------|
| <code>&lt;epsr-instance&gt;</code> | The name of the EPSR instance.     |
| <code>state</code>                 | The operational state of the ring. |
| <code>enabled</code>               | EPSR instance is enabled.          |
| <code>disabled</code>              | EPSR instance is disabled.         |

**Mode** EPSR Configuration

**Example** To enable the EPSR instance called `blue`, use the command:

```
awplus(config-epsr)# epsr blue state enabled
```

**Related Commands** [epsr mode master controlvlan primary port](#)  
[epsr mode transit controlvlan](#)



## epsr trap

**Overview** This command enables SNMP traps for an EPSR instance. The traps will be sent when the EPSR instance changes state.

The **no** variant of this command disables SNMP traps for an EPSR instance. The traps will no longer be sent when the EPSR instance changes state.

**Syntax** `epsr <epsr-instance> trap`  
`no epsr <epsr-instance> trap`

| Parameter                          | Description                      |
|------------------------------------|----------------------------------|
| <code>&lt;epsr-instance&gt;</code> | Name of the EPSR instance.       |
| <code>trap</code>                  | SNMP trap for the EPSR instance. |

**Mode** EPSR Configuration

**Example** To enable traps for the EPSR instance called `blue`, use the command:

```
awplus(config-epsr)# epsr blue trap
```

To disable traps for the EPSR instance called `blue`, use the command:

```
awplus(config-epsr)# no epsr blue trap
```

**Related Commands** [epsr mode master controlvlan primary port](#)  
[epsr mode transit controlvlan](#)  
[show epsr](#)

# show debugging epsr

**Overview** This command shows the debugging modes enabled for EPSR.

**Syntax** `show debugging epsr`

**Mode** User Exec and Privileged Exec

**Example** To show the enabled debugging modes, use the command:

```
awplus# show debugging epsr
```

**Related  
Commands** [debug epsr](#)

# show epsr

**Overview** This command displays information about all EPSR instances.

**Syntax** show epsr

**Mode** User Exec and Privileged Exec

**Example** To show the current settings of all EPSR instances, use the command:

```
awplus# show epsr
```

**Output:** The following examples show the output display for a non-superloop topology network.  
**non-superloop topology**

**Table 1:** Example output from the **show epsr** command run on a transit node

| EPSR Information            |            |
|-----------------------------|------------|
| -----                       |            |
| Name .....                  | test2      |
| Mode .....                  | Transit    |
| Status .....                | Enabled    |
| State .....                 | Links-Up   |
| Control Vlan .....          | 2          |
| Data VLAN(s) .....          | 10         |
| Interface Mode .....        | Ports Only |
| First Port .....            | port1.0.1  |
| First Port Status .....     | Down       |
| First Port Direction .....  | Unknown    |
| Second Port .....           | port1.0.2  |
| Second Port Status .....    | Down       |
| Second Port Direction ..... | Unknown    |
| Trap .....                  | Enabled    |
| Master Node .....           | Unknown    |
| Enhanced Recovery .....     | Disabled   |
| -----                       |            |

**Table 2:** Example output from the **show epsr** command run on a master node

| EPSR Information            |            |
|-----------------------------|------------|
| Name .....                  | test4      |
| Mode .....                  | Master     |
| Status .....                | Enabled    |
| State .....                 | Complete   |
| Control Vlan .....          | 4          |
| Data VLAN(s) .....          | 20         |
| Interface Mode .....        | Ports Only |
| Primary Port .....          | port1.0.3  |
| Primary Port Status .....   | Forwarding |
| Secondary Port .....        | port1.0.4  |
| Secondary Port Status ..... | Forwarding |
| Hello Time .....            | 1 s        |
| Failover Time .....         | 2 s        |
| Ring Flap Time .....        | 0 s        |
| Trap .....                  | Enabled    |
| Enhanced Recovery .....     | Disabled   |

**NOTE:** The above screen is only viewable when running the switch as an EPSR Master. Running the switch as a master requires a Premium license.

**Output:  
superloop  
topology**

The following examples show the output display for superloop topology network.

**Table 3:** Example output from the **show epsr** command run on a Master Node

| EPSR Information           |                                 |
|----------------------------|---------------------------------|
| Name .....                 | test4                           |
| Mode .....                 | Master                          |
| Status .....               | Enabled                         |
| State .....                | Complete                        |
| Control Vlan .....         | 4                               |
| Data VLAN(s) .....         | 20                              |
| Interface Mode .....       | Ports Only                      |
| Primary Port .....         | port1.0.3                       |
| Status .....               | Forwarding (logically blocking) |
| Is On Common Segment ..... | No                              |
| Blocking Control .....     | Physical                        |
| Secondary Port .....       | port1.0.4                       |
| Status .....               | Blocked                         |
| Is On Common Segment ..... | No                              |
| Blocking Control .....     | Physical                        |
| Hello Time .....           | 1 s                             |
| Failover Time .....        | 2 s                             |
| Ring Flap Time .....       | 0 s                             |
| Trap .....                 | Enabled                         |
| Enhanced Recovery .....    | Disabled                        |
| SLP Priority .....         | 12                              |

**NOTE:** The above screen is only viewable when running the switch as an EPSR Master.

*Running the switch as a master requires a Premium license.*

**Table 4:** Example output from the **show epsr** command run on a Transit Node

```

EPSR Information
-----
Name ..... test4
Mode ..... Transit
Status ..... Enabled
State ..... Complete
Control Vlan ..... 4
Data VLAN(s) ..... 20
Interface Mode ..... Ports Only
Primary Port ..... port1.0.3
  Status ..... Forwarding (logically blocking)
  Is On Common Segment ..... No
  Blocking Control ..... Physical
Secondary Port ..... port1.0.4
  Status ..... Blocked
  Is On Common Segment ..... No
  Blocking Control ..... Physical
Hello Time ..... 1 s
Failover Time ..... 2 s
Ring Flap Time ..... 0 s
Trap ..... Enabled
Enhanced Recovery ..... Disabled
SLP Priority ..... 12
-----

```

**Table 5:** Parameters displayed in the output of the **show epsr** command

| Parameter on Master Node | Parameter on Transit Node | Description   |
|--------------------------|---------------------------|---|
| Name                     | Name                      | The name of the EPSR instance.  |
| Mode                     | Mode                      | The mode in which the EPSR instance is configured - either Master or Transit  |
| Status                   | Status                    | Indicates whether the EPSR instance is enabled or disabled  |
| State                    | State                     | Indicates state of the EPSR instance's state machine. Master states are: Idle, Complete, and Failed. Transit states are Links-Up, Links-Down, and Pre-Forwarding. |
| Control Vlan             | Control Vlan              | Displays the VID of the EPSR instance's control VLAN.   |
| Data VLAN(s)             | Data VLAN(s)              | The VID(s) of the instance's data VLANs.  |
| Interface Mode           | Interface Mode            | Whether the EPSR instance's ring ports are both physical ports (Ports Only) or are both static aggregators (Channel Groups Only).                                 |
| Primary Port             | First Port                | The EPSR instance's primary ring port.  |

**Table 5:** Parameters displayed in the output of the **show epsr** command (cont.)

| Parameter on Master Node | Parameter on Transit Node | Description  |
|--------------------------|---------------------------|--|
| - Status                 | - Status                  | Whether the ring port is forwarding (Forwarding) or blocking (Blocked), or has link down (Down), and if forwarding or blocking, "(logical)" indicates the instance has only logically set the blocking state of the port because it does not have physical control of it.  |
|                          | - Direction               | The ring port on which the last EPSR control packet was received is indicated by "Upstream". The other ring port is then "Downstream"  |
| - Is On Common Segment   | - Is On Common Segment    | Whether the ring port is on a shared common segment link to another node, and if so, "(highest rank)" indicates it is the highest priority instance on that common segment.  |
| - Blocking Control       | - Blocking Control        | Whether the instance has "physical" or "logical" control of the ring port's blocking in the instance's data VLANs.   |
| Secondary Port           | Second Port               | The EPSR instance's secondary port.  |
| - Status                 | - Status                  | Whether the ring port is forwarding (Forwarding) or blocking (Blocked), or has link down (Down), and if forwarding or blocking, "(logical)" indicates the instance has only logically set the blocking state of the port, because it does not have physical control of it. Note that on a master configured for SuperLoop Prevention (non-zero priority) its secondary ring port can be physically forwarding, but logically blocking. This situation arises when it is not the highest priority node in the topology (and so does not receive LINKS-DOWN messages upon common segment breaks) and a break on a common segment in its ring is preventing reception of its own health messages. |
|                          | - Direction               | The ring port on which the last EPSR control packet was received is indicated by "Upstream". The other ring port is then "Downstream"  |
| - Is On Common Segment   | - Is On Common Segment    | Whether the ring port is on a shared common segment link to another node, and if so, "(highest rank)" indicates it is the highest priority instance on that common segment   |
| - Blocking Control       | - Blocking Control        | Whether the instance has "physical" or "logical" control of the ring port's blocking in the instance's data VLANs  |
| Hello Time               |                           | The EPSR instance's setting for the interval between transmissions of health check messages (in seconds)   |
| Failover Time            |                           | The time (in seconds) the EPSR instance waits to receive a health check message before it decides the ring is down   |
| Ring Flap Time           |                           | The minimum time the EPSR instance must remain in the failed state   |
| Trap                     | Trap                      | Whether the EPSR instance has EPSR SNMP traps enabled  |

**Table 5:** Parameters displayed in the output of the **show epsr** command (cont.)

| Parameter on Master Node | Parameter on Transit Node | Description  |
|--------------------------|---------------------------|--|
| Enhanced Recovery        | Enhanced Recovery         | Whether the EPSR instance has enhanced recovery mode enabled |
| SLP Priority             | SLP Priority              | The EPSR instance's priority (for SuperLoop Prevention)      |

**Related Commands**

- [epsr mode master controlvlan primary port](#)
- [epsr mode transit controlvlan](#)
- [show epsr counters](#)

# show epsr common segments

**Overview** This command displays information about all the superloop common segment ports on the switch.

**Syntax** `show epsr common segments`

**Example** To display information about all the superloop common segment ports on the switch, use the command:

```
awplus# show epsr common segments
```

**Table 6:** Example output from the **show epsr common segments** command

| EPSR Common Segments    |                  |         |      |              |                       |                     |
|-------------------------|------------------|---------|------|--------------|-----------------------|---------------------|
| Common Seg<br>Ring Port | EPSR<br>Instance | Mode    | Prio | Port<br>Type | Phys Ctrl<br>of Port? | Ring<br>Port Status |
| port1.0.24              | test_inst_Red    | Transit | 127  | Second       | Yes                   | Fwding              |
|                         | test_inst_Blue   | Transit | 126  | Second       | No                    | Fwding (logical)    |
|                         | test_inst_Green  | Transit | 125  | First        | No                    | Fwding (logical)    |
| sa4                     | testA            | Master  | 15   | Primary      | Yes                   | Blocking            |
|                         | testB            | Transit | 14   | Second       | No                    | Fwding (logical)    |
| sa5                     | test_55          | Transit | 8    | First        | Yes                   | Down                |
|                         | test_77          | Transit | 7    | First        | No                    | Down                |

**Related  
Commands** [show epsr](#)  
[show epsr summary](#)  
[show epsr counters](#)



# show epsr config-check

**Overview** This command checks the configuration of a specified EPSR instance, or all EPSR instances.

If an instance is enabled, this command will check for the following errors or warnings:

- The control VLAN has the wrong number of ports.
- There are no data VLANs.
- Some of the data VLANs are not assigned to the ring ports.
- The failover time is less than 5 seconds, for a stacked device.
- The instance is a master that shares a common segment with a higher priority instance.
- The instance is a master that shares a common segment with another master.
- The instance is a master with its secondary port on a common segment.

**Syntax** `show epsr [<instance>] config-check`

| Parameter  | Description                            |
|------------|--|
| <instance> | Name of the EPSR instance to check on. |

**Mode** User Exec and Privileged Exec

**Example** To check the configuration of all EPSR instances and display the results, use the command:

```
awplus# show epsr config-check
```

**Table 7:** Example output from the **show epsr config-check** command

| EPSR Instance  | Status  | Description   |
|--|---------|---|
| red  | Warning | Failover time is 2s but should be 5s because device is stacked. |
| white  | OK.     |   |
| blue   | Warning | Primary port is not in data VLANs 29-99.                        |
| orange   | OK.     |   |
| Don't forget to check that this node's configuration is consistent with all other nodes in the ring. |         |   |

**Related Commands** [show epsr](#)

# show epsr <epsr-instance>

**Overview** This command displays information about the specified EPSR instance.

**Syntax** `show epsr <epsr-instance>`

| Parameter                          | Description                |
|------------------------------------|----------------------------|
| <code>&lt;epsr-instance&gt;</code> | Name of the EPSR instance. |

**Mode** User Exec and Privileged Exec

**Example** To show the current settings of the EPSR instance called `blue`, use the command:

```
awplus# show epsr blue
```

**Related Commands**

- [epsr mode master controlvlan primary port](#)
- [epsr mode transit controlvlan](#)
- [show epsr counters](#)

# show epsr <epsr-instance> counters

**Overview** This command displays counter information about the specified EPSR instance.

**Syntax** `show epsr <epsr-instance> counters`

| Parameter                          | Description                |
|------------------------------------|----------------------------|
| <code>&lt;epsr-instance&gt;</code> | Name of the EPSR instance. |

**Mode** User Exec and Privileged Exec

**Example** To show the counters of the EPSR instance called `blue`, use the command:

```
awplus# show epsr blue counters
```

**Related Commands**

- [epsr mode master controlvlan primary port](#)
- [epsr mode transit controlvlan](#)
- [show epsr](#)

# show epsr counters

**Overview** This command displays counter information about all EPSR instances.

**Syntax** `show epsr counters`

**Mode** User Exec and Privileged Exec

**Example** To show the counters of all EPSR instances, use the command:

```
awplus# show epsr counters
```

**Related Commands**

- [epsr mode master controlvlan primary port](#)
- [epsr mode transit controlvlan](#)
- [show epsr](#)

# show epsr summary

**Overview** This command displays summary information about all EPSR instances on the switch

**Syntax** show epsr summary

**Mode** User Exec and Privileged Exec

**Example** To display EPSR summary information, use the command:

```
awplus# show epsr summary
```

**Table 8:** Example output from the **show epsr summary** command

| EPSR Summary Information  |   |          |            |       |           |                              |                           |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
|---|---|----------|------------|-------|-----------|------------------------------|---------------------------|---------------|--|------|--------|-------|-----------|------------------------------|---------------------------|-------|--|--|--|--|--|--|--|------------|---|---------|------------|--|-------|----------------|----------------|-------|---|---------|----------|--|------|--------|-------------|-------|---|---------|------------|--|-------|------------|--------------|--------|---|----------|------|--|------|---------|---------|--------|---|----------|------|--|------|---------|---------|-------|--|--|--|--|--|--|--|
| Abbreviations:  |   |          |            |       |           |                              |                           |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| M = Master node   |   |          |            |       |           |                              |                           |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| T = Transit node  |   |          |            |       |           |                              |                           |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| C = is on a common segment with other instances   |   |          |            |       |           |                              |                           |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| P = instance on a common segment has physical control of the shared port's data VLAN blocking   |   |          |            |       |           |                              |                           |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| LB = ring port is Logically Blocking - applicable to master only  |   |          |            |       |           |                              |                           |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| <table><tr><th colspan="2">EPSR Instance</th><th>Mode</th><th>Status</th><th>State</th><th>Ctrl VLAN</th><th>Primary/1st Prio Port Status</th><th>Secondary/2nd Port Status</th></tr><tr><td colspan="8">-----</td></tr><tr><td>test-12345</td><td>T</td><td>Enabled</td><td>Links-Down</td><td></td><td>6 127</td><td>Blocking (C,P)</td><td>Blocking (C,P)</td></tr><tr><td>test1</td><td>M</td><td>Enabled</td><td>Complete</td><td></td><td>5 12</td><td>Fwding</td><td>Fwding (LB)</td></tr><tr><td>test2</td><td>T</td><td>Enabled</td><td>Pre-Fwding</td><td></td><td>4 126</td><td>Fwding (C)</td><td>Blocking (C)</td></tr><tr><td>localB</td><td>T</td><td>Disabled</td><td>Idle</td><td></td><td>40 0</td><td>Unknown</td><td>Unknown</td></tr><tr><td>localC</td><td>T</td><td>Disabled</td><td>Idle</td><td></td><td>41 0</td><td>Unknown</td><td>Unknown</td></tr><tr><td colspan="8">-----</td></tr></table> |   |          |            |       |           |                              |                           | EPSR Instance |  | Mode | Status | State | Ctrl VLAN | Primary/1st Prio Port Status | Secondary/2nd Port Status | ----- |  |  |  |  |  |  |  | test-12345 | T | Enabled | Links-Down |  | 6 127 | Blocking (C,P) | Blocking (C,P) | test1 | M | Enabled | Complete |  | 5 12 | Fwding | Fwding (LB) | test2 | T | Enabled | Pre-Fwding |  | 4 126 | Fwding (C) | Blocking (C) | localB | T | Disabled | Idle |  | 40 0 | Unknown | Unknown | localC | T | Disabled | Idle |  | 41 0 | Unknown | Unknown | ----- |  |  |  |  |  |  |  |
| EPSR Instance   |   | Mode     | Status     | State | Ctrl VLAN | Primary/1st Prio Port Status | Secondary/2nd Port Status |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| -----   |   |          |            |       |           |                              |                           |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| test-12345  | T | Enabled  | Links-Down |       | 6 127     | Blocking (C,P)               | Blocking (C,P)            |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| test1   | M | Enabled  | Complete   |       | 5 12      | Fwding                       | Fwding (LB)               |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| test2   | T | Enabled  | Pre-Fwding |       | 4 126     | Fwding (C)                   | Blocking (C)              |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| localB  | T | Disabled | Idle       |       | 40 0      | Unknown                      | Unknown                   |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| localC  | T | Disabled | Idle       |       | 41 0      | Unknown                      | Unknown                   |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |
| -----   |   |          |            |       |           |                              |                           |               |  |      |        |       |           |                              |                           |       |  |  |  |  |  |  |  |            |   |         |            |  |       |                |                |       |   |         |          |  |      |        |             |       |   |         |            |  |       |            |              |        |   |          |      |  |      |         |         |        |   |          |      |  |      |         |         |       |  |  |  |  |  |  |  |

# undebbug epsr

**Overview** This command applies the functionality of the **no** variant of the [debug epsr](#) command.

# Part 7: Network Management

# 40

# Allied Telesis Management Framework™ (AMF) Commands

## Introduction

This chapter provides an alphabetical reference for Allied Telesis Management Framework™ (AMF) commands.

### AMF Naming Convention

When AMF is enabled on a device, it will automatically be assigned a host name. If a host name has already been assigned, by using the command [hostname](#) on page 224, this will remain. If however, no host name has been assigned, then the name applied will be the prefix, **host\_** followed (without a space) by the MAC address of the device. For example, a device whose MAC address is **0016.76b1.7a5e** will have the name **host\_0016\_76b1\_7a5e** assigned to it.

To efficiently manage your network using AMF, we strongly advise that you devise a naming convention for your network devices, and accordingly apply an appropriate hostname to each device in your AMF network.

### Command List

- [“atmf area”](#) on page 1536
- [“atmf area password”](#) on page 1538
- [“atmf backup”](#) on page 1540
- [“atmf backup area-masters delete”](#) on page 1541
- [“atmf backup area-masters enable”](#) on page 1542
- [“atmf backup area-masters now”](#) on page 1543
- [“atmf backup area-masters synchronize”](#) on page 1544
- [“atmf backup bandwidth”](#) on page 1545
- [“atmf backup delete”](#) on page 1546
- [“atmf backup enable”](#) on page 1547
- [“atmf backup guests delete”](#) on page 1548
- [“atmf backup guests enable”](#) on page 1549
- [“atmf backup guests now”](#) on page 1550



- [“atmf backup guests synchronize”](#) on page 1551
- [“atmf backup now”](#) on page 1552
- [“atmf backup redundancy enable”](#) on page 1554
- [“atmf backup server”](#) on page 1555
- [“atmf backup stop”](#) on page 1557
- [“atmf backup synchronize”](#) on page 1558
- [“atmf cleanup”](#) on page 1559
- [“atmf controller”](#) on page 1560
- [“atmf distribute firmware”](#) on page 1561
- [“atmf domain vlan”](#) on page 1563
- [“atmf enable”](#) on page 1565
- [“atmf group \(membership\)”](#) on page 1566
- [“atmf guest-class”](#) on page 1568
- [“atmf log-verbose”](#) on page 1570
- [“atmf management subnet”](#) on page 1571
- [“atmf management vlan”](#) on page 1573
- [“atmf master”](#) on page 1574
- [“atmf mtu”](#) on page 1575
- [“atmf network-name”](#) on page 1576
- [“atmf node-recovery disable-forwarding”](#) on page 1577
- [“atmf provision”](#) on page 1578
- [“atmf provision node clone”](#) on page 1579
- [“atmf provision node configure boot config”](#) on page 1581
- [“atmf provision node configure boot system”](#) on page 1582
- [“atmf provision node create”](#) on page 1583
- [“atmf provision node delete”](#) on page 1585
- [“atmf provision node license-cert”](#) on page 1587
- [“atmf provision node locate”](#) on page 1589
- [“atmf reboot-rolling”](#) on page 1590
- [“atmf recover”](#) on page 1594
- [“atmf recover guest”](#) on page 1596
- [“atmf recover led-off”](#) on page 1597
- [“atmf remote-login”](#) on page 1598
- [“atmf restricted-login”](#) on page 1599
- [“atmf select-area”](#) on page 1600

- [“atmf virtual-link”](#) on page 1601
- [“atmf working-set”](#) on page 1603
- [“clear atmf links statistics”](#) on page 1605
- [“debug atmf”](#) on page 1606
- [“debug atmf packet”](#) on page 1608
- [“discovery”](#) on page 1611
- [“erase factory-default”](#) on page 1613
- [“http-enable”](#) on page 1614
- [“modeltype”](#) on page 1616
- [“show atmf”](#) on page 1617
- [“show atmf area”](#) on page 1621
- [“show atmf area guests”](#) on page 1624
- [“show atmf area guests-detail”](#) on page 1626
- [“show atmf area nodes”](#) on page 1628
- [“show atmf area nodes-detail”](#) on page 1630
- [“show atmf area summary”](#) on page 1632
- [“show atmf backup”](#) on page 1633
- [“show atmf backup area”](#) on page 1637
- [“show atmf backup guest”](#) on page 1639
- [“show atmf detail”](#) on page 1641
- [“show atmf group”](#) on page 1643
- [“show atmf group members”](#) on page 1645
- [“show atmf guest”](#) on page 1647
- [“show atmf links”](#) on page 1649
- [“show atmf links detail”](#) on page 1651
- [“show atmf links guest”](#) on page 1660
- [“show atmf links statistics”](#) on page 1663
- [“show atmf memory \(deprecated\)”](#) on page 1666
- [“show atmf nodes”](#) on page 1667
- [“show atmf provision nodes”](#) on page 1669
- [“show atmf tech”](#) on page 1670
- [“show atmf virtual-links”](#) on page 1673
- [“show atmf working-set”](#) on page 1675
- [“show debugging atmf”](#) on page 1676
- [“show debugging atmf packet”](#) on page 1677

- [“show running-config atmf”](#) on page 1678
- [“switchport atmf-arealink remote-area”](#) on page 1679
- [“switchport atmf-crosslink”](#) on page 1681
- [“switchport atmf-guestlink”](#) on page 1683
- [“switchport atmf-link”](#) on page 1685
- [“type atmf node”](#) on page 1686
- [“undebg atmf”](#) on page 1689
- [“username”](#) on page 1690

# atmf area

**Overview** This command creates an AMF area and gives it a name and ID number. Use the **no** variant of this command to remove the AMF area. This command is only valid on AMF controllers, master nodes and gateway nodes.

**Syntax** `atmf area <area-name> id <1-126> [local]`  
`no atmf area <area-name>`

| Parameter   | Description  |
|-------------|--|
| <area-name> | The AMF area name. The area name can be up to 15 characters long. Valid characters are:<br>a..z<br>A..Z<br>0..9<br>-<br>_<br>Names are case sensitive and must be unique within an AMF network. The name cannot be the word "local" or an abbreviation of the word "local" (such as "l", "lo" etc.). |
| <1-126>     | An ID number that uniquely identifies this area.   |
| local       | Set the area to be the local area. The local area contains the device you are configuring.   |

**Mode** Global Configuration

**Usage** This command enables you to divide your AMF network into areas. Each area is managed by at least one AMF master node. Each area can have up to 120 nodes, depending on the license installed on that area's master node.

The whole AMF network is managed by up to 8 AMF controllers. Each AMF controller can communicate with multiple areas. The number of areas supported on a controller depends on the license installed on that controller.

You must give each area in an AMF network a unique name and ID number.

Only one local area can be configured on a device. You must specify a local area on each controller, remote AMF master, and gateway node.

**Example** To create the AMF area named *New-Zealand*, with an ID of 1, and specify that it is the local area, use the command:

```
controller-1(config)# atmf area New-Zealand id 1 local
```

To configure a remote area named *Auckland*, with an ID of 100, use the command:

```
controller-1(config)# atmf area Auckland id 100
```

**Related  
Commands**

- atmf area password
- show atmf area
- show atmf area summary
- show atmf area nodes
- switchport atmf-arealink remote-area

# atmf area password

**Overview** This command sets a password on an AMF area.

Use the **no** variant of this command to remove the password.

This command is only valid on AMF controllers, master nodes and gateway nodes. The area name must have been configured first.

**Syntax** `atmf area <area-name> password [8] <password>`  
`no atmf area <area-name> password`

| Parameter   | Description   |
|-------------|---|
| <area-name> | The AMF area name.  |
| 8           | This parameter is displayed in <b>show running-config</b> output to indicate that it is displaying the password in encrypted form. You should not enter <b>8</b> on the CLI yourself. |
| <password>  | The password is between 8 and 32 characters long. It can include spaces.  |

**Mode** Global Configuration

**Usage** You must configure a password on each area that an AMF controller communicates with, except for the controller's local area. The areas must already have been created using the [atmf area](#) command.

Enter the password identically on both of:

- the area that locally contains the controller, and
- the remote AMF area masters

The command **show running-config atmf** will display the encrypted version of this password. The encryption keys will match between the controller and the remote AMF master.

If multiple controller and masters exist in an area, they must all have the same area configuration.

**Example** To give the AMF area named *Auckland* a password of "secure#1" use the following command on the controller:

```
controller-1(config)# atmf area Auckland password secure#1
```

and also use the following command on the master node for the Auckland area:

```
auck-master(config)# atmf area Auckland password secure#1
```

**Related  
Commands**

- atmf area
- show atmf area
- show atmf area summary
- show atmf area nodes
- switchport atmf-arealink remote-area

# atmf backup

**Overview** This command can only be applied to a master node. It manually schedules an AMF backup to start at a specified time and to execute a specified number of times per day.

Use the **no** variant of this command to disable the schedule.

**Syntax** `atmf backup {default|<hh:mm> frequency <1-24>}`

| Parameter        | Description  |
|------------------|--|
| default          | Restore the default backup schedule.   |
| <hh:mm>          | Sets the time of day to apply the first backup, in hours and minutes. Note that this parameter uses the 24 hour clock. |
| backup           | Enables AMF backup to external media.  |
| frequency <1-24> | Sets the number of times within a 24 hour period that backups will be taken.   |

**Default** Backups run daily at 03:00 AM, by default

**Mode** Global Configuration

**Usage** Running this command only configures the schedule. To enable the schedule, you should then apply the command [atmf backup enable](#).

**Example** To schedule backup requests to begin at 11 am and execute twice per day (11 am and 11 pm), use the following command:

```
node_1# configure terminal
node_1(config)# atmf backup 11:00 frequency 2
```

**CAUTION:** File names that comprise identical text, but with differing case, such as *Test.txt* and *test.txt*, will not be recognized as being different on FAT32 based backup media such as a USB storage device. However, these filenames will be recognized as being different on your Linux based device. Therefore, for good practice, ensure that you apply a consistent case structure for your back-up file names.

**Related Commands** [atmf backup enable](#)  
[atmf backup stop](#)  
[show atmf backup](#)



# atmf backup area-masters delete

**Overview** Use this command to delete from external media, a backup of a specified node in a specified area.

Note that this command can only be run on an AMF controller.

**Syntax** `atmf backup area-masters delete area <area-name> node <node-name>`

| Parameter                      | Description   |
|--------------------------------|---|
| <code>&lt;area-name&gt;</code> | The area that contains the node whose backup will be deleted. |
| <code>&lt;node-name&gt;</code> | The node whose backup will be deleted.                        |

**Mode** Privileged Exec

**Example** To delete the backup of the remote area-master named “well-gate” in the AMF area named Wellington, use the command:

```
controller-1# atmf backup area-masters delete area Wellington  
node well-gate
```

**Related Commands** [show atmf backup area](#)

# atmf backup area-masters enable

**Overview** Use this command to enable backup of remote area-masters from the AMF controller. This command is only valid on AMF controllers.

Use the **no** form of the command to stop backups of remote area-masters.

**Syntax** `atmf backup area-masters enable`  
`no atmf backup area-masters enable`

**Mode** Global configuration

**Default** Remote area backups are disabled by default

**Usage** Use the following commands to configure the remote area-master backups:

- `atmf backup` to configure when the backups begin and how often they run
- `atmf backup server` to configure the backup server.

**Example** To enable scheduled backups of AMF remote area-masters, use the commands:

```
controller-1# configure terminal
controller-1(config)# atmf backup area-masters enable
```

To disable scheduled backups of AMF remote area-masters, use the commands:

```
controller-1# configure terminal
controller-1(config)# no atmf backup area-masters enable
```

**Related Commands** `atmf backup server`  
`atmf backup`  
`show atmf backup area`

# atmf backup area-masters now

**Overview** Use this command to run an AMF backup of one or more remote area-masters from the AMF controller immediately.

This command is only valid on AMF controllers.

**Syntax** `atmf backup area-masters now [area <area-name>|area <area-name>  
node <node-name>]`

| Parameter   | Description                                    |
|-------------|--|
| <area-name> | The area whose area-masters will be backed up. |
| <node-name> | The node that will be backed up.               |

**Mode** Privileged Exec

**Example** To back up all local master nodes in all areas controlled by controller-1, use the command

```
controller-1# atmf backup area-masters now
```

To back up all local masters in the AMF area named Wellington, use the command

```
controller-1# atmf backup area-masters now area Wellington
```

To back up the local master “well-master” in the Wellington area, use the command

```
controller-1# atmf backup area-masters now area Wellington node  
well-master
```

**Related  
Commands** [atmf backup area-masters enable](#)  
[atmf backup area-masters synchronize](#)  
[show atmf backup area](#)

# atmf backup area-masters synchronize

**Overview** Use this command to synchronize backed-up area-master files between the active remote file server and the backup remote file server. Files are copied from the active server to the remote server.

Note that this command is only valid on AMF controllers.

**Syntax** `atmf backup area-masters synchronize`

**Mode** Privileged Exec

**Example** To synchronize backed-up files between the remote file servers for all area-masters, use the command:

```
controller-1# atmf backup area-masters synchronize
```

**Related Commands** [atmf backup area-masters enable](#)  
[atmf backup area-masters now](#)  
[show atmf backup area](#)

# atmf backup bandwidth

**Overview** This command sets the maximum bandwidth in kilobytes per second (kBps) available to the AMF backup process. This command enables you to restrict the bandwidth that is utilized for downloading file contents during a backup.

**NOTE:** *This command will only run on an AMF master. An error message will be generated if the command is attempted on node that is not a master.*

*Also note that setting the bandwidth value to zero will allow the transmission of as much bandwidth as is available, which can exceed the maximum configurable speed of 1000 kBps. In effect, zero means unlimited.*

Use the **no** variant of this command to reset (to its default value of zero) the maximum bandwidth in kilobytes per second (kBps) available when initiating an AMF backup. A value of zero tells the backup process to transfer files using unlimited bandwidth.

**Syntax** `atmf backup bandwidth <0-1000>`  
`no atmf backup bandwidth`

| Parameter                   | Description                                       |
|-----------------------------|---|
| <code>&lt;0-1000&gt;</code> | Sets the bandwidth in kilobytes per second (kBps) |

**Default** The default value is zero, allowing unlimited bandwidth when executing an AMF backup.

**Mode** Global Configuration

**Examples** To set an atmf backup bandwidth of 750 kBps, use the commands:

```
node2# configure terminal
node2(config)# atmf backup bandwidth 750
```

To set the AMF backup bandwidth to the default value for unlimited bandwidth, use the commands:

```
node2# configure terminal
node2(config)# no atmf backup bandwidth
```

**Related Commands** [show atmf backup](#)

# atmf backup delete

**Overview** This command removes the backup file from the external media of a specified AMF node.

Note that this command can only be run from an AMF master node.

**Syntax** `atmf backup delete <node-name>`

| Parameter                      | Description   |
|--------------------------------|---|
| <code>&lt;node-name&gt;</code> | The AMF node name of the backup file to be deleted. |

**Mode** Privileged Exec

**Example** To delete the backup file from node2, use the following command:

```
Node_1# atmf backup delete node2
```

**Related Commands**

- [show atmf backup](#)
- [atmf backup now](#)
- [atmf backup stop](#)

# atmf backup enable

**Overview** This command enables automatic AMF backups on the AMF master node that you are connected to. By default, automatic backup starts at 3:00 AM. However, this schedule can be changed by the [atmf backup](#) command. Note that backups are initiated and stored only on the master nodes.

Use the **no** variant of this command to disable any AMF backups that have been scheduled and previously enabled.

**Syntax** `atmf backup enable`  
`no atmf backup enable`

**Default** Automatic AMF backup functionality is enabled on the AMF master when it is configured and external media, i.e. an SD card or a USB storage device or remote server, is detected.

**Mode** Global Configuration

**Usage** A warning message will appear if you run the [atmf backup enable](#) command with either insufficient or marginal memory availability on your external storage device.

You can use the command [show atmf backup](#) on page 1633 to check the amount of space available on your external storage device.

**Example** To turn on automatic AMF backup, use the following command:

```
AMF_Master_1# configure terminal
AMF_Master_1(config)# atmf backup enable
```

**Related Commands** [show atmf](#)  
[show atmf backup](#)  
[atmf backup](#)  
[atmf backup now](#)  
[atmf enable](#)

# atmf backup guests delete

**Overview** This command removes a guest node's backup files from external media such as a USB drive, SD card, or an external file server.

**Syntax** `atmf backup guests delete <node-name> <guest-port>`

| Parameter                       | Description                          |
|---------------------------------|--------------------------------------|
| <code>&lt;node-name&gt;</code>  | The name of the guest's parent node. |
| <code>&lt;guest-port&gt;</code> | The port number on the parent node.  |

**Mode** User Exec/Privileged Exec

**Example** On a parent node named **node1** (which, in this case, the user has a direct console connection to) use the following command to remove the backup files of the guest node that is directly connected to port1.0.3.

```
node1# atmf backup guests delete node1 port1.0.3
```

**Related Command** [atmf backup delete](#)  
[atmf backup area-masters delete](#)  
[show atmf backup guest](#)



# atmf backup guests enable

**Overview** Use this command to enable backups of remote guest nodes from an ATMF master.

Use the **no** variant of this command to disable the ability of the guest nodes to be backed up.

**Syntax** `atmf backup guests enable`  
`no atmf backup guests enable`

**Default** Guest node backups are enabled by default.

**Mode** Global Config

**Example** On the ATMF master node, enable all scheduled guest node backups:

```
atmf-master# configure terminal
atmf-master(config)# atmf backup guests enable
```

**Related Commands** [atmf backup area-masters enable](#)  
[show atmf backup guest](#)  
[atmf backup guests synchronize](#)

# atmf backup guests now

**Overview** This command manually triggers an AMF backup of guest nodes on a AMF Master.

**Syntax** `atmf backup guests now [<node-name>] [<guest-port>]`

| Parameter                       | Description                                      |
|---------------------------------|--|
| <code>&lt;node-name&gt;</code>  | The name of the guest's parent node.             |
| <code>&lt;guest-port&gt;</code> | The port number that connects to the guest node. |

**Default** N/A

**Mode** Privileged Exec

**Example** Use the following command to manually trigger the backup of all guests in the AMF network

```
awplus# atmf backup guests now
```

**Example** To manually trigger the backup of a guest node connected to port 1.0.23 of node1, use the following command:

```
awplus# atmf backup guests now node1 port1.0.23
```

**Related Commands** [show atmf backup guest](#)

# atmf backup guests synchronize

**Overview** This command initiates a manual synchronization of all guest backup file-sets across remote file servers and various redundancy backup media, such as USB storage devices. This facility ensures that each device contains the same backup image files. Note that this backup synchronization process will occur as part of the regular backups scheduled by the [atmf backup](#) command.

**Syntax** `atmf backup guests synchronize`

**Default** N/A

**Mode** User Exec/Privileged Exec

**Example** To synchronize backups across remote file servers and storage devices, use the command:

```
Node1#atmf backup guests synchronize
```

**Related Commands** [atmf backup redundancy enable](#)  
[show atmf guest](#)  
[atmf backup guests enable](#)

# atmf backup now

**Overview** This command initiates an immediate AMF backup of either all AMF members, or a selected AMF member. Note that this backup information is stored in the external media on the master node of the device on which this command is run, even though the selected AMF member may not be a master node.

Note that this command can only be run on an AMF master node.

**Syntax** `atmf backup now [<nodename>]`

| Parameter  | Description   |
|--|---|
| <code>&lt;nodename&gt;</code><br>or<br><code>&lt;hostname&gt;</code> | The name of the AMF member to be backed up, as set by the command <code>hostname</code> on page 224. Where no name has been assigned to this device, then you must use the default name, which is the word "host", then an underscore, then (without a space) the MAC address of the device to be backed up. For example <code>host_0016_76b1_7a5e</code> . Note that the node-name appears as the command Prompt when in Privileged Exec mode. |

**Default** A backup is initiated for all nodes on the AMF (but stored on the master nodes).

**Mode** Privileged Exec

**Usage** Although this command will select the AMF node to be backed-up, it can only be run from any AMF master node.

**NOTE:** The backup produced will be for the selected node but the backed-up config will reside on the external media of the AMF master node on which the command was run. However, this process will result in the information on one master being more up-to-date. To maintain concurrent backups on both masters, you can apply the `backup now` command to the master working-set. This is shown in Example 4 below.

**Example 1** In this example, an AMF member has not been assigned a host name. The following command is run on the `AMF_Master_2` node to immediately backup the device that is identified by its MAC address of `0016.76b1.7a5e`:

```
AMF_Master_2# atmf backup now host_0016_76b1_7a5e
```

**NOTE:** When a host name is derived from its MAC address, the syntax format entered changes from `XXXX.XXXX.XXXX` to `XXXX_XXXX_XXXX`.

**Example 2** In this example, an AMF member has the host name, **office\_annex**. The following command will immediately backup this device:

```
AMF_Master_2# atmf backup now office_annex
```

This command is initiated on the device's master node named **AMF\_Master\_2** and initiates an immediate backup on the device named **office\_annex**.

**Example 3** To initiate from AMF\_master\_1 an immediate backup of all AMF member nodes, use the following command:

```
AMF_Master_1# amf backup now
```

**Example 4** To initiate an immediate backup of the node with the host-name "office\_annex" and store the configuration on both masters, use the following process:

From the AMF\_master\_1, set the working-set to comprise only of the automatic group, master nodes.

```
AMF_Master_1# atmf working-set group master
```

This command returns the following display:

```
=====
AMF_Master_1, AMF_Master_2
=====

Working set join
```

Backup the AMF member with the host name, **office\_annex** on both the master nodes as defined by the working set.

```
AMF_Master[2]# atmf backup now office_annex
```

Note that the [2] shown in the command prompt indicates a 2 node working-set.

**Related  
Commands**

- [atmf backup](#)
- [atmf backup stop](#)
- [hostname](#)
- [show atmf backup](#)

# atmf backup redundancy enable

**Overview** This command is used to enable or disable AMF backup redundancy.

**Syntax** `atmf backup redundancy enable`  
`no atmf backup redundancy enable`

**Default** Disabled

**Mode** Global Configuration

**Usage** If the AMF Master or Controller supports any removable media (SD card/USB), it uses the removable media as the redundant backup for the AMF data backup.  
  
This feature is valid only if remote file servers are configured on the AMF Master or Controller.

**Example** To enable AMF backup redundancy, use the commands:

```
awplus# configure terminal
awplus(config)# atmf backup redundancy enable
```

To disable AMF backup redundancy, use the commands:

```
awplus# configure terminal
awplus(config)# no atmf backup redundancy enable
```

**Related Commands** [atmf backup synchronize](#)  
[show atmf backup](#)  
[show atmf backup area](#)

# atmf backup server

**Overview** This command configures remote file servers as the destination for AMF backups.

Use the **no** variant of this command to remove the destination server(s). When all servers are removed the system will revert to backup from external media.

**Syntax** `atmf backup server id {1|2} <hostlocation> username <username>  
[path <path>|port <1-65535>]  
no atmf backup server id {1|2}`

| Parameter      | Description  |
|----------------|--|
| id             | Remote server backup server identifier.  |
| {1 2}          | The backup server identifier number (1 or 2). Note that there can be up to two backup servers, numbered 1 and 2 respectively, and you would need to run this command separately for each server. |
| <hostlocation> | Either the name or the IP address (IPv4 or IPv6) of the selected backup server (1 or 2).   |
| username       | Configure the username to log in with on the selected remote file server.  |
| <username>     | The selected remote file server's username.  |
| path           | The location of the backup files on the selected remote file server. By default this will be the home directory of the username used to log in with.   |
| <path>         | The directory path utilized to store the backup files on the selected remote file server. No spaces are allowed in the path.   |
| port           | The connection to the selected remote backup file server using SSH. By default SSH connects to a device on TCP port 22 but this can be changed with this command.                                |
| <1-65535>      | A TCP port within the specified range.   |

**Defaults** Remote backup servers are not configured. The default SSH TCP port is 22. The path utilized on the remote file server is the home directory of the username.

**Mode** Global Exec

**Usage** The hostname and username parameters must both be configured.

**Examples** To configure server 1 with an IPv4 address and a username of *backup1*, use the commands:

```
AMF_Master_1# configure terminal
AMF_Master_1(config)# atmf backup server id 1 192.168.1.1
username backup1
```

To configure server 1 with an IPv6 address and a username of *backup1*, use the command:

```
AMF_backup1_1# configure terminal
AMF_Master_1(config)# atmf backup server id 1 FFEE::01 username
backup1
```

To configure server 2 with a hostname and username, use the command:

```
AMF_Master_1# configure terminal
AMF_Master_1(config)# atmf backup server id 2 www.example.com
username backup2
```

To configure server 2 with a hostname and username in addition to the optional path and port parameters, use the command:

```
AMF_Master_1# configure terminal
AMF_Master_1(config)# atmf backup server id 2 www.example.com
username backup2 path tokyo port 1024
```

To unconfigure the AMF remote backup file server 1, use the command:

```
AMF_Master_1# configure terminal
AMF_Master_1(config)# no atmf backup server id 1
```

**Related  
Commands**   [show atmf backup](#)



# atmf backup stop

**Overview** Running this command stops a backup that is currently running on the master node you are logged onto. Note that if you have two masters and want to stop both, then you can either run this command separately on each master node, or add both masters to a working set, and issue this command to the working set.

Note that this command can only be run on a master node.

**Syntax** `atmf backup stop`

**Mode** Privileged Exec

**Usage** This command is used to halt an AMF backup that is in progress. In this situation the backup process will finish on its current node and then stop.

**Example** To stop a backup that is currently executing on master node node-1, use the following command:

```
AMF_Master_1# amf backup stop
```

**Related Commands**

- [atmf backup](#)
- [atmf backup enable](#)
- [atmf backup now](#)
- [show atmf backup](#)

# atmf backup synchronize

**Overview** For the master node you are connected to, this command initiates a system backup of files from the node's active remote file server to its backup remote file server. Note that this process happens automatically each time the network is backed up.

Note that this command can only be run from a master node.

**Syntax** `atmf backup synchronize`

**Mode** Privileged Exec

**Example** When connected to the master node AMF\_Master\_1, the following command will initiate a backup of all system related files from its active remote file server to its backup remote file server.

```
AMF_Master_1# atmf backup synchronize
```

**Related Commands**

- [atmf backup enable](#)
- [atmf backup redundancy enable](#)
- [show atmf](#)
- [show atmf backup](#)

# atmf cleanup

**Overview** This command erases all data from NVS and all data from Flash excluding the following:

- The current release file and its /flash/.release file
- The backup release file and /flash/.backup file
- v1 license files /flash/.configs/.swfeature.lic
- v2 license files /flash/.configs/.sw\_v2.lic

It then reboots to put the device in a clean state ready to be used as a replacement node on a provisioned port.

**Syntax** atmf cleanup

**Mode** Privileged Exec

**Usage** This command is an alias to the [erase factory-default](#) command.

**Example** To erase data, use the command:

```
Node_1# atmf cleanup
```

This command will erase all NVS, all flash contents except for the boot release, and any license files, and then reboot the switch. Continue? (y/n):y

**Related Commands** [erase factory-default](#)

# atmf controller

**Overview** Use this command to configure the device as an AMF controller. This enables you to split a large AMF network into multiple areas.

The number of areas supported on a controller depends on the license installed on that controller.

**Syntax** `atmf controller`  
`no atmf controller`

**Mode** Global configuration

**Usage** A valid AMF license must be available before this command can be applied.

**Example** To configure the node named *controller-1* as an AMF controller, use the commands:

```
controller-1# configure terminal
controller-1(config)# atmf controller
```

To stop the node named *controller-1* from being an AMF controller, use the commands:

```
controller-1# configure terminal
controller-1(config)# no atmf controller
```

**Related  
Commands** [atmf area](#)  
[show atmf](#)

# atmf distribute firmware

**Overview** This command can be used to upgrade software one AMF node at a time. A URL can be selected from any media location. The latest compatible release for a node will be selected from this location.

Several procedures are performed to ensure the upgrade will succeed. This includes checking the current node release boots from flash. If there is enough space on flash the software release is copied to flash on the new location.

The new release name is updated using the [boot system](#) command. The old release will become the backup release file. If a release file exists in a remote device (such as TFTP or HTTP, for example) then the URL should specify the exact release filename without using a wild card character.

The command will continue to upgrade software until all nodes are upgraded. At the end of the upgrade cycle the command should be used on the working-set.

**Syntax** `atmf distribute firmware <filename>`

| Parameter                     | Description   |
|-------------------------------|---|
| <code>&lt;filename&gt;</code> | The filename and path of the file. See the <a href="#">File Management Feature Overview and Configuration Guide</a> for valid syntax. |

**Mode** Privileged Exec

**Examples** To upgrade nodes in a AMF network with a predefined AMF group called `sw_team`, use the following commands:

```
SW_Team1# atmf working-set group sw_team
```

```
=====
SW_Team1, SW_Team2, SW_Team3:
=====
Working set join
```

```
ATMF_NETWORK[3]# atmf distribute firmware card:*.rel
```

```
Retrieving data from SW_Team1
Retrieving data from SW_Team2
Retrieving data from SW_Team3

ATMF Firmware Upgrade:

Node Name           New Release File           Status
-----
SW_Team1            x510-main-20140204-2.rel   Release ready
SW_Team2            x610-main-20140204-2.rel   Release ready
SW_Team3            x610-main-20140204-2.rel   Release ready
Continue the rolling reboot ? (y/n):y
=====
Copying Release      : x510-main-20140204-2.rel to SW_Team1
Updating Release     : x510-main-20140204-2.rel information on SW_Team1
=====
Copying Release      : x610-main-20140204-2.rel to SW_Team2
Updating Release     : x610-main-20140204-2.rel information on SW_Team2
=====
Copying Release      : x610-main-20140204-2.rel to SW_Team3
Updating Release     : x610-main-20140204-2.rel information on SW_Team3
=====
New firmware will not take effect until nodes are rebooted.
=====

ATMF_NETWORK[3]#
```

**Related**   [atmf working-set](#)  
**Commands**

# atmf domain vlan

**Overview** The AMF domain VLAN is one of the internal VLANs that are used to communicate information about the state of the AMF network between nodes. AMF uses its internal VLANs (the management VLAN and the domain VLAN) to communicate its inter nodal network status information. These VLANs must be reserved for AMF and not used for other purposes.

When an AMF network is first created all its nodes are assigned a domain VLAN with a default (domain) VID of 4091. An important point conceptually is that although this VLAN then exists globally across the AMF network, it is assigned separately to each domain. The AMF network therefore can be thought of as comprising a series of domain VLANs each having the same VID and each being applied to a horizontal slice (domain) of the AMF. It follows therefore that the domain VLANs are only applied to ports that form cross-links and not to ports that form uplinks/downlinks.

If you assign a VLAN ID to this VLAN (i.e. changing its value from the default of 4091) then you will need to do this separately on every device within the AMF network. The AMF domain subnet will then be applied to this new VID when all devices within the AMF network are next rebooted.

Use the **no** variant of this command to reset the VLAN ID to its default value of 4091.

**Syntax** `atmf domain vlan <2-4090>`  
`no atmf domain vlan`

| Parameter | Description                             |
|-----------|---|
| <2-4090>  | The VLAN number in the range 2 to 4090. |

**Default** The default domain VLAN ID for the AMF is 4091.

**Mode** Global Configuration

**Usage** The VLANs involved in this process must be reserved for AMF and cannot be used for other purposes. This command enables you to change the domain VLAN to match your network's specific configuration.

**CAUTION:** *Setting this command, then rebooting the device, will only apply the AMF VLAN for the device being configured. The new domain VLAN will not become effective for the AMF network until all its member nodes have been updated, and all its member devices rebooted.*

As part of its automatic creation process, this VLAN will also be assigned an IP subnet address based on the value configured by the command [atmf management subnet](#) on page 1571. Refer to this command for more information.

**Examples** To change the AMF domain VLAN to 4000 use the following commands:

```
node-1# configure terminal
node-1(config)# atmf domain vlan 4000
```

To reset the AMF domain VLAN to its default of 4091, use the following commands:

```
node-1# configure terminal
node-1(config)# no atmf domain vlan
```



# atmf enable

**Overview** This command manually enables (turns on) the AMF feature for the device being configured.

Use the **no** variant of this command to disable (turn off) the AMF feature on the member node.

**Syntax** `atmf enable`  
`no atmf enable`

**Default** Once AMF is configured, the AMF feature starts automatically when the device starts up.

**Mode** Global Configuration

**Usage** The device does not auto negotiate AMF domain specific settings such as the Network Name. You should therefore, configure your device with any domain specific (non default) settings before enabling AMF.

**Examples** To turn off AMF, use the command:

```
MyNode# config terminal
MyNode(config)# no atmf enable
```

To turn on AMF, use the command:

```
MyNode(config)# atmf enable
```

This command returns the following display:

```
% Warning: The ATMF network config has been set to enable
% Save the config and restart the system for this change to take
effect.
```

# atmf group (membership)

**Overview** This command configures a device to be a member of one or more AMF groups. Groups exist in three forms: Implicit Groups, Automatic Groups, and User-defined Groups.

- Implicit Groups
  - all: All nodes in the AMF
  - current: The current working-set
  - local: The originating node.

Note that the Implicit Groups do not appear in show group output.

- Automatic Groups - These are defined by hardware architecture, e.g. x510, x610, x8100, AR3050S, AR4050S.
- User-defined Groups - These enable you to define arbitrary groups of AMF members based on your own criteria.

Each node in the AMF is automatically assigned membership to the implicit groups, and the automatic groups that are appropriate to its node type, e.g. x610, PoE. Similarly, nodes that are configured as masters are automatically assigned to the master group.

Use the **no** variant of this command to remove the membership.

**Syntax** `atmf group <group-list>`  
`no atmf group <group-list>`

| Parameter                       | Description  |
|---------------------------------|--|
| <code>&lt;group-list&gt;</code> | A list of group names. These should be entered as a comma delimited list without spaces. |

**Mode** Global Configuration

**Usage** You can use this command to define your own arbitrary groups of AMF members based on your own network's configuration requirements. Applying a node to a non existing group will result in the group automatically being created.

Note that the master nodes are automatically assigned to be members of the pre-existing master group.

The following example configures the device to be members of three groups; two are company departments, and one comprises all devices located in building\_2. To avoid having to run this command separately on each device that is to be added to these groups, you can remotely assign all of these devices to a working-set, then use the capabilities of the working-set to apply the [atmf group \(membership\)](#) command to all members of the working set.

**Example 1** To specify the device to become a member of AMF groups named *marketing*, *sales*, and *building\_2*, use the following commands:

```
node-1# configure terminal
node-1(config)# atmf group marketing,sales,building_2
```

**Example 2** To add the nodes *member\_node\_1* and *member\_node\_2* to groups *building1* and *sales*, first add the nodes to the working-set:

```
master_node# atmf working-set member_node_1,member_node_2
```

This command returns the following output confirming that the nodes *member\_node\_1* and *member\_node\_2* are now part of the working-set:

```
=====
member_node_1, member_node_2
=====

Working set join
```

Then add the members of the working set to the groups:

```
atmf-net[2]# configure terminal
atmf-net[2](config)# atmf group building1,sales
atmf-net[2](config)# exit
atmf-net[2]# show atmf group
```

This command returns the following output displaying the groups that are members of the working-set.

```
=====
member_node_1
=====

AMF group information

building1, sales
```

**Related Commands** [show atmf group](#)  
[show atmf group members](#)

# atmf guest-class

**Overview** This modal command creates a guest-class. Guest-classes are modal templates that can be applied to selected guest types. Once you have created a guest-class, you can select it by entering its mode. From here, you can then configure a further set of operational settings specifically for the new guest-class. These settings can then all be applied to a guest link by running the [switchport atmf-guestlink](#) command. The following settings can be configured from each guest class mode:

- discovery method
- model type
- http-enable setting
- guest port, user name, and password

The **no** variant of this command removes the guest-class. Note that you cannot remove a guest-class that is assigned to a port.

**Syntax** `atmf guest-class <guest-class-name>`  
`no atmf guest-class`

| Parameter                             | Description  |
|---------------------------------------|--|
| <code>&lt;guest-class-name&gt;</code> | The name assigned to the guest-class type. This can be chosen from an arbitrary string of up to 15 characters. |

**Mode** Interface

**Example 1** To create a guest-class named **camera** use the following commands:

```
node1# configure terminal
node1(config)# atmf guest-class camera
node1(config-atmf-guest)# end
```

**Example 2** To remove the guest-class named **phone** use the following commands:

```
node1# configure terminal
node1(config)# no atmf guest-class phone
node1(config-atmf-guest)# end
```

**Related Commands**

- [show atmf area guests](#)
- [discovery](#)
- [http-enable](#)
- [username](#)
- [modeltype](#)
- [switchport atmf-guestlink](#)

show atmf links guest

show atmf guest

# atmf log-verbose

**Overview** This command limits the number of log messages displayed on the console or permanently logged.

**Syntax** `atmf log-verbose <1-3>`  
`no atmf log-verbose`

| Parameter | Description   |
|-----------|---|
| <1-3>     | The verbose limitation (3 = noisiest, 1 = quietest) |

**Default** The default log display is 3.

**Usage** This command is intended for use in large networks where verbose output can make the console unusable for periods of time while nodes are joining and leaving.

**Mode** Global Configuration

**Example** To set the log-verbose to noise level 2, use the command:

```
node-1# configure terminal
node-1(config)# atmf log-verbose 2
```

**Validation Command** `show atmf`

# atmf management subnet

**Overview** This command is used to assign a subnet that will be allocated to the AMF management and domain management VLANs. From the address space defined by this command, two subnets are created, a management subnet component and a domain component, as explained in the Usage section of this command description.

AMF uses these internal IPv4 subnets when exchanging its inter nodal status packets. These subnet addresses must be reserved for AMF and should be used for no other purpose.

The new management subnet will not become effective until all members of the AMF network have been updated and all its units rebooted.

Use the **no** variant of this command to remove the assigned subnet VLANs.

**Syntax** `atmf management subnet <a.b.0.0>`  
`no atmf management subnet`

| Parameter | Description   |
|-----------|---|
| <a.b.0.0> | The IP address selected for the management subnet. Because a mask of 255.255.0.0 (i.e. /16) will be applied automatically, an IP address in the format a.b.0.0 must be selected. Usually this subnet address is selected from an appropriate range from within the private address space of 172.16.0.0 to 172.31.255.255, or 192.168.0.0 as defined in RFC1918. |

**Default** 172.31.0.0. A subnet mask of 255.255.0.0 will automatically be applied.

**Mode** Global Configuration

**Usage** Typically a network administrator would use this command to change the default subnet address to match local network requirements.

As previously mentioned, running this command will result in the creation of a further two subnets (within the class B address space assigned) and the mask will extend from /16 to /17.

For example, if the management subnet is assigned the address 172.31.0.0/16, this will result in the automatic creation of the following two subnets:

- 172.31.0.0/17 assigned to the [atmf management vlan](#)
- 172.31.128.0/17 assigned to the [atmf domain vlan](#).

**Examples** To change the AMF management subnet address on node node-1 to 172.25.0.0:

```
node-1# configure terminal
node-1(config)# atmf management subnet 172.25.0.0
```

To change the AMF management subnet address on node node-1 back to its default of 172.31.0.0:

```
node-1# configure terminal
node-1(config)# no atmf management subnet
```



# atmf management vlan

**Overview** The AMF management VLAN is created when the AMF network is first initiated and is assigned its default VID of 4092. This command enables you to change the VID from this default value.

The AMF management vlan is one of the internal VLANs that are used to communicate information about the state of the AMF network between nodes. AMF uses its internal VLANs (such as the management VLAN and the domain VLAN) to communicate its inter nodal network status information. These VLANs must be reserved for AMF and not used for other purposes.

If you assign a VLAN ID to this VLAN (i.e. change its value from the default of 4092) then you will need to do this separately on every device within the AMF. The AMF management subnet will then be applied to this new VID when all devices within the AMF network are next rebooted.

Use the **no** variant of this command to restore the VID to the default of 4092.

**Syntax** `atmf management vlan <2-4090>`  
`no atmf management vlan`

| Parameter | Description                                   |
|-----------|---|
| <2-4090>  | The VID assigned tro the AMF management VLAN. |

**Default** VLAN ID default is 4092

**NOTE:** Although the value applied by default lies outside the user configurable range. You can use the “no” variant of this command to reset the VLAN to its default value.

**mode** Global Configuration

**Usage** You can use this command to change the management VLAN to meet your network’s requirements and standards, particularly in situations where the default address value is unacceptable.

**NOTE:** This VLAN will automatically be assigned an IP subnet address based on the value configured by the command *atmf management subnet*. Refer to this command description for further details.

**Examples** To change the AMF management VLAN to 4090 use the following commands:

```
VCF-1# configure terminal
VCF-1(config)# atmf management vlan 4090
```

To reset the AMF domain VLAN to its default of 4092, use the following commands:

```
VCF-1# configure terminal
VCF-1(config)# no atmf management vlan 4090
```

# atmf master

**Overview** This command configures the device to be an AMF master node and automatically creates an AMF master group. The master node is considered to be the core of the AMF network, and must be present for the AMF to form. The AMF master has its node depth set to 0. Note that the node depth vertical distance is determined by the number of uplinks/downlinks that exist between the node and its master.

An AMF master node must be present for an AMF network to form. Up to two AMF master nodes may exist in a network, and they **must** be connected by an AMF crosslink.

**NOTE:** Master nodes are an essential component of an AMF network. In order to run AMF, an AMF License is required for each master node.

If the crosslink between two AMF masters fails, then one of the masters will become isolated from the rest of the AMF network.

Use the **no** variant of this command to remove the device as an AMF master node. The node will retain its node depth of 0 until the network is rebooted.

**NOTE:** Node depth is the vertical distance (or level) from the master node (whose depth value is 0).

**Syntax** `atmf master`  
`no atmf master`

**Default** The device is not configured to be an AMF master node.

**Mode** Global Configuration

**Example** To specify that this node is an AMF master, use the following command:

```
node-1# configure terminal
node-1(config)# atmf master
```

**Related Commands** [show atmf](#)  
[show atmf group](#)

## atmf mtu

**Overview** This command configures the ATMF network Maximum Transmission Unit (MTU). The MTU value will be applied to the ATMF Management VLAN, the ATMF Domain VLAN and ATMF Area links.

Use the **no** variant of this command to restore the default MTU.

**Syntax** `atmf mtu <1300-1442>`  
`no atmf mtu`

| Parameter                      | Description  |
|--------------------------------|--|
| <code>&lt;1300-1442&gt;</code> | The value of the maximum transmission unit for the AMF network, which sets the maximum size of all ATMF packets generated from the device. |

**Default** 1300

**Mode** Global Configuration

**Usage** The default value of 1300 will work for all AMF networks (including those that involve virtual links over IPsec tunnels). If there are virtual links over IPsec tunnels anywhere in the AMF network, we recommend not changing this default. If there are no virtual links over IPsec tunnels, then this AMF MTU value may be increased for network efficiency.

**Example** To change the ATMF network MTU to 1442, use the command:

```
awplus(config)# atmf mtu 1442
```

**Related Commands** [show atmf detail](#)

# atmf network-name

**Overview** This command applies an AMF network name to a (prospective) AMF node. In order for an AMF network to be valid, its network-name must be configured on at least two nodes, one of which must be configured as a master and have an AMF License applied. These nodes may be connected using either AMF downlinks or crosslinks.

For more information on configuring an AMF master node, see [atmf master](#).

Use the **no** variant of this command to remove the AMF network name.

**Syntax** `atmf network-name <name>`  
`no atmf network-name`

| Parameter                 | Description  |
|---------------------------|--|
| <code>&lt;name&gt;</code> | The AMF network name. Up to 15 printable characters can be entered for the network-name. |

**Mode** Global Configuration

**Usage** This is one of the essential commands when configuring AMF and must be entered on each node that is to be part of the AMF. This command will not take effect until the particular node is rebooted.

A switching node (master or member) may be a member of only one AMF network.

**CAUTION:** *Ensure that you enter the correct network name. Entering an incorrect name will cause the AMF network to fragment (at the next reboot).*

**Example** To set the AMF network name to `amf_net` use the command:

```
Node_1(config)# atmf network-name amf_net
```

# atmf node-recovery disable-forwarding

**Overview** [PSh-Sept2012- This command has been assigned the status of “Developer Only.” It is NOT to appear in any User or Technical Support document.

# atmf provision

**Overview** This command configures a specified port on an AMF node to accept a provisioned node, via an AMF link, some time in the future.

Use the **no** variant of this command to remove the provisioning on the node.

**Syntax** `atmf provision [<nodename>]`  
`no atmf provision`

| Parameter  | Description   |
|------------|---|
| <nodename> | The name of the provisioned node that will appear on the AMF network in the future. |

**Default** No AMF provisioning.

**Mode** Interface Configuration for a switchport, a static aggregator or a dynamic channel group.

**Usage** The port should be configured as an AMF link or cross link and should be “down” to add or remove a provisioned node.

**Example** To provision an AMF node named node1 for port1.0.1, use the command:

```
host1(config)# interface port1.0.1
host1(config-if)# atmf provision node1
```

**Related Commands** [switchport atmf-link](#)  
[switchport atmf-crosslink](#)  
[show atmf links](#)

# atmf provision node clone

**Overview** This command sets up a space on the backup media for use with a provisioned node and copies into it almost all files and directories from a chosen backup or provisioned node.

Alternatively, you can set up a new, unique provisioned node by using the command [atmf provision node create](#).

**Syntax** `atmf provision node <nodename> clone <source-nodename>`

| Parameter         | Description  |
|-------------------|--|
| <nodename>        | The name that will be assigned to the clone when connected.                        |
| <source-nodename> | The name of the node whose configuration is to be copied for loading to the clone. |

**Mode** Privileged Exec

**Usage** This command is only available on master nodes in the AMF network.

You must run either this command or [atmf provision node create](#) command, before you can use other **atmf provision node** commands using the specified node name. If a backup or provisioned node already exists for the specified node then you must delete it before using the **atmf provision node clone** command.

When using this command it is important to be aware of the following:

- A copy of <media>:atmf/<atmf\_name>/nodes/<source\_node>/flash will be made for the provisioned node and stored in the backup media.
- The directory <node\_backup\_dir>/flash/.config/ssh is excluded from the copy.
- All contents of <root\_backup\_dir>/nodes/<nodename> will be deleted or overwritten.
- Settings for the expected location of other provisioned nodes are excluded from the copy.

The active and backup configuration files are automatically modified in the following ways:

- The **hostname** command is modified to match the name of the provisioned node.
- The **stack virtual-chassis-id** command is removed, if present.

**Example** To copy from the backup of device2 to create backup files for the new provisioned node device3 use the following command:

```
device1# atmf provision node device3 clone device2
```

Figure 40-1: Sample output from the **atmf provision node clone** command

```
device1#atmf provision node device3 clone device2
Copying...
Successful operation
```

To confirm that a new provisioned node has been cloned, use the command:

```
device1# show atmf backup
```

The output from this command is shown in the following figure, and shows the details of the new provisioned node device3.

Figure 40-2: Sample output from the **show atmf backup** command

```
device1#show atmf backup

Scheduled Backup ..... Enabled
  Schedule ..... 1 per day starting at 03:00
  Next Backup Time .... 01 Jan 2014 03:00
Backup Bandwidth ..... Unlimited
Backup Media ..... USB (Total 7446.0MB, Free 7297.0MB)
Server Config .....
  Synchronization ..... Unsynchronized
    Last Run ..... -
    1 ..... Unconfigured
    2 ..... Unconfigured
Current Action ..... Idle
  Started ..... -
  Current Node ..... -
```

```
-----
Node Name      Date          Time          In ATMF  On Media  Status
-----
device3        -              -              No        Yes       Prov
device1        01 Jan 2014    00:05:49      No        Yes       Good
device2        01 Jan 2014    00:05:44      Yes       Yes       Good
```



# atmf provision node configure boot config

**Overview** This command sets the configuration file to use during the next boot cycle. This command can also set a backup configuration file to use if the main configuration file cannot be accessed for an AMF provisioned node. To unset the boot configuration or the backup boot configuration use the **no boot** command.

Use the **no** variant of this command to set back to the default.

**Syntax** `atmf provision node <nodename> configure boot config [backup]  
[<file-path|URL>]`  
`atmf provision node [<nodename>] configure no boot config  
[backup]`

| Parameter       | Description   |
|-----------------|---|
| <nodename>      | The name of the provisioned node.                   |
| <file-path URL> | The path or URL and name of the configuration file. |

**Default** No boot configuration files or backup configuration files are specified for the provisioned node.

**Mode** Privileged Exec

**Usage** When using this command to set a backup configuration file, the specified AMF provisioned node must exist. The specified file must exist in the flash directory created for the provisioned node in the AMF remote backup media.

**Examples** To set the configuration file `branch.cfg` on the AMF provisioned node `node1`, use the command:

```
MasterNodeName# atmf provision node node1 configure boot config  
branch.cfg
```

To set the configuration file `backup.cfg` as the backup to the main configuration file on the AMF provisioned node `node1`, use the command:

```
MasterNodeName# atmf provision node node1 configure boot config  
backup usb:/atmf/amf_net/nodes/node1/config/backup.cfg
```

To unset the boot configuration, use the command:

```
MasterNodeName# atmf provision node node1 configure no boot  
config
```

To unset the backup boot configuration, use the command:

```
MasterNodeName# atmf provision node node1 configure no boot  
config backup
```

**Related Commands** [atmf provision node configure boot system](#)  
[show atmf provision nodes](#)

# atmf provision node configure boot system

**Overview** This command sets the release file that will load onto a specified provisioned node during the next boot cycle. This command can also set the backup release file to be loaded for an AMF provisioned node. To unset the boot system release file or the backup boot release file use the **no boot** command.

Use the **no** variant of this command to set back to the default.

This command can only be run on AMF master nodes.

**Syntax** `atmf provision node <nodename> configure boot system [backup]  
[<file-path|URL>]`  
`atmf provision node <nodename> configure no boot system [backup]`

| Parameter       | Description                                   |
|-----------------|---|
| <nodename>      | The name of the provisioned node.             |
| <file-path URL> | The path or URL and name of the release file. |

**Default** No boot release file or backup release files are specified for the provisioned node.

**Mode** Privileged Exec

**Usage** When using this command to set a backup release file, the specified AMF provisioned node must exist. The specified file must exist in the flash directory created for the provisioned node in the AMF remote backup media.

**Examples** To set the release file `x610-5.4.4-1.rel` on the AMF provisioned node `node1`, use the command:

```
MasterNodeName# atmf provision node node1 configure boot system  
x610-5.4.4-1.rel
```

To set the backup release file `x610-5.4.4-1.rel` as the backup to the main release file on the AMF provisioned node `node1`, use the command:

```
MasterNodeName# atmf provision node node1 configure boot system  
backup card:/atmf/amf_net/nodes/node1/flash/x610-5.4.4-1.rel
```

To unset the boot release, use the command:

```
MasterNodeName# atmf provision node node1 configure no boot  
system
```

To unset the backup boot release, use the command:

```
MasterNodeName# atmf provision node node1 configure no boot  
system backup
```

**Related Commands** [atmf provision node configure boot config](#)  
[show atmf provision nodes](#)

# atmf provision node create

**Overview** This command sets up an empty directory on the backup media for use with a provisioned node. This directory can have configuration and release files copied to it from existing devices. Alternatively, the configuration files can be created by the user.

An alternative way to create a new provisioned node is with the command [atmf provision node clone](#).

This command can only run on AMF master nodes.

**Syntax** `atmf provision node <nodename> create`

| Parameter  | Description                                     |
|------------|---|
| <nodename> | The name of the node that is being provisioned. |

**Mode** Privileged Exec

**Usage** This command is only available on master nodes in the AMF network.

The [atmf provision node create](#) command (or [atmf provision node clone](#)) must be executed before you can use other **atmf provision node** commands with the specified node name. If a backup or provisioned node already exists for the specified node name then you must delete it before using this command.

A date and time is assigned to the new provisioning directory reflecting when this command was executed. If there is a backup or provisioned node with the same name on another AMF master then the most recent one will be used.

**Example** To create a new provisioned node named device2 use the command:

```
device1# atmf provision node device2 create
```

Running this command will create the following directories:

- <media>:atmf/<atmf\_name>/nodes/<node>
- <media>:atmf/<atmf\_name>/nodes/<node>/flash

To confirm the new node's settings, use the command:

```
device1# show atmf backup
```

The output for the **show atmf backup** command is shown in the following figure, and shows details for the new provisioned node device2.

Figure 40-3: Sample output from the **show atmf backup** command

```
device1#show atmf backup

Scheduled Backup ..... Enabled
  Schedule ..... 1 per day starting at 03:00
  Next Backup Time .... 02 Jan 2014 03:00
Backup Bandwidth ..... Unlimited
Backup Media ..... USB (Total 7446.0MB, Free 7315.2MB)
Server Config .....
  Synchronization ..... Unsynchronized
    Last Run ..... -
    1 ..... Unconfigured
    2 ..... Unconfigured
Current Action ..... Idle
  Started ..... -
  Current Node ..... -

-----
Node Name      Date          Time          In ATMF  On Media  Status
-----
device2        -              -              No        Yes       Prov
device1        01 Jan 2014   00:05:49      No        Yes       Good
```

For instructions on how to configure on a provisioned node, see the [AMF Feature Overview and Configuration Guide](#).

**Related commands** [atmf provision node clone](#)

# atmf provision node delete

**Overview** This command deletes files that have been created for loading onto a provisioned node. It can only be run on master nodes.

**Syntax** `atmf provision node <nodename> delete`

| Parameter  | Description                                     |
|------------|---|
| <nodename> | The name of the provisioned node to be deleted. |

**Mode** Privileged Exec

**Usage** This command is only available on master nodes in the AMF network. The command will only work if the provisioned node specified in the command has already been set up (although the device itself is still yet to be installed). Otherwise, an error message is shown when the command is run.

You may want to use the **atmf provision node delete** command to delete a provisioned node that was created in error or that is no longer needed.

This command cannot be used to delete backups created by the AMF backup procedure. In this case, use the command [atmf backup delete](#) to delete the files.

**NOTE:** *This command allows provisioned entries to be deleted even if they have been referenced by the [atmf provision](#) command, so take care to only delete unwanted entries.*

**Example** To delete backup files for a provisioned node named device3 use the command:

```
device1# atmf provision node device3 delete
```

To confirm that the backup files for provisioned node device3 have been deleted use the command:

```
device1# show atmf backup
```

The output should show that the provisioned node device3 no longer exists in the backup file, as shown in the figure below:

Figure 40-4: Sample output showing the **show atmf backup** command

```
device1#show atmf backup

Scheduled Backup ..... Enabled
  Schedule ..... 1 per day starting at 03:00
  Next Backup Time .... 01 Jan 2014 03:00
Backup Bandwidth ..... Unlimited
Backup Media ..... USB (Total 7446.0MB, Free 7297.0MB)
Server Config .....
  Synchronization ..... Unsynchronized
    Last Run ..... -
    1 ..... Unconfigured
    2 ..... Unconfigured
Current Action ..... Idle
  Started ..... -
  Current Node ..... -

-----
Node Name      Date          Time          In ATMF  On Media  Status
-----
device1        01 Jan 2014   00:05:49     No       Yes       Good
device2        01 Jan 2014   00:05:44     Yes      Yes       Good
```

**Related commands**   [atmf provision node create](#)

# atmf provision node license-cert

**Overview** This command is used to set up the license certificate for a provisioned node.

The certificate file usually has all the license details for the network, and can be stored anywhere in the network. This command makes a hidden copy of the certificate file and stores it in the space set up for the provisioned node on AMF backup media.

For node provisioning, the new device has not yet been part of the AMF network, so the user is unlikely to know its product ID or its MAC address. When such a device joins the network, assuming that this command has been applied successfully, the copy of the certificate file will be applied automatically to the provisioned node.

Once the new device has been resurrected on the network and the certificate file has been downloaded to the provisioned node, the hidden copy of the certificate file is deleted from AMF backup media.

Use the **no** variant of this command to set it back to the default.

This command can only be run on AMF master nodes.

**Syntax** `atmf provision node <nodename> license-cert <file-path|URL>`  
`no atmf provision node <nodename> license-cert`

| Parameter       | Description   |
|-----------------|---|
| <nodename>      | The name of the provisioned node.   |
| <file-path URL> | The name of the certificate file. This can include the file-path of the file. |

**Default** No license certificate file is specified for the provisioned node.

**Mode** Privileged Exec

**Usage** This command is only available on master nodes in the AMF network. It will only operate if the provisioned node specified in the command has already been set up, and if the license certification is present in the backup file. Otherwise, an error message is shown when the command is run.

**Example 1** To apply the license certificate cert1.txt stored on a TFTP server for AMF provisioned node *device2*, use the command:

```
device1# atmf provision node device2 license-cert  
tftp://192.168.1.1/cert1.txt
```

**Example 2** To apply the license certificate cert2.txt stored in the AMF master's flash directory for AMF provisioned node *host2*, use the command:

```
device1# atmf provision node host2 license-cert /cert2.txt
```

To confirm that the license certificate has been applied to the provisioned node, use the command [show atmf provision nodes](#). The output from this command is shown below, and displays license certification details in the last line.

Figure 40-5: Sample output from the **show atmf provision nodes** command

```
device1#show atmf provision nodes

ATMF Provisioned Node Information:

Backup Media .....: SD (Total 3827.0MB, Free 3481.1MB)

Node Name           : device2
Date & Time          : 06-May-2014 & 23:25:44
Provision Path       : card:/atmf/nodes

Boot configuration :
Current boot image   : x510-1766_atmf_backup.rel (file exists)
Backup boot image    : x510-main-20140113-2.rel (file exists)
Default boot config  : flash:/default.cfg (file exists)
Current boot config  : flash:/abc.cfg (file exists)
Backup boot config   : flash:/xyz.cfg (file exists)

Software Licenses :
Repository file      : ../configs/.sw_v2.lic
                    : ../configs/.swfeature.lic
Certificate file     : card:/atmf/lok/nodes/awplus1/flash/.atmf-lic-cert
```

**Related commands**   [show atmf provision nodes](#)



# atmf provision node locate

**Overview** This command changes the present working directory to the directory of a provisioned node. This makes it easier to edit files and create a unique provisioned node in the backup.

This command can only be run on AMF master nodes.

**Syntax** `atmf provision node <nodename> locate`

| Parameter  | Description                       |
|------------|-----------------------------------|
| <nodename> | The name of the provisioned node. |

**Mode** Privileged Exec

**Usage** This command is only available on master nodes in the AMF network. The command will only work if the provisioned node specified in the command has already been set up. Otherwise, an error message is shown when the command is run.

**NOTE:** We advise that after running this command, you return to a known working directory, typically flash.

**Example** To change the working directory that happens to be on device1 to the directory of provisioned node device2, use the following command:

```
device1# atmf provision node device2 locate
```

The directory of the node device2 should now be the working directory. You can use the command `pwd` to check this, as shown in the following figure.

Figure 40-6: Sample output from the **pwd** command

```
device2#pwd
card:/atmf/building_2/nodes/device2/flash
```

The output above shows that the working directory is now the flash of device2.

**Related commands** [atmf provision node create](#)  
[atmf provision node clone](#)  
[pwd](#)

# atmf reboot-rolling

**Overview** This command enables you to reboot the nodes in an AMF working-set, one at a time, as a rolling sequence in order to minimize downtime. Once a rebooted node has finished running its configuration and its ports are up, it re-joins the AMF network and the next node is rebooted.

By adding the *url* parameter, you can also upgrade your devices' software one AMF node at a time.

The **force** parameter forces the rolling reboot to continue even if a previous node does not rejoin the AMF network. Without the **force** parameter, the unsuitable node will time-out and the rolling reboot process will stop. However, with the **force** parameter applied, the process will ignore the timeout and move on to reboot the next node in the sequence.

This command can take a significant amount of time to complete.

**Syntax** `atmf reboot-rolling [force] [<url>]`

| Parameter                | Description  |
|--------------------------|--|
| <code>force</code>       | Ignore a failed node and move on to the next node. Where a node fails to reboot a timeout is applied based on the time taken during the last reboot. |
| <code>&lt;url&gt;</code> | The path to the software upgrade file.   |

**Mode** Privileged Exec

**Usage** You can load the software from a variety of locations. The latest compatible release for a node will be selected from your selected location, based on the parameters and URL you have entered.

For example `card:/5.4.6/x*-5.4.6-*.rel` will select from the folder `card:/5.4.6` the latest file that matches the selection `x` (wildcard) `-5.4.6-` (wildcard).`rel`. Because `x*` is applied, each device type will be detected and its appropriate release file will be installed.

Other allowable entries are:

| Entry                                 | Used when loading software                              |
|---------------------------------------|---|
| <code>card:*.rel:</code>              | from an SD card   |
| <code>tftp:&lt;ip-address&gt;:</code> | from a TFTP server                                      |
| <code>usb:</code>                     | from a USB flash drive                                  |
| <code>flash:</code>                   | from flash memory, e.g. from one x610 switch to another |
| <code>scp:</code>                     | using secure copy                                       |
| <code>http:</code>                    | from an HTTP file server                                |

Several checks are performed to ensure the upgrade will succeed. These include checking the current node release boots from flash. If there is enough space on flash, the software release is copied to flash to a new location on each node as it is processed. The new release name will be updated using the **boot system<release-name>** command, and the old release will become the backup release file.

**NOTE:** *If you are using TFTP or HTTP, for example, to access a file on a remote device then the URL should specify the exact release filename without using wild card characters.*

On bootup the software release is verified. Should an upgrade fail, the upgrading unit will revert back to its previous software version. At the completion of this command, a report is run showing the release upgrade status of each node.

**NOTE:** *Take care when removing external media or rebooting your devices. Removing an external media while files are being written entails a significant risk of causing a file corruption.*

**Example 1** To reboot all x510 nodes in an AMF network, use the following command:

```
Bld2_Floor_1# atmf working-set group x510
```

This command returns the following type of screen output:

```
=====
node1, node2, node3:
=====

Working set join

AMF_NETWORK[3]#
```

```
ATMF_NETWORK[3]# atmf reboot-rolling
```

When the reboot has completed, a number of status screens appear. The selection of these screens will depend on the parameters set.

```
Bld2_Floor_1#atmf working-set group x510

=====
SW_Team1, SW_Team2, SW_Team3:
=====

Working set join

ATMF_NETWORK[3]#atmf reboot-rolling
ATMF Rolling Reboot Nodes:

Node Name          Timeout
                   (Minutes)
-----
SW_Team1            14
SW_Team2             8
SW_Team3             8
Continue the rolling reboot ? (y/n):y
=====
ATMF Rolling Reboot: Rebooting SW_Team1
=====

% SW_Team1 has left the working-set
Reboot of SW_Team1 has completed
=====
ATMF Rolling Reboot: Rebooting SW_Team2
=====

% SW_Team2 has left the working-set
Reboot of SW_Team2 has completed
=====
ATMF Rolling Reboot: Rebooting SW_Team3
=====

% SW_Team3 has left the working-set
Reboot of SW_Team3 has completed
=====
ATMF Rolling Reboot Complete
Node Name          Reboot Status
-----
SW_Team1            Rebooted
SW_Team2            Rebooted
SW_Team3            Rebooted
=====
```

**Example 2** To update firmware releases, use the following command:

```
Node_1# atmf working-set group all

ATMF_NETWORK[9]# atmf reboot-rolling
card:/5.4.6/x*-5.4.6-*.rel
```

|                                      |                      |                    |               |
|--------------------------------------|----------------------|--------------------|---------------|
| ATMF Rolling Reboot Nodes:           |                      |                    |               |
| Node Name                            | Timeout<br>(Minutes) | New Release File   | Status        |
| -----                                |                      |                    |               |
| SW_Team1                             | 8                    | x510-5.4.6-0.1.rel | Release Ready |
| SW_Team2                             | 10                   | x510-5.4.6-0.1.rel | Release Ready |
| SW_Team3                             | 8                    | ---                | Not Supported |
| HW_Team1                             | 6                    | ---                | Incompatible  |
| Bld1_Floor_2                         | 2                    | x610-5.4.6-0.1.rel | Release Ready |
| Bld1_Floor_1                         | 4                    | ---                | Incompatible  |
| Building_1                           | 2                    | ---                | Incompatible  |
| Building_2                           | 2                    | x908-5.4.6-0.1.rel | Release Ready |
| Continue upgrading releases ? (y/n): |                      |                    |               |

# atmf recover

**Overview** This command is used to manually initiate the recovery (or replication) of an AMF node, usually when a node is being replaced.

**Syntax** `atmf recover [<node-name> master <node-name>]`  
`atmf recover [<node-name> controller <node-name>]`

| Parameter                           | Description  |
|-------------------------------------|--|
| <i>&lt;node-name&gt;</i>            | The name of the device whose configuration is to be recovered or replicated.   |
| master<br><i>&lt;node-name&gt;</i>  | The name of the master device that holds the required configuration information.<br>Note that although you can omit both the node name and the master name; you cannot specify a master name unless you also specify the node name.      |
| controller <i>&lt;node-name&gt;</i> | The name of the controller that holds the required configuration information.<br>Note that although you can omit both the node name and the controller name; you cannot specify a controller name unless you also specify the node name. |

**Mode** Privileged Exec

**Usage** The recovery/replication process involves loading the configuration file for a node that is either about to be replaced or has experienced some problem. You can specify the configuration file of the device being replaced by using the *<node-name>* parameter, and you can specify the name of the master node or controller holding the configuration file.

If the *<node-name>* parameter is not entered then the node will attempt to use one that has been previously configured. If the replacement node has no previous configuration (and has no previously used node-name), then the recovery will fail.

If the master or controller name is not specified then the device will poll all known AMF masters and controllers and execute an election process (based on the last successful backup and its timestamp) to determine which to use. If no valid backup master or controller is found, then this command will fail.

No error checking occurs when this command is run. Regardless of the last backup status, the recovering node will attempt to load its configuration from the specified master node or controller.

If the node has previously been configured, we recommend that you suspend any AMF backup before running this command. This is to prevent corruption of the backup files on the AMF master as it attempts to both backup and recover the node at the same time.

**Example** To recover the AMF node named Node\_10 from the AMF master node named Master\_2, use the following command:

```
Master_2# atmf recover Node_10 master Master_2
```

**Related  
Commands**

- atmf backup stop
- show atmf backup
- show atmf

# atmf recover guest

**Overview** Use this command to initiate a guest node recovery or replacement by reloading its backup file-set that is located within the AMF backup system. Note that this command must be run on the edge node device that connects to the guest node.

**Syntax** `atmf recover guest [<guest-port>]`

| Parameter                       | Description                                      |
|---------------------------------|--|
| <code>&lt;guest-port&gt;</code> | The port number that connects to the guest node. |

**Mode** User Exec/Privileged Exec

**Example** To recover a guest on node1 port1.0.1, use the following command

```
node1# atmf recover guest port1.0.1
```

**Related Commands** [show atmf backup guest](#)



# atmf recover led-off

**Overview** This command turns off the recovery failure flashing port LEDs. It reverts the LED's function to their normal operational mode, and in doing so assists with resolving the recovery problem. You can repeat this process until the recovery failure has been resolved. For more information, see the [AMF Feature Overview and Configuration Guide](#).

**Syntax** `atmf recover led-off`

**Default** Normal operational mode

**Mode** Privileged Exec

**Example** To revert the LEDs on Node1 from recovery mode display to their normal operational mode, use the command:

```
Node1# atmf recover led-off
```

**Related Commands** [atmf recover](#)

# atmf remote-login

**Overview** Use this command to remotely login to other AMF nodes in order to run commands as if you were a local user of that node.

**Syntax** `atmf remote-login [user <name>] <nodename>`

| Parameter  | Description |
|------------|-------------|
| <name>     | User name.  |
| <nodename> | Node name.  |

**Mode** Privileged Exec (This command will only run at privilege level 15)

**Usage** You do not need a valid login on the local device in order to run this command. The session will take you to the enable prompt on the new device. If the remote login session exits for any reason (e.g. device reboot) you will be returned to the originating node.

The software will not allow you to run multiple remote login sessions. You must exit an existing session before starting a new one.

If you disconnect from the VTY session without first exiting from the AMF remote session, the device will keep the AMF remote session open until the [exec-timeout](#) time expires (10 minutes by default). If the exec-timeout time is set to infinity (**exec-timeout 0 0**), then the device is unable to ever close the remote session. To avoid this, we recommend you use the **exit** command to close AMF remote sessions, instead of closing the associated VTY sessions. We also recommend you avoid setting the exec-timeout to infinity.

**Example 1** To remotely login from node Node10 to Node20, use the following command:

```
Node10# atmf remote-login node20
Node20>
```

**Example 2** To close the session on Node20 and return to Node10's command line, use the following command:

```
Node20# exit
Node10#
```

**Example 3** In this example, user Whitney is a valid user of node5. She can remotely login from node5 to node3 by using the following commands:

```
node5# atmf remote-login user whitney node3
node3> enable
```

**NOTE:** In the above example the user name whitney is valid on both nodes. Therefore, to prevent unauthorized access, user names should be unique across all nodes within the AMF network.

# atmf restricted-login

**Overview** This command restricts the use of the [atmf working-set](#) on page 1603 command on all AMF master nodes to privilege 15 users only. Once entered on any AMF master node, this command will propagate across the network.

Note that once you have run this command, certain other commands that utilize the AMF working-set command, such as the **include**, **atmf reboot-rolling** and **show atmf group members** commands, will operate only on master nodes.

Use the **no** variant of this command to disable restricted login on the AMF network. This allows access to the **atmf working-set** command from any node in the AMF network.

**Syntax** `atmf restricted-login`  
`no atmf restricted-login`

**Mode** Privileged Exec

**Default** Master nodes operate with **atmf restricted-login** disabled.  
Member nodes operate with **atmf restricted-login** enabled.

**NOTE:** The default conditions of this command vary from those applied by its “no” variant. This is because the restricted-login action is only applied by **master** nodes, and in the absence of a master node, the default is to apply the restricted action to all **member** nodes with AMF configured.

In the presence of a **master** node, its default of “atmf restricted-login disabled” will permeate to all its member nodes. Similarly, any change in this command’s status that is made on a master node, will also permeate to all its member nodes

**Example** To enable restricted login, use the command  
`Node_20(config)# atmf restricted-login node20`

**Validation Command** `show atmf`

# atmf select-area

**Overview** Use this command to access devices in an area outside the core area on the controller network. This command will connect you to the remote area-master of the specified area.

This command is only valid on AMF controllers.

The **no** variant of this command disconnects you from the remote area-master.

**Syntax** `atmf select-area {<area-name>|local}`  
`no atmf select-area`

| Parameter                      | Description   |
|--------------------------------|---|
| <code>&lt;area-name&gt;</code> | Connect to the remote area-master of the area with this name. |
| <code>local</code>             | Return to managing the local controller area.                 |

**Mode** Privileged Exec

**Usage** After running this command, use the [atmf working-set](#) command to select the set of nodes you want to access in the remote area.

**Example** To access nodes in the area Canterbury, use the command

```
controller-1# atmf select-area Canterbury
```

This displays the following output:

```
Test_network[3]#atmf select-area Canterbury
=====
Connected to area Canterbury via host Avensis:
=====
```

To return to the local area for controller-1, use the command

```
controller-1# atmf select-area local
```

Alternatively, to return to the local area for controller-1, use the command

```
controller-1# no atmf select-area
```

**Related Commands** [atmf working-set](#)

# atmf virtual-link

**Overview** This command creates one or more Layer 2 tunnels that enable AMF nodes to transparently communicate across a wide area network using Layer 2 connectivity protocols.

Once connected through the tunnel, the remote member will have the same AMF capabilities as a directly connected AMF member.

Use the **no** variant of this command to remove the specified virtual link.

**Syntax** `atmf virtual-link id <1-4094> ip <a.b.c.d> remote-id <1-4094>  
remote-ip <a.b.c.d> [remote-area <area-name>]  
no atmf virtual-link id <1-4094>`

| Parameter   | Description   |
|-------------|---|
| ip          | The Internet Protocol (IP).   |
| <a.b.c.d>   | The IP address, of the local amf node (at its interface to the tunnel) entered in a.b.c.d format.   |
| remote-id   | The ID of the (same) tunnel that will be applied by the remote node. Note that this must match the local-id that is defined on the remote node. This means that (for the same tunnel) the local and remote tunnel IDs are reversed on the local and remote nodes. |
| <1-4094>    | The ID range 1-4094.  |
| remote-ip   | The IP address of the remote node   |
| <a.b.c.d>   | The IP address, of the remote node (at its interface to the tunnel) entered in a.b.c.d format.  |
| remote-area | The remote area connected to this area virtual link   |
| <area-name> | The name of the remote area connected to this virtual link.   |

**Mode** Global Configuration

**Usage** The Layer 2 tunnel that this command creates enables a local AMF session to appear to pass transparently across a Wide Area Network (WAN) such as the Internet. The addresses configured as the local and remote tunnel IP addresses must have IP connectivity to each other. If the tunnel is configured to connect a head office and branch office over the Internet, typically this would involve using some type of managed WAN service such as a site-to-site VPN. Tunnels are only supported using IPv4.


Configuration involves creating a local tunnel ID, a local IP address, a remote tunnel ID and a remote IP address. A reciprocal configuration is also required on the corresponding remote device. The local tunnel ID must be unique to the device on which it is configured.

The tunneled link may operate via external (non AlliedWare Plus) routers in order to provide wide area network connectivity. However in this configuration, the routers perform a conventional router to router connection. The protocol tunneling function is accomplished by the AMF nodes.

**NOTE:** AMF cannot achieve zero touch replacement of the remote device that terminates the tunnel connection, because you must pre-configure the local IP address and tunnel ID on that remote device.

**Example 1** Use the following commands to create the tunnel shown in the figure below.

Figure 40-7: AMF virtual link example

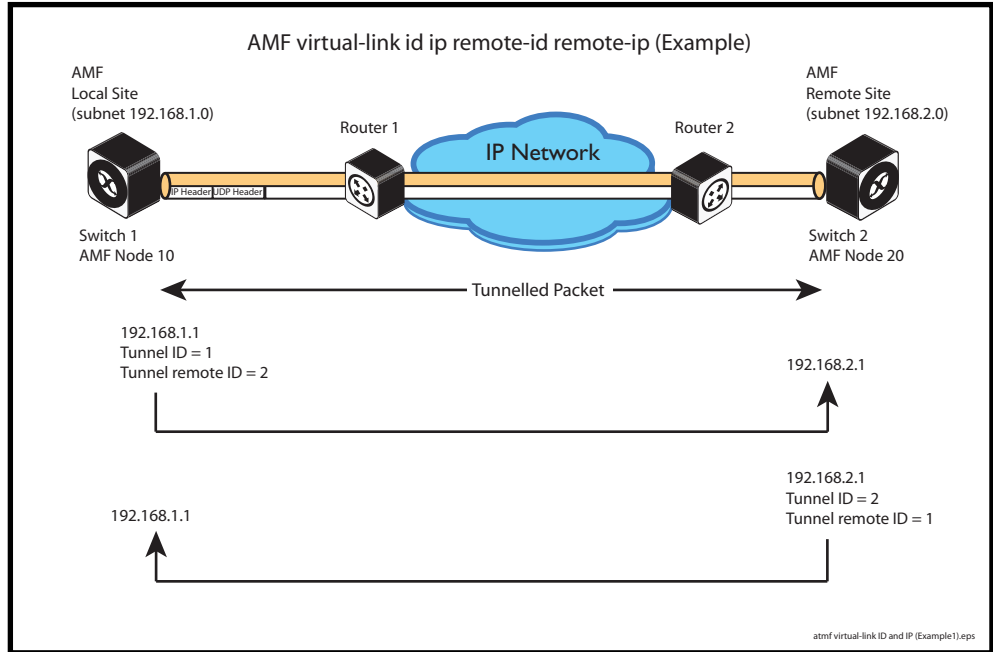

```
Node_10(config)# atmf virtual-link id 1 ip 192.168.1.1
remote-id 2 remote-ip 192.168.2.1

Node_20(config)# atmf virtual-link id 2 ip 192.168.2.1
remote-id 1 remote-ip 192.168.1.1
```

**Example 2** To set up an area virtual link to a remote site (assuming IP connectivity between the sites already), one site must run the following commands:

```
SiteA# configure terminal

SiteA(config)# atmf virtual-link id 5 ip 192.168.100.1
remote-id 10 remote-ip 192.168.200.1 remote-area SiteB-AREA
```

The second site must run the following commands:

```
SiteB# configure terminal

SiteB(config)# atmf virtual-link id 10 ip 192.168.200.1
remote-id 5 remote-ip 192.168.100.1 remote-area SiteA-AREA
```

Before you can apply the above **atmf virtual-link** command, you must configure the area names *SiteB-AREA* and *SiteA-AREA*.

**Validation Command** `show atmf`  
`show atmf links`

# atmf working-set

**Overview** Use this command to execute commands across an individually listed set of AMF nodes or across a named group of nodes.

Note that this command can only be run on a master node.

Use the **no** variant of this command to remove members or groups from the current working-set.

**Syntax** `atmf working-set {[<node-list>]|group  
{<group-list>|all|local|current}}}`  
`no atmf working-set {[<node-list>]|group <group-list>]}`

| Parameter    | Description  |
|--------------|--|
| <node-list>  | A comma delimited list (without spaces) of nodes to be included in the working-set.  |
| group        | The AMF group.   |
| <group-list> | A comma delimited list (without spaces) of groups to be included in the working-set. Note that this can include either defined groups, or any of the Automatic, or Implicit Groups shown earlier in the bulleted list of groups. |
| all          | All nodes in the AMF.  |
| local        | Local node<br>Running this command with the parameters <b>group local</b> will return you to the local prompt and local node connectivity.   |
| current      | Nodes in current list.   |

**Mode** Privileged Exec

**Usage** You can put AMF nodes into groups by using the [atmf group \(membership\)](#) command.

This command opens a session on multiple network devices. When you change the working set to anything other than the local device, the prompt will change to the AMF network name, followed by the size of the working set, shown in square brackets. This command has to be run at privilege level 15.

In addition to the user defined groups, the following system assigned groups are automatically created:

- Implicit Groups
  - local: The originating node.
  - current: All nodes that comprise the current working-set.
  - all: All nodes in the AMF.

- Automatic Groups - These can be defined by hardware architecture, e.g. x510, x610, x8100, AR3050S or AR4050S, or by certain AMF nodal designations such as master.

Note that the Implicit Groups do not appear in [show atmf group](#) command output.

If a node is an AMF master it will be automatically added to the master group.

**Example 1** To add all nodes in the AMF to the working-set, use the command:

```
node1# atmf working-set group all
```

**NOTE:** This command adds the implicit group “all” to the working set, where “all” comprises all nodes in the AMF.

This command displays an output screen similar to the one shown below:

```
=====
node1, node2, node3, node4, node5, node6:
=====

Working set join

ATMF_NETWORK_Name[6]#
```

**Example 2** To return to the local prompt, and connect to only the local node, use the command:

```
ATMF_Network_Name[6]# atmf working-set group local
node1#
```

The following table describes the meaning of the prompts in this example.

| Parameter         | Description   |
|-------------------|---|
| ATMF_Network_Name | The name of the AMF network, as set by the <a href="#">atmf network-name</a> command. |
| [ 6 ]             | The number of nodes in the working-set.   |
| node1             | The name of the local node, as set by the <a href="#">hostname</a> command.           |



# clear atmf links statistics

**Overview** This command resets the values of all AMF link, port, and global statistics to zero.

**Syntax** `clear atmf links statistics`

**Mode** Privilege Exec

**Example** To reset the AMF link statistics values, use the command:

```
node_1# clear atmf links statistics
```

**Related  
Commands** [show atmf links statistics](#)

# debug atmf

**Overview** This command enables the AMF debugging facilities, and displays information that is relevant (only) to the current node. The detail of the debugging displayed depends on the parameters specified.

If no additional parameters are specified, then the command output will display all AMF debugging information, including link events, topology discovery messages and all notable AMF events.

The **no** variant of this command disables either all AMF debugging information, or only the particular information as selected by the command's parameters.

**Syntax**

```
debug atmf  
[link|crosslink|arealink|database|neighbor|error|all]  
  
no debug atmf  
[link|crosslink|arealink|database|neighbor|error|all]
```

| Parameter | Description   |
|-----------|---|
| link      | Output displays debugging information relating to uplink or downlink information. |
| crosslink | Output displays all crosslink events.   |
| arealink  | Output displays all arealink events.  |
| database  | Output displays only notable database events.                                     |
| neighbor  | Output displays only notable AMF neighbor events.                                 |
| error     | Output displays AMF error events.   |
| all       | Output displays all AMF events.   |

**Default** All debugging facilities are disabled.

**Mode** User Exec and Global Configuration

**Usage** If no additional parameters are specified, then the command output will display all AMF debugging information, including link events, topology discovery messages and all notable AMF events.

**NOTE:** An alias to the **no** variant of this command is [undebbug atmf](#) on page 1689.

**Examples** To enable all AMF debugging, use the command:

```
node_1# debug atmf
```

To enable AMF uplink and downlink debugging, use the command:

```
node_1# debug atmf link
```

To enable AMF error debugging, use the command:

```
node_1# debug atmf error
```

**Related** no debug all  
**Commands**

# debug atmf packet

**Overview** This command configures AMF Packet debugging parameters. The debug only displays information relevant to the current node. The command has following parameters:

**Syntax** debug atmf packet [[direction {rx|tx|both}]] [level {1|2|3}] [timeout <seconds>] [num-pkts <quantity>] [filter node <name>] [interface <ifname>] [pkt-type { [1] [2] [3] [4] [5] [6] [7] [8] [9] [10] [11] [12] [13] ]}]

## Simplified Syntax

|                             |  |  |
|-----------------------------|--|--|
| debug atmf packet           |  | [direction {rx tx both}]                                   |
|                             |  | [level {[1] [2 3]}]  |
|                             |  | [timeout <seconds>]  |
|                             |  | [num-pkts <quantity>]                                      |
| debug atmf packet    filter |  | [node <name>]  |
|                             |  | [interface <ifname>]                                       |
|                             |  | [pkt-type  |
|                             |  | [1] [2] [3] [4] [5] [6] [7] [8] [9] [10] [11] [12] [13] ]] |

**NOTE:** You can combine the syntax components shown, but when doing so, you must retain their original order.

**Default** Level 1, both Tx and Rx, a timeout of 60 seconds with no filters applied.

**NOTE:** An alias to the **no** variant of this command - *undebbug atmf* - can be found elsewhere in this chapter.

**Mode** User Exec and Global Configuration

**Usage** If no additional parameters are specified, then the command output will apply a default selection of parameters shown below:

| Parameter | Description  |
|-----------|--|
| direction | Sets debug to packet received, transmitted, or both  |
| rx        | packets received by this node  |
| tx        | Packets sent from this node  |
| 1         | AMF Packet Control header Information, Packet Sequence Number. Enter 1 to select this level. |
| 2         | AMF Detailed Packet Information. Enter 2 to select this level.                               |
| 3         | AMF Packet HEX dump. Enter 3 to select this level.   |

| Parameter  | Description   |
|------------|---|
| timeout    | Sets the execution timeout for packet logging   |
| <seconds>  | Seconds   |
| num-pkts   | Sets the number of packets to be dumped   |
| <quantity> | The actual number of packets  |
| filter     | Sets debug to filter packets  |
| node       | Sets the filter on packets for a particular Node  |
| <name>     | The name of the remote node   |
| interface  | Sets the filter to dump packets from an interface (portx.x.x) on the local node                   |
| <ifname>   | Interface port or virtual-link  |
| pkt-type   | Sets the filter on packets with a particular AMF packet type                                      |
| 1          | Crosslink Hello BPDU packet with crosslink links information. Enter 1 to select this packet type. |
| 2          | Crosslink Hello BPDU packet with downlink domain information. Enter 2 to select this packet type. |
| 3          | Crosslink Hello BPDU packet with uplink information. Enter 3 to select this packet type.          |
| 4          | Downlink and uplink hello BPDU packets. Enter 4 to select this packet type.                       |
| 5          | Non broadcast hello unicast packets. Enter 5 to select this packet type.                          |
| 6          | Stack hello unicast packets. Enter 6 to select this packet type.                                  |
| 7          | Database description. Enter 7 to select this packet type.   |
| 8          | DBE request. Enter 8 to select this packet type.  |
| 9          | DBE update. Enter 9 to select this packet type.   |
| 10         | DBE bitmap update. Enter 10 to select this packet type.   |
| 11         | DBE acknowledgment. Enter 11 to select this packet type.  |
| 12         | Area Hello Packets. Enter 12 to select this packet type.  |
| 13         | Gateway Hello Packets. Enter 13 to select this packet type.                                       |

**Examples** To set a packet debug on node 1 with level 1 and no timeout, use the command:

```
node_1# debug atmf packet direction tx timeout 0
```

To set a packet debug with level 3 and filter packets received from AMF node 1:

```
node_1# debug atmf packet direction tx level 3 filter node_1
```

To enable send and receive 500 packets only on vlink1 for packet types 1, 7, and 11, use the command:

```
node_1# debug atmf packet num-pkts 500 filter interface vlink1  
pkt-type 1 7 11
```

This example applies the **debug atmf packet** command and combines many of its options:

```
node_1# debug atmf packet direction rx level 1 num-pkts 60  
filter node x610 interface port1.0.1 pkt-type 4 7 10
```

# discovery

**Overview** AMF nodes gather information about guest nodes by using one of two internally defined discovery methods: static or dynamic. This is one of several modal commands that are configured from within its specific guest-class (mode).

Dynamic discovery (the default method) involves learning IP address and MAC addresses of guest nodes from protocols outside of AMF such as LLDP or DHCP snooping. Dynamic learning is only supported when using IPv4. For IPv6 the static discovery method must be used.

Note that if the discovery method is dynamic, you should ensure that the command `ip dhcp snooping delete-by-linkdown` is set.

The static method involves entering the guest class name and IP address using the `switchport atmf-guestlink` command to separately assign an individual switch port to each of the guest nodes. The MAC addresses of each of the guests of that class can then be learned from ARP or Neighbor discovery tables. If you are using the static discovery method, you must ensure that you have configured the appropriate class type for each of your statically discovered guest nodes.

The **no** variant of this command returns the discovery method to **dynamic**.

**Syntax** `discovery [static|dynamic]`  
`no discovery`

| Parameter | Description                  |
|-----------|------------------------------|
| static    | Statically assigned          |
| dynamic   | Learned from DCHCPSN or LLDP |

**Default** Dynamic

**Mode** ATMF Guest Configuration Mode

**Usage** This command is one of several modal commands that are configured and applied for a specific guest-class (mode) and whose settings are automatically applied to a guest-node link by the `switchport atmf-guestlink` command.

**Example 1** To configure the discovery of the guest-class camera to operate statically, use the following commands:

```
Node1#conf t
Node1(config)#atmf guest-class camera
Node1(config-guest)#discovery static
Node1(config-guest)#end
```

**Example 2** To return the discovery method for the guest class TQ4600-1 to its default of **dynamic**, use the following commands:

```
Node1#conf t
Node1(config)#atmf guest-class TQ4600-1
Node1(config-guest)#no discovery
Node1(config-guest)#end
```

**Related  
Commands**

- atmf guest-class
- switchport atmf-guestlink
- show atmf links guest
- show atmf nodes



# erase factory-default

**Overview** This command erases all data from NVS and all data from flash **excluding** the following:

- The current release file and its /flash/.release file
- The backup release file and /flash/.backup file
- v1 license files /flash/.configs/.swfeature.lic
- v2 license files /flash/.configs/.sw\_v2.lic

The device is then rebooted and returns the device to its factory default condition. The device can then be used for automatic node recovery.

**Syntax** `erase factory-default`

**Mode** Global Configuration.

**Usage** This command is an alias to the [atmf cleanup](#) command.

**Example** To erase data, use the command:

```
Node_1(config)# erase factory-default
```

This command will erase all NVS, all flash contents except for the boot release, and any license files, and then reboot the switch. Continue? (y/n):y

**Related  
Commands** [atmf cleanup](#)

# http-enable

**Overview** This command is used to enable GUI access to a guest node. When http-enable is configured the port number is set to its default of 80. If the guest node is using a different port for HTTP, you can configure this using the port <PORTNO> attribute.

This command is used to inform the GUI that this device has an HTTP interface at the specified port number so that a suitable URL can be provided to the user.

Use the **no** variant of this command to disable HTTP.

**Syntax** http-enable [port <PORTNO>]  
no http-enable

| Parameter | Description                       |
|-----------|-----------------------------------|
| port      | TCP port number.                  |
| <PORTNO>  | The port number to be configured. |

**Default** http-enable is off.  
If http-enable is selected without a port parameter the port number will default to 80.

**Mode** ATMF Guest Configuration Mode

**Example 1** To enable HTTP access on port 80 (the default) of a guest node, use the following commands:

```
node1# conf t
node1(config)#atmf guest-class Camera
node1(config-atmf-guest)#http-enable
node1(config-atmf-guest)#
```

**Example 2** To enable HTTP access on port 400 of a guest node, use the following commands:

```
node1# conf t
node1(config)#atmf guest-class Camera
node1(config-atmf-guest)#http-enable port 400
node1(config-atmf-guest)#
```

**Example 3** To disable HTTP access of a guest node, use the following commands:

```
node1# conf t
node1(config)#atmf guest-class Camera
node1(config-atmf-guest)#no http-enable
node1(config-atmf-guest)#
```

**Related  
Commands**

- atmf guest-class
- switchport atmf-guestlink
- show atmf links guest
- show atmf nodes

# modeltype

**Overview** This command sets the expected model type of the guest node. Guest nodes can be one of various types: alliedware, aw+, tq or other. The model type will default to **other** if nothing is set.

Use the **no** variant of this command to reset the model type to **other**.

**Syntax** `modeltype [alliedware|aw+|tq|other]`

| Parameter  | Description   |
|------------|---|
| alliedware | A legacy Allied Telesis operating system.                   |
| aw+        | The Allied Telesis AlliedWare Plus operating system.        |
| tq         | An Allied Telesis TQ Series wireless access point.          |
| other      | Used where the model type is outside the above definitions. |

**Default** Will default to **other**

**Mode** ATMF Guest Configuration Mode

**Example 1** To assign the model type **tq** to the guest-class called **tq\_device**, use the following commands:

```
node1# conf t
node1(config)# atmf guest-class tq_device
node1(config-atmf-guest)# modeltype tq
node1(config-atmf-guest)# end
```

**Example 2** To remove the model type **tq** from the guest-class called **tq\_device**, and reset it to the default of **other**, use the following commands:

```
node1# conf t
node1(config)# atmf guest-class tq_device
node1(config-atmf-guest)# no modeltype
node1(config-atmf-guest)# end
```

**Related Commands**

- [atmf guest-class](#)
- [switchport atmf-guestlink](#)
- [show atmf links guest](#)

# show atmf

**Overview** Displays information about the current AMF node.

**Syntax** `show atmf [summary|tech|nodes|session]`

| Parameter | Description   |
|-----------|---|
| summary   | Displays summary information about the current AMF node.  |
| tech      | Displays global AMF information.                          |
| nodes     | Displays a list of AMF nodes together with brief details. |
| session   | Displays information on an AMF session.                   |

**Default** Only summary information is displayed.

**Mode** User Exec and Privileged Exec

**Usage** AMF uses internal VLANs to communicate between nodes about the state of the AMF network. Two VLANs have been selected specifically for this purpose. Once these have been assigned, they are reserved for AMF and cannot be used for other purposes

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Example 1** To show summary information on AMF node\_1 use the following command:

```
node_1# show atmf summary
```

**Table 1:** Output from the **show atmf summary** command

|                           |                |
|---------------------------|----------------|
| node_1#show atmf summary  |                |
| ATMF Summary Information: |                |
| ATMF Status               | : Enabled      |
| Network Name              | : Test_network |
| Node Name                 | : node_1       |
| Role                      | : Master       |
| Restricted login          | : Disabled     |
| Current ATMF Nodes        | : 3            |

**Example 2** To show information specific to AMF nodes use the following command:

```
node_1# show atmf nodes
```

**Example 3** The **show amf session** command displays all CLI (Command Line Interface) sessions for users that are currently logged in and running a CLI session.

To display AMF active sessions, use the following command:

```
node_1# show atmf session
```

For example, in the output below, node\_1 and node\_5 have active users logged in.

**Table 2:** Output from the **show atmf session** command

```
node_1#show atmf session
```

| CLI Session Neighbors                |                  |
|--------------------------------------|------------------|
| Session ID                           | : 73518          |
| Node Name                            | : node_1         |
| PID                                  | : 7982           |
| Link type                            | : Broadcast-cli  |
| MAC Address                          | : 0000.0000.0000 |
| Options                              | : 0              |
| Our bits                             | : 0              |
| Link State                           | : Full           |
| Domain Controller                    | : 0              |
| Backup Domain Controller             | : 0              |
| Database Description Sequence Number | : 00000000       |
| First Adjacency                      | : 1              |
| Number Events                        | : 0              |
| DBE Retransmit Queue Length          | : 0              |
| DBE Request List Length              | : 0              |
| Session ID                           | : 410804         |
| Node Name                            | : node_5         |
| PID                                  | : 17588          |
| Link type                            | : Broadcast-cli  |
| MAC Address                          | : 001a.eb56.9020 |
| Options                              | : 0              |
| Our bits                             | : 0              |
| Link State                           | : Full           |
| Domain Controller                    | : 0              |
| Backup Domain Controller             | : 0              |
| Database Description Sequence Number | : 00000000       |
| First Adjacency                      | : 1              |
| Number Events                        | : 0              |
| DBE Retransmit Queue Length          | : 0              |
| DBE Request List Length              | : 0              |

**Example 4** The AMF tech command collects all the AMF commands, and displays them. You can use this command when you want to see an overview of the AMF network.

To display AMF technical information, use the following command:

```
node_1# show atmf tech
```

**Table 3:** Output from the **show atmf tech** command

```
node_1#show atmf tech
ATMF Summary Information:

ATMF Status           : Enabled
Network Name          : ATMF_NET
Node Name              : node_1
Role                   : Master
Current ATMF Nodes    : 8

ATMF Technical information:

Network Name           : ATMF_NET
Domain                 : node_1's domain
Node Depth             : 0
Domain Flags           : 0
Authentication Type    : 0
MAC Address            : 0014.2299.137d
Board ID               : 287
Domain State           : DomainController
Domain Controller      : node_1
Backup Domain Controller : node2
Domain controller MAC   : 0014.2299.137d
Parent Domain          : -
Parent Domain Controller : -
Parent Domain Controller MAC : 0000.0000.0000
Number of Domain Events : 0
Crosslink Ports Blocking : 0
Uplink Ports Waiting on Sync : 0
Crosslink Sequence Number : 7
Domains Sequence Number : 28
Uplink Sequence Number  : 2
Number of Crosslink Ports : 1
Number of Domain Nodes  : 2
Number of Neighbors     : 5
Number of Non Broadcast Neighbors : 3
Number of Link State Entries : 1
Number of Up Uplinks    : 0
Number of Up Uplinks on This Node : 0
DBE Checksum            : 84fc6
Number of DBE Entries   : 0
Management Domain Ifindex : 4391
Management Domain VLAN   : 4091
Management ifindex       : 4392
Management VLAN          : 4092
```

**Table 4:** Parameter definitions from the **show atmf tech** command

| Parameter    | Definition   |
|--------------|--|
| ATMF Status  | The Node's AMF status, either Enabled or Disabled. |
| Network Name | The AMF network that a particular node belongs to. |

**Table 4:** Parameter definitions from the **show atmf tech** command (cont.)

| Parameter          | Definition   |
|--------------------|--|
| Node Name          | The name assigned to a particular node.  |
| Role               | The role configured for this AMF device, either Master or Member.  |
| Current ATMF Nodes | The count of AMF nodes in an AMF Network.  |
| Node Address       | An address used to access a remotely located node (.atmf).   |
| Node ID            | A unique identifier assigned to a Node on an AMF network.  |
| Node Depth         | The number of nodes in path from this node to level of the AMF root node. It can be thought of as the vertical depth of the AMF network from a particular node to the zero level of the AMF root node.   |
| Domain State       | The state of Node in a Domain in AMF network as Controller/Backup.   |
| Recovery State     | The AMF node recovery status. Indicates whether a node recovery is in progress on this device - Auto, Manual, or None.   |
| Management VLAN    | The VLAN created for traffic between Nodes of different domain (up/down links). <ul style="list-style-type: none"> <li>• VLAN ID - In this example VLAN 4092 is configured as the Management VLAN.</li> <li>• Management Subnet - Network prefix for the subnet.</li> <li>• Management IP Address - The IP address allocated for this traffic.</li> <li>• Management Mask - The subnet mask used to create a subnet for this traffic (255.255.128.0).</li> </ul> |
| Domain VLAN        | The VLAN assigned for traffic between Nodes of same domain (crosslink). <ul style="list-style-type: none"> <li>• VLAN ID - In this example VLAN 4091 is configured as the domain VLAN.</li> <li>• Domain Subnet. The subnet address used for this traffic.</li> <li>• Domain IP Address. The IP address allocated for this traffic.</li> <li>• Domain Mask. The subnet mask used to create a subnet for this traffic (255.255.128.0).</li> </ul>                 |
| Device Type        | The Product Series name.   |
| ATMF Master        | Whether the node is an AMF master node for its area ('Y' if it is and 'N' if it is not).   |
| SC                 | The device configuration, one of C - Chassis (SBx8100 Series), S - Stackable (VCS) or N - Standalone.  |
| Parent             | The node to which the current node has an active uplink.   |
| Node Depth         | The number of nodes in the path from this node to the master node.   |

**Related Commands** [show atmf detail](#)



# show atmf area

**Overview** Use this command to display information about an AMF area. On AMF controllers, this command displays all areas that the controller is aware of. On remote AMF masters, this command displays the controller area and the remote local area. On gateways, this command displays the controller area and remote master area.

**Syntax** `show atmf area [detail] [<area-name>]`

| Parameter   | Description   |
|-------------|---|
| detail      | Displays detailed information   |
| <area-name> | Displays information about master and gateway nodes in the specified area only. |

**Mode** Privileged Exec

**Example 1** To show information about all areas, use the command:

```
controller-1# show atmf area
```

The following figure shows example output from running this command on a controller.

**Table 5:** Example output from the **show atmf area** command on a Controller.

| controller-1#show atmf area |         |                  |                |               |            |
|-----------------------------|---------|------------------|----------------|---------------|------------|
| ATMF Area Information:      |         |                  |                |               |            |
| * = Local area              |         |                  |                |               |            |
| Area Name                   | Area ID | Local Gateway    | Remote Gateway | Remote Master | Node Count |
| * NZ                        | 1       | Reachable        | N/A            | N/A           | 3          |
| Wellington                  | 2       | Reachable        | Reachable      | Auth OK       | 120        |
| Canterbury                  | 3       | Reachable        | Reachable      | Auth Error    | -          |
| SiteA-AREA                  | 14      | Unreachable      | Unreachable    | Unreachable   | -          |
| Auckland                    | 100     | Reachable        | Reachable      | Auth Start    | -          |
| Southland                   | 120     | Reachable        | Reachable      | Auth OK       | 54         |
| Area count:                 | 6       | Area node count: |                |               | 177        |

The following figure shows example output from running this command on a remote master.

**Table 6:** Example output from the **show atmf area** command on a remote master.

```
Canterbury#show atmf area

ATMF Area Information:

* = Local area
```

| Area Name    | Area ID | Local Gateway          | Remote Gateway | Remote Master | Node Count |
|--------------|---------|------------------------|----------------|---------------|------------|
| NZ           | 1       | Reachable              | N/A            | N/A           | -          |
| * Canterbury | 3       | Reachable              | N/A            | N/A           | 40         |
| Area count:  | 2       | Local area node count: |                |               | 40         |

**Table 7:** Parameter definitions from the **show atmf area** command

| Parameter       | Definition   |
|-----------------|--|
| *               | Indicates the area of the device on which the command is being run.  |
| Area Name       | The name of each area.   |
| Area ID         | The ID of the area.  |
| Local Gateway   | Whether the local gateway node is reachable or not.  |
| Remote Gateway  | Whether the remote gateway node is reachable or not. This is one of the following: <ul style="list-style-type: none"> <li>Reachable, if the link has been established.</li> <li>Unreachable, if a link to the remote area has not been established. This could mean that a port or vlan is down, or that inconsistent VLANs have been configured using the <a href="#">switchport atmf-area link remote-area</a> command.</li> <li>N/A for the area of the controller or remote master on which the command is being run, because the gateway node on that device is local.</li> <li>Auth Start, which may indicate that the area names match on the controller and remote master, but the IDs do not match.</li> <li>Auth Error, which indicates that the areas tried to authenticate but there is a problem. For example, the passwords configured on the controller and remote master may not match, or a password may be missing on the remote master.?</li> <li>Auth OK, which indicates that area authentication was successful and you can now use the <a href="#">atmf select-area</a> command.</li> </ul> |
| Remote Master   | Whether the remote master node is reachable or not. This is N/A for the area of the controller or remote master on which the command is being run, because the master node on that device is local.  |
| Node Count      | The number of nodes in the area.   |
| Area Count      | The number of areas controlled by the controller.  |
| Area Node Count | The total number of nodes in the area.   |

**Example 2** To show detailed information about the areas, use the command:

```
controller-1# show atmf area detail
```

The following figure shows example output from running this command.

**Table 8:** Output from the **show atmf area detail** command

|                                    |                      |
|------------------------------------|----------------------|
| controller-1#show atmf area detail |                      |
| ATMF Area Detail Information:      |                      |
| Controller distance                | : 0                  |
| Controller Id                      | : 21                 |
| Backup Available                   | : FALSE              |
| Area Id                            | : 2                  |
| Gateway Node Name                  | : controller-1       |
| Gateway Node Id                    | : 342                |
| Gateway Ifindex                    | : 6013               |
| Masters Count                      | : 1                  |
| Master Node Name                   | : well-master (329)  |
| Node Count                         | : 2                  |
| Area Id                            | : 3                  |
| Gateway Node Name                  | : controller-1       |
| Gateway Node Id                    | : 342                |
| Gateway Ifindex                    | : 4511               |
| Masters Count                      | : 2                  |
| Master Node Name                   | : cant1-master (15)  |
| Master Node Name                   | : cant2-master (454) |
| Node Count                         | : 2                  |

**Related Commands**

- [show atmf area summary](#)
- [show atmf area nodes](#)
- [show atmf area nodes-detail](#)

# show atmf area guests

**Overview** This command will display details of all guests that the controller is aware of.

**Syntax** show atmf area guests [<area-name> [<node-name>]]

| Parameter   | Description                                       |
|-------------|---|
| <area-name> | The area name for guest information               |
| <node-name> | The name of the node that connects to the guests. |

**Default** N/A

**Mode** User Exec/Privileged Exec

**Example 1** To display atmf area guest nodes on a controller, use the command,

```
GuestNode[1]#show atmf area guests
```

**Output** Figure 40-8: Example output from the **show atmf area guests** command

|  |                |                |       |              |
|--|----------------|----------------|-------|--------------|
| main-building Area Guest Node Information: |                |                |       |              |
| Device                                     | MAC            |                |       | IP/IPv6      |
| Type                                       | Address        | Parent         | Port  | Address      |
| -----                                      |                |                |       |              |
| -  | 0008.5d10.7635 | x230           | 1.0.3 | 192.168.5.4  |
| AT-TQ4600                                  | eccd.6df2.da60 | wireless-node1 | 1.0.4 | 192.168.5.3  |
| -  | 0800.239e.f1fe | x230           | 1.0.4 | 192.168.4.8  |
| AT-TQ4600                                  | 001a.eb3b.dc80 | wireless-node2 | 1.0.7 | 192.168.4.12 |
| main-building guest node count 4           |                |                |       |              |
| GuestNode[1]#                              |                |                |       |              |

**Table 9:** Parameters in the output from **show atmf area guests** command

| Parameter   | Description   |
|-------------|---|
| Device Type | The device type as read from the guest node.                        |
| MAC Address | The MAC address of the guest-node                                   |
| Parent      | The device that directly connects to the guest-node                 |
| Port        | The port number on the parent node that connects to the guest node. |
| IP/IPv6     | The IP or IPv6 address of the guest node.                           |

**Related  
Commands**

- [show atmf area](#)
- [show atmf area nodes](#)
- [show atmf backup guest](#)
- [show atmf area guests-detail](#)

# show atmf area guests-detail

**Overview** This command displays the local and remote guest information from an AMF controller.

**Syntax** `show atmf area guests-detail [<area-name> [<node-name>]]`

| Parameter   | Description  |
|-------------|--|
| <area-name> | The name assigned to the AMF area. An area is an AMF network that is under the control of an AMF Controller. |
| <node-name> | The name assigned to the network node.   |

**Default** N/A.

**Mode** Privileged Exec

**Example** To display detailed information for all guest nodes attached to “node1”, which is located within the area named “northern”, use the following command:

```
AMF_controller#show atmf area guests-detail northern node1
```

**Output** Figure 40-9: Example output from the **show atmf guest detail** command.

|                         |                  |
|-------------------------|------------------|
| #show atmf guest detail |                  |
| Node Name               | : Node1          |
| Port Name               | : port1.0.5      |
| Ifindex                 | : 5005           |
| Guest Description       | : tq4600         |
| Device Type             | : AT-TQ4600      |
| Configuration Mismatch  | : No             |
| Backup Supported        | : Yes            |
| MAC Address             | : eccd.6df2.da60 |
| IP Address              | : 192.168.4.50   |
| IPv6 Address            | : Not Set        |
| HTTP Port               | : 80             |
| Firmware Version        | :                |
| Node Name               | : poe            |
| Port Name               | : port1.0.6      |
| Ifindex                 | : 5006           |
| Guest Description       | : tq3600         |
| Device Type             | : AT-TQ2450      |
| Configuration Mismatch  | : No             |
| Backup Supported        | : Yes            |
| MAC Address             | : 001a.eb3b.cb80 |
| IP Address              | : 192.168.4.9    |
| IPv6 Address            | : Not Set        |
| HTTP Port               | : 80             |
| Firmware Version        | :                |

**Table 10:** Parameters shown in the output of the **show atmf guest detail** command

| Parameter         | Description   |
|-------------------|---|
| Node Name         | The name of the guest's parent node.  |
| Port Name         | The port on the parent node that connects to the guest.   |
| IFindex           | An internal index number that maps to the port number on the parent node.   |
| Guest Description | A brief description of the guest node as manually entered into the <a href="#">description (interface)</a> command for the guest node port on the parent node.                            |
| Device Type       | The device type as supplied by the guest node itself.   |
| Backup Supported  | Indicates whether AMF supports backup of this guest node.   |
| MAC Address       | The MAC address of the guest node.  |
| IP Address        | The IP address of the guest node.   |
| IPv6 Address      | The IPv6 address of the guest node.   |
| HTTP Port         | The HTTP port enables you to specify a port when enabling http to allow a URL for the http user interface of a Guest Node. This is determined by the <a href="#">http-enable</a> command. |
| Firmware Version  | The firmware version that the guest node is currently running.  |

**Related Commands**    [show atmf area nodes-detail](#)  
                              [show atmf area guests](#)

# show atmf area nodes

**Overview** Use this command to display summarized information about an AMF controller's remote nodes.

Note that this command can only be run from a controller node.

**Syntax** `show atmf area nodes [<area-name> [<node-name>]]`

| Parameter   | Description   |
|-------------|---|
| <area-name> | Displays information about nodes in the specified area. |
| <node-name> | Displays information about the specified node.          |

**Mode** Privileged Exec

**Usage** If you do not limit the output to a single area or node, this command lists all remote nodes that the controller is aware of. This can be a very large number of nodes.

**Example** To show summarized information about all the nodes the controller is aware of, use the command:

```
controller-1# show atmf area nodes
```

The following figure shows partial example output from running this command.

**Table 11:** Output from the **show atmf area nodes** command

|                                   |               |             |    |             |            |
|-----------------------------------|---------------|-------------|----|-------------|------------|
| controller-1#show atmf area nodes |               |             |    |             |            |
| Wellington Area Node Information: |               |             |    |             |            |
| Node Name                         | Device Type   | ATMF Master | SC | Parent      | Node Depth |
| -----                             |               |             |    |             |            |
| well-gate                         | x210-24GT     | N           | N  | well-master | 1          |
| well-master                       | AT-x930-28GPX | Y           | N  | none        | 0          |
| Wellington node count 2           |               |             |    |             |            |
| ...                               |               |             |    |             |            |

**Table 12:** Parameter definitions from the **show atmf area nodes** command

| Parameter   | Definition                              |
|-------------|---|
| Node Name   | The name assigned to a particular node. |
| Device Type | The Product series name.                |



**Table 12:** Parameter definitions from the **show atmf area nodes** command (cont.)

| Parameter   | Definition  |
|-------------|---|
| ATMF Master | Whether the node is an AMF master node for its area ('Y' if it is and 'N' if it is not).              |
| SC          | The device configuration, one of C - Chassis (SBx8100 series), S - Stackable (VCS) or N - Standalone. |
| Parent      | The node to which the current node has an active uplink.  |
| Node Depth  | The number of nodes in the path from this node to the master node.                                    |

**Related  
Commands**    [show atmf area](#)  
                  [show atmf area nodes-detail](#)

# show atmf area nodes-detail

**Overview** Use this command to display detailed information about an AMF controller's remote nodes.

Note that this command can only be run from a controller node.

**Syntax** `show atmf area nodes-detail [<area-name> [<node-name>]]`

| Parameter   | Description  |
|-------------|--|
| <area-name> | Displays detailed information about nodes in the specified area. |
| <node-name> | Displays detailed information about the specified node.          |

**Mode** Privileged Exec

**Usage** If you do not limit the output to a single area or node, this command displays information about all remote nodes that the controller is aware of. This can be a very large number of nodes.

**Example** To show information about all the nodes the controller is aware of, use the command:

```
controller-1# show atmf area nodes-detail
```

The following figure shows partial example output from running this command.

**Table 13:** Output from the **show atmf area nodes-detail** command

|  |                        |
|--|------------------------|
| controller-1#show atmf area nodes-detail |                        |
| Wellington Area Node Information:        |                        |
| Node name                                | well-gate              |
| Parent node name                         | : well-master          |
| Domain id                                | : well-gate's domain   |
| Board type                               | : 368                  |
| Distance to core                         | : 1                    |
| Flags                                    | : 50                   |
| Extra flags                              | : 0x00000006           |
| MAC Address                              | : 001a.eb56.9020       |
| Node name well-master                    |                        |
| Parent node name                         | : none                 |
| Domain id                                | : well-master's domain |
| Board type                               | : 333                  |
| Distance to core                         | : 0                    |
| Flags                                    | : 51                   |
| Extra flags                              | : 0x0000000c           |
| MAC Address                              | : eccd.6d3f.fef7       |
| ...                                      |                        |

**Table 14:** Parameter definitions from the **show atmf area nodes-detail** command

| Parameter        | Definition  |
|------------------|---|
| Node name        | The name assigned to a particular node.   |
| Parent node name | The node to which the current node has an active uplink.                              |
| Domain id        |   |
| Board type       | The Allied Telesis code number for the device.  |
| Distance to core | The number of nodes in the path from the current node to the master node in its area. |
| Flags            | Internal AMF information  |
| Extra flags      | Internal AMF information  |
| MAC Address      | The MAC address of the current node   |

**Related Commands**   [show atmf area](#)  
                              [show atmf area nodes](#)

# show atmf area summary

**Overview** Use this command to display a summary of IPv6 addresses used by AMF, for one or all of the areas controlled by an AMF controller.

**Syntax** `show atmf area summary [<area-name>]`

| Parameter   | Description                                       |
|-------------|---|
| <area-name> | Displays information for the specified area only. |

**Mode** Privileged Exec

**Example 1** To show a summary of IPv6 addresses used by AMF, for all of the areas controlled by controller-1, use the command:

```
controller-1# show atmf area summary
```

The following figure shows example output from running this command.

**Table 15:** Output from the **show atmf area summary** command

|                                     |                         |
|-------------------------------------|-------------------------|
| controller-1#show atmf area summary |                         |
| ATMF Area Summary Information:      |                         |
| Management Information              |                         |
| Local IPv6 Address                  | : fd00:4154:4d46:1::15  |
| Area Information                    |                         |
| Area Name                           | : NZ (Local)            |
| Area ID                             | : 1                     |
| Area Master IPv6 Address            | : -                     |
| Area Name                           | : Wellington            |
| Area ID                             | : 2                     |
| Area Master IPv6 Address            | : fd00:4154:4d46:2::149 |
| Area Name                           | : Canterbury            |
| Area ID                             | : 3                     |
| Area Master IPv6 Address            | : fd00:4154:4d46:3::f   |
| Area Name                           | : Auckland              |
| Area ID                             | : 100                   |
| Area Master IPv6 Address            | : fd00:4154:4d46:64::17 |
| Interface                           | : vlink2000             |

**Related Commands**

- [show atmf area](#)
- [show atmf area nodes](#)
- [show atmf area nodes-detail](#)

# show atmf backup

**Overview** This command displays information about AMF backup status for all the nodes in an AMF network. It can only be run on AMF master and controller nodes.

**Syntax** `show atmf backup [logs|server-status|synchronize [logs]]`

| Parameter     | Description   |
|---------------|---|
| logs          | Displays detailed log information.  |
| server-status | Displays connectivity diagnostics information for each configured remote file server. |
| synchronize   | Display the file server synchronization status  |
| logs          | For each remote file server, display the logs for the last synchronization            |

**Mode** Privileged Exec

**Example 1** To display the AMF backup information, use the command:

```
node_1# show atmf backup
```

To display log messages to do with backups, use the command:

```
node_1# show atmf backup logs
```

Table 40-1: Output from **show atmf backup**

| Node_1# show atmf backup<br>ScheduledBackup .....Enabled<br>Schedule.....1 per day starting at 03:00<br>Next Backup Time....19 May 2015 03:00<br>Backup Bandwidth .....Unlimited<br>Backup Media.....SD (Total 1974.0 MB, Free197.6MB)<br>Current Action.....Starting manual backup<br>Started.....18 May 2012 10:08<br>CurrentNode.....atmf_testbox1<br>Backup Redundancy ..... Enabled<br>Local media ..... SD (Total 3788.0MB, Free 3679.5MB)<br>State ..... Active |             |          |         |          |        |
|--|-------------|----------|---------|----------|--------|
| Node Name  | Date        | Time     | In ATMF | On Media | Status |
| atmf_testbox1  | 17 May 2014 | 09:58:59 | Yes     | Yes      | Good   |
| atmf_testbox2  | 17 May 2014 | 10:01:23 | Yes     | Yes      | Good   |

Table 40-2: Output from **show atmf backup logs**

```
Node_1#show atmf backup logs

Backup Redundancy ..... Enabled
Local media ..... SD (Total 3788.0MB, Free 1792.8MB)
State ..... Inactive (Remote file server is not available)

Log File Location: card:/atmf/ATMF/logs/rsync_<node name>.log

Node
Name Log Details
-----
atmf_testbox
2015/08/25 18:16:51 [9045] receiving file list
2015/08/25 18:16:51 [9047] .d..t.... flash/
2015/08/25 18:16:52 [9047] >f+++++++ flash/a.rel
```

**Example 2** To display the AMF backup synchronization status, use the command:

```
node_1# show atmf backup synchronize
```

To display log messages to do with synchronization of backups, use the command:

```
node_1# show atmf backup synchronize logs
```

Table 40-3: Output from **show atmf backup synchronize**

```
Node_1#show atmf backup synchronize

ATMF backup synchronization:

* = Active file server

  Id  Date          Time          Status
-----
-
  1   14 Aug 2014   22:25:57   Synchronized
* 2   -              -           Active
```

Table 40-4: Output from **show atmf backup synchronize logs**

```
Node_1#show atmf backup synchronize logs

Id    Log Details
-----
1      2014/08/14 22:25:54 [8039] receiving file list
      2014/08/14 22:25:54 [8039] >f..t.... backup_Box1.info
      2014/08/14 22:25:54 [8039] sent 46 bytes received 39 bytes total size 40
```

**Example 3** To display the AMF backup information with the optional parameter **server-status**, use the command:

```
Node_1# show atmf backup server-status
```

```
Node1#sh atmf backup server-status

Id    Last Check    State
-----
1     186 s         File server ready
2      1 s         SSH no route to host
```

**Table 41:** Parameter definitions from the **show atmf backup** command

| Parameter         | Definition  |
|-------------------|---|
| Scheduled Backup  | Indicates whether AMF backup scheduling is enabled or disabled.   |
| Schedule          | Displays the configured backup schedule.  |
| Next Backup Time  | Displays the date and time of the next scheduled.   |
| Backup Media      | The current backup medium in use.<br>This will be one of USB, SD, or NONE.<br>Utilized and available memory (MB) will be indicated if backup media memory is present.   |
| Current Action    | The task that the AMF backup mechanism is currently performing. This will be a combination of either (Idle, Starting, Doing, Stopping), or (manual, scheduled).   |
| Started           | The date and time that the currently executing task was initiated in the format DD MMM YYYY HH:MM   |
| Current Node      | The name of the node that is currently being backed up.   |
| Backup Redundancy | Whether backup redundancy is enabled or disabled.   |
| Local media       | The local media to be used for backup redundancy; SD or USB or NONE, and total and free memory available on the media.  |
| State             | Whether SD or USB media is installed and available for backup redundancy. May be Active (if backup redundancy is functional—requires both the local redundant backup media and a remote server to be configured and available) or Inactive. |
| Node Name         | The name of the node that is storing backup data - on its backup media.   |
| Date              | The data of the last backup in the format DD MMM YYYY.  |
| Time              | The time of the last backup in the format HH:MM:SS.   |
| In ATMF           | Whether the node shown is active in the AMF network, (Yes or No).   |
| On Media          | Whether the node shown has a backup on the backup media (Yes or No).  |

**Table 41:** Parameter definitions from the **show atmf backup** command (cont.)

| Parameter         | Definition   |
|-------------------|--|
| Status            | The output can contain one of four values: <ul style="list-style-type: none"><li>• “-” meaning that the status file cannot be found or cannot be read.</li><li>• “Errors” meaning that there are issues - note that the backup may still be deemed successful depending on the errors.</li><li>• “Stopped” meaning that the backup attempt was manually aborted;.</li><li>• “Good” meaning that the backup was completed successfully.</li></ul> |
| Log File Location | All backup attempts will generate a result log file in the identified directory based on the node name. In the above example this would be:<br>card:/amf/office/logs/rsync_amf_testbox1.log.   |
| Log Details       | The contents of the backup log file.   |
| server-status     | Displays connectivity diagnostics information for each configured remove file server.  |

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Related  
Commands**    [show atmf](#)  
                  [atmf network-name](#)



# show atmf backup area

**Overview** Use this command to display backup status information for the master nodes in one or more areas.

Note that this command is only available on AMF controllers.

**Syntax** `show atmf backup area [<area-name> [<node-name>]] [logs]`

| Parameter   | Description   |
|-------------|---|
| logs        | Displays the logs for the last backup of each node.     |
| <area-name> | Displays information about nodes in the specified area. |
| <node-name> | Displays information about the specified node.          |

**Mode** Privileged Exec

**Example** To show information about backups for an area, use the command:

```
controller-1# show atmf backup area
```

**Table 42:** Output from the **show atmf backup area** command

```

controller-1#show atmf backup area

Scheduled Backup ..... Enabled
  Schedule ..... 12 per day starting at 14:30
  Next Backup Time .... 15 Apr 2015 04:30
Backup Bandwidth ..... Unlimited
Backup Media ..... FILE SERVER 1 (Total 128886.5MB, Free 26234.2MB)
Server Config .....
  * 1 ..... Configured (Mounted, Active)
    Host ..... 10.37.74.1
    Username ..... root
    Path ..... /tftpboot/backups_from_controller-1
    Port ..... -
  2 ..... Configured (Unmounted)
    Host ..... 10.37.142.1
    Username ..... root
    Path ..... -
    Port ..... -
Current Action ..... Idle
  Started ..... -
  Current Node ..... -

Backup Redundancy ..... Enabled
  Local media ..... USB (Total 7604.0MB, Free 7544.0MB)
  State ..... Active

```

| Area Name  | Node Name | Id | Date        | Time     | Status |
|------------|-----------|----|-------------|----------|--------|
| Wellington | camry     | 1  | 15 Apr 2015 | 02:30:22 | Good   |
| Canterbury | corona    | 1  | 15 Apr 2015 | 02:30:23 | Good   |
| Canterbury | Avensis   | 1  | 15 Apr 2015 | 02:30:22 | Good   |
| Auckland   | RAV4      | 1  | 15 Apr 2015 | 02:30:23 | Good   |
| Southland  | MR2       | 1  | 15 Apr 2015 | 02:30:24 | Good   |

**Related Commands**

- [atmf backup area-masters enable](#)
- [show atmf area](#)
- [show atmf area nodes-detail](#)
- [switchport atmf-arealink remote-area](#)

# show atmf backup guest

**Overview** This command displays backup status information of guest nodes in an AMF network. This command can only be run on a device configured as an AMF Master and has an AMF guest license.

**Syntax** show atmf backup guest [*<node-name>*] [*<guest-port>*] [logs]

| Parameter                 | Description                        |
|---------------------------|------------------------------------|
| <i>&lt;node-name&gt;</i>  | The name of parent guest node      |
| <i>&lt;guest-port&gt;</i> | The port number on the parent node |

**Mode** User Exec/Privileged Exec

**Example** On the switch named x930-master, to display information about the AMF backup guest status, use the command:

```
x930-master# show atmf backup guest
```

**Output** Figure 40-10: Example output from **show atmf backup guest**

```
x930-master#sh atmf backup guest
Guest Backup ..... Enabled
Scheduled Backup ..... Disabled
  Schedule ..... 1 per day starting at 03:00
  Next Backup Time .... 20 Jan 2016 03:00
Backup Bandwidth ..... Unlimited
Backup Media ..... FILE SERVER 2 (Total 655027.5MB,
                               Free 140191.5MB)
Server Config
  1 ..... Configured (Mounted)
  Host ..... 11.0.24.1
  Username ..... bob
  Path ..... guest-project
  Port ..... -
* 2 ..... Configured (Mounted, Active)
  Host ..... 11.0.24.1
  Username ..... bob
  Path ..... guest-project-second
  Port.....-
Current Action .....Idle
Started ..... -
Current Node ..... -
Backup Redundancy ...Enabled
Local media ..... USB (Total 7376.0MB, Free 7264.1MB)
State ..... Active
```

| Parent Node Name | Port Name | Id  | Date        | Time     | Status |
|------------------|-----------|-----|-------------|----------|--------|
| -----            |           |     |             |          |        |
| x230             | port1.0.4 | 2   | 19 Jan 2016 | 22:21:46 | Good   |
|                  |           | 1   | 19 Jan 2016 | 22:21:46 | Good   |
|                  |           | USB | 19 Jan 2016 | 22:21:46 | Good   |

Table 40-1: Parameters in the output from **show atmf backup guest**

| Parameter        | Description  |
|------------------|--|
| Guest Backup     | The status of the guest node backup process  |
| Scheduled Backup | The timing configured for guest backups.   |
| Schedule         | Displays the configured backup schedule.   |
| Next Backup Time | The time the next backup process will be initiated.  |
| Backup Bandwidth | The bandwidth limit applied to the backup data flow measured in kilo Bytes /second. Note that unlimited means there is no limit set specifically for the backup data flow. |
| Backup Media     | Detail of the memory media used to store the backup files and the current memory capacity available.   |

**Related Commands**

- [show atmf backup area](#)
- [show atmf backup](#)
- [show atmf links guest](#)
- [show atmf nodes](#)
- [show atmf backup guest](#)
- [atmf backup guests delete](#)
- [atmf backup guests enable](#)

# show atmf detail

**Overview** This command displays details about an AMF node. It can only be run on AMF master and controller nodes.

**Syntax** `show atmf detail`

| Parameter | Description                       |
|-----------|-----------------------------------|
| detail    | Displays output in greater depth. |

**Mode** Privileged Exec

**Example 1** To display the AMF node1 information in detail, use the command:

```
controller-1# show atmf detail
```

A typical output screen from this command is shown below:

```
atmf-1#show atmf detail
ATMF Detail Information:

Network Name           : Test_network
Network Mtu            : 1300
Node Name              : controller-1
Node Address           : controller-1.atmf
Node ID                : 342
Node Depth             : 0
Domain State           : BackupDomainController
Recovery State         : None
Log Verbose Setting    : Verbose

Management VLAN
VLAN ID                : 4000
Management Subnet      : 172.31.0.0
Management IP Address  : 172.31.1.86
Management Mask        : 255.255.128.0
Management IPv6 Address : fd00:4154:4d46:1::156
Management IPv6 Prefix Length : 64

Domain VLAN
VLAN ID                : 4091
Domain Subnet          : 172.31.128.0
Domain IP Address      : 172.31.129.86
Domain Mask            : 255.255.128.0
```

**Table 41:** Parameter definitions from the **show atmf detail** command

| Parameter       | Definition  |
|-----------------|---|
| Network MTU     | The network MTU for the ATMF network.   |
| Network Name    | The AMF network that a particular node belongs to.  |
| Node Name       | The name assigned to a particular node.   |
| Node Address    | An Address used to access a remotely located node. This is simply the Node Name plus the dotted suffix atmf (.atmf).  |
| Node ID         | A Unique identifier assigned to a Node on an AMF network.   |
| Node Depth      | The number of nodes in path from this node to level of the AMF root node. It can be thought of as the vertical depth of the AMF network from a particular node to the zero level of the AMF root node.  |
| Domain State    | The state of Node in a Domain in AMF network as Controller/Backup.  |
| Recovery State  | The AMF node recovery status. Indicates whether a node recovery is in progress on this device - Auto, Manual, or None.  |
| Management VLAN | The VLAN created for traffic between Nodes of different domain (up/down links). <ul style="list-style-type: none"><li>• VLAN ID - In this example VLAN 4092 is configured as the Management VLAN.</li><li>• Management Subnet - Network prefix for the subnet.</li><li>• Management IP Address - The IP address allocated for this traffic.</li><li>• Management Mask - The subnet mask used to create a subnet for this traffic (255.255.128.0).</li></ul> |
| Domain VLAN     | The VLAN assigned for traffic between Nodes of same domain (crosslink). <ul style="list-style-type: none"><li>• VLAN ID - In this example VLAN 4091 is configured as the domain VLAN.</li><li>• Domain Subnet. The subnet address used for this traffic.</li><li>• Domain IP Address. The IP address allocated for this traffic.</li><li>• Domain Mask. The subnet mask used to create a subnet for this traffic (255.255.128.0).</li></ul>                 |
| Node Depth      | The number of nodes in the path from this node to the Core domain.  |

# show atmf group

**Overview** This command can be used to display the group membership within to a particular AMF node. It can also be used with the working-set command to display group membership within a working set.

Each node in the AMF is automatically added to the group that is appropriate to its hardware architecture, e.g. x510, x610. Nodes that are configured as masters are automatically assigned to the master group.

You can create arbitrary groups of AMF members based on your own selection criteria. You can then assign commands collectively to any of these groups.

**Syntax** `show atmf group [user-defined|automatic]`

| Parameter    | Description                             |
|--------------|---|
| user-defined | User-defined-group information display. |
| automatic    | Automatic group information display.    |

**Default** All groups are displayed

**Mode** Privileged Exec

**Example 1** To display group membership of node2, use the following command:

```
node2# show atmf group
```

A typical output screen from this command is shown below:

```
ATMF group information

master, x510

node2#
```

This screen shows that node2 contains the groups **master** and **x510**. Note that although the node also contains the implicit groups, these do not appear in the show output.

**Example 2** The following commands (entered on *node2*) will display all the automatic groups within the working set containing *node1* and all nodes that have been pre-defined to contain the *sysadmin* group:

First define the working-set:

```
node1# #atmf working-set node1 group sysadmin
```

A typical output screen from this command is shown below:

```

ATMF group information

master, poe, x8100

=====
node1, node2, node3, node4, node5, node6:
=====

ATMF group information

sysadmin, x8100

AMF_NETWORK[6]#

```

This confirms that the six nodes (*node1* to *node6*) are now members of the working-set and that these nodes reside within the *AMF-NETWORK*.

Note that to run this command, you must have previously entered the command [atmf working-set](#) on page 1603. This can be seen from the network level prompt, which in this case is *AMF\_NETWORK[6]#*.

**Table 42:** Sample output from the **show atmf group** command for a working set.

```

AMF_NETWORK[6]#show atmf group
=====
node3, node4, node5, node6:
=====

ATMF group information

edge_switches, x510

```

**Table 43:** Parameter definitions from the **show atmf group** command for a working set

| Parameter              | Definition   |
|------------------------|--|
| ATMF group information | <p>Displays a list of nodes and the groups that they belong to, for example:</p> <ul style="list-style-type: none"> <li>• master - Shows a common group name for Nodes configured as AMF masters.</li> <li>• Hardware Arch - Shows a group for all Nodes sharing a common Hardware architecture, e.g. x8100, x610, for example.</li> <li>• User-defined - Arbitrary groups created by the user for AMF nodes.</li> </ul> |



# show atmf group members

**Overview** This command will display all group memberships within an AMF working-set. Each node in the AMF working set is automatically added to automatic groups which are defined by hardware architecture, e.g. x510, x610. Nodes that are configured as masters are automatically assigned to the master group. Users can define arbitrary groupings of AMF members based on their own criteria, which can be used to select groups of nodes.

**Syntax** `show atmf group members [user-defined|automatic]`

| Parameter    | Description                            |
|--------------|--|
| user-defined | User defined group membership display. |
| automatic    | Automatic group membership display.    |

**Mode** Privileged Exec

**Example** To display group membership of all nodes in a working-set, use the command:

```
ATMF_NETWORK[9]# show atmf group members
```

**Table 44:** Sample output from the **show atmf group members** command

|                       |               |                            |
|-----------------------|---------------|----------------------------|
| ATMF Group membership |               |                            |
| Automatic Groups      | Total Members | Members                    |
| -----                 |               |                            |
| master                | 1             | Building_1                 |
| poe                   | 1             | HW_Team1                   |
| x510                  | 3             | SW_Team1 SW_Team2 SW_Team3 |
| x610                  | 1             | HW_Team1                   |
| x8100                 | 2             | Building_1 Building_2      |
| ATMF Group membership |               |                            |
| User-defined Groups   | Total Members | Members                    |
| -----                 |               |                            |
| marketing             | 1             | Bld1_Floor_1               |
| software              | 3             | SW_Team1 SW_Team2 SW_Team3 |

**Table 45:** Parameter definitions from the **show atmf group members** command

| Parameter           | Definition   |
|---------------------|--|
| Automatic Groups    | Lists the Automatic Groups and their nodal composition. The sample output shows AMF nodes based on the same Hardware type or belonging to the same Master group. |
| User-defined Groups | Shows the grouping of AMF nodes in user defined groups.  |
| Total Members       | Shows the total number of members in each group.   |
| Members             | Shows the list of AMF nodes in each group.   |

**Related Commands**

- [show atmf group](#)
- [show atmf](#)
- [atmf group \(membership\)](#)

# show atmf guest

**Overview** This command is available on any AMF master in the network. It displays details about the AMF guest nodes that exist in the AMF network, such as device type, IP address and MAC address etc.

**Syntax** `show atmf guest [<node-name>] [<guest-port>]`

| Parameter    | Description                          |
|--------------|--------------------------------------|
| <node-name>  | The name of the guest node's parent. |
| <guest-port> | The port name on the parent node.    |

**Mode** User Exec/Privileged Exec

**Example** To display the ATMF guest output, use the command:

```
awplus# show atmf guest
```

**Output** Figure 40-11: Example output from the **show atmf guest** command.

|                                 |             |             |            |                 |
|---------------------------------|-------------|-------------|------------|-----------------|
| master#show atmf guests         |             |             |            |                 |
| Guest Information:              |             |             |            |                 |
| Device Name                     | Device Type | Parent Node | Guest Port | IP/IPv6 Address |
| -----                           | -----       | -----       | -----      | -----           |
| master-2.1.1                    | AR415S      | master      | 2.1.1      | 192.168.2.10    |
| master-2.1.2                    | AT-9924T    | master      | 2.1.2      | 192.168.1.10    |
| master-2.1.4                    | AT-TQ3200   | master      | 2.1.4      | 192.168.1.12    |
| Current ATMF guest node count 3 |             |             |            |                 |

**Table 46:** Parameters shown in the output of the **show atmf guest** command

| Parameter   | Description   |
|-------------|---|
| Device Name | The name that is discovered from the device, or failing that, a name that is auto-assigned by AMF. The auto-assigned name consists of <parent node name>-<attached port number>                             |
| Device Type | This is the product name of the Guest Node and is discovered from the device. If no device Type can be discovered, then the modelName configured on the Guest-class assigned to the connected port is used. |
| Parent Node | The AMF member name of the AMF member that directly connects to the guest node.   |

**Table 46:** Parameters shown in the output of the **show atmf guest** command

| Parameter       | Description  |
|-----------------|--|
| Guest Port      | The port, on the Parent node that directly connects to the guest node.                             |
| IP/IPv6 Address | The address discovered from the node, or statically configured on the parent node's attached port. |

**Related  
Commands**

[atmf guest-class](#)  
[switchport atmf-guestlink](#)  
[show atmf backup guest](#)

# show atmf links

**Overview** This command displays information about AMF links on a switch. The display output contains link status state information.

**Syntax** `show atmf links brief`

| Parameter  | Description   |
|------------|---|
| links      | AMF links.  |
| brief      | A brief summary of AMF links, their configuration and status. |
| detail     | A detailed description of the AMF links.                      |
| statistics | AMF statistics.   |
| ifrange    | Limits the display output to the specified interface range.   |

**Mode** User Exec and Privileged Exec

**Example 1** To display a brief summary of the AMF links, use the following command:

```
node-1# show atmf links brief
```

The following example summarizes the links that are detailed in the example in [show atmf links](#).

Figure 40-12: Sample output from the **show atmf links brief** command

| Example-core# show atmf links |           |             |            |               |                  |            |
|-------------------------------|-----------|-------------|------------|---------------|------------------|------------|
| ATMF Link Brief Information:  |           |             |            |               |                  |            |
| Local Port                    | Link Type | Link Status | ATMF State | Adjacent Node | Adjacent Ifindex | Link State |
| 1.0.10                        | Crosslink | Down        | Init       | *crosslink1   | -                | Blocking   |
| 1.0.14                        | Crosslink | Down        | Init       | *crosslink2   | -                | Blocking   |
| 1.0.1                         | Downlink  | Down        | Init       | -             | -                | Blocking   |
| 1.0.2                         | Downlink  | Up          | Full       | Node2         | 5001             | Forwarding |
| 1.0.8                         | Downlink  | Up          | Full       | downlink1     | 5001             | Forwarding |
| * = Provisioned.              |           |             |            |               |                  |            |

**Table 47:** Parameter definitions from the **show atmf links brief** command output

| Parameter         | Definition   |
|-------------------|--|
| Local Port        | Shows the local port on the selected node.   |
| Link Type         | Shows link type as Uplink or Downlink (parent and child) or Cross-link (nodes in same domain).   |
| Link Status       | Shows the link status of the local port on the node as either Up or Down.  |
| ATMF State        | Shows AMF state of the local port: <ul style="list-style-type: none"><li>• Init - Link is down.</li><li>• Hold - Link transitioned to up state, but waiting for hold period to ensure link is stable.</li><li>• Incompatible - Neighbor rejected the link because of inconsistency in AMF configurations.</li><li>• OneWay - Link is up and has waited the hold down period and now attempting to link to another unit in another domain</li><li>• Full - Link hello packets are sent and received from its neighbor with its own node id.</li><li>• Shutdown - Link has been shut down by user configuration.</li></ul> |
| Adjacent Node     | Shows the Adjacent AMF Node to the one being configured.   |
| Adjacent IF Index | Shows the IF index for the Adjacent AMF Node connected to the node being configured.   |
| Link State        | Shows the state of the AMF link. Valid states are either Forwarding or Blocking.   |

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Mode** User Exec and Privileged Exec

**Related Commands** [no debug all](#)  
[clear atmf links statistics](#)  
[show atmf](#)  
[show atmf nodes](#)

# show atmf links detail

**Overview** This command displays detailed information on all the links configured in the AMF network. It can only be run on AMF master and controller nodes.

**Syntax** `show atmf links detail`

| Parameter | Description                     |
|-----------|---------------------------------|
| detail    | Detailed AMF links information. |

**Mode** User Exec

**Example** To display the AMF link details use this command:

```
device1# show atmf links detail
```

The output from this command will display all the internal data held for AMF links. The following example gives details of the links that are summarized in the example in [show atmf links](#).

**Table 48:** Sample output from the **show atmf links detail** command

|                                 |                     |
|---------------------------------|---------------------|
| device1# show atmf links detail |                     |
| -----                           |                     |
| Crosslink Ports Information     |                     |
| -----                           |                     |
| Port                            | : sa1               |
| Ifindex                         | : 4501              |
| Port Status                     | : Down              |
| Port State                      | : Init              |
| Last event                      | :                   |
| Port BPDU Receive Count         | : 0                 |
| Port                            | : po10              |
| Ifindex                         | : 4610              |
| Port Status                     | : Up                |
| Port State                      | : Full              |
| Last event                      | : AdjNodeLSEPresent |
| Port BPDU Receive Count         | : 140               |
| Adjacent Node Name              | : Building-B        |
| Adjacent Ifindex                | : 4610              |
| Adjacent MAC                    | : eccd.6dd1.64d0    |
| Port Last Message Response      | : 0                 |

**Table 48:** Sample output from the **show atmf links detail** command (cont.)

|                                |                                       |
|--------------------------------|---------------------------------------|
| Port                           | : po30                                |
| Ifindex                        | : 4630                                |
| Port Status                    | : Up                                  |
| Port State                     | : Full                                |
| Last event                     | : AdjNodeLSEPresent                   |
| Port BPDU Receive Count        | : 132                                 |
| Adjacent Node Name             | : Building-A                          |
| Adjacent Ifindex               | : 4630                                |
| Adjacent MAC                   | : eccd.6daa.c861                      |
| Port Last Message Response     | : 0                                   |
| Link State Entries:            |                                       |
| Crosslink Ports Blocking       | : False                               |
| Node.Ifindex                   | : Building-A.4630 - Example-core.4630 |
| Transaction ID                 | : 2 - 2                               |
| MAC Address                    | : eccd.6daa.c861 - 0000.cd37.054b     |
| Link State                     | : Full - Full                         |
| Node.Ifindex                   | : Building-B.4610 - Example-core.4610 |
| Transaction ID                 | : 2 - 2                               |
| MAC Address                    | : eccd.6ddl.64d0 - 0000.cd37.054b     |
| Link State                     | : Full - Full                         |
| Domain Nodes Tree:             |                                       |
| Node                           | : Building-A                          |
| Links on Node                  | : 1                                   |
| Link 0                         | : Building-A.4630 - Example-core.4630 |
| Forwarding State               | : Forwarding                          |
| Node                           | : Building-B                          |
| Links on Node                  | : 1                                   |
| Link 0                         | : Building-B.4610 - Example-core.4610 |
| Forwarding State               | : Forwarding                          |
| Node                           | : Example-core                        |
| Links on Node                  | : 2                                   |
| Link 0                         | : Building-A.4630 - Example-core.4630 |
| Forwarding State               | : Forwarding                          |
| Link 1                         | : Building-B.4610 - Example-core.4610 |
| Forwarding State               | : Forwarding                          |
| Crosslink Transaction Entries: |                                       |
| Node                           | : Building-B                          |
| Transaction ID                 | : 2                                   |
| Uplink Transaction ID          | : 6                                   |
| Node                           | : Building-A                          |
| Transaction ID                 | : 2                                   |
| Uplink Transaction ID          | : 6                                   |
| Uplink Information:            |                                       |
| Waiting for Sync               | : 0                                   |
| Transaction ID                 | : 6                                   |
| Number of Links                | : 0                                   |
| Number of Local Uplinks        | : 0                                   |



**Table 48:** Sample output from the **show atmf links detail** command (cont.)

|                              |                   |
|------------------------------|-------------------|
| Originating Node             | : Building-A      |
| Domain                       | : -'s domain      |
| Node                         | : Building-A      |
| Ifindex                      | : 0               |
| Node Depth                   | : 0               |
| Transaction ID               | : 6               |
| Flags                        | : 32              |
| Domain Controller            | : -               |
| Domain Controller MAC        | : 0000.0000.0000  |
| Originating Node             | : Building-B      |
| Domain                       | : -'s domain      |
| Node                         | : Building-B      |
| Ifindex                      | : 0               |
| Node Depth                   | : 0               |
| Transaction ID               | : 6               |
| Flags                        | : 32              |
| Domain Controller            | : -               |
| Domain Controller MAC        | : 0000.0000.0000  |
| Downlink Domain Information: |                   |
| Domain                       | : Dept-A's domain |
| Domain Controller            | : Dept-A          |
| Domain Controller MAC        | : eccd.6d20.c1d9  |
| Number of Links              | : 2               |
| Number of Links Up           | : 2               |
| Number of Links on This Node | : 2               |
| Links are Blocked            | : 0               |
| Node Transaction List        |                   |
| Node                         | : Building-B      |
| Transaction ID               | : 8               |
| Node                         | : Building-A      |
| Transaction ID               | : 8               |
| Domain List                  |                   |
| Domain                       | : Dept-A's domain |
| Node                         | : Example-core    |
| Ifindex                      | : 4621            |
| Transaction ID               | : 8               |
| Flags                        | : 1               |
| Domain                       | : Dept-A's domain |
| Node                         | : Example-core    |
| Ifindex                      | : 4622            |
| Transaction ID               | : 8               |
| Flags                        | : 1               |

**Table 48:** Sample output from the **show atmf links detail** command (cont.)

|                              |                         |
|------------------------------|-------------------------|
| Domain                       | : Dorm-D's domain       |
| Domain Controller            | : Dorm-D                |
| Domain Controller MAC        | : 0000.cd37.082c        |
| Number of Links              | : 2                     |
| Number of Links Up           | : 2                     |
| Number of Links on This Node | : 2                     |
| Links are Blocked            | : 0                     |
| Node Transaction List        |                         |
| Node                         | : Building-B            |
| Transaction ID               | : 20                    |
| Node                         | : Building-A            |
| Transaction ID               | : 20                    |
| Domain List                  |                         |
| Domain                       | : Dorm-D's domain       |
| Node                         | : Building-A            |
| Ifindex                      | : 0                     |
| Transaction ID               | : 20                    |
| Flags                        | : 32                    |
| Domain                       | : Dorm-D's domain       |
| Node                         | : Building-B            |
| Ifindex                      | : 0                     |
| Transaction ID               | : 20                    |
| Flags                        | : 32                    |
| Domain                       | : Dorm-D's domain       |
| Node                         | : Example-core          |
| Ifindex                      | : 4510                  |
| Transaction ID               | : 20                    |
| Flags                        | : 1                     |
| Domain                       | : Dorm-D's domain       |
| Node                         | : Example-core          |
| Ifindex                      | : 4520                  |
| Transaction ID               | : 20                    |
| Flags                        | : 1                     |
| Domain                       | : Example-edge's domain |
| Domain Controller            | : Example-edge          |
| Domain Controller MAC        | : 001a.eb93.7aa6        |
| Number of Links              | : 1                     |
| Number of Links Up           | : 1                     |
| Number of Links on This Node | : 0                     |
| Links are Blocked            | : 0                     |
| Node Transaction List        |                         |
| Node                         | : Building-B            |
| Transaction ID               | : 9                     |
| Node                         | : Building-A            |
| Transaction ID               | : 9                     |

**Table 48:** Sample output from the **show atmf links detail** command (cont.)

|                                |                         |
|--------------------------------|-------------------------|
| Domain List                    |                         |
| Domain                         | : Example-edge's domain |
| Node                           | : Building-A            |
| Ifindex                        | : 0                     |
| Transaction ID                 | : 9                     |
| Flags                          | : 32                    |
| Domain                         | : Example-edge's domain |
| Node                           | : Building-B            |
| Ifindex                        | : 5027                  |
| Transaction ID                 | : 9                     |
| Flags                          | : 1                     |
| -----                          |                         |
| Up/Downlink Ports Information  |                         |
| -----                          |                         |
| Port                           | : sa10                  |
| Ifindex                        | : 4510                  |
| Port Status                    | : Up                    |
| Port State                     | : Full                  |
| Last event                     | : LinkComplete          |
| Adjacent Node                  | : Dorm-A                |
| Adjacent Internal ID           | : 211                   |
| Adjacent Ifindex               | : 4510                  |
| Adjacent Board ID              | : 387                   |
| Adjacent MAC                   | : eccd.6ddf.6cdf        |
| Adjacent Domain Controller     | : Dorm-D                |
| Adjacent Domain Controller MAC | : 0000.cd37.082c        |
| Port Forwarding State          | : Forwarding            |
| Port BPDU Receive Count        | : 95                    |
| Port Sequence Number           | : 11                    |
| Port Adjacent Sequence Number  | : 7                     |
| Port Last Message Response     | : 0                     |
| Port                           | : po21                  |
| Ifindex                        | : 4621                  |
| Port Status                    | : Up                    |
| Port State                     | : Full                  |
| Last event                     | : LinkComplete          |
| Adjacent Node                  | : Dept-A                |
| Adjacent Internal ID           | : 29                    |
| Adjacent Ifindex               | : 4621                  |
| Adjacent Board ID              | : 340                   |
| Adjacent MAC                   | : eccd.6d20.c1d9        |
| Adjacent Domain Controller     | : Dept-A                |
| Adjacent Domain Controller MAC | : eccd.6d20.c1d9        |
| Port Forwarding State          | : Forwarding            |
| Port BPDU Receive Count        | : 96                    |
| Port Sequence Number           | : 8                     |
| Port Adjacent Sequence Number  | : 9                     |
| Port Last Message Response     | : 0                     |
| Special Link Present           | : FALSE                 |

**Table 49:** Parameter definitions from the **show atmf links detail** command output

| Parameter                     | Definition   |
|-------------------------------|--|
| Crosslink Ports Information   | <p>Show details of all Crosslink ports on this Node:</p> <ul style="list-style-type: none"> <li>Port - Name of the Port or static aggregation (sa&lt;*&gt;).</li> <li>Ifindex - Interface index for the crosslink port.</li> <li>VR ID - Virtual router id for the crosslink port.</li> <li>Port Status - Status of the local port on the Node as UP or DOWN.</li> <li>Port State - AMF State of the local port. <ul style="list-style-type: none"> <li>Init - Link is down.</li> <li>Hold - Link transitioned to up state, but waiting for hold period to ensure link is stable.</li> <li>Incompatible - Neighbor rejected the link because of inconsistency in AMF configurations.</li> <li>OneWay - Link is up and has waited the hold down period and now attempting to link to another unit in another domain</li> <li>Full - Link hello packets are sent and received from its neighbor with its own node id.</li> <li>Shutdown - Link has been shut down by user configuration.</li> </ul> </li> </ul> <p>Port BPDU Receive Count - The number of AMF protocol PDU's received.</p> <ul style="list-style-type: none"> <li>Adjacent Node Name - The name of the adjacent node connected to this node.</li> <li>Adjacent Ifindex - Adjacent AMF Node connected to this Node.</li> <li>Adjacent VR ID - Virtual router id of the adjacent node in the domain.</li> <li>Adjacent MAC - MAC address of the adjacent node in the domain.</li> <li>Port Last Message Response - Response from the remote neighbor to our AMF last hello packet.</li> </ul> |
| Link State Entries            | <p>Shows all the link state database entries:</p> <ul style="list-style-type: none"> <li>Node.Ifindex - Shows adjacent Node names and Interface index.</li> <li>Transaction ID - Shows transaction id of the current crosslink transaction.</li> <li>MAC Address - Shows adjacent Node MAC addresses.</li> <li>Link State - Shows AMF states of adjacent nodes on the link.</li> </ul>   |
| Domain Nodes Tree             | <p>Shows all the nodes in the domain:</p> <ul style="list-style-type: none"> <li>Node - Name of the node in the domain.</li> <li>Links on Node - Number of crosslinks on a vertex/node.</li> <li>Link no - Shows adjacent Node names and Interface index.</li> <li>Forwarding State - Shows state of AMF link Forwarding/Blocking.</li> </ul>  |
| Crosslink Transaction Entries | <p>Shows all the transaction entries:</p> <ul style="list-style-type: none"> <li>Node - Name of the AMF node.</li> <li>Transaction ID - transaction id of the node.</li> <li>Uplink Transaction ID - transaction id of the remote node.</li> </ul>   |

**Table 49:** Parameter definitions from the **show atmf links detail** command output (cont.)

| Parameter                   | Definition  |
|-----------------------------|---|
| Uplink Information          | <p>Show all uplink entries.</p> <ul style="list-style-type: none"> <li>• Waiting for Sync - Flag if uplinks are currently waiting for synchronization.</li> <li>• Transaction ID - Shows transaction id of the local node.</li> <li>• Number of Links - Number of up downlinks in the domain.</li> <li>• Number of Local Uplinks - Number of uplinks on this node to the parent domain.</li> <li>• Originating Node - Node originating the uplink information.</li> <li>• Domain - Name of the parent uplink domain.</li> <li>• Node - Name of the node in the parent domain, that is connected to the current domain.</li> <li>• Ifindex - Interface index of the parent node's link to the current domain.</li> <li>• VR ID - Virtual router id of the parent node's link to the current domain.</li> <li>• Transaction ID - Transaction identifier for the neighbor in crosslink.</li> <li>• Flags - Used in domain messages to exchange the state:<br/> ATMF_DOMAIN_FLAG_DOWN = 0<br/> ATMF_DOMAIN_FLAG_UP = 1<br/> ATMF_DOMAIN_FLAG_BLOCK = 2<br/> ATMF_DOMAIN_FLAG_NOT_PRESENT = 4<br/> ATMF_DOMAIN_FLAG_NO_NODE = 8<br/> ATMF_DOMAIN_FLAG_NOT_ACTIVE_PARENT = 16<br/> ATMF_DOMAIN_FLAG_NOT_LINKS = 32<br/> ATMF_DOMAIN_FLAG_NO_CONFIG = 64</li> <li>• Domain Controller - Domain Controller in the uplink domain</li> <li>• Domain Controller MAC - MAC address of Domain Controller in uplink domain</li> </ul> |
| Downlink Domain Information | <p>Shows all the downlink entries:</p> <ul style="list-style-type: none"> <li>• Domain - Name of the downlink domain.</li> <li>• Domain Controller - Controller of the downlink domain.</li> <li>• Domain Controller MAC - MAC address of the domain controller.</li> <li>• Number of Links - Total number of links to this domain from the Node.</li> <li>• Number of Links Up - Total number of links that are in UP state.</li> <li>• Number of Links on This Node - Number of links terminating on this node.</li> <li>• Links are Blocked - 0 links are not blocked to the domain. 1 All links are blocked to the domain.</li> </ul>   |

**Table 49:** Parameter definitions from the **show atmf links detail** command output (cont.)

| Parameter                     | Definition  |
|-------------------------------|---|
| Node Transaction List         | <p>List of transactions from this downlink domain node.</p> <ul style="list-style-type: none"> <li>Node - 0 links are not blocked to the domain. 1 All links are blocked to the domain.</li> <li>Transaction ID - Transaction id for this node.</li> <li>Domain List: Shows list of nodes in the current domain and their links to the downlink domain.:</li> <li>Domain - Domain name of the downlink node.</li> <li>Node - Name of the node in the current domain.</li> <li>Ifindex - Interface index for the link from the node to the downlink domain.</li> <li>Transaction ID - Transaction id of the node in the current domain.</li> <li>Flags - As mentioned above.</li> </ul>  |
| Up/Downlink Ports Information | <p>Shows all the configured up and down link ports on this node:</p> <ul style="list-style-type: none"> <li>Port - Name of the local port.</li> <li>Ifindex - Interface index of the local port.</li> <li>VR ID - Virtual router id for the local port.</li> <li>Port Status - Shows status of the local port on the Node as UP/DOWN.</li> <li>Port State - AMF state of the local port.</li> <li>Adjacent Node - nodename of the adjacent node.</li> <li>Adjacent Internal ID - Unique node identifier of the remote node.</li> <li>Adjacent Ifindex - Interface index for the port of adjacent AMF node.</li> <li>Adjacent Board ID - Product identifier for the adjacent node.</li> <li>Adjacent VR ID - Virtual router id for the port on adjacent AMF node.</li> <li>Adjacent MAC - MAC address for the port on adjacent AMF node.</li> <li>Adjacent Domain Controller - nodename of the Domain controller for Adjacent AMF node.</li> <li>Adjacent Domain Controller MAC - MAC address of the Domain controller for Adjacent AMF node.</li> <li>Port Forwarding State - Local port forwarding state Forwarding or Blocking.</li> <li>Port BPDU Receive Count - count of AMF protocol PDU's received.</li> <li>Port Sequence Number - hello sequence number, incremented every time the data in the hello packet changes.</li> <li>Port Adjacent Sequence Number - remote ends sequence number used to check if we need to process this packet or just note it arrived.</li> <li>Port Last Message Response - response from the remote neighbor to our last hello packet.</li> </ul> |

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Related  
Commands**    no debug all  
                  clear atmf links statistics  
                  show atmf

# show atmf links guest

**Overview** This command displays information about guest nodes visible to an AMF device.

**Syntax** `show atmf links guest [detail] [interface <IFRANGE>]`

| Parameter | Description  |
|-----------|--|
| detail    | Displays a full output for the connected guest nodes |
| <IFRANGE> | Select a specific range of ports to display.         |

**Default** With no parameters specified this command will display its standard output for all ports with guest nodes connected.

**Mode** User Exec/Privileged Exec

**Example 1** To display information about AMF guests that are connectable from node1, use the command:

```
node1# show atmf links guest
```

**Output** Figure 40-13: Example of standard output from **show atmf links guest**

```
node1#sh atmf links guest
```

| Guest Link Information:      |              |            |        |                |                   |
|------------------------------|--------------|------------|--------|----------------|-------------------|
| DC = Discovery configuration |              |            |        |                |                   |
| S = static D = dynamic       |              |            |        |                |                   |
| Local Port                   | Guest Class  | Model Type | MAC DC | Address        | IP / IPv6 Address |
| 1.0.1                        | -            | other      | D      | 0013.1a1e.4589 | 192.168.1.2       |
| 1.0.2                        | aastra-phone | other      | D      | 0008.5d10.7635 | 192.168.1.3       |
| 1.0.3                        | cisco-phone2 | other      | S      | -              | 192.168.2.1       |
| 1.0.4                        | panasonic... | other      | D      | 0800.239e.f1fe | 192.168.1.5       |

**Example 2** To display detailed information about AMF guests, use the command:

```
node1# show atmf links guest detail
```



**Output** Figure 40-14: Example of output from **show atmf links guest detail**

```
Detailed Guest Link Information:

Interface      : port1.0.1
Class Name     : -
Model Type     : other
Discovery Method : Dynamic
IP Address     : 192.168.1.2
State          : Getting ID
MAC address    : 0013.1a1e.4589

Interface      : port1.0.2
Class Name     : aastra-phone
Model Type     : other
Discovery Method : Dynamic
IP Address     : 192.168.1.3
State          : Full
MAC address    : 0008.5d10.7635
Device Type    : Aastra IP Phone

Interface      : port1.0.4
Class Name     : panasonic-camera
Model Type     : other
Discovery Method : Dynamic
IP Address     : 192.168.1.5
State          : Getting ID
MAC address    : 0800.239e.f1fe
```

Table 40-1: Parameters shown in the output of **show atmf links guest**

| Parameter        | Description   |
|------------------|---|
| Interface        | The port on the parent node that connects to the guest.   |
| Class Name       | The name of the ATMF guest-class that has been assigned to the guest node by the <a href="#">atmf guest-class</a> command.  |
| Model-Type       | The model type of the guest node, as entered by the <a href="#">modeltype</a> command. Can be one of the following: <ul style="list-style-type: none"><li>• alliedware</li><li>• aw+</li><li>• tq</li><li>• other</li></ul> |
| Discovery Method | The discovery method as applied by the <a href="#">discovery</a> command. This can be either dynamic or static.   |
| IP Address       | The IP address of the guest node.   |
| State            |   |
| MAC Address      | The MAC address of the guest node.  |

**Related  
Commands**

- atmf guest-class
- discovery
- http-enable
- username
- modeltype
- switchport atmf-guestlink
- show atmf backup guest

# show atmf links statistics

**Overview** This command displays details of the AMF links configured on the device and also displays statistics about the AMF packet exchanges between the devices.

It is also possible to display the AMF link configuration and packet exchange statistics for a specified interface.

This command can only be run on AMF master and controller nodes

**Syntax** `show atmf links statistics [interface [<port_number>]]`

| Parameter     | Description  |
|---------------|--|
| interface     | Specifies that the command applies to a specific interface (port) or range of ports. Where both the interface and port number are unspecified, full statistics (not just those relating to ports) will be displayed.     |
| <port_number> | Enter the port number for which statistics are required. A port range, a static channel or LACP link can also be specified. Where no port number is specified, statistics will be displayed for all ports on the device. |

**Mode** User Exec

**Example 1** To display AMF link statistics for the whole device, use the command:

```
device1# show atmf links statistics
```

**Table 41:** Sample output from the **show atmf links statistics** command

|                        |         |          |
|------------------------|---------|----------|
| ATMF Statistics:       |         |          |
|                        | Receive | Transmit |
| -----                  |         |          |
| Arealink Hello         | 318     | 327      |
| Crosslink Hello        | 164     | 167      |
| Crosslink Hello Domain | 89      | 92       |
| Crosslink Hello Uplink | 86      | 88       |
| Hello Link             | 0       | 0        |
| Hello Neighbor         | 628     | 630      |
| Hello Stack            | 0       | 0        |
| Hello Gateway          | 1257    | 1257     |
| Database Description   | 28      | 28       |
| Database Request       | 8       | 6        |
| Database Update        | 66      | 162      |
| Database Update Bitmap | 0       | 29       |
| Database Acknowledge   | 144     | 51       |

**Table 41:** Sample output from the **show atmf links statistics** command (cont.)

| Transmit Fails                | 0       | 1   |          |                  |
|-------------------------------|---------|---|----------|------------------|
| Discards                      | 0       | 0   |          |                  |
| Total ATMF Packets            | 2788    | 2837  |          |                  |
| ATMF Database Statistics:     |         |   |          |                  |
| Database Entries              | 18      |   |          |                  |
| Database Full Ages            | 0       |   |          |                  |
| ATMF Virtual Link Statistics: |         |   |          |                  |
| Virtual link                  | Receive | Receive Dropped   | Transmit | Transmit Dropped |
| -----                         | -----   | -----   | -----    | -----            |
| vlink2000                     | 393     | 0   | 417      | 0                |
| ATMF Packet Discards:         |         |   |          |                  |
| Type0                         | 0       | : Gateway hello msg received from unexpected neighbor       |          |                  |
| Type1                         | 0       | : Stack hello msg received from unexpected neighbor         |          |                  |
| Type2                         | 0       | : Discard TX update bitmap packet - bad checksum            |          |                  |
| Type3                         | 0       | : Discard TX update packet - neighbor not in correct state  |          |                  |
| Type4                         | 0       | : Discard update packet - bad checksum or type              |          |                  |
| Type5                         | 0       | : Discard update packet - neighbor not in correct state     |          |                  |
| Type6                         | 0       | : Discard update bitmap packet - bad checksum or type       |          |                  |
| Type7                         | 0       | : Incarnation is not possible with the data received        |          |                  |
| Type8                         | 0       | : Discard crosslink hello received - not correct state      |          |                  |
| Type9                         | 0       | : Discard crosslink domain hello received on non crosslink  |          |                  |
| Type10                        | 0       | : Discard crosslink domain hello - not in correct state     |          |                  |
| Type11                        | 0       | : Crosslink uplink hello received on non crosslink port     |          |                  |
| Type12                        | 0       | : Discard crosslink uplink hello - not in correct state     |          |                  |
| Type13                        | 0       | : Wrong network-name for this ATMF                          |          |                  |
| Type14                        | 0       | : Packet received on port is too long                       |          |                  |
| Type15                        | 0       | : Bad protocol version, received on port                    |          |                  |
| Type16                        | 0       | : Bad packet checksum calculation                           |          |                  |
| Type17                        | 0       | : Bad authentication type                                   |          |                  |
| Type18                        | 0       | : Bad simple password                                       |          |                  |
| Type19                        | 0       | : Unsupported authentication type                           |          |                  |
| Type20                        | 0       | : Discard packet - unknown neighbor                         |          |                  |
| Type21                        | 0       | : Discard packet - port is shutdown                         |          |                  |
| Type22                        | 0       | : Non broadcast hello msg received from unexpected neighbor |          |                  |
| Type23                        | 0       | : Arealink hello msg received on non arealink port          |          |                  |
| Type24                        | 0       | : Discard arealink hello packet - not in correct state      |          |                  |
| Type25                        | 0       | : Discard arealink hello packet - failed basic processing   |          |                  |
| Type26                        | 0       | : Discard unicast packet - MAC address does not match node  |          |                  |
| Type27                        | 0       | : AMF Master license node limit exceeded                    |          |                  |

**Example 2** To display the AMF links statistics on interface port1.0.5, use the command:

```
device1# show atmf links statistics interface
port1.0.5
```

Figure 40-15: Sample output from the **show atmf links statistics** command for interface 1.0.5

```
device1# show atmf links statistics interface port1.0.5

ATMF Port Statistics:

Transmit                                Receive

port1.0.5  Crosslink Hello                231          232
port1.0.5  Crosslink Hello Domain          116          116
port1.0.5  Crosslink Hello Uplink          116          115
port1.0.5  Hello Link                      0            0
port1.0.5  Arealink Hello                   0            0
```

Figure 40-16: Parameter definitions from the **show atmf links statistics** command output

| Parameter            | Definition   |
|----------------------|--|
| Receive              | Shows a count of AMF protocol packets received per message type.       |
| Transmit             | Shows the number of AMF protocol packets transmitted per message type. |
| Database Entries     | Shows the number of AMF elements existing in the distributed database. |
| Database Full Ages   | Shows the number of times the entries aged in the database.            |
| ATMF Packet Discards | Shows the number of discarded packets of each type.                    |

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Related Commands**

- [no debug all](#)
- [clear atmf links statistics](#)
- [show atmf](#)

# show atmf memory (deprecated)

**Overview** This command has been deprecated in Software Version 5.4.5-0.1 and later. To see details of AMF memory usage, please use the following commands instead:

- [show memory allocations](#) atmfd
- [show memory pools](#) atmfd

# show atmf nodes

**Overview** This command displays nodes currently configured within the AMF network and presents a topographical representation of the network infrastructure.

This command displays a summary of all virtual links currently in the running configuration.

**Syntax** `show atmf nodes [guest|all]`

| Parameter | Description                                  |
|-----------|--|
| guest     | Display only guest nodes in the AMF network. |
| all       | Display all nodes in the AMF network         |

**Mode** Privileged Exec

**Example 1** To display AMF information for guest nodes only, use the command:

```
node_1# show atmf nodes guest
```

**Table 42:** Sample output from the **show atmf nodes guest** command

|                             |                |        |       |              |
|-----------------------------|----------------|--------|-------|--------------|
| node1#show atmf nodes guest |                |        |       |              |
| Guest Information:          |                |        |       |              |
| Device                      | MAC            |        |       | IP/IPv6      |
| Name                        | Address        | Parent | Port  | Address      |
| -----                       |                |        |       |              |
| aastra-...                  | 0008.5d10.7635 | Node-1 | 1.0.2 | 192.168.4.7  |
| poe-1.0.1                   | 0013.1a1e.4589 | Node-1 | 1.0.1 | 192.168.4.6  |
| ip-camera                   | 0800.239e.f1fe | Node-1 | 1.0.4 | 192.168.4.8  |
| tq4600                      | eccd.6df2.da60 | Node-1 | 1.0.5 | 192.168.4.50 |

To display AMF information for all nodes in the AMF, use the command:

```
node_1# show atmf nodes all
```

**Table 43:** Sample output from the **show atmf nodes all** command showing

```
node1#show atmf nodes all
```

Node and Guest Information: \* = Local device SC = Switch Configuration:  
C = Chassis S = Stackable N = Standalone G = Guest

| Node/Guest<br>Name | Device<br>Type   | ATMF<br>Master | SC | Parent<br>Domain | Node<br>Depth |
|--------------------|------------------|----------------|----|------------------|---------------|
| x930-master        | AT-x930-52GTX    | Y              | S  | none             | 0             |
| * x510-master      | x510-28GPX       | Y              | S  | none             | 0             |
| x908               | SwitchBlade x908 | N              | S  | x510-master      | 1             |
| poe                | x610-48Ts/X-POE+ | N              | S  | x908             | 2             |
| aastra-phone       | Aastra IP Phone  | N              | G  | poe              | -             |
| poe-1.0.1          |                  | N              | G  | poe              | -             |
| ip-camera          |                  | N              | G  | poe              | -             |
| tq4600             | AT-TQ4600        | N              | G  | poe              | -             |

**Related  
Commands**

- [show atmf](#)
- [show atmf area nodes](#)
- [discovery](#)
- [http-enable](#)
- [show atmf backup guest](#)



# show atmf provision nodes

**Overview** This command displays information about each provisioned node with details about date and time of creation, boot and configuration files available in the backup, and license files present in the provisioned backup. This includes nodes that have joined the network but are yet to run their first backup.

This command can only be run on AMF master and controller nodes.

**Syntax** show atmf provision nodes

**Mode** Privileged Exec

**Usage** This command will only work if provisioned nodes have already been set up. Otherwise, an error message is shown when the command is run.

**Example** To show the details of all the provisioned nodes in the backup use the command:

```
NodeName# show atmf provision nodes
```

Figure 40-17: Sample output from the **show atmf provision nodes** command

```
device1#show atmf provision nodes

ATMF Provisioned Node Information:

Backup Media .....: SD (Total 3827.0MB, Free 3481.1MB)

Node Name           : device2
Date& Time          : 06-May-2014 & 23:25:44
Provision Path       : card:/atmf/provision_nodes

Boot configuration :
Current boot image   : x510-1766_atmf_backup.rel (file exists)
Backup boot image    : x510-main-20140113-2.rel (file exists)
Default boot config  : flash:/default.cfg (file exists)
Current boot config  : flash:/abc.cfg (file exists)
Backup boot config   : flash:/xyz.cfg (file exists)

Software Licenses :
Repository file      : ../configs/.sw_v2.lic
                    : ../configs/.swfeature.lic
Certificate file     : card:/atmf/nodes/awplus1/flash/.atmf-lic-cert
```

**Related commands**

- [atmf provision node create](#)
- [atmf provision node clone](#)
- [atmf provision node configure boot config](#)
- [atmf provision node configure boot system](#)
- [show atmf backup](#)

# show atmf tech

**Overview** This command collects and displays all the AMF command output. The command can thus be used to display a complete picture of an AMF network.

**Syntax** show atmf tech

**Mode** Privileged Exec

**Example** To display output for all AMF commands, use the command:

```
NodeName# show atmf tech
```

**Table 44:** Sample output from the **show atmf tech** command.

```
node1#show atmf tech
ATMF Summary Information:

ATMF Status           : Enabled
Network Name          : ATMF_NET
Node Name              : node1
Role                   : Master
Current ATMF Nodes    : 8

ATMF Technical information:

Network Name           : ATMF_NET
Domain                 : node1's domain
Node Depth             : 0
Domain Flags           : 0
Authentication Type    : 0
MAC Address            : 0014.2299.137d
Board ID               : 287
Domain State           : DomainController
Domain Controller      : node1
Backup Domain Controller : node2
Domain controller MAC  : 0014.2299.137d
Parent Domain          : -
Parent Domain Controller : -
Parent Domain Controller MAC : 0000.0000.0000
Number of Domain Events : 0
Crosslink Ports Blocking : 0
Uplink Ports Waiting on Sync : 0
```

**Table 44:** Sample output from the **show atmf tech** command. (cont.)

|                                   |         |
|-----------------------------------|---------|
| Crosslink Sequence Number         | : 7     |
| Domains Sequence Number           | : 28    |
| Uplink Sequence Number            | : 2     |
| Number of Crosslink Ports         | : 1     |
| Number of Domain Nodes            | : 2     |
| Number of Neighbors               | : 5     |
| Number of Non Broadcast Neighbors | : 3     |
| Number of Link State Entries      | : 1     |
| Number of Up Uplinks              | : 0     |
| Number of Up Uplinks on This Node | : 0     |
| DBE Checksum                      | : 84fc6 |
| Number of DBE Entries             | : 0     |
| ...                               |         |

**Table 45:** Parameter definitions from the **show atmf tech** command

| Parameter          | Definition   |
|--------------------|--|
| ATMF Status        | Shows status of AMF feature on the Node as Enabled/Disabled.   |
| Network Name       | The name of the AMF network to which this node belongs.  |
| Node Name          | The name assigned to the node within the AMF network.  |
| Role               | The role configured on the device within the AMF - either master or member.  |
| Current ATMF Nodes | A count of the AMF nodes in the AMF network.   |
| Node Address       | The identity of a node (in the format name.atmf) that enables its access it from a remote location.  |
| Node ID            | A unique identifier assigned to an AMF node.   |
| Node Depth         | The number of nodes in the path from this node to the core domain.   |
| Domain State       | A node's state within an AMF Domain - either controller or backup.   |
| Recovery State     | The AMF node recovery status. Indicates whether a node recovery is in progress on this device - either Auto, Manual, or None.  |
| Management VLAN    | The VLAN created for traffic between nodes of different domains (up/down links).<br>VLAN ID - In this example VLAN 4092 is configured as the Management VLAN.<br>Management Subnet - the Network prefix for the subnet.<br>Management IP Address - the IP address allocated for this traffic.<br>Management Mask - the Netmask used to create a subnet for this traffic 255.255.128.0 (= prefix /17) |

**Table 45:** Parameter definitions from the **show atmf tech** command (cont.)

| Parameter   | Definition  |
|-------------|---|
| Domain VLAN | The VLAN assigned for traffic between Nodes of same domain (crosslink).<br>VLAN ID - In this example VLAN 4091 is configured as the domain VLAN.<br>Domain Subnet - the Subnet address used for this traffic.<br>Domain IP Address - the IP address allocated for this traffic.<br>Domain Mask - the Netmask used to create a subnet for this traffic 255.255.128.0<br>(= prefix /17) |
| Device Type | Shows the Product Series Name.  |
| ATMF Master | Indicates the node's membership of the core domain (membership is indicated by Y)   |
| SC          | Shows switch configuration: <ul style="list-style-type: none"><li>• C - Chassis (such as SBx8100 series)</li><li>• S - Stackable (VCS)</li><li>• N - Standalone</li></ul>   |
| Parent      | A node that is connected to the present node's uplink, i.e. one layer higher in the hierarchy.  |
| Node Depth  | Shows the number of nodes in path from the current node to the Core domain.   |

**NOTE:** The **show atmf tech** command can produce very large output. For this reason only the most significant terms are defined in this table.

# show atmf virtual-links

**Overview** This command displays a summary of all virtual links (L2TP tunnels) currently in the running configuration.

**Syntax** `show atmf virtual-links [macaddress]`

| Parameter     | Description                                   |
|---------------|---|
| show          | Show running system information               |
| atmf          | The Allied Telesis Management Framework (AMF) |
| virtual-links | Virtual AMF links information.                |
| macaddr       | Virtual AMF links Mac Address.                |

**Mode** Privileged Exec

**Example 1** To display AMF virtual links, use the command:

```
node_1# show atmf virtual-links
```

**Table 46:** Sample output from the **show atmf virtual-links** command.

| ATMF Link Remote Information: |            |          |             |           |         |       |
|-------------------------------|------------|----------|-------------|-----------|---------|-------|
| Local Port                    | Local Ip   | Local Id | Remote Ip   | Remote Id | Retries | State |
| vlink1                        | 192.0.2.33 | 1        | 192.168.1.1 | 2         | 0       | Down  |
| vlink2                        | 192.0.2.65 | 2        | 192.168.2.0 | 3         | 0       | Up    |

In the above example, a centrally located switch has the IP address space 192.0.2.x/24. It has two VLANs assigned the subnets 192.0.2.33 and 192.0.2.65 using the prefix /27. Each subnet connects to a virtual link. The first link has the IP address 192.168.1.1 and has a Local ID of 1. The second has the IP address 192.168.2.1 and has the Local ID of 2.

**Example 2** To display AMF virtual links MAC address information, use the command:

```
node_1# show atmf virtual-links macaddr
```

**Table 47:** Sample output from the **show atmf virtual-links macaddr** command.

|                                     |                   |           |              |
|-------------------------------------|-------------------|-----------|--------------|
| ATMF Link Remote Information:       |                   |           |              |
| ATMF Management Bridge Information: |                   |           |              |
| Bridge: br-atmfmgmt                 |                   |           |              |
| port no                             | mac addr          | is local? | ageing timer |
| 1                                   | 00:00:cd:27:c2:07 | yes       | 0.00         |

**Table 48:** Parameter definitions from the **show atmf virtual-links** command output

| Parameter    | Definition   |
|--------------|--|
| vlink1       | The tunnel named vlink1, equivalent to an L2TP tunnel.   |
| Local ID     | The local ID of the virtual link. This matches the vlink<number>   |
| State        | The operational state of the vlink (either Up or Down). This state is always displayed once a vlink has been created.                      |
| mac addr     | AMF virtual links terminate on an internal soft bridge. The “show atmf virtual-links macaddress” command displays MAC Address information. |
| is local ?   | Indicates whether the MAC displayed is for a local or a remote device.   |
| ageing timer | Indicates the current aging state for each MAC address.  |

# show atmf working-set

**Overview** This command displays the nodes that form the current AMF working-set.

**Syntax** `show atmf working-set`

**Mode** Privileged Exec

**Example** To show current members of the working-set, use the command:

```
ATMF_NETWORK[6]# show atmf working-set
```

**Table 49:** Sample output from the **show atmf working-set** command.

```
ATMF Working Set Nodes:

node1, node2, node3, node4, node5, node6

Working set contains 6 nodes
```

**Related  
Commands** [atmf working-set](#)  
[show atmf](#)  
[show atmf group](#)

# show debugging atmf

**Overview** This command shows the debugging modes status for AMF.

**Syntax** show debugging atmf

**Mode** User Exec and Global Configuration

**Example** To display the AMF debugging status, use the command:

```
node_1# show debugging atmf
```

Figure 40-18: Sample output from the **show debugging atmf** command.

```
node1# show debugging atmf
ATMF debugging status:
ATMF arealink debugging is on
ATMF link debugging is on
ATMF crosslink debugging is on
ATMF database debugging is on
ATMF neighbor debugging is on
ATMF packet debugging is on
ATMF error debugging is on
```

**Related  
Commands** [debug atmf packet](#)



# show debugging atmf packet

**Overview** This command shows details of AMF Packet debug command settings.

**Syntax** show debugging atmf packet

**Mode** User Exec and Global Configuration

**Example** To display the AMF packet debugging status, use the command:

```
node_1# show debug atmf packet
```

Figure 40-19: Sample output from the **show debugging atmf packet** command.

```
ATMF packet debugging is on
=== ATMF Packet Debugging Parameters===
Node Name: x908
Port name: port1.1.1
Limit: 500 packets
Direction: TX
Info Level: Level 2
Packet Type Bitmap:
2. Crosslink Hello BPDU pkt with downlink domain info
3. Crosslink Hello BPDU pkt with uplink info
4. Down and up link Hello BPDU pkts
6. Stack hello unicast pkts
8. DBE request
9. DBE update
10. DBE bitmap update
```

**Related Commands** [debug atmf](#)  
[debug atmf packet](#)

# show running-config atmf

**Overview** This command displays the running system information that is specific to AMF.

**Syntax** `show running-config atmf`

**Mode** User Exec and Global Configuration

**Example** To display the current configuration of AMF, use the following commands:

```
node_1# show running-config atmf
```

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Related Commands** [show running-config](#)  
[no debug all](#)

# switchport atmf-arealink remote-area

**Overview** This command enables you to configure a port or aggregator to be an AMF arealink. AMF arealinks are designed to operate between two nodes in different areas in an AMF network.

Use the **no** variant of this command to remove any AMF-arealink that may exist for the selected port or aggregated link.

This command is only available on AMF controllers and master nodes.

**Syntax** `switchport atmf-arealink remote-area <area-name> vlan <2-4094>`  
`no switchport atmf-arealink`

| Parameter   | Description  |
|-------------|--|
| <area-name> | The name of the remote area that the port is connecting to.  |
| <2-4094>    | The VLAN ID for the link. This VLAN cannot be used for any other purpose, and the same VLAN ID must be used at each end of the link. |

**Default** By default, no arealinks are configured

**Mode** Interface Configuration for a switchport, a static aggregator or a dynamic channel group.

**Usage** Run this command on the port or aggregator at both ends of the link.  
Each area must have the area-name configured, and the same area password must exist on both ends of the link.

Running this command will automatically place the port or static aggregator into trunk mode (i.e. switchport mode trunk) and will synchronize the area information stored on the two nodes.

You can configure multiple arealinks between two area nodes, but only one arealink at any time will be in use. All other arealinks will block information, to prevent network storms.

Do not use a VCStack port as an AMF link, even if you have configured the port as a data port. During AMF recovery, these ports revert to their default state of being VCStack ports, so AMF cannot use them for recovery. Use a standard front-panel data port instead.

**Example** To make a switchport 1.2.1 an arealink to the *Auckland* area on VLAN 6, use the following commands

```
controller-1# configure terminal
controller-1(config)# interface port1.2.1
controller-1(config-if)# switchport atmf-arealink remote-area
Auckland vlan 6
```

**Related  
Commands**

- atmf area
- atmf area password
- atmf virtual-link
- show atmf links

# switchport atmf-crosslink

**Overview** This command configures the selected port, statically aggregated link or dynamic channel group (LACP) to be an AMF crosslink. Running this command will automatically place the port or aggregator into trunk mode (i.e. **switchport mode trunk**).

The connection between two AMF masters must utilize a crosslink. Crosslinks are used to carry the AMF control information between master nodes. Multiple crosslinks can be configured between two master nodes, but only one crosslink can be active at any particular time. All other crosslinks between masters will be placed in the blocking state, in order to prevent broadcast storms.

Use the **no** variant of this command to remove any crosslink that may exist for the selected port or aggregated link.

**Syntax** `switchport atmf-crosslink`  
`no switchport atmf-crosslink`

**Mode** Interface Configuration for a switchport, a static aggregator or a dynamic channel group.

**Usage** Crosslinks can be used anywhere within an AMF network. They have the effect of separating the AMF network into separate domains.

Where this command is used, it is also good practice to use the [switchport trunk native vlan](#) command with the parameter **none** selected. This is to prevent a network storm on a topology of ring connected devices.

Do not use a VcStack port as an AMF link, even if you have configured the port as a data port. During AMF recovery, these ports revert to their default state of being VcStack ports, so AMF cannot use them for recovery. Use a standard front-panel data port instead.

**Example 1** To make a switchport 1.0.1 an AMF crosslink, use the following commands:

```
Node_1# configure terminal
Node_1(config)# interface port1.0.1
Node_1(config-if)# switchport atmf-crosslink
```

**Example 2** This example is shown twice. Example 2A is the most basic command sequence. Example 2B is a good practice equivalent that avoids problems such as broadcast storms that can otherwise occur.

**Example 2A** To make static aggregator sa1 an AMF crosslink, use the following commands:

```
Node_1# configure terminal
Node_1(config)# interface sa1
Node_1(config-if)# switchport atmf-crosslink
```

**Example 2B** To make static aggregator sa1 an AMF crosslink, use the following commands for good practice:

```
Node_1# configure terminal
Node_1(config)# interface sa1
Node_1(config-if)# switchport atmf-crosslink
Node_1(config-if)# switchport trunk allowed vlan add 2
Node_1(config-if)# switchport trunk native vlan none
```

In this example VLAN 2 is assigned to the static aggregator, and the native VLAN (VLAN 1) is explicitly excluded from the aggregated ports and the crosslink assigned to it.

**NOTE:** *The AMF management and domain VLANs are automatically added to the aggregator and the crosslink.*

**Related Commands** [show atmf links statistics](#)

# switchport atmf-guestlink

**Overview** Guest links are used to provide basic AMF functionality to non AMF capable devices. Guest links can be configured for either a selected switch port or a range of switch ports and use generic protocols to collect status and configuration information that the guest devices make available.

Use the **no** variant of this command to remove the guest node functionality from the selected port or ports.

**Syntax** switchport atmf-guestlink [class <GUEST-CLASS>] [ip <A.B.C.D> | ipv6 <X:X::X:X>]  
no switchport atmf-guestlink

| Parameter     | Description   |
|---------------|---|
| class         | Set a Guest-class   |
| <GUEST-CLASS> | The name of the guest class.                                  |
| ip            | Specifies that the address following will have an IPv4 format |
| <A.B.C.D>     | The Guest-node's IP address in IPv4 format.                   |
| ipv6          | Specifies that the address following will have an IPv6 format |
| <X:X::X:X>    | The Guest-node's IP address in IPv6 format.                   |

**Default** No guest links are configured.

**Mode** Interface

**Example 1** To configure switch port 1.0.44 to be a guest link, that will connect to a guest node having a guest-class of **camera** and an IPv4 address of **192.168.3.3**, use the following commands:

```
node1# configure terminal
node1(config)# int port1.0.44
node1(config-if)# switchport atmf-guestlink class camera ip
192.168.3.3
node1(config-if)# end
```

**Example 2** To configure switchport 1.0.41 to be a guest link, that will connect to a guest node having a guest-class of **phone** and an IPv6 address of **2001:db8:21e:10d::5**, use the following commands:

```
node1# configure terminal
node1(config)# int port1.0.41
node1(config-if)# switchport atmf-guestlink class phone ipv6
2000:db8:21e:10d::5
node1(config-if)# end
```

**Example 3** To configure switch port 1.0.41 to be a guest link, using the default model type and learning method address, use the following commands:

```
node1# configure terminal
node1(config)# int port1.0.41
node1(config-if)# switchport atmf-guestlink
node1(config-if)# end
```

**Example 4** To configure switch ports 1.0.52 to 1.0.54 to be guest links, for the guest class **camera**, use the following commands:

```
node1# configure terminal
node1(config)# int port1.0.41-port1.0.44
node1(config-if)# switchport atmf-guestlink class camera
node1(config-if)# end
```

**Example 5** To remove the guest-link functionality from switchport 1.0.41, use the following commands:

```
node1# configure terminal
node1(config)# int port1.0.41
node1(config-if)# no switchport atmf-guestlink
node1(config-if)# end
```

**Related Commands**

- [atmf guest-class](#)
- [discovery](#)
- [http-enable](#)
- [username](#)
- [modeltype](#)
- [show atmf links guest](#)
- [show atmf guest](#)



# switchport atmf-link

**Overview** This command enables you to configure a port or aggregator to be an AMF uplink/downlink. Running this command will automatically place the port or aggregator into trunk mode.

Use the **no** variant of this command to remove any AMF-link that may exist for the selected port or aggregated link.

**Syntax** `switchport atmf-link`  
`no switchport atmf-link`

**Mode** Interface Configuration for a switchport, a static aggregator or a dynamic channel group.

**Usage** Do not use a VCStack port as an AMF link, even if you have configured the port as a data port. During AMF recovery, these ports revert to their default state of being VCStack ports, so AMF cannot use them for recovery. Use a standard front-panel data port instead.

**Example** To make a switchport 1.0.1 an AMF uplink/downlink, use the following commands

```
Node_1# configure terminal
Node_1(config)# interface port1.0.1
Node_1(config-if)# switchport atmf-link
```

# type atmf node

**Overview** This command configures a trigger to be activated at an AMF node join event or leave event.

**Syntax** `type atmf node {join|leave}`

| Parameter | Description           |
|-----------|-----------------------|
| join      | AMF node join event.  |
| leave     | AMF node leave event. |

**Mode** Trigger Configuration

**CAUTION:** Only configure this trigger on one device because it is a network wide event.

**Example 1** To configure trigger 5 to activate at an AMF node leave event, use the following commands. In this example the command is entered on node-1:

```
node1(config)# trigger 5
node1(config-trigger) type atmf node leave
```

**Example 2** The following commands will configure trigger 5 to activate if an AMF node join event occurs on any node within the working set:

```
node1# atmf working-set group all
```

This command returns the following display:

```
=====
node1, node2, node3:
=====

Working set join
```

Note that the running the above command changes the prompt from the name of the local node, to the name of the AMF-Network followed, in square brackets, by the number of member nodes in the working set.

```
AMF-Net[3]# conf t
AMF-Net[3](config)# trigger 5
AMF-Net[3](config-trigger)# type atmf node leave
AMF-Net[3](config-trigger)# description "E-mail on AMF Exit"
AMF-Net[3](config-trigger)# active
```

Enter the name of the script to run at the trigger event.

```
AMF-Net[3](config-trigger)# script 1 email_me.scp
AMF-Net[3](config-trigger)# end
```

## Display the trigger configurations

AMF-Net[3]# show trigger

This command returns the following display:

| =====         |                   |                     |    |    |    |            |      |           |  |
|---------------|-------------------|---------------------|----|----|----|------------|------|-----------|--|
| node1:        |                   |                     |    |    |    |            |      |           |  |
| =====         |                   |                     |    |    |    |            |      |           |  |
| TR#           | Type & Details    | Description         | Ac | Te | Tr | Repeat     | #Scr | Days/Date |  |
| -----         |                   |                     |    |    |    |            |      |           |  |
| 001           | Periodic (2 min)  | Periodic Status Chk | Y  | N  | Y  | Continuous | 1    | smtwtfs   |  |
| 005           | ATMF node (leave) | E-mail on ATMF Exit | Y  | N  | Y  | Continuous | 1    | smtwtfs   |  |
| -----         |                   |                     |    |    |    |            |      |           |  |
| =====         |                   |                     |    |    |    |            |      |           |  |
| Node2, Node3, |                   |                     |    |    |    |            |      |           |  |
| =====         |                   |                     |    |    |    |            |      |           |  |
| TR#           | Type & Details    | Description         | Ac | Te | Tr | Repeat     | #Scr | Days/Date |  |
| -----         |                   |                     |    |    |    |            |      |           |  |
| 005           | ATMF node (leave) | E-mail on ATMF Exit | Y  | N  | Y  | Continuous | 1    | smtwtfs   |  |
| -----         |                   |                     |    |    |    |            |      |           |  |

## Display the triggers configured on each of the nodes in the AMF Network.

AMF-Net[3]# show running-config trigger

This command returns the following display:

|                                   |  |  |  |  |  |  |  |  |  |
|-----------------------------------|--|--|--|--|--|--|--|--|--|
| =====                             |  |  |  |  |  |  |  |  |  |
| Node1:                            |  |  |  |  |  |  |  |  |  |
| =====                             |  |  |  |  |  |  |  |  |  |
| trigger 1                         |  |  |  |  |  |  |  |  |  |
| type periodic 2                   |  |  |  |  |  |  |  |  |  |
| script 1 atmf.scp                 |  |  |  |  |  |  |  |  |  |
| trigger 5                         |  |  |  |  |  |  |  |  |  |
| type atmf node leave              |  |  |  |  |  |  |  |  |  |
| description "E-mail on ATMF Exit" |  |  |  |  |  |  |  |  |  |
| script 1 email_me.scp             |  |  |  |  |  |  |  |  |  |
| !                                 |  |  |  |  |  |  |  |  |  |
| =====                             |  |  |  |  |  |  |  |  |  |
| Node2, Node3:                     |  |  |  |  |  |  |  |  |  |
| =====                             |  |  |  |  |  |  |  |  |  |
| trigger 5                         |  |  |  |  |  |  |  |  |  |
| type atmf node leave              |  |  |  |  |  |  |  |  |  |
| description "E-mail on ATMF Exit" |  |  |  |  |  |  |  |  |  |
| script 1 email_me.scp             |  |  |  |  |  |  |  |  |  |
| !                                 |  |  |  |  |  |  |  |  |  |

**Related  
Commands** [show trigger](#)

# undebbug atmf

**Overview** This command is an alias for the **no** variant of the [debug atmf](#) command.

# username

**Overview** This command enables you to assign a **username** to a guest class. Guests may require a username and possibly also a password. In its non-encrypted form the password must be between 1 and 32 characters and will allow spaces. In its encrypted form the password must be between 1 to 64 characters and will allow any character

**Syntax** `username <NAME> password [8] <USERPASS>`  
`no username`

| Parameter  | Description  |
|------------|--|
| username   | Indicates that a user name is to follow  |
| <NAME>     | User name of the guest node  |
| password   | Indicates that a password (or specifier) is to follow.   |
| 8          | Specifier indicating that the following password is encrypted. It's primary purpose is to differentiate between the configuration input and the CLI input. You should not specify this for CLI input |
| <USERPASS> | The password to be entered for the guest node.   |

**Default** No usernames configured

**Mode** AMF Guest Configuration Mode

**Example 1** To assign the user name **reception** and the password of **secret** to an AMF guest node that has the guest class of **phone1** use the following commands:

```
node1# conf t
node1(config)# amf guest-class phone1
node1(config-atmf-guest)# username reception password secret
node1(config-atmf-guest)# end
```

**Example 2** To remove a guest node username and password for the user guest class **phone1**, use the following commands:

```
node1# conf t
node1(config)# atmf guest-class phone1
node1(config-atmf-guest)# no username
node1(config-atmf-guest)# end
```

**Related Commands** [show atmf links detail](#)  
[atmf guest-class](#)  
[switchport atmf-guestlink](#)

show atmf links guest

show atmf nodes

# 41

# Dynamic Host Configuration Protocol (DHCP) Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure DHCP.

For more information, see the [DHCP Feature Overview and Configuration Guide](#), which is available at the above link on alliedtelesis.com.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#). This guide is available at the above link on alliedtelesis.com.

- Command List**
- [“bootfile”](#) on page 1694
  - [“clear ip dhcp binding”](#) on page 1695
  - [“default-router”](#) on page 1696
  - [“dns-server”](#) on page 1697
  - [“domain-name”](#) on page 1698
  - [“host \(DHCP\)”](#) on page 1699
  - [“ip address dhcp”](#) on page 1700
  - [“ip dhcp bootp ignore”](#) on page 1702
  - [“ip dhcp leasequery enable”](#) on page 1703
  - [“ip dhcp option”](#) on page 1704
  - [“ip dhcp pool”](#) on page 1706
  - [“ip dhcp-relay agent-option”](#) on page 1707
  - [“ip dhcp-relay agent-option checking”](#) on page 1709
  - [“ip dhcp-relay agent-option remote-id”](#) on page 1710
  - [“ip dhcp-relay information policy”](#) on page 1711



- ["ip dhcp-relay maxhops"](#) on page 1713
- ["ip dhcp-relay max-message-length"](#) on page 1714
- ["ip dhcp-relay server-address"](#) on page 1716
- ["lease"](#) on page 1718
- ["network \(DHCP\)"](#) on page 1720
- ["next-server"](#) on page 1721
- ["option"](#) on page 1722
- ["probe enable"](#) on page 1724
- ["probe packets"](#) on page 1725
- ["probe timeout"](#) on page 1726
- ["probe type"](#) on page 1727
- ["range"](#) on page 1728
- ["route"](#) on page 1729
- ["service dhcp-relay"](#) on page 1730
- ["service dhcp-server"](#) on page 1731
- ["show counter dhcp-client"](#) on page 1732
- ["show counter dhcp-relay"](#) on page 1733
- ["show counter dhcp-server"](#) on page 1736
- ["show dhcp lease"](#) on page 1738
- ["show ip dhcp binding"](#) on page 1740
- ["show ip dhcp pool"](#) on page 1742
- ["show ip dhcp-relay"](#) on page 1746
- ["show ip dhcp server statistics"](#) on page 1747
- ["show ip dhcp server summary"](#) on page 1749
- ["subnet-mask"](#) on page 1750

# bootfile

**Overview** This command sets the boot filename for a DHCP server pool. This is the name of the boot file that the client should use in its bootstrap process. It may need to include a path.

The **no** variant of this command removes the boot filename from a DHCP server pool.

**Syntax** bootfile <filename>  
no bootfile

| Parameter  | Description         |
|------------|---------------------|
| <filename> | The boot file name. |

**Mode** DHCP Configuration

**Example** To configure the boot filename for a pool P2, use the command:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# bootfile boot/main_boot.bt
```

# clear ip dhcp binding

**Overview** This command clears either a specific lease binding or the lease bindings specified by the command or DHCP server. The command will only take effect on dynamically allocated bindings, not statically configured bindings.

**Syntax** `clear ip dhcp binding {ip <ip-address>|mac <mac-address>|all|pool <pool-name>|range <low-ip-address> <high-ip-address>}`

| Parameter  | Description  |
|--|--|
| <code>ip &lt;ip-address&gt;</code>                               | IPv4 address of the DHCP client, in dotted decimal notation in the format A.B.C.D.   |
| <code>mac &lt;mac-address&gt;</code>                             | MAC address of the DHCP client, in hexadecimal notation in the format HHHH.HHHH.HHHH.  |
| <code>all</code>   | All DHCP bindings.   |
| <code>pool &lt;pool-name&gt;</code>                              | Description used to identify DHCP server address pool. Valid characters are any printable character. If the name contains spaces then you must enclose these in "quotation marks". |
| <code>range&lt;low-ip-address&gt; &lt;high-ip-address&gt;</code> | IPv4 address range for DHCP clients, in dotted decimal notation. The first IP address is the low end of the range, the second IP address is the high end of the range.             |

**Mode** User Exec and Privileged Exec

**Usage** A specific binding may be deleted by **ip** address or **mac** address, or several bindings may be deleted at once using **all**, **pool** or **range**.

Note that if you specify to clear the **ip** or **mac** address of what is actually a static DHCP binding, an error message is displayed. If **all**, **pool** or **range** are specified and one or more static DHCP bindings exist within those addresses, any dynamic entries within those addresses are cleared but any static entries are not cleared.

**Examples** To clear the specific IP address binding 192.168.1.1, use the command:

```
awplus# clear ip dhcp binding ip 192.168.1.1
```

To clear all dynamic DHCP entries, use the command:

```
awplus# clear ip dhcp binding all
```

**Related Commands** [show ip dhcp binding](#)

# default-router

**Overview** This command adds a default router to the DHCP address pool you are configuring. You can use this command multiple times to create a list of default routers on the client's subnet. This sets the router details using the pre-defined option 3. Note that if you add a user-defined option 3 using the **option** command, then you will override any settings created with this command.

The **no** variant of this command removes either the specified default router, or all default routers from the DHCP pool.

**Syntax** `default-router <ip-address>`  
`no default-router [<ip-address>]`

| Parameter                       | Description   |
|---------------------------------|---|
| <code>&lt;ip-address&gt;</code> | IPv4 address of the default router, in dotted decimal notation. |

**Mode** DHCP Configuration

**Examples** To add a router with an IP address 192.168.1.2 to the DHCP pool named P2, use the following commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# default-router 192.168.1.2
```

To remove a router with an IP address 192.168.1.2 to the DHCP pool named P2, use the following commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no default-router 192.168.1.2
```

To remove all routers from the DHCP pool named P2, use the following commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no default-router
```

# dns-server

**Overview** This command adds a Domain Name System (DNS) server to the DHCP address pool you are configuring. You can use this command multiple times to create a list of DNS name servers available to the client. This sets the DNS server details using the pre-defined option 6.

Note that if you add a user-defined option 6 using the [option](#) command, then you will override any settings created with this command.

The **no** variant of this command removes either the specified DNS server, or all DNS servers from the DHCP pool.

**Syntax** `dns-server <ip-address>`  
`no dns-server [<ip-address>]`

| Parameter                       | Description   |
|---------------------------------|---|
| <code>&lt;ip-address&gt;</code> | IPv4 address of the DNS server, in dotted decimal notation. |

**Mode** DHCP Configuration

**Examples** To add the DNS server with the assigned IP address 192.168.1.1 to the DHCP pool named P1, use the following commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# dns-server 192.168.1.1
```

To remove the DNS server with the assigned IP address 192.168.1.1 from the DHCP pool named P1, use the following commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no dns-server 192.168.1.1
```

To remove all DNS servers from the DHCP pool named P1, use the following commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no dns-server
```

**Related Commands**

- [default-router](#)
- [option](#)
- [service dhcp-server](#)
- [show ip dhcp pool](#)
- [subnet-mask](#)

# domain-name

**Overview** This command adds a domain name to the DHCP address pool you are configuring. Use this command to specify the domain name that a client should use when resolving host names using the Domain Name System. This sets the domain name details using the pre-defined option 15.

Note that if you add a user-defined option 15 using the [option](#) command, then you will override any settings created with this command.

The **no** variant of this command removes the domain name from the address pool.

**Syntax** `domain-name <domain-name>`  
`no domain-name`

| Parameter                        | Description  |
|----------------------------------|--|
| <code>&lt;domain-name&gt;</code> | The domain name you wish to assign the DHCP pool. Valid characters are any printable character. If the name contains spaces then you must enclose it in "quotation marks". |

**Mode** DHCP Configuration

**Examples** To add the domain name `Nerv_Office` to DHCP pool `P2`, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# domain-name Nerv_Office
```

To remove the domain name `Nerv_Office` from DHCP pool `P2`, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no domain-name Nerv_Office
```

**Related Commands**

- [default-router](#)
- [dns-server](#)
- [option](#)
- [service dhcp-server](#)
- [show ip dhcp pool](#)
- [subnet-mask](#)

# host (DHCP)

**Overview** This command adds a static host address to the DHCP address pool you are configuring. The client with the matching MAC address is permanently assigned this IP address. No other clients can request it.

The **no** variant of this command removes the specified host address from the DHCP pool. Use the **no host all** command to remove all static host addresses from the DHCP pool.

**Syntax** `host <ip-address> <mac-address>`  
`no host <ip-address>`  
`no host all`

| Parameter                        | Description  |
|----------------------------------|--|
| <code>&lt;ip-address&gt;</code>  | IPv4 address of the DHCP client, in dotted decimal notation in the format A.B.C.D    |
| <code>&lt;mac-address&gt;</code> | MAC address of the DHCP client, in hexadecimal notation in the format HHHH.HHHH.HHHH |

**Mode** DHCP Configuration

**Usage** Note that a network/mask must be configured using a **network** command before issuing a **host** command. Also note that a host address must match a network to add a static host address.

**Examples** To add the host at 192.168.1.5 with the MAC address 000a.451d.6e34 to DHCP pool 1, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool 1
awplus(dhcp-config)# network 192.168.1.0/24
awplus(dhcp-config)# host 192.168.1.5 000a.451d.6e34
```

To remove the host at 192.168.1.5 with the MAC address 000a.451d.6e34 from DHCP pool 1, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool 1
awplus(dhcp-config)# no host 192.168.1.5 000a.451d.6e34
```

**Related Commands** [lease](#)  
[range](#)  
[show ip dhcp pool](#)

# ip address dhcp

**Overview** This command activates the DHCP client on the interface you are configuring. This allows the interface to use the DHCP client to obtain its IP configuration details from a DHCP server on its connected network.

The **client-id** and **hostname** parameters are identifiers that you may want to set in order to interoperate with your existing DHCP infrastructure. If neither option is needed, then the DHCP server uses the MAC address field of the request to identify the host.

The DHCP client supports the following IP configuration options:

- Option 1 - the subnet mask for your device.
- Option 3 - a list of default routers.
- Option 6 - a list of DNS servers. This list appends the DNS servers set on your device with the [ip name-server](#) command.
- Option 15 - a domain name used to resolve host names. This option replaces the domain name set with the [ip domain-name](#) command. Your device ignores this domain name if it has a domain list set using the [ip domain-list](#) command.
- Option 51 - lease expiration time.

The **no** variant of this command stops the interface from obtaining IP configuration details from a DHCP server.

**Syntax** `ip address dhcp [client-id <interface>] [hostname <hostname>]`  
`no ip address dhcp`

| Parameter   | Description  |
|-------------|--|
| <interface> | The name of the interface you are activating the DHCP client on. If you specify this, then the MAC address associated with the specified interface is sent to the DHCP server in the optional identifier field.<br>Default: no default |
| <hostname>  | The hostname for the DHCP client on this interface. Typically this name is provided by the ISP.<br>Default: no default   |

**Mode** Interface Configuration for a VLAN interface.

**Examples** To set the interface vlan10 to use DHCP to obtain an IP address, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# ip address dhcp
```



To stop the interface vlan10 from using DHCP to obtain its IP address, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no ip address dhcp
```

**Related Commands**

- [ip address \(IP Addressing and Protocol\)](#)
- [show ip interface](#)
- [show running-config](#)

# ip dhcp bootp ignore

**Overview** This command configures the DHCP server to ignore any BOOTP requests it receives. The DHCP server accepts BOOTP requests by default.

The **no** variant of this command configures the DHCP server to accept BOOTP requests. This is the default setting.

**Syntax** `ip dhcp bootp ignore`  
`no ip dhcp bootp ignore`

**Mode** Global Configuration

**Examples** To configure the DHCP server to ignore BOOTP requests, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp bootp ignore
```

To configure the DHCP server to respond to BOOTP requests, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp bootp ignore
```

**Related Commands** [show ip dhcp server summary](#)

# ip dhcp leasequery enable

**Overview** Use this command to enable the DHCP server to respond to DHCPLEASEQUERY packets. Enabling the DHCP leasequery feature allows a DHCP Relay Agent to obtain IP address information directly from the DHCP server using DHCPLEASEQUERY messages.

Use the **no** variant of this command to disable the support of DHCPLEASEQUERY packets.

For more information, see the [DHCP Feature Overview and Configuration Guide](#).

**Syntax** `ip dhcp leasequery enable`  
`no ip dhcp leasequery enable`

**Default** DHCP leasequery support is disabled by default.

**Mode** Global Configuration

**Examples** To enable DHCP leasequery support, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp leasequery enable
```

To disable DHCP leasequery support, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp leasequery enable
```

**Related Commands** [show counter dhcp-server](#)  
[show ip dhcp server statistics](#)  
[show ip dhcp server summary](#)

# ip dhcp option

**Overview** This command creates a user-defined DHCP option. Options with the same number as one of the pre-defined options override the standard option definition. The pre-defined options use the option numbers 1, 3, 6, 15, and 51.

You can use this option when configuring a DHCP pool, by using the [option](#) command.

The **no** variant of this command removes either the specified user-defined option, or removes all user-defined options. This also automatically removes the user-defined options from the associated DHCP address pools.

**Syntax** `ip dhcp option <1-254> [name <option-name>] [<option-type>]`  
`no ip dhcp option [<1-254>|<option-name>]`

| Parameter     | Description  |
|---------------|--|
| <1-254>       | The option number of the option. Options with the same number as one of the standard options overrides the standard option definition.   |
| <option-name> | Option name used to identify the option. You cannot use a number as the option name. Valid characters are any printable character. If the name contains spaces then you must enclose it in "quotation marks".<br>Default: no default |
| <option-type> | The option value. You must specify a value that is appropriate to the option type:   |
| ascii         | An ASCII text string   |
| hex           | A hexadecimal string. Valid characters are the numbers 0–9 and letters a–f. Embedded spaces are not valid. The string must be an even number of characters, from 2 and 256 characters long.  |
| ip            | An IPv4 address or mask that has the dotted decimal A.B.C.D notation. To create a list of IP addresses, you must add each IP address individually by using the option command multiple times.  |
| integer       | A number from 0 to 4294967295.   |
| flag          | A value that either sets (to 1) or unsets (to 0) a flag: <b>true</b> , <b>on</b> , or <b>enabled</b> will set the flag. <b>false</b> , <b>off</b> or <b>disabled</b> will unset the flag.  |

**Mode** Global Configuration

**Examples** To define a user-defined ASCII string option as option 66, without a name, use the command:

```
awplus# configure terminal
awplus(config)# ip dhcp option 66 ascii
```

To define a user-defined hexadecimal string option as option 46, with the name "tcpip-node-type", use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp option 46 name tcpip-node-type hex
```

To define a user-defined IP address option as option 175, with the name special-address, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp option 175 name special-address ip
```

To remove the specific user-defined option with the option number 12, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp option 12
```

To remove the specific user-defined option with the option name perform-router-discovery, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp option perform-router-discovery
```

To remove all user-defined option definitions, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp option
```

**Related  
Commands**

[default-router](#)  
[dns-server](#)  
[domain-name](#)  
[option](#)  
[service dhcp-server](#)  
[show ip dhcp server summary](#)  
[subnet-mask](#)

# ip dhcp pool

**Overview** This command will enter the configuration mode for the pool name specified. If the name specified is not associated with an existing pool, the device will create a new pool with this name, then enter the configuration mode for the new pool.

Once you have entered the DHCP configuration mode, all commands executed before the next **exit** command will apply to this pool.

You can create multiple DHCP pools on devices with multiple interfaces. This allows the device to act as a DHCP server on multiple interfaces to distribute different information to clients on the different networks.

The **no** variant of this command deletes the specific DHCP pool.

**Syntax** `ip dhcp pool <pool-name>`  
`no ip dhcp pool <pool-name>`

| Parameter                      | Description   |
|--------------------------------|---|
| <code>&lt;pool-name&gt;</code> | Description used to identify this DHCP pool. Valid characters are any printable character. If the name contains spaces then you must enclose it in "quotation marks". |

**Mode** Global Configuration

**Example** To create the DHCP pool named P2 and enter DHCP Configuration mode, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)#
```

To delete the DHCP pool named P2, use the commands:

```
awplus# configure terminal
awplus(config)# no ip dhcp pool P2
```

**Related Commands** [service dhcp-server](#)

# ip dhcp-relay agent-option

**Overview** This command enables the DHCP Relay Agent to insert the DHCP Relay Agent Information Option (Option 82) into the client-request packets that it relays to its DHCP server. This allows the DHCP Relay Agent to pass on information to the server about the network location of the client device. The DHCP Relay Agent strips the DHCP Relay Agent Option 82 field out of the DHCP server's response, so that the DHCP client never sees this field.

When the DHCP Relay Agent appends its DHCP Relay Agent Option 82 data into the packet, it first overwrites any pad options present; then if necessary, it increases the packet length to accommodate the DHCP Relay Agent Option 82 data.

The **no** variant of this command stops the DHCP Relay Agent from appending the Option 82 field onto DHCP requests before forwarding it to the server.

For DHCP Relay Agent and DHCP Relay Agent Option 82 introductory information, see the [DHCP Feature Overview and Configuration Guide](#).

**NOTE:** The DHCP-relay service might alter the content of the DHCP Relay Agent Option 82 field, if the commands [ip dhcp-relay agent-option](#) and [ip dhcp-relay information policy](#) have been configured.

**Syntax** `ip dhcp-relay agent-option`  
`no ip dhcp-relay agent-option`

**Default** DHCP Relay Agent Information Option (Option 82) insertion is disabled by default.

**Mode** Interface Configuration for a VLAN interface.

**Usage** Use this command to alter the DHCP Relay Agent Option 82 setting when your device is the first hop for the DHCP client. To limit the maximum length of the packet, use the [ip dhcp-relay max-message-length](#) command.

This command cannot be enabled if DHCP snooping is enabled on your device ([service dhcp-snooping](#) command), and vice versa.

**Examples** To make the DHCP Relay Agent listening on `vlan15` append the DHCP Relay Agent Option 82 field, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan15
awplus(config-if)# ip dhcp-relay agent-option
```

To stop the DHCP Relay Agent from appending the DHCP Relay Agent Option 82 field on `vlan15`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan15
awplus(config-if)# no ip dhcp-relay agent-option
```

**Related  
Commands**

- [ip dhcp-relay agent-option remote-id](#)
- [ip dhcp-relay information policy](#)
- [ip dhcp-relay max-message-length](#)
- [service dhcp-relay](#)



# ip dhcp-relay agent-option checking

**Overview** This command enables the DHCP Relay Agent to check DHCP Relay Agent Information Option (Option 82) information in response packets returned from DHCP servers. If the information does not match the information it has for its own client (downstream) interface then the DHCP Relay Agent drops the packet. Note that [ip dhcp-relay agent-option](#) must be configured.

The DHCP Relay Agent Option 82 field is included in relayed client DHCP packets if:

- DHCP Relay Agent Option 82 is enabled ([ip dhcp-relay agent-option](#)), and
- DHCP Relay Agent is enabled on the device ([service dhcp-relay](#))

For DHCP Relay Agent and DHCP Relay Agent Option 82 introductory information, see the [DHCP Feature Overview and Configuration Guide](#).

**Syntax** `ip dhcp-relay agent-option checking`  
`no ip dhcp-relay agent-option checking`

**Mode** Interface Configuration for a VLAN interface.

**Examples** To make the DHCP Relay Agent listening on vlan10 check the DHCP Relay Agent Information Option (Option 82) field, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# ip dhcp-relay agent-option
awplus(config-if)# ip dhcp-relay agent-option checking
```

To stop the DHCP Relay Agent on vlan10 from checking the DHCP Relay Agent Information Option (Option 82) field, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no ip dhcp-relay agent-option checking
```

**Related Commands** [ip dhcp-relay agent-option](#)  
[ip dhcp-relay agent-option remote-id](#)  
[ip dhcp-relay information policy](#)  
[service dhcp-relay](#)

# ip dhcp-relay agent-option remote-id

**Overview** Use this command to specify the Remote ID sub-option of the DHCP Relay Agent Option 82 field the DHCP Relay Agent inserts into clients' request packets. The Remote ID identifies the device that is inserting the DHCP Relay Agent Option 82 information. If a Remote ID is not specified, the Remote ID sub-option is set to the device's MAC address.

Use the **no** variant of this command to return the Remote ID for an interface.

For DHCP Relay Agent and DHCP Relay Agent Option 82 introductory information, see the [DHCP Feature Overview and Configuration Guide](#).

**Syntax** `ip dhcp-relay agent-option remote-id <remote-id>`  
`no ip dhcp-relay agent-option remote-id`

| Parameter                      | Description  |
|--------------------------------|--|
| <code>&lt;remote-id&gt;</code> | An alphanumeric (ASCII) string, 1 to 63 characters in length. Additional characters allowed are hyphen (-), underscore (_) and hash (#). Spaces are not allowed. |

**Default** The Remote ID is set to the device's MAC address by default.

**Mode** Interface Configuration for a VLAN interface.

**Usage** The Remote ID sub-option is included in the DHCP Relay Agent Option 82 field of relayed client DHCP packets if:

- DHCP Relay Agent Option 82 is enabled ([ip dhcp-relay agent-option](#)), and
- DHCP Relay Agent is enabled on the device ([service dhcp-relay](#))

**Examples** To set the Remote ID to `myid` for client DHCP packets received on `vlan1`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# ip dhcp-relay agent-option remote-id myid
```

To remove the Remote ID specified for `vlan1`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# no ip dhcp-relay agent-option remote-id
```

**Related Commands** [ip dhcp-relay agent-option](#)  
[ip dhcp-relay agent-option checking](#)  
[show ip dhcp-relay](#)

# ip dhcp-relay information policy

**Overview** This command sets the policy for how the DHCP relay deals with packets arriving from the client that contain DHCP Relay Agent Option 82 information.

If the command **ip dhcp-relay agent-option** has not been configured, then this command has no effect at all - no alteration is made to Option 82 information in packets arriving from the client side.

However, if the command **ip dhcp-relay agent-option** has been configured, this command modifies how the DHCP relay service deals with cases where the packet arriving from the client side already contains DHCP Relay Agent Option 82 information.

This command sets the action that the DHCP relay should take when a received DHCP client request contains DHCP Relay Agent Option 82 information.

By default, the DHCP Relay Agent replaces any existing DHCP Relay Agent Option 82 field with its own DHCP Relay Agent field. This is equivalent to the functionality of the **replace** parameter.

The **no** variant of this command returns the policy to the default behavior - i.e. replacing the existing DHCP Relay Agent Option 82 field.

For DHCP Relay Agent and DHCP Relay Agent Option 82 introductory information, see the [DHCP Feature Overview and Configuration Guide](#).

**NOTE:** The DHCP-relay service might alter the content of the DHCP Relay Agent Option 82 field, if the commands [ip dhcp-relay agent-option](#) and [ip dhcp-relay information policy](#) have been configured.

**Syntax**

```
ip dhcp-relay information policy {append|drop|keep|replace}
no ip dhcp-relay information policy
```

| Parameter | Description  |
|-----------|--|
| append    | The DHCP Relay Agent appends the DHCP Relay Agent Option 82 field of the packet with its own DHCP Relay Agent Option 82 details.                               |
| drop      | The DHCP Relay Agent discards the packet.  |
| keep      | The DHCP Relay Agent forwards the packet without altering the DHCP Relay Agent Option 82 field.  |
| replace   | The DHCP Relay Agent replaces the existing DHCP Relay Agent details in the DHCP Relay Agent Option 82 field with its own details before forwarding the packet. |

**Mode** Interface Configuration for a VLAN interface.

**Examples** To make the DHCP Relay Agent listening on `vlan15` drop any client requests that already contain DHCP Relay Agent Option 82 information, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan15
awplus(config-if)# ip dhcp-relay information policy drop
```

To reset the DHCP relay information policy to the default policy for interface `vlan15`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan15
awplus(config-if)# no ip dhcp-relay information policy
```

**Related Commands**

- [ip dhcp-relay agent-option](#)
- [ip dhcp-relay agent-option checking](#)
- [service dhcp-server](#)

# ip dhcp-relay maxhops

**Overview** This command sets the hop count threshold for discarding BOOTP messages. When the hops field in a BOOTP message exceeds the threshold, the DHCP Relay Agent discards the BOOTP message. The hop count threshold is set to 10 hops by default.

Use the **no** variant of this command to reset the hop count to the default.

For DHCP Relay Agent and DHCP Relay Agent Option 82 introductory information, see the [DHCP Feature Overview and Configuration Guide](#).

**Syntax** `ip dhcp-relay maxhops <1-255>`  
`no ip dhcp-relay maxhops`

| Parameter | Description                  |
|-----------|------------------------------|
| <1-255>   | The maximum hop count value. |

**Default** The default hop count threshold is 10 hops.

**Mode** Interface Configuration for a VLAN interface.

**Example** To set the maximum number of hops to 5 for packets received on interface `vlan15`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan15
awplus(config-if)# ip dhcp-relay maxhops 5
```

**Related Commands** [service dhcp-relay](#)

# ip dhcp-relay max-message-length

**Overview** This command applies when the device is acting as a DHCP Relay Agent and DHCP Relay Agent Option 82 insertion is enabled. It sets the maximum DHCP message length (in bytes) for the DHCP packet with its DHCP Relay Agent Option 82 data inserted. From this value it calculates the maximum packet size that it will accept at its input. Packets that arrive greater than this value will be dropped.

The **no** variant of this command sets the maximum message length to its default of 1400 bytes.

For DHCP Relay Agent and DHCP Relay Agent Option 82 introductory information, see the [DHCP Feature Overview and Configuration Guide](#).

**Syntax** `ip dhcp-relay max-message-length <548-1472>`  
`no ip dhcp-relay max-message-length`

| Parameter  | Description   |
|------------|---|
| <548-1472> | The maximum DHCP message length (this is the message header plus the inserted DHCP option fields in bytes). |

**Default** The default is 1400 bytes.

**Mode** Interface Configuration for a VLAN interface.

**Usage** When a DHCP Relay Agent (that has DHCP Relay Agent Option 82 insertion enabled) receives a request packet from a DHCP client, it will append the DHCP Relay Agent Option 82 component data, and forward the packet to the DHCP server. The DHCP client will sometimes issue packets containing pad option fields that can be overwritten with Option 82 data.

Where there are insufficient pad option fields to contain all the DHCP Relay Agent Option 82 data, the DHCP Relay Agent will increase the packet size to accommodate the DHCP Relay Agent Option 82 data. If the new (increased) packet size exceeds that defined by the **maximum-message-length** parameter, then the DHCP Relay Agent will drop the packet.

**NOTE:** Before setting this command, you must first run the [ip dhcp-relay agent-option](#) command. This will allow the DHCP Relay Agent Option 82 fields to be appended.

**Example** To set the maximum DHCP message length to 1200 bytes for packets arriving in interface `vlan7`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan7
awplus(config-if)# ip dhcp-relay max-message-length 1200
```

To reset the maximum DHCP message length to the default of 1400 bytes for packets arriving in interface `vlan7`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan7
awplus(config-if)# no ip dhcp-relay max-message-length
```

**Related  
Commands**   [service dhcp-relay](#)

# ip dhcp-relay server-address

**Overview** This command adds a DHCP server for the DHCP Relay Agent to forward client DHCP packets to on a particular interface. You can add up to five DHCP servers on each device interface that the DHCP Relay Agent is listening on.

The **no** variant of this command deletes the specified DHCP server from the list of servers available to the DHCP relay agent.

The **no ip dhcp-relay** command removes all DHCP relay settings from the interface.

For DHCP Relay Agent and DHCP Relay Agent Option 82 introductory information, see the [DHCP Feature Overview and Configuration Guide](#).

**Syntax** `ip dhcp-relay server-address {<ipv4-address>|<ipv6-address>  
<server-interface>}`  
`no ip dhcp-relay server-address {<ipv4-address>|<ipv6-address>  
<server-interface>}`  
`no ip dhcp-relay`

| Parameter          | Description   |
|--------------------|---|
| <ipv4-address>     | Specify the IPv4 address of the DHCP server for DHCP Relay Agent to forward client DHCP packets to, in dotted decimal notation. The IPv4 address uses the format A.B.C.D. |
| <ipv6-address>     | Specify the IPv6 address of the DHCPv6 server for DHCPv6 Relay Agent to forward client DHCP packets to, in hexadecimal notation.  |
| <server-interface> | Specify the interface name of the DHCPv6 server. It is only required for a DHCPv6 server with an IPv6 address.  |

**Mode** Interface Configuration for a VLAN interface.

**Usage** For a DHCP server with an IPv6 address you must specify the interface for the DHCP server. See examples below for configuration differences between IPv4 and IPv6 DHCP relay servers.

See also the [service dhcp-relay](#) command to enable the DHCP Relay Agent on your device. The [ip dhcp-relay server-address](#) command defines a relay destination on an interface on the device, needed by the DHCP Relay Agent to relay DHCP client packets to a DHCP server.



**Examples** To enable the DHCP Relay Agent to relay DHCP packets on interface `vlan2` to the DHCP server with the IPv4 address `192.0.2.200`, use the commands:

```
awplus# configure terminal
awplus(config)# service dhcp-relay
awplus(config)# interface vlan2
awplus(config-if)# ip dhcp-relay server-address 192.0.2.200
```

To remove the DHCP server with the IPv4 address `192.0.2.200` from the list of servers available to the DHCP Relay Agent on interface `vlan2`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ip dhcp-relay server-address 192.0.2.200
```

To enable the DHCP Relay Agent on your device to relay DHCP packets on interface `vlan10` to the DHCP server with the IPv6 address `2001:0db8:010d::1` on interface `vlan20`, use the commands:

```
awplus# configure terminal
awplus(config)# service dhcp-relay
awplus(config)# interface vlan10
awplus(config-if)# ip dhcp-relay server-address
2001:0db8:010d::1 vlan20
```

To remove the DHCP server with the IPv6 address `2001:0db8:010d::1` on interface `vlan20` from the list of servers available to the DHCP Relay Agent on interface `vlan10`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no ip dhcp-relay server-address
2001:0db8:010d::1 vlan20
```

To disable DHCP relay on `vlan10`, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no ip dhcp-relay
```

**Related  
Commands** [service dhcp-relay](#)

# lease

**Overview** This command sets the expiration time for a leased address for the DHCP address pool you are configuring. The time set by the days, hours, minutes and seconds is cumulative. The minimum total lease time that can be configured is 20 seconds. The maximum total lease time that can be configured is 120 days.

Note that if you add a user-defined option 51 using the [option](#) command, then you will override any settings created with this command. Option 51 specifies a lease time of 1 day.

Use the **infinite** parameter to set the lease expiry time to infinite (leases never expire).

Use the **no** variant of this command to return the lease expiration time back to the default of one day.

**Syntax** `lease <days> <hours> <minutes> [<seconds>]`  
`lease infinite`  
`no lease`

| Parameter | Description  |
|-----------|--|
| <days>    | The number of days, from 0 to 120, that the lease expiry time is configured for.<br>Default: 1 |
| <hours>   | The number of hours, from 0 to 24, that the lease expiry time is configured for.<br>Default: 0 |
| <minutes> | The number of minutes, from 0 to 60, the lease expiry time is configured for.<br>Default: 0    |
| <seconds> | The number of seconds, from 0 to 60, the lease expiry time is configured for.                  |
| infinite  | The lease never expires.   |

**Default** The default lease time is 1 day.

**Mode** DHCP Configuration

**Examples** To set the lease expiration time for address pool P2 to 35 minutes, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# lease 0 0 35
```

To set the lease expiration time for the address pool `Nerv_Office` to 1 day, 5 hours, and 30 minutes, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool Nerv_Office
awplus(dhcp-config)# lease 1 5 30
```

To set the lease expiration time for the address pool `P3` to 20 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P3
awplus(dhcp-config)# lease 0 0 0 20
```

To set the lease expiration time for the pool to never expire, use the command:

```
awplus(dhcp-config)# lease infinite
```

To return the lease expiration time to the default of one day, use the command:

```
awplus(dhcp-config)# no lease
```

**Related  
Commands**   [option](#)  
[service dhcp-server](#)

# network (DHCP)

**Overview** This command sets the network (subnet) that the DHCP address pool applies to. The **no** variant of this command removes the network (subnet) from the DHCP address pool.

**Syntax** `network`  
`{<ip-subnet-address/prefix-length>|<ip-subnet-address/mask>}`  
`no network`

| Parameter  | Description  |
|--|--|
| <code>&lt;ip-subnet-address/prefix-length&gt;</code> | The IPv4 subnet address in dotted decimal notation followed by the prefix length in slash notation.        |
| <code>&lt;ip-subnet-address/mask&gt;</code>          | The IPv4 subnet address in dotted decimal notation followed by the subnet mask in dotted decimal notation. |

**Mode** DHCP Configuration

**Usage** This command will fail if it would make existing ranges invalid. For example, if they do not lie within the new network you are configuring. The **no** variant of this command will fail if ranges still exist in the pool. You must remove all ranges in the pool before issuing a **no network** command to remove a network from the pool.

**Examples** To configure a network for the address pool P2, where the subnet is 192.0.2.5 and the mask is 255.255.255.0, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# network 192.0.2.5/24
```

or you can use dotted decimal notation instead of slash notation for the subnet-mask:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# network 192.0.2.5 255.255.255.0
```

**Related Commands** [service dhcp-server](#)  
[subnet-mask](#)

## next-server

**Overview** This command sets the next server address for a DHCP server pool. It is the address of the next server that the client should use in its bootstrap process.

The **no** variant of this command removes the next server address from the DHCP address pool.

**Syntax** `next-server <ip-address>`  
`no next-server`

| Parameter                       | Description  |
|---------------------------------|--|
| <code>&lt;ip-address&gt;</code> | The server IP address, entered in dotted decimal notation. |

**Mode** DHCP Configuration

**Example** To set the next-server address for the address pool P2, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# next-server 192.0.2.2
```

# option

**Overview** This command adds a user-defined option to the DHCP address pool you are configuring. For the **hex**, **integer**, and **flag** option types, if the option already exists, the new option overwrites the existing option's value. Options with an **ip** type can hold a list of IP addresses or masks (i.e. entries that have the A.B.C.D address format), so if the option already exists in the pool, then the new IP address is added to the list of existing IP addresses.

Options with the same number as one of the pre-defined options override the standard option definition. The pre-defined options use the option numbers 1, 3, 6, 15, and 51.

The **no** variant of this command removes the specified user-defined option from the DHCP pool, or all user-defined options from the DHCP pool.

**Syntax** `option [<1-254>|<option-name>] <option-value>`  
`no option [<1-254>|<option-value>]`

| Parameter      | Description  |
|----------------|--|
| <1-254>        | The option number of the option. Options with the same number as one of the standard options overrides the standard option definition.   |
| <option-name>  | Option name associated with the option.  |
| <option-value> | The option value. You must specify a value that is appropriate to the option type:   |
|                | <b>hex</b> A hexadecimal string. Valid characters are the numbers 0–9 and letters a–f. Embedded spaces are not valid. The string must be an even number of characters, from 2 and 256 characters long. |
|                | <b>ip</b> An IPv4 address or mask that has the dotted decimal A.B.C.D notation. To create a list of IP addresses, you must add each IP address individually using the option command multiple times.   |
|                | <b>integer</b> A number from 0 to 4294967295.  |
|                | <b>flag</b> A value of either true, on, or enabled to set the flag, or false, off or disabled to unset the flag.   |

**Mode** DHCP Configuration

**Examples** To add the ASCII-type option named `tftp-server-name` to the pool P2 and give the option the value `server1`, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# option tftp-server-name server1
```

To add the hex-type option named `tcPIP-node-type` to the pool P2 and give the option the value `08af`, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# option tcPIP-node-type 08af
```

To add multiple IP addresses for the ip-type option 175, use the command:

```
awplus(dhcp-config)# option 175 192.0.2.6
awplus(dhcp-config)# option 175 192.0.2.12
awplus(dhcp-config)# option 175 192.0.2.33
```

To add the option 179 to a pool, and give the option the value 123456, use the command:

```
awplus(dhcp-config)# option 179 123456
```

To add a user-defined flag option with the name `perform-router-discovery`, use the command:

```
awplus(dhcp-config)# option perform-router-discovery yes
```

To clear all user-defined options from a DHCP address pool, use the command:

```
awplus(dhcp-config)# no option
```

To clear a user-defined option, named `tftp-server-name`, use the command:

```
awplus(dhcp-config)# no option tftp-server-name
```

**Related  
Commands**

[dns-server](#)

[ip dhcp option](#)

[lease](#)

[service dhcp-server](#)

[show ip dhcp pool](#)

# probe enable

**Overview** Use this command to enable lease probing for a DHCP pool. Probing is used by the DHCP server to check if an IP address it wants to lease to a client is already being used by another host.

The **no** variant of this command disables probing for a DHCP pool.

**Syntax** `probe enable`  
`no probe enable`

**Default** Probing is enabled by default.

**Mode** DHCP Pool Configuration

**Examples** To enable probing for pool P2, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# probe enable
```

To disable probing for pool P2, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no probe enable
```

**Related Commands** [ip dhcp pool](#)  
[probe packets](#)  
[probe timeout](#)  
[probe type](#)  
[show ip dhcp pool](#)



# probe packets

**Overview** Use this command to specify the number of packets sent for each lease probe. Lease probing is configured on a per-DHCP pool basis. When set to 0 probing is effectively disabled.

The **no** variant of this command sets the number of probe packets sent to the default of 5.

**Syntax** `probe packets <0-10>`  
`no probe packets`

| Parameter | Description                       |
|-----------|-----------------------------------|
| <0-10>    | The number of probe packets sent. |

**Default** The default is 5.

**Mode** DHCP Pool Configuration

**Examples** To set the number of probe packets to 2 for pool P2, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# probe packets 2
```

To set the number of probe packets to the default 5 for pool P2, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no probe packets
```

**Related Commands** [probe enable](#)  
[probe timeout](#)  
[probe type](#)  
[show ip dhcp pool](#)

# probe timeout

**Overview** Use this command to set the timeout value in milliseconds that the server waits for a response after each probe packet is sent. Lease probing is configured on a per-DHCP pool basis.

The **no** variant of this command sets the probe timeout value to the default setting, 200 milliseconds.

**Syntax** `probe timeout <50-5000>`  
`no probe timeout`

| Parameter                    | Description                       |
|------------------------------|-----------------------------------|
| <code>&lt;50-5000&gt;</code> | Timeout interval in milliseconds. |

**Default** The default timeout interval is 200 milliseconds.

**Mode** DHCP Pool Configuration

**Examples** To set the probe timeout value to 500 milliseconds for pool P2, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# probe timeout 500
```

To set the probe timeout value for pool P2 to the default, 200 milliseconds, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no probe timeout
```

**Related Commands** [probe enable](#)  
[probe packets](#)  
[probe type](#)  
[show ip dhcp pool](#)

# probe type

**Overview** Use this command to set the probe type for a DHCP pool. The probe type specifies how the DHCP server checks whether an IP address is being used by other hosts, referred to as lease probing. If **arp** is specified, the server sends an ARP request to determine if an address is in use. If **ping** is specified, the server will send an ICMP Echo Request (ping).

The **no** variant of this command sets the probe type to the default setting, ping.

**Syntax** probe type {arp|ping}  
no probe type

| Parameter | Description       |
|-----------|-------------------|
| arp       | Probe using ARP.  |
| ping      | Probe using ping. |

**Default** The default probe type is ping.

**Mode** DHCP Pool Configuration

**Examples** To set the probe type to arp for the pool P2, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# probe type arp
```

To set the probe type for the pool P2 to the default, ping, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no probe type
```

**Related Commands**

- [ip dhcp pool](#)
- [probe enable](#)
- [probe packets](#)
- [probe timeout](#)
- [show ip dhcp pool](#)

# range

**Overview** This command adds an address range to the DHCP address pool you are configuring. The DHCP server responds to client requests received from the pool's network. It assigns an IP addresses within the specified range. The IP address range must lie within the network. You can add multiple address ranges and individual IP addresses for a DHCP pool by using this command multiple times.

The **no** variant of this command removes an address range from the DHCP pool. Use the **no range all** command to remove all address ranges from the DHCP pool.

**Syntax** `range <ip-address> [<ip-address>]`  
`no range <ip-address> [<ip-address>]`  
`no range all`

| Parameter                       | Description  |
|---------------------------------|--|
| <code>&lt;ip-address&gt;</code> | IPv4 address range for DHCP clients, in dotted decimal notation. The first IP address is the low end of the range, the second IP address is the high end. Specify only one IP address to add an individual IP address to the address pool. |

**Mode** DHCP Configuration

**Examples** To add an address range of 192.0.2.5 to 192.0.2.16 to the pool Nerv\_Office, use the command:

```
awplus# configure terminal
awplus(config)# ip dhcp pool Nerv_Office
awplus(dhcp-config)# range 192.0.2.5 192.0.2.16
```

To add the individual IP address 192.0.2.2 to a pool, use the command:

```
awplus(dhcp-config)# range 192.0.2.2
```

To remove all address ranges from a pool, use the command:

```
awplus(dhcp-config)# no range all
```

**Related Commands** [ip dhcp pool](#)  
[service dhcp-server](#)  
[show ip dhcp pool](#)

# route

**Overview** This command allows the DHCP server to provide static routes to clients.

**Syntax** `route A.B.C.D/M A.B.C.D {both|opt249|rfc3442}`

| Parameter | Description                            |
|-----------|--|
| A.B.C.D/M | Subnet for the route                   |
| A.B.C.D   | Next hop for the route                 |
| both      | opt249 and rft3442                     |
| opt249    | Classless static route option for DHCP |
| rfc3442   | Classless static route option for DHCP |

**Mode** DHCP Configuration

**Examples** To distribute static routes for route 0.0.0.0/0 whose next hop is 192.16.1.1 to clients using both opt249 and rfc3442, use the command:

```
awplus# configure terminal
awplus(config)# ip dhcp pool pubic
awplus(dhcp-config)# route 0.0.0.0/0 192.16.1.1 both
```

**Related Commands** [ip dhcp pool](#)

# service dhcp-relay

**Overview** This command enables the DHCP Relay Agent on the device. However, on a given IP interface, no DHCP forwarding takes place until at least one DHCP server is specified to forward/relay all clients' DHCP packets to.

The **no** variant of this command disables the DHCP Relay Agent on the device for all interfaces.

**Syntax** `service dhcp-relay`  
`no service dhcp-relay`

**Mode** Global Configuration

**Usage** A maximum number of 400 DHCP Relay Agents (one per interface) can be configured on the device. Once this limit has been reached, any further attempts to configure DHCP Relay Agents will not be successful.

**Default** The DHCP-relay service is enabled by default.

**Examples** To enable the DHCP relay global function, use the commands:

```
awplus# configure terminal
awplus(config)# service dhcp-relay
```

To disable the DHCP relay global function, use the commands:

```
awplus# configure terminal
awplus(config)# no service dhcp-relay
```

**Related Commands**

- [ip dhcp-relay agent-option](#)
- [ip dhcp-relay agent-option checking](#)
- [ip dhcp-relay information policy](#)
- [ip dhcp-relay maxhops](#)
- [ip dhcp-relay server-address](#)

# service dhcp-server

**Overview** This command enables the DHCP server on your device. The server then listens for DHCP requests on all IP interfaces. It will not run if there are no IP interfaces configured.

The **no** variant of this command disables the DHCP server.

**Syntax** `service dhcp-server`  
`no service dhcp-server`

**Mode** Global Configuration

**Example** To enable the DHCP server, use the commands:

```
awplus# configure terminal
awplus(config)# service dhcp-server
```

**Related Commands** [ip dhcp pool](#)  
[show ip dhcp server summary](#)  
[subnet-mask](#)

# show counter dhcp-client

**Overview** This command shows counters for the DHCP client on your device.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show counter dhcp-client`

**Mode** User Exec and Privileged Exec

**Example** To display the message counters for the DHCP client on your device, use the command:

```
awplus# show counter dhcp-client
```

**Output** Figure 41-1: Example output from the **show counter dhcp-client** command

```
show counter dhcp-client

DHCPDISCOVER out      ..... 10
DHCPREQUEST out       ..... 34
DHCPDECLINE out       ..... 4
DHCPRELEASE out       ..... 0
DHCPOFFER in         ..... 22
DHCPACK in            ..... 18
DHCPNAK in            ..... 0
```

**Table 1:** Parameters in the output of the **show counter dhcp-client** command

| Parameter        | Description  |
|------------------|--|
| DHCPDISCOVER out | The number of DHCP Discover messages sent by the client.                     |
| DHCPREQUEST out  | The number of DHCP Request messages sent by the client.                      |
| DHCPDECLINE out  | The number of DHCP Decline messages sent by the client.                      |
| DHCPRELEASE out  | The number of DHCP Release messages sent by the client.                      |
| DHCPOFFER in     | The number of DHCP Offer messages received by the client.                    |
| DHCPACK in       | The number of DHCP Acknowledgement messages received by the client.          |
| DHCPNAK in       | The number of DHCP Negative Acknowledgement messages received by the client. |

**Related Commands** [ip address dhcp](#)



# show counter dhcp-relay

**Overview** This command shows counters for the DHCP Relay Agent on your device.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show counter dhcp-relay

**Mode** User Exec and Privileged Exec

**Examples** To display counters for the DHCP Relay Agent on your device, use the following command:

```
awplus# show counter dhcp-relay
```

**Output** Figure 41-2: Example output from the **show counter dhcp-relay** command

```
awplus#show counter dhcp-relay

DHCP relay counters
Requests In           ..... 4
Replies In            ..... 4
Relayed To Server     ..... 4
Relayed To Client     ..... 4
Out To Server Failed  ..... 0
Out To Client Failed  ..... 0
Invalid hlen          ..... 0
Bogus giaddr          ..... 0
Corrupt Agent Option  ..... 0
Missing Agent Option  ..... 0
Bad Circuit ID        ..... 0
Missing Circuit ID     ..... 0
Bad Remote ID         ..... 0
Missing Remote ID     ..... 0
Option Insert Failed  ..... 0
DHCPv6 Requests In   ..... 0
DHCPv6 Replies In    ..... 0
DHCPv6 Relayed to Server ..... 0
DHCPv6 Relayed to Client ..... 0
```

| Parameter         | Description  |
|-------------------|--|
| Requests In       | The number of DHCP Request messages received from clients. |
| Replies In        | The number of DHCP Reply messages received from servers.   |
| Relayed To Server | The number of DHCP Request messages relayed to servers.    |

| Parameter            | Description  |
|----------------------|--|
| Relayed To Client    | The number of DHCP Reply messages relayed to clients.  |
| Out To Server Failed | The number of failures when attempting to send request messages to servers. This is an internal debugging counter.   |
| Out To Client Failed | The number of failures when attempting to send reply messages to clients. This is an internal debugging counter.   |
| Invalid hlen         | The number of incoming messages dropped due to an invalid hlen field.  |
| Bogus giaddr         | The number of incoming DHCP Reply messages dropped due to the bogus giaddr field.  |
| Corrupt Agent Option | The number of incoming DHCP Reply messages dropped due to a corrupt relay agent information option field. Note that Agent Option counters only increment on errors occurring if the <code>ip dhcp-relay agent-option</code> command is configured for an interface. Messages generating the errors are only dropped if the <code>ip dhcp-relay agent-option checking</code> command is configured on the interface as well as the <code>ip dhcp-relay agent-option</code> command. |
| Missing Agent Option | The number of incoming DHCP Reply messages dropped due to a missing relay agent information option field. Note that Agent Option counters only increment on errors occurring if the <code>ip dhcp-relay agent-option</code> command is configured for an interface. Messages generating the errors are only dropped if the <code>ip dhcp-relay agent-option checking</code> command is configured on the interface as well as the <code>ip dhcp-relay agent-option</code> command. |
| Bad Circuit ID       | The number of incoming DHCP Reply messages dropped due to a bad circuit ID. Note that Agent Option counters only increment on errors occurring if the <code>ip dhcp-relay agent-option</code> command is configured for an interface. Messages generating the errors are only dropped if the <code>ip dhcp-relay agent-option checking</code> command is configured on the interface as well as the <code>ip dhcp-relay agent-option</code> command.                               |
| Missing Circuit ID   | The number of incoming DHCP Reply messages dropped due to a missing circuit ID. Note that Agent Option counters only increment on errors occurring if the <code>ip dhcp-relay agent-option</code> command is configured for an interface. Messages generating the errors are only dropped if the <code>ip dhcp-relay agent-option checking</code> command is configured on the interface as well as the <code>ip dhcp-relay agent-option</code> command.                           |

| Parameter                | Description  |
|--------------------------|--|
| Bad Remote ID            | The number of incoming DHCP Reply messages dropped due to a bad remote ID.<br>Note that Agent Option counters only increment on errors occurring if the <code>ip dhcp-relay agent-option</code> command is configured for an interface. Messages generating the errors are only dropped if the <code>ip dhcp-relay agent-option checking</code> command is configured on the interface as well as the <code>ip dhcp-relay agent-option</code> command  |
| Missing Remote ID        | The number of incoming DHCP Reply messages dropped due to a missing remote ID.<br>Note that Agent Option counters only increment on errors occurring if the <code>ip dhcp-relay agent-option</code> command is configured for an interface. Messages generating the errors are only dropped if the <code>ip dhcp-relay agent-option checking</code> command is configured on the interface as well as the <code>ip dhcp-relay agent-option</code> command  |
| Option Insert Failed     | The number of incoming DHCP Request messages dropped due to an error adding the DHCP Relay Agent information (option-82). This counter increments when: <ul style="list-style-type: none"> <li>the DHCP Relay Agent is set to drop packets with the DHCP Relay Agent Option 82 field already filled by another DHCP Relay Agent. This policy is set with the <code>ip dhcp-relay information policy</code> command.</li> <li>there is a packet error that stops the DHCP Relay Agent from being able to append the packet with its DHCP Relay Agent Information Option (Option 82) field.</li> </ul> |
| DHCPv6 Requests In       | The number of incoming DHCPv6 Request messages.  |
| DHCPv6 Replies In        | The number of incoming DHCPv6 Reply messages.  |
| DHCPv6 Relayed to Server | The number of DHCPv6 messages relayed to the server.   |
| DHCPv6 Relayed to Client | The number of DHCPv6 messages relayed to the client.   |

# show counter dhcp-server

**Overview** This command shows counters for the DHCP server on your device.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show counter dhcp-server`

**Mode** User Exec and Privileged Exec

**Example** To display counters for the DHCP server on your device, use the command:

```
awplus# show counter dhcp-server
```

**Output** Figure 41-3: Example output from the **show counter dhcp-server** command

|                      |       |    |
|----------------------|-------|----|
| DHCP server counters |       |    |
| DHCPDISCOVER in      | ..... | 20 |
| DHCPREQUEST in       | ..... | 12 |
| DHCPDECLINE in       | ..... | 1  |
| DHCPRELEASE in       | ..... | 0  |
| DHCPINFORM in        | ..... | 0  |
| DHCPOFFER out        | ..... | 8  |
| DHCPACK out          | ..... | 4  |
| DHCPNAK out          | ..... | 0  |
| BOOTREQUEST in       | ..... | 0  |
| BOOTREPLY out        | ..... | 0  |

**Table 2:** Parameters in the output of the **show counter dhcp-server** command

| Parameter       | Description   |
|-----------------|---|
| DHCPDISCOVER in | The number of Discover messages received by the DHCP server.    |
| DHCPREQUEST in  | The number of Request messages received by the DHCP server.     |
| DHCPDECLINE in  | The number of Decline messages received by the DHCP server.     |
| DHCPRELEASE in  | The number of Release messages received by the DHCP server.     |
| DHCPINFORM in   | The number of Inform messages received by the DHCP server.      |
| DHCPOFFER out   | The number of Offer messages sent by the DHCP server.           |
| DHCPACK out     | The number of Acknowledgement messages sent by the DHCP server. |

**Table 2:** Parameters in the output of the **show counter dhcp-server** command

| Parameter      | Description   |
|----------------|---|
| DHCPNAK out    | The number of Negative Acknowledgement messages sent by the DHCP server. The server sends these after receiving a request that it cannot fulfil because either there are no available IP addresses in the related address pool, or the request has come from a client that doesn't fit the network setting for an address pool. |
| BOOTREQUEST in | The number of bootp messages received by the DHCP server from bootp clients.  |
| BOOTREPLY out  | The number of bootp messages sent by the DHCP server to bootp clients.  |

**Related  
Commands**

- [service dhcp-server](#)
- [show ip dhcp binding](#)
- [show ip dhcp server statistics](#)
- [show ip dhcp pool](#)

# show dhcp lease

**Overview** This command shows details about the leases that the DHCP client has acquired from a DHCP server for interfaces on the device.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare\\_Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show dhcp lease [<interface>]`

| Parameter                      | Description                                       |
|--------------------------------|---|
| <code>&lt;interface&gt;</code> | Interface name to display DHCP lease details for. |

**Mode** User Exec and Privileged Exec

**Example** To show the current lease expiry times for all interfaces, use the command:

```
awplus# show dhcp lease
```

To show the current lease for vlan1, use the command:

```
awplus# show dhcp lease vlan1
```

**Output** Figure 41-4: Example output from the **show dhcp lease** command

```
Interface vlan1
-----
IP Address:                192.168.22.4
Expires:                   13 Mar 2007 20:10:19
Renew:                     13 Mar 2007 18:37:06
Rebind:                    13 Mar 2007 19:49:29
Server:
Options:
  subnet-mask              255.255.255.0
  routers                  19.18.2.100,12.16.2.17
  dhcp-lease-time          3600
  dhcp-message-type        5
  domain-name-servers      192.168.100.50,19.88.200.33
  dhcp-server-identifier   192.168.22.1
  domain-name              alliedtelesis.com

Interface vlan2
-----
IP Address:                100.8.16.4
Expires:                   13 Mar 2007 20:15:39
Renew:                     13 Mar 2007 18:42:25
Rebind:                    13 Mar 2007 19:54:46
Server:
Options:
  subnet-mask              255.255.0.0
  routers                  10.58.1.51
  dhcp-lease-time          1000
  dhcp-message-type        5
  dhcp-server-identifier   100.8.16.1
```

**Related** [ip address dhcp](#)  
**Commands**

# show ip dhcp binding

**Overview** This command shows the lease bindings that the DHCP server has allocated clients.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip dhcp binding [<ip-address>|<address-pool>]`

| Parameter      | Description  |
|----------------|--|
| <ip-address>   | IPv4 address of a leased IP address, in dotted decimal notation. This displays the lease information for the specified IP address. |
| <address-pool> | Name of an address pool. This displays the lease information for all clients within the address pool.                              |

**Mode** User Exec and Privileged Exec

**Examples** To display all leases for every client in all address pools, use the command:

```
awplus# show ip dhcp binding
```

To display the details for the leased IP address 172.16.2.16, use the command:

```
awplus# show ip dhcp binding 172.16.2.16
```

To display the leases from the address pool MyPool, use the command:

```
awplus# show ip dhcp binding MyPool
```

**Output** Figure 41-5: Example output from the **show ip dhcp binding** command

| Pool 30_2_network Network 172.16.2.0/24 |                |         |                      |
|---|----------------|---------|----------------------|
| DHCP Client Entries                     |                |         |                      |
| IP Address                              | ClientId       | Type    | Expiry               |
| -----                                   |                |         |                      |
| 172.16.2.100                            | 0050.fc82.9ede | Dynamic | 21 Sep 2007 19:02:58 |
| 172.16.2.101                            | 000e.a6ae.7c14 | Static  | Infinite             |
| 172.16.2.102                            | 000e.a6ae.7c4c | Static  | Infinite             |
| 172.16.2.103                            | 000e.a69a.ac91 | Static  | Infinite             |
| 172.16.2.104                            | 00e0.189d.5e41 | Static  | Infinite             |
| 172.16.2.150                            | 00e0.2b04.5800 | Static  | Infinite             |
| 172.16.2.167                            | 4444.4400.35c3 | Dynamic | 21 Sep 2007 14:58:41 |



**Related  
Commands**

- [clear ip dhcp binding](#)
- [ip dhcp pool](#)
- [lease](#)
- [range](#)
- [service dhcp-server](#)
- [show ip dhcp pool](#)

# show ip dhcp pool

**Overview** This command displays the configuration details and system usage of the DHCP address pools configured on the device.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip dhcp pool [<address-pool>]`

| Parameter      | Description  |
|----------------|--|
| <address-pool> | Name of a specific address pool. This displays the configuration of the specified address pool only. |

**Mode** User Exec and Privileged Exec

**Example** `awplus# show ip dhcp pool`

**Output** Figure 41-6: Example output from the **show ip dhcp pool** command

```
Pool p1 :
  network: 192.168.1.0/24
  address ranges:
    addr: 192.168.1.10 to 192.168.1.18
  static host addresses:
    addr: 192.168.1.12      MAC addr: 1111.2222.3333
  lease <days:hours:minutes:seconds> <1:0:0:0>
  subnet mask: 255.255.255.0 (pool's network mask)
  Probe:                                Default Values
    Status:      Enabled                [Enabled]
    Type:        ARP                    [Ping]
    Packets:     2                      [5]
    Timeout:     200 msecs              [200]
  Dynamic addresses:
    Total:       8
    Leased:      2
    Utilization: 25.0 %
  Static host addresses:
    Total:       1
    Leased:      1
```

**Output** Figure 41-7: Example output from the **show ip dhcp pool** command with IP address 192.168.1.12 assigned to a VLAN interface on the device:

```
Pool p1 :
  network: 192.168.1.0/24
  address ranges:
    addr: 192.168.1.10 to 192.168.1.18
        (interface addr 192.168.1.12 excluded)
        (static host addr 192.168.1.12 excluded)
  static host addresses:
    addr: 192.168.1.12      MAC addr: 1111.2222.3333
        (= interface addr, so excluded)
  lease <days:hours:minutes:seconds> <1:0:0:0>
  subnet mask: 255.255.255.0 (pool's network mask)
  Probe:                               Default Values
    Status:      Enabled                [Enabled]
    Type:        ARP                    [Ping]
    Packets:     2                      [5]
    Timeout:     200 msec                [200]
  Dynamic addresses:
    Total:       8
    Leased:      2
    Utilization: 25.0 %
  Static host addresses:
    Total:       1
    Leased:      1
```

**Table 3:** Parameters in the output of the **show ip dhcp pool** command

| Parameter             | Description   |
|-----------------------|---|
| Pool                  | Name of the pool.   |
| network               | Subnet and mask length of the pool.   |
| address ranges        | Individual IP addresses and address ranges configured for the pool. The DHCP server can offer clients an IP address from within the specified ranges only.<br>Any of these addresses that match an interface address on the device, or a static host address configured in the pool, will be automatically excluded from the range, and a message to this effect will appear beneath the range entry. |
| static host addresses | The static host addresses configured on the pool. Each IP address is permanently assigned to the client with the matching MAC address.<br>Any of these addresses that match an interface address on the device will be automatically excluded, and a message to this effect will appear beneath the static host entry.  |

**Table 3:** Parameters in the output of the **show ip dhcp pool** command (cont.)

| Parameter                          | Description  |
|------------------------------------|--|
| lease<br><days:hours:minutes>      | The lease duration for address allocated by this pool.   |
| domain                             | The domain name sent by the pool to clients. This is the domain name that the client should use when resolving host names using DNS. |
| subnet mask                        | The subnet mask sent by the pool to clients.   |
| Probe - Status                     | Whether lease probing is enabled or disabled.  |
| Probe - Type                       | The lease probe type configured. Either ping or ARP.   |
| Probe - Packets                    | The number of packets sent for each lease probe in the range 0 to 10.  |
| Probe - Timeout                    | The timeout value in milliseconds to wait for a response after each probe packet is sent. In the range 50 to 5000.                   |
| dns servers                        | The DNS server addresses sent to by the pool to clients.   |
| default-router(s)                  | The default router addresses sent by the pool to clients.  |
| user-defined options               | The list of user-defined options sent by the pool to clients.  |
| Dynamic addresses-<br>Total        | The total number of IP addresses that have been configured in the pool for dynamic allocation to DHCP clients.                       |
| Dynamic addresses-<br>Leased       | The number of IP addresses in the pool that have been dynamically allocated (leased) to DHCP clients.                                |
| Dynamic addresses -<br>Utilization | The percentage of IP addresses in the pool that are currently dynamically allocated to clients.                                      |
| Static host addresses-<br>Total    | The number of static IP addresses configured in the pool for specific DHCP client hosts.   |
| Static host addresses<br>- Leased  | The number of static IP addresses assigned to specific DHCP client hosts.  |

**Related  
Commands**

- ip dhcp pool
- probe enable
- probe packets
- probe timeout
- probe type
- range
- service dhcp-server
- subnet-mask

# show ip dhcp-relay

**Overview** This command shows the configuration of the DHCP Relay Agent on each interface.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip dhcp-relay [interface <interface-name>]`

| Parameter        | Description  |
|------------------|--|
| <interface-name> | Name of a specific interface. This displays the DHCP configuration for the specified interface only. |

**Mode** User Exec and Privileged Exec

**Example** To display the DHCP Relay Agent’s configuration on the interface `vlan100`, use the command:

```
awplus# show ip dhcp-relay interface vlan100
```

**Output** Figure 41-8: Example output from the **show ip dhcp-relay** command

```
DHCP Relay Service is enabled

vlan100 is up, line protocol is up
Maximum hop count is 10
Insertion of Relay Agent Option is disabled
Checking of Relay Agent Option is disabled
The Remote Id string for Relay Agent Option is 0000.cd28.074c
Relay information policy is to append new relay agent
information
List of servers : 192.168.1.200
```

**Related Commands**

- [ip dhcp-relay agent-option](#)
- [ip dhcp-relay agent-option checking](#)
- [ip dhcp-relay information policy](#)
- [ip dhcp-relay maxhops](#)
- [ip dhcp-relay server-address](#)

# show ip dhcp server statistics

**Overview** This command shows statistics related to the DHCP server.

You can display the server counters using the [show counter dhcp-server](#) command as well as with this command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show ip dhcp server statistics

**Mode** User Exec and Privileged Exec

**Example** To display the server statistics, use the command:

```
awplus# show ip dhcp server statistics
```

**Output** Figure 41-9: Example output from the **show ip dhcp server statistics** command

|                        |       |    |
|------------------------|-------|----|
| DHCP server counters   |       |    |
| DHCPDISCOVER in        | ..... | 20 |
| DHCPREQUEST in         | ..... | 12 |
| DHCPDECLINE in         | ..... | 1  |
| DHCPRELEASE in         | ..... | 0  |
| DHCPINFORM in          | ..... | 0  |
| DHCPOFFER out          | ..... | 8  |
| DHCPACK out            | ..... | 4  |
| DHCPCNAK out           | ..... | 0  |
| BOOTREQUEST in         | ..... | 0  |
| BOOTREPLY out          | ..... | 0  |
| DHCLEASEQUERY in       | ..... | 0  |
| DHCLEASEUNKNOWN out    | ..... | 0  |
| DHCLEASEACTIVE out     | ..... | 0  |
| DHCLEASEUNASSIGNED out | ..... | 0  |

**Table 4:** Parameters in the output of the **show ip dhcp server statistics** command

| Parameter       | Description  |
|-----------------|--|
| DHCPDISCOVER in | The number of Discover messages received by the DHCP server. |
| DHCPREQUEST in  | The number of Request messages received by the DHCP server.  |
| DHCPDECLINE in  | The number of Decline messages received by the DHCP server.  |

**Table 4:** Parameters in the output of the **show ip dhcp server statistics** command (cont.)

| Parameter               | Description   |
|-------------------------|---|
| DHCPRELEASE in          | The number of Release messages received by the DHCP server.   |
| DHCPINFORM in           | The number of Inform messages received by the DHCP server.  |
| DHCPOFFER out           | The number of Offer messages sent by the DHCP server.   |
| DHCPACK out             | The number of Acknowledgement messages sent by the DHCP server.   |
| DHCPNAK out             | The number of Negative Acknowledgement messages sent by the DHCP server. The server sends these after receiving a request that it cannot fulfil because either there are no available IP addresses in the related address pool, or the request has come from a client that doesn't fit the network setting for an address pool. |
| BOOTREQUEST in          | The number of bootp messages received by the DHCP server from bootp clients.  |
| BOOTREPLY out           | The number of bootp messages sent by the DHCP server to bootp clients.  |
| DHCPLEASEQUERY in       | The number of Lease Query messages received by the DHCP server from DHCP Relay Agents.  |
| DHCPLEASEUNKNOWN out    | The number of Lease Unknown messages sent by the DHCP server to DHCP Relay Agents.  |
| DHCPLEASEACTIVE out     | The number of Lease Active messages sent by the DHCP server to DHCP Relay Agents.   |
| DHCPLEASEUNASSIGNED out | The number of Lease Unassigned messages sent by the DHCP server to DHCP Relay Agents.   |

**Related Commands**

- [show counter dhcp-server](#)
- [service dhcp-server](#)
- [show ip dhcp binding](#)
- [show ip dhcp pool](#)



# show ip dhcp server summary

**Overview** This command shows the current configuration of the DHCP server. This includes:

- whether the DHCP server is enabled
- whether the DHCP server is configured to ignore BOOTP requests
- whether the DHCP server is configured to support DHCP lease queries
- the details of any user-defined options
- a list of the names of all DHCP address pools currently configured

This show command does not include any configuration details of the address pools. You can display these using the [show ip dhcp pool](#) command.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ip dhcp server summary`

**Mode** User Exec and Privileged Exec

**Example** To display the current configuration of the DHCP server, use the command:

```
awplus# show ip dhcp server summary
```

**Output** Figure 41-10: Example output from the **show ip dhcp server summary** command

```
DHCP Server service is disabled
BOOTP ignore is disabled
DHCP leasequery support is disabled
Pool list: p2
```

**Related Commands** [ip dhcp leasequery enable](#)  
[ip dhcp pool](#)  
[service dhcp-server](#)

# subnet-mask

**Overview** This command sets the subnet mask option for a DHCP address pool you are configuring. Use this command to specify the client's subnet mask as defined in RFC 950. This sets the subnet details using the pre-defined option 1. Note that if you create a user-defined option 1 using the [option](#) command, then you will override any settings created with this command. If you do not specify a subnet mask using this command, then the pool's network mask (specified using the [next-server](#) command) is applied.

The **no** variant of this command removes a subnet mask option from a DHCP pool. The pool reverts to using the pool's network mask.

**Syntax** `subnet-mask <mask>`  
`no subnet-mask`

| Parameter                 | Description   |
|---------------------------|---|
| <code>&lt;mask&gt;</code> | Valid IPv4 subnet mask, in dotted decimal notation. |

**Mode** DHCP Configuration

**Examples** To set the subnet mask option to 255.255.255.0 for DHCP pool P2, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# subnet-mask 255.255.255.0
```

To remove the subnet mask option from DHCP pool P2, use the commands:

```
awplus# configure terminal
awplus(config)# ip dhcp pool P2
awplus(dhcp-config)# no subnet-mask
```

**Related Commands**

- [default-router](#)
- [dns-server](#)
- [domain-name](#)
- [next-server](#)
- [option](#)
- [service dhcp-server](#)
- [show ip dhcp pool](#)

# 42

# DHCP for IPv6 (DHCPv6) Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure DHCPv6. For more information, see the [DHCPv6 Feature Overview and Configuration Guide](#).

DHCPv6 is a network protocol used to configure IPv6 hosts with IPv6 addresses and IPv6 prefixes for an IPv6 network. DHCPv6 is used instead of SLAAC (Stateless Address Autoconfiguration) at sites where centralized management of IPv6 hosts is needed. IPv6 routers require automatic configuration of IPv6 addresses and IPv6 prefixes.

DHCPv6 Prefix Delegation provides automatic configuration of IPv6 addresses and IPv6 prefixes.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**NOTE:** The IPv6 addresses shown use the address space 2001:0db8::/32, defined in RFC 3849 for documentation purposes. These addresses should not be used for practical networks (other than for testing purposes) nor should they appear on any public network.

- Command List**
- “[address prefix](#)” on page 1753
  - “[address range](#)” on page 1755
  - “[clear counter ipv6 dhcp-client](#)” on page 1757
  - “[clear counter ipv6 dhcp-server](#)” on page 1758
  - “[clear ipv6 dhcp binding](#)” on page 1759
  - “[clear ipv6 dhcp client](#)” on page 1761
  - “[dns-server \(DHCPv6\)](#)” on page 1762
  - “[domain-name \(DHCPv6\)](#)” on page 1764
  - “[ip dhcp-relay agent-option subscriber-id-auto-mac](#)” on page 1765

- ["ipv6 address \(DHCPv6 PD\)"](#) on page 1766
- ["ipv6 address dhcp"](#) on page 1769
- ["ipv6 dhcp client pd"](#) on page 1771
- ["ipv6 dhcp option"](#) on page 1773
- ["ipv6 dhcp pool"](#) on page 1775
- ["ipv6 dhcp server"](#) on page 1777
- ["ipv6 local pool"](#) on page 1778
- ["ipv6 nd prefix \(DHCPv6\)"](#) on page 1780
- ["link-address"](#) on page 1782
- ["option \(DHCPv6\)"](#) on page 1784
- ["prefix-delegation pool"](#) on page 1786
- ["show counter ipv6 dhcp-client"](#) on page 1788
- ["show counter ipv6 dhcp-server"](#) on page 1790
- ["show ipv6 dhcp"](#) on page 1792
- ["show ipv6 dhcp binding"](#) on page 1793
- ["show ipv6 dhcp interface"](#) on page 1796
- ["show ipv6 dhcp pool"](#) on page 1798
- ["snmp-address"](#) on page 1800

# address prefix

**Overview** Use this command in DHCPv6 Configuration mode to specify an address prefix for address assignment with DHCPv6 server pool configuration.

Use the **no** variant of this command to remove the address prefix from the DHCPv6 server pool.

**Syntax** `address prefix <ipv6-prefix/prefix-length> [lifetime {<valid-time>|infinite} {<preferred-time>|infinite}]`  
`no address prefix <ipv6-prefix/prefix-length>`

| Parameter                                      | Description   |
|--|---|
| <code>&lt;ipv6-prefix/prefix-length&gt;</code> | Specify an IPv6 prefix and prefix length, The prefix length indicates the length of the IPv6 prefix assigned to the pool. The IPv6 address uses the format X:X::X:X/Prefix-Length. The prefix-length is usually set between 0 and 64.   |
| <code>lifetime</code>                          | Optional. Specify a time period for the hosts to remember router advertisements (RAs).<br>If you specify the optional lifetime parameter with this command then you must also specify a <i>valid-time</i> and a <i>preferred-time</i> value.<br>See the Usage notes below this parameter table for a description of preferred and valid lifetimes and how these determine deprecated or invalid IPv6 addresses upon expiry. |
| <code>&lt;valid-time&gt;</code>                | Specify a valid lifetime in seconds in the range <5-315360000>.<br>The default valid lifetime is 2592000 seconds.   |
| <code>infinite</code>                          | Specify an infinite valid lifetime or an infinite preferred lifetime, or both, when using this keyword.   |
| <code>&lt;preferred-time&gt;</code>            | Specify a preferred lifetime in seconds in the range <5-315360000>.<br>The default preferred lifetime is 604800 seconds.  |

**Mode** DHCPv6 Configuration

**Default** The default valid lifetime is 2592000 seconds and the default preferred lifetime is 604800 seconds.

**Usage** This command creates a pool of prefixes from which addresses are assigned to clients on request, and allocates a network prefix from which the DHCPv6 Server leases addresses. This command is an alternative to using a range set using the [address range](#) command.

The DHCPv6 Server selects an IPv6 address from the range available allocated by the IPv6 prefix, randomly generating the suffix of the IPv6 address, with the specified preferred and valid lifetime leases. Leased IPv6 address are found in the

DHCPv6 Server REPLY packet, which is located within the IANA (Identity Association for Non-temporary Addresses) IA address field in the **REPLY** message.

Preferred IPv6 addresses or prefixes are available to interfaces for unrestricted use and are deprecated when the preferred timer expires.

Deprecated IPv6 addresses and prefixes are available for use and are discouraged but not forbidden. A deprecated address or prefix should not be used as a source address or prefix, but packets sent from deprecated addresses or prefixes are delivered as expected.

An IPv6 address or prefix becomes invalid and is not available to an interface when the valid lifetime timer expires. Invalid addresses or prefixes should not appear as the source or destination for a packet.

**Examples** To add IPv6 address prefix 2001:0db8:1::/48 for DHCPv6 server pool configuration, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool pool1
awplus(config-dhcp6)# address prefix 2001:0db8:1::/48
```

To remove a configured IPv6 address prefix for DHCPv6 server pool configuration, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool pool1
awplus(config-dhcp6)# no address prefix 2001:0db8:1::/48
```

**Related  
Commands** [address range](#)  
[ipv6 dhcp pool](#)

**Validation  
Commands** [show ipv6 dhcp binding](#)  
[show ipv6 dhcp pool](#)

# address range

**Overview** Use this command in DHCPv6 Configuration mode to specify an address range for address assignment with DHCPv6 server pool configuration.

Use the **no** variant of this command to remove an address range from the DHCPv6 server pool.

**Syntax** `address range <first-ipv6-address>  
<last-ipv6-address>[lifetime {<valid-time>|infinite}  
{<preferred-time>|infinite}]`  
`no address range <first-ipv6-address> <last-ipv6-address>`

| Parameter                               | Description  |
|---|--|
| <code>&lt;first-ipv6-address&gt;</code> | Specify the first IPv6 address of the IPv6 address range, in hexadecimal notation in the format <code>X:X::X:X</code> .  |
| <code>&lt;last-ipv6-address&gt;</code>  | Specify the last IPv6 address of the IPv6 address range, in hexadecimal notation in the format <code>X:X::X:X</code> .   |
| <code>lifetime</code>                   | Optional. Specify a time period for the hosts to remember router advertisements (RAs).<br>If you specify this parameter then you must also specify a <i>valid-time</i> and a <i>preferred-time</i> value.<br>See the Usage notes below this parameter table for a description of preferred and valid lifetimes and how these determine deprecated or invalid IPv6 addresses upon expiry. |
| <code>&lt;valid-time&gt;</code>         | Specify a valid lifetime in seconds in the range <code>&lt;5-31536000&gt;</code> .<br>The default valid lifetime is 2592000 seconds.   |
| <code>infinite</code>                   | Specify an infinite valid lifetime or an infinite preferred lifetime, or both, when using this keyword.  |
| <code>&lt;preferred-time&gt;</code>     | Specify a preferred lifetime in seconds in the range <code>&lt;5-31536000&gt;</code> .<br>The default preferred lifetime is 604800 seconds.  |

**Default** The default valid lifetime is 2592000 seconds and the default preferred lifetime is 604800 seconds.

**Mode** DHCPv6 Configuration

**Usage** Preferred IPv6 addresses or prefixes are available to interfaces for unrestricted use and are deprecated when the preferred timer expires.

Deprecated IPv6 addresses and prefixes are available for use and are discouraged but not forbidden. A deprecated address or prefix should not be used as a source address or prefix, but packets sent from deprecated addresses or prefixes are delivered as expected.

An IPv6 address or prefix becomes invalid and is not available to an interface when the valid lifetime timer expires. Invalid addresses or prefixes should not appear as the source or destination for a packet.

**Examples** To add the IPv6 address range 2001:0db8:1::1 to 2001:0db8:1fff::1 for DHCPv6 server pool configuration, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool pool1
awplus(config-dhcp6)# address range 2001:0db8:1::1
2001:0db8:1fff::1
```

To remove a configured IPv6 address range for DHCPv6 server pool configuration, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool pool1
awplus(config-dhcp6)# no address range
```

**Related  
Commands** [address prefix](#)  
[ipv6 dhcp pool](#)

**Validation  
Commands** [show ipv6 dhcp binding](#)  
[show ipv6 dhcp pool](#)



# clear counter ipv6 dhcp-client

**Overview** Use this command in Privileged Exec mode to clear DHCPv6 client counters.

**Syntax** `clear counter ipv6 dhcp-client`

**Mode** Privileged Exec

**Example** To clear DHCPv6 client counters, use the following command:

```
awplus# clear counter ipv6 dhcp-client
```

**Related Commands** [show counter ipv6 dhcp-client](#)

# clear counter ipv6 dhcp-server

**Overview** Use this command in Privileged Exec mode to clear DHCPv6 server counters.

**Syntax** `clear counter ipv6 dhcp-server`

**Mode** Privileged Exec

**Example** To clear DHCPv6 server counters, use the following command:

```
awplus# clear counter ipv6 dhcp-server
```

**Related Commands** [show counter ipv6 dhcp-server](#)

# clear ipv6 dhcp binding

**Overview** Use this command in Privileged Exec mode to clear either a specific lease binding or the lease bindings as specified by the command parameters. The command will only take effect on dynamically allocated bindings, not statically configured bindings. This command clears binding entries on the DHCPv6 server binding table.

**Syntax** `clear ipv6 dhcp binding {ipv6 <prefix>|duid <DUID>|all|pool <name>}`

| Parameter     | Description  |
|---------------|--|
| ipv6 <prefix> | Optional. Specify the IPv6 prefix of the DHCPv6 client, in hexadecimal notation in the format X:X:X:X.   |
| duid <DUID>   | Specify the DUID (DHCPv6 unique ID) of the DHCPv6 client.  |
| all           | All DHCPv6 bindings.   |
| pool <name>   | Description used to identify DHCPv6 server address pool. Valid characters are any printable character. If the name contains spaces then you must enclose these in "quotation marks". |

**Mode** Privileged Exec

**Usage** A specific binding may be deleted by **ipv6** address or **duid** address, or several bindings may be deleted at once using **all** or **pool**.

Note that if you specify to clear the **ipv6** or **duid** address of what is actually a static DHCPv6 binding, an error message is displayed. If **all** or **pool** are specified and one or more static DHCPv6 bindings exist within those addresses, any dynamic entries within those addresses are cleared but any static entries are not cleared.

The clear ipv6 dhcp binding command is used as a server function. A binding table entry on the DHCPv6 server is automatically:

- Created whenever a prefix is delegated to a client from the configuration pool.
- Updated when the client renews, rebinds, or confirms the prefix delegation.
- Deleted when the client releases all the prefixes in the binding, all prefix lifetimes have expired, or when a user runs the clear ipv6 dhcp binding command.

If the **clear ipv6 dhcp binding** command is used with the optional IPv6 address parameter, only the binding for the specified client is deleted. If the **clear ipv6 dhcp binding** command is used without the optional IPv6 address parameter, then all automatic client bindings are deleted from the DHCPv6 bindings table.

**Example** To clear all dynamic DHCPv6 server binding entries, use the command:

```
awplus# clear ipv6 dhcp binding all
```

**Output** Figure 42-1: Example output from the **clear ipv6 dhcp binding all** command

```
awplus#clear ipv6 dhcp binding all
% Deleted 1 entries
```

**Related  
Commands** [show ipv6 dhcp binding](#)

# clear ipv6 dhcp client

**Overview** Use this command in Privileged Exec mode to restart a DHCPv6 client on an interface.

**Syntax** `clear ipv6 dhcp client <interface>`

| Parameter                      | Description   |
|--------------------------------|---|
| <code>&lt;interface&gt;</code> | Specify the interface name to restart a DHCPv6 client on. |

**Mode** Privileged Exec

**Example** To restart a DHCPv6 client on interface vlan1, use the following command:

```
awplus# clear ipv6 dhcp client vlan1
```

**Related Commands** [show ipv6 dhcp binding](#)

# dns-server (DHCPv6)

**Overview** Use this command to add a Domain Name System (DNS) server to the DHCPv6 address pool you are configuring. You can use this command multiple times to create a list of DNS name servers available to the client. This sets the DNS server details using the pre-defined option 6. Note that if you add a user-defined option 6 using the [option \(DHCPv6\)](#) command, then you will override any settings created with this command.

Use the **no** variant of this command to remove either the specified DNS server or all DNS servers from the DHCPv6 pool.

**Syntax** `dns-server <ipv6-address>`  
`no dns-server [<ipv6-address>]`

| Parameter                         | Description   |
|-----------------------------------|---|
| <code>&lt;ipv6-address&gt;</code> | Specify an IPv6 address of the DNS server, in hexadecimal notation in the format <code>X:X::X:X</code> . This parameter is required when adding a DNS server to the DHCPv6 address pool. All DNS servers are removed from the DHCPv6 pool if you enter the <code>no dns-server</code> command without this parameter. |

**Mode** DHCPv6 Configuration

**Examples** To add the DNS server with the assigned IPv6 address `2001:0db8:3000:3000::32` to the DHCPv6 server pool named `P2`, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(dhcpv6-config)# dns-server 2001:0db8:3000:3000::32
```

To remove the DNS server with the assigned IPv6 address `2001:0db8:3000:3000::32` from the DHCPv6 server pool named `P2`, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(dhcpv6-config)# no dns-server 2001:0db8:3000:3000::32
```

To remove all DNS servers from the DHCPv6 server pool named `P2`, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(dhcpv6-config)# no dns-server
```

**Related  
Commands**    `ipv6 dhcp pool`  
                  `option (DHCPv6)`  
                  `show ipv6 dhcp pool`

# domain-name (DHCPv6)

**Overview** Use this command in DHCPv6 Configuration mode to add a domain name to the DHCPv6 server address pool you are configuring.

Use the **no** variant of this command to remove a domain name from the address pool.

**Syntax** `domain-name <domain-name>`  
`no domain-name`

| Parameter                        | Description  |
|----------------------------------|--|
| <code>&lt;domain-name&gt;</code> | Specify the domain name you wish to assign the DHCPv6 server address pool. Valid characters are printable characters. If the name contains spaces then you must enclose it in "quotation marks". |

**Mode** DHCPv6 Configuration

**Usage** This command specifies the domain name that a client should use when resolving host names using the Domain Name System, and sets the domain name details using the pre- defined option 15. Note that if you add a user-defined option 15 using the [option \(DHCPv6\)](#) command, then you will override any settings created with this command.

**Examples** To add the domain name `Engineering` to DHCPv6 server pool `P2`, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(dhcpv6-config)# domain-name Engineering
```

To remove the domain name `Engineering` from DHCPv6 server pool `P2`, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(dhcpv6-config)# no domain-name Engineering
```

**Related Commands** [dns-server \(DHCPv6\)](#)  
[option \(DHCPv6\)](#)  
[show ipv6 dhcp pool](#)



# ip dhcp-relay agent-option subscriber-id-auto-mac

**Overview** This command causes the relay agent to insert the requesting clients' MAC address into a subscriber ID field in the relay header. A suitably-configured server can then use this subscriber ID option to assign the same IPv6 address to that requesting client every time it requires an address.

Use the no form of this command to disable this feature.

**Syntax** `ip dhcp-relay agent-option subscriber-id-auto-mac`  
`no ip dhcp-relay agent-option subscriber-id-auto-mac`

**Default** Disabled

**Usage** By default, DHCPv6 uses a DUID-LLT client identifier instead of a MAC address. This is generated by the operating system when DHCP first starts. If the OS is reinstalled the DUID-LLT can change, and any multiple operating systems on the machine will all have different DUIDs.

Configuring the subscriber-id-auto-mac option causes the relay agent to insert the requesting client's MAC address into a subscriber ID field in the relay header. A suitably-configured server can then use this subscriber ID to assign the same IPv6 address to that requesting client every time it connects.

The client must be in the same L2 network as the relay. If there are multiple relays between the client and the server, only the first relay will add a subscriber ID option.

**Example** To enable this feature on VLAN1, use the following commands:

```
awplus(config)#int vlan1  
awplus(config-if)#ip dhcp-relay agent-option  
subscriber-id-auto-mac
```

For an example of how to configure a relay agent and server, see the document "How to use DHCPv6 to assign specific IPv6 addresses to specific devices", available from [www.alliedtelesis.com](http://www.alliedtelesis.com).

## ipv6 address (DHCPv6 PD)

**Overview** Use this command in Interface Configuration mode for a VLAN interface to append an IPv6 address suffix to the IPv6 prefix provided by a DHCPv6 Prefix Delegation (PD) server.

Use the **no** variant of this command to remove the IPv6 address assigned and disable IPv6. Note that if no global addresses are left after removing the IPv6 address then IPv6 is disabled.

**Syntax** `ipv6 address [<ipv6-prefix-name>] <ipv6-addr/prefix-length> [eui64]`  
`no ipv6 address [<ipv6-prefix-name>] <ipv6-addr/prefix-length> [eui64]`

| Parameter                                    | Description   |
|--|---|
| <code>&lt;ipv6-prefix-name&gt;</code>        | The IPv6 prefix name advertised on the router advertisement message sent from the device. The IPv6 prefix name is delegated from the DHCPv6 Server configured for DHCPv6 Prefix-Delegation. |
| <code>&lt;ipv6-addr/prefix-length&gt;</code> | Specifies the IPv6 address to be set, for example ::1/64. The IPv6 address uses the format X:X::X/X/Prefix-Length. The prefix-length is usually set between 0 and 64.                       |
| <code>[eui64]</code>                         | EUI-64 is a method of automatically deriving the lower 64 bits of an IPv6 address, based on the switch's MAC address.   |

**Mode** Interface Configuration for a VLAN interface.

**Mode** Interface Configuration for a VLAN interface or Interface Configuration for a PPP interface.

**Usage** When specifying the **eui64** parameter, the interface identifier of the IPv6 address is derived from the MAC address of the device.

For more information about EUI64, see the [IPv6 Feature Overview and Configuration Guide](#).

**Examples** To configure a PD prefix named prefix1 on interface vlan1 and then add an IPv6 address, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 dhcp client pd prefix1
awplus(config-if)# ipv6 address prefix1::1/64
```

In this example, the prefix will be assigned from the pool on the PD client. The host portion or suffix will be ::1 for the last 64 bits.

To configure a PD prefix named prefix1 on interface vlan1 and then add an IPv6 address using EUI-64 identifiers, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan1
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 dhcp client pd prefix1
awplus(config-if)# ipv6 address prefix1/64 eui64
```

In this example, the prefix will be assigned from the pool on the PD client. The host portion or suffix is created from the EUI-64 identifier of the interface for the last 64 bits.

To assign the IPv6 address 2001:0db8::a2/48 to the VLAN interface vlan2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 address 2001:0db8::a2/48
```

To remove the IPv6 address 2001:0db8::a2/48 from the VLAN interface vlan2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 address 2001:0db8::a2/48
```

To assign the IPv6 address to the PPP interface ppp0, use the following commands:

```
awplus# configure terminal
awplus(config)# interface ppp0
awplus(config-fr-subif)# ipv6 address 2001:0db8::a2/64
```

To remove the IPv6 address 2001:0db8::a2/64 from the PPP interface ppp0, use the following commands:

```
awplus# configure terminal
awplus(config)# interface ppp0
awplus(config-if)# no ipv6 address 2001:0db8::a2/64
```

To assign the **eui64** derived address in the prefix 2001:db8::/64 to VLAN interface vlan2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 address 2001:0db8::/64 eui64
```

To remove the **eui64** derived address in the prefix `2001:db8::/32` from VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 address 2001:0db8::/64 eui64
```

**Validation  
Commands**

[show running-config](#)  
[show ipv6 dhcp binding](#)  
[show ipv6 interface brief](#)  
[show ipv6 route](#)

**Related  
Commands**

[ipv6 dhcp client pd](#)  
[ipv6 dhcp pool](#)  
[ipv6 local pool](#)  
[ipv6 nd prefix \(DHCPv6\)](#)  
[prefix-delegation pool](#)

# ipv6 address dhcp

**Overview** Use this command in Interface Configuration mode to activate the DHCPv6 client on the interface that you are configuring. This allows the interface to use the DHCPv6 client to obtain its IPv6 configuration details from a DHCPv6 server on its connected network.

Use the **no** variant of this command to stop the interface from obtaining IPv6 configuration details from a DHCPv6 server.

The DHCPv6 client supports the following IP configuration options:

- Option 1 - the subnet mask for your device.
- Option 3 - a list of default routers.
- Option 6 - a list of DNS servers. This list appends the DNS servers set on your device with the [dns-server \(DHCPv6\)](#) command.
- Option 15 - a domain name used to resolve host names. This option replaces any domain name that you have set with the [domain-name \(DHCPv6\)](#) command.
- Option 51 - lease expiration time.

**Syntax** `ipv6 address dhcp`  
`no ipv6 address dhcp`

**Mode** Interface Configuration for a VLAN interface or a local loopback interface.

**Examples** To set the interface `vlan10` to use DHCPv6 to obtain an IPv6 address, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config)# ipv6 enable
awplus(config-if)# ipv6 address dhcp
```

To stop the interface `vlan10` from using DHCPv6 to obtain its IPv6 address, use the commands:

```
awplus# configure terminal
awplus(config)# interface vlan10
awplus(config-if)# no ipv6 address dhcp
```

To set the PPP interface `ppp0` to use DHCPv6 to obtain an IPv6 address, use the commands:

```
awplus# configure terminal
awplus(config)# interface ppp0
awplus(config-if)# ipv6 address dhcp
```

To stop the PPP interface `ppp0` from using DHCPv6 to obtain its IPv6 address, use the commands:

```
awplus# configure terminal
awplus(config)# interface ppp0
awplus(config-if)# no ipv6 address dhcp
```

**Related  
Commands**    [ipv6 address](#)

**Validation  
Commands**    [show running-config](#)

# ipv6 dhcp client pd

**Overview** Use this command in Interface Configuration mode to enable the DHCPv6 client process and enable requests for prefix delegation through the interface that you are configuring.

Use the **no** variant of this command to disable requests for prefix delegation. This is the default setting.

For further information about DHCPv6 Prefix Delegation, which is used to automate the process of assigning prefixes, see the [DHCPv6 Feature Overview and Configuration Guide](#).

**Syntax** `ipv6 dhcp client pd <prefix-name>`  
`no ipv6 dhcp client pd`

| Parameter                        | Description   |
|----------------------------------|---|
| <code>&lt;prefix-name&gt;</code> | Specify an IPv6 general prefix name. Valid characters are any printable character. If the name contains spaces then you must enclose it in "quotation marks". |

**Mode** Interface Configuration

**Default** Prefix delegation is disabled by default on an interface.

**Usage** Entering the **ipv6 dhcp client pd** command starts the DHCPv6 client process if not already running, and enables requests for prefix delegation through the interface on which the command is configured.

When prefix delegation is enabled and a prefix is acquired, the prefix is stored in the IPv6 prefix pool with an internal name defined by the required `<prefix-name>` placeholder parameter. The [ipv6 address](#) command can then refer to the prefixes stored in the IPv6 prefix pool.

**Examples** To enable prefix delegation with the prefix name `prefix-name` on the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 dhcp client pd my-prefix-name
```

To disable prefix delegation on the VLAN interface `vlan2`, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 dhcp client pd
```

**Related  
Commands**

- [clear ipv6 dhcp client](#)
- [ipv6 address \(DHCPv6 PD\)](#)
- [ipv6 nd prefix \(DHCPv6\)](#)
- [show ipv6 dhcp binding](#)



# ipv6 dhcp option

**Overview** Use this command in Global Configuration mode to create a user-defined DHCPv6 option. You can then use this option when configuring a DHCPv6 server address pool, by using the [option \(DHCPv6\)](#) command.

Options with the same number as one of the pre-defined options override the standard option definition. The pre-defined options use the option numbers 1, 3, 6, 15, and 51.

Use the **no** variant of this command to remove either the specified user-defined option. This also removes user-defined options from the associated DHCPv6 server address pools.

**Syntax** `ipv6 dhcp option <1-254> [name <option-name>] [<option-type>]`  
`no ipv6 dhcp option <1-254>|<option-name>`

| Parameter     | Description  |
|---------------|--|
| <1-254>       | The option number of the option. Options with the same number as one of the standard options overrides the standard option definition.   |
| <option-name> | Option name used to identify the option. You cannot use a number as the option name. Valid characters are any printable character. If the name contains spaces then you must enclose it in "quotation marks".<br>Default: no default |
| <option-type> | The option value. You must specify a value that is appropriate to the option type:   |
| ascii         | An ASCII text string   |
| hex           | A hexadecimal string. Valid characters are the numbers 0–9 and letters a–f. Embedded spaces are not valid. The string must be an even number of characters, from 2 and 256 characters long.  |
| ipv6          | An IPv6 address or prefix that has hexadecimal notation in the format HHHH : HHHH : : HHHH : HHHH. To create a list of IPv6 addresses, you must add each IPv6 address individually by using the option command multiple times.       |
| integer       | A number from 0 to 4294967295.   |
| flag          | A value that either sets (to 1) or unsets (to 0) a flag: <b>true</b> , <b>on</b> , or <b>enabled</b> will set the flag. <b>false</b> , <b>off</b> or <b>disabled</b> will unset the flag.  |

**Mode** Global Configuration

**Examples** To define a user-defined ASCII string option as option 66, without a name, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp option 66 ascii
```

To define a user-defined hexadecimal string option as option 46, with the name "tcpip-node-type", use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp option 46 name tcpip-node-type hex
```

To define a user-defined IP address option as option 175, with the name special-address, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp option 175 name special-address ip
```

To remove the specific user-defined option with the option number 12, use the following commands:

```
awplus# configure terminal
awplus(config)# no ipv6 dhcp option 12
```

To remove the specific user-defined option with the option name perform-router-discovery, use the following commands:

```
awplus# configure terminal
awplus(config)# no ipv6 dhcp option perform-router-discovery
```

**Related Commands**

- [dns-server \(DHCPv6\)](#)
- [domain-name \(DHCPv6\)](#)
- [option \(DHCPv6\)](#)
- [show ipv6 dhcp](#)

# ipv6 dhcp pool

**Overview** Use this command in Global Configuration mode to enter the DHCPv6 Configuration mode for the DHCPv6 server pool name as specified in the required command parameter. If the name specified is not associated with an existing pool, the device will create a new pool with this name, then enter the configuration mode for the new pool.

Once you have entered the DHCPv6 configuration mode, all commands executed before the next **exit** command will apply to this pool.

You can create multiple DHCPv6 server pools on devices with multiple interfaces. This allows the device to act as a DHCPv6 server on multiple interfaces to distribute different information to clients on the different networks.

Use the **no** variant of this command to delete the specific DHCPv6 pool.

**Syntax** `ipv6 dhcp pool <DHCPv6-poolname>`  
`no ipv6 dhcp pool <DHCPv6-poolname>`

| Parameter         | Description  |
|-------------------|--|
| <DHCPv6-poolname> | Description used to identify this DHCPv6 server pool. Valid characters are any printable character. If the name contains spaces then you must enclose it in "quotation marks". |

**Mode** Global Configuration

**Usage** All DHCPv6 prefix pool names must be unique. IPv6 prefix pools have a similar function to IPv4 address pools. Contrary to IPv4, a block of IPv6 addresses (an IPv6 address prefix) are assigned and not single IPv6 addresses. IPv6 prefix pools are not allowed to overlap.

Once a pool is configured, it cannot be changed. To change the configuration, you must remove then recreate a IPv6 prefix pool. All IPv6 prefixes already allocated are also freed.

**Examples** To create the DHCPv6 pool named P2 and enter DHCPv6 configuration mode, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(config-dhcp6)#
```

To delete the DHCPv6 pool named P2, use the following commands:

```
awplus# configure terminal
awplus(config)# no ipv6 dhcp pool P2
```

**Related  
Commands**

- ipv6 local pool
- option (DHCPv6)
- prefix-delegation pool
- show ipv6 dhcp binding
- show ipv6 dhcp pool

# ipv6 dhcp server

**Overview** Use this command in Interface Configuration mode to enable DHCPv6 server for the current IPv6 configured interface to use the specified DHCPv6 server pool name.

The DHCPv6 server service listens for DHCPv6 requests on the IPv6 configured interface. The DHCPv6 server service does not run on interfaces without IPv6 configured on them.

Use the **no** variant of this command to disable the DHCPv6 server.

**Syntax** `ipv6 dhcp-server [<DHCPv6-poolname>]`  
`no ipv6 dhcp-server`

| Parameter         | Description   |
|-------------------|---|
| <DHCPv6-poolname> | Specify a named DHCPv6 server pool as defined with the <a href="#">ipv6 dhcp pool</a> command. Valid characters are any printable character. If the name contains spaces then you must enclose it in "quotation marks". |

**Mode** Interface Configuration

**Usage** The **ipv6 dhcp server** command enables the DHCPv6 service on a specified interface using the pool for prefix delegation and configuration through the specified interface.

Note that DHCPv6 client, DHCPv6 server and DHCPv6 relay are mutually exclusive on an interface. When one of the DHCPv6 functions is enabled on an interface then another DHCPv6 function cannot be enabled on the same interface.

**Examples** To enable the DHCPv6 server service and use the DHCPv6 pool named P2 on VLAN interface vlan2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 dhcp server P2
```

To disable the DHCPv6 server on VLAN interface vlan2, use the following commands:

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# no ipv6 dhcp server
```

**Related Commands** [ipv6 dhcp pool](#)  
[show ipv6 dhcp binding](#)  
[show ipv6 dhcp pool](#)

# ipv6 local pool

**Overview** Use this command in Global Configuration mode to configure a local DHCPv6 server prefix delegation pool specifying a poolname and a prefix/prefix length. You can optionally exclude the locally assigned prefix from the pool with the **exclude-local-prefix** keyword.

Use the **no** variant of this command to remove a local DHCPv6 server prefix delegation pool specifying the poolname.

**Syntax** `ipv6 local pool <DHCPv6-poolname> <delegated-prefix-name>  
<ipv6-prefix/prefix-length> <assigned-length>  
[exclude-local-prefix]`  
`no ipv6 local pool`

| Parameter                                      | Description  |
|--|--|
| <code>&lt;DHCPv6-poolname&gt;</code>           | Description used to identify this DHCPv6 server pool. Valid characters are any printable character. If the name contains spaces then you must enclose it in "quotation marks".   |
| <code>&lt;delegated-prefix-name&gt;</code>     | Description used to identify the delegated prefix name from the parent PD (Prefix Delegation) server. If the name contains spaces then you must enclose it in "quotation marks".   |
| <code>&lt;ipv6-prefix/prefix-length&gt;</code> | Specify an IPv6 prefix and prefix length. The prefix length indicates the length of the IPv6 prefix assigned to the pool.<br>The IPv6 address uses the format X:X::X:X/Prefix-Length. The prefix-length is usually set between 0 and 64.   |
| <code>&lt;assigned-length&gt;</code>           | Specify an IPv6 prefix length assigned to the user from the pool in the range <1-128>. Note that the value of the <i>assigned-length</i> parameter entered cannot be less than or equal to the <i>prefix-length</i> parameter value entered. An assigned length must be longer than a prefix length. |
| <code>exclude-local-prefix</code>              | Optional. Specify this keyword to exclude the locally assigned prefix from the pool.   |

**Default** No DHCPv6 server prefix delegation pool is configured by default.

**Mode** Global Configuration

**Usage** All IPv6 prefix pool names must be unique. IPv6 prefix pools have a similar function to IPv4 address pools. Contrary to IPv4, a block of IPv6 addresses (an IPv6 address prefix) are assigned and not single IPv6 addresses. IPv6 prefix pools are not allowed to overlap.

Once a pool is configured, it cannot be changed. To change the configuration, you must remove then recreate a IPv6 prefix pool. All IPv6 prefixes already allocated are also freed.

**Examples** To create a local DHCPv6 local pool named P2 with the IPv6 prefix and prefix length 2001:0db8::/32 with an assigned length of 64, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 local pool P2 2001:0db8::/32 64
```

To remove a configured DHCPv6 local pool, use the following commands:

```
awplus# configure terminal
awplus(config)# no ipv6 local pool
```

**Related  
Commands** [ipv6 dhcp pool](#)  
[show ipv6 dhcp pool](#)

## ipv6 nd prefix (DHCPv6)

**Overview** Use this command to specify IPv6 RA (Router Advertisement) prefix information generated from the DHCPv6 server for DHCPv6 prefix-delegation for a VLAN.

Use the **no** variant of this command to remove IPv6 RA prefix information from the DHCPv6 Server for DHCPv6 Prefix-Delegation for the interface. Use the **all** parameter with the **no** variant of this command to remove all prefix names and all prefixes for an interface.

**Syntax** `ipv6 nd prefix <ipv6-prefix-name>  
<ipv6-prefix/length>{<valid-lifetime>|infinite}  
{<preferred-lifetime>|infinite} {off-link|no-autoconfig}`  
`no ipv6 nd prefix {<ipv6-prefix-name>|<ipv6-prefix/length>|all}`

| Parameter                               | Description   |
|---|---|
| <code>&lt;ipv6-prefix-name&gt;</code>   | The IPv6 prefix name advertised on the router advertisement message sent from the device.<br>The IPv6 prefix name is delegated from the DHCPv6 Server configured for DHCPv6 Prefix-Delegation.  |
| <code>&lt;ipv6-prefix/length&gt;</code> | The IPv6 prefix and prefix length advertised on the router advertisement message sent from the device.<br>The IPv6 address prefix uses the format X:X::/prefix-length. The prefix-length is usually set between 0 and 64. .   |
| <code>&lt;valid-lifetime&gt;</code>     | The the period during which the specified IPv6 address prefix is valid. This can be set to a value between 5 and 315360000 seconds. Note that this period should be set to a value greater than that set for the prefix preferred-lifetime. See the Usage notes after this parameter table for a description of valid lifetime and how it determines invalid IPv6 addresses upon expiry.  |
| <code>infinite</code>                   | Specifying this keyword instead of entering a value for the <code>&lt;valid-lifetime&gt;</code> parameter applies an infinite valid lifetime.   |
| <code>&lt;preferred-lifetime&gt;</code> | Specifies the IPv6 prefix preferred lifetime. This is the period during which the IPv6 address prefix is considered current. Set this to a value between 0 and 315360000 seconds.<br>Note that this period should be set to a value less than that set for the prefix valid-lifetime. See the Usage notes after this parameter table for a description of preferred lifetime and how it determines deprecated IPv6 addresses upon expiry. |
| <code>infinite</code>                   | Specifying this keyword instead of entering a value for the <code>&lt;preferred-lifetime&gt;</code> parameter applies an infinite valid lifetime.   |
| <code>off-link</code>                   | Specify the IPv6 prefix off-link flag.  |
| <code>no-autoconfig</code>              | Specify the IPv6 prefix no autoconfiguration flag. Setting this flag indicates that the prefix is not to be used for autoconfiguration.   |
| <code>all</code>                        | Specify all prefix names and all prefixes are removed when used with the no variant of this command.  |



**Mode** Interface Configuration for a VLAN interface.

**Mode** Interface Configuration for a VLAN interface or Interface Configuration for a PPP interface.

**Usage** This command specifies the IPv6 prefix flags that are advertised by the router advertisement message.

Preferred IPv6 addresses or prefixes are available to interfaces for unrestricted use and are deprecated when the preferred timer expires.

Deprecated IPv6 addresses and prefixes are available for use and are discouraged but not forbidden. A deprecated address or prefix should not be used as a source address or prefix, but packets sent from deprecated addresses or prefixes are delivered as expected.

An IPv6 address or prefix becomes invalid and is not available to an interface when the valid lifetime timer expires. Invalid addresses or prefixes should not appear as the source or destination for a packet.

**Examples** The following example configures the device to issue RAs (Router Advertisements) on the VLAN interface `vlan4`, and advertises the DHCPv6 prefix name `prefix1` and the IPv6 address prefix of `2001:0db8::/32`.

```
awplus# configure terminal
awplus(config)# interface vlan2
awplus(config-if)# ipv6 enable
awplus(config-if)# ipv6 dhcp client pd prefix1
awplus(config-if)# ipv6 nd prefix prefix1 2001:0db8::/32
```

The following example resets router advertisements on the VLAN interface `vlan4`, so the address prefix of `2001:0db8::/32` is not advertised from the device.

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# no ipv6 nd prefix 2001:0db8::/32
```

The following example removes all prefix names and prefixes from VLAN interface `vlan4`:

```
awplus# configure terminal
awplus(config)# interface vlan4
awplus(config-if)# no ipv6 nd prefix all
```

**Related Commands**

- [ipv6 address \(DHCPv6 PD\)](#)
- [ipv6 dhcp client pd](#)
- [ipv6 dhcp pool](#)
- [ipv6 local pool](#)
- [prefix-delegation pool](#)
- [show ipv6 dhcp binding](#)

# link-address

**Overview** Use this command in DHCPv6 Configuration mode to specify a link-address prefix within a DHCPv6 Server pool.

Note that you can only configure one link address per DHCPv6 pool. Configuring another link address in the same DHCPv6 pool overwrites the previously configured link address.

Use the **no** variant of this command to remove the link-address prefix from the DHCPv6 Server pool.

**Syntax** `link-address <ipv6-prefix/prefix-length>`  
`no link-address`

| Parameter                                      | Description   |
|--|---|
| <code>&lt;ipv6-prefix/prefix-length&gt;</code> | Specify an IPv6 prefix and prefix length. The prefix length indicates the length of the IPv6 prefix assigned to the pool. The IPv6 address uses the format X:X::X/Prefix-Length. The prefix-length is usually set between 0 and 64. |

**Default** No DHCPv6 Server pool configuration link address prefix is configured by default.

**Mode** DHCPv6 Configuration

**Usage** Link addresses are configured in DHCPv6 Server address pools when there are remote clients that communicate via intermediate relay(s).

RELAY-FORW and RELAY-REPL relay packets contain the requesting link address source.

This command is used to match incoming requests from PD (Prefix Delegation) clients (received via an intermediate relay) to a configured delegation pool.

When an address on the incoming interface of the DHCPv6 server or a link address set in the incoming delegation request packet from the prefix delegation client matches the link-address prefix configured in the delegation pool, the DHCPv6 server is able to match and use the appropriate delegation pool for relayed delegation request messages.

If there is no match between incoming delegation request packets from the prefix delegation client and the link-address prefix configured in the delegation pool, the DHCPv6 Server does not delegate an IPv6 prefix to the requesting device.

The link address should be set to the network prefix where the prefix delegation client resides. The prefix delegation server will also need a forwarding path (IPv6 route) back to the network prefix where the prefix delegation client resides.

For more information, see the [DHCPv6 Feature Overview and Configuration Guide](#).

**Examples** To configure the IPv6 prefix and prefix length 2001:0db8:1::/48 as the link address for pool P2, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(config-dhcp6)# address prefix 2001:0db8:2::/48
awplus(config-dhcp6)# link-address 2001:0db8:1::/48
```

To remove the link address, use the commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(config-dhcp6)# no link-address
```

**Related  
Commands** [ipv6 dhcp pool](#)  
[show ipv6 dhcp pool](#)

## option (DHCPv6)

**Overview** Use this command in DHCPv6 Configuration mode to add a user-defined option to the DHCPv6 prefix pool you are configuring. For the **hex**, **integer**, and **flag** option types, if the option already exists, the new option overwrites the existing option's value.

Use the **no** variant of this command to remove the specified user-defined option from the DHCPv6 server pool, or to remove all user-defined options from the DHCPv6 server pool.

**Syntax** `option [<1-254>|<option-name>] <option-value>`  
`no option [<1-254>|<option-value>]`

| Parameter      | Description  |
|----------------|--|
| <1-254>        | The option number of the option. Options with the same number as one of the standard options overrides the standard option definition.   |
| <option-name>  | Option name associated with the option.  |
| <option-value> | The option value. You must specify a value that is appropriate to the option type:   |
|                | <b>hex</b> A hexadecimal string. Valid characters are the numbers 0–9 and letters a–f. Embedded spaces are not valid. The string must be an even number of characters, from 2 and 256 characters long. |
|                | <b>ipv6</b> An IPv6 prefix that has the hexadecimal X:X::X:X notation. To create a list of IPv6 prefixes, you must add each IPv6 prefix individually using this command multiple times.                |
|                | <b>integer</b> A number from 0 to 4294967295.  |
|                | <b>flag</b> A value of either true, on, or enabled to set the flag, or false, off or disabled to unset the flag.   |

**Mode** DHCPv6 Configuration

**Usage** You must define a DHCPv6 option using the `ipv6 dhcp option` command before using the `option (DHCPv6)` command.

Note that options with an **ipv6** type can hold a list of IPv6 prefix (i.e. entries that have the X:X::X:X address format), so if the option already exists in the pool, then the new IP address is added to the list of existing IPv6 prefixes. Also note options with the same number as one of the pre-defined options override the standard option definition. The pre-defined options use the option numbers 1, 3, 6, 15, and 51.

**Examples** To add the IPv6 type option named `sntp-server-addr` to the pool P2 and give the option the value `ipv6`, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp option 22 name sntp_server_addr ipv6
awplus(config)# ipv6 dhcp pool P2
awplus(config-dhcp6)# option sntp_server_addr ipv6
```

To add the ASCII-type option named `tftp-server-name` to the pool P2 and give the option the value `server1`, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(config-dhcp6)# option tftp-server-name server1
```

To add the hex-type option named `tcPIP-node-type` to the pool P2 and give the option the value `08af`, use the following commands:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(config-dhcp6)# option tcPIP-node-type 08af
```

To add multiple IP addresses for the ip-type option 175, use the following commands:

```
awplus(config-dhcp6)# option 175 2001:0db8:3001::/64
awplus(config-dhcp6)# option 175 2001:0db8:3002::/64
awplus(config-dhcp6)# option 175 2001:0db8:3003::/64
```

To add the option 179 to a pool, and give the option the value 123456, use the following command:

```
awplus(config-dhcp6)# option 179 123456
```

To add a user-defined flag option with the name `perform-router-discovery`, use the following command:

```
awplus(config-dhcp6)# option perform-router-discovery yes
```

To clear all user-defined options from a DHCP address pool, use the following command:

```
awplus(config-dhcp6)# no option
```

To clear a user-defined option, named `tftp-server-name`, use the following command:

```
awplus(config-dhcp6)# no option tftp-server-name
```

**Related  
Commands**

- [dns-server \(DHCPv6\)](#)
- [ipv6 dhcp option](#)
- [ipv6 dhcp pool](#)
- [show ipv6 dhcp pool](#)

# prefix-delegation pool

**Overview** Use this command in DHCPv6 Configuration mode to add a DHCPv6 server prefix-delegation pool entry to the current DHCPv6 pool configuration. You must define a DHCPv6 server prefix-delegation pool using the [ipv6 dhcp pool](#) command before using this command.

Use the **no** variant of this command to remove a DHCPv6 server prefix-delegation pool from the current DHCPv6 pool configuration.

**Syntax** `prefix-delegation pool <DHCPv6-poolname> [lifetime {<valid-time>|infinite} {<preferred-time>|infinite}]`  
`no prefix-delegation pool <DHCPv6-poolname>`

| Parameter         | Description   |
|-------------------|---|
| <DHCPv6-poolname> | Description used to identify this DHCPv6 server pool. Valid characters are any printable character. If the name contains spaces then you must enclose it in "quotation marks".  |
| lifetime          | Optional. Specify a time period for the hosts to remember router advertisements (RAs). If you specify this parameter then you must also specify a <i>valid-time</i> and a <i>preferred-time</i> value.<br>See the Usage notes below this parameter table for a description of preferred and valid lifetimes and how these determine deprecated or invalid IPv6 addresses upon expiry. |
| <valid-time>      | Specify a valid lifetime in seconds in the range <5-315360000>.   |
| infinite          | Specify an infinite valid lifetime or an infinite preferred lifetime, or both, when using this keyword.   |
| <preferred-time>  | Specify a valid lifetime in seconds in the range <5-315360000>.   |

**Default** No IPv6 local prefix pool is specified by default.

**Mode** DHCPv6 Configuration

**Usage** The DHCPv6 server assigns prefixes dynamically from an IPv6 local prefix pool, which is configured using the [ipv6 local pool](#) command and is associated with a DHCPv6 configuration pool using this command. When the server receives a prefix request from a client, it attempts to obtain unassigned prefixes from the pool. After the client releases the previously assigned prefixes, the server returns the prefixes to the pool for reassignment.

Preferred IPv6 addresses or prefixes are available to interfaces for unrestricted use and are deprecated when the preferred timer expires.

Deprecated IPv6 addresses and prefixes are available for use and are discouraged but not forbidden. A deprecated address or prefix should not be used as a source

address or prefix, but packets sent from deprecated addresses or prefixes are delivered as expected.

An IPv6 address or prefix becomes invalid and is not available to an interface when the valid lifetime timer expires. Invalid addresses or prefixes should not appear as the source or destination for a packet.

**Example** This example adds DHCPv6 Prefix Delegation pool `pd_pool1` to DHCPv6 pool `pool1`:

```
awplus# configure terminal
awplus(config)# ipv6 local pool pd_pool1 2001:0db8::/48 56
awplus(config)# ipv6 dhcp pool pool1
awplus(config-dhcp6)# prefix-delegation pool pd_pool1
```

**Related  
Commands**

- [ipv6 dhcp pool](#)
- [ipv6 local pool](#)
- [show ipv6 dhcp pool](#)

# show counter ipv6 dhcp-client

**Overview** Use this command in User Exec or Privilege Exec mode to show DHCPv6 client counter information. See [show counter ipv6 dhcp-server](#) for DHCPv6 server information.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show counter ipv6 dhcp-client

**Mode** User Exec and Privileged Exec

**Example** To display the DHCPv6 client counter information, use the command:

```
awplus# show counter ipv6 dhcp-client
```

**Output** Figure 42-2: Example output from the **show counter ipv6 dhcp-client** command

```
awplus#show counter ipv6 dhcp-client
SOLICIT out          ..... 20
ADVERTISE in         ..... 12
REQUEST out          ..... 1
CONFIRM out          ..... 0
RENEW out            ..... 0
REBIND out           ..... 0
REPLY in             ..... 0
RELEASE out          ..... 0
DECLINE out          ..... 0
INFORMATION-REQUEST out ..... 0
```

**Table 1:** Parameters in the output of the **show counter ipv6 dhcp-client** command

| Parameter    | Description   |
|--------------|---|
| SOLICIT out  | Displays the count of SOLICIT messages sent by the DHCPv6 client.       |
| ADVERTISE in | Displays the count of ADVERTISE messages received by the DHCPv6 client. |
| REQUEST out  | Displays the count of REQUEST messages sent by the DHCPv6 client.       |
| CONFIRM out  | Displays the count of CONFIRM messages sent by the DHCPv6 client.       |
| RENEW out    | Displays the count of RENEW messages sent by the DHCPv6 client.         |



**Table 1:** Parameters in the output of the **show counter ipv6 dhcp-client** command (cont.)

| Parameter               | Description   |
|-------------------------|---|
| REBIND out              | Displays the count of REBIND messages sent by the DHCPv6 client.              |
| REPLY in                | Displays the count of REPLY messages received by the DHCPv6 client.           |
| RELEASE out             | Displays the count of RELEASE messages sent by the DHCPv6 client.             |
| DECLINE out             | Displays the count of DECLINE messages sent by the DHCPv6 client.             |
| INFORMATION-REQUEST out | Displays the count of INFORMATION-REQUEST messages sent by the DHCPv6 client. |

**Related Commands** [show counter ipv6 dhcp-server](#)

# show counter ipv6 dhcp-server

**Overview** Use this command in User Exec or Privileged Exec mode to show DHCPv6 server counter information. See [show counter ipv6 dhcp-client](#) for DHCPv6 client information.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show counter ipv6 dhcp-server

**Mode** User Exec and Privileged Exec

**Example** To display the DHCPv6 server counter information, use the command:

```
awplus# show counter ipv6 dhcp-server
```

**Output** Figure 42-3: Example output from the **show counter ipv6 dhcp-server** command

```
awplus#show counter ipv6 dhcp-server
SOLICIT in          ..... 20
ADVERTISE out       ..... 12
REQUEST in          ..... 1
CONFIRM in          ..... 0
RENEW in            ..... 0
REBIND in           ..... 0
REPLY out           ..... 0
RELEASE in          ..... 0
DECLINE in          ..... 0
INFORMATION-REQUEST in ..... 0
```

**Table 2:** Parameters in the output of the **show counter ipv6 dhcp-server** command

| Parameter     | Description   |
|---------------|---|
| SOLICIT in    | Displays the count of SOLICIT messages received by the DHCPv6 server. |
| ADVERTISE out | Displays the count of ADVERTISE messages sent by the DHCPv6 server.   |
| REQUEST in    | Displays the count of REQUEST messages received by the DHCPv6 server. |
| CONFIRM in    | Displays the count of CONFIRM messages received by the DHCPv6 server. |
| RENEW in      | Displays the count of RENEW messages received by the DHCPv6 server.   |

**Table 2:** Parameters in the output of the **show counter ipv6 dhcp-server** command (cont.)

| Parameter              | Description  |
|------------------------|--|
| REBIND in              | Displays the count of REBIND messages received by the DHCPv6 server.             |
| REPLY out              | Displays the count of REPLY messages sent by the DHCPv6 server.                  |
| RELEASE in             | Displays the count of RELEASE messages received by the DHCPv6 server.            |
| DECLINE in             | Displays the count of DECLINE messages received by the DHCPv6 server.            |
| INFORMATION-REQUEST in | Displays the count of INFORMATION-REQUEST messages received by the DHCPv6 server |

**Related Commands** [show counter ipv6 dhcp-client](#)

# show ipv6 dhcp

**Overview** Use this command in User Exec or Privileged Exec mode to show the DHCPv6 unique identifier (DUID) configured on your device.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 dhcp`

**Mode** User Exec and Privileged Exec

**Usage** The DUID is based on the link-layer address for both DHCPv6 client and DHCPv6 server identifiers. The device uses the MAC address from the lowest interface number for the DUID.

The DUID is used by a DHCPv6 client to obtain an IPv6 address from a DHCPv6 server. A DHCPv6 server compares the DUID with its database of DUIDs and sends configuration data for an IPv6 address plus the preferred and valid lease time values to a DHCPv6 client.

**Example** To display the DUID configured on your device, use the command:

```
awplus# show ipv6 dhcp
```

**Output** Figure 42-4: Example output from the **show ipv6 dhcp** command

```
awplus#show ipv6 dhcp
DHCPv6 Server DUID: 0001000117ab6876001577f7ba23
```

**Related Commands** [ipv6 address dhcp](#)

# show ipv6 dhcp binding

**Overview** Use this command in User Exec or Privileged Exec mode to show the IPv6 address entries that the DHCPv6 server leases to DHCPv6 clients. Note that applying this command with the optional *summary* keyword parameter displays the number of addresses per pool, but not the address or prefix entries per pool.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 dhcp binding [summary]`

| Parameter | Description  |
|-----------|--|
| summary   | Optional. Specify the <b>summary</b> keyword to display summarized information for DHCPv6 server leases to client nodes, displaying the number of address entries per pool, not the addresses or prefixes. |

**Mode** User Exec and Privileged Exec

**Example 1** To display the total DHCPv6 leasing address entries for all pools, use the command:

```
awplus# show ipv6 dhcp binding summary
```

**Output** Figure 42-5: Example output from the **show ipv6 dhcp binding summary** command

|  |                            |
|--|----------------------------|
| awplus# show ipv6 dhcp binding summary |                            |
| Pool Name                              | Number of Leased Addresses |
| -----                                  |                            |
| ia-na1                                 | 3                          |
| ia-pd1                                 | 5                          |
| Total in all Pools:                    | 8                          |

**Table 3:** Parameters in the output of the **show ipv6 dhcp binding summary** command

| Parameter                  | Description  |
|----------------------------|--|
| Pool Name                  | Displays a list of all the pool names.                             |
| Number of Leased Addresses | Displays the number of leased address entries for the pool.        |
| Total in all Pools         | Displays the total number of leased address entries for all pools. |

**Example 2** To display addresses, prefixes, and lifetimes for all DHCPv6 leasing entries by pool, enter:

```
awplus# show ipv6 dhcp binding
```

**Output** Figure 42-6: Example output from the **show ipv6 dhcp binding** command

```
awplus#show ipv6 dhcp binding
Pool ia-na1
  Address 2002:0:3c0::1
    client IAID 77f7ba23, DUID 0001000117c4bbb4001577f7ba23
    preferred lifetime 604800, valid lifetime 2592000
    starts at 20 Aug 2012 18:38:29
    expires at 19 Sep 2012 18:38:29
Pool ia-pd1
  Prefix 2002:0:3c0::/42
    client IAID 77f7ba23, DUID 0001000117c4bbb4001577f7ba23
    preferred lifetime 604800, valid lifetime 2592000
    starts at 20 Aug 2012 18:38:29
    expires at 19 Sep 2012 18:38:29
```

**Table 4:** Parameters in the output of the **showipv6 dhcp binding** command

| Parameter          | Description  |
|--------------------|--|
| Address            | Address delegated to the indicated IAID and DUID.<br>See the IAID and DUID descriptions below for further information.   |
| Prefix             | Prefix delegated to the indicated IAID and DUID.<br>See the IAID and DUID descriptions below for further information.  |
| DUID               | DHCPv6 unique identifier (DUID) (see RFC 3315).<br>Each DHCPv6 client has as DUID. DHCPv6 servers use DUIDs to identify clients for the association of IAs (Identity Associations) with DHCPv6 clients. DHCPv6 clients use DUIDs to identify a DHCPv6 server.  |
| IAID               | Identify Association Identifier (IAID) (see RFC 3315).<br>IAIDs are identifiers for IAs (Identity Associations), where an IA is a collection of IPv6 addresses assigned to a DHCPv6 client. Each IA has an associated IAD. Each DHCPv6 client may have more than one IA assigned to it. Each IA holds one type of address.   |
| preferred lifetime | The preferred lifetime setting in seconds for the specified IAID and DUID. Preferred IPv6 addresses or prefixes are available to interfaces for unrestricted use and are deprecated when the preferred timer expires. Deprecated IPv6 addresses and prefixes are available for use and are discouraged but not forbidden. A deprecated address or prefix should not be used as a source address or prefix, but packets sent from deprecated addresses or prefixes are delivered as expected. |
| valid lifetime     | The valid lifetime setting in seconds for the specified IAID and DUID. An IPv6 address or prefix becomes invalid and is not available to an interface when the valid lifetime timer expires. Invalid addresses or prefixes should not appear as the source or destination for a packet.  |

**Table 4:** Parameters in the output of the **showipv6 dhcp binding** command

| Parameter  | Description  |
|------------|--|
| starts at  | The date and time at which the valid lifetime expires. |
| expires at | The date and time at which the valid lifetime expires. |

**Related  
Commands**

- [clear ipv6 dhcp binding](#)
- [ipv6 dhcp pool](#)
- [show ipv6 dhcp pool](#)

# show ipv6 dhcp interface

**Overview** Use this command in User Exec or Privileged Exec mode to display DHCPv6 information for a specified interface, or all interfaces when entered without the interface parameter.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** show ipv6 dhcp interface [<interface-name>]

| Parameter        | Description  |
|------------------|--|
| <interface-name> | Optional. Specify the name of the interface to show DHCPv6 information about. Omit this optional parameter to display DHCPv6 information for all interfaces DHCPv6 is configured on. |

**Mode** User Exec and Privileged Exec

**Example1** To display DHCPv6 information for all interfaces DHCPv6 is configured on, use the command:

```
awplus# show ipv6 dhcp interface
```

**Output** Figure 42-7: Example output from the **show ipv6 dhcp interface** command

```
awplus# show ipv6 dhcp interface
vlan1 is in client mode
  Address 1001::3c0:1
        preferred lifetime 9000, valid lifetime 5000
        starts at 20 Jan 2012 09:21:35
        expires at 20 Jan 2012 10:25:32

vlan2
is in client (Prefix-Delegation) mode
  Prefix
  name pd1

        prefix 2002:0:3c0::/42

        preferred lifetime 604800, valid lifetime 2592000

        starts at 20 Aug 2012 09:21:33

        expires at 19 Sep 2012 09:21:33

vlan3
is in server mode
  Using
  pool : pool-1;
  Preference:
  0
```



**Example 2** To display DHCPv6 information for interface vlan2, use the command:

```
awplus# show ipv6 dhcp interface vlan2
```

**Output** Figure 42-8: Example output from the **show ipv6 dhcp interface vlan2** command

```
awplus# show ipv6 dhcp interface vlan2
vlan2 is in client (Prefix-Delegation) mode
Prefix name pd1
    prefix 2002:0:3c0::/42
    preferred lifetime 604800, valid lifetime 2592000
    starts at 20 Aug 2012 09:21:33
    expires at 19 Sep 2012 09:21:33
```

**Table 5:** Parameters in the output of the **show counter dhcp-client** command

| Parameter   | Description  |
|---|--|
| <interface> is in server/client/ (Prefix-Delegation) mode | Displays whether the specified interface is in server or client mode and whether prefix-delegation is applied to an interface. |
| Address   | Displays the address of the DHCPv6 server on the interface.  |
| Prefix name   | Displays the IPv6 general prefix pool name, where prefixes are stored for the interface.                                       |
| Using pool  | Displays the name of the pool used by the interface.   |
| Preference  | Displays the preference value for the DHCPv6 server.   |

**Related Commands** [ipv6 dhcp client pd](#)

# show ipv6 dhcp pool

**Overview** Use this command in User Exec or Privileged Exec mode to display the configuration details and system usage of the DHCPv6 address pools configured on the device.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

**Syntax** `show ipv6 dhcp pool [<DHCPv6-address-pool-name>]`

| Parameter                  | Description  |
|----------------------------|--|
| <DHCPv6-address-pool-name> | Name of a specific DHCPv6 address pool. This displays the configuration of the specified DHCPv6 address pool only. |

**Mode** User Exec and Privileged Exec

**Example** `awplus# show ipv6 dhcp pool`

**Output** Figure 42-9: Example output from the **show ipv6 dhcp pool** command

|  |
|--|
| awplus# show ipv6 dhcp pool                  |
| DHCPv6 Pool: ia-na                           |
| Address Prefix : 1001::/64                   |
| Lifetime: 2592000(valid), 604800(preferred)  |
| DNS Server: 2001::1                          |
| DNS Server: 2001::2                          |
| Domain Name: example.com                     |
| Domain Name: example.co.jp                   |
| SNTP Server: 2001::5                         |
| SNTP Server: 2001::6                         |
| Option Code : 150                            |
| Value: [ASCII] test-test                     |
| DHCPv6 Pool: ia-pd                           |
| PD Pool Name: pd1                            |
| Prefix : 2002::/38-42                        |
| Lifetime : 2592000(valid), 604800(preferred) |

**Table 6:** Parameters in the output of the **show ipv6dhcp pool** command

| Parameter      | Description                        |
|----------------|------------------------------------|
| DHCPv6 Pool    | Name of the DHCPv6 pool.           |
| Address Prefix | Address prefix to the DHCPv6 pool. |

**Table 6:** Parameters in the output of the **show ipv6dhcp pool** command (cont.)

| Parameter           | Description  |
|---------------------|--|
| Address<br>Lifetime | <p>Valid and preferred lifetimes to the DHCPv6 pool.</p> <p>Preferred IPv6 addresses or prefixes are available to interfaces for unrestricted use and are deprecated when the preferred timer expires.</p> <p>Deprecated IPv6 addresses and prefixes are available for use and are discouraged but not forbidden. A deprecated address or prefix should not be used as a source address or prefix, but packets sent from deprecated addresses or prefixes are delivered as expected.</p> <p>An IPv6 address or prefix becomes invalid and is not available to an interface when the valid lifetime timer expires. Invalid addresses or prefixes should not appear as the source or destination for a packet.</p> |
| DNS Server          | IPv6 address of the DNS Server   |
| Domain name         | URL for the domain name.   |
| SNTP Server         | IPv6 address of the SNTP (Simple Network Time Protocol) Server.  |
| Option Code         | DHCP Option code (see RFC 2132).   |
| Option Value        | DHCP Option value type (see RFC 2132).   |

**Related  
Commands**    [ipv6 dhcp pool](#)

# sntp-address

**Overview** Use this command in DHCPv6 Configuration mode to add an SNTP Server IPv6 address to a DHCPv6 Server pool.

Use the **no** variant of this command to remove an SNTP Server IPv6 address from a DHCPv6 Server pool.

**Syntax** `sntp-address <ipv6-address>`  
`no sntp-address <ipv6-address>`

| Parameter                         | Description  |
|-----------------------------------|--|
| <code>&lt;ipv6-address&gt;</code> | Specify an SNTP Server IPv6 address, in hexadecimal notation in the format <code>X:X::X:X</code> . |

**Mode** DHCPv6 Configuration

**Examples** The following example adds an SNTP Server IPv6 address of 2001:0db8::/32 to the DHCPv6 pool named P2:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(config-dhcp6)# sntp-address 2001:0db8::/32
```

The following example removes an SNTP Server IPv6 address of 2001:0db8::/32 to the DHCPv6 pool named P2:

```
awplus# configure terminal
awplus(config)# ipv6 dhcp pool P2
awplus(config-dhcp6)# no sntp-address 2001:0db8::/32
```

**Related Commands**

- [dns-server \(DHCPv6\)](#)
- [domain-name \(DHCPv6\)](#)
- [option \(DHCPv6\)](#)
- [show ipv6 dhcp pool](#)

# 43

# NTP Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure the Network Time Protocol (NTP). For more information, see the [NTP Feature Overview and Configuration Guide](#).

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

- Command List**
- [“ntp access-group”](#) on page 1802
  - [“ntp authenticate”](#) on page 1803
  - [“ntp authentication-key”](#) on page 1804
  - [“ntp broadcastdelay”](#) on page 1805
  - [“ntp master”](#) on page 1806
  - [“ntp peer”](#) on page 1807
  - [“ntp server”](#) on page 1809
  - [“ntp source”](#) on page 1811
  - [“ntp trusted-key”](#) on page 1813
  - [“show counter ntp”](#) on page 1814
  - [“show ntp associations”](#) on page 1816
  - [“show ntp status”](#) on page 1818

# ntp access-group

**Overview** This command creates an NTP access group, and applies a basic IP access list to it. This allows you to control access to NTP services.

The **no** variant of this command removes the configured NTP access group.

**Syntax** `ntp access-group [peer|query-only|serve|serve-only]`  
`[<1-99>|<1300-1999>]`  
`no ntp access-group [peer|query-only|serve|serve-only]`

| Parameter   | Description  |
|-------------|--|
| peer        | Allows time requests and NTP control queries, and allows the system to synchronize itself to a system whose address passes the access list criteria.         |
| query-only  | Allows only NTP control queries from a system whose address passes the access list criteria.   |
| serve       | Allows time requests and NTP control queries, but does not allow the system to synchronize itself to a system whose address passes the access list criteria. |
| serve-only  | Allows only time requests from a system whose address passes the access list criteria.   |
| <1-99>      | Standard IP access list.   |
| <1300-1999> | Expanded IP access list.   |

**Mode** Global Configuration

**Examples** To create an NTP peer access group for an extended IP access list, use the commands:

```
awplus# configure terminal
awplus(config)# ntp access-group peer 1998
```

To disable the NTP peer access group created above, use the commands:

```
awplus# configure terminal
awplus(config)# no ntp access-group peer
```

# ntp authenticate

**Overview** This command enables NTP authentication. This allows NTP to authenticate the associations with other systems for security purposes.

The **no** variant of this command disables NTP authentication.

**Syntax** ntp authenticate  
no ntp authenticate

**Mode** Global Configuration

**Examples** To enable NTP authentication, use the commands:

```
awplus# configure terminal  
awplus(config)# ntp authenticate
```

To disable NTP authentication, use the commands:

```
awplus# configure terminal  
awplus(config)# no ntp authenticate
```

# ntp authentication-key

**Overview** This command defines each of the authentication keys. Each key has a key number, a type, and a value. Currently, the only key type supported is MD5.

The **no** variant of this disables the authentication key assigned previously using **ntp authentication-key**.

**Syntax** `ntp authentication-key <keynumber> md5 <key>`  
`no ntp authentication-key <keynumber> md5 <key>`

| Parameter   | Description                    |
|-------------|--------------------------------|
| <keynumber> | <1-4294967295> The key number. |
| <key>       | The authentication key.        |

**Mode** Global Configuration

**Examples** To define an authentication key number 134343 and a key value `mystring`, use the commands:

```
awplus# configure terminal
awplus(config)# ntp authentication-key 134343 md5 mystring
```

To disable the authentication key number 134343 with the key value `mystring`, use the commands:

```
awplus# configure terminal
awplus(config)# no ntp authentication-key 134343 md5 mystring
```



# ntp broadcastdelay

**Overview** Use this command to set the estimated round-trip delay for broadcast packets. Use the **no** variant of this command to reset the round-trip delay for broadcast packets to the default offset of 0 microseconds.

**Syntax** `ntp broadcastdelay <delay>`  
`no ntp broadcastdelay`

| Parameter | Description                                     |
|-----------|---|
| <delay>   | <1-999999> The broadcast delay in microseconds. |

**Default** 0 microsecond offset, which can only be applied with the **no** variant of this command.

**Mode** Global Configuration

**Examples** To set the estimated round-trip delay to 23464 microseconds for broadcast packets, use these commands:

```
awplus# configure terminal
awplus(config)# ntp broadcastdelay 23464
```

To reset the estimated round-trip delay for broadcast packets to the default setting (0 microseconds), use these commands:

```
awplus# configure terminal
awplus(config)# no ntp broadcastdelay
```

# ntp master

**Overview** Use this command to make the device to be an authoritative NTP server, even if the system is not synchronized to an outside time source. Note that no stratum number is set by default.

Use the **no** variant of this command to stop the device being the designated NTP server.

**Syntax** `ntp master [<stratum>]`  
`no ntp master`

| Parameter | Description  |
|-----------|--|
| <stratum> | <1-15> The stratum number defines the configured level that is set for this master within the NTP hierarchy. |

**Mode** Global Configuration

**Usage** The stratum number is null by default and must be set using this command. The stratum levels define the distance from the reference clock and exist to prevent cycles in the hierarchy. Stratum 1 is used to indicate time servers, which are more accurate than Stratum 2 servers. For more information on the Network Time Protocol go to: [www.ntp.org](http://www.ntp.org)

**Examples** To stop the device from being the designated NTP server use the commands:

```
awplus# configure terminal
awplus(config)# no ntp master
```

To make the device the designated NTP server with stratum number 2 use the commands:

```
awplus# configure terminal
awplus(config)# ntp master 2
```

# ntp peer

**Overview** Use this command to configure an NTP peer association. An NTP association is a peer association if this system is willing to either synchronize to the other system, or allow the other system to synchronize to it.

Use the **no** variant of this command to remove the configured NTP peer association.

**Syntax** `ntp peer {<peeraddress>|<peername>}`  
`ntp peer {<peeraddress>|<peername>} [prefer] [key <key>]`  
`[version <version>]`  
`no ntp peer {<peeraddress>|<peername>}`

| Parameter         | Description  |
|-------------------|--|
| <peeraddress>     | Specify the IP address of the peer, entered in the form A.B.C.D for an IPv4 address, or in the form X:X:X:X for an IPv6 address. |
| <peername>        | Specify the peer hostname. The peer hostname can resolve to an IPv4 and an IPv6 address.   |
| prefer            | Prefer this peer when possible.  |
| key <key>         | <1-4294967295><br>Configure the peer authentication key.   |
| version <version> | <1-4><br>Configure for this NTP version.   |

**Mode** Global Configuration

**Examples** See the following commands for options to configure NTP peer association, key and NTP version for the peer with an IPv4 address of 192.0.2.23:

```
awplus# configure terminal
awplus(config)# ntp peer 192.0.2.23
awplus(config)# ntp peer 192.0.2.23 prefer
awplus(config)# ntp peer 192.0.2.23 prefer version 4
awplus(config)# ntp peer 192.0.2.23 prefer version 4 key 1234
awplus(config)# ntp peer 192.0.2.23 version 4 key 1234
awplus(config)# ntp peer 192.0.2.23 version 4
awplus(config)# ntp peer 192.0.2.23 key 1234
```

To remove an NTP peer association for this peer with an IPv4 address of 192.0.2.23, use the following commands:

```
awplus# configure terminal
awplus(config)# no ntp peer 192.0.2.23
```

See the following commands for options to configure NTP peer association, key and NTP version for the peer with an IPv6 address of 2001:0db8:010d::1:

```
awplus# configure terminal
awplus(config)# ntp peer 2001:0db8:010d::1
awplus(config)# ntp peer 2001:0db8:010d::1 prefer
awplus(config)# ntp peer 2001:0db8:010d::1 prefer version 4
awplus(config)# ntp peer 2001:0db8:010d::1 prefer version 4 key
1234
awplus(config)# ntp peer 2001:0db8:010d::1 version 4 key 1234
awplus(config)# ntp peer 2001:0db8:010d::1 version 4
awplus(config)# ntp peer 2001:0db8:010d::1 key 1234
```

To remove an NTP peer association for this peer with an IPv6 address of 2001:0db8:010d::1, use the following commands:

```
awplus# configure terminal
awplus(config)# no ntp peer 2001:0db8:010d::1
```

**Related  
Commands**   [ntp server](#)  
                  [ntp source](#)

# ntp server

**Overview** Use this command to configure an NTP server. This means that this system will synchronize to the other system, and not vice versa.

Use the **no** variant of this command to remove the configured NTP server.

**Syntax**

```
ntp server {<serveraddress>|<servername>}  
ntp server {<serveraddress>|<servername>} [prefer] [key <key>]  
[version <version>]  
no ntp server {<serveraddress>|<servername>}
```

| Parameter         | Description   |
|-------------------|---|
| <serveraddress>   | Specify the IP address of the peer, entered in the form A.B.C.D for an IPv4 address, or in the form X:X::X.X for an IPv6 address. |
| <servername>      | Specify the server hostname. The server hostname can resolve to an IPv4 and an IPv6 address.                                      |
| prefer            | Prefer this server when possible.   |
| key <key>         | <1-4294967295><br>Configure the server authentication key.  |
| version <version> | <1-4><br>Configure for this NTP version.  |

**Mode** Global Configuration

**Examples** See the following commands for options to configure an NTP server association, key and NTP version for the server with an IPv4 address of 192.0.1.23:

```
awplus# configure terminal  
awplus(config)# ntp server 192.0.1.23  
awplus(config)# ntp server 192.0.1.23 prefer  
awplus(config)# ntp server 192.0.1.23 prefer version 4  
awplus(config)# ntp server 192.0.1.23 prefer version 4 key 1234  
awplus(config)# ntp server 192.0.1.23 version 4 key 1234  
awplus(config)# ntp server 192.0.1.23 version 4  
awplus(config)# ntp server 192.0.1.23 key 1234
```

To remove an NTP peer association for this peer with an IPv4 address of 192.0.1.23, use the commands:

```
awplus# configure terminal  
awplus(config)# no ntp server 192.0.1.23
```

See the following commands for options to configure an NTP server association, key and NTP version for the server with an IPv6 address of 2001:0db8:010e::2:

```
awplus# configure terminal
awplus(config)# ntp server 2001:0db8:010e::2
awplus(config)# ntp server 2001:0db8:010e::2 prefer
awplus(config)# ntp server 2001:0db8:010e::2 prefer version 4
awplus(config)# ntp server 2001:0db8:010e::2 prefer version 4
key 1234
awplus(config)# ntp server 2001:0db8:010e::2 version 4 key 1234
awplus(config)# ntp server 2001:0db8:010e::2 version 4
awplus(config)# ntp server 2001:0db8:010e::2 key 1234
```

To remove an NTP peer association for this peer with an IPv6 address of 2001:0db8:010e::2, use the commands:

```
awplus# configure terminal
awplus(config)# no ntp server 2001:0db8:010e::2
```

**Related  
Commands**   [ntp peer](#)  
                  [ntp source](#)

# ntp source

**Overview** Use this command to configure an IPv4 or an IPv6 address for the NTP source interface. This command defines the socket used for NTP messages, and only applies to NTP client behavior.

Use the **no** variant of this command to remove the configured IPv4 or IPv6 address from the NTP source interface.

**Syntax** `ntp source <source-address>`  
`no ntp source`

| Parameter                           | Description   |
|-------------------------------------|---|
| <code>&lt;source-address&gt;</code> | Specify the IP address of the NTP source interface, entered in the form A.B.C.D for an IPv4 address, or in the form X:X::X:X for an IPv6 address. |

**Default** An IP address is selected based on the most appropriate egress interface used to reach the NTP peer if a configured NTP client source IP address is unavailable or is an invalid IP address.

**Mode** Global Configuration

**Usage** Adding an IPv4 or an IPv6 address allows you to select which source interface NTP uses for peering. The IPv4 or IPv6 address configured using this command is matched to the interface.

When selecting a source IP address to use for NTP messages to the peer, if the configured NTP client source IP address is unavailable then default behavior will apply, and an alternative source IP address is automatically selected. This IP address is based on the most appropriate egress interface used to reach the NTP peer. The configured NTP client source IP may be unavailable if the interface is down, or an invalid IP address is configured that does not reside on the device.

Note that this command only applies to NTP client behavior. The egress interface that the NTP messages use to reach the NTP server determined by the [ntp peer](#) and [ntp server](#) commands.

**Examples** To configure the NTP source interface with the IPv4 address 192.0.2.23, enter the commands:

```
awplus# configure terminal
awplus(config)# ntp source 192.0.2.23
```

To configure the NTP source interface with the IPv6 address 2001:0db8:010e::2, enter the commands:

```
awplus# configure terminal
awplus(config)# ntp source 2001:0db8:010e::2
```

To remove a configured address for the NTP source interface, use the following commands:

```
awplus# configure terminal  
awplus(config)# no ntp source
```

**Related  
Commands**   [ntp peer](#)  
                  [ntp server](#)



# ntp trusted-key

**Overview** This command defines a list of trusted authentication keys. If a key is trusted, this system will be ready to synchronize to a system that uses this key in its NTP packets.

Use the **no** variant of this command to remove a configured trusted authentication key.

**Syntax** ntp trusted-key <1-4294967295>  
no ntp trusted-key <1-4294967295>

| Parameter      | Description              |
|----------------|--------------------------|
| <1-4294967295> | The specific key number. |

**Mode** Global Configuration

**Examples** To define a trusted authentication key numbered 234675, use the following commands:

```
awplus# configure terminal
awplus(config)# ntp trusted-key 234676
```

To remove the trusted authentication key numbered 234675, use the following commands:

```
awplus# configure terminal
awplus(config)# no ntp trusted-key 234676
```

# show counter ntp

**Overview** This command displays packet counters for NTP.

**Syntax** show counter ntp

**Mode** User Exec and Privileged Exec

**Example** To display counters for NTP use the command:

```
awplus# show counter ntp
```

Figure 43-1: Example output from **show counter ntp**

|                      |       |       |
|----------------------|-------|-------|
| NTP counters         |       |       |
| Pkts Sent            | ..... | 0     |
| Pkts Received        | ..... | 70958 |
| Pkts Processed       | ..... | 0     |
| Pkts current version | ..... | 0     |
| Pkts old version     | ..... | 0     |
| Pkts unknown version | ..... | 0     |
| Pkts access denied   | ..... | 70958 |
| Pkts bad length      | ..... | 0     |
| Pkts bad auth        | ..... | 0     |
| Pkts rate exceed     | ..... | 0     |

Table 43-1: Parameters in the output from **show counter ntp**

| Parameter            | Description  |
|----------------------|--|
| Pkts Sent            | Total number of NTP client and server packets sent by your device.   |
| Pkts Received        | Total number of NTP client and server packets received by your device.   |
| Pkts Processed       | The number of packets processed by NTP. NTP processes a packet once it has determined that the packet is valid by checking factors such as the packet's authentication, format, access rights and version. |
| Pkts current version | The number of version 4 NTP packets received.  |
| Pkts old version     | The number of NTP packets received that are from an older version, down to version 1, of NTP. NTP is compatible with these versions and processes these packets.   |
| Pkts unknown version | The number of NTP packets received that are an earlier version than version 1, or a higher version than version 4. NTP cannot process these packets.   |

Table 43-1: Parameters in the output from **show counter ntp** (cont.)

| Parameter          | Description  |
|--------------------|--|
| Pkts access denied | The number of NTP packets received that do not match any access list statements in the NTP access-groups. NTP drops these packets.   |
| Pkts bad length    | The number of NTP packets received that do not conform to the standard packet length. NTP drops these packets.   |
| Pkts bad auth      | The number of NTP packets received that failed authentication. NTP drops these packets. Packets can only fail authentication if NTP authentication is enabled with the <a href="#">ntp authenticate</a> command. |
| Pkts rate exceed   | The number of packets dropped because the packet rate exceeded its limits.   |

# show ntp associations

**Overview** Use this command to display the status of NTP associations. Use the detail option for displaying detailed information about the associations.

**Syntax** show ntp associations [detail]

**Mode** User Exec and Privileged Exec

**Example** See the sample output of the **show ntp associations** and **show ntp associations detail** commands displaying the status of NTP associations.

**Table 44:** Example output from the **show ntp associations** command

```
awplus#show ntp associations
address      ref clock      st when poll reach  delay  offset  disp
~192.0.2.23  INIT          16   -   512  000   0.0    0.0    0.0
* master (syncd), # master (unsyncd), + selected, - candidate, ~ configured
awplus#
```

**Table 45:** Example output from the **show ntp associations detail** command

```
awplus#show ntp associations detail
192.0.2.23 configured, sane, valid, leap_sub, stratum 16
ref ID INIT, time 00000000.00000000 (06:28:16.000 UTC Thu Feb  7 2036)
our mode client, peer mode unspec, our poll intvl 512, peer poll intvl 1024
root delay 0.00 msec, root disp 0.00, reach 000,
delay 0.00 msec, offset 0.0000 msec, dispersion 0.00
precision 2**-19,
org time 00000000.00000000 (06:28:16.000 UTC Thu Feb  7 2036)
rcv time 00000000.00000000 (06:28:16.000 UTC Thu Feb  7 2036)
xmt time cff1f2a4.cedde5e4 (00:39:00.808 UTC Tue Feb  2 2010)
filtdelay =  0.00  0.00  0.00  0.00  0.00  0.00  0.00  0.00
filtoffset =  0.00  0.00  0.00  0.00  0.00  0.00  0.00  0.00
filtererror = 16000.00 16000.00 16000.00 16000.00 16000.00 16000.00 16000.00
0 16000.00
```

**Table 46:** Parameters in the output from the **show ntp associations** command

| Parameter | Description  |
|-----------|--|
| address   | Peer IP address  |
| ref clock | IP address for reference clock   |
| st        | Stratum. The number of hops between the server and the accurate time source. |
| poll      | Time between NTP requests from the device to the server.                     |

**Table 46:** Parameters in the output from the **show ntp associations** command

| Parameter | Description   |
|-----------|---|
| reach     | Shows whether or not the NTP server responded to the last request.  |
| delay     | Round trip delay between the device and the server.                 |
| offset    | Difference between the device clock and the server clock.           |
| disp      | Lowest measure of error associated with peer offset based on delay. |

# show ntp status

**Overview** Use this command to display the status of the Network Time Protocol (NTP).

**Syntax** show ntp status

**Mode** User Exec and Privileged Exec

**Example** See the sample output of the **show ntp status** command displaying information about the Network Time Protocol.

Figure 43-2: Example output from the **show ntp status** command

```
awplus#sh ntp status
Clock is synchronized, stratum 3, reference is 127.127.1.0
actual frequency is 0.0000 Hz, precision is 2**-19
reference time is cf11f3f2.c7c081a1 (00:44:34.780 UTC Tue Feb 2
2010)
clock offset is 0.000 msec, root delay is 0.000 msec
root dispersion is 7947729.000 msec,
awplus#
```

# 44

# SNMP Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure SNMP. For more information, see:

- the [Support for Allied Telesis Enterprise\\_MIBs in AlliedWare Plus](#), for information about which MIB objects are supported.
- the [SNMP Feature Overview and Configuration\\_Guide](#).

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

- Command List**
- [“debug snmp”](#) on page 1821
  - [“show counter snmp-server”](#) on page 1822
  - [“show debugging snmp”](#) on page 1826
  - [“show running-config snmp”](#) on page 1827
  - [“show snmp-server”](#) on page 1828
  - [“show snmp-server community”](#) on page 1829
  - [“show snmp-server group”](#) on page 1830
  - [“show snmp-server user”](#) on page 1831
  - [“show snmp-server view”](#) on page 1832
  - [“snmp trap link-status”](#) on page 1833
  - [“snmp trap link-status suppress”](#) on page 1835
  - [“snmp-server”](#) on page 1837
  - [“snmp-server community”](#) on page 1839
  - [“snmp-server contact”](#) on page 1840
  - [“snmp-server enable trap”](#) on page 1841

- [“snmp-server engineID local”](#) on page 1844
- [“snmp-server engineID local reset”](#) on page 1846
- [“snmp-server group”](#) on page 1847
- [“snmp-server host”](#) on page 1849
- [“snmp-server legacy-ifadminstatus”](#) on page 1851
- [“snmp-server location”](#) on page 1852
- [“snmp-server source-interface”](#) on page 1853
- [“snmp-server startup-trap-delay”](#) on page 1854
- [“snmp-server user”](#) on page 1855
- [“snmp-server view”](#) on page 1858
- [“undebbug snmp”](#) on page 1859



# debug snmp

**Overview** This command enables SNMP debugging.

The **no** variant of this command disables SNMP debugging.

**Syntax** debug snmp  
[all|detail|error-string|process|receive|send|xdump]

no debug snmp  
[all|detail|error-string|process|receive|send|xdump]

| Parameter    | Description   |
|--------------|---|
| all          | Enable or disable the display of all SNMP debugging information.                          |
| detail       | Enable or disable the display of detailed SNMP debugging information.                     |
| error-string | Enable or disable the display of debugging information for SNMP error strings.            |
| process      | Enable or disable the display of debugging information for processed SNMP packets.        |
| receive      | Enable or disable the display of debugging information for received SNMP packets.         |
| send         | Enable or disable the display of debugging information for sent SNMP packets.             |
| xdump        | Enable or disable the display of hexadecimal dump debugging information for SNMP packets. |

**Mode** Privileged Exec and Global Configuration

**Example** To start SNMP debugging, use the command:

```
awplus# debug snmp
```

To start SNMP debugging, showing detailed SNMP debugging information, use the command:

```
awplus# debug snmp detail
```

To start SNMP debugging, showing all SNMP debugging information, use the command:

```
awplus# debug snmp all
```

**Related Commands** [show debugging snmp](#)  
[terminal monitor](#)  
[undebug snmp](#)

# show counter snmp-server

**Overview** This command displays counters for SNMP messages received by the SNMP agent.

**Syntax** `show counter snmp-server`

**Mode** User Exec and Privileged Exec

**Example** To display the counters for the SNMP agent, use the command:

```
awplus# show counter snmp-server
```

**Output** Figure 44-1: Example output from the **show counter snmp-server** command

```
SNMP-SERVER counters
inPkts                ..... 11
inBadVersions         ..... 0
inBadCommunityNames   ..... 0
inBadCommunityUses    ..... 0
inASNParseErrs       ..... 0
inTooBigs             ..... 0
inNoSuchNames         ..... 0
inBadValues           ..... 0
inReadOnlys          ..... 0
inGenErrs             ..... 0
inTotalReqVars        ..... 9
inTotalSetVars        ..... 0
inGetRequests         ..... 2
inGetNexts           ..... 9
inSetRequests         ..... 0
inGetResponses        ..... 0
inTraps              ..... 0
outPkts              ..... 11
outTooBigs           ..... 0
outNoSuchNames       ..... 2
outBadValues         ..... 0
outGenErrs           ..... 0
outGetRequests       ..... 0
outGetNexts         ..... 0
outSetRequests       ..... 0
outGetResponses      ..... 11
outTraps             ..... 0
UnsupportedSecLevels ..... 0
NotInTimeWindows     ..... 0
UnknownUserNames     ..... 0
UnknownEngineIDs     ..... 0
WrongDigest          ..... 0
DecryptionErrors     ..... 0
UnknownSecModels     ..... 0
InvalidMsgs          ..... 0
UnknownPDUHandlers   ..... 0
```

**Table 1:** Parameters in the output of the **show counter snmp-server** command

| Parameter           | Meaning  |
|---------------------|--|
| inPkts              | The total number of SNMP messages received by the SNMP agent.  |
| inBadVersions       | The number of messages received by the SNMP agent for an unsupported SNMP version. It drops these messages. The SNMP agent on your device supports versions 1, 2C, and 3.  |
| inBadCommunityNames | The number of messages received by the SNMP agent with an unrecognized SNMP community name. It drops these messages.   |
| inBadCommunityUses  | The number of messages received by the SNMP agent where the requested SNMP operation is not permitted from SNMP managers using the SNMP community named in the message.  |
| inASNParseErrs      | The number of ASN.1 or BER errors that the SNMP agent has encountered when decoding received SNMP Messages.  |
| inTooBigs           | The number of SNMP PDUs received by the SNMP agent where the value of the error-status field is 'tooBig'. This is sent by an SNMP manager to indicate that an exception occurred when processing a request from the agent.   |
| inNoSuchNames       | The number of SNMP PDUs received by the SNMP agent where the value of the error-status field is 'noSuchName'. This is sent by an SNMP manager to indicate that an exception occurred when processing a request from the agent.   |
| inBadValues         | The number of SNMP PDUs received by the SNMP agent where the value of the error-status field is 'badValue'. This is sent by an SNMP manager to indicate that an exception occurred when processing a request from the agent.   |
| inReadOnlys         | The number of valid SNMP PDUs received by the SNMP agent where the value of the error-status field is 'readOnly'. The SNMP manager should not generate a PDU which contains the value 'readOnly' in the error-status field. This indicates that there is an incorrect implementations of the SNMP. |
| inGenErrs           | The number of SNMP PDUs received by the SNMP agent where the value of the error-status field is 'genErr'.  |

**Table 1:** Parameters in the output of the **show counter snmp-server** command

| Parameter      | Meaning  |
|----------------|--|
| inTotalReqVars | The number of MIB objects that the SNMP agent has successfully retrieved after receiving valid SNMP Get-Request and Get-Next PDUs.   |
| inTotalSetVars | The number of MIB objects that the SNMP agent has successfully altered after receiving valid SNMP Set-Request PDUs.  |
| inGetRequests  | The number of SNMP Get-Request PDUs that the SNMP agent has accepted and processed.  |
| inGetNexts     | The number of SNMP Get-Next PDUs that the SNMP agent has accepted and processed.   |
| inSetRequests  | The number of SNMP Set-Request PDUs that the SNMP agent has accepted and processed.  |
| inGetResponses | The number of SNMP Get-Response PDUs that the SNMP agent has accepted and processed.   |
| inTraps        | The number of SNMP Trap PDUs that the SNMP agent has accepted and processed.   |
| outPkts        | The number of SNMP Messages that the SNMP agent has sent.  |
| outTooBigs     | The number of SNMP PDUs that the SNMP agent has generated with the value 'tooBig' in the error-status field. This is sent to the SNMP manager to indicate that an exception occurred when processing a request from the manager.     |
| outNoSuchNames | The number of SNMP PDUs that the SNMP agent has generated with the value 'noSuchName' in the error-status field. This is sent to the SNMP manager to indicate that an exception occurred when processing a request from the manager. |
| outBadValues   | The number of SNMP PDUs that the SNMP agent has generated with the value 'badValue' in the error-status field. This is sent to the SNMP manager to indicate that an exception occurred when processing a request from the manager.   |
| outGenErrs     | The number of SNMP PDUs that the SNMP agent has generated with the value 'genErr' in the error-status field. This is sent to the SNMP manager to indicate that an exception occurred when processing a request from the manager.     |
| outGetRequests | The number of SNMP Get-Request PDUs that the SNMP agent has generated.   |

**Table 1:** Parameters in the output of the **show counter snmp-server** command

| Parameter            | Meaning   |
|----------------------|---|
| outGetNexts          | The number of SNMP Get-Next PDUs that the SNMP agent has generated.   |
| outSetRequests       | The number of SNMP Set-Request PDUs that the SNMP agent has generated.  |
| outGetResponses      | The number of SNMP Get-Response PDUs that the SNMP agent has generated.   |
| outTraps             | The number of SNMP Trap PDUs that the SNMP agent has generated.   |
| UnsupportedSecLevels | The number of received packets that the SNMP agent has dropped because they requested a securityLevel unknown or not available to the SNMP agent. |
| NotInTimeWindows     | The number of received packets that the SNMP agent has dropped because they appeared outside of the authoritative SNMP agent's window.            |
| UnknownUserNames     | The number of received packets that the SNMP agent has dropped because they referenced an unknown user.   |
| UnknownEngineIDs     | The number of received packets that the SNMP agent has dropped because they referenced an unknown snmpEngineID.                                   |
| WrongDigest          | The number of received packets that the SNMP agent has dropped because they didn't contain the expected digest value.                             |
| DecryptionErrors     | The number of received packets that the SNMP agent has dropped because they could not be decrypted.   |
| UnknownSecModels     | The number of messages received that contain a security model that is not supported by the server. Valid for SNMPv3 messages only.                |
| InvalidMsgs          | The number of messages received where the security model is supported but the authentication fails. Valid for SNMPv3 messages only.               |
| UnknownPDUHandlers   | The number of times the SNMP handler has failed to process a PDU. This is a system debugging counter.   |

**Related Commands** [show snmp-server](#)

# show debugging snmp

**Overview** This command displays whether SNMP debugging is enabled or disabled.

**Syntax** show debugging snmp

**Mode** User Exec and Privileged Exec

**Example** To display the status of SNMP debugging, use the command:

```
awplus# show debugging snmp
```

**Output** Figure 44-2: Example output from the **show debugging snmp** command

```
Sntp (SMUX) debugging status:  
Sntp debugging is on
```

**Related  
Commands** [debug snmp](#)

# show running-config snmp

**Overview** This command displays the current configuration of SNMP on your device.

**Syntax** `show running-config snmp`

**Mode** Privileged Exec

**Example** To display the current configuration of SNMP on your device, use the command:

```
awplus# show running-config snmp
```

**Output** Figure 44-3: Example output from the **show running-config snmp** command

```
snmp-server contact AlliedTelesis
snmp-server location Philippines
snmp-server group grou1 auth read view1 write view1 notify view1
snmp-server view view1 1 included
snmp-server community public
snmp-server user user1 group1 auth md5 password priv des
password
```

**Related  
Commands** [show snmp-server](#)

# show snmp-server

**Overview** This command displays the status and current configuration of the SNMP server.

**Syntax** `show snmp-server`

**Mode** Privileged Exec

**Example** To display the status of the SNMP server, use the command:

```
awplus# show snmp-server
```

**Output** Figure 44-4: Example output from the **show snmp-server** command

```
SNMP Server ..... Enabled
IP Protocol ..... IPv4
SNMPv3 Engine ID (configured name) ... Not set
SNMPv3 Engine ID (actual) ..... 0x80001f888021338e4747b8e607
```

**Related Commands**

- `debug snmp`
- `show counter snmp-server`
- `snmp-server`
- `snmp-server engineID local`
- `snmp-server engineID local reset`



# show snmp-server community

**Overview** This command displays the SNMP server communities configured on the device. SNMP communities are specific to v1 and v2c.

**Syntax** `show snmp-server community`

**Mode** Privileged Exec

**Example** To display the SNMP server communities, use the command:

```
awplus# show snmp-server community
```

**Output** Figure 44-5: Example output from the **show snmp-server community** command

```
SNMP community information:
Community Name ..... public
Access ..... Read-only
View ..... none
```

**Related Commands** [show snmp-server](#)  
[snmp-server community](#)

# show snmp-server group

**Overview** This command displays information about SNMP server groups. This command is used with SNMP version 3 only.

**Syntax** `show snmp-server group`

**Mode** Privileged Exec

**Example** To display the SNMP groups configured on the device, use the command:

```
awplus# show snmp-server group
```

**Output** Figure 44-6: Example output from the **show snmp-server group** command

```
SNMP group information:
  Group name ..... guireadgroup
    Security Level ..... priv
    Read View ..... guiview
    Write View ..... none
    Notify View ..... none

  Group name ..... guiwritegroup
    Security Level ..... priv
    Read View ..... none
    Write View ..... guiview
    Notify View ..... none
```

**Related Commands** [show snmp-server](#)  
[snmp-server group](#)

# show snmp-server user

**Overview** This command displays the SNMP server users and is used with SNMP version 3 only.

**Syntax** `show snmp-server user`

**Mode** Privileged Exec

**Example** To display the SNMP server users configured on the device, use the command:

```
awplus# show snmp-server user
```

**Output** Figure 44-7: Example output from the **show snmp-server user** command

| Name   | Group name   | Auth  | Privacy |
|--------|--------------|-------|---------|
| -----  | -----        | ----- | -----   |
| freddy | guireadgroup | none  | none    |

**Related  
Commands** [show snmp-server](#)  
[snmp-server user](#)

# show snmp-server view

**Overview** This command displays the SNMP server views and is used with SNMP version 3 only.

**Syntax** `show snmp-server view`

**Mode** Privileged Exec

**Example** To display the SNMP server views configured on the device, use the command:

```
awplus# show snmp-server view
```

**Output** Figure 44-8: Example output from the **show snmp-server view** command

```
SNMP view information:
View Name ..... view1
OID ..... 1
Type ..... included
```

**Related Commands** [show snmp-server](#)  
[snmp-server view](#)

# snmp trap link-status

**Overview** Use this command to enable SNMP to send link status notifications (traps) for the interfaces when an interface goes up (linkUp) or down (linkDown).

Use the **no** variant of this command to disable the sending of link status notifications.

**Syntax** `snmp trap link-status [enterprise]`  
`no snmp trap link-status`

| Parameter  | Description  |
|------------|--|
| enterprise | Send an Allied Telesis enterprise type of link trap. |

**Default** By default, link status notifications are disabled.

**Mode** Interface Configuration

**Usage** The link status notifications can be enabled for the following interface types:

- switch port (e.g. port 1.0.1)
- VLAN (e.g. vlan2)
- static and dynamic link aggregation (e.g. sa2, po2)

To specify where notifications are sent, use the [snmp-server host](#) command. To configure the device globally to send other notifications, use the [snmp-server enable trap](#) command.

**Examples** To enable SNMP to send link status notifications for ports 1.0.2 to 1.0.6, use following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2-1.0.6
awplus(config-if)# snmp trap link-status
```

To enable SNMP to send an Allied Telesis enterprise type of link status notification for port1.0.1, use following commands:

```
awplus# configure terminal
awplus(config)# interface 1.0.1
awplus(config-if)# snmp trap link-status enterprise
```

To disable the sending of link status notifications for port 1.0.2, use following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no snmp trap link-status
```

**Related  
Commands**

- show interface
- snmp trap link-status suppress
- snmp-server enable trap
- snmp-server host

# snmp trap link-status suppress

**Overview** Use this command to enable the suppression of link status notifications (traps) for the interfaces beyond the specified threshold, in the specified interval.

Use the **no** variant of this command to disable the suppression of link status notifications for the ports.

**Syntax** `snmp trap link-status suppress {time {<1-60>|default}|threshold {<1-20>|default}}`

`no snmp trap link-status suppress`

| Parameter | Description   |
|-----------|---|
| time      | Set the suppression timer for link status notifications.  |
| <1-60>    | The suppress time in seconds.   |
| default   | The default suppress time in seconds (60).  |
| threshold | Set the suppression threshold for link status notifications. This is the number of link status notifications after which to suppress further notifications within the suppression timer interval. |
| <1-20>    | The number of link status notifications.  |
| default   | The default number of link status notifications (20).   |

**Default** By default, if link status notifications are enabled (they are enabled by default), the suppression of link status notifications is enabled: notifications that exceed the notification threshold (default 20) within the notification timer interval (default 60 seconds) are not sent.

**Mode** Interface Configuration

**Usage** An unstable network can generate many link status notifications. When notification suppression is enabled, a suppression timer is started when the first link status notification of a particular type (linkUp or linkDown) is sent for an interface. If the threshold number of notifications of this type is sent before the timer reaches the suppress time, any further notifications of this type generated for the interface during the interval are not sent. At the end of the interval, the sending of link status notifications resumes, until the threshold is reached in the next interval.

**Examples** To enable the suppression of link status notifications for ports 1.0.2 to 1.0.6 after 10 notifications have been sent in 40 seconds, use following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2-1.0.6
awplus(config-if)# snmp trap link-status suppress time 40
threshold 10
```

To disable the suppression link status notifications for port 1.0.2, use following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no snmp trap link-status suppress
```

**Related  
Commands**

- [show interface](#)
- [snmp trap link-status](#)



# snmp-server

**Overview** Use this command to enable the SNMP agent (server) on the device. The SNMP agent receives and processes SNMP packets sent to the device, and generates notifications (traps) that have been enabled by the [snmp-server enable trap](#) command.

Use the **no** variant of this command to disable the SNMP agent on the device. When SNMP is disabled, SNMP packets received by the device are discarded, and no notifications are generated. This does not remove any existing SNMP configuration.

**Syntax** `snmp-server [ip|ipv6]`  
`no snmp-server [ip|ipv6]`

| Parameter | Description                                |
|-----------|--|
| ip        | Enable or disable the SNMP agent for IPv4. |
| ipv6      | Enable or disable the SNMP agent for IPv6. |

**Default** By default, the SNMP agent is enabled for both IPv4 and IPv6. If neither the **ip** parameter nor the **ipv6** parameter is specified for this command, then SNMP is enabled or disabled for both IPv4 and IPv6.

**Mode** Global Configuration

**Examples** To enable SNMP on the device for both IPv4 and IPv6, use the commands:

```
awplus# configure terminal
awplus(config)# snmp-server
```

To enable the SNMP agent for IPv4 on the device, use the commands:

```
awplus# configure terminal
awplus(config)# snmp-server ip
```

To disable the SNMP agent for both IPv4 and IPv6 on the device, use the commands:

```
awplus# configure terminal
awplus(config)# no snmp-server
```

To disable the SNMP agent for IPv4, use the commands:

```
awplus(config)# no snmp-server ipv4
```

**Related  
Commands**

- show snmp-server
- show snmp-server community
- show snmp-server user
- snmp-server community
- snmp-server contact
- snmp-server enable trap
- snmp-server engineID local
- snmp-server group
- snmp-server host
- snmp-server location
- snmp-server view

# snmp-server community

**Overview** This command creates an SNMP community, optionally setting the access mode for the community. The default access mode is read only. If view is not specified, the community allows access to all the MIB objects. The SNMP communities are only valid for SNMPv1 and v2c and provide very limited security. Communities should not be used when operating SNMPv3.

The **no** variant of this command removes an SNMP community. The specified community must already exist on the device.

**Syntax** `snmp-server community <community-name> {view <view-name>|ro|rw|<access-list>}`  
`no snmp-server community <community-name> [{view <view-name>|<access-list>}]`

| Parameter        | Description  |
|------------------|--|
| <community-name> | Community name. The community name is a case sensitive string of up to 20 characters.              |
| view             | Configure SNMP view. If view is not specified, the community allows access to all the MIB objects. |
| <view-name>      | View name. The view name is a string up to 20 characters long and is case sensitive.               |
| ro               | Read-only community.   |
| rw               | Read-write community.  |
| <access-list>    | <1-99> Access list number.   |

**Mode** Global Configuration

**Example** The following command creates an SNMP community called “public” with read only access to all MIB variables from any management station.

```
awplus# configure terminal
awplus(config)# snmp-server community public ro
```

The following command removes an SNMP community called “public”

```
awplus# configure terminal
awplus(config)# no snmp-server community public
```

**Related Commands** [show snmp-server](#)  
[show snmp-server community](#)  
[snmp-server view](#)

# snmp-server contact

**Overview** This command sets the contact information for the system. The contact name is:

- displayed in the output of the [show system](#) command
- stored in the MIB object sysContact

The **no** variant of this command removes the contact information from the system.

**Syntax** `snmp-server contact <contact-info>`  
`no snmp-server contact`

| Parameter                         | Description   |
|-----------------------------------|---|
| <code>&lt;contact-info&gt;</code> | The contact information for the system, from 0 to 255 characters long. Valid characters are any printable character and spaces. |

**Mode** Global Configuration

**Example** To set the system contact information to “support@alliedtelesis.co.nz”, use the command:

```
awplus# configure terminal
awplus(config)# snmp-server contact
support@alliedtelesis.co.nz
```

**Related Commands** [show system](#)  
[snmp-server location](#)  
[snmp-server group](#)

# snmp-server enable trap

**Overview** Use this command to enable the switch to transmit the specified notifications (traps).

Note that the Environmental Monitoring traps defined in the AT-ENVMONv2-MIB are enabled by default.

Use the **no** variant of this command to disable the transmission of the specified notifications.

**Syntax**

```
snmp-server enable trap {[atmf]
[atmflink] [atmfnode] [atmfrr] [auth] [dhcpsnooping]
[epsr] [lldp] [loopprot] [mstp] [nsm] [ospf]
[pim] [power-inline] [qsp] [rmon] [thrash-limit] [vcs] [vrrp]}

no snmp-server enable trap {[atmf]
[atmflink] [atmfnode] [atmfrr] [auth] [dhcpsnooping]
[epsr] [lldp] [loopprot] [mstp] [nsm] [ospf]
[pim] [power-inline] [qsp] [rmon] [thrash-limit] [vcs] [vrrp]}
```

| Parameter    | Description   |
|--------------|---|
| atmf         | AMF traps.  |
| atmflink     | AMF Link traps.   |
| atmfnode     | AMF Node traps.   |
| atmfrr       | AMF Reboot Rolling traps.   |
| auth         | Authentication failure.   |
| dhcpsnooping | DHCP snooping and ARP security traps. These notifications must also be set using the <a href="#">ip dhcp snooping violation</a> command, and/or the <a href="#">arp security violation</a> command.   |
| epsr         | EPSR traps.   |
| lldp         | Link Layer Discovery Protocol (LLDP) traps. These notifications must also be enabled using the <a href="#">lldp notifications</a> command, and/or the <a href="#">lldp med-notifications</a> command. |
| loopprot     | Loop Protection traps.  |
| mstp         | MSTP traps.   |
| nsm          | NSM traps.  |
| ospf         | OSPF traps.   |
| pim          | PIM traps.  |
| power-inline | Power-inline traps (Power Ethernet MIB RFC 3621).   |
| qsp          | QoS Storm Protection  |
| rmon         | RMON traps.   |
| thrash-limit | MAC address Thrash Limiting traps.  |

| Parameter | Description                             |
|-----------|---|
| vcs       | VCS traps.                              |
| vrrp      | Virtual Router Redundancy (VRRP) traps. |

**Default** By default, no notifications are generated.

**Mode** Global Configuration

**Usage** This command cannot be used to enable link status notifications globally. To enable link status notifications for particular interfaces, use the [snmp trap link-status](#) command.

To specify where notifications are sent, use the [snmp-server host](#) command.

Note that more than one trap can be configured with one command entry, and also note this command applied to notifications send by SNMP version 3.

**Examples** To enable the device to send a notification if an AMF node changes its status, use the following commands:

```
awplus# configure terminal
awplus(config)# snmp-server enable trap atmfnode
```

To enable the device to send PoE related traps, use the following commands:

```
awplus# configure terminal
awplus(config)# snmp-server enable trap power-inline
```

To disable PoE traps being sent out by the device, use the following commands:

```
awplus# configure terminal
awplus(config)# no snmp-server enable power-inline
```

To enable the device to send MAC address Thrash Limiting traps, use the following commands:

```
awplus# configure terminal
awplus(config)# snmp-server enable trap thrash-limit
```

To disable the device from sending MAC address Thrash Limiting traps, use the following commands:

```
awplus# configure terminal
awplus(config)# no snmp-server enable trap thrash-limit
```

To enable the device to send OSPF and VRRP-related traps, use the following commands:

```
awplus# configure terminal
awplus(config)# snmp-server enable trap ospf vrrp
```

To disable OSPF traps being sent out by the device, use the following commands:

```
awplus# configure terminal
awplus(config)# no snmp-server enable trap ospf
```

**Related  
Commands**

show snmp-server  
show ip dhcp snooping  
snmp trap link-status  
snmp-server host

# snmp-server engineID local

**Overview** Use this command to configure the SNMPv3 engine ID. The SNMPv3 engine ID is used to uniquely identify the SNMPv3 agent on a device when communicating with SNMP management clients. Once an SNMPv3 engine ID is assigned, this engine ID is permanently associated with the device until you change it.

Use the **no** variant of this command to set the user defined SNMPv3 engine ID to a system generated pseudo-random value by resetting the SNMPv3 engine. The **no snmp-server engineID local** command has the same effect as the **snmp-server engineID local default** command. Note that the [snmp-server engineID local reset](#) command is used to force the system to generate a new engine ID when the current engine ID is also system generated.

**Syntax** `snmp-server engineID local {<engine-id>|default}`  
`no snmp-server engineID local`

| Parameter   | Description  |
|-------------|--|
| <engine-id> | Specify SNMPv3 Engine ID value, a string of up to 27 characters.   |
| default     | Set SNMPv3 engine ID to a system generated value by resetting the SNMPv3 engine, provided the current engine ID is user defined. If the current engine ID is system generated, use the <a href="#">snmp-server engineID local reset</a> command to force the system to generate a new engine ID. |

**Mode** Global Configuration

**Usage** All devices must have a unique engine ID which is permanently set unless it is configured by the user.

In a stacked environment, if the same engine ID was automatically generated for all members of the stack, conflicts would occur if the stack was dismantled. Therefore, each member of the stack will generate its own engine ID and the stack master's ID is used when transmitting SNMPv3 packets. Should a master failover occur, a different engine ID is transmitted. You can modify this behavior by manually assigning all stack members the same engine ID using the [snmp-server engineID local](#) command. However, should you decide to separate the stack and use the devices individually, you must remember to change or remove this configuration to prevent conflicts.

**Example** To set the SNMPv3 engine ID to 800000cf030000cd123456, use the following commands:

```
awplus# configure terminal
awplus(config)# snmp-server engineID local
800000cf030000cd123456
```



To set a user defined SNMPv3 engine ID back to a system generated value, use the following commands:

```
awplus# configure terminal
awplus(config)# no snmp-server engineID local
```

**Output** The following example shows the engine ID values after configuration:

```
awplus(config)#snmp-server engineid local asdgdfh231234d
awplus(config)#exit
awplus#show snmp-server

SNMP Server ..... Enabled
IP Protocol ..... IPv4
SNMPv3 Engine ID (configured name) ... asdgdfh231234d
SNMPv3 Engine ID (actual) ..... 0x80001f888029af52e149198483

awplus(config)#no snmp-server engineid local
awplus(config)#exit
awplus#show snmp-server

SNMP Server ..... Enabled
IP Protocol ..... IPv4
SNMPv3 Engine ID (configured name) ... Not set
SNMPv3 Engine ID (actual) ..... 0x80001f888029af52e149198483
```

**Validation** [show snmp-server](#)  
**Commands**

**Related** [snmp-server engineID local reset](#)  
**Commands** [snmp-server group](#)

# snmp-server engineID local reset

**Overview** Use this command to force the device to generate a new pseudo-random SNMPv3 engine ID by resetting the SNMPv3 engine. If the current engine ID is user defined, use the [snmp-server engineID local](#) command to set SNMPv3 engine ID to a system generated value.

**Syntax** `snmp-server engineID local reset`

**Mode** Global Configuration

**Example** To force the SNMPv3 engine ID to be reset to a system generated value, use the commands:

```
awplus# configure terminal
awplus(config)# snmp-server engineID local reset
```

**Validation  
Commands** [show snmp-server](#)

**Related  
Commands** [snmp-server engineID local](#)

# snmp-server group

**Overview** This command is used with SNMP version 3 only, and adds an SNMP group, optionally setting the security level and view access modes for the group. The security and access views defined for the group represent the minimum required of its users in order to gain access.

The **no** variant of this command deletes an SNMP group, and is used with SNMPv3 only. The group with the specified authentication/encryption parameters must already exist.

**Syntax** `snmp-server group <groupname> {auth|noauth|priv} [read <readname>|write <writename>|notify <notifysname>]`  
`no snmp-server group <groupname> {auth|noauth|priv}`

| Parameter     | Description   |
|---------------|---|
| <groupname>   | Group name. The group name is a string up to 20 characters long and is case sensitive.      |
| auth          | Authentication.   |
| noauth        | No authentication and no encryption.  |
| priv          | Authentication and encryption.  |
| read          | Configure read view.  |
| <readname>    | Read view name.   |
| write         | Configure write view.   |
| <writename>   | Write view name. The view name is a string up to 20 characters long and is case sensitive.  |
| notify        | Configure notify view.  |
| <notifysname> | Notify view name. The view name is a string up to 20 characters long and is case sensitive. |

**Mode** Global Configuration

**Examples** To add SNMP group, for ordinary users, use the following commands:

```
awplus# configure terminal
awplus(config)# snmp-server group usergroup noauth read
useraccess write useraccess
```

To delete SNMP group `usergroup`, use the following commands

```
awplus# configure terminal
awplus(config)# no snmp-server group usergroup noauth
```

**Related  
Commands**

snmp-server  
show snmp-server  
show snmp-server group  
show snmp-server user

# snmp-server host

**Overview** This command specifies an SNMP trap host destination to which Trap or Inform messages generated by the device are sent.

For SNMP version 1 and 2c you must specify the community name parameter. For SNMP version 3, specify the authentication/encryption parameters and the user name. If the version is not specified, the default is SNMP version 1. Inform messages can be sent instead of traps for SNMP version 2c and 3.

Use the **no** variant of this command to remove an SNMP trap host. The trap host must already exist.

The trap host is uniquely identified by:

- host IP address (IPv4 or IPv6),
- inform or trap messages,
- community name (SNMPv1 or SNMP v2c) or the authentication/encryption parameters and user name (SNMP v3).

**Syntax**

```
snmp-server host {<ipv4-address>|<ipv6-address>} [traps]
[version 1] <community-name>

snmp-server host {<ipv4-address>|<ipv6-address>}
[informs|traps] version 2c <community-name>

snmp-server host {<ipv4-address>|<ipv6-address>}
[informs|traps] version 3 {auth|noauth|priv} <user-name>

no snmp-server host {<ipv4-address>|<ipv6-address>} [traps]
[version 1] <community-name>

no snmp-server host {<ipv4-address>|<ipv6-address>}
[informs|traps] version 2c <community-name>

no snmp-server host {<ipv4-address>|<ipv6-address>}
[informs|traps] version 3 {auth|noauth|priv} <user-name>
```

| Parameter      | Description  |
|----------------|--|
| <ipv4-address> | IPv4 trap host address in the format A . B . C . D, for example, 192.0.2.2.            |
| <ipv6-address> | IPv6 trap host address in the format x : x : : x : x for example, 2001:db8::8a2e:7334. |
| informs        | Send Inform messages to this host.   |
| traps          | Send Trap messages to this host (default).   |
| version        | SNMP version to use for notification messages. Default: version 1.                     |
| 1              | Use SNMPv1 (default).  |
| 2c             | Use SNMPv2c.   |
| 3              | Use SNMPv3.  |

| Parameter        | Description                           |
|------------------|---------------------------------------|
| auth             | Authentication.                       |
| noauth           | No authentication.                    |
| priv             | Encryption.                           |
| <community-name> | The SNMPv1 or SNMPv2c community name. |
| <user-name>      | SNMPv3 user name.                     |

**Mode** Global Configuration

**Examples** To configure the device to send generated traps to the IPv4 host destination 192.0.2.5 with the SNMPv2c community name public, use the following command:

```
awplus# configure terminal
awplus(config)# snmp-server host version 2c public192.0.2.5
```

To configure the device to send generated traps to the IPv6 host destination 2001:db8::8a2e:7334 with the SNMPv2c community name private, use the following command:

```
awplus# configure terminal
awplus(config)# snmp-server host version 2c
private2001:db8::8a2e:7334
```

To remove a configured trap host of 192.0.2.5 with the SNMPv2c community name public, use the following command:

```
awplus# configure terminal
awplus(config)# no snmp-server host version 2c public192.0.2.5
```

**Related  
Commands** [snmp trap link-status](#)  
[snmp-server enable trap](#)  
[snmp-server view](#)

# snmp-server legacy-ifadminstatus

**Overview** Use this command to set the ifAdminStatus to reflect the operational state of the interface, rather than the administrative state.

The **no** variant of this command sets the ifAdminStatus to reflect the administrative state of the interface.

**Syntax** `snmp-server legacy-ifadminstatus`  
`no snmp-server legacy-ifadminstatus`

**Default** Legacy ifAdminStatus is turned off by default, so by default the SNMP ifAdminStatus reflects the administrative state of the interface.

**Mode** Global Configuration

**Usage** Note that if you enable Legacy ifAdminStatus, the ifAdminStatus will report a link's status as Down when the link has been blocked by a process such as loop protection.

**Example** To turn on Legacy ifAdminStatus, use the command:

```
awplus#snmp-server legacy-ifadminstatus
```

**Related  
Commands** [show interface](#)

# snmp-server location

**Overview** This command sets the location of the system. The location is:

- displayed in the output of the [show system](#) command
- stored in the MIB object sysLocation

The **no** variant of this command removes the configured location from the system.

**Syntax** `snmp-server location <location-name>`  
`no snmp-server location`

| Parameter                          | Description   |
|------------------------------------|---|
| <code>&lt;location-name&gt;</code> | The location of the system, from 0 to 255 characters long. Valid characters are any printable character and spaces. |

**Mode** Global Configuration

**Example** To set the location to “server room 523”, use the following commands:

```
awplus# configure terminal
awplus(config)# snmp-server location server room 523
```

**Related Commands** [show snmp-server](#)  
[show system](#)  
[snmp-server contact](#)



# snmp-server source-interface

**Overview** Use this command to specify the originating interface for SNMP traps or informs. An interface specified by this command must already have an IP address assigned to it.

Use the **no** variant of this command to reset the interface to its default value (the originating egress interface).

**Syntax** `snmp-server source-interface {traps|informs} <interface-name>`  
`no snmp-server source-interface {traps|informs}`

| Parameter        | Description  |
|------------------|--|
| traps            | SNMP traps.  |
| informs          | SNMP informs.  |
| <interface-name> | Interface name (must already have an IP address assigned). |

**Default** By default, the source interface is the originating egress interface of the traps and informs messages.

**Mode** Global Configuration

**Usage** An SNMP trap or inform message that is sent from an SNMP server carries the notification IP address of its originating interface. Use this command to assign this interface.

**Example** The following commands set VLAN20 to be the interface whose IP address is used as the originating address in SNMP informs packets.

```
awplus# configure terminal
awplus(config)# snmp-server source-interface informs vlan20
```

The following commands reset the originating source interface for SNMP trap messages to be the default interface (the originating egress interface):

```
awplus# configure terminal
awplus(config)# no snmp-server source-interface traps
```

**Validation Commands** [show running-config](#)

# snmp-server startup-trap-delay

**Overview** Use this command to set the time in seconds after following completion of the device startup sequence before the device sends any SNMP traps (or SNMP notifications).

Use the no variant of this command to restore the default startup delay of 30 seconds.

**Syntax** `snmp-server startup-trap-delay <delay-time>`  
`no snmp-server startup-trap-delay`

| Parameter                       | Description   |
|---------------------------------|---|
| <code>&lt;delay-time&gt;</code> | Specify an SNMP trap delay time in seconds in the range of 30 to 600 seconds. |

**Default** The SNMP server trap delay time is 30 seconds. The no variant restores the default.

**Mode** Global Configuration

**Example** To delay the device sending SNMP traps until 60 seconds after device startup, use the following commands:

```
awplus# configure terminal
awplus(config)# snmp-server startup-trap-delay 60
```

To restore the sending of SNMP traps to the default of 30 seconds after device startup, use the following commands:

```
awplus# configure terminal
awplus(config)# no snmp-server startup-trap-delay
```

**Validation  
Commands** `show snmp-server`

## snmp-server user

**Overview** Use this command to create or move users as members of specified groups. This command is used with SNMPv3 only.

The **no** variant of this command removes an SNMPv3 user. The specified user must already exist.

**Syntax** `snmp-server user <username> <groupname> [encrypted] [auth {md5|sha} <auth-password>] [priv {des|aes} <privacy-password>]`  
`no snmp-server user <username>`

| Parameter          | Description   |
|--------------------|---|
| <username>         | User name. The user name is a string up to 20 characters long and is case sensitive.                |
| <groupname>        | Group name. The group name is a string up to 20 characters long and is case sensitive.              |
| encrypted          | Use the encrypted parameter when you want to enter encrypted passwords.                             |
| auth               | Authentication protocol.  |
| md5                | MD5 Message Digest Algorithms.  |
| sha                | SHA Secure Hash Algorithm.  |
| <auth-password>    | Authentication password. The password is a string of 8 to 20 characters long and is case sensitive. |
| priv               | Privacy protocol.   |
| des                | DES Data Encryption Standard.   |
| aes                | AES Advanced Encryption Standards.  |
| <privacy-password> | Privacy password. The password is a string of 8 to 20 characters long and is case sensitive.        |

**Mode** Global Configuration

**Usage** Additionally this command provides the option of selecting an authentication protocol and (where appropriate) an associated password. Similarly, options are offered for selecting a privacy protocol and password.

- Note that each SNMP user must be configured on both the manager and agent entities. Where passwords are used, these passwords must be the same for both entities.
- Use the **encrypted** parameter when you want to enter already encrypted passwords in encrypted form as displayed in the running and startup configs stored on the device. For example, you may need to move a user from one group to another group and keep the same passwords for the user instead of removing the user to apply new passwords.

- User passwords are entered using plaintext without the **encrypted** parameter and are encrypted according to the authentication and privacy protocols selected.
- User passwords are viewed as encrypted passwords in running and startup configs shown from **show running-config** and **show startup-config** commands respectively. Copy and paste encrypted passwords from running-configs or startup-configs to avoid entry errors.

**Examples** To add SNMP user `authuser` as a member of group `usergroup`, with authentication protocol `md5`, authentication password `Authpass`, privacy protocol `des` and privacy password `Privpass`, use the following commands

```
awplus# configure terminal
```

```
awplus(config)# snmp-server user authuser usergroup auth md5  
Authpass priv des Privpass
```

Validate the user is assigned to the group using the **show snmp-server user** command:

|                              |            |       |         |
|------------------------------|------------|-------|---------|
| awplus#show snmp-server user |            |       |         |
| Name                         | Group name | Auth  | Privacy |
| -----                        | -----      | ----- | -----   |
| authuser                     | usergroup  | md5   | des     |

To enter existing SNMP user `authuser` with existing passwords as a member of group `newusergroup` with authentication protocol `md5` plus the encrypted authentication password `0x1c74b9c22118291b0ce0cd883f8dab6b74`, privacy protocol `des` plus the encrypted privacy password `0x0e0133db5453ebd03822b004eeacb6608f`, use the following commands

```
awplus# configure terminal
```

```
awplus(config)# snmp-server user authuser newusergroup  
encrypted auth md5 0x1c74b9c22118291b0ce0cd883f8dab6b74 priv  
des 0x0e0133db5453ebd03822b004eeacb6608f
```

**NOTE:** Copy and paste the encrypted passwords from the **running-config** or the **startup-config** displayed, using the **show running-config** and **show startup-config** commands respectively, into the command line to avoid key stroke errors issuing this command.

Validate the user has been moved from the first group using the **show snmp-server user** command:

|                              |              |       |         |
|------------------------------|--------------|-------|---------|
| awplus#show snmp-server user |              |       |         |
| Name                         | Group name   | Auth  | Privacy |
| -----                        | -----        | ----- | -----   |
| authuser                     | newusergroup | md5   | des     |

To delete SNMP user `authuser`, use the following commands:

```
awplus# configure terminal
```

```
awplus(config)# no snmp-server user authuser
```

**Related  
Commands**    `show snmp-server user`  
                  `snmp-server view`

# snmp-server view

**Overview** Use this command to create an SNMP view that specifies a sub-tree of the MIB. Further sub-trees can then be added by specifying a new OID to an existing view. Views can be used in SNMP communities or groups to control the remote manager's access.

**NOTE:** *The object identifier must be specified in a sequence of integers separated by decimal points.*

The **no** variant of this command removes the specified view on the device. The view must already exist.

**Syntax** `snmp-server view <view-name> <mib-name> {included|excluded}`  
`no snmp-server view <view-name>`

| Parameter   | Description   |
|-------------|---|
| <view-name> | SNMP server view name.<br>The view name is a string up to 20 characters long and is case sensitive. |
| <mib-name>  | Object identifier of the MIB.   |
| included    | Include this OID in the view.   |
| excluded    | Exclude this OID in the view.   |

**Mode** Global Configuration

**Examples** The following command creates a view called "loc" that includes the system location MIB sub-tree.

```
awplus(config)# snmp-server view loc 1.3.6.1.2.1.1.6.0 included
```

To remove the view "loc" use the following command

```
awplus(config)# no snmp-server view loc
```

**Related Commands** [show snmp-server view](#)  
[snmp-server community](#)

# undebbug snmp

**Overview** This command applies the functionality of the no [debug snmp](#) command.

# 45

# LLDP Commands

## Introduction

**Overview** LLDP and LLDP-MED can be configured using the commands in this chapter, or by using SNMP with the LLDP-MIB and LLDP-EXT-DOT1-MIB (see the [Support for Allied Telesis Enterprise MIBs in AlliedWare Plus](#)).

The Voice VLAN feature can be configured using commands in [VLAN Commands](#) chapter.

For more information about LLDP, see the [LLDP Feature Overview and Configuration Guide](#).

LLDP can transmit a lot of data about the network. Typically, the network information gathered using LLDP is transferred to a Network Management System by SNMP. For security reasons, we recommend using SNMPv3 for this purpose (see the [SNMP Feature Overview and Configuration Guide](#)).

LLDP operates over physical ports only. For example, it can be configured on switch ports that belong to static or dynamic channel groups, but not on the channel groups themselves.

- Command List**
- [“clear lldp statistics”](#) on page 1862
  - [“clear lldp table”](#) on page 1863
  - [“debug lldp”](#) on page 1864
  - [“lldp faststart-count”](#) on page 1866
  - [“lldp holdtime-multiplier”](#) on page 1867
  - [“lldp management-address”](#) on page 1868
  - [“lldp med-notifications”](#) on page 1869
  - [“lldp med-tlv-select”](#) on page 1870
  - [“lldp non-strict-med-tlv-order-check”](#) on page 1872
  - [“lldp notification-interval”](#) on page 1873
  - [“lldp notifications”](#) on page 1874



- ["lldp port-number-type"](#) on page 1875
- ["lldp reinit"](#) on page 1876
- ["lldp run"](#) on page 1877
- ["lldp timer"](#) on page 1878
- ["lldp tlv-select"](#) on page 1879
- ["lldp transmit receive"](#) on page 1881
- ["lldp tx-delay"](#) on page 1882
- ["location civic-location configuration"](#) on page 1883
- ["location civic-location identifier"](#) on page 1887
- ["location civic-location-id"](#) on page 1888
- ["location coord-location configuration"](#) on page 1889
- ["location coord-location identifier"](#) on page 1891
- ["location coord-location-id"](#) on page 1892
- ["location elin-location"](#) on page 1893
- ["location elin-location-id"](#) on page 1894
- ["show debugging lldp"](#) on page 1895
- ["show lldp"](#) on page 1897
- ["show lldp interface"](#) on page 1899
- ["show lldp local-info"](#) on page 1901
- ["show lldp neighbors"](#) on page 1906
- ["show lldp neighbors detail"](#) on page 1908
- ["show lldp statistics"](#) on page 1912
- ["show lldp statistics interface"](#) on page 1914
- ["show location"](#) on page 1916

# clear lldp statistics

**Overview** This command clears all LLDP statistics (packet and event counters) associated with specified ports. If no port list is supplied, LLDP statistics for all ports are cleared.

**Syntax** `clear lldp statistics [interface <port-list>]`

| Parameter   | Description   |
|-------------|---|
| <port-list> | The ports for which the statistics are to be cleared. |

**Mode** Privileged Exec

**Examples** To clear the LLDP statistics on ports 1.0.1 and 1.0.6, use the command:

```
awplus# clear lldp statistics interface port1.0.1,port1.0.6
```

To clear all LLDP statistics for all ports, use the command:

```
awplus# clear lldp statistics
```

**Related Commands** [show lldp statistics](#)  
[show lldp statistics interface](#)

# clear lldp table

**Overview** This command clears the table of LLDP information received from neighbors through specified ports. If no port list is supplied, neighbor information is cleared for all ports.

**Syntax** `clear lldp table [interface <port-list>]`

| Parameter   | Description  |
|-------------|--|
| <port-list> | The ports for which the neighbor information table is to be cleared. |

**Mode** Privileged Exec

**Examples** To clear the table of neighbor information received on ports 1.0.1 and 1.0.6, use the command:

```
awplus# clear lldp table interface port1.0.1,port1.0.6
```

To clear the entire table of neighbor information received through all ports, use the command:

```
awplus# clear lldp table
```

**Related Commands** [show lldp neighbors](#)

# debug lldp

**Overview** This command enables specific LLDP debug for specified ports. When LLDP debugging is enabled, diagnostic messages are entered into the system log. If no port list is supplied, the specified debugging is enabled for all ports.

The **no** variant of this command disables specific LLDP debug for specified ports. If no port list is supplied, the specified debugging is disabled for all ports.

**Syntax** debug lldp {[rx][rxpkt][tx][txpkt]} [interface [<port-list>]]  
debug lldp operation  
no debug lldp {[rx][rxpkt][tx][txpkt]} [interface [<port-list>]]  
no debug lldp operation  
no debug lldp all

| Parameter   | Description                                      |
|-------------|--|
| rx          | LLDP receive debug.                              |
| rxpkt       | Raw LLDPDUs received in hex format.              |
| tx          | LLDP transmit debug.                             |
| txpkt       | Raw Tx LLDPDUs transmitted in hex format.        |
| <port-list> | The ports for which debug is to be configured.   |
| operation   | Debug for LLDP internal operation on the switch. |
| all         | Disables all LLDP debugging for all ports.       |

**Default** By default no debug is enabled for any ports.

**Mode** Privileged Exec

**Examples** To enable debugging of LLDP receive on ports 1.0.1 and 1.0.6, use the command:

```
awplus# debug lldp rx interface port1.0.1,port1.0.6
```

To enable debugging of LLDP transmit with packet dump on all ports, use the command:

```
awplus# debug lldp tx txpkt
```

To disable debugging of LLDP receive on ports 1.0.1 and 1.0.6, use the command:

```
awplus# no debug lldp rx interface port1.0.1,port1.0.6
```

To turn off all LLDP debugging on all ports, use the command:

```
awplus# no debug lldp all
```

**Related  
Commands**    [show debugging lldp](#)  
                  [show running-config lldp](#)  
                  [terminal monitor](#)

# lldp faststart-count

**Overview** Use this command to set the fast start count for LLDP-MED. The fast start count determines how many fast start advertisements LLDP sends from a port when it starts sending LLDP-MED advertisements from the port, for instance, when it detects a new LLDP-MED capable device.

The **no** variant of this command resets the LLDP-MED fast start count to the default (3).

**Syntax** `lldp faststart-count <1-10>`  
`no lldp faststart-count`

| Parameter | Description                                      |
|-----------|--|
| <1-10>    | The number of fast start advertisements to send. |

**Default** The default fast start count is 3.

**Mode** Global Configuration

**Examples** To set the fast start count to 5, use the command:

```
awplus# configure terminal
awplus(config)# lldp faststart-count 5
```

To reset the fast start count to the default setting (3), use the command:

```
awplus# configure terminal
awplus(config)# no lldp faststart-count
```

**Related  
Commands** [show lldp](#)

# lldp holdtime-multiplier

**Overview** This command sets the holdtime multiplier value. The transmit interval is multiplied by the holdtime multiplier to give the Time To Live (TTL) value that is advertised to neighbors.

The **no** variant of this command sets the multiplier back to its default.

**Syntax** `lldp holdtime-multiplier <2-10>`  
`no lldp holdtime-multiplier`

| Parameter | Description            |
|-----------|------------------------|
| <2-10>    | The multiplier factor. |

**Default** The default holdtime multiplier value is 4.

**Mode** Global Configuration

**Usage** The Time-To-Live defines the period for which the information advertised to the neighbor is valid. If the Time-To-Live expires before the neighbor receives another update of the information, then the neighbor discards the information from its database.

**Examples** To set the holdtime multiplier to 2, use the commands:

```
awplus# configure terminal
awplus(config)# lldp holdtime-multiplier 2
```

To set the holdtime multiplier back to its default, use the commands:

```
awplus# configure terminal
awplus(config)# no lldp holdtime-multiplier 2
```

**Related  
Commands** [show lldp](#)

# lldp management-address

**Overview** This command sets the IPv4 address to be advertised to neighbors (in the Management Address TLV) via the specified ports. This address will override the default address for these ports.

The **no** variant of this command clears the user-configured management IP address advertised to neighbors via the specified ports. The advertised address reverts to the default.

**Syntax** `lldp management-address <ipaddr>`  
`no lldp management-address`

| Parameter                   | Description  |
|-----------------------------|--|
| <code>&lt;ipaddr&gt;</code> | The IPv4 address to be advertised to neighbors, in dotted decimal format. This must be one of the IP addresses already configured on the device. |

**Default** The local loopback interface primary IPv4 address if set, else the primary IPv4 interface address of the lowest numbered VLAN the port belongs to, else the MAC address of the device's baseboard if no VLAN IP addresses are configured for the port.

**Mode** Interface Configuration

**Usage** To see the management address that will be advertised, use the [show lldp interface](#) command or [show lldp local-info](#) command.

**Examples** To set the management address advertised by ports 1.0.1 and 1.06, to be 192.168.1.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# lldp management-address 192.168.1.6
```

To clear the user-configured management address advertised by ports 1.0.1 and 1.0.6, and revert to using the default address, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# no lldp management-address
```

**Related Commands** [show lldp interface](#)  
[show lldp local-info](#)



# lldp med-notifications

**Overview** Use this command to enable LLDP to send LLDP-MED Topology Change Detected SNMP notifications relating to the specified ports. The switch sends an SNMP event notification when a new LLDP-MED compliant IP Telephony device is connected to or disconnected from a port on the switch.

Use the **no** variant of this command to disable the sending of LLDP-MED Topology Change Detected notifications relating to the specified ports.

**Syntax** `lldp med-notifications`  
`no lldp med-notifications`

**Default** The sending of LLDP-MED notifications is disabled by default.

**Mode** Interface Configuration

**Examples** To enable the sending of LLDP-MED Topology Change Detected notifications relating to ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# lldp med-notifications
```

To disable the sending of LLDP-MED notifications relating to ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# no lldp med-notifications
```

**Related Commands** [lldp notification-interval](#)  
[lldp notifications](#)  
[snmp-server enable trap](#)  
[show lldp interface](#)

# lldp med-tlv-select

**Overview** Use this command to enable LLDP-MED Organizationally Specific TLVs for transmission in LLDP advertisements via the specified ports. The LLDP-MED Capabilities TLV must be enabled before any of the other LLDP-MED Organizationally Specific TLVs are enabled.

Use the **no** variant of this command to disable the specified LLDP-MED Organizationally Specific TLVs for transmission in LLDP advertisements via these ports. In order to disable the LLDP-MED Capabilities TLV, you must also disable the rest of these TLVs. Disabling all these TLVs disables LLDP-MED advertisements.

**Syntax**

```
lldp med-tlv-select {[capabilities] [network-policy] [location]
[power-management-ext] [inventory-management]}

lldp med-tlv-select all

no lldp med-tlv-select {[capabilities] [network-policy]
[location] [power-management-ext] [inventory-management]}

no lldp med-tlv-select all
```

| Parameter            | Description   |
|----------------------|---|
| capabilities         | LLDP-MED Capabilities TLV. When this is enabled, the MAC/PHY Configuration/Status TLV from IEEE 802.3 Organizationally Specific TLVs is also automatically included in LLDP-MED advertisements, whether or not it has been explicitly enabled by the <a href="#">lldp tlv-select</a> command. |
| network-policy       | Network Policy TLV. This TLV is transmitted if Voice VLAN parameters have been configured using the commands:   |
| location             | Location Identification TLV. This TLV is transmitted if location information has been configured using the commands:  |
| power-management-ext | Extended Power-via-MDI TLV. This TLV is transmitted if the port is PoE capable, and PoE is enabled ( <a href="#">power-inline enable</a> command).  |
| inventory-management | Inventory Management TLV Set, including the following TLVs: <ul style="list-style-type: none"><li>• Hardware Revision</li><li>• Firmware Revision</li><li>• Software Revision</li><li>• Serial Number</li><li>• Manufacturer Name</li><li>• Model Name</li><li>• Asset ID</li></ul>           |
| all                  | All LLDP-MED Organizationally Specific TLVs.  |

**Default** By default LLDP-MED Capabilities, Network Policy, Location Identification and Extended Power-via-MDI TLVs are enabled. Therefore, if LLDP is enabled using the [lldp run](#) command, by default LLDP-MED advertisements are transmitted on ports that detect LLDP-MED neighbors connected to them.

**Mode** Interface Configuration

**Usage** LLDP-MED TLVs are only sent in advertisements via a port if there is an LLDP-MED-capable device connected to it. To see whether there are LLDP-MED capable devices connected to the ports, use the [show lldp neighbors](#) command.

**Examples** To enable inclusion of the Inventory TLV Set in advertisements transmitted via ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# lldp med-tlv-select inventory-management
```

To exclude the Inventory TLV Set in advertisements transmitted via ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# no lldp med-tlv-select inventory-management
```

To disable LLDP-MED advertisements transmitted via ports 1.0.1 and 1.0.6, disable all these TLVs using the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# no lldp med-tlv-select all
```

**Related  
Commands**

[lldp tlv-select](#)  
[location elin-location-id](#)  
[location civic-location identifier](#)  
[location civic-location configuration](#)  
[location coord-location identifier](#)  
[location coord-location configuration](#)  
[location elin-location](#)  
[show lldp interface](#)  
[switchport voice dscp](#)  
[switchport voice vlan](#)  
[switchport voice vlan priority](#)

# lldp non-strict-med-tlv-order-check

**Overview** Use this command to enable non-strict order checking for LLDP-MED advertisements it receives. That is, use this command to enable LLDP to receive and store TLVs from LLDP-MED advertisements even if they do not use standard TLV order.

Use the **no** variant of this command to disable non-strict order checking for LLDP-MED advertisements, that is, to set strict TLV order checking, so that LLDP discards any LLDP-MED TLVs that occur before the LLDP-MED Capabilities TLV in an advertisement.

**Syntax** `lldp non-strict-med-tlv-order-check`  
`no lldp non-strict-med-tlv-order-check`

**Default** By default TLV non-strict order checking for LLDP-MED advertisements is disabled. That is, strict order checking is applied to LLDP-MED advertisements, according to ANSI/TIA-1057, and LLDP-MED TLVs in non-standard order are discarded.

**Mode** Global Configuration

**Usage** The ANSI/TIA-1057 specifies standard order for TLVs in LLDP-MED advertisements, and specifies that if LLDP receives LLDP advertisements with non-standard LLDP-MED TLV order, the TLVs in non-standard order should be discarded. This implementation of LLDP-MED follows the standard: it transmits TLVs in the standard order, and by default discards LLDP-MED TLVs that occur before the LLDP-MED Capabilities TLV in an advertisement. However, some implementations of LLDP transmit LLDP-MED advertisements with non-standard TLV order. To receive and store the data from these non-standard advertisements, enable non-strict order checking for LLDP-MED advertisements using this command.

**Examples** To enable strict TLV order checking, use the commands:

```
awplus# configure terminal
awplus(config)# lldp tlv-order-check
```

To disable strict TLV order checking, use the commands:

```
awplus# configure terminal
awplus(config)# no lldp tlv-order-check
```

**Related Commands** [show running-config lldp](#)

# lldp notification-interval

**Overview** This command sets the notification interval. This is the minimum interval between LLDP SNMP notifications (traps) of each kind (LLDP Remote Tables Change Notification and LLDP-MED Topology Change Notification).

The **no** variant of this command sets the notification interval back to its default.

**Syntax** `lldp notification-interval <5-3600>`  
`no lldp notification-interval`

| Parameter | Description              |
|-----------|--------------------------|
| <5-3600>  | The interval in seconds. |

**Default** The default notification interval is 5 seconds.

**Mode** Global Configuration

**Examples** To set the notification interval to 20 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# lldp notification-interval 20
```

To set the notification interval back to its default, use the commands:

```
awplus# configure terminal
awplus(config)# no lldp notification-interval
```

**Related  
Commands** [lldp notifications](#)  
[show lldp](#)

# lldp notifications

**Overview** This command enables the sending of LLDP SNMP notifications (traps) relating to specified ports.

The **no** variant of this command disables the sending of LLDP SNMP notifications for specified ports.

**Syntax** `lldp notifications`  
`no lldp notifications`

**Default** The sending of LLDP SNMP notifications is disabled by default.

**Mode** Interface Configuration

**Examples** To enable sending of LLDP SNMP notifications for ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# lldp notifications
```

To disable sending of LLDP SNMP notifications for ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# no lldp notifications
```

**Related Commands** [lldp notification-interval](#)  
[show lldp interface](#)  
[snmp-server enable trap](#)

# lldp port-number-type

**Overview** This command sets the type of port identifier used to enumerate, that is to count, the LLDP MIB local port entries. The LLDP MIB (IEEE Standard 802.1AB-2005, Section 12, LLDP MIB Definitions.) requires the port number value to count LLDP local port entries.

This command also enables you to optionally set an interface index to enumerate the LLDP MIB local port entries, if required by your management system.

The **no** variant of this command resets the type of port identifier back to the default setting (number).

**Syntax** `lldp port-number-type [number|ifindex]`  
`no lldp port-number-type`

| Parameter | Description   |
|-----------|---|
| number    | Set the type of port identifier to a port number to enumerate the LLDP MIB local port entries.      |
| ifindex   | Set the type of port identifier to an interface index to enumerate the LLDP MIB local port entries. |

**Default** The default port identifier type is number. The no variant of this command sets the port identifier type to the default.

**Mode** Global Configuration

**Examples** To set the type of port identifier used to enumerate LLDP MIB local port entries to port numbers, use the commands:

```
awplus# configure terminal
awplus(config)# lldp port-number-type number
```

To set the type of port identifier used to enumerate LLDP MIB local port entries to interface indexes, use the commands:

```
awplus# configure terminal
awplus(config)# lldp port-number-type ifindex
```

To reset the type of port identifier used to enumerate LLDP MIB local port entries the default (port numbers), use the commands:

```
awplus# configure terminal
awplus(config)# no lldp port-number-type
```

**Related Commands** [show lldp](#)

# lldp reinit

**Overview** This command sets the value of the reinitialization delay. This is the minimum time after disabling LLDP on a port before it can reinitialize.

The **no** variant of this command sets the reinitialization delay back to its default setting.

**Syntax** `lldp reinit <1-10>`  
`no lldp reinit`

| Parameter | Description           |
|-----------|-----------------------|
| <1-10>    | The delay in seconds. |

**Default** The default reinitialization delay is 2 seconds.

**Mode** Global Configuration

**Examples** To set the reinitialization delay to 3 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# lldp reinit 3
```

To set the reinitialization delay back to its default, use the commands:

```
awplus# configure terminal
awplus(config)# no lldp reinit
```

**Related  
Commands** [show lldp](#)



# lldp run

**Overview** This command enables the operation of LLDP on the device.  
The **no** variant of this command disables the operation of LLDP on the device. The LLDP configuration remains unchanged.

**Syntax** `lldp run`  
`no lldp run`

**Default** LLDP is disabled by default.

**Mode** Global Configuration

**Examples** To enable LLDP operation, use the commands:

```
awplus# configure terminal
awplus(config)# lldp run
```

To disable LLDP operation, use the commands:

```
awplus# configure terminal
awplus(config)# no lldp run
```

**Related  
Commands** [show lldp](#)

# lldp timer

**Overview** This command sets the value of the transmit interval. This is the interval between regular transmissions of LLDP advertisements.

The **no** variant of this command sets the transmit interval back to its default.

**Syntax** `lldp timer <5-32768>`  
`no lldp timer`

| Parameter                    | Description  |
|------------------------------|--|
| <code>&lt;5-32768&gt;</code> | The transmit interval in seconds. The transmit interval must be at least four times the transmission delay timer ( <a href="#">lldp tx-delay</a> command). |

**Default** The default transmit interval is 30 seconds.

**Mode** Global Configuration

**Examples** To set the transmit interval to 90 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# lldp timer 90
```

To set the transmit interval back to its default, use the commands:

```
awplus# configure terminal
awplus(config)# no lldp timer
```

**Related  
Commands** [lldp tx-delay](#)  
[show lldp](#)

# lldp tlv-select

**Overview** This command enables one or more optional TLVs, or all TLVs, for transmission in LLDP advertisements via the specified ports. The TLVs can be specified in any order; they are placed in LLDP frames in a fixed order (as described in IEEE 802.1AB). The mandatory TLVs (Chassis ID, Port ID, Time To Live, End of LLDPDU) are always included in LLDP advertisements.

In LLDP-MED advertisements the MAC/PHY Configuration/Status TLV will be always be included regardless of whether it is selected by this command.

The **no** variant of this command disables the specified optional TLVs, or all optional TLVs, for transmission in LLDP advertisements via the specified ports.

**Syntax**

```
lldp tlv-select { [<tlv>]...}  
lldp tlv-select all  
no lldp tlv-select { [<tlv>]...}  
no lldp tlv-select all
```

| Parameter | Description  |
|-----------|--|
| <tlv>     | The TLV to transmit in LLDP advertisements. One of these keywords: <ul style="list-style-type: none"><li>• port-description (specified by the <a href="#">description (interface)</a> command)</li><li>• system-name (specified by the <a href="#">hostname</a> command)</li><li>• system-description</li><li>• system-capabilities</li><li>• management-address</li><li>• port-vlan</li><li>• port-and-protocol-vlans</li><li>• vlan-names</li><li>• protocol-ids</li><li>• mac-phy-config</li><li>• power-management (Power Via MDI TLV)</li><li>• link-aggregation</li><li>• max-frame-size</li></ul> |
| all       | All TLVs.  |

**Default** By default no optional TLVs are included in LLDP advertisements. The MAC/PHY Configuration/Status TLV ( **mac-phy-config**) is included in LLDP-MED advertisements whether or not it is selected by this command.

**Mode** Interface Configuration

**Examples** To include the management-address and system-name TLVs in advertisements transmitted via ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# lldp tlv-select management-address
system-name
```

To include all optional TLVs in advertisements transmitted via ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# lldp tlv-select all
```

To exclude the management-address and system-name TLVs from advertisements transmitted via ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# no lldp tlv-select management-address
system-name
```

To exclude all optional TLVs from advertisements transmitted via ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# no lldp tlv-select all
```

**Related  
Commands**

- [description \(interface\)](#)
- [hostname](#)
- [lldp med-tlv-select](#)
- [show lldp interface](#)
- [show lldp local-info](#)

# lldp transmit receive

**Overview** This command enables transmission and/or reception of LLDP advertisements to or from neighbors through the specified ports.

The **no** variant of this command disables transmission and/or reception of LLDP advertisements through specified ports.

**Syntax** `lldp {[transmit] [receive]}`  
`no lldp {[transmit] [receive]}`

| Parameter | Description   |
|-----------|---|
| transmit  | Enable or disable transmission of LLDP advertisements via this port or ports. |
| receive   | Enable or disable reception of LLDP advertisements via this port or ports.    |

**Default** LLDP advertisement transmission and reception are enabled on all ports by default.

**Mode** Interface Configuration

**Examples** To enable transmission of LLDP advertisements on ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# lldp transmit
```

To enable LLDP advertisement transmission and reception on ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# lldp transmit receive
```

To disable LLDP advertisement transmission and reception on ports 1.0.1 and 1.0.6, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.6
awplus(config-if)# no lldp transmit receive
```

**Related Commands** [show lldp interface](#)

# lldp tx-delay

**Overview** This command sets the value of the transmission delay timer. This is the minimum time interval between transmitting LLDP advertisements due to a change in LLDP local information.

The **no** variant of this command sets the transmission delay timer back to its default setting.

**Syntax** `lldp tx-delay <1-8192>`  
`no lldp tx-delay`

| Parameter | Description  |
|-----------|--|
| <1-8192>  | The transmission delay in seconds. The transmission delay cannot be greater than a quarter of the transmit interval ( <a href="#">lldp timer</a> command). |

**Default** The default transmission delay timer is 2 seconds.

**Mode** Global Configuration

**Examples** To set the transmission delay timer to 12 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# lldp tx-delay 12
```

To set the transmission delay timer back to its default, use the commands:

```
awplus# configure terminal
awplus(config)# no lldp tx-delay
```

**Related  
Commands** [lldp timer](#)  
[show lldp](#)

# location civic-location configuration

**Overview** Use these commands to configure a civic address location. The country parameter must be specified first, and at least one of the other parameters must be configured before the location can be assigned to a port.

Use the **no** variants of this command to delete civic address parameters from the location.

**Syntax**

```
country <country>
state <state>
no state
county <county>
no county
city <city>
no city
division <division>
no division
neighborhood <neighborhood>
no neighborhood
street-group <street-group>
no street-group
leading-street-direction <leading-street-direction>
no leading-street-direction
trailing-street-suffix <trailing-street-suffix>
no trailing-street-suffix
street-suffix <street-suffix>
no street-suffix
house-number <house-number>
no house-number
house-number-suffix <house-number-suffix>
no house-number-suffix
landmark <landmark>
no landmark
additional-information <additional-information>
no additional-information
```

**Syntax (cont.)**    name <name>  
                      no name  
                      postalcode <postalcode>  
                      no postalcode  
                      building <building>  
                      no building  
                      unit <unit>  
                      no unit  
                      floor <floor>  
                      no floor  
                      room <room>  
                      no room  
                      place-type <place-type>  
                      no place-type  
                      postal-community-name <postal-community-name>  
                      no postal-community-name  
                      post-office-box <post-office-box>  
                      no post-office-box  
                      additional-code <additional-code>  
                      no additional-code  
                      seat <seat>  
                      no seat  
                      primary-road-name <primary-road-name>  
                      no primary-road-name  
                      road-section <road-section>  
                      no road-section  
                      branch-road-name <branch-road-name>  
                      no branch-road-name  
                      sub-branch-road-name <sub-branch-road-name>  
                      no sub-branch-road-name  
                      street-name-pre-modifier <street-name-pre-modifier>  
                      no street-name-pre-modifier  
                      streetname-post-modifier <streetname-post-modifier>  
                      no streetname-post-modifier



| Parameter                  | Description  |
|----------------------------|--|
| <country>                  | Upper-case two-letter country code, as specified in ISO 3166.                      |
| <state>                    | State (Civic Address (CA) Type 1): national subdivisions (state, canton, region).  |
| <county>                   | County (CA Type 2): County, parish, gun (JP), district (IN).                       |
| <city>                     | City (CA Type 3): city, township, shi (JP).  |
| <division>                 | City division (CA Type 4): City division, borough, city district, ward, chou (JP). |
| <neighborhood>             | Neighborhood (CA Type 5): neighborhood, block.                                     |
| <street-group>             | Street group (CA Type 6): group of streets below the neighborhood level.           |
| <leading-street-direction> | Leading street direction (CA Type 16).   |
| <trailing-street-suffix>   | Trailing street suffix (CA Type 17).   |
| <street-suffix>            | Street suffix (CA Type 18): street suffix or type.                                 |
| <house-number>             | House number (CA Type 19).   |
| <house-number-suffix>      | House number suffix (CA Type 20).  |
| <landmark>                 | Landmark or vanity address (CA Type 21).   |
| <additional-information>   | Additional location information (CA Type 22).                                      |
| <name>                     | Name (CA Type 23): residence and office occupant.                                  |
| <postal-code>              | Postal/zip code (CA Type 24).  |
| <building>                 | Building (CA Type 25): structure.  |
| <unit>                     | Unit (CA Type 26): apartment, suite.   |
| <floor>                    | Floor (CA Type 27).  |
| <room>                     | Room (CA Type 28).   |
| <place-type>               | Type of place (CA Type 29).  |
| <postal-community-name>    | Postal community name (CA Type 30).  |
| <post-office-box>          | Post office box (P.O. Box) (CA Type 31).   |
| <additional-code>          | Additional code (CA Type 32).  |
| <seat>                     | Seat (CA Type 33): seat (desk, cubicle, workstation).                              |
| <primary-road-name>        | Primary road name (CA Type 34).  |
| <road-section>             | Road section (CA Type 35).   |

| Parameter                   | Description                             |
|-----------------------------|---|
| <branch-road-name>          | Branch road name (CA Type 36).          |
| <sub-branch-road-name>      | Sub-branch road name (CA Type 37).      |
| <street-name-pre-modifier>  | Street name pre-modifier (CA Type 38).  |
| <street-name-post-modifier> | Street name post-modifier (CA Type 39). |

**Default** By default no civic address location information is configured.

**Mode** Civic Address Location Configuration

**Usage** The **country** parameter must be configured before any other parameters can be configured; this creates the location. The country parameter cannot be deleted. One or more of the other parameters must be configured before the location can be assigned to a port. The country parameter must be entered as an upper-case two-letter country code, as specified in ISO 3166. All other parameters are entered as alpha-numeric strings. Do not configure all the civic address parameters (this would generate TLVs that are too long). Configure a subset of these parameters—enough to consistently and precisely identify the location of the device. If the location is to be used for Emergency Call Service (ECS), the particular ECS application may have guidelines for configuring the civic address location. For more information about civic address format, see the [LLDP Feature Overview and Configuration Guide](#).

To specify the civic address location, use the [location civic-location identifier](#) command. To delete the civic address location, use the **no** variant of the **location civic-location identifier** command. To assign the civic address location to particular ports, so that it can be advertised in TLVs from those ports, use the command [location civic-location-id](#) command.

**Examples** To configure civic address location 1 with location "27 Nazareth Avenue, Christchurch, New Zealand" in civic-address format, use the commands:

```
awplus# configure terminal
awplus(config)# location civic-location identifier 1
awplus(config-civic)# country NZ
awplus(config-civic)# city Christchurch
awplus(config-civic)# primary-road-name Nazareth
awplus(config-civic)# street-suffix Avenue
awplus(config-civic)# house-number 27
```

**Related Commands**

- [location civic-location-id](#)
- [location civic-location identifier](#)
- [show lldp local-info](#)
- [show location](#)

# location civic-location identifier

**Overview** Use this command to enter the Civic Address Location Configuration mode to configure the specified location.

Use the **no** variant of this command to delete a civic address location. This also removes the location from any ports it has been assigned to.

**Syntax** `location civic-location identifier <civic-loc-id>`  
`no location civic-location identifier <civic-loc-id>`

| Parameter                         | Description   |
|-----------------------------------|---|
| <code>&lt;civic-loc-id&gt;</code> | A unique civic address location ID, in the range 1 to 4095. |

**Default** By default there are no civic address locations.

**Mode** Global Configuration

**Usage** To configure the location information for this civic address location identifier, use the [location civic-location configuration](#) command. To associate this civic location identifier with particular ports, use the [location elin-location-id](#) command.

Up to 400 locations can be configured on the switch for each type of location information, up to a total of 1200 locations.

**Examples** To enter Civic Address Location Configuration mode for the civic address location with ID 1, use the commands:

```
awplus# configure terminal
awplus(config)# location civic-location identifier 1
awplus(config-civic)#
```

To delete the civic address location with ID 1, use the commands:

```
awplus# configure terminal
awplus(config)# no location civic-location identifier 1
```

**Related Commands** [location civic-location-id](#)  
[location civic-location configuration](#)  
[show location](#)  
[show running-config lldp](#)

# location civic-location-id

**Overview** Use this command to assign a civic address location to the ports. The civic address location must already exist. This replaces any previous assignment of civic address location for the ports. Up to one location of each type can be assigned to a port.

Use the **no** variant of this command to remove a location identifier from the ports.

**Syntax** `location civic-location-id <civic-loc-id>`  
`no location civic-location-id [<civic-loc-id>]`

| Parameter                         | Description  |
|-----------------------------------|--|
| <code>&lt;civic-loc-id&gt;</code> | Civic address location ID, in the range 1 to 4095. |

**Default** By default no civic address location is assigned to ports.

**Mode** Interface Configuration

**Usage** The civic address location associated with a port can be transmitted in Location Identification TLVs via the port.

Before using this command, create the location using the following commands:

- [location civic-location identifier](#) command
- [location civic-location configuration](#) command

If a civic-address location is deleted using the **no** variant of the [location civic-location identifier](#) command, it is automatically removed from all ports.

**Examples** To assign the civic address location 1 to port1.0.1, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# location civic-location-id 1
```

To remove a civic address location from port1.0.1, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no location civic-location-id
```

**Related Commands** [lldp med-tlv-select](#)  
[location civic-location identifier](#)  
[location civic-location configuration](#)  
[show location](#)

# location coord-location configuration

**Overview** Use this command to configure a coordinate-based location. All parameters must be configured before assigning this location identifier to a port.

**Syntax**

```
latitude <latitude>
lat-resolution <lat-resolution>
longitude <longitude>
long-resolution <long-resolution>
altitude <altitude> {meters|floor}
alt-resolution <alt-resolution>
datum {wgs84|nad83-navd|nad83-mllw}
```

| Parameter         | Description   |
|-------------------|---|
| <lat-resolution>  | Latitude resolution, as a number of valid bits, in the range 0 to 34.   |
| <latitude>        | Latitude value in degrees in the range -90.0 to 90.0  |
| <long-resolution> | Longitude resolution, as a number of valid bits, in the range 0 to 34.  |
| <longitude>       | Longitude value in degrees, in the range -180.0 to 180.0.   |
| <alt-resolution>  | Altitude resolution, as a number of valid bits, in the range 0 to 30. A resolution of 0 can be used to indicate an unknown value. |
| <altitude>        | Altitude value, in meters or floors.  |
| meters            | The altitude value is in meters.  |
| floors            | The altitude value is in floors.  |
| datum             | The geodetic system (or datum) that the specified coordinate values are based on.   |
| wgs84             | World Geodetic System 1984.   |
| nad83-navd        | North American Datum 1983 - North American Vertical Datum.  |
| nad83-mllw        | North American Datum 1983 - Mean Lower Low Water vertical datum.  |

**Default** By default no coordinate location information is configured.

**Mode** Coordinate Configuration

**Usage** Latitude and longitude values are always stored internally, and advertised in the Location Identification TLV, as 34-bit fixed-point binary numbers, with a 25-bit fractional part, irrespective of the number of digits entered by the user. Likewise

altitude is stored as a 30-bit fixed point binary number, with an 8-bit fractional part. Because the user-entered decimal values are stored as fixed point binary numbers, they cannot always be represented exactly—the stored binary number is converted to a decimal number for display in the output of the [show location](#) command. For example, a user-entered latitude value of “2.77” degrees is displayed as “2.7699999809265136718750000”.

The **lat-resolution**, **long-resolution**, and **alt-resolution** parameters allow the user to specify the resolution of each coordinate element as the number of valid bits in the internally-stored binary representation of the value. These resolution values can be used by emergency services to define a search area.

To specify the coordinate identifier, use the [location coord-location identifier](#) command. To remove coordinate information, delete the coordinate location by using the **no** variant of that command. To associate the coordinate location with particular ports, so that it can be advertised in TLVs from those ports, use the [location elin-location-id](#) command.

**Example** To configure the location for the White House in Washington DC, which has the coordinates based on the WGS84 datum of 38.89868 degrees North (with 22 bit resolution), 77.03723 degrees West (with 22 bit resolution), and 15 meters height (with 9 bit resolution), use the commands:

```
awplus# configure terminal
awplus(config)# location coord-location identifier 1
awplus(config-coord)# la-resolution 22
awplus(config-coord)# latitude 38.89868
awplus(config-coord)# lo-resolution 22
awplus(config-coord)# longitude -77.03723
awplus(config-coord)# alt-resolution 9
awplus(config-coord)# altitude 15 meters
awplus(config-coord)# datum wgs84
```

**Related Commands**

- [location coord-location-id](#)
- [location coord-location identifier](#)
- [show lldp local-info](#)
- [show location](#)

# location coord-location identifier

**Overview** Use this command to enter Coordinate Location Configuration mode for this coordinate location.

Use the **no** variant of this command to delete a coordinate location. This also removes the location from any ports it has been assigned to.

**Syntax** `location coord-location identifier <coord-loc-id>`  
`no location coord-location identifier <coord-loc-id>`

| Parameter                         | Description  |
|-----------------------------------|--|
| <code>&lt;coord-loc-id&gt;</code> | A unique coordinate location identifier, in the range 1 to 4095. |

**Default** By default there are no coordinate locations.

**Mode** Global Configuration

**Usage** Up to 400 locations can be configured on the switch for each type of location information, up to a total of 1200 locations.

To configure this coordinate location, use the [location coord-location configuration](#) command. To associate this coordinate location with particular ports, so that it can be advertised in TLVs from those ports, use the [location coord-location-id](#) command.

**Examples** To enter Coordinate Location Configuration mode to configure the coordinate location with ID 1, use the commands:

```
awplus# configure terminal
awplus(config)# location coord-location identifier 1
awplus(config-coord)#
```

To delete coordinate location 1, use the commands:

```
awplus# configure terminal
awplus(config)# no location coord-location identifier 1
```

**Related Commands** [location coord-location-id](#)  
[location coord-location configuration](#)  
[show lldp local-info](#)  
[show location](#)

# location coord-location-id

**Overview** Use this command to assign a coordinate location to the ports. The coordinate location must already exist. This replaces any previous assignment of coordinate location for the ports. Up to one location of each type can be assigned to a port.

Use the **no** variant of this command to remove a location from the ports.

**Syntax** `location coord-location-id <coord-loc-id>`  
`no location coord-location-id [<coord-loc-id>]`

| Parameter                         | Description                                     |
|-----------------------------------|---|
| <code>&lt;coord-loc-id&gt;</code> | Coordinate location ID, in the range 1 to 4095. |

**Default** By default no coordinate location is assigned to ports.

**Mode** Interface Configuration

**Usage** The coordinate location associated with a port can be transmitted in Location Identification TLVs via the port.

Before using this command, configure the location using the following commands:

- [location coord-location identifier](#) command
- [location coord-location configuration](#) command

If a coordinate location is deleted using the **no** variant of the [location coord-location identifier](#) command, it is automatically removed from all ports.

**Examples** To assign coordinate location 1 to port1.0.1, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# location coord-location-id 1
```

To remove a coordinate location from port1.0.1, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no location coord-location-id
```

**Related Commands** [lldp med-tlv-select](#)  
[location coord-location identifier](#)  
[location coord-location configuration](#)  
[show location](#)



# location elin-location

**Overview** Use this command to create or modify an ELIN location.

Use the **no** variant of this command to delete an ELIN location, and remove it from any ports it has been assigned to.

**Syntax** `location elin-location <elin> identifier <elin-loc-id>`  
`no location elin-location identifier <elin-loc-id>`

| Parameter     | Description  |
|---------------|--|
| <elin>        | Emergency Location Identification Number (ELIN) for Emergency Call Service (ECS), in the range 10 to 25 digits long. In North America, ELINs are typically 10 digits long. |
| <elin-loc-id> | A unique ELIN location identifier, in the range 1 to 4095.   |

**Default** By default there are no ELIN location identifiers.

**Mode** Global Configuration

**Usage** Up to 400 locations can be configured on the switch for each type of location information, up to a total of 1200 locations.

To assign this ELIN location to particular ports, so that it can be advertised in TLVs from those ports, use the [location elin-location-id](#) command.

**Examples** To create a new ELIN location with ID 1, and configure it with ELIN "1234567890", use the commands:

```
awplus# configure terminal
awplus(config)# location elin-location 1234567890 identifier 1
```

To delete existing ELIN location with ID 1, use the commands:

```
awplus# configure terminal
awplus(config)# no location elin-location identifier 1
```

**Related Commands** [location elin-location-id](#)  
[show lldp local-info](#)  
[show location](#)

# location elin-location-id

**Overview** Use this command to assign an ELIN location to the ports. The ELIN location must already exist. This replaces any previous assignment of ELIN location for the ports. Up to one location of each type can be assigned to a port.

Use the **no** variant of this command to remove a location identifier from the ports.

**Syntax** `location elin-location-id <elin-loc-id>`  
`no location elin-location-id [<elin-loc-id>]`

| Parameter                        | Description                                       |
|----------------------------------|---|
| <code>&lt;elin-loc-id&gt;</code> | ELIN location identifier, in the range 1 to 4095. |

**Default** By default no ELIN location is assigned to ports.

**Mode** Interface Configuration

**Usage** An ELIN location associated with a port can be transmitted in Location Identification TLVs via the port.  
Before using this command, configure the location using the [location elin-location](#) command.

If an ELIN location is deleted using the **no** variant of one of the [location elin-location](#) command, it is automatically removed from all ports.

**Examples** To assign ELIN location 1 to port 1.0.1, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# location elin-location-id 1
```

To remove an ELIN location from port 1.0.1, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1
awplus(config-if)# no location elin-location-id
```

**Related Commands** [lldp med-tlv-select](#)  
[location elin-location](#)  
[show location](#)

# show debugging lldp

**Overview** This command displays LLDP debug settings for specified ports. If no port list is supplied, LLDP debug settings for all ports are displayed.

**Syntax** `show debugging lldp [interface <port-list>]`

| Parameter   | Description  |
|-------------|--|
| <port-list> | The ports for which the LLDP debug settings are shown. |

**Mode** User Exec and Privileged Exec

**Examples** To display LLDP debug settings for all ports, use the command:

```
awplus# show debugging lldp
```

To display LLDP debug settings for ports 1.0.1 to 1.0.6, use the command:

```
awplus# show debugging lldp interface port1.0.1-1.0.6
```

**Output** Figure 45-1: Example output from the **show debugging lldp** command

|   |     |       |     |       |
|---|-----|-------|-----|-------|
| LLDP Debug settings:<br>Debugging for LLDP internal operation is on |     |       |     |       |
| Port  | Rx  | RxPkt | Tx  | TxPkt |
| -----   |     |       |     |       |
| 1.0.1   | Yes | Yes   | No  | No    |
| 1.0.2   | Yes | No    | No  | No    |
| 1.0.3   | No  | No    | No  | No    |
| 1.0.4   | Yes | Yes   | Yes | No    |
| 1.0.5   | Yes | No    | Yes | No    |
| 1.0.6   | Yes | Yes   | Yes | Yes   |

**Table 1:** Parameters in the output of the **show debugging lldp** command

| Parameter | Description  |
|-----------|--|
| Port      | Port name.   |
| Rx        | Whether debugging of LLDP receive is enabled on the port.              |
| RxPkt     | Whether debugging of LLDP receive packet dump is enabled on the port.  |
| Rx        | Whether debugging of LLDP transmit is enabled on the port.             |
| RxPkt     | Whether debugging of LLDP transmit packet dump is enabled on the port. |

**Related  
Commands** [debug lldp](#)

# show lldp

**Overview** This command displays LLDP status and global configuration settings.

**Syntax** show lldp

**Mode** User Exec and Privileged Exec

**Example** To display LLDP status and global configuration settings, use the command:

```
awplus# show lldp
```

## Output

**Table 2:** Example output from the **show lldp** command

```
awplus# show lldp

LLDP Global Configuration:                                [Default Values]
LLDP Status ..... Enabled                                [Disabled]
Notification Interval ..... 5 secs                        [5]
Tx Timer Interval ..... 30 secs                           [30]
Hold-time Multiplier ..... 4                             [4]
(Computed TTL value ..... 120 secs)
Reinitialization Delay .... 2 secs                        [2]
Tx Delay ..... 2 secs                                     [2]

Port Number Type..... Ifindex                            [Port-Number]
Fast Start Count ..... 5                                  [3]

LLDP Global Status:
Total Neighbor Count ..... 47
Neighbors table last updated 0 hrs 0 mins 43 secs ago
```

**Table 3:** Parameters in the output of the **show lldp** command

| Parameter              | Description   |
|------------------------|---|
| LLDP Status            | Whether LLDP is enabled. Default is disabled.   |
| Notification Interval  | Minimum interval between LLDP notifications.  |
| Tx Timer Interval      | Transmit interval between regular transmissions of LLDP advertisements.   |
| Hold-time Multiplier   | The holdtime multiplier. The transmit interval is multiplied by the holdtime multiplier to give the Time To Live (TTL) value that is advertised to neighbors. |
| Reinitialization Delay | The reinitialization delay. This is the minimum time after disabling LLDP transmit on a port before it can reinitialize again.                                |

**Table 3:** Parameters in the output of the **show lldp** command (cont.)

| Parameter                    | Description  |
|------------------------------|--|
| Tx Delay                     | The transmission delay. This is the minimum time interval between transmitting advertisements due to a change in LLDP local information. |
| Port Number Type             | The type of port identifier used to enumerate LLDP MIB local port entries, as set by the lldp port-number-type command.                  |
| Fast Start Count             | The number of times fast start advertisements are sent for LLDP-MED.   |
| Total Neighbor Count         | Number of LLDP neighbors discovered on all ports.  |
| Neighbors table last updated | The time since the LLDP neighbor table was last updated.   |

**Related Commands**   [show lldp interface](#)  
[show running-config lldp](#)

# show lldp interface

**Overview** This command displays LLDP configuration settings for specified ports. If no port list is specified, LLDP configuration for all ports is displayed.

**Syntax** `show lldp interface [<port-list>]`

| Parameter   | Description  |
|-------------|--|
| <port-list> | The ports for which the LLDP configuration settings are to be shown. |

**Mode** User Exec and Privileged Exec

**Examples** To display LLDP configuration settings for ports 1.0.1 to 1.0.6, use the command:

```
awplus# show lldp interface port1.0.1-1.0.6
```

To display LLDP configuration settings for all ports, use the command:

```
awplus# show lldp interface
```

**Output** Figure 45-2: Example output from the **show lldp interface** command

```
awplus# show lldp interface port1.0.1-1.0.8
LLDP Port Status and Configuration:
```

\* = LLDP is inactive on this port because it is a mirror analyser port

Notification Abbreviations:

RC = LLDP Remote Tables Change                      TC = LLDP-MED Topology Change

TLV Abbreviations:

Base: Pd = Port Description                      Sn = System Name  
       Sd = System Description                    Sc = System Capabilities  
       Ma = Management Address

802.1: Pv = Port VLAN ID                          Pp = Port And Protocol VLAN ID  
       Vn = VLAN Name                            Pi = Protocol Identity

802.3: Mp = MAC/PHY Config/Status               Po = Power Via MDI (PoE)  
       La = Link Aggregation                    Mf = Maximum Frame Size

MED: Mc = LLDP-MED Capabilities               Np = Network Policy  
       Lo = Location Identification              Pe = Extended PoE      In = Inventory

| Port   | Rx/Tx | Notif | Management Addr | Optional TLVs Enabled for Tx | Base     | 802.1    | 802.3      | MED |
|--------|-------|-------|-----------------|------------------------------|----------|----------|------------|-----|
| 1.0.1  | Rx Tx | RC -- | 192.168.100.123 | PdSnSdScMa                   | -----    | -----    | McNpLoPe-- |     |
| *1.0.2 | -- Tx | RC -- | 192.168.100.123 | PdSnSdScMa                   | -----    | -----    | McNpLoPe-- |     |
| 1.0.3  | Rx Tx | RC -- | 192.168.100.123 | Pd--SdScMa                   | PvPpVnPi | -----    | McNpLoPe-- |     |
| 1.0.4  | -- -- | RC -- | 192.168.100.123 | PdSnSd--Ma                   | -----    | -----    | McNpLoPe-- |     |
| 1.0.5  | Rx Tx | RC TC | 192.168.100.123 | PdSnSdScMa                   | PvPpVnPi | -----    | McNpLoPe-- |     |
| 1.0.6  | Rx Tx | RC TC | 192.168.100.123 | Pd----ScMa                   | -----    | -----    | McNpLoPe-- |     |
| 1.0.7  | Rx Tx | -- TC | 192.168.100.123 | PdSnSdScMa                   | PvPpVnPi | MpPoLaMf | McNpLoPeIn |     |
| 1.0.8  | Rx Tx | -- TC | 192.168.1.1     | PdSn--ScMa                   | PvPpVnPi | -----    | McNp-----  |     |

**Table 4:** Parameters in the output of the **show lldp interface** command

| Parameter                 | Description   |
|---------------------------|---|
| Port                      | Port name.  |
| Rx                        | Whether reception of LLDP advertisements is enabled on the port.  |
| Tx                        | Whether transmission of LLDP advertisements is enabled on the port.   |
| Notif                     | Whether sending SNMP notification for LLDP is enabled on the port: <ul style="list-style-type: none"> <li>RM = Remote Tables Change Notification</li> <li>TP = LLDP-MED Topology Change Notification</li> </ul>   |
| Management Addr           | Management address advertised to neighbors.   |
| Base TLVs Enabled for Tx  | List of optional Base TLVs enabled for transmission: <ul style="list-style-type: none"> <li>Pd = Port Description</li> <li>Sn =System Name</li> <li>Sd = System Description</li> <li>Sc =System Capabilities</li> <li>Ma = Management Address</li> </ul>            |
| 802.1 TLVs Enabled for Tx | List of optional 802.1 TLVs enabled for transmission: <ul style="list-style-type: none"> <li>Pv = Port VLAN ID</li> <li>Pp = Port And Protocol VLAN ID</li> <li>Vn = VLAN Name</li> <li>Pi =Protocol Identity</li> </ul>  |
| 802.3 TLVs Enabled for Tx | List of optional 802.3 TLVs enabled for transmission: <ul style="list-style-type: none"> <li>Mp = MAC/PHY Configuration/Status</li> <li>Po = Power Via MDI (PoE)</li> <li>La = Link Aggregation</li> <li>Mf = Maximum Frame Size</li> </ul>                         |
| MED TLVs Enabled for Tx   | List of optional LLDP-MED TLVs enabled for transmission: <ul style="list-style-type: none"> <li>Mc = LLDP-MED Capabilities</li> <li>Np = Network Policy</li> <li>Lo = Location Information,</li> <li>Pe = Extended Power-Via-MDI</li> <li>In = Inventory</li> </ul> |

**Related Commands** [show lldp](#)  
[show running-config lldp](#)



# show lldp local-info

**Overview** This command displays local LLDP information that can be transmitted through specified ports. If no port list is entered, local LLDP information for all ports is displayed.

**Syntax** `show lldp local-info [base] [dot1] [dot3] [med] [interface <port-list>]`

| Parameter   | Description   |
|-------------|---|
| base        | Information for base TLVs.                                |
| dot1        | Information for 802.1 TLVs.                               |
| dot3        | Information for 802.3 TLVs.                               |
| med         | Information for LLDP-MED TLVs.                            |
| <port-list> | The ports for which the local information is to be shown. |

**Mode** User Exec and Privileged Exec

**Usage** Whether and which local information is transmitted in advertisements via a port depends on:

- whether the port is set to transmit LLDP advertisements ([lldp transmit receive](#) command)
- which TLVs it is configured to send ([lldp tlv-select](#) command, [lldp med-tlv-select](#) command)

**Examples** To display local information transmitted via port 1.0.1, use the command:

```
awplus# show lldp local-info interface port1.0.1
```

To display local information transmitted via all ports, use the command:

```
awplus# show lldp local-info
```

**Output** Figure 45-3: Example output from **show lldp local-info**

```
LLDP Local Information:

Local port1.1.1:
  Chassis ID Type ..... MAC address
  Chassis ID ..... 0015.77c9.7453
  Port ID Type ..... Interface alias
  Port ID ..... port1.0.1
  TTL ..... 120
  Port Description ..... [not configured]
```

```

System Name ..... awplus
System Description ..... Allied Telesis router/switch, AW+
                        v5.4.5
System Capabilities - Supported .. Bridge, Router
                  - Enabled .... Bridge, Router
Management Address ..... 192.168.1.6
Port VLAN ID (PVID) ..... 1
Port & Protocol VLAN - Supported . Yes
                  - Enabled ... No
                  - VIDs ..... 0
VLAN Names ..... default
Protocol IDs ..... 9000, 0026424203000000, 888e01, aaaa03,
                        88090101, 00540000e302, 0800, 0806, 86dd
MAC/PHY Auto-negotiation ..... Supported, Enabled
    Advertised Capability ..... 1000BaseTFD, 100BaseTXFD, 100BaseTX,
                                10BaseTFD, 10BaseT
    Operational MAU Type ..... 1000BaseTFD (30)
Power Via MDI (PoE) ..... Supported, Enabled
    Port Class ..... PSE
    Pair Control Ability ..... Disabled
    Power Class ..... Unknown
Link Aggregation ..... Supported, Disabled
Maximum Frame Size ..... 1522
LLDP-MED Device Type ..... Network Connectivity
LLDP-MED Capabilities ..... LLDP-MED Capabilities, Network Policy,
                                Location Identification,
                                Extended Power - PSE, Inventory
Network Policy ..... [not configured]
Location Identification ..... Civic Address
    Country Code ..... NZ
    City ..... Christchurch
    Street Suffix ..... Avenue
    House Number ..... 27
    Primary Road Name ..... Nazareth
Location Identification ..... ELIN
    ELIN ..... 123456789012
LLDP-MED Device Type ..... Network Connectivity
LLDP-MED Capabilities ..... LLDP-MED Capabilities, Network Policy,
                                Location Identification,
                                Extended Power - PSE, Inventory
Extended Power Via MDI (PoE) ..... PSE
    Power Source ..... Primary Power
    Power Priority ..... Low
    Power Value ..... 4.4 Watts
Inventory Management:
    Hardware Revision ..... A-0
    Firmware Revision ..... 1.1.0
    Software Revision ..... v5.4.5
    Serial Number ..... G1Q78900B
    Manufacturer Name ..... Allied Telesis Inc.
    Model Name ..... x610-48Ts/XP
    Asset ID ..... [zero length]

```

Table 45-1: Parameters in the output of **show lldp local-info**

| Parameter                        | Description   |
|----------------------------------|---|
| Chassis ID Type                  | Type of the Chassis ID.   |
| Chassis ID                       | Chassis ID that uniquely identifies the local device.   |
| Port ID Type                     | Type of the Port ID.  |
| Port ID                          | Port ID of the local port through which advertisements are sent.  |
| TTL                              | Number of seconds that the information advertised by the local port remains valid.  |
| Port Description                 | Port description of the local port, as specified by the <a href="#">description (interface)</a> command.                    |
| System Name                      | System name, as specified by the <a href="#">hostname</a> command.  |
| System Description               | System description.   |
| System Capabilities (Supported)  | Capabilities that the local port supports.  |
| System Capabilities (Enabled)    | Enabled capabilities on the local port.   |
| Management Addresses             | Management address associated with the local port. To change this, use the <a href="#">lldp management-address</a> command. |
| Port VLAN ID (PVID)              | VLAN identifier associated with untagged or priority tagged frames received via the local port.                             |
| Port & Protocol VLAN (Supported) | Whether Port & Protocol VLANs (PPV) is supported on the local port.   |
| Port & Protocol VLAN (Enabled)   | Whether the port is in one or more Port & Protocol VLANs.   |
| Port & Protocol VLAN (VIDs)      | List of identifiers for Port & Protocol VLANs that the port is in.  |
| VLAN Names                       | List of VLAN names for VLANs that the local port is assigned to.  |
| Protocol IDs                     | List of protocols that are accessible through the local port.   |
| MAC/PHY Auto-negotiation         | Auto-negotiation support and current status of the 802.3 LAN on the local port.   |

Table 45-1: Parameters in the output of **show lldp local-info** (cont.)

| Parameter                    | Description  |
|------------------------------|--|
| Power Via MDI (PoE)          | PoE-capability and current status on the local port.   |
| Port Class                   | Whether the device is a PSE (Power Sourcing Entity) or a PD (Powered Device)                                   |
| Pair Control Ability         | Whether power pair selection can be controlled   |
| Power Pairs                  | Which power pairs are selected for power ("Signal Pairs" or "Spare Pairs") if pair selection can be controlled |
| Power Class                  | The power class of the PD device on the port (class 0, 1, 2, 3 or 4)   |
| Link Aggregation             | Whether the link is capable of being aggregated and it is currently in an aggregation.                         |
| Aggregated Port-ID           | Aggregated port identifier.  |
| Maximum Frame Size           | The maximum frame size capability of the implemented MAC and PHY.  |
| LLDP-MED Device Type         | LLDP-MED device type   |
| LLDP-MED Capabilities        | Capabilities LLDP-MED capabilities supported on the local port.  |
| Network Policy               | List of network policies configured on the local port.   |
| VLAN ID                      | VLAN identifier for the port for the specified application type  |
| Tagged Flag                  | Whether the VLAN ID is to be used as tagged or untagged  |
| Layer-2 Priority:            | Layer 2 User Priority (in the range 0 to 7)  |
| DSCP Value                   | Diffserv codepoint (in the range 0 to 63)  |
| Location Identification      | Location configured on the local port.   |
| Extended Power Via MDI (PoE) | PoE-capability and current status of the PoE parameters for Extended Power-Via-MDI TLV on the local port.      |
| Power Source                 | The power source the switch currently uses; either primary power or backup power.                              |
| Power Priority               | The power priority configured on the port; either critical, high or low.                                       |

Table 45-1: Parameters in the output of **show lldp local-info** (cont.)

| Parameter            | Description  |
|----------------------|--|
| Power Value          | The total power the switch can source over a maximum length cable to a PD device on the port. The value shows the power value in Watts from the PD side. |
| Inventory Management | Inventory information for the device.  |

**Related  
Commands**

- [description \(interface\)](#)
- [hostname](#)
- [lldp transmit receive](#)

# show lldp neighbors

**Overview** This command displays a summary of information received from neighbors via specified ports. If no port list is supplied, neighbor information for all ports is displayed.

**Syntax** `show lldp neighbors [interface <port-list>]`

| Parameter   | Description  |
|-------------|--|
| <port-list> | The ports for which the neighbor information is to be shown. |

**Mode** User Exec and Privileged Exec

**Examples** To display neighbor information received via all ports, use the command:

```
awplus# show lldp neighbors
```

To display neighbor information received via ports 1.0.1 and 1.0.6 with LLDP-MED configuration, use the command:

```
awplus# show lldp neighbors interface port1.0.1,port1.0.6
```

**Output** Figure 45-4: Example output from the **show lldp neighbors** command

|  |                |             |                         |          |     |     |
|--|----------------|-------------|-------------------------|----------|-----|-----|
| LLDP Neighbor Information:   |                |             |                         |          |     |     |
| Total number of neighbors on these ports .... 4                                    |                |             |                         |          |     |     |
| System Capability Codes:   |                |             |                         |          |     |     |
| O = Other    P = Repeater    B = Bridge                      W = WLAN Access Point |                |             |                         |          |     |     |
| R = Router   T = Telephone   C = DOCSIS Cable Device       S = Station Only        |                |             |                         |          |     |     |
| LLDP-MED Device Type and Power Source Codes:                                       |                |             |                         |          |     |     |
| 1 = Class I    3 = Class III    PSE = PoE    Both = PoE&Local    Prim = Primary    |                |             |                         |          |     |     |
| 2 = Class II   N = Network Con.   Loc1 = Local   Unkn = Unknown   Back = Backup    |                |             |                         |          |     |     |
| Local  | Neighbor       | Neighbor    | Neighbor                | System   | MED |     |
| Port   | Chassis ID     | Port ID     | Sys Name                | Cap.     | Ty  | Pwr |
| -----  |                |             |                         |          |     |     |
| 1.0.1  | 002d.3044.7ba6 | port1.0.2   | awplus                  | OPBWRTCS |     |     |
| 1.0.1  | 0011.3109.e5c6 | port1.0.3   | AT-9924 switch/route... | --B-R--- |     |     |
| 1.0.6  | 0000.10cf.8590 | port3       | AR-442S                 | --B-R--- |     |     |
| 1.0.6  | 00ee.4352.df51 | 192.168.1.2 | Jim's desk phone        | --B--T-- | 3   | PSE |

**Table 46:** Parameters in the output of the **show lldp neighbors** command

| Parameter           | Description  |
|---------------------|--|
| Local Port          | Local port on which the neighbor information was received.       |
| Neighbor Chassis ID | Chassis ID that uniquely identifies the neighbor.                |
| Neighbor Port Name  | Port ID of the neighbor.   |
| Neighbor Sys Name   | System name of the LLDP neighbor.                                |
| Neighbor Capability | Capabilities that are supported and enabled on the neighbor.     |
| System Capability   | System Capabilities of the LLDP neighbor.                        |
| MED Device Type     | LLDP-MED Device class (Class I, II, III or Network Connectivity) |
| MED Power Source    | LLDP-MED Power Source  |

**Related Commands**   [show lldp neighbors detail](#)

# show lldp neighbors detail

**Overview** This command displays in detail the information received from neighbors via specified ports. If no port list is supplied, detailed neighbor information for all ports is displayed.

**Syntax** `show lldp neighbors detail [base] [dot1] [dot3] [med] [interface <port-list>]`

| Parameter   | Description  |
|-------------|--|
| base        | Information for base TLVs.                                   |
| dot1        | Information for 802.1 TLVs.                                  |
| dot3        | Information for 803.1 TLVs.                                  |
| med         | Information for LLDP-MED TLVs.                               |
| <port-list> | The ports for which the neighbor information is to be shown. |

**Mode** User Exec and Privileged Exec

**Examples** To display detailed neighbor information received via all ports, use the command:

```
awplus# show lldp neighbors detail
```

To display detailed neighbor information received via ports 1.0.1, use the command:

```
awplus# show lldp neighbors detail interface port1.0.1
```



**Output** Figure 45-5: Example output from the **show lldp neighbors detail** command

```
awplus# show lldp neighbors detail interface port1.0.1
LLDP Detailed Neighbor Information:

Local port1.0.1:
  Neighbors table last updated 0 hrs 0 mins 40 secs ago

  Chassis ID Type ..... MAC address
  Chassis ID ..... 0004.cd28.8754
  Port ID Type ..... Interface alias
  Port ID ..... port1.0.6
  TTL ..... 120 (secs)
  Port Description ..... [zero length]
  System Name ..... awplus
  System Description ..... Allied Telesis router/switch, AW+ v5.4.4
  System Capabilities - Supported .. Bridge, Router
                        - Enabled .... Bridge, Router
  Management Addresses ..... 0004.cd28.8754
  Port VLAN ID (PVID) ..... 1
  Port & Protocol VLAN - Supported . Yes
                        - Enabled ... Yes
                        - VIDs ..... 5
  VLAN Names ..... default, vlan5
  Protocol IDs ..... 9000, 0026424203000000, 888e01, 8100,
                        88090101, 00540000e302, 0800, 0806, 86dd
  MAC/PHY Auto-negotiation ..... Supported, Enabled
    Advertised Capability ..... 1000BaseTFD, 100BaseTXFD, 100BaseTX,
                                10BaseTFD, 10BaseT
    Operational MAU Type ..... 1000BaseTFD (30)
  Power Via MDI (PoE) ..... [not advertised]
  Link Aggregation ..... Supported, Disabled
  Maximum Frame Size ..... 1522 (Octets)
  LLDP-MED Device Type ..... Network Connectivity
  LLDP-MED Capabilities ..... LLDP-MED Capabilities, Network Policy,
                                Location Identification,
                                Extended Power - PSE, Inventory
  Network Policy ..... [not advertised]
  Location Identification ..... [not advertised]
  Extended Power Via MDI (PoE) .... PD
    Power Source ..... PSE
    Power Priority ..... High
    Power Value ..... 4.4 Watts
  Inventory Management:
    Hardware Revision ..... X1-0
    Firmware Revision ..... 1.1.0
    Software Revision ..... v5.4.4
    Serial Number ..... M1NB73008
    Manufacturer Name ..... Allied Telesis Inc.
    Model Name ..... SBx908
    Asset ID ..... [zero length]
```

**Table 47:** Parameters in the output of the **show lldp neighbors detail** command

| Parameter                        | Description   |
|----------------------------------|---|
| Chassis ID Type                  | Type of the Chassis ID.   |
| Chassis ID                       | Chassis ID that uniquely identifies the neighbor.   |
| Port ID Type                     | Type of the Port ID.  |
| Port ID                          | Port ID of the neighbor.  |
| TTL                              | Number of seconds that the information advertised by the neighbor remains valid.          |
| Port Description                 | Port description of the neighbor's port.  |
| System Name                      | Neighbor's system name.   |
| System Description               | Neighbor's system description.  |
| System Capabilities (Supported)  | Capabilities that the neighbor supports.  |
| System Capabilities (Enabled)    | Capabilities that are enabled on the neighbor.  |
| Management Addresses             | List of neighbor's management addresses.  |
| Port VLAN ID (PVID)              | VLAN identifier associated with untagged or priority tagged frames for the neighbor port. |
| Port & Protocol VLAN (Supported) | Whether Port & Protocol VLAN is supported on the LLDP neighbor.                           |
| Port & Protocol VLAN (Enabled)   | Whether Port & Protocol VLAN is enabled on the LLDP neighbor.                             |
| Port & Protocol VLAN (VIDs)      | List of Port & Protocol VLAN identifiers.   |
| VLAN Names                       | List of names of VLANs that the neighbor's port belongs to.                               |
| Protocol IDs                     | List of protocols that are accessible through the neighbor's port.                        |
| MAC/PHY Auto-negotiation         | Auto-negotiation configuration and status   |
| Power Via MDI (PoE)              | PoE configuration and status of 802.3 Power-Via-MDI TLV                                   |
| Link Aggregation                 | Link aggregation information  |

**Table 47:** Parameters in the output of the **show lldp neighbors detail** command (cont.)

| Parameter                    | Description                       |
|------------------------------|-----------------------------------|
| Maximum Frame Size           | The maximum frame size capability |
| LLDP-MED Device Type         | LLDP-MED Device type              |
| LLDP-MED Capabilities        | LLDP-MED capabilities supported   |
| Network Policy               | List of network policies          |
| Location Identification      | Location information              |
| Extended Power Via MDI (PoE) | PoE-capability and current status |
| Inventory Management         | Inventory information             |

**Related Commands** [show lldp neighbors](#)

# show lldp statistics

**Overview** This command displays the global LLDP statistics (packet and event counters).

**Syntax** show lldp statistics

**Mode** User Exec and Privileged Exec

**Example** To display global LLDP statistics information, use the command:

```
awplus# show lldp statistics
```

## Output

**Table 48:** Example output from the **show lldp statistics** command

|  |                          |
|--|--------------------------|
| awplus# show lldp statistics           |                          |
| Global LLDP Packet and Event counters: |                          |
| Frames:                                | Out ..... 345            |
|  | In ..... 423             |
|  | In Errored ..... 0       |
|  | In Dropped ..... 0       |
| TLVs:                                  | Unrecognized ..... 0     |
|  | Discarded ..... 0        |
| Neighbors:                             | New Entries ..... 20     |
|  | Deleted Entries ..... 20 |
|  | Dropped Entries ..... 0  |
|  | Entry Age-outs ..... 20  |

**Table 49:** Parameters in the output of the **show lldp statistics** command

| Parameter             | Description  |
|-----------------------|--|
| Frames Out            | Number of LLDPDU frames transmitted.   |
| Frames In             | Number of LLDPDU frames received.  |
| Frames In Errored     | Number of invalid LLDPDU frames received.  |
| Frames In Dropped     | Number of LLDPDU frames received and discarded for any reason.   |
| TLVs Unrecognized     | Number of LLDP TLVs received that are not recognized but the TLV type is in the range of reserved TLV types. |
| TLVs Discarded        | Number of LLDP TLVs discarded for any reason.  |
| Neighbors New Entries | Number of times the information advertised by neighbors has been inserted into the neighbor table.           |

**Table 49:** Parameters in the output of the **show lldp statistics** command (cont.)

| Parameter                        | Description  |
|----------------------------------|--|
| Neighbors Deleted Entries        | Number of times the information advertised by neighbors has been removed from the neighbor table.  |
| Neighbors Dropped Entries        | Number of times the information advertised by neighbors could not be entered into the neighbor table because of insufficient resources.            |
| Neighbors Entry Age-outs Entries | Number of times the information advertised by neighbors has been removed from the neighbor table because the information TTL interval has expired. |

**Related Commands**   [clear lldp statistics](#)  
[show lldp statistics interface](#)

# show lldp statistics interface

**Overview** This command displays the LLDP statistics (packet and event counters) for specified ports. If no port list is supplied, LLDP statistics for all ports are displayed.

**Syntax** `show lldp statistics interface [<port-list>]`

| Parameter   | Description   |
|-------------|---|
| <port-list> | The ports for which the statistics are to be shown. |

**Mode** User Exec and Privileged Exec

**Examples** To display LLDP statistics information for all ports, use the command:

```
awplus# show lldp statistics interface
```

To display LLDP statistics information for ports 1.0.1 and 1.0.6, use the command:

```
awplus# show lldp statistics interface port1.0.1,port1.0.6
```

## Output

**Table 50:** Example output from the **show lldp statistics interface** command

|  |                         |
|--|-------------------------|
| awplus# show lldp statistics interface port1.0.1,port1.0.6 |                         |
| LLDP Packet and Event Counters:                            |                         |
| port1.0.1  |                         |
| Frames:  | Out ..... 27            |
|  | In ..... 22             |
|  | In Errored ..... 0      |
|  | In Dropped ..... 0      |
| TLVs:  | Unrecognized ..... 0    |
|  | Discarded ..... 0       |
| Neighbors:   | New Entries ..... 3     |
|  | Deleted Entries ..... 0 |
|  | Dropped Entries ..... 0 |
|  | Entry Age-outs ..... 0  |
| port1.0.6  |                         |
| Frames:  | Out ..... 15            |
|  | In ..... 18             |
|  | In Errored ..... 0      |
|  | In Dropped ..... 0      |
| TLVs:  | Unrecognized ..... 0    |
|  | Discarded ..... 0       |
| Neighbors:   | New Entries ..... 1     |
|  | Deleted Entries ..... 0 |
|  | Dropped Entries ..... 0 |
|  | Entry Age-outs ..... 0  |

**Table 51:** Parameters in the output of the **show lldp statistics interface** command

| Parameter                        | Description  |
|----------------------------------|--|
| Frames Out                       | Number of LLDPDU frames transmitted.   |
| Frames In                        | Number of LLDPDU frames received.  |
| Frames In Errored                | Number of invalid LLDPDU frames received.  |
| Frames In Dropped                | Number of LLDPDU frames received and discarded for any reason.   |
| TLVs Unrecognized                | Number of LLDP TLVs received that are not recognized but the TLV type is in the range of reserved TLV types.                                       |
| TLVs Discarded                   | Number of LLDP TLVs discarded for any reason.  |
| Neighbors New Entries            | Number of times the information advertised by neighbors has been inserted into the neighbor table.   |
| Neighbors Deleted Entries        | Number of times the information advertised by neighbors has been removed from the neighbor table.  |
| Neighbors Dropped Entries        | Number of times the information advertised by neighbors could not be entered into the neighbor table because of insufficient resources.            |
| Neighbors Entry Age-outs Entries | Number of times the information advertised by neighbors has been removed from the neighbor table because the information TTL interval has expired. |

**Related Commands**   [clear lldp statistics](#)  
[show lldp statistics](#)

# show location

**Overview** Use this command to display selected location information configured on the switch.

**Syntax**

```
show location {civic-location|coord-location|elin-location}
show location {civic-location|coord-location|elin-location}
identifier {<civic-loc-id>|<coord-loc-id>|<elin-loc-id>}
show location {civic-location|coord-location|elin-location}
interface <port-list>
```

| Parameter      | Description  |
|----------------|--|
| civic-location | Display civic location information.                        |
| coord-location | Display coordinate location information.                   |
| elin-location  | Display ELIN location information.                         |
| <civic-loc-id> | Civic address location identifier, in the range 1 to 4095. |
| <coord-loc-id> | Coordinate location identifier, in the range 1 to 4095.    |
| <elin-loc-id>  | ELIN location identifier, in the range 1 to 4095.          |
| <port-list>    | Ports to display information about.                        |

**Mode** User Exec and Privileged Exec

**Examples** To display a civic address location configured on port1.0.1, use the command:

```
awplus# show location civic-location interface port1.0.1
```

**Table 52:** Example output from the **show location** command

| awplus# show location civic-location interface port1.0.1 |    |                   |      |              |       |
|--|----|-------------------|------|--------------|-------|
| Port   | ID | Element           | Type | Element      | Value |
| -----  |    |                   |      |              |       |
| 1.0.1  | 1  | Country           |      | NZ           |       |
|  |    | City              |      | Christchurch |       |
|  |    | Street-suffix     |      | Avenue       |       |
|  |    | House-number      |      | 27           |       |
|  |    | Primary-road-name |      | Nazareth     |       |

To display coordinate location information configured on the identifier 1, use the command:

```
awplus# show location coord-location identifier 1
```



**Table 53:** Example output from the **show location** command

| awplus# show location coord-location identifier 1 |           |            |                                       |
|---|-----------|------------|---------------------------------------|
| ID  | Element   | Type       | Element Value                         |
| -----   |           |            |                                       |
| 1   | Latitude  | Resolution | 15 bits                               |
|   | Latitude  |            | 38.8986481130123138427734375 degrees  |
|   | Longitude | Resolution | 15 bits                               |
|   | Longitude |            | 130.2323232293128967285156250 degrees |
|   | Altitude  | Resolution | 10 bits                               |
|   | Altitude  |            | 2.50000000 meters                     |
|   | Map       | Datum      | WGS 84                                |

The coordinate location information displayed may differ from the information entered because it is stored in binary format. For more information, see the [location coord-location configuration](#) command.

To display all ELIN location information configured on the switch, use the command:

```
awplus# show location elin-location
```

**Table 54:** Example output from the **show location elin-location** command

| awplus# show location elin-location |            |
|-------------------------------------|------------|
| ID                                  | ELIN       |
| -----                               |            |
| 1                                   | 1234567890 |
| 2                                   | 5432154321 |

**Related  
Commands**

[location elin-location-id](#)  
[location civic-location identifier](#)  
[location civic-location configuration](#)  
[location coord-location identifier](#)  
[location coord-location configuration](#)  
[location elin-location](#)

# 46

# SMTP Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure SMTP.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

- Command List**
- [“debug mail”](#) on page 1919
  - [“delete mail”](#) on page 1920
  - [“mail”](#) on page 1921
  - [“mail from”](#) on page 1922
  - [“mail smtpserver”](#) on page 1923
  - [“show counter mail”](#) on page 1924
  - [“show mail”](#) on page 1925
  - [“undebug mail”](#) on page 1926

# debug mail

**Overview** This command turns on debugging for sending emails.  
The **no** variant of this command turns off debugging for sending emails.

**Syntax** debug mail  
no debug mail

**Mode** Privileged Exec

**Examples** To turn on debugging for sending emails, use the command:  
awplus# debug mail  
To turn off debugging for sending emails, use the command:  
awplus# no debug mail

**Related Commands** delete mail  
mail  
mail from  
mail smtpserver  
show mail  
show counter mail  
undebug mail

# delete mail

**Overview** This command deletes mail from the queue.

**Syntax** delete mail [mail-id <mail-id>|all]

| Parameter | Description  |
|-----------|--|
| mail-id   | Deletes a single mail from the mail queue.   |
|           | <div>&lt;mail-id&gt;      An unique mail ID number. Use the <a href="#">show mail</a> command to display this for an item of mail.</div> |
| all       | Delete all the mail in the queue.  |

**Mode** Privileged Exec

**Examples** To delete a unique mail item 20060912142356.1234 from the queue, use the command:

```
awplus# delete mail 20060912142356.1234
```

To delete all mail from the queue, use the command:

```
awplus# delete mail all
```

**Related Commands**

- [debug mail](#)
- [mail](#)
- [mail from](#)
- [mail smtpserver](#)
- [show mail](#)

# mail

**Overview** This command sends an email using the SMTP protocol. If you specify a file the text inside the file is sent in the message body.

If you do not specify the **to**, **file**, or **subject** parameters, the CLI prompts you for the missing information.

Before you can send mail using this command, you must specify the sending email address using the [mail from](#) command and a mail server using the [mail smtpserver](#) command.

**Syntax** mail [{to <to>|subject <subject>|file <filename>}]

| Parameter | Description  |
|-----------|--|
| to        | The email recipient.   |
|           | <to> Email address.  |
| subject   | Description of the subject of this email. Use quote marks when the subject text contains spaces. |
|           | <subject> String.  |
| file      | File to insert as text into the message body.  |
|           | <filename> String.   |

**Mode** Privileged Exec

**Example** To send an email to `rei@nerv.com` with the subject `dummy plug configuration`, and with the message body inserted from the file `plug.conf` use the command:

```
awplus# mail rei@nerv.com subject dummy plug configuration
filename plug.conf
```

**Related Commands**

- [debug mail](#)
- [delete mail](#)
- [mail from](#)
- [mail smtpserver](#)
- [show mail](#)
- [show counter mail](#)

# mail from

**Overview** This command sets an email address for the “mail from” SMTP command. You must specify a sending email address with this command before you can send any email.

**Syntax** mail from <from>

| Parameter | Description                                   |
|-----------|---|
| <from>    | The email address that the mail is sent from. |

**Mode** Global Configuration

**Example** To set the email address from which you are sending mail to “kaji@nerv.com”, use the command:

```
awplus(config)# mail from kaji@nerv.com
```

**Related  
Commands**

- [delete mail](#)
- [mail](#)
- [mail smtpserver](#)
- [show mail](#)

# mail smtpserver

**Overview** This command sets the IP address of the SMTP server that your device sends email to. You must specify a mail server with this command before you can send any email.

**Syntax** mail smtpserver <ip-address>

| Parameter    | Description   |
|--------------|---|
| <ip-address> | Internet Protocol (IP) Address for the mail server specified. |

**Mode** Global Configuration

**Example** To specify a mail server at 192.168.0.1, use the command:

```
awplus# mail smtpserver 192.168.0.1
```

**Related Commands**

- [debug mail](#)
- [delete mail](#)
- [mail](#)
- [mail from](#)
- [show mail](#)
- [show counter mail](#)

# show counter mail

**Overview** This command displays the mail counters.

**Syntax** `show counter mail`

**Mode** User Exec and Privileged Exec

**Output** Figure 46-1: Example output from the **show counter mail** command

```
Mail Client (SMTP) counters
Mails Sent          ..... 0
Mails Sent Fails    ..... 1
```

**Table 1:** Parameters in the output of the **show counter mail** command

| Parameter        | Description   |
|------------------|---|
| Mails Sent       | The number of emails sent successfully since the last device restart.         |
| Mails Sent Fails | The number of emails the device failed to send since the last device restart. |

**Example** To show the emails in the queue use the command:

```
awplus# show counter mail
```

**Related  
Commands**

- [debug mail](#)
- [delete mail](#)
- [mail](#)
- [mail from](#)
- [show mail](#)



# show mail

**Overview** This command displays the emails in the queue.

**Syntax** `show mail`

**Mode** Privileged Exec

**Example** To display the emails in the queue use the command:

```
awplus# show mail
```

**Related  
Commands**

- [delete mail](#)
- [mail](#)
- [show counter mail](#)

# undebug mail

**Overview** This command applies the functionality of the no [debug mail](#) command.

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure Remote Monitoring (RMON).

For an introduction to RMON and an RMON configuration example, see the [RMON Feature Overview and Configuration Guide](#).

RMON is disabled by default in AlliedWare Plus™. No RMON alarms or events are configured.

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

- Command List**
- [“rmon alarm”](#) on page 1928
  - [“rmon collection history”](#) on page 1930
  - [“rmon collection stats”](#) on page 1931
  - [“rmon event”](#) on page 1932
  - [“show rmon alarm”](#) on page 1933
  - [“show rmon event”](#) on page 1934
  - [“show rmon history”](#) on page 1936
  - [“show rmon statistics”](#) on page 1938

# rmon alarm

**Overview** Use this command to configure an RMON alarm to monitor the value of an SNMP object, and to trigger specified events when the monitored object crosses specified thresholds.

To specify the action taken when the alarm is triggered, use the event index of an event defined by the [rmon event](#) command.

Use the **no** variant of this command to remove the alarm configuration.

**NOTE:** Only alarms for switch port interfaces, not for VLAN interfaces, can be configured.

**Syntax**

```
rmon alarm <alarm-index> <oid> interval <1-2147483647>
{delta|absolute} rising-threshold <1-2147483647> event
<rising-event-index> falling-threshold <1-2147483647> event
<falling-event-index> alarmstartup [1|2|3] [owner <owner>]

no rmon alarm <alarm-index>
```

| Parameter                           | Description   |
|-------------------------------------|---|
| <alarm-index>                       | <1-65535> Alarm entry index value.  |
| <oid>                               | The variable SNMP MIB Object Identifier (OID) name to be monitored, in the format etherStatsEntry.<field>.<stats-index>. For example, etherStatsEntry.5.22 is the OID for the etherStatsPkts field in the etherStatsEntry table for the interface defined by the <stats-index> 22 in the <a href="#">rmon collection stats</a> command. |
| interval<br><1-2147483647>          | Polling interval in seconds.  |
| delta                               | The RMON MIB alarmSampleType: the change in the monitored MIB object value between the beginning and end of the polling interval.   |
| absolute                            | The RMON MIB alarmSampleType: the value of the monitored MIB object.  |
| rising-threshold<br><1-2147483647>  | Rising threshold value of the alarm entry in seconds.   |
| <rising-event-index>                | <1-65535> The event to be triggered when the monitored object value reaches the rising threshold value. This is an event index of an event specified by the <a href="#">rmon event</a> command.   |
| falling-threshold<br><1-2147483647> | Falling threshold value of the alarm entry in seconds.  |
| <falling-event-index>               | <1-65535> The event to be triggered when the monitored object value reaches the falling threshold value. This is an event index of an event specified by the <a href="#">rmon event</a> command.  |

| Parameter            | Description  |
|----------------------|--|
| alarmstartup {1 2 3} | Whether RMON can trigger a falling alarm (1), a rising alarm (2) or either (3) when you first start monitoring. See the Usage section for more information. The default is setting 3 (either). |
| owner <owner>        | Arbitrary owner name to identify the alarm entry.  |

**Default** By default, there are no alarms.

**Mode** Global Configuration

**Usage** RMON alarms have a rising and falling threshold. Once the alarm monitoring is operating, you cannot have a falling alarm unless there has been a rising alarm and vice versa.

However, when you start RMON alarm monitoring, an alarm must be generated without the other type of alarm having first been triggered. The **alarmstartup** parameter allows this. It is used to say whether RMON can generate a rising alarm (1), a falling alarm (2) or either alarm (3) as the first alarm.

Note that the SNMP MIB Object Identifier (OID) indicated in the command syntax with <oid> must be specified as a dotted decimal value with the form etherStatsEntry.<field>.<stats-index>, for example, etherStatsEntry.22.5.

**Example** To configure an alarm to monitor the change per minute in the etherStatsPkt value for interface 22 (defined by stats-index 22 in the [rmon collection stats](#) command), to trigger event 2 (defined by the [rmon event](#) command) when it reaches the rising threshold 400, and to trigger event 3 when it reaches the falling threshold 200, and identify this alarm as belonging to Maria, use the commands:

```
awplus# configure terminal
awplus(config)# rmon alarm 229 etherStatsEntry.22.5 interval 60
delta rising-threshold 400 event 2 falling-threshold 200 event
3 alarmstartup 3 owner maria
```

**Related  
Commands** [rmon collection stats](#)  
[rmon event](#)

# rmon collection history

**Overview** Use this command to create a history statistics control group to store a specified number of snapshots (buckets) of the standard RMON statistics for the switch port, and to collect these statistics at specified intervals. If there is sufficient memory available, then the device will allocate memory for storing the set of buckets that comprise this history control.

Use the **no** variant of this command to remove the specified history control configuration.

**NOTE:** Only a history for switch port interfaces, not for VLAN interfaces, can be collected.

**Syntax** `rmon collection history <history-index> [buckets <1-65535>]  
[interval <1-3600>] [owner <owner>]  
no rmon collection history <history-index>`

| Parameter         | Description   |
|-------------------|---|
| <history-index>   | <1-65535> A unique RMON history control entry index value.          |
| buckets <1-65535> | Number of requested buckets to store snapshots. Default 50 buckets. |
| interval <1-3600> | Polling interval in seconds. Default 1800 second polling interval.  |
| owner<owner>      | Owner name to identify the entry.                                   |

**Default** The default interval is 1800 seconds and the default buckets is 50 buckets.

**Mode** Interface Configuration

**Example** To create a history statistics control group to store 200 snapshots with an interval of 500 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# rmon collection history 200 buckets 500
interval 600 owner herbert
```

To disable the history statistics control group, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no rmon collection history 200
```

# rmon collection stats

**Overview** Use this command to enable the collection of RMON statistics on a switch port, and assign an index number by which to access these collected statistics.

Use the **no** variant of this command to stop collecting RMON statistics on this switch port.

**NOTE:** Only statistics for switch port interfaces, not for VLAN interfaces, can be collected.

**Syntax** `rmon collection stats <collection-index> [owner <owner>]`  
`no rmon collection stats <collection-index>`

| Parameter          | Description   |
|--------------------|---|
| <collection-index> | <1-65535> Give this collection of statistics an index number to uniquely identify it. This is the index to use to access the statistics collected for this switch port. |
| owner <owner>      | An arbitrary owner name to identify this statistics collection entry.   |

**Default** RMON statistics are not enabled by default.

**Mode** Interface Configuration

**Example** To enable the collection of RMON statistics with a statistics index of 200, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# rmon collection stats 200 owner myrtle
```

To stop collecting RMON statistics, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.2
awplus(config-if)# no rmon collection stats 200
```

# rmon event

**Overview** Use this command to create an event definition for a log or a trap or both. The event index for this event can then be referred to by the [rmon alarm](#) command.

Use the **no** variant of this command to remove the event definition.

**NOTE:** Only the events for switch port interfaces, not for VLAN interfaces, can be collected.

**Syntax**

```
rmon event <event-index> [description <description>|owner <owner>| trap <trap>]
```

```
rmon event <event-index> [log [description <description>|owner <owner>|trap <trap>] ]
```

```
rmon event <event-index> [log trap [description <description>|owner <owner>] ]
```

```
no rmon event <event-index>
```

| Parameter                | Description                               |
|--------------------------|---|
| <event-index>            | <1-65535> Unique event entry index value. |
| log                      | Log event type.                           |
| trap                     | Trap event type.                          |
| log trap                 | Log and trap event type.                  |
| description<description> | Event entry description.                  |
| owner <owner>            | Owner name to identify the entry.         |

**Default** No event is configured by default.

**Mode** Global Configuration

**Example** To create an event definition for a log with an index of 299, use this command:

```
awplus# configure terminal
awplus(config)# rmon event 299 log description cond3 owner alfred
```

To to remove the event definition, use the command:

```
awplus# configure terminal
awplus(config)# no rmon event 299
```

**Related Commands** [rmon alarm](#)



# show rmon alarm

**Overview** Use this command to display the alarms and threshold configured for the RMON probe.

**NOTE:** *Only the alarms for switch port interfaces, not for VLAN interfaces, can be shown.*

**Syntax** `show rmon alarm`

**Mode** User Exec and Privileged Exec

**Example** To display the alarms and threshold, use this command:

```
awplus# show rmon alarm
```

**Related  
Commands** [rmon alarm](#)

# show rmon event

**Overview** Use this command to display the events configured for the RMON probe.

**NOTE:** Only the events for switch port interfaces, not for VLAN interfaces, can be shown.

**Syntax** show rmon event

**Mode** User Exec and Privileged Exec

**Output** Figure 47-1: Example output from the **show rmon event** command

```
awplus#sh rmon event
event Index = 787
  Description TRAP
  Event type log & trap
  Event community name gopher
  Last Time Sent = 0
  Owner RMON_SNMP

event Index = 990
  Description TRAP
  Event type trap
  Event community name teabo
  Last Time Sent = 0
  Owner RMON_SNMP
```

**NOTE:** The following etherStats counters are not currently available for Layer 3 interfaces:

- etherStatsBroadcastPkts
- etherStatsCRCAlignErrors
- etherStatsUndersizePkts
- etherStatsOversizePkts
- etherStatsFragments
- etherStatsJabbers
- etherStatsCollisions
- etherStatsPkts64Octets
- etherStatsPkts65to127Octets
- etherStatsPkts128to255Octets
- etherStatsPkts256to511Octets
- etherStatsPkts512to1023Octets
- etherStatsPkts1024to1518Octets

**Example** To display the events configured for the RMON probe, use this command:

```
awplus# show rmon event
```

**Related  
Commands** [rmon event](#)

# show rmon history

**Overview** Use this command to display the parameters specified on all the currently defined RMON history collections on the device.

**NOTE:** Only the history for switch port interfaces, not for VLAN interfaces, can be shown.

**Syntax** `show rmon history`

**Mode** User Exec and Privileged Exec

**Output** Figure 47-2: Example output from the **show rmon history** command

```
awplus#sh rmon history
  history index = 56
    data source ifindex = 4501
    buckets requested = 34
    buckets granted = 34
    Interval = 2000
    Owner Andrew

  history index = 458
    data source ifindex = 5004
    buckets requested = 400
    buckets granted = 400
    Interval = 1500
    Owner trev
=====
```

**NOTE:** The following etherStats counters are not currently available for Layer 3 interfaces:

- etherStatsBroadcastPkts
- etherStatsCRCAlignErrors
- etherStatsUndersizePkts
- etherStatsOversizePkts
- etherStatsFragments
- etherStatsJabbers
- etherStatsCollisions
- etherStatsPkts64Octets
- etherStatsPkts65to127Octets
- etherStatsPkts128to255Octets
- etherStatsPkts256to511Octets
- etherStatsPkts512to1023Octets

- etherStatsPkts1024to1518Octets

**Example** To display the parameters specified on all the currently defined RMON history collections, use the commands:

```
awplus# show rmon history
```

**Related  
Commands** [rmon collection history](#)

# show rmon statistics

**Overview** Use this command to display the current values of the statistics for all the RMON statistics collections currently defined on the device.

**NOTE:** Only statistics for switch port interfaces, not for VLAN interfaces, can be shown.

**Syntax** show rmon statistics

**Mode** User Exec and Privileged Exec

**Example** To display the current values of the statistics for all the RMON statistics collections, use the commands:

```
awplus# show rmon statistics
```

**Output** Figure 47-3: Example output from the **show rmon statistics** command

```
awplus#show rmon statistics
rmon collection index 45
stats->ifindex = 4501
input packets 1279340, bytes 85858960, dropped 00, multicast packets 1272100
output packets 7306090, bytes 268724, multicast packets 7305660 broadcast
packets 290
rmon collection index 679
stats->ifindex = 5013
input packets 00, bytes 00, dropped 00, multicast packets 00
output packets 8554550, bytes 26777324, multicast packets 8546690 broadcast
packets 7720
```

**NOTE:** The following etherStats counters are not currently available for Layer 3 interfaces:

- etherStatsBroadcastPkts
- etherStatsCRCAlignErrors
- etherStatsUndersizePkts
- etherStatsOversizePkts
- etherStatsFragments
- etherStatsJabbers
- etherStatsCollisions
- etherStatsPkts64Octets
- etherStatsPkts65to127Octets
- etherStatsPkts128to255Octets
- etherStatsPkts256to511Octets
- etherStatsPkts512to1023Octets

- etherStatsPkts1024to1518Octets

**Related  
Commands** [rmon collection stats](#)

# 48

# Secure Shell (SSH) Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure Secure Shell (SSH). For more information, see the [SSH Feature Overview and Configuration Guide](#).

- Command List**
- “[banner login \(SSH\)](#)” on page 1942
  - “[clear ssh](#)” on page 1943
  - “[crypto key destroy hostkey](#)” on page 1944
  - “[crypto key destroy userkey](#)” on page 1945
  - “[crypto key generate hostkey](#)” on page 1946
  - “[crypto key generate userkey](#)” on page 1947
  - “[crypto key pubkey-chain knownhosts](#)” on page 1948
  - “[crypto key pubkey-chain userkey](#)” on page 1950
  - “[debug ssh client](#)” on page 1952
  - “[debug ssh server](#)” on page 1953
  - “[service ssh](#)” on page 1954
  - “[show banner login](#)” on page 1956
  - “[show crypto key hostkey](#)” on page 1957
  - “[show crypto key pubkey-chain knownhosts](#)” on page 1958
  - “[show crypto key pubkey-chain userkey](#)” on page 1959
  - “[show crypto key userkey](#)” on page 1960
  - “[show running-config ssh](#)” on page 1961
  - “[show ssh](#)” on page 1963
  - “[show ssh client](#)” on page 1965



- ["show ssh server"](#) on page 1966
- ["show ssh server allow-users"](#) on page 1968
- ["show ssh server deny-users"](#) on page 1969
- ["ssh"](#) on page 1970
- ["ssh client"](#) on page 1972
- ["ssh server"](#) on page 1974
- ["ssh server allow-users"](#) on page 1976
- ["ssh server authentication"](#) on page 1978
- ["ssh server deny-users"](#) on page 1980
- ["ssh server max-auth-tries"](#) on page 1982
- ["ssh server resolve-host"](#) on page 1983
- ["ssh server scp"](#) on page 1984
- ["ssh server sftp"](#) on page 1985
- ["undebg ssh client"](#) on page 1986
- ["undebg ssh server"](#) on page 1987

# banner login (SSH)

**Overview** This command configures a login banner on the SSH server. This displays a message on the remote terminal of the SSH client before the login prompt. SSH client version 1 does not support this banner.

To add a banner, first enter the command **banner login**, and hit [Enter]. Write your message. You can use any character and spaces. Use Ctrl+D at the end of your message to save the text and re-enter the normal command line mode.

The banner message is preserved if the device restarts.

The **no** variant of this command deletes the login banner from the device.

**Syntax** banner login  
no banner login

**Default** No banner is defined by default.

**Mode** Global Configuration

**Examples** To set a login banner message, use the commands:

```
awplus# configure terminal
awplus(config)# banner login
```

The screen will prompt you to enter the message:

Type CNTL/D to finish.

... banner message comes here ...

Enter the message. Use Ctrl+D to finish, like this:

```
^D
awplus(config)#
```

To remove the login banner message, use the commands:

```
awplus# configure terminal
awplus(config)# no banner login
```

**Related Commands** [show banner login](#)

# clear ssh

**Overview** This command deletes Secure Shell sessions currently active on the device. This includes both incoming and outgoing sessions. The deleted sessions are closed. You can only delete an SSH session if you are a system manager or the user who initiated the session. If **all** is specified then all active SSH sessions are deleted.

**Syntax** `clear ssh {<1-65535>|all}`

| Parameters | Description  |
|------------|--|
| <1-65535>  | Specify a session ID in the range 1 to 65535 to delete a specific session. |
| all        | Delete all SSH sessions.   |

**Mode** Privileged Exec

**Examples** To stop the current SSH session 123, use the command:

```
awplus# clear ssh 123
```

To stop all SSH sessions active on the device, use the command:

```
awplus# clear ssh all
```

**Related  
Commands** [service ssh](#)  
[ssh](#)

# crypto key destroy hostkey

**Overview** This command deletes the existing public and private keys of the SSH server. Note that for an SSH server to operate it needs at least one set of hostkeys configured before an SSH server is started.

**Syntax** `crypto key destroy hostkey {dsa|rsa|rsa1}`

| Parameters | Description  |
|------------|--|
| dsa        | Deletes the existing DSA public and private keys.  |
| rsa        | Deletes the existing RSA public and private keys configured for SSH version 2 connections. |
| rsa1       | Deletes the existing RSA public and private keys configured for SSH version 1 connections. |

**Mode** Global Configuration

**Example** To destroy the RSA host key used for SSH version 2 connections, use the commands:

```
awplus# configure terminal
awplus(config)# crypto key destroy hostkey rsa
```

**Related Commands** [crypto key generate hostkey](#)  
[service ssh](#)

# crypto key destroy userkey

**Overview** This command destroys the existing public and private keys of an SSH user configured on the device.

**Syntax** `crypto key destroy userkey <username> {dsa|rsa|rsa1}`

| Parameters | Description  |
|------------|--|
| <username> | Name of the user whose userkey you are destroying. The username must begin with a letter. Valid characters are all numbers, letters, and the underscore, hyphen and full stop symbols. |
| dsa        | Deletes the existing DSA userkey.  |
| rsa        | Deletes the existing RSA userkey configured for SSH version 2 connections.   |
| rsa1       | Deletes the existing RSA userkey for SSH version 1 connections.  |

**Mode** Global Configuration

**Example** To destroy the RSA user key for the SSH user `remoteuser`, use the commands:

```
awplus# configure terminal
awplus(config)# crypto key destroy userkey remoteuser rsa
```

**Related Commands** [crypto key generate hostkey](#)  
[show ssh](#)  
[show crypto key hostkey](#)

# crypto key generate hostkey

**Overview** This command generates public and private keys for the SSH server using either an RSA or DSA cryptography algorithm. You must define a host key before enabling the SSH server. Start SSH server using the **service ssh** command. If a host key exists with the same cryptography algorithm, this command replaces the old host key with the new key.

This command is not saved in the device configuration. However, the device saves the keys generated by this command in the non-volatile memory.

**Syntax** `crypto key generate hostkey {dsa|rsa|rsa1} [<768-32768>]`

| Parameters  | Description  |
|-------------|--|
| dsa         | Creates a DSA hostkey. Both SSH version 1 and 2 connections can use the DSA hostkey. |
| rsa         | Creates an RSA hostkey for SSH version 2 connections.                                |
| rsa1        | Creates an RSA hostkey for SSH version 1 connections.                                |
| <768-32768> | The length in bits of the generated key. The default is 1024 bits.                   |

**Default** 1024 bits is the default key length. The DSA algorithm supports 1024 bits.

**Mode** Global Configuration

**Examples** To generate an RSA host key for SSH version 2 connections that is 2048 bits in length, use the commands:

```
awplus# configure terminal
awplus(config)# crypto key generate hostkey rsa 2048
```

To generate a DSA host key, use the commands:

```
awplus# configure terminal
awplus(config)# crypto key generate dsa
```

**Related Commands** [crypto key destroy hostkey](#)  
[service ssh](#)  
[show crypto key hostkey](#)

# crypto key generate userkey

**Overview** This command generates public and private keys for an SSH user using either an RSA or DSA cryptography algorithm. To use public key authentication, copy the public key of the user onto the remote SSH server.

This command is not saved in the device configuration. However, the device saves the keys generated by this command in the non-volatile memory.

**Syntax** `crypto key generate userkey <username> {dsa|rsa|rsa1} [<768-32768>]`

| Parameters  | Description  |
|-------------|--|
| <username>  | Name of the user that the user key is generated for. The username must begin with a letter. Valid characters are all numbers, letters, and the underscore, hyphen and full stop symbols. |
| dsa         | Creates a DSA userkey. Both SSH version 1 and 2 connections can use a key created with this command.   |
| rsa         | Creates an RSA userkey for SSH version 2 connections.  |
| rsa1        | Creates an RSA userkey for SSH version 1 connections.  |
| <768-32768> | The length in bits of the generated key. The DSA algorithm supports only 1024 bits. Default: 1024.   |

**Mode** Global Configuration

**Examples** To generate a 2048-bits RSA user key for SSH version 2 connections for the user bob, use the commands:

```
awplus# configure terminal
awplus(config)# crypto key generate userkey bob rsa 2048
```

To generate a DSA user key for the user lapo, use the commands:

```
awplus# configure terminal
awplus(config)# crypto key generate userkey lapo dsa
```

**Related Commands** [crypto key pubkey-chain userkey](#)  
[show crypto key userkey](#)

# crypto key pubkey-chain knownhosts

**Overview** This command adds a public key of the specified SSH server to the known host database on your device. The SSH client on your device uses this public key to verify the remote SSH server.

The key is retrieved from the server. Before adding a key to this database, check that the key sent to you is correct.

If the server's key changes, or if your SSH client does not have the public key of the remote SSH server, then your SSH client will inform you that the public key of the server is unknown or altered.

The **no** variant of this command deletes the public key of the specified SSH server from the known host database on your device.

**Syntax** `crypto key pubkey-chain knownhosts [ip|ipv6] <hostname>  
[rsa|dsa|rsa1]  
no crypto key pubkey-chain knownhosts <1-65535>`

| Parameter  | Description  |
|------------|--|
| ip         | Keyword used prior to specifying an IPv4 address   |
| ipv6       | Keyword used prior to specifying an IPv6 address   |
| <hostname> | IPv4/IPv6 address or hostname of a remote server in the format a.b.c.d for an IPv4 address, or in the format x:x::x:x for an IPv6 address. |
| rsa        | Specify the RSA public key of the server to be added to the known host database.   |
| dsa        | Specify the DSA public key of the server to be added to the known host database.   |
| rsa1       | Specify the SSHv1 public key of the server to be added to the know host database.  |
| <1-65535>  | Specify a key identifier when removing a key using the <b>no</b> parameter.  |

**Default** If no cryptography algorithm is specified, then **rsa** is used as the default cryptography algorithm.

**Mode** Privilege Exec

**Usage** This command adds a public key of the specified SSH server to the known host database on the device. The key is retrieved from the server. The remote SSH server is verified by using this public key. The user is requested to check the key is correct before adding it to the database.



If the remote server's host key is changed, or if the device does not have the public key of the remote server, then SSH clients will inform the user that the public key of the server is altered or unknown.

**Examples** To add the RSA host key of the remote SSH host IPv4 address 192.0.2.11 to the known host database, use the command:

```
awplus# crypto key pubkey-chain knownhosts 192.0.2.11
```

To delete the second entry in the known host database, use the command:

```
awplus# no crypto key pubkey-chain knownhosts 2
```

**Validation Commands** `show crypto key pubkey-chain knownhosts`

# crypto key pubkey-chain userkey

**Overview** This command adds a public key for an SSH user on the SSH server. This allows the SSH server to support public key authentication for the SSH user. When configured, the SSH user can access the SSH server without providing a password from the remote host.

The **no** variant of this command removes a public key for the specified SSH user that has been added to the public key chain. When a SSH user's public key is removed, the SSH user can no longer login using public key authentication.

**Syntax** `crypto key pubkey-chain userkey <username> [<filename>]`  
`no crypto key pubkey-chain userkey <username> <1-65535>`

| Parameters | Description   |
|------------|---|
| <username> | Name of the user that the SSH server associates the key with. The username must begin with a letter. Valid characters are all numbers, letters, and the underscore, hyphen and full stop symbols. Default: no default |
| <filename> | Filename of a key saved in flash. Valid characters are any printable character. You can add a key as a hexadecimal string directly into the terminal if you do not specify a filename.                                |
| <1-65535>  | The key ID number of the user's key. Specify the key ID to delete a key.  |

**Mode** Global Configuration

**Usage** You should import the public key file from the client node. The device can read the data from a file on the flash or user terminal.

Or you can add a key as text into the terminal. To add a key as text into the terminal, first enter the command **crypto key pubkey-chain userkey <username>**, and hit [Enter]. Enter the key as text. Note that the key you enter as text must be a valid SSH RSA key, not random ASCII text. Use [Ctrl]+D after entering it to save the text and re-enter the normal command line mode.

Note you can generate a valid SSH RSA key on the device first using the **crypto key generate host rsa** command. View the SSH RSA key generated on the device using the **show crypto hostkey rsa** command. Copy and paste the displayed SSH RSA key after entering the **crypto key pubkey-chain userkey <username>** command. Use [Ctrl]+D after entering it to save it.

**Examples** To generate a valid SSH RSA key on the device and add the key, use the following commands:

```
awplus# configure terminal
awplus(config)# crypto key generate host rsa
awplus(config)# exit

awplus# show crypto key hostkey
rsaAAAAB3NzaC1yc2EAAAABIwAAAIEAr1s7SokW5aW2fcOw1TStpb9J20bWlunUC768EoWhyPW6FZ2t5360O5M29EpKBmGqlkQaz5V0mU9IQe66+5YyD4UxOKSDtTI+7jtjDcoGWHb2u4sFwRpXwJZcgYrXW16+6NvNbk+h+c/pqGDijj4SvfZZfeITzvvyZW4/I4pbN8=

awplus# configure terminal
awplus(config)# crypto key pubkey-chain userkey joeType CNTRL/D
to
finish:AAAAB3NzaC1yc2EAAAABIwAAAIEAr1s7SokW5aW2fcOw1TStpb9J20bWlunUC768EoWhyPW6FZ2t5360O5M29EpKBmGqlkQaz5V0mU9IQe66+5YyD4UxOKSDtTI+7jtjDcoGWHb2u4sFwRpXwJZcgYrXW16+6NvNbk+h+c/pqGDijj4SvfZZfeITzvvyZW4/I4pbN8=control-D

awplus(config)#
```

To add a public key for the user `graydon` from the file `key.pub`, use the commands:

```
awplus# configure terminal
awplus(config)# crypto key pubkey-chain userkey graydon key.pub
```

To add a public key for the user `tamara` from the terminal, use the commands:

```
awplus# configure terminal
awplus(config)# crypto key pubkey-chain userkey tamara
```

and enter the key. Use Ctrl+D to finish.

To remove the first key entry from the public key chain of the user `john`, use the commands:

```
awplus# configure terminal
awplus(config)# no crypto key pubkey-chain userkey john 1
```

**Related Commands** [show crypto key pubkey-chain userkey](#)

# debug ssh client

**Overview** This command enables the SSH client debugging facility. When enabled, any SSH, SCP and SFTP client sessions send diagnostic messages to the login terminal.

The **no** variant of this command disables the SSH client debugging facility. This stops the SSH client from generating diagnostic debugging message.

**Syntax** `debug ssh client [brief|full]`  
`no debug ssh client`

| Parameter | Description               |
|-----------|---------------------------|
| brief     | Enables brief debug mode. |
| full      | Enables full debug mode.  |

**Default** SSH client debugging is disabled by default.

**Mode** Privileged Exec and Global Configuration

**Examples** To start SSH client debugging, use the command:

```
awplus# debug ssh client
```

To start SSH client debugging with extended output, use the command:

```
awplus# debug ssh client full
```

To disable SSH client debugging, use the command:

```
awplus# no debug ssh client
```

**Related Commands** [debug ssh server](#)  
[show ssh client](#)  
[undebug ssh client](#)

# debug ssh server

**Overview** This command enables the SSH server debugging facility. When enabled, the SSH server sends diagnostic messages to the system log. To display the debugging messages on the terminal, use the **terminal monitor** command.

The **no** variant of this command disables the SSH server debugging facility. This stops the SSH server from generating diagnostic debugging messages.

**Syntax** `debug ssh server [brief|full]`  
`no debug ssh server`

| Parameter | Description               |
|-----------|---------------------------|
| brief     | Enables brief debug mode. |
| full      | Enables full debug mode.  |

**Default** SSH server debugging is disabled by default.

**Mode** Privileged Exec and Global Configuration

**Examples** To start SSH server debugging, use the command:

```
awplus# debug ssh server
```

To start SSH server debugging with extended output, use the command:

```
awplus# debug ssh server full
```

To disable SSH server debugging, use the command:

```
awplus# no debug ssh server
```

**Related Commands** [debug ssh client](#)  
[show ssh server](#)  
[undebug ssh server](#)

## service ssh

**Overview** This command enables the Secure Shell server on the device. Once enabled, connections coming from SSH clients are accepted.

SSH server needs a host key before it starts. If an SSHv2 host key does not exist, then this command fails. If SSHv1 is enabled but a host key for SSHv1 does not exist, then SSH service is unavailable for version 1.

The **no** variant of this command disables the Secure Shell server. When the Secure Shell server is disabled, connections from SSH, SCP, and SFTP clients are not accepted. This command does not affect existing SSH sessions. To terminate existing sessions, use the [clear ssh](#) command.

**Syntax** `service ssh [ip|ipv6]`  
`no service ssh [ip|ipv6]`

**Default** The Secure Shell server is disabled by default. Both IPv4 and IPv6 Secure Shell server are enabled when you issue **service ssh** without specifying the optional **ip** or **ipv6** parameters.

**Mode** Global Configuration

**Examples** To enable both the IPv4 and the IPv6 Secure Shell server, use the commands:

```
awplus# configure terminal
awplus(config)# service ssh
```

To enable the IPv4 Secure Shell server only, use the commands:

```
awplus# configure terminal
awplus(config)# service ssh ip
```

To enable the IPv6 Secure Shell server only, use the commands:

```
awplus# configure terminal
awplus(config)# service ssh ipv6
```

To disable both the IPv4 and the IPv6 Secure Shell server, use the commands:

```
awplus# configure terminal
awplus(config)# no service ssh
```

To disable the IPv4 Secure Shell server only, use the commands:

```
awplus# configure terminal
awplus(config)# no service ssh ip
```

To disable the IPv6 Secure Shell server only, use the commands:

```
awplus# configure terminal
awplus(config)# no service ssh ipv6
```

**Related  
Commands**

- crypto key generate hostkey
- show running-config ssh
- show ssh server
- ssh server allow-users
- ssh server deny-users

# show banner login

**Overview** This command displays the banner message configured on the device. The banner message is displayed to the remote user before user authentication starts.

**Syntax** `show banner login`

**Mode** User Exec, Privileged Exec, Global Configuration, Interface Configuration, Line Configuration

**Example** To display the current login banner message, use the command:

```
awplus# show banner login
```

**Related Commands** [banner login \(SSH\)](#)



# show crypto key hostkey

**Overview** This command displays the SSH host keys generated by RSA and DSA algorithm. A host key pair (public and private keys) is needed to enable SSH server. The private key remains on the device secretly. The public key is copied to SSH clients to identify the server

**Syntax** `show crypto key hostkey [dsa|rsa|rsa1]`

| Parameter | Description  |
|-----------|--|
| dsa       | Displays the DSA algorithm public key.                               |
| rsa       | Displays the RSA algorithm public key for SSH version 2 connections. |
| rsa1      | Displays the RSA algorithm public key for SSH version 1 connections. |

**Mode** User Exec, Privileged Exec and Global Configuration

**Examples** To show the public keys generated on the device for SSH server, use the command:

```
awplus# show crypto key hostkey
```

To display the RSA public key of the SSH server, use the command:

```
awplus# show crypto key hostkey rsa
```

**Output** Figure 48-1: Example output from the **show crypto key hostkey** command

| Type | Bits | Fingerprint                                     |
|------|------|---|
| rsa  | 2058 | 4e:7d:1d:00:75:79:c5:cb:c8:58:2e:f9:29:9c:1f:48 |
| dsa  | 1024 | fa:72:3d:78:35:14:cb:9a:1d:ca:1c:83:2c:7d:08:43 |
| rsa1 | 1024 | e2:1c:c8:8b:d8:6e:19:c8:f4:ec:00:a2:71:4e:85:8b |

**Table 1:** Parameters in output of the **show crypto key hostkey** command

| Parameter   | Description                         |
|-------------|-------------------------------------|
| Type        | Algorithm used to generate the key. |
| Bits        | Length in bits of the key.          |
| Fingerprint | Checksum value for the public key.  |

**Related Commands** [crypto key destroy hostkey](#)  
[crypto key generate hostkey](#)

# show crypto key pubkey-chain knownhosts

**Overview** This command displays the list of public keys maintained in the known host database on the device.

**Syntax** `show crypto key pubkey-chain knownhosts [<1-65535>]`

| Parameter | Description   |
|-----------|---|
| <1-65535> | Key identifier for a specific key. Displays the public key of the entry if specified. |

**Default** Display all keys.

**Mode** User Exec, Privileged Exec and Global Configuration

**Examples** To display public keys of known SSH servers, use the command:

```
awplus# show crypto key pubkey-chain knownhosts
```

To display the key data of the first entry in the known host data, use the command:

```
awplus# show crypto key pubkey-chain knownhosts 1
```

**Output** Figure 48-2: Example output from the **show crypto key public-chain knownhosts** command

| No | Hostname                                 | Type | Fingerprint                                     |
|----|--|------|---|
| 1  | 172.16.23.1                              | rsa  | c8:33:b1:fe:6f:d3:8c:81:4e:f7:2a:aa:a5:be:df:18 |
| 2  | 172.16.23.10                             | rsa  | c4:79:86:65:ee:a0:1d:a5:6a:e8:fd:1d:d3:4e:37:bd |
| 3  | 5ffe:1053:ac21:ff00:0101:bcd:f:ffff:0001 | rsa1 | af:4e:b4:a2:26:24:6d:65:20:32:d9:6f:32:06:ba:57 |

**Table 2:** Parameters in the output of the **show crypto key public-chain knownhosts** command

| Parameter   | Description                             |
|-------------|---|
| No          | Number ID of the key.                   |
| Hostname    | Host name of the known SSH server.      |
| Type        | The algorithm used to generate the key. |
| Fingerprint | Checksum value for the public key.      |

**Related Commands** [crypto key pubkey-chain knownhosts](#)

# show crypto key pubkey-chain userkey

**Overview** This command displays the public keys registered with the SSH server for SSH users. These keys allow remote users to access the device using public key authentication. By using public key authentication, users can access the SSH server without providing password.

**Syntax** `show crypto key pubkey-chain userkey <username> [<1-65535>]`

| Parameter  | Description  |
|------------|--|
| <username> | User name of the remote SSH user whose keys you wish to display. The username must begin with a letter. Valid characters are all numbers, letters, and the underscore, hyphen and full stop symbols. |
| <1-65535>  | Key identifier for a specific key.   |

**Default** Display all keys.

**Mode** User Exec, Privileged Exec and Global Configuration

**Example** To display the public keys for the user `manager` that are registered with the SSH server, use the command:

```
awplus# show crypto key pubkey-chain userkey manager
```

**Output** Figure 48-3: Example output from the **show crypto key public-chain userkey** command

| No | Type | Bits | Fingerprint                                     |
|----|------|------|---|
| 1  | dsa  | 1024 | 2b:cc:df:a8:f8:2e:8f:a4:a5:4f:32:ea:67:29:78:fd |
| 2  | rsa  | 2048 | 6a:ba:22:84:c1:26:42:57:2c:d7:85:c8:06:32:49:0e |

**Table 3:** Parameters in the output of the **show crypto key userkey** command

| Parameter   | Description                             |
|-------------|---|
| No          | Number ID of the key.                   |
| Type        | The algorithm used to generate the key. |
| Bits        | Length in bits of the key.              |
| Fingerprint | Checksum value for the key.             |

**Related Commands** [crypto key pubkey-chain userkey](#)

# show crypto key userkey

**Overview** This command displays the public keys created on this device for the specified SSH user.

**Syntax** `show crypto key userkey <username> [dsa|rsa|rsa1]`

| Parameter  | Description   |
|------------|---|
| <username> | User name of the local SSH user whose keys you wish to display. The username must begin with a letter. Valid characters are all numbers, letters, and the underscore, hyphen and full stop symbols. |
| dsa        | Displays the DSA public key.  |
| rsa        | Displays the RSA public key used for SSH version 2 connections.   |
| rsa1       | Displays the RSA key used for SSH version 1 connections.  |

**Mode** User Exec, Privileged Exec and Global Configuration

**Examples** To show the public key generated for the user, use the command:

```
awplus# show crypto key userkey manager
```

To store the RSA public key generated for the user manager to the file “user.pub”, use the command:

```
awplus# show crypto key userkey manager rsa > manager-rsa.pub
```

**Output** Figure 48-4: Example output from the **show crypto key userkey** command

| Type | Bits | Fingerprint                                     |
|------|------|---|
| rsa  | 2048 | e8:d6:1b:c0:f4:b6:e6:7d:02:2e:a9:d4:a1:ca:3b:11 |
| rsa1 | 1024 | 12:25:60:95:64:08:8e:a1:8c:3c:45:1b:44:b9:33:9b |

**Table 4:** Parameters in the output of the **show crypto key userkey** command

| Parameter   | Description                             |
|-------------|---|
| Type        | The algorithm used to generate the key. |
| Bits        | Length in bits of the key.              |
| Fingerprint | Checksum value for the key.             |

**Related Commands** [crypto key generate userkey](#)

# show running-config ssh

**Overview** This command displays the current running configuration of Secure Shell (SSH).

**Syntax** show running-config ssh

**Mode** Privileged Exec and Global Configuration

**Example** To display the current configuration of SSH, use the command:

```
awplus# show running-config ssh
```

**Output** Figure 48-5: Example output from the **show running-config ssh** command

```
!  
ssh server session-timeout 600  
ssh server login-timeout 30  
ssh server allow-users manager 192.168.1.*  
ssh server allow-users john  
ssh server deny-user john*.a-company.com  
ssh server
```

**Table 5:** Parameters in the output of the **show running-config ssh** command

| Parameter                              | Description   |
|--|---|
| ssh server                             | SSH server is enabled.  |
| ssh server v2                          | SSH server is enabled and only support SSHv2.                               |
| ssh server<port>                       | SSH server is enabled and listening on the specified TCP port.              |
| no ssh server scp                      | SCP service is disabled.  |
| no ssh server sftp                     | SFTP service is disabled.   |
| ssh server session-timeout             | Configure the server session timeout.                                       |
| ssh server login-timeout               | Configure the server login timeout.   |
| ssh server max-startups                | Configure the maximum number of concurrent sessions waiting authentication. |
| no ssh server authentication password  | Password authentication is disabled.  |
| no ssh server authentication publickey | Public key authentication is disabled.                                      |

**Table 5:** Parameters in the output of the **show running-config ssh** command

| Parameter              | Description                                    |
|------------------------|--|
| ssh server allow-users | Add the user (and hostname) to the allow list. |
| ssh server deny-users  | Add the user (and hostname) to the deny list.  |

**Related  
Commands**   [service ssh](#)  
[show ssh server](#)

# show ssh

**Overview** This command displays the active SSH sessions on the device, both incoming and outgoing.

**Syntax** show ssh

**Mode** User Exec, Privileged Exec and Global Configuration

**Example** To display the current SSH sessions on the device, use the command:

```
awplus# show ssh
```

**Output** Figure 48-6: Example output from the **show ssh** command

| Secure Shell Sessions: |      |        |   |          |           |             |  |
|------------------------|------|--------|---|----------|-----------|-------------|--|
| ID                     | Type | Mode   | Peer Host                               | Username | State     | Filename    |  |
| 414                    | ssh  | server | 172.16.23.1                             | root     | open      |             |  |
| 456                    | ssh  | client | 172.16.23.10                            | manager  | user-auth |             |  |
| 459                    | scp  | client | 172.16.23.12                            | root     | download  | 550dev_.awd |  |
| 463                    | ssh  | client | 5ffe:33fe:5632:ffbb:bc35:ddee:0101:ac51 | manager  | user-auth |             |  |

**Table 6:** Parameters in the output of the **show ssh** command

| Parameter | Description  |
|-----------|--|
| ID        | Unique identifier for each SSH session.  |
| Type      | Session type; either SSH, SCP, or SFTP.  |
| Mode      | Whether the device is acting as an SSH client (client) or SSH server (server) for the specified session. |
| Peer Host | The hostname or IP address of the remote server or client.   |
| Username  | Login user name of the server.   |

**Table 6:** Parameters in the output of the **show ssh** command (cont.)

| Parameter | Description   |   |
|-----------|---|---|
| State     | The current state of the SSH session. One of:                         |   |
|           | connecting  | The device is looking for a remote server.      |
|           | connected   | The device is connected to the remote server.   |
|           | accepted  | The device has accepted a new session.          |
|           | host-auth   | host-to-host authentication is in progress.     |
|           | user-auth   | User authentication is in progress.             |
|           | authenticated   | User authentication is complete.                |
|           | open  | The session is in progress.                     |
|           | download  | The user is downloading a file from the device. |
|           | upload  | The user is uploading a file from the device.   |
|           | closing   | The user is terminating the session.            |
|           | closed  | The session is closed.                          |
| Filename  | Local filename of the file that the user is downloading or uploading. |   |

**Related  
Commands**   [clear ssh](#)



# show ssh client

**Overview** This command displays the current configuration of the Secure Shell client.

**Syntax** `show ssh client`

**Mode** User Exec, Privileged Exec and Global Configuration

**Example** To display the current configuration for SSH clients on the login shell, use the command:

```
awplus# show ssh client
```

**Output** Figure 48-7: Example output from the **show ssh client** command

```
Secure Shell Client Configuration
-----
Port                               : 22
Version                           : 2,1
Connect Timeout                   : 30 seconds
Session Timeout                   : 0 (off)
Debug                             : NONE
```

**Table 7:** Parameters in the output of the **show ssh client** command

| Parameter       | Description   |
|-----------------|---|
| Port            | SSH server TCP port where the SSH client connects to. The default is port 22.   |
| Version         | SSH server version; either "1", "2" or "2,1".   |
| Connect Timeout | Time in seconds that the SSH client waits for an SSH session to establish. If the value is 0, the connection is terminated when it reaches the TCP timeout. |
| Debug           | Whether debugging is active on the client.  |

**Related Commands** [show ssh server](#)

# show ssh server

**Overview** This command displays the current configuration of the Secure Shell server.

Note that changes to the SSH configuration affects only new SSH sessions coming from remote hosts, and does not affect existing sessions.

**Syntax** `show ssh server`

**Mode** User Exec, Privileged Exec and Global Configuration

**Example** To display the current configuration of the Secure Shell server, use the command:

```
awplus# show ssh server
```

**Output** Figure 48-8: Example output from the **show ssh server** command

```
Secure Shell Server Configuration
-----
SSH Server           : Enabled
Port                 : 22
Version              : 2
Services             : scp, sftp
User Authentication  : publickey, password
Resolve Hosts        : Disabled
Session Timeout      : 0 (Off)
Login Timeout        : 60 seconds
Maximum Authentication Tries : 6
Maximum Startups     : 10
Debug                : NONE
```

**Table 8:** Parameters in the output of the **show ssh server** command

| Parameter      | Description  |
|----------------|--|
| SSH Server     | Whether the Secure Shell server is enabled or disabled.  |
| Port           | TCP port where the Secure Shell server listens for connections. The default is port 22.  |
| Version        | SSH server version; either "1", "2" or "2,1".  |
| Services       | List of the available Secure Shell service; one or more of SHELL, SCP or SFTP.   |
| Authentication | List of available authentication methods.  |
| Login Timeout  | Time (in seconds) that the SSH server will wait the SSH session to establish. If the value is 0, the client login will be terminated when TCP timeout reaches. |

**Table 8:** Parameters in the output of the **show ssh server** command (cont.)

| Parameter        | Description  |
|------------------|--|
| Idle Timeout     | Time (in seconds) that the SSH server will wait to receive data from the SSH client. The server disconnects if this timer limit is reached. If set at 0, the idle timer remains off. |
| Maximum Startups | The maximum number of concurrent connections that are waiting authentication. The default is 10.   |
| Debug            | Whether debugging is active on the server.   |

**Related  
Commands**

- [show ssh](#)
- [show ssh client](#)

# show ssh server allow-users

**Overview** This command displays the user entries in the allow list of the SSH server.

**Syntax** `show ssh server allow-users`

**Mode** User Exec, Privileged Exec and Global Configuration

**Example** To display the user entries in the allow list of the SSH server, use the command:

```
awplus# show ssh server allow-users
```

**Output** Figure 48-9: Example output from the **show ssh server allow-users** command

| Username | Remote Hostname (pattern) |
|----------|---------------------------|
| awplus   | 192.168.*                 |
| john     |                           |
| manager  | *.alliedtelesis.com       |

**Table 9:** Parameters in the output of the **show ssh server allow-users** command

| Parameter                 | Description   |
|---------------------------|---|
| Username                  | User name that is allowed to access the SSH server.   |
| Remote Hostname (pattern) | IP address or hostname pattern of the remote client. The user is allowed requests from a host that matches this pattern. If no hostname is specified, the user is allowed from all hosts. |

**Related Commands** [ssh server allow-users](#)  
[ssh server deny-users](#)

# show ssh server deny-users

**Overview** This command displays the user entries in the deny list of the SSH server. The user in the deny list is rejected to access the SSH server. If a user is not included in the access list of the SSH server, the user is also rejected.

**Syntax** `show ssh server deny-users`

**Mode** User Exec, Privileged Exec and Global Configuration

**Example** To display the user entries in the deny list of the SSH server, use the command:

```
awplus# show ssh server deny-users
```

**Output** Figure 48-10: Example output from the **show ssh server deny-users** command

| Username | Remote Hostname (pattern) |
|----------|---------------------------|
| john     | *.b-company.com           |
| manager  | 192.168.2.*               |

**Table 10:** Parameters in the output of the **show ssh server deny-user** command

| Parameter                 | Description   |
|---------------------------|---|
| Username                  | The user that this rule applies to.   |
| Remote Hostname (pattern) | IP address or hostname pattern of the remote client. The user is denied requests from a host that matches this pattern. If no hostname is specified, the user is denied from all hosts. |

**Related Commands** [ssh server allow-users](#)  
[ssh server deny-users](#)

# ssh

**Overview** This command initiates a Secure Shell connection to a remote SSH server.

If the server requests a password for the user login, the user needs to type in the correct password on "Password:" prompt.

SSH client identifies the remote SSH server by its public key registered on the client device. If the server identification is changed, server verification fails. If the public key of the server has been changed, the public key of the server must be explicitly added to the known host database.

**NOTE:** Note that a hostname specified with SSH cannot begin with a hyphen (-) character.

**Syntax** `ssh [ip|ipv6] [{[user <username>]| [port <1-65535>]| [version {1|2}]]] <hostname> [<line>]`

| Parameter  | Description   |
|------------|---|
| ip         | Specify IPv4 SSH.   |
| ipv6       | Specify IPv6 SSH.   |
| user       | Login user. If user is specified, the username is used for login to the remote SSH server when user authentication is required. Otherwise the current user name is used.<br><br><username> User name to login on the remote server.   |
| port       | SSH server port. If port is specified, the SSH client connects to the remote SSH server with the specified TCP port. Other- wise, the client port configured by "ssh client" command or the default TCP port (22) is used.<br><br><1-65535> TCP port.   |
| version    | SSH client version. If version is specified, the SSH client supports only the specified SSH version. By default, SSH client uses SSHv2 first. If the server does not support SSHv2, it will try SSHv1. The default version can be configured by "ssh client" command.<br><br>1 Use SSH version 1.<br>2 Use SSH version 2. |
| <hostname> | IPv4/IPv6 address or hostname of a remote server. The address is in the format A.B.C.D for an IPv4 address, or in the format X:X::X:X for an IPv6 address. Note that a hostname specified with SSH cannot begin with a hyphen (-) character.  |
| <line>     | A command to execute on the remote server. If a command is specified, the command is executed on the remote SSH server and the session is disconnected when the remote command finishes.  |

**Mode** User Exec and Privileged Exec

**Examples** To login to the remote SSH server at 192.0.2.5, use the command:

```
awplus# ssh ip 192.0.2.5
```

To login to the remote SSH server at 192.0.2.5 as user “manager”, use the command:

```
awplus# ssh ip user manager 192.0.2.5
```

To login to the remote SSH server at 192.0.2.5 that is listening TCP port 2000, use the command:

```
awplus# ssh port 2000 192.0.2.5
```

To login to the remote SSH server with example\_host using IPv6 session, use the command:

```
awplus# ssh ipv6 example_host
```

To run the **cmd** command on the remote SSH server at 192.0.2.5, use the command:

```
awplus# ssh ip 192.0.2.5 cmd
```

**Related Commands**

- [crypto key generate userkey](#)
- [crypto key pubkey-chain knownhosts](#)
- [debug ssh client](#)
- [ssh client](#)

# ssh client

**Overview** This command modifies the default configuration parameters of the Secure Shell (SSH) client. The configuration is used for any SSH client on the device to connect to remote SSH servers. Any parameters specified on SSH client explicitly override the default configuration parameters.

The change affects the current user shell only. When the user exits the login session, the configuration does not persist. This command does not affect existing SSH sessions.

The **no** variant of this command resets configuration parameters of the Secure Shell (SSH) client changed by the [ssh client](#) command, and restores the defaults.

This command does not affect the existing SSH sessions.

**Syntax** `ssh client {port <1-65535>|version {1|2}|session-timeout <0-3600>|connect-timeout <1-600>}`  
`no ssh client {port|version|session-timeout|connect-timeout}`

| Parameter       | Description   |
|-----------------|---|
| port            | The default TCP port of the remote SSH server. If an SSH client specifies an explicit port of the server, it overrides the default TCP port.<br>Default: 22   |
|                 | <1-65535> TCP port number.  |
| version         | The SSH version used by the client for SSH sessions. The SSH client supports both version 2 and version 1<br>Default: version 2<br>Note: SSH version 2 is the default SSH version. SSH client supports SSH version 1 if SSH version 2 is not configured using a ssh version command.  |
|                 | 1 SSH clients on the device supports SSH version 1 only.  |
|                 | 2 SSH clients on the device supports SSH version 2 only   |
| session-timeout | The global session timeout for SSH sessions. If the session timer lapses since the last time an SSH client received data from the remote server, the session is terminated. If the value is 0, then the client does not terminate the session. Instead, the connection is terminated when it reaches the TCP timeout.<br>Default: 0 (session timer remains off) |
|                 | <0-3600> Timeout in seconds.  |



| Parameter       | Description  |
|-----------------|--|
| connect-timeout | The maximum time period that an SSH session can take to become established. The SSH client terminates the SSH session if this timeout expires and the session is still not established.<br>Default: 30 |
|                 | <1-600> Timeout in seconds.  |

**Mode** Privileged Exec

**Examples** To configure the default TCP port for SSH clients to 2200, and the session timer to 10 minutes, use the command:

```
awplus# ssh client port 2200 session-timeout 600
```

To configure the connect timeout of SSH client to 10 seconds, use the command:

```
awplus# ssh client connect-timeout 10
```

To restore the connect timeout to its default, use the command:

```
awplus# no ssh client connect-timeout
```

**Related Commands** [show ssh client](#)  
[ssh](#)

# ssh server

**Overview** This command modifies the configuration of the SSH server. Changing these parameters affects new SSH sessions connecting to the device.

The **no** variant of this command restores the configuration of a specified parameter to its default. The change affects the SSH server immediately if the server is running. Otherwise, the configuration is used when the server starts.

To enable the SSH server, use the [service ssh](#) command.

**Syntax**

```
ssh server {[v1v2|v2only]|<1-65535>}  
ssh server {[session-timeout <0-3600>] [login-timeout <1-600>]  
[max-startups <1-128>]}  
no ssh server {[session-timeout] [login-timeout]  
[max-startups]}
```

| Parameter       | Description   |
|-----------------|---|
| v1v2            | Supports both SSHv2 and SSHv1 client connections.<br>Default: v1v2  |
| v2only          | Supports SSHv2 client connections only.   |
| <1-65535>       | The TCP port number that the server listens to for incoming SSH sessions.<br>Default: 22  |
| session-timeout | There is a maximum time period that the server waits before deciding that a session is inactive and should be terminated. The server considers the session inactive when it has not received any data from the client, and when the client does not respond to keep alive messages.<br>Default: 0 (session timer remains off).<br><br><0-3600>      Timeout in seconds. |
| login-timeout   | The maximum time period the server waits before disconnecting an unauthenticated client.<br>Default: 60<br><br><1-600>      Timeout in seconds.   |
| max-startups    | The maximum number of concurrent unauthenticated connections the server accepts. When the number of SSH connections awaiting authentication reaches the limit, the server drops any additional connections until authentication succeeds or the login timer expires for a connection.<br>Default: 10<br><br><1-128>      Number of sessions.                            |

**Mode** Global Configuration

**Examples** To configure the session timer of SSH server to 10 minutes (600 seconds), use the commands:

```
awplus# configure terminal
awplus(config)# ssh server login-timeout 600
```

To configure the login timeout of SSH server to 30 seconds, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server login-timeout 30
```

To limit the number of SSH client connections waiting authentication from SSH server to 3, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server max-startups
```

To set max-startups parameters of SSH server to the default configuration, use the commands:

```
awplus# configure terminal
awplus(config)# no ssh server max-startups
```

To support the Secure Shell server with TCP port 2200, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server 2200
```

To force the Secure Shell server to support SSHv2 only, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server v2only
```

To support both SSHv2 and SSHv1, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server v1v2
```

**Related  
Commands** [show ssh server](#)  
[ssh client](#)

# ssh server allow-users

**Overview** This command adds a username pattern to the allow list of the SSH server. If the user of an incoming SSH session matches the pattern, the session is accepted.

When there are no registered users in the server's database of allowed users, the SSH server does not accept SSH sessions even when enabled.

SSH server also maintains the deny list. The server checks the user in the deny list first. If a user is listed in the deny list, then the user access is denied even if the user is listed in the allow list.

The **no** variant of this command deletes a username pattern from the allow list of the SSH server. To delete an entry from the allow list, the username and hostname pattern should match exactly with the existing entry.

**Syntax** `ssh server allow-users <username-pattern> [<hostname-pattern>]`  
`no ssh server allow-users <username-pattern>`  
`[<hostname-pattern>]`

| Parameter                             | Description  |
|---------------------------------------|--|
| <code>&lt;username-pattern&gt;</code> | The username pattern that users can match to. An asterisk acts as a wildcard character that matches any string of characters.  |
| <code>&lt;hostname-pattern&gt;</code> | The host name pattern that hosts can match to. If specified, the server allows the user to connect only from hosts matching the pattern. An asterisk acts as a wildcard character that matches any string of characters. |

**Mode** Global Configuration

**Examples** To allow the user `john` to create an SSH session from any host, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server allow-users john
```

To allow the user `john` to create an SSH session from a range of IP address (from 192.168.1.1 to 192.168.1.255), use the commands:

```
awplus# configure terminal
awplus(config)# ssh server allow-users john 192.168.1.*
```

To allow the user `john` to create a SSH session from `a-company.com` domain, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server allow-users john *.a-company.com
```

To delete the existing user entry `john 192.168.1.*` in the allow list, use the commands:

```
awplus# configure terminal
```

```
awplus(config)# no ssh server allow-users john 192.168.1.*
```

**Related  
Commands**

[show running-config ssh](#)

[show ssh server allow-users](#)

[ssh server deny-users](#)

# ssh server authentication

**Overview** This command enables RSA public-key or password user authentication for SSH Server. Apply the **password** keyword with the **ssh server authentication** command to enable password authentication for users. Apply the **publickey** keyword with the **ssh server authentication** command to enable RSA public-key authentication for users.

Use the **no** variant of this command to disable RSA public-key or password user authentication for SSH Server. Apply the **password** keyword with the **no ssh authentication** command to disable password authentication for users. Apply the required **publickey** keyword with the **no ssh authentication** command to disable RSA public-key authentication for users.

**Syntax** `ssh server authentication {password|publickey}`  
`no ssh server authentication {password|publickey}`

| Parameter              | Description   |
|------------------------|---|
| <code>password</code>  | Specifies user password authentication for SSH server.  |
| <code>publickey</code> | Specifies user publickey authentication for SSH server. |

**Default** Both RSA public-key authentication and password authentication are enabled by default.

**Mode** Global Configuration

**Usage** For password authentication to authenticate a user, password authentication for a user must be registered in the local user database or on an external RADIUS server, before using the **ssh server authentication password** command.

For RSA public-key authentication to authenticate a user, a public key must be added for the user, before using the **ssh server authentication publickey** command.

**Examples** To enable `password` authentication for users connecting through SSH, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server authentication password
```

To enable `publickey` authentication for users connecting through SSH, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server authentication publickey
```

To disable password authentication for users connecting through SSH, use the commands:

```
awplus# configure terminal
awplus(config)# no ssh server authentication password
```

To disable publickey authentication for users connecting through SSH, use the commands:

```
awplus# configure terminal
awplus(config)# no ssh server authentication publickey
```

**Related  
Commands**

[crypto key pubkey-chain userkey](#)  
[service ssh](#)  
[show ssh server](#)

# ssh server deny-users

**Overview** This command adds a username pattern to the deny list of the SSH server. If the user of an incoming SSH session matches the pattern, the session is rejected.

SSH server also maintains the allow list. The server checks the user in the deny list first. If a user is listed in the deny list, then the user access is denied even if the user is listed in the allow list.

If a hostname pattern is specified, the user is denied from the hosts matching the pattern.

The **no** variant of this command deletes a username pattern from the deny list of the SSH server. To delete an entry from the deny list, the username and hostname pattern should match exactly with the existing entry.

**Syntax** `ssh server deny-users <username-pattern> [<hostname-pattern>]`  
`no ssh server deny-users <username-pattern>`  
`[<hostname-pattern>]`

| Parameter                             | Description   |
|---------------------------------------|---|
| <code>&lt;username-pattern&gt;</code> | The username pattern that users can match to. The username must begin with a letter. Valid characters are all numbers, letters, and the underscore, hyphen, full stop and asterisk symbols. An asterisk acts as a wildcard character that matches any string of characters. |
| <code>&lt;hostname-pattern&gt;</code> | The host name pattern that hosts can match to. If specified, the server denies the user only when they connect from hosts matching the pattern. An asterisk acts as a wildcard character that matches any string of characters.   |

**Mode** Global Configuration

**Examples** To deny the user `john` to access SSH login from any host, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server deny-users john
```

To deny the user `john` to access SSH login from a range of IP address (from 192.168.2.1 to 192.168.2.255), use the commands:

```
awplus# configure terminal
awplus(config)# ssh server deny-users john 192.168.2.*
```

To deny the user `john` to access SSH login from `b-company.com` domain, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server deny-users john*.b-company.com
```



To delete the existing user entry `john 192.168.2.*` in the deny list, use the commands:

```
awplus# configure terminal
```

```
awplus(config)# no ssh server deny-users john 192.168.2.*
```

**Related  
Commands**

[show running-config ssh](#)

[show ssh server deny-users](#)

[ssh server allow-users](#)

# ssh server max-auth-tries

**Overview** Use this command to specify the maximum number of SSH authentication attempts that the device will allow.

Use the **no** variant of this command to return the maximum number of attempts to its default value of 6.

**Syntax** `ssh server max-auth-tries <1-32>`  
`no ssh server max-auth-tries`

| Parameter | Description  |
|-----------|--|
| <1-32>    | Maximum number of SSH authentication attempts the device will allow. |

**Default** 6 attempts

**Mode** Global Configuration

**Usage** By default, users must wait one second after a failed login attempt before trying again. You can increase this gap by using the command [aaa login fail-delay](#).

**Example** To set the maximum number of SSH authentication attempts to 3, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server max-auth-tries 3
```

**Related Commands** [show ssh server](#)

# ssh server resolve-host

**Overview** This command enables resolving an IP address from a host name using a DNS server for client host authentication.

The **no** variant of this command disables this feature.

**Syntax** `ssh server resolve-hosts`  
`no ssh server resolve-hosts`

**Default** This feature is disabled by default.

**Mode** Global Configuration

**Usage** Your device has a DNS Client that is enabled automatically when you add a DNS server to your device. Use the [ip name-server](#) command to add a DNS server to the list of servers that the device queries.

For information about configuring DNS, see the [Internet Protocol Feature Overview and Configuration Guide](#).

**Example** To resolve a host name using a DNS server, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server resolve-hosts
```

**Related Commands** [ip name-server](#)  
[show ssh server](#)  
[ssh server allow-users](#)  
[ssh server deny-users](#)

# ssh server scp

- Overview** This command enables the Secure Copy (SCP) service on the SSH server. Once enabled, the server accepts SCP requests from remote clients.
- You must enable the SSH server as well as this service before the device accepts SCP connections. The SCP service is enabled by default as soon as the SSH server is enabled.
- The **no** variant of this command disables the SCP service on the SSH server. Once disabled, SCP requests from remote clients are rejected.

**Syntax** `ssh server scp`  
`no ssh server scp`

**Mode** Global Configuration

**Examples** To enable the SCP service, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server scp
```

To disable the SCP service, use the commands:

```
awplus# configure terminal
awplus(config)# no ssh server scp
```

**Related Commands** [show running-config ssh](#)  
[show ssh server](#)

# ssh server sftp

**Overview** This command enables the Secure FTP (SFTP) service on the SSH server. Once enabled, the server accepts SFTP requests from remote clients.

You must enable the SSH server as well as this service before the device accepts SFTP connections. The SFTP service is enabled by default as soon as the SSH server is enabled. If the SSH server is disabled, SFTP service is unavailable.

The **no** variant of this command disables SFTP service on the SSH server. Once disabled, SFTP requests from remote clients are rejected.

**Syntax** `ssh server sftp`  
`no ssh server sftp`

**Mode** Global Configuration

**Examples** To enable the SFTP service, use the commands:

```
awplus# configure terminal
awplus(config)# ssh server sftp
```

To disable the SFTP service, use the commands:

```
awplus# configure terminal
awplus(config)# no ssh server sftp
```

**Related Commands** [show running-config ssh](#)  
[show ssh server](#)

# undebug ssh client

**Overview** This command applies the functionality of the **no debug ssh client** command.

# undebug ssh server

**Overview** This command applies the functionality of the **no debug ssh server** command.

# 49

# Trigger Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for commands used to configure Triggers. For more information, see the [Triggers Feature Overview and Configuration Guide](#).

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

- Command List**
- [“active \(trigger\)”](#) on page 1990
  - [“day”](#) on page 1991
  - [“debug trigger”](#) on page 1993
  - [“description \(trigger\)”](#) on page 1994
  - [“repeat”](#) on page 1995
  - [“script”](#) on page 1996
  - [“show debugging trigger”](#) on page 1998
  - [“show running-config trigger”](#) on page 1999
  - [“show trigger”](#) on page 2000
  - [“test”](#) on page 2005
  - [“time \(trigger\)”](#) on page 2006
  - [“trap”](#) on page 2008
  - [“trigger”](#) on page 2009
  - [“trigger activate”](#) on page 2010
  - [“type atmf node”](#) on page 2011
  - [“type cpu”](#) on page 2014
  - [“type interface”](#) on page 2015



- [“type memory”](#) on page 2016
- [“type periodic”](#) on page 2017
- [“type ping-poll”](#) on page 2018
- [“type reboot”](#) on page 2019
- [“type stack disabled-master”](#) on page 2020
- [“type stack link”](#) on page 2021
- [“type stack master-fail”](#) on page 2022
- [“type stack member”](#) on page 2023
- [“type time”](#) on page 2024
- [“type usb”](#) on page 2025
- [“undebbug trigger”](#) on page 2026

# active (trigger)

**Overview** This command enables a trigger. This allows the trigger to activate when its trigger conditions are met.

The **no** variant of this command disables a trigger. While in this state the trigger cannot activate when its trigger conditions are met.

**Syntax** active  
no active

**Mode** Trigger Configuration

**Usage** Configure a trigger first before you use this command to activate it.  
For information about configuring a trigger, see the [Triggers Feature Overview and Configuration Guide](#).

**Examples** To enable trigger 172, so that it can activate when its trigger conditions are met, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 172
awplus(config-trigger)# active
```

To disable trigger 182, preventing it from activating when its trigger conditions are met, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 182
awplus(config-trigger)# no active
```

**Related  
Commands** [show trigger](#)  
[trigger](#)

# day

**Overview** This command specifies the days or date that the can trigger activate on. You can specify either:

- A specific date
- A specific day of the week
- A list of days of the week
- every day

By default, the trigger can activate on any day.

**Syntax** `day every-day`  
`day <1-31> <month> <2000-2035>`  
`day <weekday>`

| Parameter                      | Description   |
|--------------------------------|---|
| <code>every-day</code>         | Sets the trigger so that it can activate on any day.  |
| <code>&lt;1-31&gt;</code>      | Day of the month the trigger is permitted to activate on.   |
| <code>&lt;month&gt;</code>     | Sets the month that the trigger is permitted to activate on. Valid keywords are: <b>january, february, march, april, may, june, july, august, september, october, november, and december.</b>                               |
| <code>&lt;2000-2035&gt;</code> | Sets the year that the trigger is permitted to activate in.   |
| <code>&lt;weekday&gt;</code>   | Sets the days of the week that the trigger can activate on. You can specify one or more week days in a space separated list. Valid keywords are: <b>monday, tuesday, wednesday, thursday, friday, saturday, and sunday.</b> |

**Mode** Trigger Configuration

**Usage** For example trigger configurations that use the **day** command, see “Restrict Internet Access” and “Turn off Power to Port LEDs” in the [Triggers Feature Overview and Configuration Guide](#).

**Examples** To permit trigger 55 to activate on the 1 Jun 2010, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 55
awplus(config-trigger)# day 1 Jun 2010
```

To permit trigger 12 to activate on a Mondays, Wednesdays and Fridays, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 12
awplus(config-trigger)# day monday wednesday friday
```

**Related  
Commands**   [show trigger](#)  
[trigger](#)

# debug trigger

**Overview** This command enables trigger debugging. This generates detailed messages about how your device is processing the trigger commands and activating the triggers.

The **no** variant of this command disables trigger debugging.

**Syntax** `debug trigger`  
`no debug trigger`

**Mode** Privilege Exec

**Examples** To start trigger debugging, use the command:

```
awplus# debug trigger
```

To stop trigger debugging, use the command:

```
awplus# no trigger
```

**Related Commands** [show debugging trigger](#)  
[show trigger](#)  
[test](#)  
[trigger](#)  
[undebug trigger](#)

# description (trigger)

**Overview** This command adds an optional description to help you identify the trigger. This description is displayed in show command outputs and log messages.

The **no** variant of this command removes a trigger's description. The show command outputs and log messages stop displaying a description for this trigger.

**Syntax** `description <description>`  
`no description`

| Parameter                        | Description   |
|----------------------------------|---|
| <code>&lt;description&gt;</code> | A word or phrase that uniquely identifies this trigger or its purpose. Valid characters are any printable character and spaces, up to a maximum of 40 characters. |

**Mode** Trigger Configuration

**Examples** To give trigger 240 the description `daily status report`, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 240
awplus(config-trigger)# description daily status report
```

To remove the description from trigger 36, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 36
awplus(config-trigger)# no description
```

**Related  
Commands** [show trigger](#)  
[test](#)  
[trigger](#)

# repeat

**Overview** This command specifies the number of times that a trigger is permitted to activate. This allows you to specify whether you want the trigger to activate:

- only the first time that the trigger conditions are met
- a limited number of times that the trigger conditions are met
- an unlimited number of times

Once the trigger has reached the limit set with this command, the trigger remains in your configuration but cannot be activated. Use the **repeat** command again to reset the trigger so that it is activated when its trigger conditions are met.

By default, triggers can activate an unlimited number of times. To reset a trigger to this default, specify either **yes** or **forever**.

**Syntax** `repeat {forever|no|once|yes|<1-4294967294>}`

| Parameter                         | Description  |
|-----------------------------------|--|
| <code>yes forever</code>          | The trigger repeats indefinitely, or until disabled. |
| <code>no once</code>              | The trigger activates only once.                     |
| <code>&lt;1-4292967294&gt;</code> | The trigger repeats the specified number of times.   |

**Mode** Trigger Configuration

**Examples** To allow trigger 21 to activate only once, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 21
awplus(config-trigger)# repeat no
```

To allow trigger 22 to activate an unlimited number of times whenever its trigger conditions are met, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 22
awplus(config-trigger)# repeat forever
```

To allow trigger 23 to activate only the first 10 times the conditions are met, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 23
awplus(config-trigger)# repeat 10
```

**Related Commands** [show trigger](#)  
[trigger](#)

# script

**Overview** This command specifies one or more scripts that are to be run when the trigger activates. You can add up to five scripts to a single trigger.

The sequence in which the trigger runs the scripts is specified by the number you set before the name of the script file. One script is executed completely before the next script begins.

Scripts may be either ASH shell scripts, indicated by a **.sh** filename extension suffix, or AlliedWare Plus™ scripts, indicated by a **.scp** filename extension suffix. AlliedWare Plus™ scripts only need to be readable.

The **no** variant of this command removes one or more scripts from the trigger's script list. The scripts are identified by either their name, or by specifying their position in the script list. The **all** parameter removes all scripts from the trigger.

**Syntax** `script <1-5> {<filename>}`  
`no script {<1-5>|<filename>|all}`

| Parameter  | Description  |
|------------|--|
| <1-5>      | The position of the script in execution sequence. The trigger runs the lowest numbered script first. |
| <filename> | The path to the script file.   |

**Mode** Trigger Configuration

**Examples** To configure trigger 71 to run the script `flash:/cpu_trig.sh` in position 3 when the trigger activates, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 71
awplus(config-trigger)# script 3 flash:/cpu_trig.sh
```

To configure trigger 99 to run the scripts **flash:reconfig.scp**, **flash:cpu\_trig.sh** and **flash:email.scp** in positions 2, 3 and 5 when the trigger activates, use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 99
awplus(config-trigger)# script 2 flash:/reconfig.scp 3
flash:/cpu_trig.sh 5 flash:/email.scp
```

To remove the scripts 1, 3 and 4 from trigger 71's script list, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 71
awplus(config-trigger)# no script 1 3 4
```



To remove the script flash:/cpu\_trig.sh from trigger 71's script list, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 71
awplus(config-trigger)# no script flash:/cpu_trig.sh
```

To remove all the scripts from trigger 71's script list, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 71
awplus(config-trigger)# no script all
```

**Related  
Commands**   [show trigger](#)  
[trigger](#)

# show debugging trigger

**Overview** This command displays the current status for trigger utility debugging. Use this command to show when trigger debugging has been turned on or off from the [debug trigger](#) command.

**Syntax** show debugging trigger

**Mode** User Exec and Privileged Exec

**Example** To display the current configuration of trigger debugging, use the command:  
awplus# show debugging trigger

**Output** Figure 49-1: Example output from the **show debugging trigger** command

```
awplus#debug trigger
awplus#show debugging trigger
Trigger debugging status:
  Trigger debugging is on

awplus#no debug trigger
awplus#show debugging trigger
Trigger debugging status:
  Trigger debugging is off
```

**Related  
Commands** [debug trigger](#)

# show running-config trigger

**Overview** This command displays the current running configuration of the trigger utility.

**Syntax** `show running-config trigger`

**Mode** Privileged Exec

**Example** To display the current configuration of the trigger utility, use the command:

```
awplus# show running-config trigger
```

**Output** Figure 49-2: Example output from the **show running-config trigger** command

```
trigger 1
  type card in

type usb in
  trigger 2

type usb out
!
```

**Related  
Commands** [show trigger](#)

# show trigger

**Overview** This command displays configuration and diagnostic information about the triggers configured on the device. Specify the **show trigger** command without any options to display a summary of the configuration of all triggers.

**Syntax** `show trigger [<1-250>|counter|full]`

| Parameter | Description   |
|-----------|---|
| <1-250>   | Displays detailed information about a specific trigger, identified by its trigger ID. |
| counter   | Displays statistical information about all triggers.                                  |
| full      | Displays detailed information about all triggers.                                     |

**Mode** Privileged Exec

**Example** To get summary information about all triggers, use the following command:

```
awplus# show trigger
```

**Table 1:** Example output from the **show trigger** command

| awplus#show trigger |                      |                      |    |    |    |            |      |            |  |
|---------------------|----------------------|----------------------|----|----|----|------------|------|------------|--|
| TR#                 | Type & Details       | Name                 | Ac | Te | Tr | Repeat     | #Scr | Days/Date  |  |
| 001                 | USB                  |                      |    |    |    |            |      |            |  |
|                     | (in)                 |                      | Y  | N  | Y  | Continuous | 0    | smtwtfs    |  |
| 002                 | USB                  |                      |    |    |    |            |      |            |  |
|                     | (out)                |                      | Y  | N  | Y  | Continuous | 0    | smtwtfs    |  |
| 003                 | CPU (80% any)        | Busy CPU             | Y  | N  | Y  | 5          | 1    | smtwtfs    |  |
| 005                 | Periodic (30 min)    | Regular status check | Y  | N  | N  | Continuous | 1    | -mtwtf-    |  |
| 007                 | Memory (85% up)      | High mem usage       | Y  | N  | Y  | 8          | 1    | smtwtfs    |  |
| 011                 | Time (00:01)         | Weekend access       | Y  | N  | Y  | Continuous | 1    | -----s     |  |
| 013                 | Reboot               |                      | Y  | N  | Y  | Continuous | 2    | smtwtfs    |  |
| 017                 | Interface (vlan1 ... | Change config for... | Y  | N  | Y  | Once       | 1    | 2-apr-2008 |  |
| 019                 | Ping-poll (5 up)     | Connection to svrl   | Y  | N  | Y  | Continuous | 1    | smtwtfs    |  |

**Table 2:** Parameters in the output of the **show trigger** command

| Parameter      | Description  |
|----------------|--|
| TR#            | Trigger identifier (ID).                                       |
| Type & Details | The trigger type, followed by the trigger details in brackets. |

**Table 2:** Parameters in the output of the **show trigger** command (cont.)

| Parameter | Description   |
|-----------|---|
| Name      | Descriptive name of the trigger configured with the <a href="#">description (trigger)</a> command.  |
| Ac        | Whether the trigger is active (Y), or inactive (N).   |
| Te        | Whether the trigger is in test mode (Y) or not (N).   |
| Tr        | Whether or not the trigger is enabled to send SNMP traps. See the <a href="#">trap</a> command.   |
| Repeat    | Whether the trigger repeats continuously, and if not, the configured repeat count for the trigger. To see the number of times a trigger has activated, use the <code>show trigger &lt;1-250&gt;</code> command.     |
| #Scr      | Number of scripts associated with the trigger.  |
| Days/Date | Days or date when the trigger may be activated. For the days options, the days are shown as a seven character string representing Sunday to Saturday. A hyphen indicates days when the trigger cannot be activated. |

To display detailed information about trigger 3, use the command:

```
awplus# show trigger 3
```

**Figure 49-3:** Example output from the **show trigger** command for a specific trigger

```
awplus#show trigger 3
Trigger Configuration Details
-----
Trigger ..... 1
Description ..... display cpu usage when pass 80%
Type and details ..... CPU (80% up)
Days ..... 26-nov-2007
After ..... 00:00:00
Before ..... 23:59:59
Active ..... Yes
Test ..... No
Trap ..... Yes
Repeat ..... 123 (0)
Modified ..... Tue Dec 20 02:26:03 1977
Number of activations ..... 0
Last activation ..... not activated
Number of scripts ..... 1
    1. shocpu.scp
    2. <not configured>
    3. <not configured>
    4. <not configured>
    5. <not configured>
-----
```

To display detailed information about all triggers, use the command:

```
awplus# show trigger full
```

**Table 3:** Example output from the **show trigger full** command

```
awplus#show trigger full
Trigger Configuration Details
-----
Trigger ..... 1
Description ..... <no description>
Type and
details ..... USB (in)
Days ..... smtwtfS
After ..... 00:00:00
Before ..... 23:59:59
Active ..... Yes
Test ..... No
Trap ..... Yes
Repeat ..... Continuous
Modified ..... Fri Sep  3 14:45:56 2010
Number of activations ..... 0
Last activation ..... not activated
Number of scripts ..... 0
    1. <not configured>
    2. <not configured>
    3. <not configured>
    4. <not configured>
    5. <not configured>

Trigger ..... 2
Description ..... <no description>
Type and
details ..... USB (out)
Days ..... smtwtfS
After ..... 00:00:00
Before ..... 23:59:59
Active ..... Yes
Test ..... No
Trap ..... Yes
Repeat ..... Continuous
Modified ..... Fri Sep  3 14:45:56 2010
Number of activations ..... 0
Last activation ..... not activated
Number of scripts ..... 0
    1. <not configured>
    2. <not configured>
    3. <not configured>
    4. <not configured>
    5. <not configured>
```

**Table 4:** Parameters in the output of the **show trigger full** and **show trigger** commands for a specific trigger

| Parameter             | Description   |
|-----------------------|---|
| Trigger               | The ID of the trigger.  |
| Description           | Descriptive name of the trigger.  |
| Type and details      | The trigger type and its activation conditions.   |
| Days                  | The days on which the trigger is permitted to activate.   |
| Date                  | The date on which the trigger is permitted to activate. Only displayed if configured, in which case it replaces "Days".   |
| Active                | Whether or not the trigger is permitted to activate.  |
| Test                  | Whether or not the trigger is operating in diagnostic mode.   |
| Trap                  | Whether or not the trigger is enabled to send SNMP traps.   |
| Repeat                | Whether the trigger repeats an unlimited number of times (Continuous) or for a set number of times. When the trigger can repeat only a set number of times, then the number of times the trigger has been activated is displayed in brackets. |
| Modified              | The date and time of the last time that the trigger was modified.   |
| Number of activations | Number of times the trigger has been activated since the last restart of the device.  |
| Last activation       | The date and time of the last time that the trigger was activated.  |
| Number of scripts     | How many scripts are associated with the trigger, followed by the names of the script files in the order in which they run.   |

To display counter information about all triggers use the command:

```
awplus# show trigger counter
```

Figure 49-4: Example output from the **show trigger counter** command

```
awplus#show trigger counter
Trigger Module Counters
-----
Trigger activations ..... 0
Time triggers activated today ..... 0
Periodic triggers activated today ..... 0
Interface triggers activated today ..... 0
Resource triggers activated today ..... 0
Reboot triggers activated today ..... 0
Ping-poll triggers activated today ..... 0
Stack
master fail triggers activated today .... 0
Stack
member triggers activated today ..... 0
-----
```

**Table 5:** Parameters in the output of the **show trigger counter** command

| Parameter                          | Description  |
|------------------------------------|--|
| Trigger activations                | Number of times a trigger has been activated.                              |
| Time triggers activated today      | Number of times a time trigger has been activated today.                   |
| Periodic triggers activated today  | Number of times a periodic trigger has been activated today.               |
| Interface triggers activated today | Number of times an interface trigger has been activated today.             |
| Resource triggers activated today  | Number of times a CPU or memory resource trigger has been activated today. |
| Ping-poll triggers activated today | Number of times a ping-poll trigger has been activated today.              |

**Related  
Commands** [trigger](#)



# test

**Overview** This command puts the trigger into a diagnostic mode. In this mode the trigger may activate but when it does it will not run any of the trigger's scripts. A log message will be generated to indicate when the trigger has been activated.

The **no** variant of this command takes the trigger out of diagnostic mode, restoring normal operation. When the trigger activates the scripts associated with the trigger will be run, as normal.

**Syntax** test  
no test

**Mode** Trigger Configuration

**Usage** Configure a trigger first before you use this command to diagnose it. For information about configuring a trigger, see the [Triggers Feature Overview and Configuration Guide](#).

**Examples** To put trigger 5 into diagnostic mode, where no scripts will be run when the trigger activates, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 5
awplus(config-trigger)# test
```

To take trigger 205 out of diagnostic mode, restoring normal operation, use the commands:


```
awplus# configure terminal
awplus(config)# trigger 205
awplus(config-trigger)# no test
```

**Related  
Commands** [show trigger](#)  
[trigger](#)

# time (trigger)

**Overview** This command specifies the time of day when the trigger is permitted to activate. The **after** parameter specifies the start of a time period that extends to midnight during which trigger may activate. By default the value of this parameter is 00:00:00 (am); that is, the trigger may activate at any time. The **before** parameter specifies the end of a time period beginning at midnight during which the trigger may activate. By default the value of this parameter is 23:59:59; that is, the trigger may activate at any time. If the value specified for **before** is later than the value specified for **after**, a time period from “after” to “before” is defined, during which the trigger may activate. This command is not applicable to time triggers ( **type time** ).

The following figure illustrates how the **before** and **after** parameters operate.

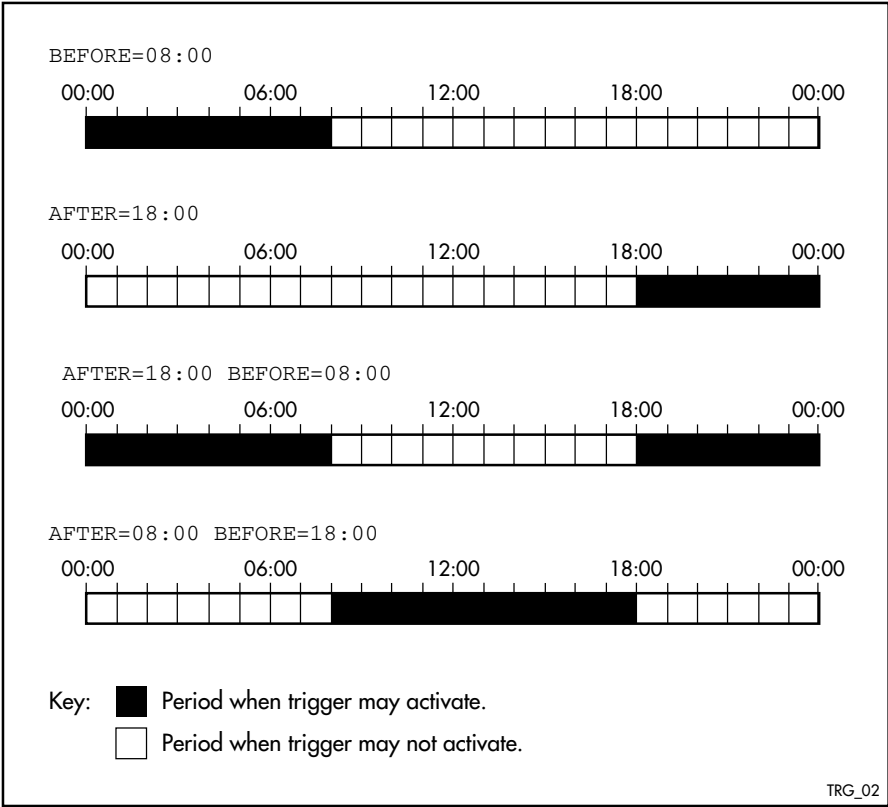

**Syntax** time {[after <hh:mm:ss>] [before <hh:mm:ss>]}

| Parameter        | Description   |
|------------------|---|
| after<hh:mm:ss>  | The earliest time of day when the trigger may be activated. |
| before<hh:mm:ss> | The latest time of day when the trigger may be activated.   |

**Mode** Trigger Configuration

**Usage** For example trigger configurations that use the **time (trigger)** command, see “Restrict Internet Access” and “Turn off Power to Port LEDs” in the [Triggers Feature Overview and Configuration Guide](#).

**Examples** To allow trigger 63 to activate between midnight and 10:30am, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 63
awplus(config-trigger)# time before 10:30:00
```

To allow trigger 64 to activate between 3:45pm and midnight, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 64
awplus(config-trigger)# time after 15:45:00
```

To allow trigger 65 to activate between 10:30am and 8:15pm, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 65
awplus(config-trigger)# time after 10:30:00 before 20:15:00
```

**Related  
Commands** [show trigger](#)  
[trigger](#)

# trap

**Overview** This command enables the specified trigger to send SNMP traps.  
Use the **no** variant of this command to disable the sending of SNMP traps from the specified trigger.

**Syntax** trap  
no trap

**Default** SNMP traps are enabled by default for all defined triggers.

**Mode** Trigger Configuration

**Usage** You must configure SNMP before using traps with triggers. For more information, see:

- [Support for Allied Telesis Enterprise\\_MIBs\\_in\\_AlliedWare Plus](#), for information about which MIB objects are supported.
- the [SNMP Feature Overview and Configuration\\_Guide](#).
- the [SNMP Commands](#) chapter.

Since SNMP traps are enabled by default for all defined triggers, a common usage will be for the **no** variant of this command to disable SNMP traps from a specified trap if the trap is only periodic. Refer in particular to AT-TRIGGER-MIB in the [Support for Allied Telesis Enterprise\\_MIBs\\_in AlliedWare Plus](#) for further information about the relevant SNMP MIB.

**Examples** To enable SNMP traps to be sent from trigger 5, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 5
awplus(config-trigger)# trap
```

To disable SNMP traps being sent from trigger 205, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 205
awplus(config-trigger)# no trap
```

**Related  
Commands** [trigger](#)  
[show trigger](#)

# trigger

**Overview** This command is used to access the Trigger Configuration mode for the specified trigger. Once Trigger Configuration mode has been entered the trigger type information can be configured and the trigger scripts and other operational parameters can be specified. At a minimum the trigger type information must be specified before the trigger can become active.

The **no** variant of this command removes a specified trigger and all configuration associated with it.

**Syntax** `trigger <1-250>`  
`no trigger <1-250>`

| Parameter | Description   |
|-----------|---------------|
| <1-250>   | A trigger ID. |

**Mode** Global Configuration

**Examples** To enter trigger configuration mode for trigger 12 use the command:

```
awplus# trigger 12
```

To completely remove all configuration associated with trigger 12, use the command:

```
awplus# no trigger 12
```

**Related Commands** [show trigger](#)  
[trigger activate](#)

# trigger activate

**Overview** This command is used to manually activate a specified trigger from the Privileged Exec mode, which has been configured with the **trigger** command from the Global Configuration mode.

**Syntax** `trigger activate <1-250>`

| Parameter | Description   |
|-----------|---------------|
| <1-250>   | A trigger ID. |

**Mode** Privileged Exec

**Usage** This command manually activates a trigger without the normal trigger conditions being met.

The trigger is activated even if it is configured as inactive. The scripts associated with the trigger will be executed even if the trigger is in the diagnostic test mode.

Triggers activated manually do not have their repeat counts decremented or their 'last triggered' time updated, and do not result in updates to the '[type] triggers today' counters.

**Example** To manually activate trigger 12 use the command:

```
awplus# trigger activate 12
```

**Related Commands** [show trigger](#)  
[trigger](#)

# type atmf node

**Overview** This command configures a trigger to be activated at an AMF node join event or leave event.

**Syntax** `type atmf node {join|leave}`

| Parameter | Description           |
|-----------|-----------------------|
| join      | AMF node join event.  |
| leave     | AMF node leave event. |

**Mode** Trigger Configuration

**CAUTION:** *Only configure this trigger on one device because it is a network wide event.*

**Example 1** To configure trigger 5 to activate at an AMF node leave event, use the following commands. In this example the command is entered on node-1:

```
node1(config)# trigger 5
node1(config-trigger) type atmf node leave
```

**Example 2** The following commands will configure trigger 5 to activate if an AMF node join event occurs on any node within the working set:

```
node1# atmf working-set group all
```

This command returns the following display:

```
=====
node1, node2, node3:
=====

Working set join
```

Note that the running the above command changes the prompt from the name of the local node, to the name of the AMF-Network followed, in square brackets, by the number of member nodes in the working set.

```
AMF-Net[3]# conf t
AMF-Net[3](config)# trigger 5
AMF-Net[3](config-trigger)# type atmf node leave
AMF-Net[3](config-trigger)# description "E-mail on AMF Exit"
AMF-Net[3](config-trigger)# active
```

Enter the name of the script to run at the trigger event.

```
AMF-Net[3] (config-trigger)# script 1 email_me.scp
AMF-Net[3] (config-trigger)# end
```

Display the trigger configurations

```
AMF-Net[3]# show trigger
```

This command returns the following display:

```
=====
node1:
=====
```

| TR# | Type & Details    | Description         | Ac | Te | Tr | Repeat     | #Scr | Days/Date |
|-----|-------------------|---------------------|----|----|----|------------|------|-----------|
| 001 | Periodic (2 min)  | Periodic Status Chk | Y  | N  | Y  | Continuous | 1    | smtwtfs   |
| 005 | ATMF node (leave) | E-mail on ATMF Exit | Y  | N  | Y  | Continuous | 1    | smtwtfs   |

```
-----
=====
Node2, Node3,
=====
```

| TR# | Type & Details    | Description         | Ac | Te | Tr | Repeat     | #Scr | Days/Date |
|-----|-------------------|---------------------|----|----|----|------------|------|-----------|
| 005 | ATMF node (leave) | E-mail on ATMF Exit | Y  | N  | Y  | Continuous | 1    | smtwtfs   |

```
-----
```

Display the triggers configured on each of the nodes in the AMF Network.

```
AMF-Net[3]# show running-config trigger
```

This command returns the following display:



```
=====
Node1:
=====

trigger 1
  type periodic 2
  script 1 atmf.scp
trigger 5
  type atmf node leave
description "E-mail on ATMF Exit"
  script 1 email_me.scp
!

=====
Node2, Node3:
=====

trigger 5
  type atmf node leave
description "E-mail on ATMF Exit"
  script 1 email_me.scp
!
```

**Related** [show trigger](#)  
**Commands**

# type cpu

**Overview** This command configures a trigger to activate based on CPU usage level. Selecting the **up** option causes the trigger to activate when the CPU usage exceeds the specified usage level. Selecting the **down** option causes the trigger to activate when CPU usage drops below the specified usage level. Selecting **any** causes the trigger to activate in both situations. The default is **any**.

**Syntax** `type cpu <1-100> [up|down|any]`

| Parameter | Description  |
|-----------|--|
| <1-100>   | The percentage of CPU usage at which to trigger.                       |
| up        | Activate when CPU usage exceeds the specified level.                   |
| down      | Activate when CPU usage drops below the specified level                |
| any       | Activate when CPU usage passes the specified level in either direction |

**Mode** Trigger Configuration

**Usage** For an example trigger configuration that uses the **type cpu** command, see “Capture Unusual CPU and RAM Activity” in the [Triggers Feature Overview and Configuration Guide](#).

**Examples** To configure trigger 28 to be a CPU trigger that activates when CPU usage exceeds 80% use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 28
awplus(config-trigger)# type cpu 80 up
```

To configure trigger 5 to be a CPU trigger that activates when CPU usage either rises above or drops below 65%, use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 5
awplus(config-trigger)# type cpu 65

or

awplus# configure terminal
awplus(config)# trigger 5
awplus(config-trigger)# type cpu 65 any
```

**Related Commands** [show trigger](#)  
[trigger](#)

# type interface

**Overview** This command configures a trigger to activate based on the link status of an interface. The trigger can be activated when the interface becomes operational by using the **up** option, or when the interface closes by using the **down** option. The trigger can also be configured to activate when either one of these events occurs by using the **any** option.

**Syntax** `type interface <interface> [up|down|any]`

| Parameter   | Description   |
|-------------|---|
| <interface> | Interface name. This can be the name of a device port, an eth-management port, or a VLAN. |
| up          | Activate when interface becomes operational.  |
| down        | Activate when the interface closes.   |
| any         | Activate when any interface link status event occurs.                                     |

**Mode** Trigger Configuration

**Example** To configure trigger 19 to be an interface trigger that activates when port1.0.2 becomes operational, use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 19
awplus(config-trigger)# type interface port1.0.2 up
```

**Related  
Commands** [show trigger](#)  
[trigger](#)

# type memory

**Overview** This command configures a trigger to activate based on RAM usage level. Selecting the **up** option causes the trigger to activate when memory usage exceeds the specified level. Selecting the **down** option causes the trigger to activate when memory usage drops below the specified level. Selecting **any** causes the trigger to activate in both situations. The default is **any**.

**Syntax** `type memory <1-100> [up|down|any]`

| Parameter | Description  |
|-----------|--|
| <1-100>   | The percentage of memory usage at which to trigger.                        |
| up        | Activate when memory usage exceeds the specified level.                    |
| down      | Activate when memory usage drops below the specified level.                |
| any       | Activate when memory usage passes the specified level in either direction. |

**Mode** Trigger Configuration

**Examples** To configure trigger 12 to be a memory trigger that activates when memory usage exceeds 50% use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 12
awplus(config-trigger)# type memory 50 up
```

To configure trigger 40 to be a memory trigger that activates when memory usage either rises above or drops below 65%, use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 40
awplus(config-trigger)# type memory 65
```

or

```
awplus# configure terminal
awplus(config)# trigger 40
awplus(config-trigger)# type memory 65 any
```

**Related  
Commands** [show trigger](#)  
[trigger](#)

# type periodic

**Overview** This command configures a trigger to be activated at regular intervals. The time period between activations is specified in minutes.

**Syntax** type periodic <1-1440>

| Parameter | Description                                |
|-----------|--|
| <1-1440>  | The number of minutes between activations. |

**Mode** Trigger Configuration

**Usage** A combined limit of 10 triggers of the type periodic and time can be configured. If you attempt to add more than 10 triggers the following error message is displayed:

```
% Cannot configure more than 10 triggers with the type time or periodic
```

For an example trigger configuration that uses the **type periodic** command, see “See Daily Statistics” in the [Triggers Feature Overview and Configuration Guide](#).

**Example** To configure trigger 44 to activate periodically at 10 minute intervals use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 44
awplus(config-trigger)# type periodic 10
```

**Related Commands** [show trigger](#)  
[trigger](#)

# type ping-poll

**Overview** This command configures a trigger that activates when Ping Polling identifies that a target device's status has changed. This allows you to run a configuration script when a device becomes reachable or unreachable.

**Syntax** `type ping-poll <1-100> {up|down}`

| Parameter | Description   |
|-----------|---|
| <1-100>   | The ping poll ID.   |
| up        | The trigger activates when ping polling detects that the target is reachable.   |
| down      | The trigger activates when ping polling detects that the target is unreachable. |

**Mode** Trigger Configuration

**Example** To configure trigger 106 to activate when ping poll 12 detects that its target device is now unreachable, use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 106
awplus(config-trigger)# type ping-poll 12 down
```

**Related  
Commands** [show trigger](#)  
[trigger](#)

# type reboot

**Overview** This command configures a trigger that activates when your device is rebooted.

**Syntax** `type reboot`

**Mode** Trigger Configuration

**Example** To configure trigger 32 to activate when your device reboots, use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 32
awplus(config-trigger)# type reboot
```

**Related  
Commands** [show trigger](#)  
[trigger](#)

# type stack disabled-master

**Overview** This command (configured to the stack) configures a trigger to activate on a stack member if it becomes the disabled master.

A disabled master has the same configuration as the active master, but has all its links shutdown.

Although this command could activate any trigger script, the intention here is that the script will reactivate the links from their previously shutdown state, to enable the user to manage the device. An appropriate trigger script must already exist that will apply the [shutdown](#) command on the deactivated links.

**CAUTION:** *It is important that any ports that are configured as trunked ports across master and stack members are disabled at their stack member termination when operating in the fallback configuration. Otherwise, the trunked ports will not function correctly on the device that is connected downstream.*

If the [stack virtual-mac](#) command is enabled, the stack uses a virtual MAC address. The stack will always use this MAC address and the new elected master will still retain the originally configured virtual MAC address. If the **stack virtual-mac** command is disabled, the stack will use the MAC address of the current master. If the stack master fails, the stack MAC address changes to reflect the new master's MAC address. For more information about virtual MAC addresses, see the [VCStack Feature Overview and Configuration Guide](#).

**Syntax** type stack disabled-master

**Mode** Trigger Configuration

**Examples** To configure trigger 82 to activate on a device if it becomes the disabled master, use the commands. These commands enter the Trigger Configuration mode for trigger 82, specify the trigger type, and then specify the script to run.

```
awplus# configure terminal
awplus(config)# trigger 82
awplus(config-trigger)# type stack disabled master
awplus(config-trigger)# script 1 flash:/disabled.scp
awplus(config-trigger)# exit
```

**Related Commands**

- [stack disabled-master-monitoring](#)
- [trigger](#)
- [type stack disabled-master](#)
- [type stack member](#)
- [type stack link](#)



# type stack link

**Overview** This command (configured to the stack) initiates the action of a pre-configured trigger to occur when a stacking link is either activated or deactivated.

**Syntax** `type stack link {up|down}`

| Parameter | Description           |
|-----------|-----------------------|
| up        | Stack link up event   |
| down      | Stack link down event |

**Mode** Trigger Configuration

**Example** To configure trigger 86 to activate when the stack link down event occurs, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 86
awplus(config-trigger)# type stack link down
```

**Related Commands** [show trigger](#)  
[trigger](#)  
[type stack master-fail](#)

# type stack master-fail

**Overview** This command (configured to the stack) initiates the action of a pre-configured trigger to occur when the stack enters the fail-over state.

**Syntax** `type stack master-fail`

**Mode** Trigger Configuration

**Example** To configure trigger 86 to activate when stack master fail-over event occurs, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 86
awplus(config-trigger)# type stack master-fail
```

**Related Commands**

- [stack disabled-master-monitoring](#)
- [trigger](#)
- [type stack disabled-master](#)
- [type stack member](#)
- [type stack link](#)

# type stack member

**Overview** This command (configured to the stack) initiates the action of a pre-configured trigger to occur when a device either joins or leaves the stack.

**Syntax** `type stack member {join|leave}`

| Parameter | Description          |
|-----------|----------------------|
| join      | Neighbor join event  |
| leave     | Neighbor leave event |

**Mode** Trigger Configuration

**Example** To configure a pre-configured trigger number 86 to activate when a new device joins the stack.

Note that the number 86 has no particular significance: you can assign any (previously created) numbered trigger.

```
awplus# configure terminal
awplus(config)# trigger 86
awplus(config-trigger)# type stack member join
```

**Related Commands** [trigger](#)  
[type stack master-fail](#)  
[type stack link](#)

# type time

**Overview** This command configures a trigger that activates at a specified time of day.

**Syntax** `type time <hh:mm>`

| Parameter | Description                       |
|-----------|-----------------------------------|
| <hh:mm>   | The time to activate the trigger. |

**Mode** Trigger Configuration

**Usage** A combined limit of 10 triggers of the type time and type periodic can be configured. If you attempt to add more than 10 triggers the following error message is displayed:

```
% Cannot configure more than 10 triggers with the type time or
periodic
```

**Example** To configure trigger 86 to activate at 15:53, use the following commands:

```
awplus# configure terminal
awplus(config)# trigger 86
awplus(config-trigger)# type time 15:53
```

**Related  
Commands** [show trigger](#)  
[trigger](#)

# type usb

**Overview** Use this command to configure a trigger that activates on either the removal or the insertion of a USB storage device.

**Syntax** `type usb {in|out}`

| Parameter | Description   |
|-----------|---|
| in        | Trigger activates on insertion of a USB storage device. |
| out       | Trigger activates on removal of a USB storage device.   |

**Mode** Trigger Configuration

**Usage** USB triggers cannot execute script files from a USB storage device.  
For example trigger configurations that use the **type usb** command, see “Capture Show Output and Save to a USB Storage Device” in the [Triggers Feature Overview and Configuration Guide](#).

**Examples** To configure `trigger 1` to activate on the insertion of a USB storage device, use the commands:

```
awplus# configure terminal
awplus(config)# trigger 1
awplus(config-trigger)# type usb in
```

**Related Commands** [trigger](#)  
[show running-config trigger](#)  
[show trigger](#)

# undebbug trigger

**Overview** This command applies the functionality of the **no debug trigger** command.

# 50

# Ping-Polling Commands

## Introduction

This chapter provides an alphabetical reference for commands used to configure Ping Polling. For more information, see the [Ping Polling Feature Overview and Configuration Guide](#).

For information on filtering and saving command output, see “Controlling “show” Command Output” in the [“Getting Started with AlliedWare Plus” Feature Overview and Configuration Guide](#).

Table 50-1: The following table lists the default values when configuring a ping poll

| Default           | Value   |
|-------------------|---|
| Critical-interval | 1 second  |
| Description       | No description  |
| Fail-count        | 5   |
| Length            | 32 bytes  |
| Normal-interval   | 30 seconds  |
| Sample-size       | 5   |
| Source-ip         | The IP address of the interface from which the ping packets are transmitted |
| Time-out          | 1 second  |
| Up-count          | 30  |

- Command List**
- [“active \(ping-polling\)”](#) on page 2029
  - [“clear ping-poll”](#) on page 2030
  - [“critical-interval”](#) on page 2031

- [“debug ping-poll”](#) on page 2032
- [“description \(ping-polling\)”](#) on page 2033
- [“fail-count”](#) on page 2034
- [“ip \(ping-polling\)”](#) on page 2035
- [“length \(ping-poll data\)”](#) on page 2036
- [“normal-interval”](#) on page 2037
- [“ping-poll”](#) on page 2038
- [“sample-size”](#) on page 2039
- [“show counter ping-poll”](#) on page 2041
- [“show ping-poll”](#) on page 2043
- [“source-ip”](#) on page 2047
- [“timeout \(ping polling\)”](#) on page 2049
- [“up-count”](#) on page 2050
- [“undebg ping-poll”](#) on page 2051



# active (ping-polling)

**Overview** This command enables a ping-poll instance. The polling instance sends ICMP echo requests to the device with the IP address specified by the [ip \(ping-polling\)](#) command.

By default, polling instances are disabled. When a polling instance is enabled, it assumes that the device it is polling is unreachable.

The **no** variant of this command disables a ping-poll instance. The polling instance no longer sends ICMP echo requests to the polled device. This also resets all counters for this polling instance.

**Syntax** active  
no active

**Mode** Ping-Polling Configuration

**Examples** To activate the ping-poll instance 43, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 43
awplus(config-ping-poll)# active
```

To disable the ping-poll instance 43 and reset its counters, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 43
awplus(config-ping-poll)# no active
```

**Related Commands** [debug ping-poll](#)  
[ip \(ping-polling\)](#)  
[ping-poll](#)  
[show ping-poll](#)

# clear ping-poll

**Overview** This command resets the specified ping poll, or all ping poll instances. This clears the ping counters, and changes the status of polled devices to unreachable. The polling instance changes to the polling frequency specified with the [critical-interval](#) command. The device status changes to reachable once the device responses have reached the [up-count](#).

**Syntax** `clear ping-poll {<1-100>|all}`

| Parameter | Description  |
|-----------|--|
| <1-100>   | A ping poll ID number. The specified ping poll instance has its counters cleared, and the status of the device it polls is changed to unreachable. |
| all       | Clears the counters and changes the device status of all polling instances.  |

**Mode** Privileged Exec

**Examples** To reset the ping poll instance 12, use the command:

```
awplus# clear ping-poll 12
```

To reset all ping poll instances, use the command:

```
awplus# clear ping-poll all
```

**Related Commands** [active \(ping-polling\)](#)  
[ping-poll](#)  
[show ping-poll](#)

# critical-interval

**Overview** This command specifies the time period in seconds between pings when the polling instance has not received a reply to at least one ping, and when the device is unreachable.

This command enables the device to quickly observe changes in state, and should be set to a much lower value than the [normal-interval](#) command.

The **no** variant of this command sets the critical interval to the default of one second.

**Syntax** `critical-interval <1-65536>`  
`no critical-interval`

| Parameter | Description  |
|-----------|--|
| <1-65536> | Time in seconds between pings, when the device has failed to a ping, or the device is unreachable. |

**Default** The default is 1 second.

**Mode** Ping-Polling Configuration

**Examples** To set the critical interval to 2 seconds for the ping-polling instance 99, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 99
awplus(config-ping-poll)# critical-interval 2
```

To reset the critical interval to the default of one second for the ping-polling instance 99, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 99
awplus(config-ping-poll)# no critical-interval
```

**Related Commands**

- [fail-count](#)
- [normal-interval](#)
- [sample-size](#)
- [show ping-poll](#)
- [timeout \(ping polling\)](#)
- [up-count](#)

# debug ping-poll

**Overview** This command enables ping poll debugging for the specified ping-poll instance. This generates detailed messages about ping execution.

The **no** variant of this command disables ping-poll debugging for the specified ping-poll.

**Syntax** `debug ping-poll <1-100>`  
`no debug ping-poll {<1-100>|all}`

| Parameter | Description                       |
|-----------|-----------------------------------|
| <1-100>   | A unique ping poll ID number.     |
| all       | Turn off all ping-poll debugging. |

**Mode** Privileged Exec

**Examples** To enable debugging for ping-poll instance 88, use the command:

```
awplus# debug ping-poll 88
```

To disable all ping poll debugging, use the command:

```
awplus# no debug ping-poll all
```

To disable debugging for ping-poll instance 88, use the command:

```
awplus# no debug ping-poll 88
```

**Related Commands** [active \(ping-polling\)](#)  
[clear ping-poll](#)  
[ping-poll](#)  
[show ping-poll](#)  
[undebug ping-poll](#)

# description (ping-polling)

**Overview** This command specifies a string to describe the ping-polling instance. This allows the ping-polling instance to be recognized easily in show commands. Setting this command is optional.

By default ping-poll instances do not have a description.

Use the **no** variant of this command to delete the description set.

**Syntax** `description <description>`  
`no description`

| Parameter                        | Description   |
|----------------------------------|---|
| <code>&lt;description&gt;</code> | The description of the target. Valid characters are any printable character and spaces. There is no maximum character length. |

**Mode** Ping-Polling Configuration

**Examples** To add the text "Primary Gateway" to describe the ping-poll instance 45, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 45
awplus(config-ping-poll)# description Primary Gateway
```

To delete the description set for the ping-poll instance 45, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 45
awplus(config-ping-poll)# no description
```

**Related  
Commands** [ping-poll](#)  
[show ping-poll](#)

# fail-count

**Overview** This command specifies the number of pings that must be unanswered, within the total number of pings specified by the [sample-size](#) command, for the ping-polling instance to consider the device unreachable.

If the number set by the [sample-size](#) command and the **fail-count** commands are the same, then the unanswered pings must be consecutive. If the number set by the [sample-size](#) command is greater than the number set by the **fail-count** command, then a device that does not always reply to pings may be declared unreachable.

The **no** variant of this command resets the fail count to the default.

**Syntax** `fail-count <1-100>`  
`no fail-count`

| Parameter                  | Description  |
|----------------------------|--|
| <code>&lt;1-100&gt;</code> | The number of pings within the sample size that a reachable device must fail to respond to before it is classified as unreachable. |

**Default** The default is 5.

**Mode** Ping-Polling Configuration

**Examples** To specify the number of pings that must fail within the sample size to determine that a device is unreachable for ping-polling instance 45, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 45
awplus(config-ping-poll)# fail-count 5
```

To reset the fail-count to its default of 5 for ping-polling instance 45, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 45
awplus(config-ping-poll)# no fail-count
```

**Related  
Commands**

[critical-interval](#)  
[normal-interval](#)  
[ping-poll](#)  
[sample-size](#)  
[show ping-poll](#)  
[timeout \(ping polling\)](#)  
[up-count](#)

# ip (ping-polling)

**Overview** This command specifies the IPv4 address of the device you are polling.

**Syntax** `ip {<ip-address>|<ipv6-address>}`

| Parameter                         | Description  |
|-----------------------------------|--|
| <code>&lt;ip-address&gt;</code>   | An IPv4 address in dotted decimal notation A.B.C.D |
| <code>&lt;ipv6-address&gt;</code> | An IPv6 address in hexadecimal notation X:X::X:X   |

**Mode** Ping-Polling Configuration

**Examples** To set ping-poll instance 5 to poll the device with the IP address 192.168.0.1, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 5
awplus(config-ping-poll)# ip 192.168.0.1
```

To set ping-poll instance 10 to poll the device with the IPv6 address 2001:db8::, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 10
awplus(config-ping-poll)# ip 2001:db8::
```

**Related Commands**

- [ping-poll](#)
- [source-ip](#)
- [show ping-poll](#)

# length (ping-poll data)

**Overview** This command specifies the number of data bytes to include in the data portion of the ping packet. This allows you to set the ping packets to a larger size if you find that larger packet types in your network are not reaching the polled device, while smaller packets are getting through. This encourages the polling instance to change the device's status to unreachable when the network is dropping packets of the size you are interested in.

The **no** variant of this command resets the data bytes to the default of 32 bytes.

**Syntax** `length <4-1500>`  
`no length`

| Parameter                   | Description   |
|-----------------------------|---|
| <code>&lt;4-1500&gt;</code> | The number of data bytes to include in the data portion of the ping packet. |

**Default** The default is 32.

**Mode** Ping-Polling Configuration

**Examples** To specify that ping-poll instance 12 sends ping packet with a data portion of 56 bytes, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 12
awplus(config-ping-poll)# length 56
```

To reset the number of data bytes in the ping packet to the default of 32 bytes for ping-poll instance 3, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 12
awplus(config-ping-poll)# length
```

**Related  
Commands** [ping-poll](#)  
[show ping-poll](#)



# normal-interval

**Overview** This command specifies the time period between pings when the device is reachable.

The **no** variant of this command resets the time period to the default of 30 seconds.

**Syntax** `normal-interval <1-65536>`  
`no normal-interval`

| Parameter                    | Description   |
|------------------------------|---|
| <code>&lt;1-65536&gt;</code> | Time in seconds between pings when the target is reachable. |

**Default** The default is 30 seconds.

**Mode** Ping-Polling Configuration

**Examples** To specify a time period of 60 seconds between pings when the device is reachable for ping-poll instance 45, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 45
awplus(config-ping-poll)# normal-interval 60
```

To reset the interval to the default of 30 seconds for ping-poll instance 45, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 45
awplus(config-ping-poll)# no normal-interval
```

**Related Commands**

- [critical-interval](#)
- [fail-count](#)
- [ping-poll](#)
- [sample-size](#)
- [show ping-poll](#)
- [timeout \(ping polling\)](#)
- [up-count](#)

# ping-poll

**Overview** This command enters the ping-poll configuration mode. If a ping-poll exists with the specified number, then this command enters its configuration mode. If no ping poll exists with the specified number, then this command creates a new ping poll with this ID number.

To configure a ping-poll, create a ping poll using this command, and use the [ip \(ping-polling\)](#) command to specify the device you want the polling instance to poll. It is not necessary to specify any further commands unless you want to change a command's default.

The **no** variant of this command deletes the specified ping poll.

**Syntax** `ping-poll <1-100>`  
`no ping-poll <1-100>`

| Parameter                  | Description                   |
|----------------------------|-------------------------------|
| <code>&lt;1-100&gt;</code> | A unique ping poll ID number. |

**Mode** Global Configuration

**Examples** To create ping-poll instance 3 and enter ping-poll configuration mode, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 3
awplus(config-ping-poll)#
```

To delete ping-poll instance 3, use the commands:

```
awplus# configure terminal
awplus(config)# no ping-poll 3
```

**Related Commands**

- [active \(ping-polling\)](#)
- [clear ping-poll](#)
- [debug ping-poll](#)
- [description \(ping-polling\)](#)
- [ip \(ping-polling\)](#)
- [length \(ping-poll data\)](#)
- [show ping-poll](#)
- [source-ip](#)

# sample-size

**Overview** This command sets the total number of pings that the polling instance inspects when determining whether a device is unreachable. If the number of pings specified by the **fail-count** command go unanswered within the inspected sample, then the device is declared unreachable.

If the numbers set in this command and **fail-count** command are the same, the unanswered pings must be consecutive. If the number set by this command is greater than that set with the **fail-count** command, a device that does not always reply to pings may be declared unreachable.

You cannot set this command's value lower than the **fail-count** value.

The polling instance uses the number of pings specified by the **up-count** command to determine when a device is reachable.

The **no** variant of this command resets this command to the default.

**Syntax** `sample-size <1-100>`  
`no sample size`

| Parameter | Description   |
|-----------|---|
| <1-100>   | Number of pings that determines critical and up counts. |

**Default** The default is 5.

**Mode** Ping-Polling Configuration

**Examples** To set the sample-size to 50 for ping-poll instance 43, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 43
awplus(config-ping-poll)# sample-size 50
```

To reset sample-size to the default of 5 for ping-poll instance 43, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 43
awplus(config-ping-poll)# no sample-size
```

**Related  
Commands**

- [critical-interval](#)
- [fail-count](#)
- [normal-interval](#)
- [ping-poll](#)
- [show ping-poll](#)
- [timeout \(ping polling\)](#)
- [up-count](#)

# show counter ping-poll

**Overview** This command displays the counters for ping polling.

**Syntax** `show counter ping-poll [<1-100>]`

| Parameter | Description   |
|-----------|---|
| <1-100>   | A unique ping poll ID number. This displays the counters for the specified ping poll only. If you do not specify a ping poll, then this command displays counters for all ping polls. |

**Mode** User Exec and Privileged Exec

**Output** Figure 50-1: Example output from the **show counter ping-poll** command

|                       |          |
|-----------------------|----------|
| Ping-polling counters |          |
| Ping-poll: 1          |          |
| PingsSent             | ..... 15 |
| PingsFailedUpState    | ..... 0  |
| PingsFailedDownState  | ..... 0  |
| ErrorSendingPing      | ..... 2  |
| CurrentUpCount        | ..... 13 |
| CurrentFailCount      | ..... 0  |
| UpStateEntered        | ..... 0  |
| DownStateEntered      | ..... 0  |
| Ping-poll: 2          |          |
| PingsSent             | ..... 15 |
| PingsFailedUpState    | ..... 0  |
| PingsFailedDownState  | ..... 0  |
| ErrorSendingPing      | ..... 2  |
| CurrentUpCount        | ..... 13 |
| CurrentFailCount      | ..... 0  |
| UpStateEntered        | ..... 0  |
| DownStateEntered      | ..... 0  |
| Ping-poll: 5          |          |
| PingsSent             | ..... 13 |
| PingsFailedUpState    | ..... 0  |
| PingsFailedDownState  | ..... 2  |
| ErrorSendingPing      | ..... 2  |
| CurrentUpCount        | ..... 9  |
| CurrentFailCount      | ..... 0  |
| UpStateEntered        | ..... 0  |
| DownStateEntered      | ..... 0  |

**Table 51:** Parameters in output of the **show counter ping-poll** command

| Parameter            | Description  |
|----------------------|--|
| Ping-poll            | The ID number of the polling instance.   |
| PingsSent            | The total number of pings generated by the polling instance.   |
| PingsFailedUpState   | The number of unanswered pings while the target device is in the Up state. This is a cumulative counter for multiple occurrences of the Up state.            |
| PingsFailedDownState | Number of unanswered pings while the target device is in the Down state. This is a cumulative counter for multiple occurrences of the Down state.            |
| ErrorSendingPing     | The number of pings that were not successfully sent to the target device.<br>This error can occur when your device does not have a route to the destination. |
| CurrentUpCount       | The current number of sequential ping replies.   |
| CurrentFailCount     | The number of ping requests that have not received a ping reply in the current sample-size window.   |
| UpStateEntered       | Number of times the target device has entered the Up state.  |
| DownStateEntered     | Number of times the target device has entered the Down state.  |

**Example** To display counters for the polling instances, use the command:

```
awplus# show counter ping-poll
```

**Related Commands**

- [debug ping-poll](#)
- [ping-poll](#)
- [show ping-poll](#)

# show ping-poll

**Overview** This command displays the settings and status of ping polls.

**Syntax** `show ping-poll [<1-100>|state {up|down}] [brief]`

| Parameter | Description  |
|-----------|--|
| <1-100>   | Displays settings and status for the specified polling instance.   |
| state     | Displays polling instances based on whether the device they are polling is currently reachable or unreachable. |
|           | up Displays polling instance where the device state is reachable.  |
|           | down Displays polling instances where the device state is unreachable.   |
| brief     | Displays a summary of the state of ping polls, and the devices they are polling.                               |

**Mode** User Exec and Privileged Exec

**Output** Figure 50-2: Example output from the **show ping-poll brief** command

|                         |         |       |               |
|-------------------------|---------|-------|---------------|
| Ping Poll Configuration |         |       |               |
| -----                   |         |       |               |
| Id                      | Enabled | State | Destination   |
| -----                   |         |       |               |
| 1                       | Yes     | Down  | 192.168.0.1   |
| 2                       | Yes     | Up    | 192.168.0.100 |

**Table 52:** Parameters in output of the **show ping-poll brief** command

| Parameter | Meaning   |
|-----------|---|
| Id        | The ID number of the polling instance, set when creating the polling instance with the <a href="#">ping-poll</a> command. |
| Enabled   | Whether the polling instance is enabled or disabled.  |

**Table 52:** Parameters in output of the **show ping-poll brief** command (cont.)

| Parameter     | Meaning  |
|---------------|--|
| State         | The current status of the device being polled:   |
| Up            | The device is reachable.   |
| Down          | The device is unreachable.   |
| Critical Up   | The device is reachable but recently the polling instance has not received some ping replies, so the polled device may be going down.    |
| Critical Down | The device is unreachable but the polling instance received a reply to the last ping packet, so the polled device may be coming back up. |
| Destination   | The IP address of the polled device, set with the <a href="#">ip (ping-polling)</a> command.   |

**Figure 50-3:** Example output from the **show ping-poll** command

|                         |                   |
|-------------------------|-------------------|
| Ping Poll Configuration |                   |
| -----                   |                   |
| Poll 1:                 |                   |
| Description             | : Primary Gateway |
| Destination IP address  | : 192.168.0.1     |
| Status                  | : Down            |
| Enabled                 | : Yes             |
| Source IP address       | : 192.168.0.10    |
| Critical interval       | : 1               |
| Normal interval         | : 30              |
| Fail count              | : 10              |
| Up count                | : 5               |
| Sample size             | : 50              |
| Length                  | : 32              |
| Timeout                 | : 1               |
| Debugging               | : Enabled         |



|                        |                     |
|------------------------|---------------------|
| Poll 2:                |                     |
| Description            | : Secondary Gateway |
| Destination IP address | : 192.168.0.100     |
| Status                 | : Up                |
| Enabled                | : Yes               |
| Source IP address      | : Default           |
| Critical interval      | : 5                 |
| Normal interval        | : 60                |
| Fail count             | : 20                |
| Up count               | : 30                |
| Sample size            | : 100               |
| Length                 | : 56                |
| Timeout                | : 2                 |
| Debugging              | : Enabled           |

**Table 53:** Parameters in output of the **show ping-poll** command

| Parameter              | Description   |    |                          |      |                            |             |   |               |  |
|------------------------|---|----|--------------------------|------|----------------------------|-------------|---|---------------|--|
| Description            | Optional description set for the polling instance with the <a href="#">description (ping-polling)</a> command.  |    |                          |      |                            |             |   |               |  |
| Destination IP address | The IP address of the polled device, set with the <a href="#">ip (ping-polling)</a> command.  |    |                          |      |                            |             |   |               |  |
| Status                 | <div>The current status of the device being polled:</div> <table> <tr> <td>Up</td><td>The device is reachable.</td></tr> <tr> <td>Down</td><td>The device is unreachable.</td></tr> <tr> <td>Critical Up</td><td>The device is reachable but recently the polling instance has not received some ping replies, so the polled device may be going down.</td></tr> <tr> <td>Critical Down</td><td>The device is unreachable but the polling instance received a reply to the last ping packet, so the polled device may be coming back up.</td></tr> </table> | Up | The device is reachable. | Down | The device is unreachable. | Critical Up | The device is reachable but recently the polling instance has not received some ping replies, so the polled device may be going down. | Critical Down | The device is unreachable but the polling instance received a reply to the last ping packet, so the polled device may be coming back up. |
| Up                     | The device is reachable.  |    |                          |      |                            |             |   |               |  |
| Down                   | The device is unreachable.  |    |                          |      |                            |             |   |               |  |
| Critical Up            | The device is reachable but recently the polling instance has not received some ping replies, so the polled device may be going down.   |    |                          |      |                            |             |   |               |  |
| Critical Down          | The device is unreachable but the polling instance received a reply to the last ping packet, so the polled device may be coming back up.  |    |                          |      |                            |             |   |               |  |
| Enabled                | Whether the polling instance is enabled or disabled. The <a href="#">active (ping-polling)</a> and <a href="#">active (ping-polling)</a> commands enable and disable a polling instance.  |    |                          |      |                            |             |   |               |  |
| Source IP address      | The source IP address sent in the ping packets. This is set using the <a href="#">source-ip</a> command.  |    |                          |      |                            |             |   |               |  |
| Critical interval      | The time period in seconds between pings when the polling instance has not received a reply to at least one ping, and when the device is unreachable. This is set with the <a href="#">critical-interval</a> command.   |    |                          |      |                            |             |   |               |  |
| Normal interval        | The time period between pings when the device is reachable. This is set with the <a href="#">normal-interval</a> command.   |    |                          |      |                            |             |   |               |  |

**Table 53:** Parameters in output of the **show ping-poll** command (cont.)

| Parameter   | Description  |
|-------------|--|
| Fail count  | The number of pings that must be unanswered, within the total number of pings specified by the <a href="#">sample-size</a> command, for the polling instance to consider the device unreachable. This is set using the <a href="#">fail-count</a> command. |
| Up count    | The number of consecutive pings that the polling instance must receive a reply to before classifying the device reachable again. This is set using the <a href="#">up-count</a> command.   |
| Sample size | The total number of pings that the polling instance inspects when determining whether a device is unreachable. This is set using the <a href="#">sample-size</a> command.  |
| Length      | The number of data bytes to include in the data portion of the ping packet. This is set using the <a href="#">length (ping-poll data)</a> command.   |
| Timeout     | The time in seconds that the polling instance waits for a response to a ping packet. This is set using the <a href="#">timeout (ping polling)</a> command.   |
| Debugging   | Indicates whether ping polling debugging is <b>Enabled</b> or <b>Disabled</b> . This is set using the <a href="#">debug ping-poll</a> command.   |

**Examples** To display the ping poll settings and the status of all the polls, use the command:

```
awplus# show ping-poll
```

To display a summary of the ping poll settings, use the command:

```
awplus# show ping-poll brief
```

To display the settings for ping poll 6, use the command:

```
awplus# show ping-poll 6
```

To display a summary of the state of ping poll 6, use the command:

```
awplus# show ping-poll 6 brief
```

To display the settings of ping polls that have reachable devices, use the command:

```
awplus# show ping-poll state up
```

To display a summary of ping polls that have unreachable devices, use the command:

```
awplus# show ping-poll 6 state down brief
```

**Related  
Commands** [debug ping-poll](#)  
[ping-poll](#)

# source-ip

**Overview** This command specifies the source IP address to use in ping packets.

By default, the polling instance uses the address of the interface through which it transmits the ping packets. It uses the device's local interface IP address when it is set. Otherwise, the IP address of the interface through which it transmits the ping packets is used.

The **no** variant of this command resets the source IP in the packets to the device's local interface IP address.

**Syntax** `source-ip {<ip-address>|<ipv6-address>}`  
`no source-ip`

| Parameter      | Description  |
|----------------|--|
| <ip-address>   | An IPv4 address in dotted decimal notation A.B.C.D |
| <ipv6-address> | An IPv6 address in hexadecimal notation X:X::X:X   |

**Mode** Ping-Polling Configuration

**Examples** To configure the ping-polling instance 43 to use the source IP address 192.168.0.1 in ping packets, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 43
awplus(config-ping-poll)# source-ip 192.168.0.1
```

To configure the ping-polling instance 43 to use the source IPv6 address 2001:db8:: in ping packets, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 43
awplus(config-ping-poll)# source-ip 2001:db8::
```

To reset the source IP address to the device's local interface IP address for ping-poll instance 43, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 43
awplus(config-ping-poll)# no source-ip
```

**Related  
Commands**

- description (ping-polling)
- ip (ping-polling)
- length (ping-poll data)
- ping-poll
- show ping-poll

# timeout (ping polling)

**Overview** This command specifies the time in seconds that the polling instance waits for a response to a ping packet. You may find a higher time-out useful in networks where ping packets have a low priority.

The **no** variant of this command resets the set time out to the default of one second.

**Syntax** `timeout <1-30>`  
`no timeout`

| Parameter | Description  |
|-----------|--|
| <1-30>    | Length of time, in seconds, that the polling instance waits for a response from the polled device. |

**Default** The default is 1 second.

**Mode** Ping-Polling Configuration

**Examples** To specify the timeout as 5 seconds for ping-poll instance 43, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 43
awplus(config-ping-poll)# timeout 5
```

To reset the timeout to its default of 1 second for ping-poll instance 43, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 43
awplus(config-ping-poll)# no timeout
```

**Related Commands**

- [critical-interval](#)
- [fail-count](#)
- [normal-interval](#)
- [ping-poll](#)
- [sample-size](#)
- [show ping-poll](#)
- [up-count](#)

# up-count

**Overview** This command sets the number of consecutive pings that the polling instance must receive a reply to before classifying the device reachable again.

The **no** variant of this command resets the up count to the default of 30.

**Syntax** `up-count <1-100>`  
`no up-count`

| Parameter                  | Description  |
|----------------------------|--|
| <code>&lt;1-100&gt;</code> | Number of replied pings before an unreachable device is classified as reachable. |

**Default** The default is 30.

**Mode** Ping-Polling Configuration

**Examples** To set the upcount to 5 consecutive pings for ping-polling instance 45, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 45
awplus(config-ping-poll)# up-count 5
```

To reset the upcount to the default value of 30 consecutive pings for ping-polling instance 45, use the commands:

```
awplus# configure terminal
awplus(config)# ping-poll 45
awplus(config-ping-poll)# no up-count
```

**Related Commands**

- [critical-interval](#)
- [fail-count](#)
- [normal-interval](#)
- [ping-poll](#)
- [sample-size](#)
- [show ping-poll](#)
- [timeout \(ping polling\)](#)

# undebbug ping-poll

**Overview** This command applies the functionality of the no [debug ping-poll](#) command.

# 51

# sFlow Commands

## Introduction

**Overview** This chapter provides an alphabetical reference for sFlow commands.

- Command List**
- “[debug sflow](#)” on page 2053
  - “[debug sflow agent](#)” on page 2054
  - “[sflow agent \(address\)](#)” on page 2055
  - “[sflow collector \(address\)](#)” on page 2057
  - “[sflow collector max-datagram-size](#)” on page 2059
  - “[sflow enable](#)” on page 2060
  - “[sflow max-header-size](#)” on page 2061
  - “[sflow polling-interval](#)” on page 2063
  - “[sflow sampling-rate](#)” on page 2064
  - “[show debugging sflow](#)” on page 2065
  - “[show running-config sflow](#)” on page 2067
  - “[show sflow](#)” on page 2068
  - “[show sflow interface](#)” on page 2070
  - “[undebug sflow](#)” on page 2071



# debug sflow

**Overview** This command enables sFlow® debug message logging, for sFlow sampling and polling activity on the specified ports. If no ports are specified, sampling and/or polling debug messages are enabled for all ports.

The **no** variant of this command disables sFlow sampling and or polling debug message logging on the ports selected. If no ports are specified, sampling and/or polling debug messages are disabled on all ports.

**Syntax** `debug sflow [interface <port-list>] [sampling][polling]`  
`no debug sflow [interface <port-list>] [sampling][polling]`

| Parameter   | Description  |
|-------------|--|
| interface   | Interface information.   |
| <port-list> | The ports for which sFlow debug is to be enabled. The ports to display information about. The port list can be: <ul style="list-style-type: none"><li>• a switch port (e.g. port1.0.12)</li><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-1.0.24</li><li>• a comma-separated list of ports and port ranges, e.g. port1.0.1,port1.0.1-1.0.24.</li></ul> |
| sampling    | Debug sFlow sampling for the specified port(s).  |
| polling     | Debug sFlow polling for the specified port(s).   |

**Default** The sFlow sampling and or polling debug is disabled.

**Mode** Privileged Exec

**Examples** To enable sFlow debug message logging for polling and sampling on port1.0.1 and port1.0.7, use the commands:

```
awplus# debug sflow interface port1.0.1,port1.0.7 sampling  
polling
```

To enable logging and polling of sFlow debug messages for polling and sampling on all ports, use the command:

```
awplus# debug sflow sampling polling
```

**Related Commands** [show debugging sflow](#)  
[no debug all](#)

# debug sflow agent

**Overview** This command enables sFlow® debug message logging that is not specific to particular ports. For example, sending an sFlow datagram to the collector.

The **no** variant of this command applies the command default.

**Syntax** debug sflow agent  
no debug sflow agent

**Default** The sFlow agent debug message logging (that is not port specific) is disabled.

**Mode** Privileged Exec

**Example** To enable logging of sFlow agent debug messages, use the following command:

```
awplus# debug sflow agent
```

**Related  
Commands** [show debugging sflow](#)  
[debug sflow](#)

# sflow agent (address)

**Overview** This command sets the sFlow® agent IP address on the switch. This address is inserted into every sFlow datagram sent from the sFlow agent switch to the sFlow collector device. The sFlow collector can then use this address to uniquely identify and to access the switch, such as for SNMP. We therefore recommend that you change this address as little as possible.

Although the agent address can be set to any valid IPv4 or IPv6 address; we recommended that you set the sFlow® agent IP address to be the **local address** that is configured on the switch. For information on local addresses and how to set them up, see the [interface \(to configure\)](#) command. This ensures that the sFlow collector can maintain connectivity to the switch irrespective of the addition or deletion of VLAN interfaces (each of which will have its own specific IP address). Note that sFlow is rendered inactive whenever the agent address is not set.

The **no** variant of this command applies its default setting to remove a configured address.

**Syntax** `sflow agent {ip <ip-address>|ipv6 <ipv6-address>}`  
`no sflow agent {ip|ipv6}`

| Parameter      | Description  |
|----------------|--|
| <ip-address>   | The IPv4 address of the switch that is acting as the sFlow agent.  |
| <ipv6-address> | The IPv6 address of the switch that is acting as the sFlow agent. The IPv6 address uses the format X:X::X:X. |

**Default** The sFlow agent address is unset.

**Mode** Global Configuration

**Examples** To set the sFlow agent (IPv4) address to 192.0.2.23, use the command:

```
awplus# configure terminal
awplus(config)# sflow agent ip 192.0.2.23
```

To remove the sFlow agent (IPv4) address, use the command:

```
awplus# configure terminal
awplus(config)# no sflow agent ip
```

To set the sFlow agent (IPv6) address to 2001:0db8::1, use the command:

```
awplus# configure terminal
awplus(config)# sflow agent ipv6 2001:0db8::1
```

To remove the sFlow agent (IPv6) address, use the command:

```
awplus# configure terminal
awplus(config)# no sflow agent ipv6
```

**Related  
Commands**    [show running-config sflow](#)  
                  [show sflow](#)

# sflow collector (address)

**Overview** This command sets the sFlow® agent's collector IP address and/or UDP port. This is the destination IP address and UDP port, for sFlow datagrams sent from the sFlow agent. The IP address can be any valid IPv4 or IPv6 address. Note that sFlow is rendered inactive whenever the collector address is set to 0.0.0.0 (for IPv4) or :: (for IPv6).

The **no** variant of this command returns the IP address and UDP port values to their defaults, which will result in sFlow being deactivated.

**Syntax** `sflow collector {[ip <ip-address>|ipv6 <ipv6-address>]} [port <1-65535>]}`  
`no sflow collector {[ip|ipv6]} [port]}`

| Parameter      | Description   |
|----------------|---|
| <ip-address>   | IPv4 address of the remote sFlow collector.   |
| <ipv6-address> | IPv6 address of remote sFlow collector.<br>The IPv6 address uses the format X:X::X:X. |
| port           | Destination UDP port for sFlow datagrams sent to the collector.                       |
| <1-65535>      | UDP port number (default: 6343).  |

**Default** The collector address is 0.0.0.0 (which renders sFlow inactive), and the UDP port is 6343.

**Mode** Global Configuration

**Examples** To set the sFlow collector address to 192.0.2.25 and UDP port to 9000, use the command:

```
awplus# configure terminal
awplus(config)# sflow collector ip 192.0.2.25 port 9000
```

To remove the sFlow collector IPv4 address and leave the UDP port unchanged, use the command:

```
awplus# configure terminal
awplus(config)# no sflow collector ip
```

To remove the sFlow collector IPv4 address and to remove the UDP port, use the command:

```
awplus# configure terminal
awplus(config)# no sflow collector ip port
```

To set the sFlow collector address to 2001:0db8::1 and leave the UDP port unchanged, use the command:

```
awplus# configure terminal
awplus(config)# sflow collector ipv6 2001:0db8::1
```

To remove the sFlow collector IPv6 address and leave the UDP port unchanged, use the command:

```
awplus# configure terminal
awplus(config)# no sflow collector ipv6
```

To remove the sFlow collector IPv6 address and to remove the UDP port, use the command:

```
awplus# configure terminal
awplus(config)# no sflow collector ipv6 port
```

**Related Commands**   [show running-config sflow](#)  
                          [show sflow](#)

# sflow collector max-datagram-size

**Overview** This command sets the maximum size of the sFlow® datagrams sent to the collector.

The **no** variant of this command resets the maximum-datagram-size to the default.

**Syntax** `sflow collector max-datagram-size <200-1500>`  
`no sflow collector max-datagram-size`

| Parameter  | Description   |
|------------|---|
| <200-1500> | The maximum number of bytes that can be sent in an sFlow datagram sent from the agent to the collector. |

**Default** 1400 bytes

**Mode** Global Configuration

**Example** To set the maximum datagram size to 1200, use the command:

```
awplus# configure terminal
awplus(config)# sflow collector max-datagram-size 1200
```

**Related Commands** [show running-config sflow](#)  
[show sflow](#)

# sflow enable

**Overview** This command enables sFlow® globally on the switch.

The **no** variant of this command disables sFlow globally on the switch.

Note that enabling sFlow does not automatically set its operational status to active. To activate sFlow the following conditions need to be met:

- sFlow is enabled.
- The sFlow agent address is set.
- The sFlow collector address is set to a valid (non zero) IPv4 or IPv6 address.
- Polling or sampling is enabled on the ports to be sampled or polled.

**Syntax** `sflow enable`  
`no sflow enable`

**Default** sFlow is disabled globally on the switch.

**Mode** Global Configuration

**Example** To enable sFlow operation, use the command:

```
awplus# configure terminal
awplus(config)# sflow enable
```

**Related Commands** [show running-config sflow](#)  
[show sflow](#)



# sf flow max-header-size

**Overview** This command sets the maximum header size of the Ethernet frames sampled on a specified port. The maximum header size is measured in bytes, referenced from the first byte of the Ethernet destination address and excludes the Ethernet FCS fields.

If a sampled Ethernet frame is longer than the maximum header size set by this command, then the frame will be truncated to the first N bytes before being placed in the sFlow datagram, where N is the maximum header size set by this command.

The **no** variant of this command resets the max-header-size to its default.

**Syntax** `sf flow max-header-size <14-200>`  
`no sf flow max-header-size`

| Parameter | Description                                       |
|-----------|---|
| <14-200>  | The maximum number of header bytes to be sampled. |

**Default** The max-header-size is 128 bytes.

**Mode** Interface Configuration

**Usage** The header size is measured from the first byte of the Ethernet frame MAC Destination Address.

- For an environment using standard TCP IPv4 over Ethernet frames, consider the following basic protocol structure:

Ethernet header (including the 4 byte 802.1Q header component) = 18 bytes

IPv4 header = 24 bytes

TCP header = 24 bytes

Total = 66 bytes

**CAUTION:** For IPv4, any data existing between 66 bytes and the value set by this command will be included in the sFlow packet samples. For example, with the default of 128 applied, up to 128-66=62 bytes of user data could be included in the sFlow datagram samples sent between the Agent and the Collector.

For more information, see the [sFlow Feature Overview and Configuration Guide](#).

- A similar consideration can be made for an environment using TCP IPv6 over Ethernet:

Ethernet header (including the 4 byte 802.1Q header component) = 18 bytes

IPv6 header = 40 bytes

TCP header = 24 bytes

Total = 82 bytes

**CAUTION:** For IPv6, any data existing between 82 bytes and the value set by this command will be included in the sFlow packet samples. For example, with the default of 128 applied, up to 128-82=46 bytes of user data could be included in the sFlow datagram samples sent between the Agent and the Collector.

Note that the agent-to-collector datagrams contain their own UDP headers, which are outside this calculation.

**Example** To set the maximum header size to 160 bytes for ports 1.0.1 and 1.0.7, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.7
awplus(config-if)# sflow max-header-size 160
```

**Related  
Commands** [show running-config sflow](#)  
[show sflow interface](#)  
[sflow max-header-size](#)

# sflow polling-interval

**Overview** This command sets the sFlow® counter polling interval (in seconds) for the specified ports. A value of 0 disables polling. A counter sample is taken every N seconds where N is the value set by this command.

The **no** variant of this command applies the default.

**Syntax**    `sflow polling-interval {0|<1-16777215>}`  
             `no sflow polling-interval`

| Parameter    | Description                      |
|--------------|----------------------------------|
| 0            | Disable polling (the default).   |
| <1-16777215> | The polling interval in seconds. |

**Default** The polling-interval is 0 (polling disabled).

**Mode** Interface Configuration

**Example** To set the polling interval to 60 seconds for ports 1.0.1 and 1.0.7, use the following commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.7
awplus(config-if)# sflow polling-interval 60
```

**Related Commands**    [show running-config sflow](#)  
                         [show sflow interface](#)

# sfow sampling-rate

**Overview** This command sets the mean sFlow® sampling rate for the specified ports. Sampling occurs every N frames (on average), where N is the rate value set via this command. The sampling rate applies to ingress and egress frames independently. For example, a value of 1000 will sample one frame in every 1000 frames received, i.e. one in every 1000 frames sent from the specified port. A value of 0 disables sampling on the specified port(s).

The **no** variant of this command applies the default.

**Syntax** `sfow sampling-rate {0|<256-16777215>}`  
`no sfow sampling-rate`

| Parameter      | Description                                       |
|----------------|---|
| 0              | Sets the default.                                 |
| <256-16777215> | The sampling rate N, measured in Ethernet frames. |

**Default** The sampling-rate is 0 (sampling disabled).

**Mode** Interface Configuration

**Example** To set the sampling rate to 500 for ports 1.0.1 and 1.0.7, use the commands:

```
awplus# configure terminal
awplus(config)# interface port1.0.1,port1.0.7
awplus(config-if)# sfow sampling-rate 500
```

**Related Commands** [show running-config sfow](#)  
[show sfow interface](#)

# show debugging sflow

**Overview** This command displays sFlow® debug settings for agent operation, and for sampling and polling on specific interface ports. If no interface ports are specified, sampling and polling will be applied to all ports.

**Syntax** `show debugging sflow [interface <port-list>]`

| Parameter   | Description  |
|-------------|--|
| interface   | The interface information.   |
| <port-list> | The ports for which the sFlow debug settings are to be shown. The ports to display information about. The port list can be: <ul style="list-style-type: none"><li>• a switch port (e.g. port1.1.12)</li><li>• a continuous range of ports separated by a hyphen, e.g. port1.0.1-1.0.24</li><li>• a comma-separated list of ports and port ranges, e.g. port1.0.1,port1.0.1-1.0.24.</li></ul> |

**Mode** User Exec and Privileged Exec

**Example** To display sFlow debug settings on the agent, and for sampling and polling on ports 1.0.1 to 1.0.9, use the command:

```
awplus# show debugging sflow interface port1.0.1-1.0.9
```

**Output** Figure 51-1: Sample obtained for an sFlow agent

```
awplus# show debugging sflow interface port1.0.1-1.0.9
```

|                            |                   |                  |
|----------------------------|-------------------|------------------|
| sFlow Agent Debug: Enabled |                   |                  |
| Port                       | Sampling<br>Debug | Polling<br>Debug |
| -----                      |                   |                  |
| 1.0.1                      | Enabled           | Enabled          |
| 1.0.2                      | Enabled           | -                |
| 1.0.3                      | -                 | -                |
| 1.0.4                      | -                 | -                |
| 1.0.5                      | -                 | -                |
| 1.0.6                      | -                 | Enabled          |
| 1.0.7                      | -                 | -                |
| 1.0.8                      | -                 | Enabled          |
| 1.0.9                      | -                 | Enabled          |

To display sFlow debug settings for all ports, use the command:

```
awplus# show debugging sflow
```

**Related  
Commands**    [show running-config sflow](#)  
                  [show sflow interface](#)

# show running-config sflow

**Overview** This command displays the running system information specific to the sFlow feature.

**Syntax** `show running-config sflow`

**Mode** Privileged Exec and Global Configuration

**Example** To display the sFlow running configuration information, use the command:

```
awplus# show running-config sflow
```

**Output** Figure 51-2: Example output from the **show running-config sflow** command

```
awplus#sh run sflow
!
sflow agent ip 192.0.2.33
sflow collector ip 192.0.2.65
sflow collector max-datagram-size 1200
sflow enable
!
interface port1.0.11-port1.0.22
sflow sampling-rate 512
```

**Related Commands** [show running-config](#)

# show sflow

**Overview** This command displays non-port-specific sFlow agent configuration and operational status.

**Syntax** show sflow

**Mode** Privileged Exec

**Example** To display sFlow configuration and operational status, use the command:

```
awplus# show sflow
```

## Output

**Table 1:** Example output from the **show sflow** command

|                               |                     |
|-------------------------------|---------------------|
| sFlow Agent Configuration:    | Default Values      |
| sFlow Admin Status .....      | Disabled [Disabled] |
| sFlow Agent Address .....     | [not set] [not set] |
| Collector Address .....       | 0.0.0.0 [0.0.0.0]   |
| Collector UDP Port .....      | 6343 [6343]         |
| Tx Max Datagram Size .....    | 1200 [1400]         |
| sFlow Agent Status:           |                     |
| Polling/sampling/Tx .....     |                     |
| Inactive because:             |                     |
| - sFlow is disabled           |                     |
| - Agent Addr is not set       |                     |
| - Collector Addr is 0.0.0.0   |                     |
| - Polling & sampling disabled |                     |
| on all ports                  |                     |

**Table 2:** Parameters in the output of the **show sflow** command

| Output Parameter    | Description  |
|---------------------|--|
| sFlow Admin Status  | Whether sFlow agent operation is administratively enabled.   |
| sFlow Agent Address | The sFlow agent IPv4 or IPv6 address for the device. sFlow is rendered inactive whenever the agent address is not set.   |
| Collector Address   | The IPv4 or IPv6 collector address to which sFlow datagrams are sent. sFlow is rendered inactive whenever the collector address is set to 0.0.0.0 or 0:0::0.0. |
| Collector UDP Port  | The UDP port on the collector to which sFlow datagrams are sent.   |



**Table 2:** Parameters in the output of the **show sflow** command (cont.)

| Output Parameter     | Description   |
|----------------------|---|
| Tx Max Datagram Size | The maximum size of the sFlow datagrams sent to the collector.  |
| Polling/sampling/Tx  | Whether sFlow sampling and/or polling (and hence sFlow datagram transmission) are active. If inactive the reasons are listed. |

**Related  
Commands**    [show running-config sflow](#)  
                  [show sflow interface](#)

# show sflow interface

**Overview** This command displays sFlow agent sampling and polling configuration for specified ports.

**Syntax** `show sflow interface <ifrange>`

| Parameter | Description          |
|-----------|----------------------|
| <ifrange> | The interface range. |

**Mode** Privileged Exec

# undebug sflow

**Overview** This command applies the functionality of the **no** variant of the [debug sflow](#) command.